





Test Setup Photos

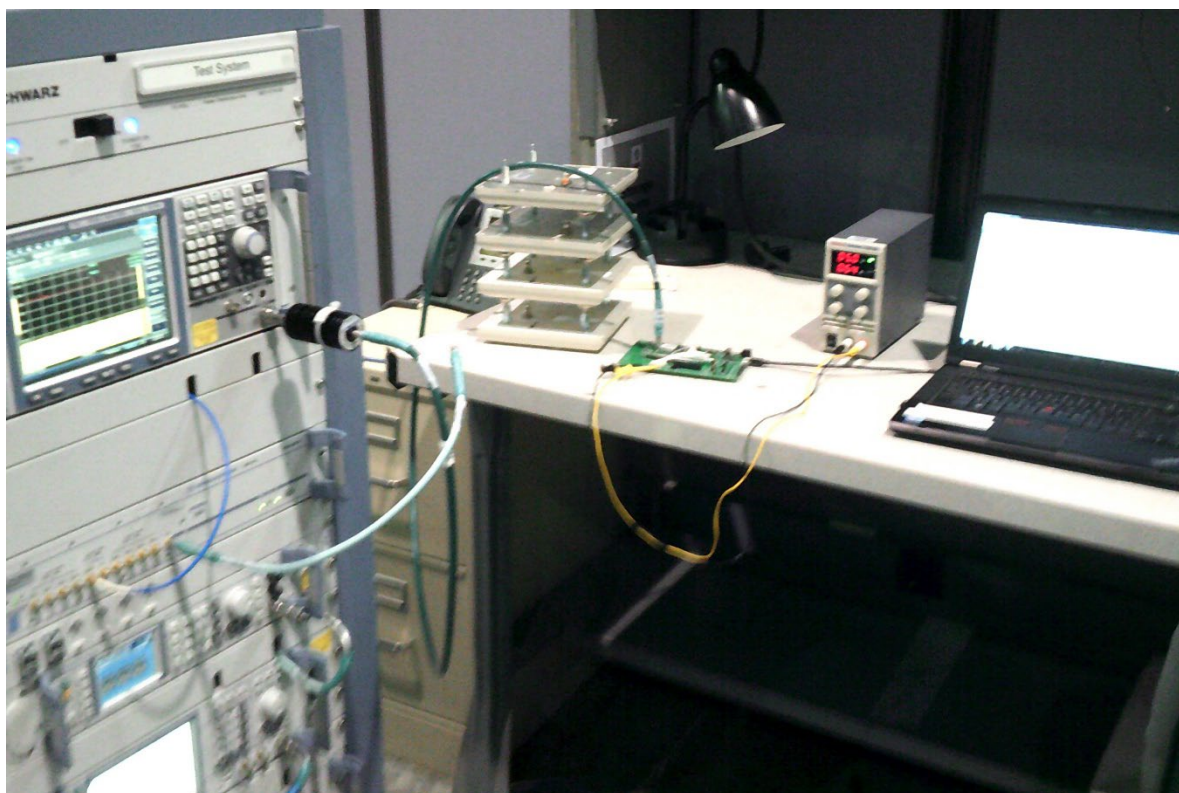


RF Conducted Setup




AC Mains Conducted Emissions Front

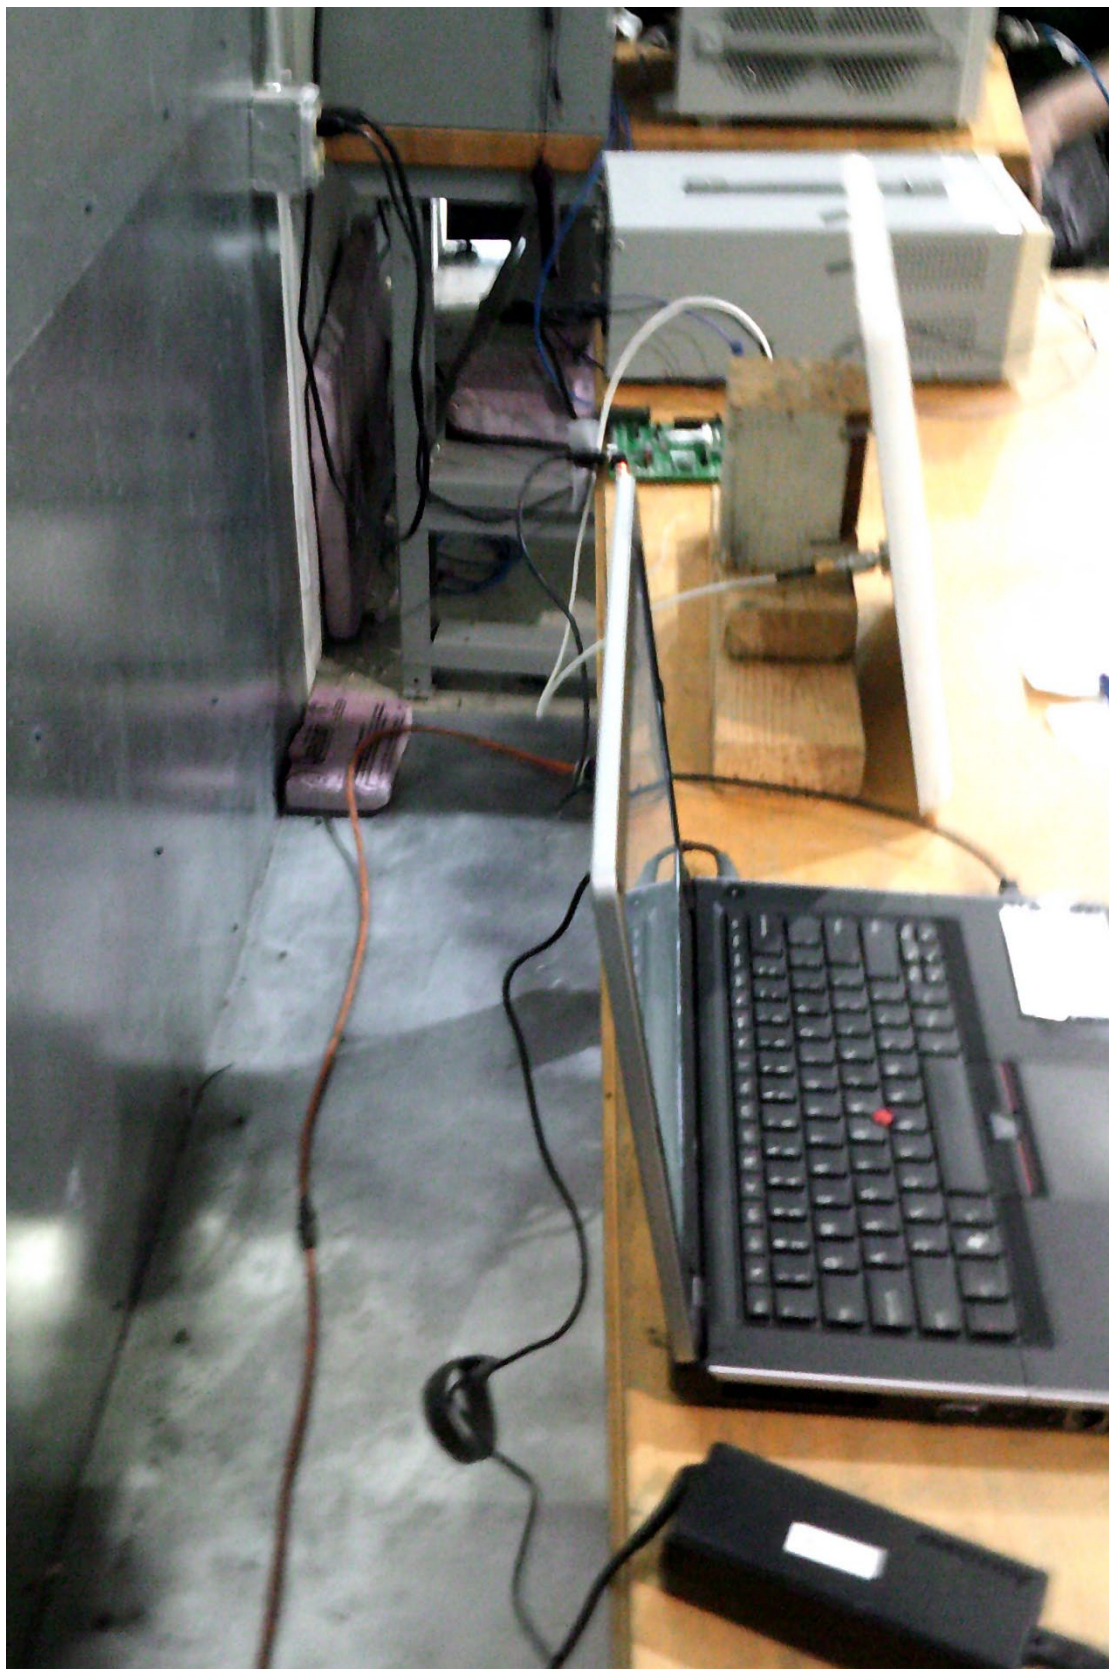


AC Mains Back

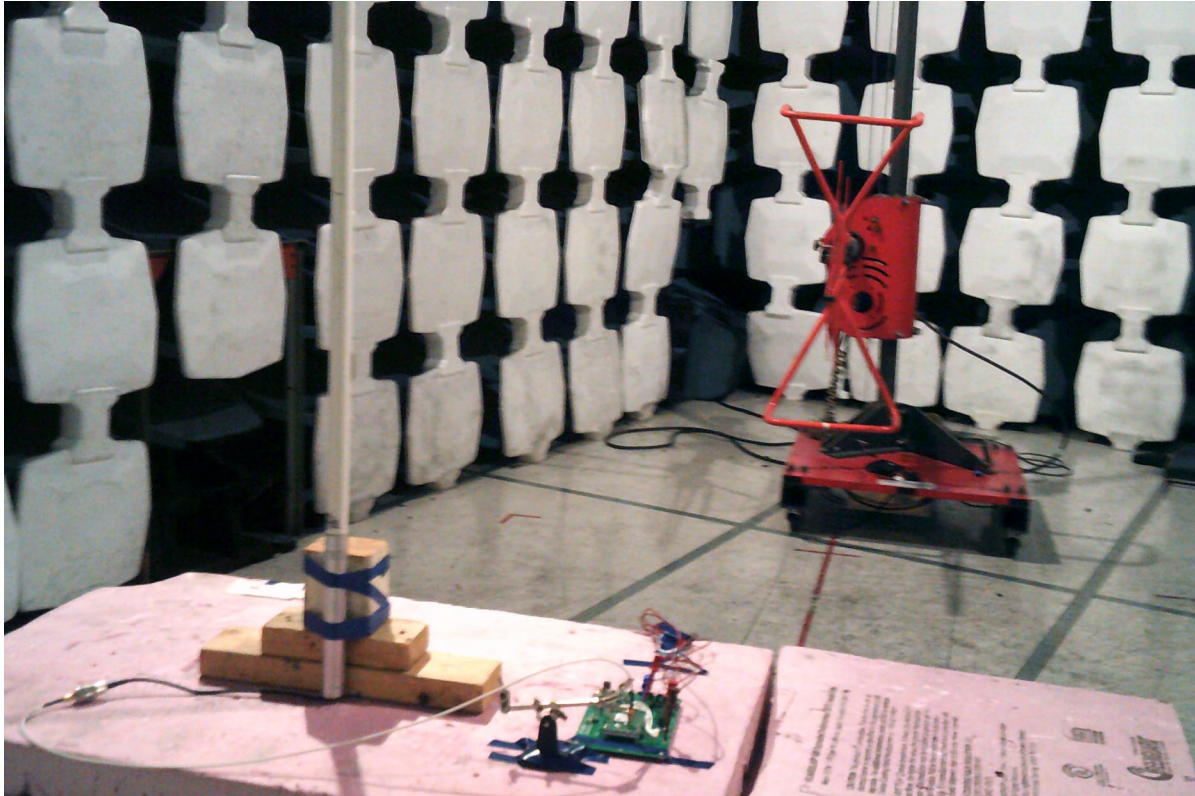


X-Plane RSE 30MHz – 1GHz Back Dipole

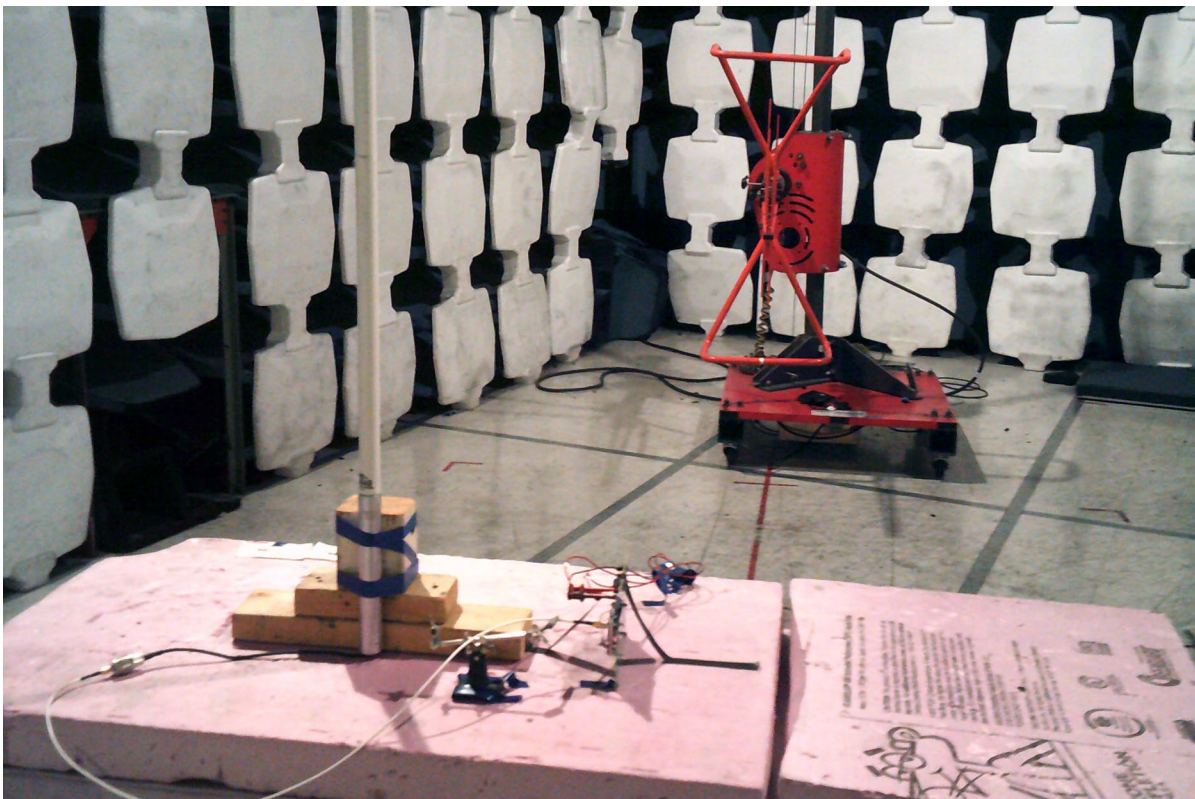


Y-Plane RSE 30MHz – 1GHz Back Dipole

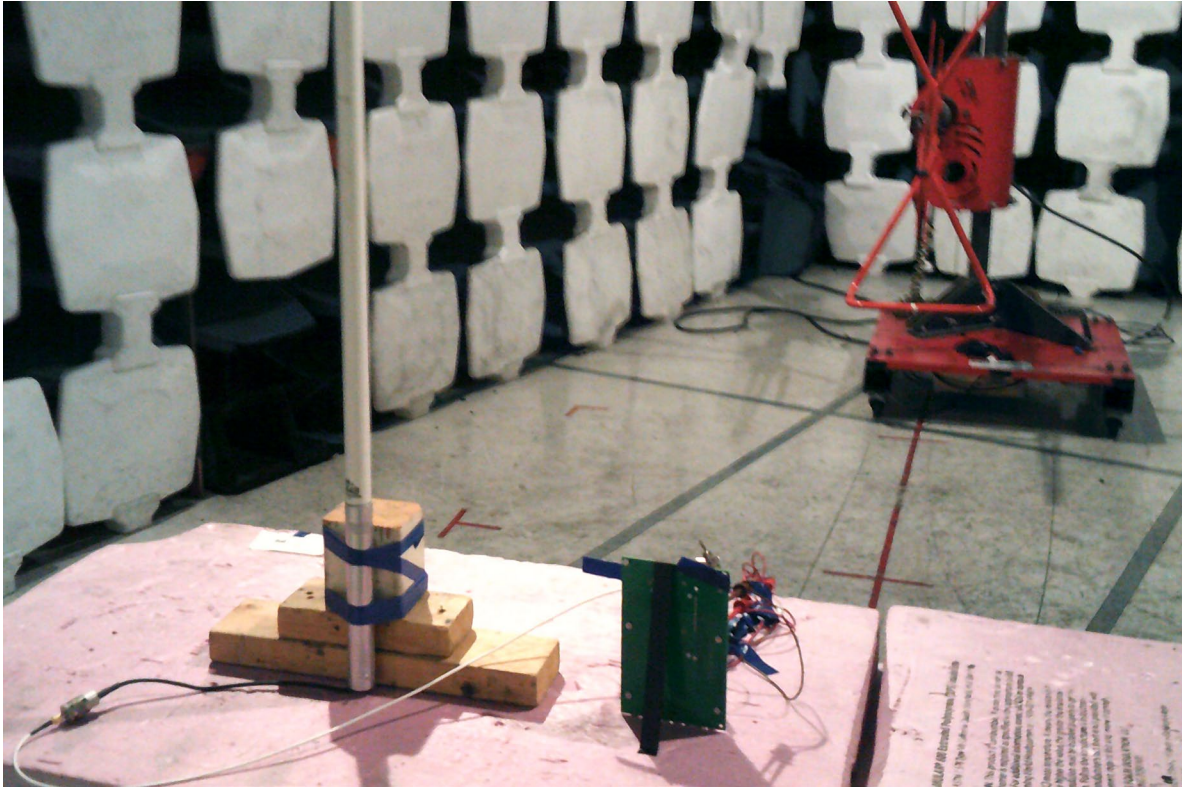

Z-Plane RSE 30MHz – 1GHz Back Dipole

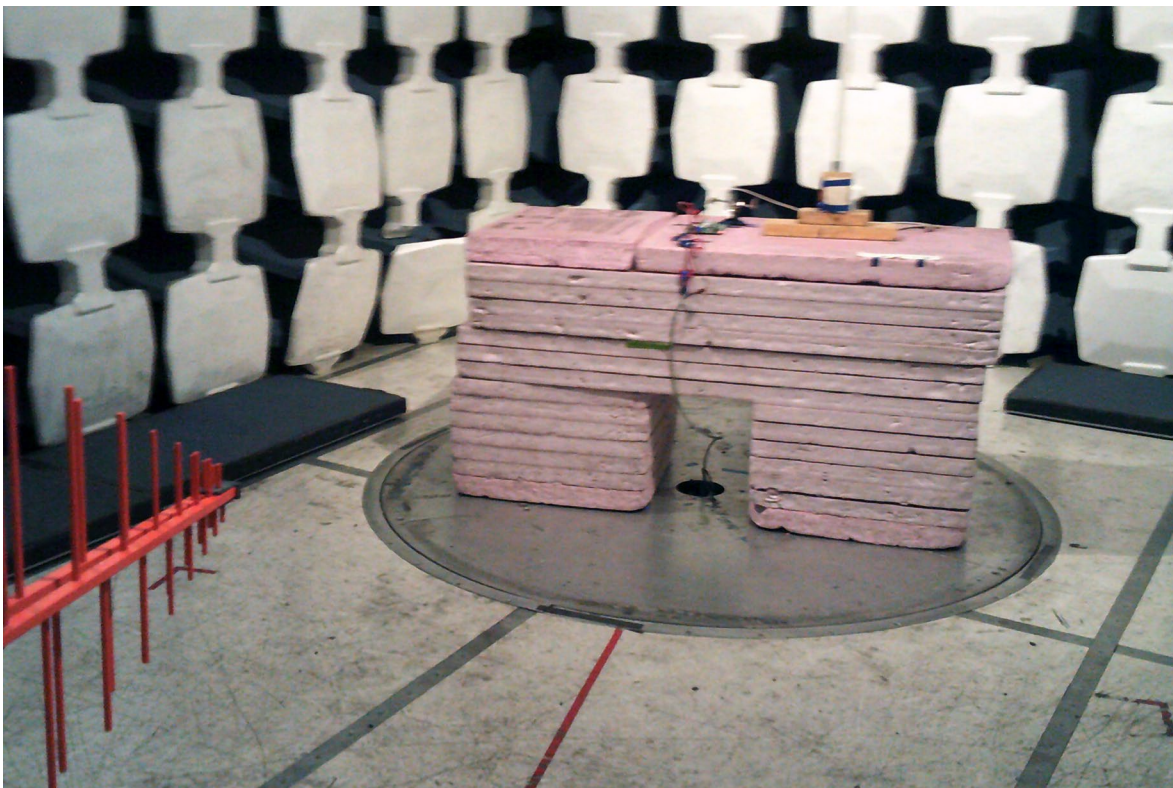

X-Plane RSE 30MHz – 1GHz Front Dipole

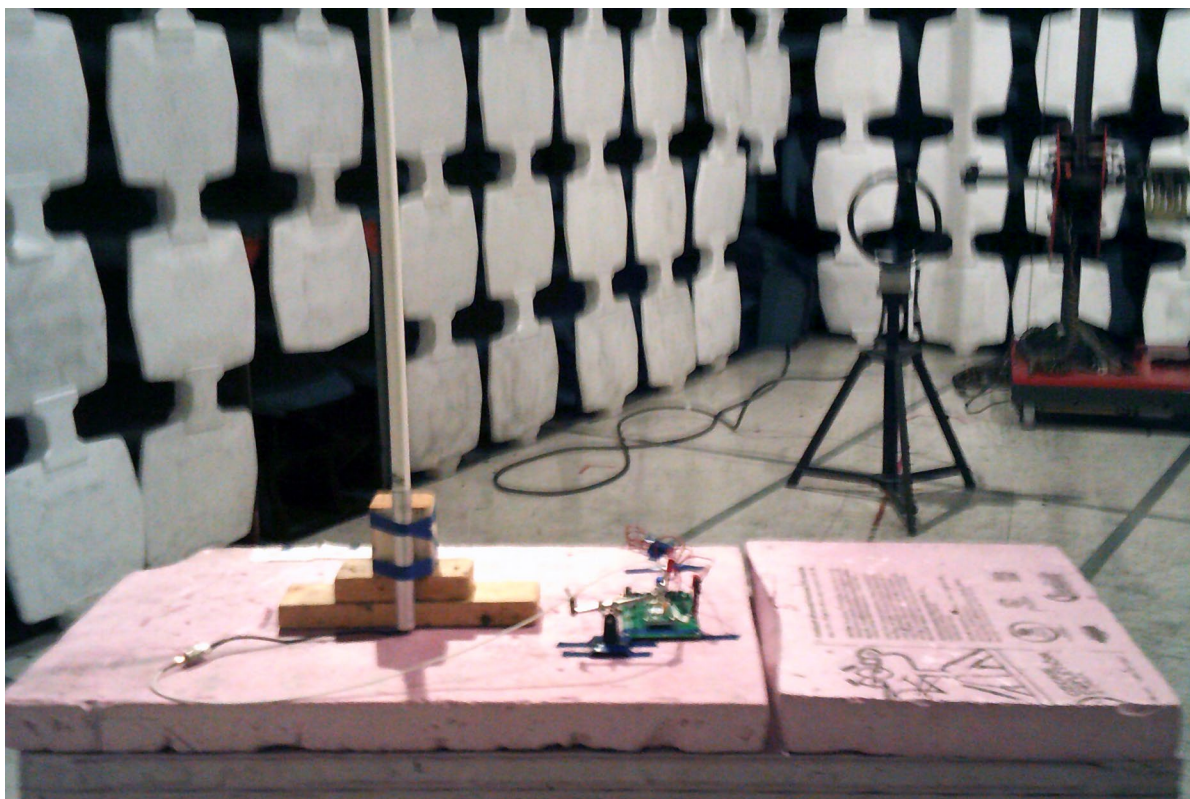


X-Plane RSE Below 30MHz Back Dipole




X-Plane RSE Above 1GHz Front Dipole




X-Plane RSE Above 1GHz Back Dipole

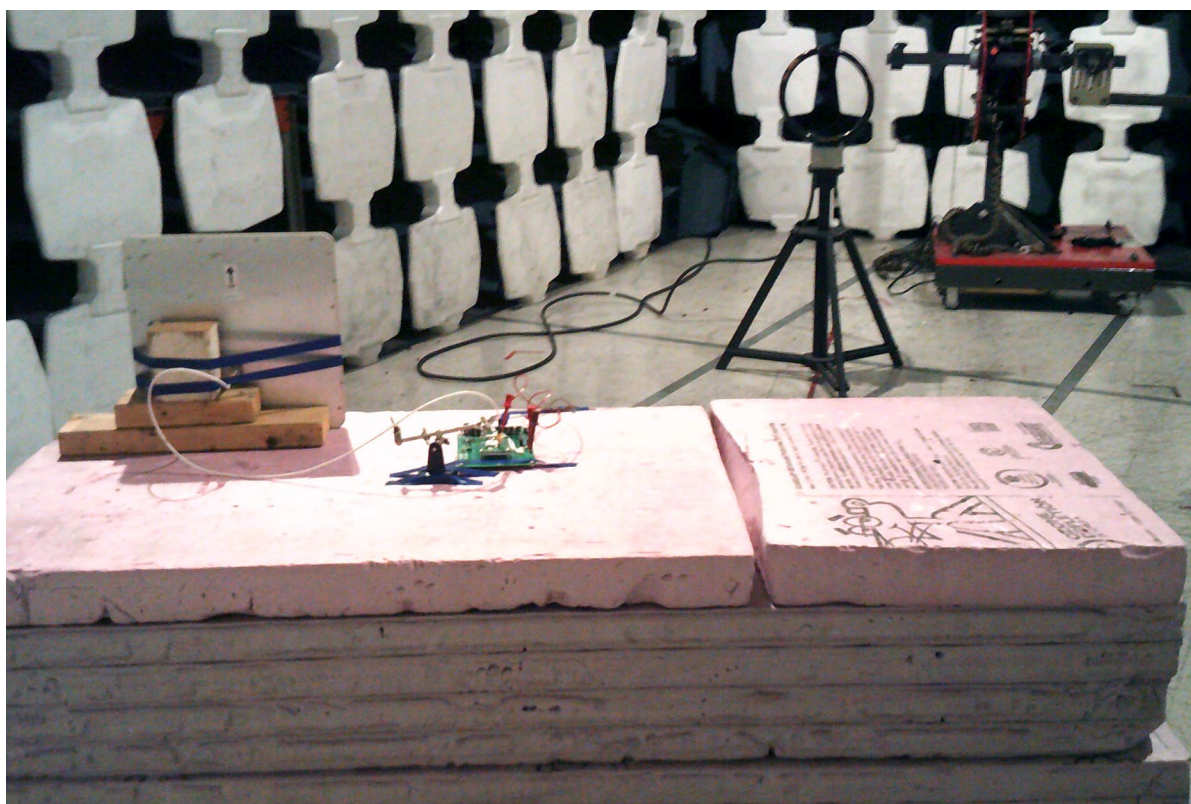

X-Plane RSE Below 30MHz Front Patch

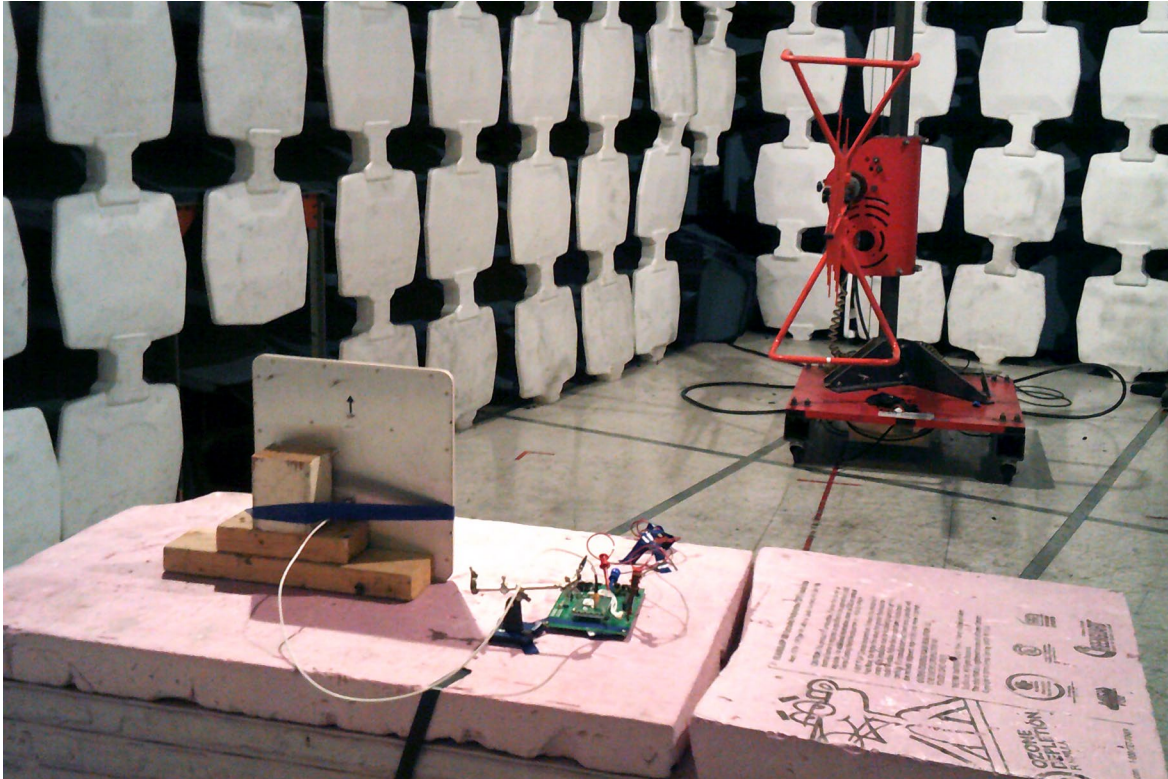

X-Plane RSE 30MHz – 1GHz Back Patch

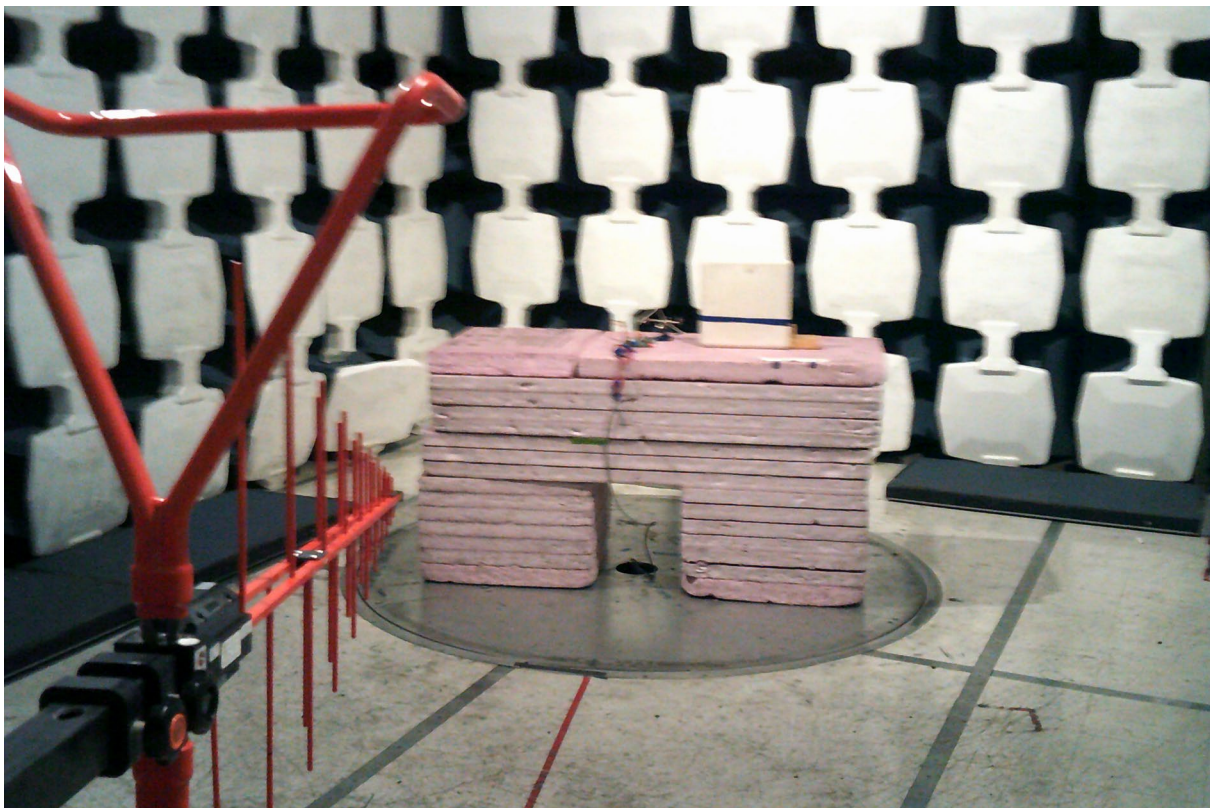

X-Plane RSE 30MHz – 1GHz Front Patch



X-Plane RSE Above 1GHz Front Patch



X-Plane RSE Above 1GHz Back Patch