


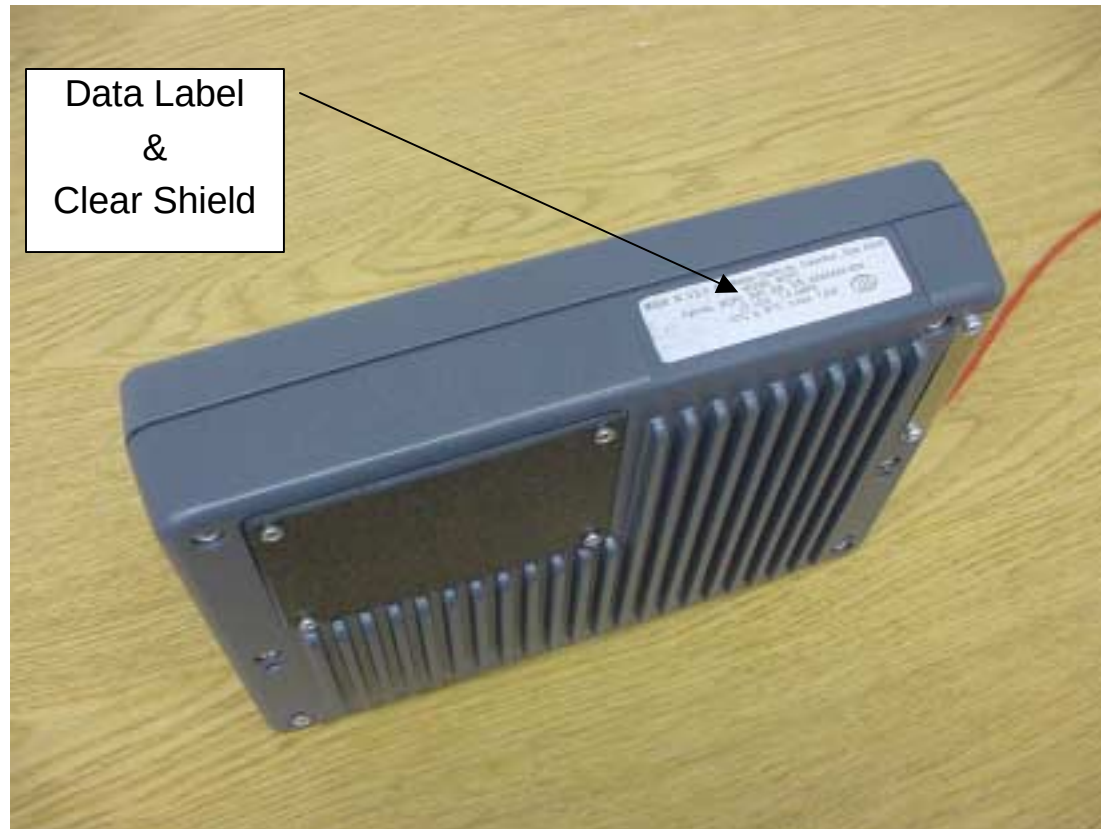

1. Print Data Label (**14115500A**) and install as shown on Rear Casting.
2. Install Clear Shield (**14115600A**) over Data Label.