


- a) Fit/replace the reed switch (*MDSR-10 Q2304*) if listed in the BOM or if damaged. Take care not to damage the glass component when forming legs.

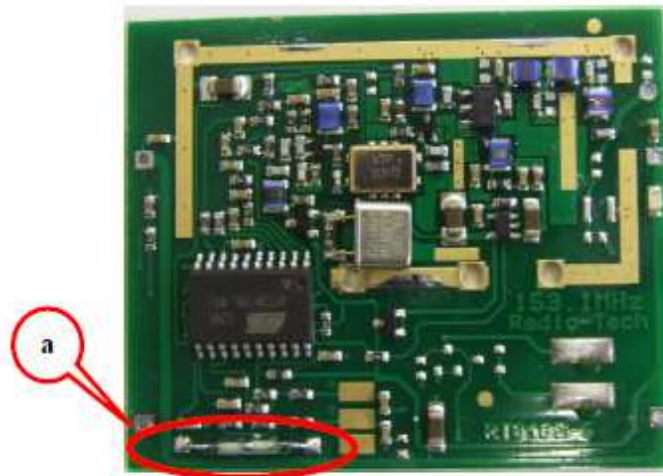

- b) Fold/form the shield can.
c) Solder the shield can flush to the transmitter PCB on the 3 points highlighted below.

