


Ferrite Core Installation Exhibit


Steps

The following steps explain the install method for the IS-TWL-CAPTURE hardware's ferrite cores.

- ① As shown in the image, install a large ferrite core near the controller's connector and fasten it a cable tie. Cut off the excess cable tie sticking out with scissors.

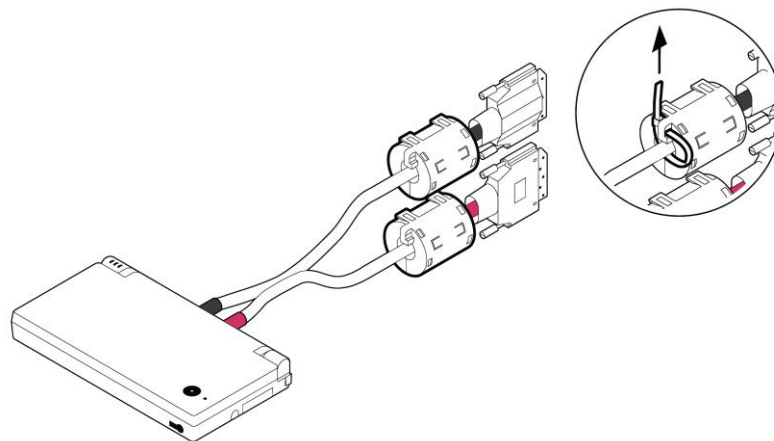

- ② As shown in the image, install a small ferrite core on the opposite end of the controller's connector and fasten it with a cable tie. Cut off the excess cable tie sticking out with scissors.

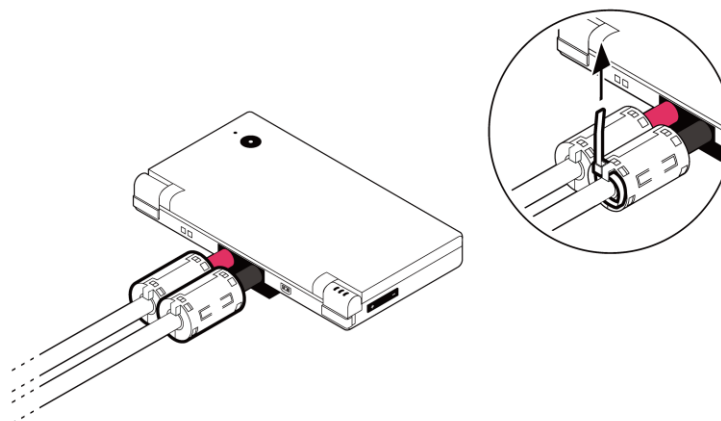

- ③ Install a small ferrite core on the USB cable. As shown in the image, place the ferrite core about 30cm from the B connector where it is looped and the cable is doubled.

