


1900MHz CDMA Mobile Phone (M/N: CC612)

➤ Test Setup Photographs


Test Mode: Mode 1: CDMA 1900

Description: Radiated Peak Output Power Test Setup

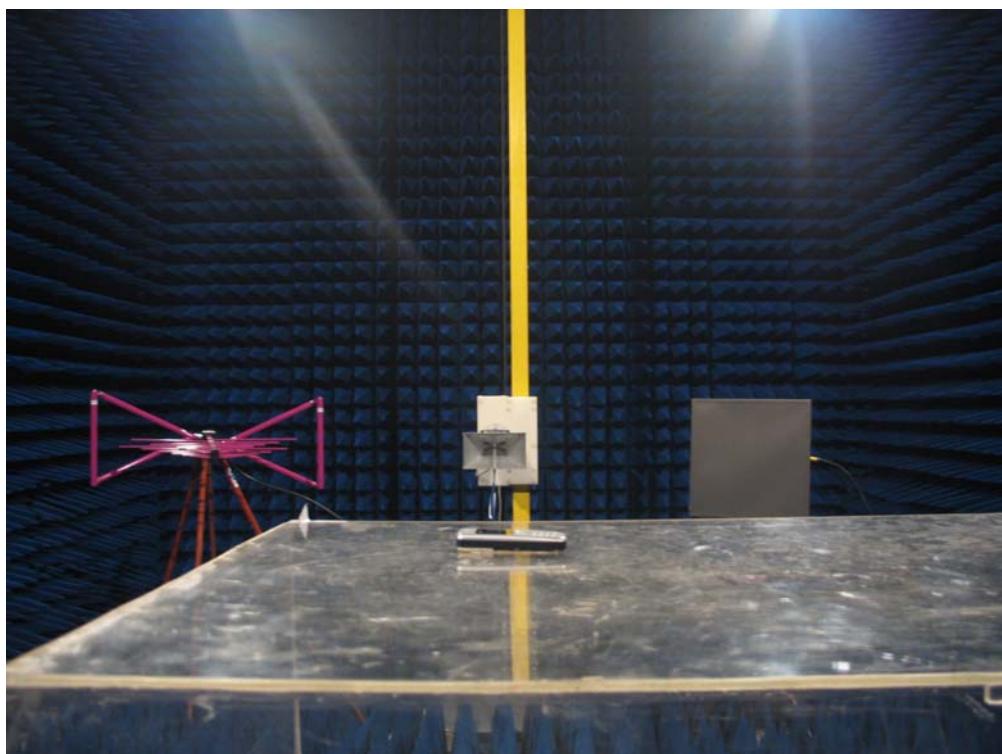

Test Mode: Mode 1: CDMA 1900

Description: Radiated Spurious Emission Test Setup for Under 1 GHz

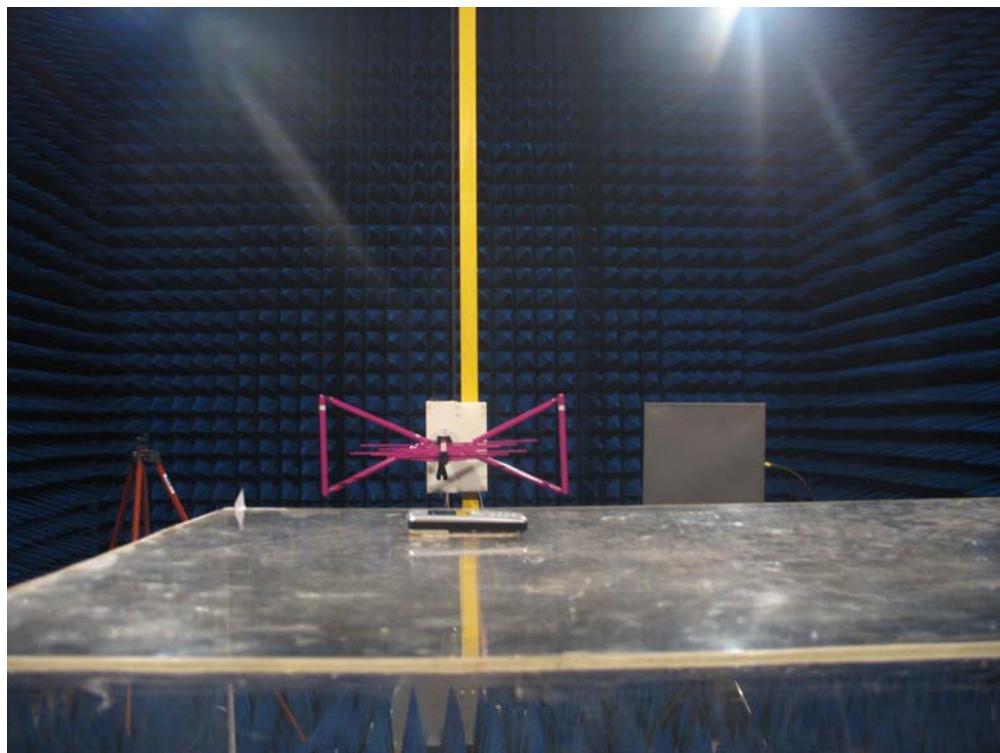

Test Mode: Mode 1: CDMA 1900

Description: Radiated Spurious Emission Test Setup for Above 1 GHz

