


Adapter Kit For PBF 1100 Panic Bar Single Point

Installation Sequence ① ② ③ ⑬

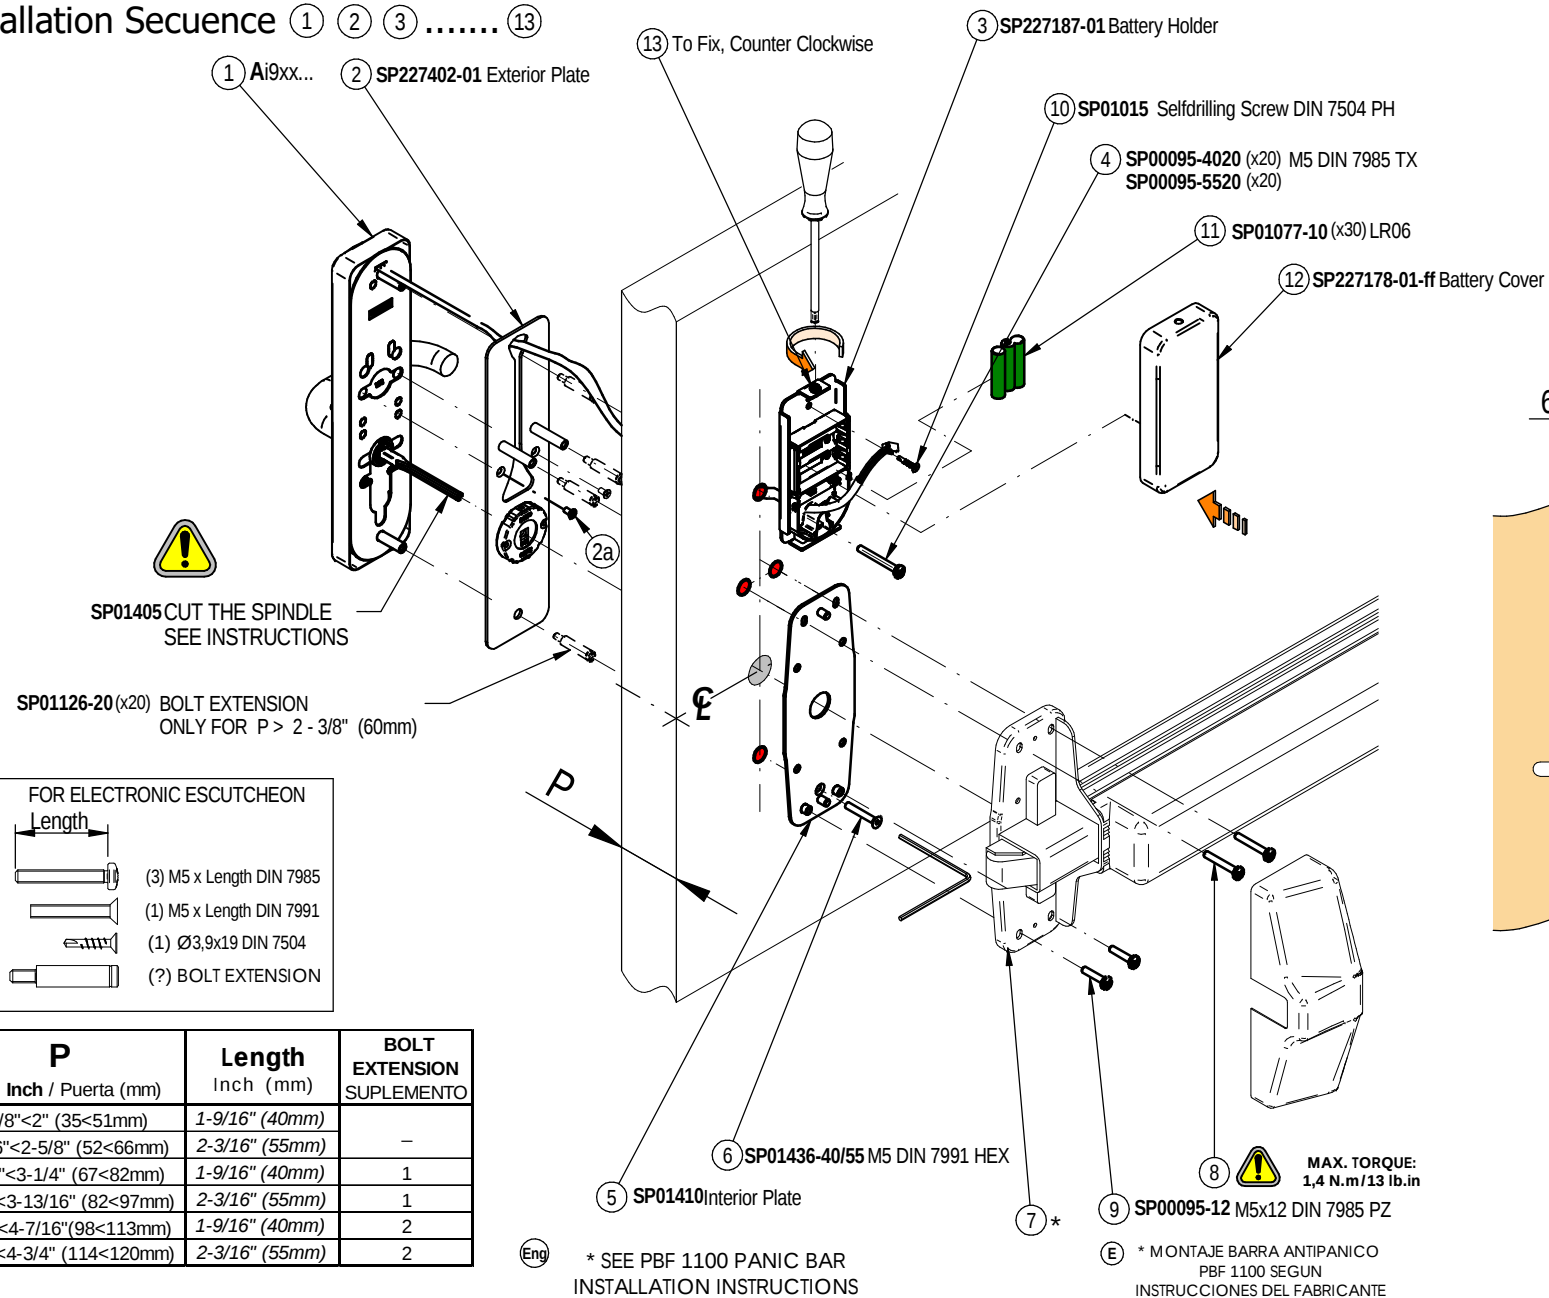

EXTERNAL ELECTRONIC | ESCUTCHEONS



(Eng)

COMPATIBLE MODELS

⑤

MODELOS COMPATIBLES

Ai950m00ffcH8-U
Ai960m00ffcH8-U

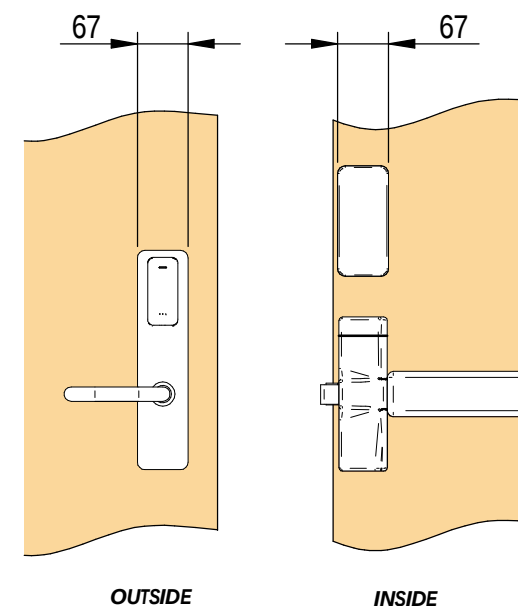

**AT THIS POINT DO NOT
CLOSE THE DOOR
TEST THE LOCK FIRST**

P Door Inch / Puerta (mm)	Length Inch (mm)	BOLT EXTENSION SUPLEMENTO
1-3/8"<2" (35<51mm)	1-9/16" (40mm)	
2-1/16"<2-5/8" (52<66mm)	2-3/16" (55mm)	—
2-5/8"<3-1/4" (67<82mm)	1-9/16" (40mm)	1
3-1/4"<3-13/16" (82<97mm)	2-3/16" (55mm)	1
3-7/8"<4-7/16" (98<113mm)	1-9/16" (40mm)	2
4-1/2"<4-3/4" (114<120mm)	2-3/16" (55mm)	2

(Eng)

* SEE PBF 1100 PANIC BAR
INSTALLATION INSTRUCTIONS

(E)



* MONTAJE BARRA ANTIPANICO
PBF 1100 SEGUN
INSTRUCCIONES DEL FABRICANTE

Eng DOOR PREPARATION: 2 STEPS

- ① -FOLLOW PBF 1100 DOOR PREPARATION INSTRUCTIONS
- ② -FOLLOW PRESENT SALTO DOOR PREPARATION SHEET INSTRUCTIONS FOR SALTO/PBF1100 ADAPTER KIT

E MECANIZADO DE PUERTA: 2 PASOS


- ① -SIGA LAS INSTRUCCIONES DE PREPARACION DE PUERTA PBF 1100
- ② -SIGA LAS PRESENTES INSTRUCCIONES DE PREPARACION DE PUERTA PARA EL KIT DE ADAPTACION SALTO/PBF 1100

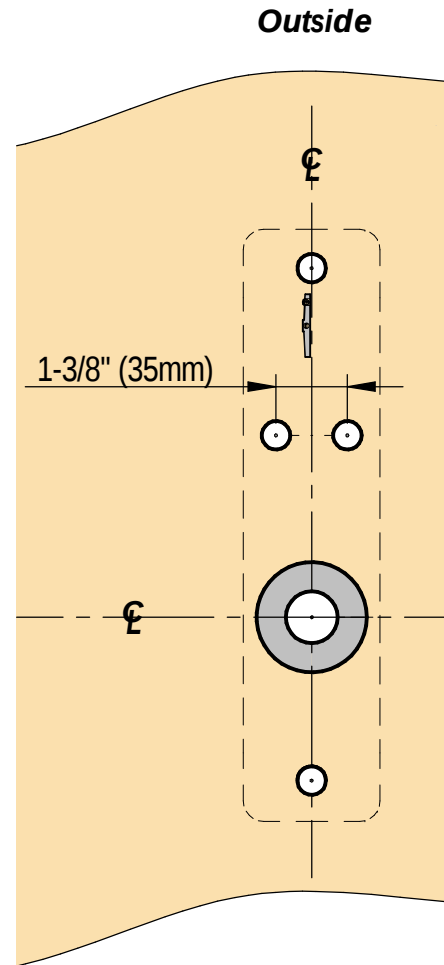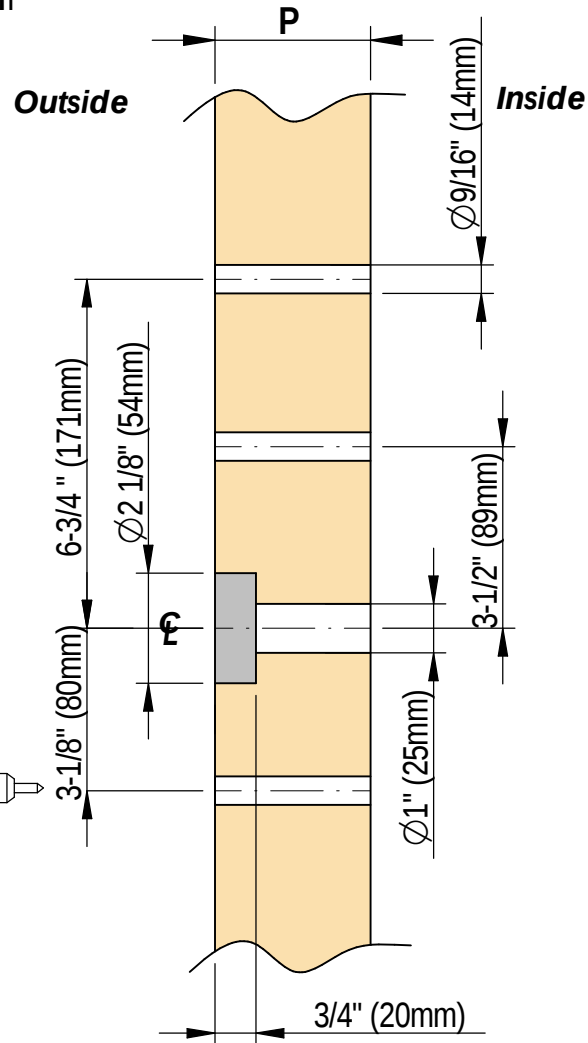

Eng Cutting the Spindle

- E Corte del Cuadradillo**

Spindle Length L

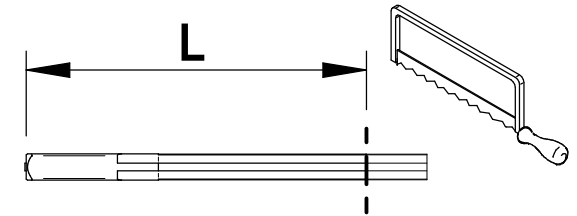

$$L = P + 25/32"$$

$$L = P + 20\text{mm}$$

Eng P= Door Thickness

E P= Espesor de Puerta

Eng * SEE PBF 1100 PANIC BAR
INSTALLATION INSTRUCTIONS

E * MONTAJE BARRA ANTIPANICO
PBF 1100 SEGUN
INSTRUCCIONES DEL FABRICANTE