


13. Check the labels.

CAUTION: Legal Requirement – ALL of these labels MUST be on the shade before it is shipped.

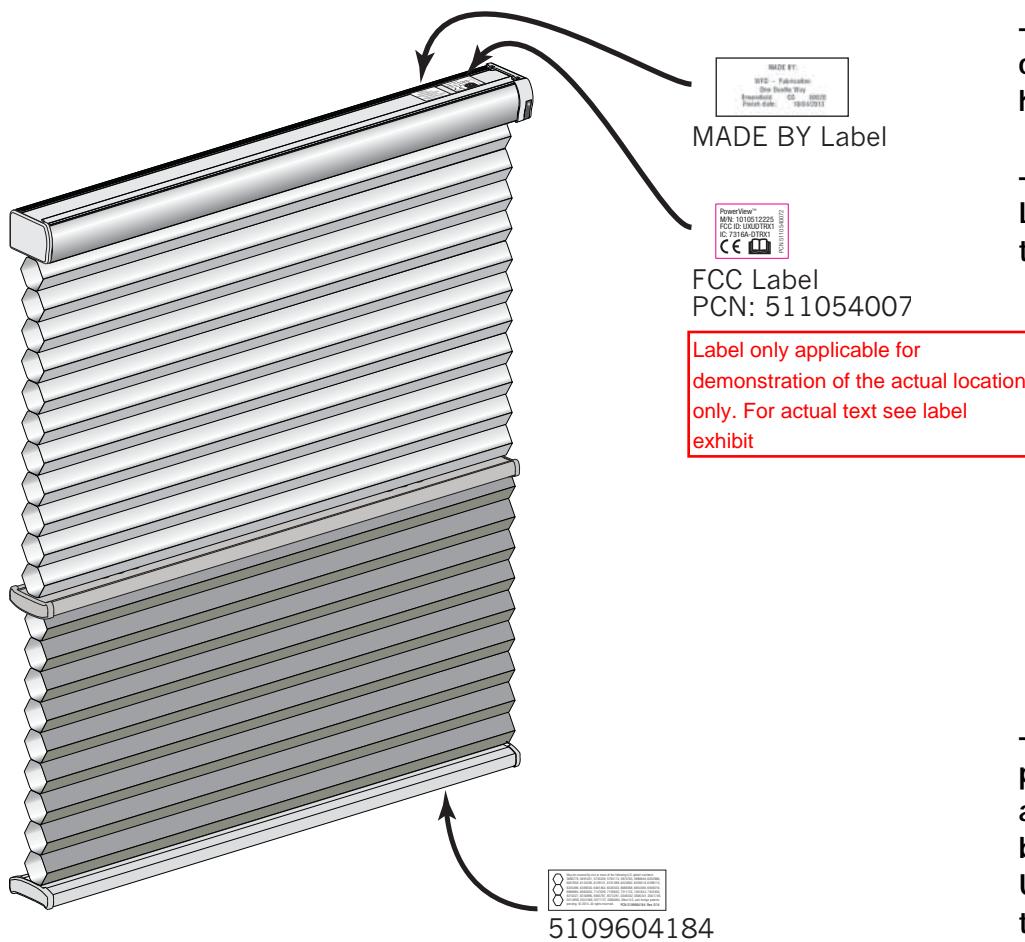

– MADE BY label is on the top of the headrail.

– PowerView™ FCC Label is on top of the headrail.

– The appropriate patent label is applied to the bottom rail.
Usually this is on the **RIGHT** side.