

TEST SETUP PHOTOGRAPHS


1. Conducted Emission Measurement



2. Radiated Emission Measurement(30-1000MHz)



3. Radiated Emission Measurement(1000-5000MHz)

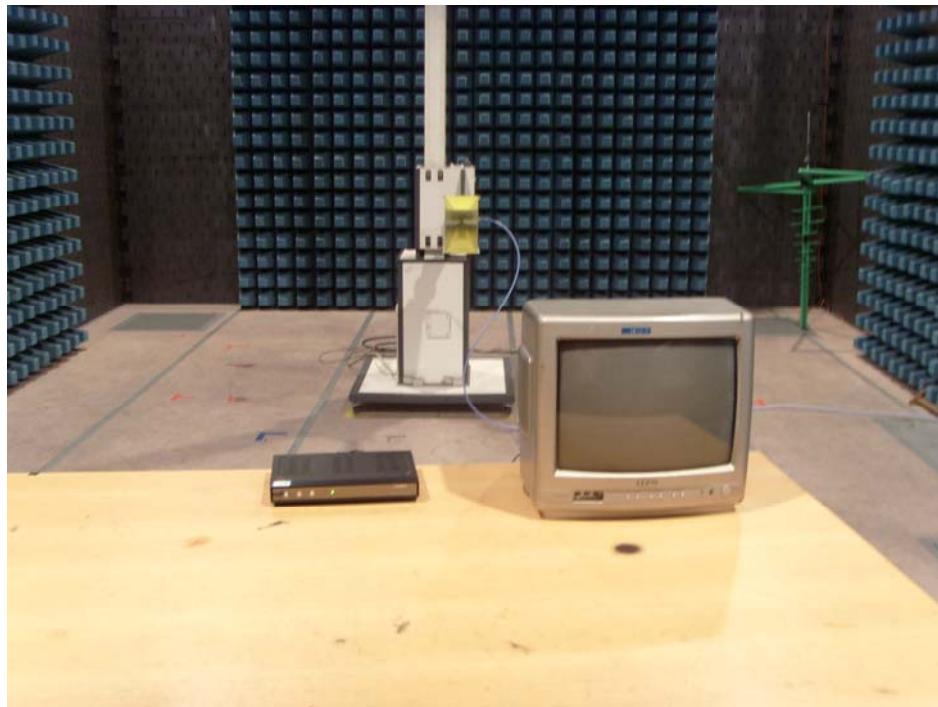

4. Antenna Conducted Power Measurement



5. Output and Spurious level test set up photo



6. Incorporate circuitry to automatically prevent emanations

