


e. Mark out dimensions as shown below on Backplate using pencil and engineers square. Masking tape is not needed. Apply Stickers in correct place as shown on the diagram.

*All measurements in mm*

*Not to scale*

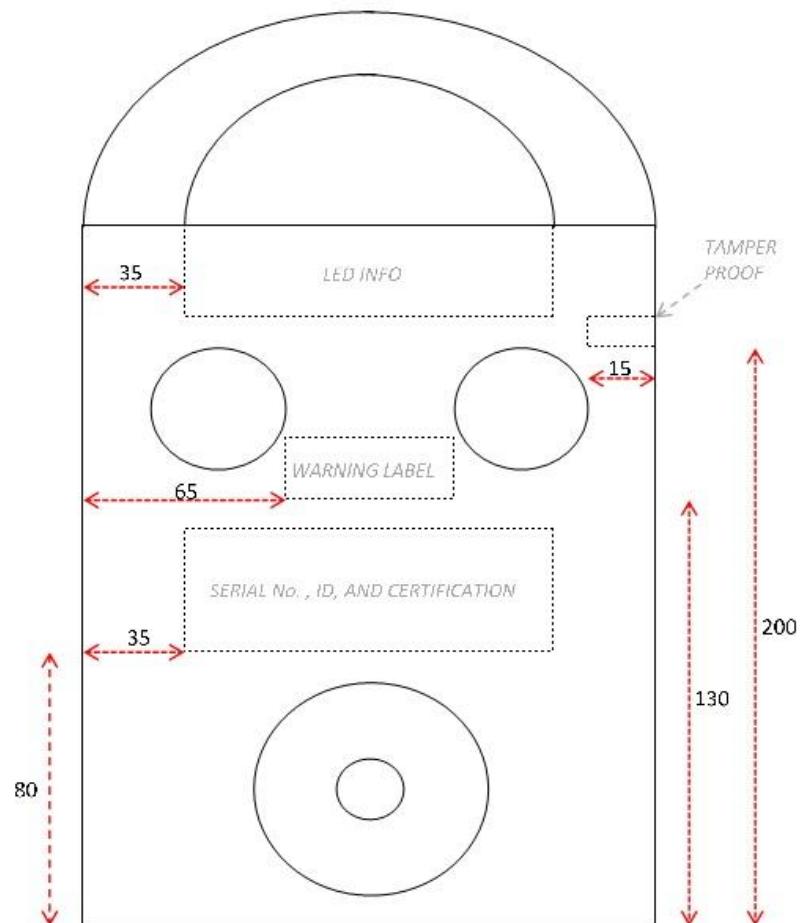

f. Wipe away any pencil markings and ensure that backplate is clean.

Apply Coloured Dot sticker to front of case if the target has been programmed as SSB

g. Final clean and inspect the completed mini Transponder Assembly.