


FLT18, FLT20 & FLT22
Must be glued
during the SM process

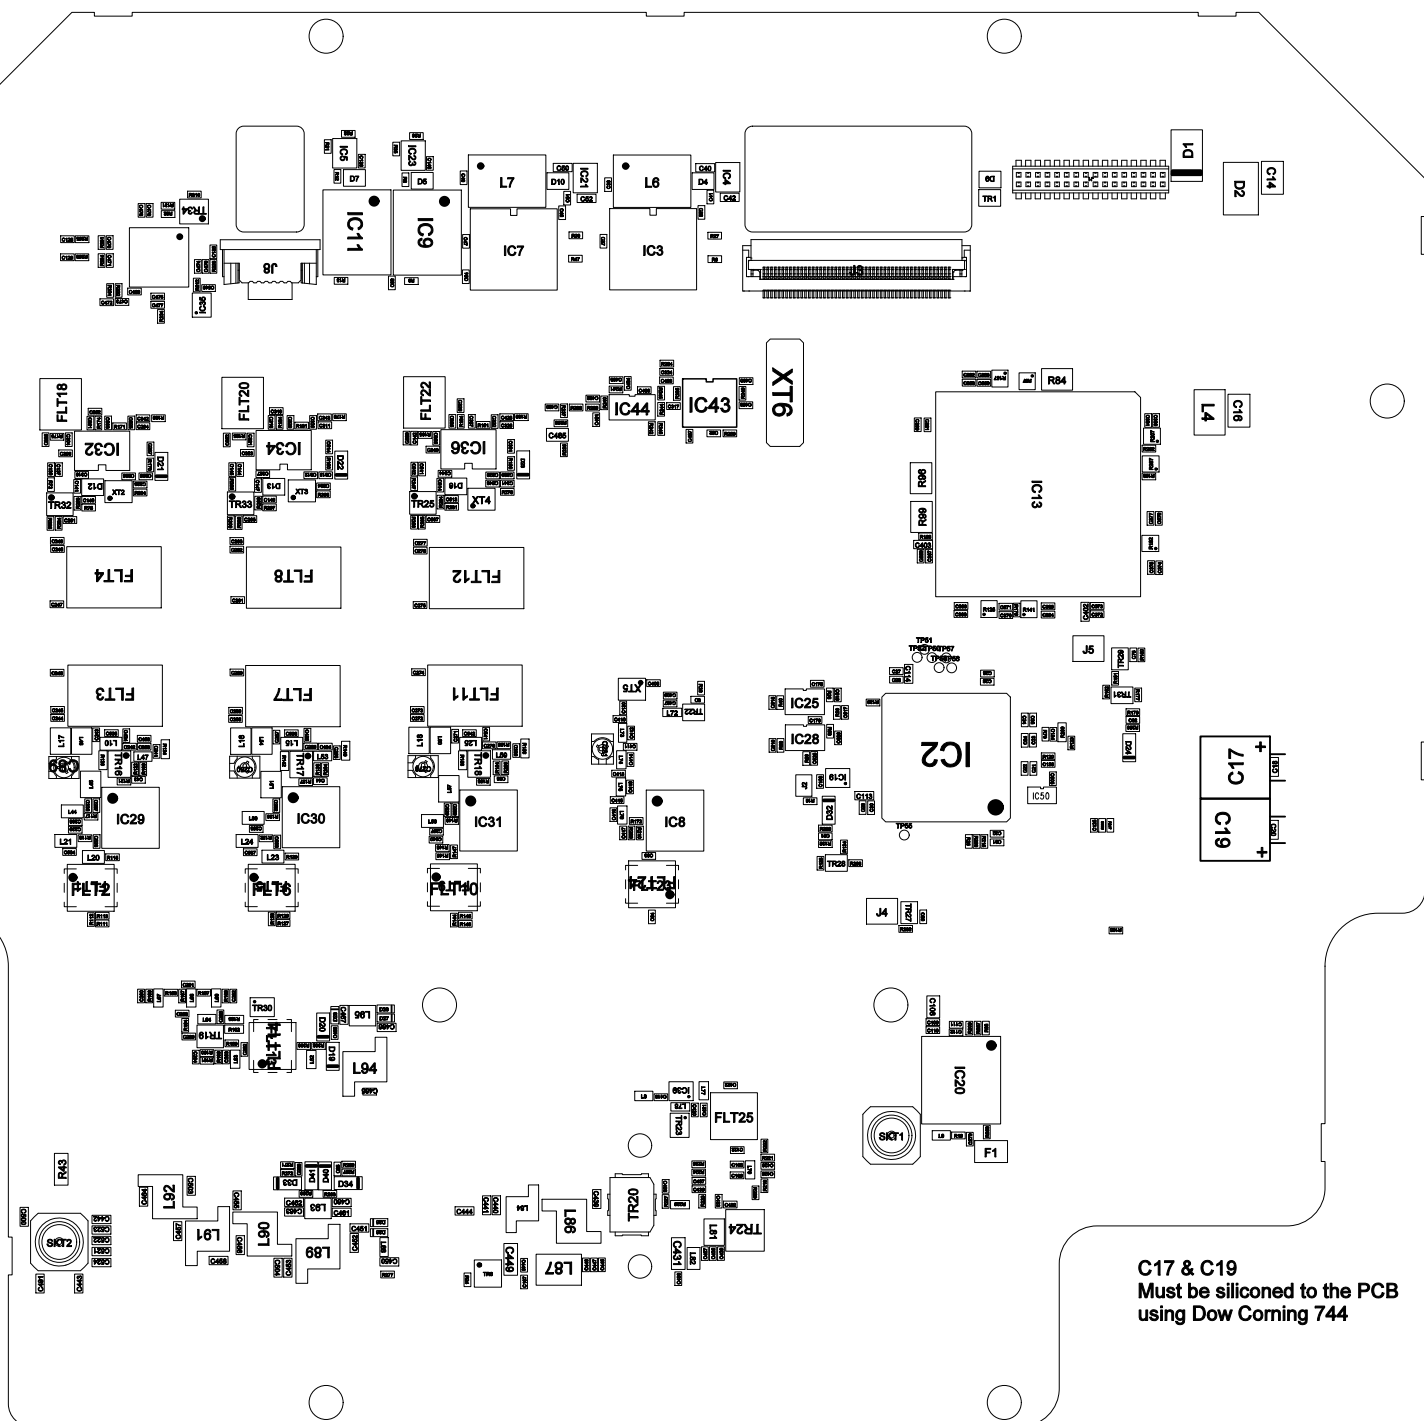


C17 & C19
Must be siliconed to the PCB
using Dow Corning 744



Unit 4
Ocivan Way
Margate
Kent
CT9 4NN
Tel: +44 (0)1843 282930
Fax: +44 (0)1843 293659


Issue:	Mod No:	Date:	Title:	
			PCB Assy: ATA100 Main	
			Project:	Sheet Title:
			AIS	Top Components
Drawn:	Checked:	Approved:	Drawing No:	
<i>[Signature]</i>	<i>[Signature]</i>	<i>[Signature]</i>	800S-02463	
Date: 05/08/19	Date: 05/08/19	Date: 05/08/19	Sheet No:	Issue:
			1 of 4	01.00

C13 & C15
Must be siliconed to the PCB
using Dow Corning 744

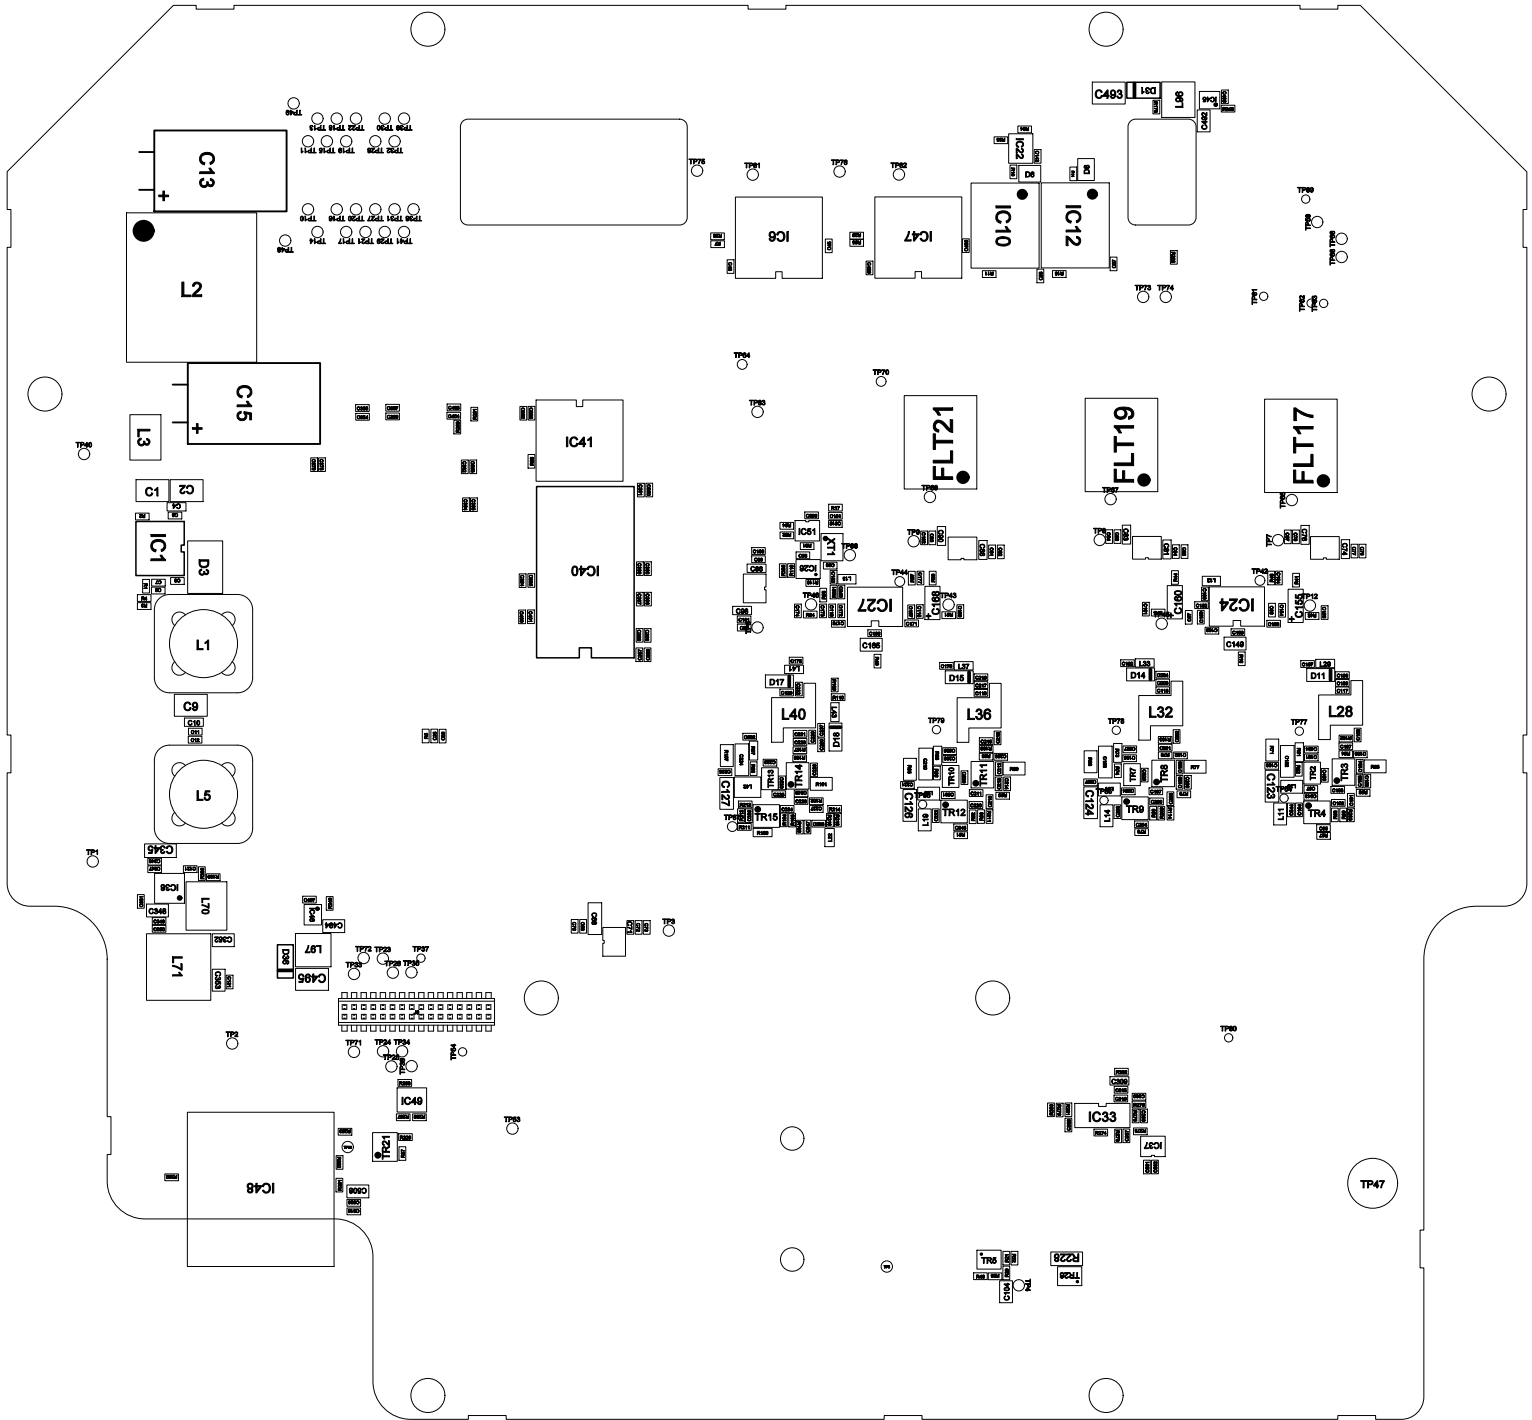

 Unit 4 Ocivan Way Margate Kent CT9 4NN Tel: +44 (0)1843 282930 Fax: +44 (0)1843 293659	Issue:	Mod No:	Date:	Title: PCB Assy: ATA100 Main		
				Project: AIS	Sheet Title: Rear Components	
	Drawn:  Date: 05/08/19	Checked:  Date: 05/08/19	Approved:  Date: 05/08/19	Drawing No: 800S-02463	Sheet No: 2 of 4	Issue: 01.00

Ensure all pads of the screening cans are soldered

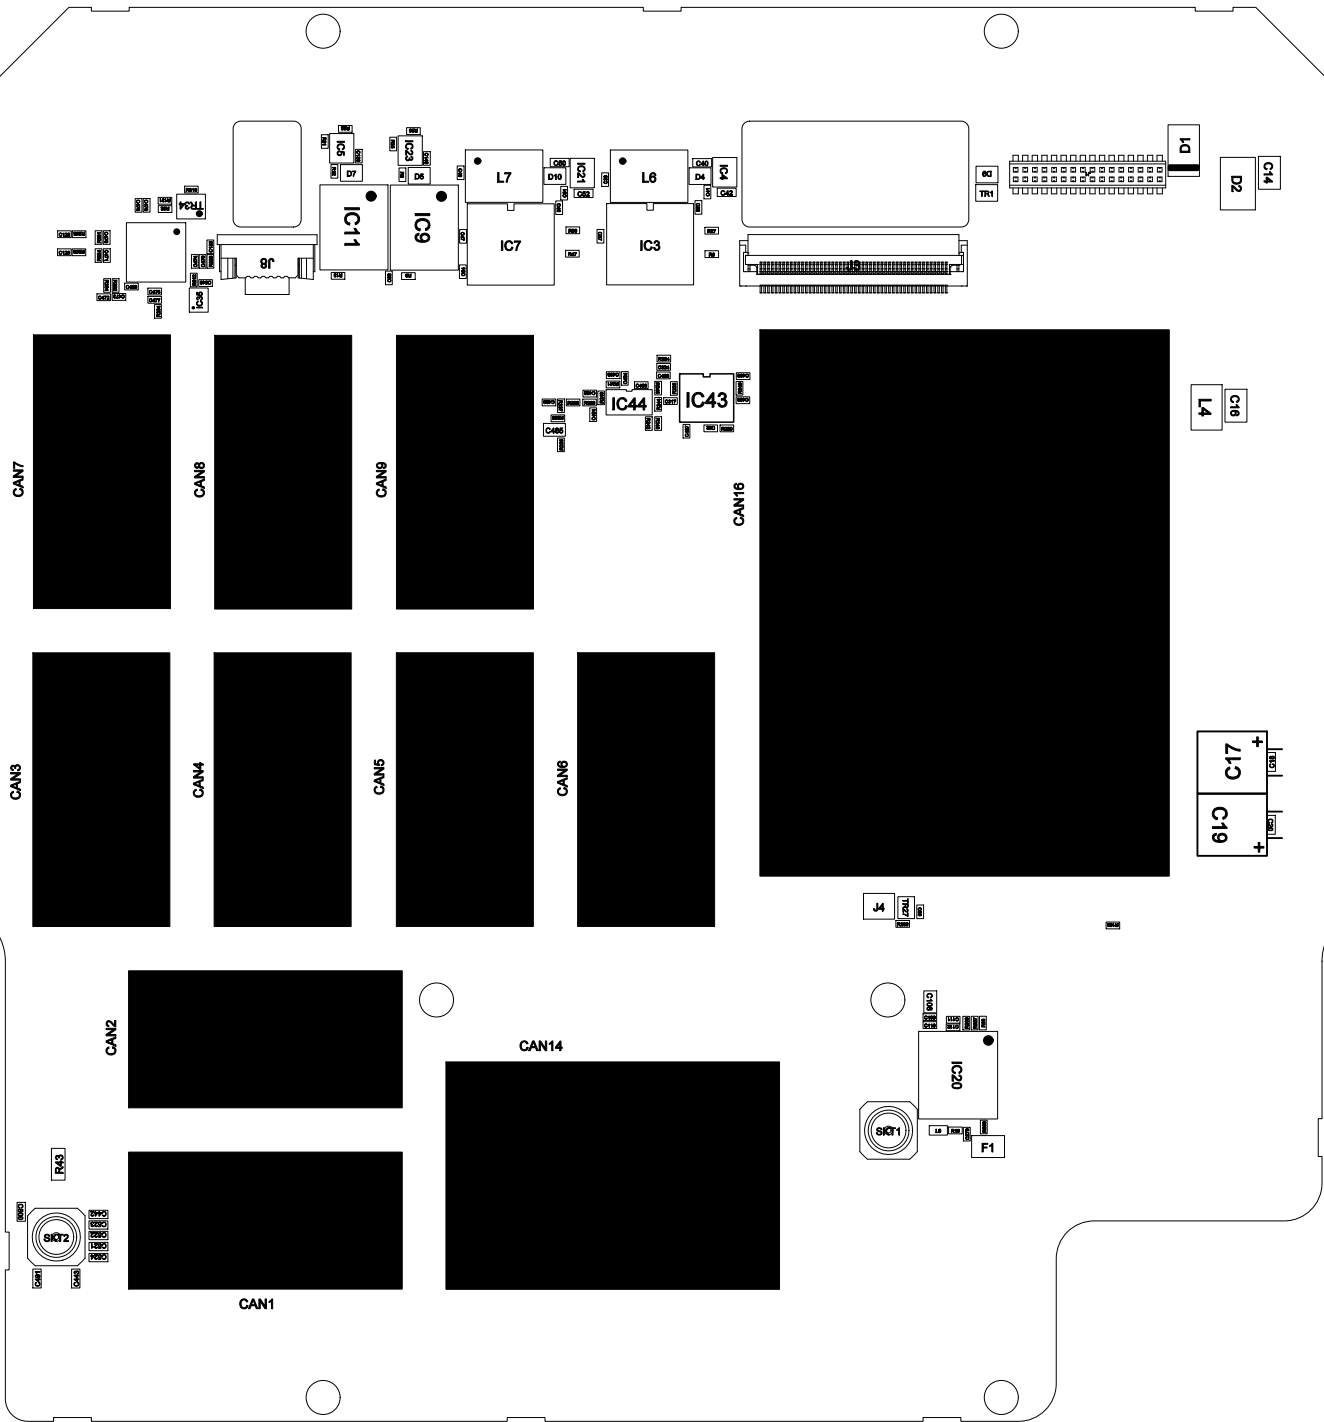

 Unit 4 Ocivan Way Margate Kent CT9 4NN Tel: +44 (0)1843 282930 Fax: +44 (0)1843 293659	Issue:	Mod No:	Date:	Title:		
	.	.	.	PCB Assy: ATA100 Main		
	.	.	.			
	.	.	.			
	.	.	.			
Drawn:  Date: 05/08/19	Checked:  Date: 05/08/19	Approved:  Date: 05/08/19	Project:		Sheet Title:	
			AIS		Top Can Assy	
			Drawing No:		Sheet No:	Issue:
			800S-02463		3 of 4	01.00

Ensure all pads of the screening cans are soldered

