


SIZE: 210 x 275 mm
材质: 80G 书写纸
折法: 风琴页 525 x 65 mm成品

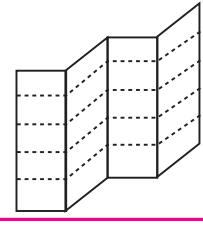

正面

newONE™

Z-Wave Smart Plug Dimmer

• N4002 •



Specification:

Power: 120V 60Hz
Loading: 400W Max
Frequency: 908.42MHz
Temperature Range: 32°F~104°F
(0°C~40°C)

Indoor use in dry location

Program button

Press 1x: On/Off
Press 2x: Night Light Mode
Press 3x: Z-Wave Network configuration.
Hold to adjust brightness.

LED indicator:

Device output status, LED on with output on
Add/Removed: blue LED flashing 30s

Features:

1. Z-Wave on/off + dimmer control.
2. Grounded 3-wire power connection for safety.
3. Remembers and restores on/off status after power failure.
4. Built-in Z-Wave Plus signal repeater to extend network range.
5. S2 security and 700 Z-Wave chip for reliable wireless communication.
6. Work with all certificated Z-Wave controllers.

Min brightness level setting(Refer to Parameter 11)

- 1: Press the button 5 times quickly, the LED indicator flashes slowly to enter the setting "Min brightness" mode. The lamp will adjust to the min brightness automatically.
- 2: Hold the button to adjust the brightness of the bulb, select the appropriate brightness to set the min brightness.
- 3: Press the button 5 times quickly to confirm it (the min brightness setting is completed). The LED indicator will flash 3 times.

Max brightness level setting(Refer to Parameter 12)

- 1: Press the button 10 times quickly, the LED indicator flashes slowly to enter the setting "Max brightness" mode. The lamp will adjust to the max brightness automatically.
- 2: Hold the button to adjust the brightness of the bulb, select the appropriate brightness to set the max brightness.
- 3: Press the button 10 times quickly to confirm it (the max brightness setting is completed). The LED indicator will flash 3 times.

Remark: If the setting is not confirmed at Step 3, the setting mode will be exited after 10S.

★ Please contact us if you have any questions:

www.newonetree.com
ask@newone-tech.com

Z-WAVE® Z-WAVE INTEROPERABILITY

This product can be included and operated in any Z-Wave network with other Z-Wave certified devices from other manufacturers and/or other applications. All non-battery operated nodes within the network will act as repeaters regardless of vendor to increase the reliability of the network.

This Device supports Lifeline (association group 1) supporting 1 node for lifeline communication.

Group 1 must be assigned the Node ID of the primary controller where unsolicited notifications will be sent. The Z-Wave controller should set this association automatically after inclusion.

Lifeline association only supports the "Device Reset Locally" function.

Adding Device To Z-Wave Network for QR CODE



Scan here for SmartStar inclusion

Note: DSK Code can be found on packaging.
Do not remove or damage them.

Z-Wave Network Configuration

Adding Device To Z-Wave Network

1. Follow the instructions for your Z-Wave certified controller to add a device to the Z-Wave network.

2. Once the controller is ready to add your device, **press the Manual/ Program button on the smart plug 3 times quickly**. The blue LED will be flashing quickly.

Auto-add mode: LED will be flashing within 30 seconds after first plugged in.

Now, you have complete control to turn your fixture ON/OFF according to groups, schedules and interactive automation programmed by your controller. If your Z-Wave certified controller features remote access, you can control your fixture from your mobile devices.

Again: If you have issues with pairing/including, please move the device as close as possible to the hub and try again--you can move to your final location when completed.

Note: If the manual button doesn't light up after pressed 3 times, please reset the device: **click the button 2 times quickly then hold for at least 10 seconds**

This operation could be done when manual control is functional--single press can turn on/off the lamp.

To Remove The Device

1. Follow the instructions for your Z-Wave certified controller to remove a device from the Z-Wave network.

2. Once the controller is ready to remove your device, press the manual/program button on the smart plug 3 times quickly.

To Return The Device To Factory Defaults

Manual: Click the button 2 times quickly then hold for at least 10 seconds. (Light flashes 1 time when reset successfully.)

Host reset: Remove it from hub the device will factory reset.

Association Group

Group 1 supports 1 node ID, Group 2 supports maximum of 5 node ID's

Association Group 1: Z-Wave Plus Lifeline

Association Group 2: Send Basic Set ON / Off

Warranty

Our Products warrants this product to be free from manufacturing defects for a period of one year from the original date of consumer purchase. This warranty is limited to the repair or replacement of this product only and does not extend to consequential or incidental damage to other products that may be used with this product. This warranty is in lieu of all other warranties, expressed or implied. Some states do not allow limitations on how long an implied warranty lasts or permit the exclusion or limitation of incidental or consequential damage, so the above limitations may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

背面

Parameter Settings

LED Indicator

This parameter can access you to choose the led indicator to be on when the plug(light) is on/off, or LED indicator remains on/off all times.

(LED flashes 3 times when the configuration parameter changed.)

--- Parameter =2, size =1byte, Default =0

Value=0 (default) LED is On when the switch(light) is Off a

the switch (light) is On.

Value=1 -----LED is On when switch(light) is On and L

switch(light) is Off.

Value=2 -----LED is always Off.

Value=3 -----LED is always On.

Auto Turn-On Timer

This parameter can access you to set a timer to make the switch turn on automatically after the switch turned off. The number entered as value corresponds to number of minutes.

Operation: Set up on the hub.

(LED flashes 3 times when the configuration parameter changed.)

Parameter =6, Size=4, Value: 0~65535 (minutes);

Value=0 (default) turn on the outlet

Restores state after power failure

This parameter can access you to set the switch to be on/off after power failure.

Operation: quickly press 8 times to change this parameter .

(LED flashes 3 times when the configuration parameter changed.)

Parameter=8, Size=1, Value=2 (default)

Value=0-----The switch is off regardless of the state prior to power failure.

Value=1-----The switch is on regardless of the state prior to power failure.

Value=2 (default) memory state before power failure

This switch will return to state prior to the power failure after power is restored.

Night Light Set

This parameter can access you to set a specific brightness for the light when you want to make it as a night light.

(LED flashes 3 times when the configuration parameter changed.)

Parameter=7, Size=1, Value=2

Value=1 10% brightness

Value=2 20% brightness

/

Value=10 100% brightness

Dimmer speed (ON/OFF Control)

This parameter can access you to set the time from maximum brightness to minimum brightness or minimum brightness to maximum brightness (Only when turn ON/OFF the light)

Operation: Set up on the hub.

(LED flashes 3 times when the configuration parameter changed.)

Parameter=10, Size=1, Default =4

Value=1 -----from 0x63 to 0x00 or from 0x00 to 0x63 need 1s

Value=2 -----from 0x63 to 0x00 or from 0x00 to 0x63 need 2s

/

Value=10 -----from 0x63 to 0x00 or from 0x00 to 0x63 need 10s

Dimmer speed (Dimmer Control)

This parameter can access you to set the time from maximum brightness to minimum brightness or minimum brightness to maximum brightness.

(Only when hold to change the brightness or control from HUB).

Operation: Set up on the hub.

(LED flashes 3 times when the configuration parameter changed.)

Parameter=10, Size=1, Default =4

Value=1 -----from 0x63 to 0x00 or from 0x00 to 0x63 need 1s

Value=2 -----from 0x63 to 0x00 or from 0x00 to 0x63 need 2s

/

Value=10 -----from 0x63 to 0x00 or from 0x00 to 0x63 need 10s

Multilevel minimum value can be set

Operation: quickly press 5 times to change this parameter .

(LED flashes 3 times when the configuration parameter changed.)

---Parameter=11, Size=1, Default =10

Value=0 disable

Value=1

/

Value=99

Multilevel maximum value can be set

Operation: quickly press 10 times to change this parameter .

(LED flashes 3 times when the configuration parameter changed.)

---Parameter=12, Size=1, Default =99

Value=0 disable

Value=1

/

Value=99

Generic Device Class:

0x11-GENERIC_TYPE_SWITCH_MULTILEVEL

Specific Device Class:

0x00-SPECIFIC_TYPE_NOT_USED

Command Classes:

0x5E-COMMAND_CLASS_ZWAVEPLUS_INFO_V2,

0x26-COMMAND_CLASS_SWITCH_MULTILEVEL_V4,

0x70-COMMAND_CLASS_CONFIGURATION_V4,

0x85-COMMAND_CLASS_ASSOCIATION_V3,

0x8E-COMMAND_CLASS_MULTI_CHANNEL_ASSOCIATION_V4,

0x59-COMMAND_CLASS_ASSOCIATION_GRP_INFO_V3,

0x71-COMMAND_CLASS_NOTIFICATION_V8,

0x31-COMMAND_CLASS_SENSOR_MULTILEVEL_V11,

0x55-COMMAND_CLASS_TRANSPORT_SERVICE_V2,

0x86-COMMAND_CLASS_VERSION_V3,

0x72-COMMAND_CLASS_MANUFACTURER_SPECIFIC_V2,

0x5A-COMMAND_CLASS_DEVICE_RESET_LOCALLY,

0x73-COMMAND_CLASS_POWERLEVEL,

0x9F-COMMAND_CLASS_SECURITY_2,

0x6C-COMMAND_CLASS_SUPERVISION,

0x7A-COMMAND_CLASS_FIRMWARE_UPDATE_MD_V5

FCC / IC This device complies with part 15 of the FCC and Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's

authority to operate the equipment:

— Reorient or relocate the receiving antenna.

— Increase the separation between the equipment and receiver.

— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

— Consult the dealer or an experienced radio/TV technician for help.