




Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	n40	5755	Ant1	5754.96	-40000	-6.95	25	Pass
NVNT	n40	5795	Ant1	5795	0	0	25	Pass
NVNT	ac20	5745	Ant1	5745.04	40000	6.96	25	Pass
NVNT	ac20	5785	Ant1	5784.98	-20000	-3.46	25	Pass
NVNT	ac20	5825	Ant1	5824.98	-20000	-3.43	25	Pass
NVNT	ac40	5755	Ant1	5755	0	0	25	Pass
NVNT	ac40	5795	Ant1	5794.96	-40000	-6.9	25	Pass
NVNT	ac80	5775	Ant1	5775	0	0	25	Pass








Test Graphs



Freq. Stability NVNT n40 5755MHz Ant1


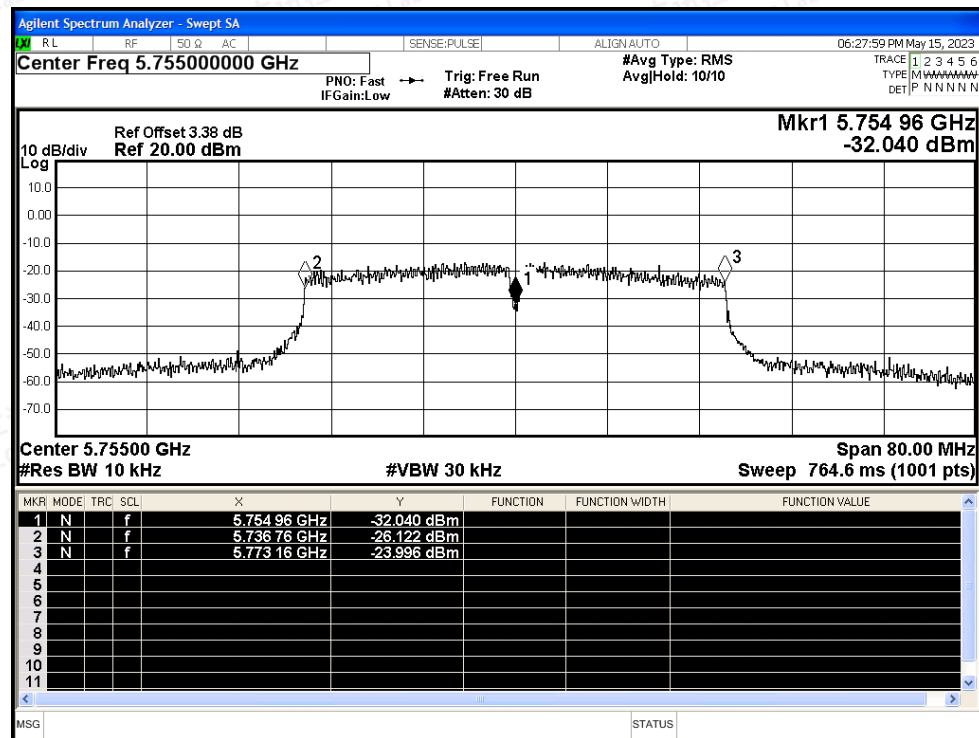


Freq. Stability NVNT n40 5795MHz Ant1

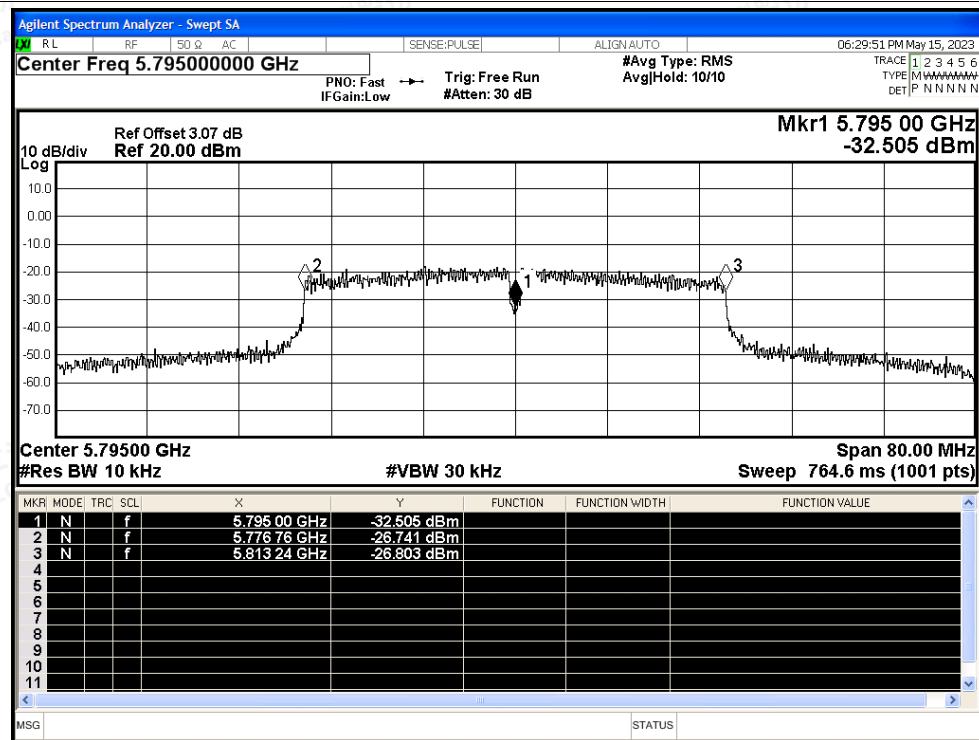

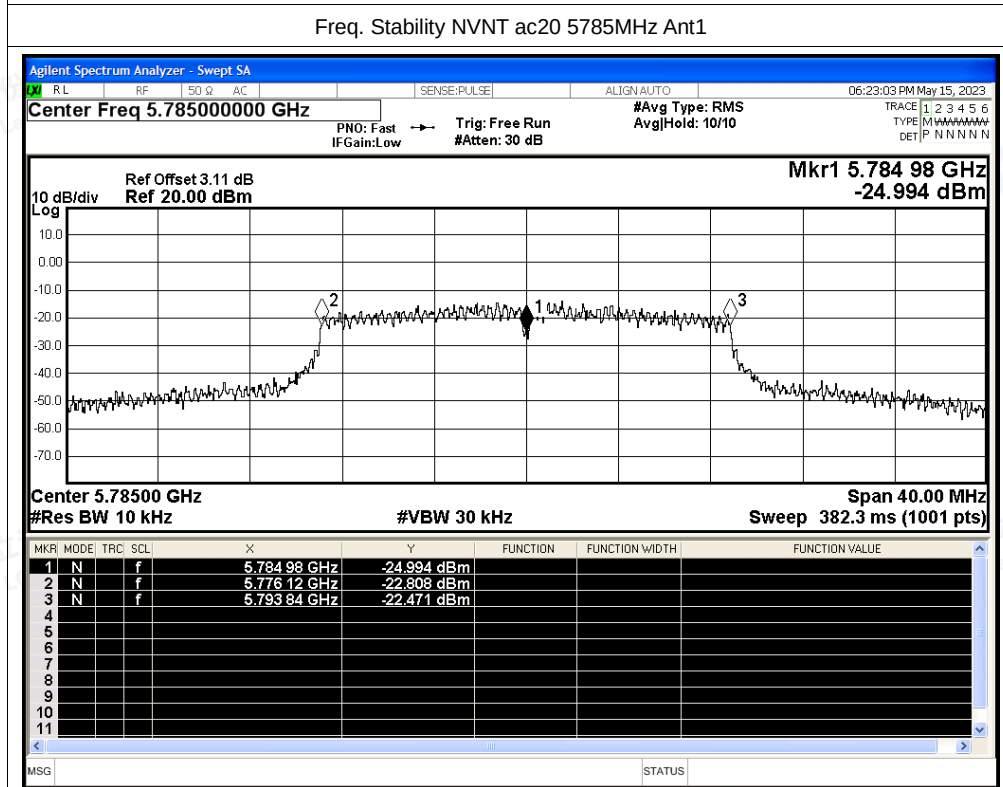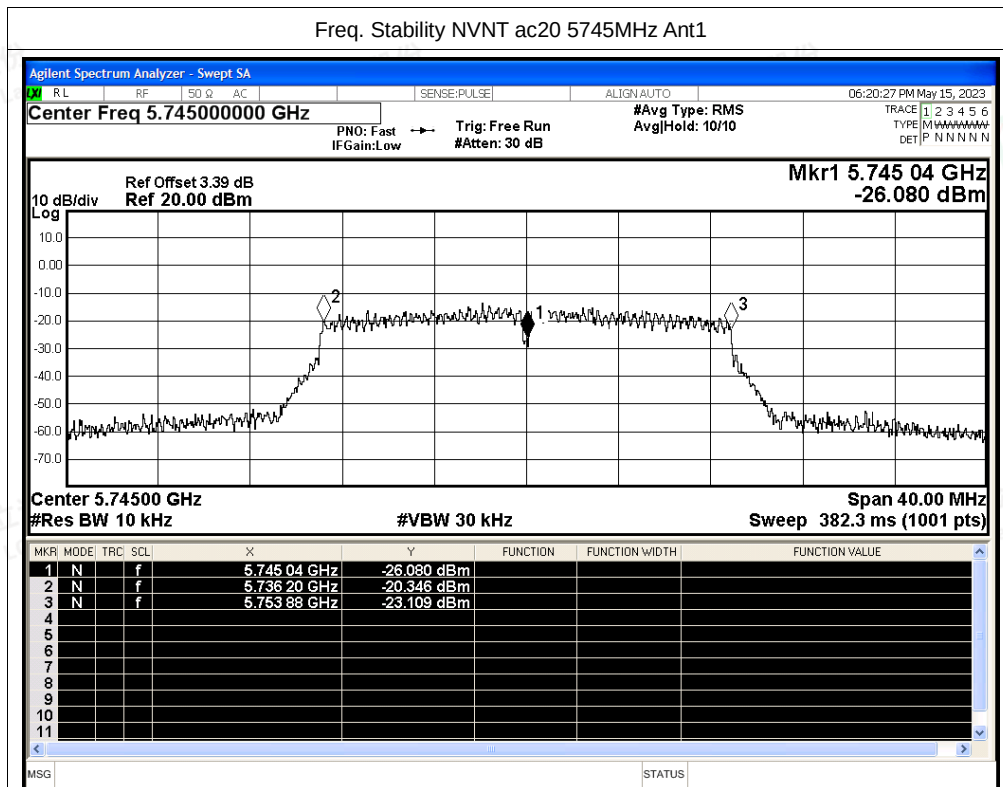

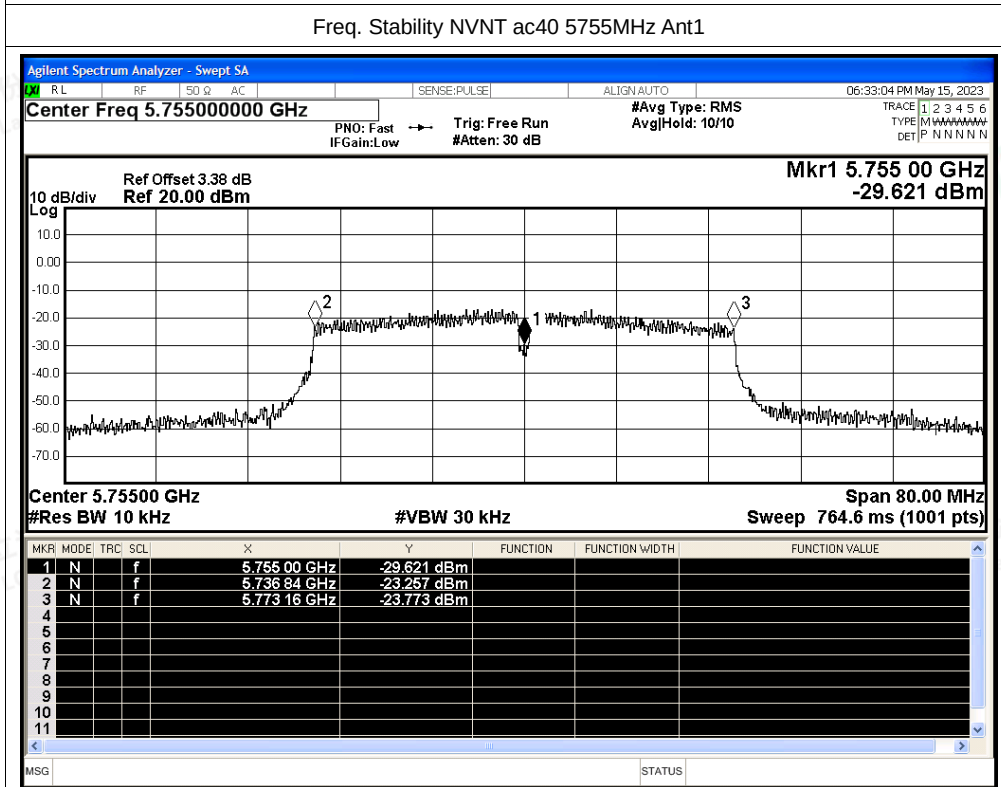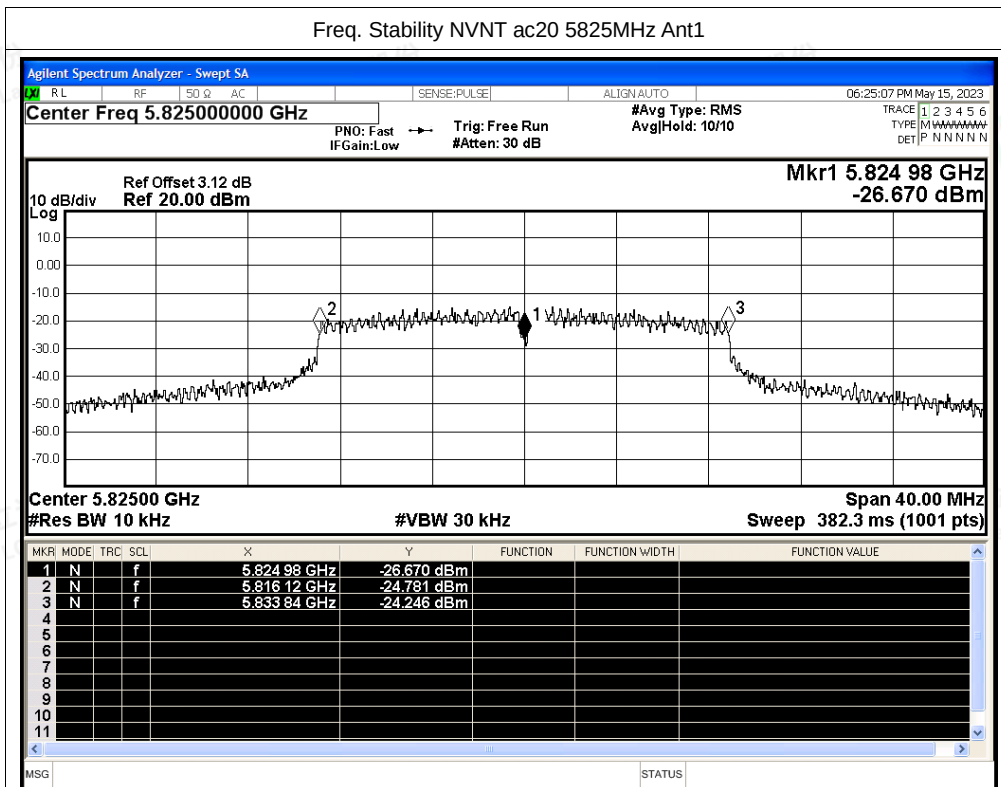

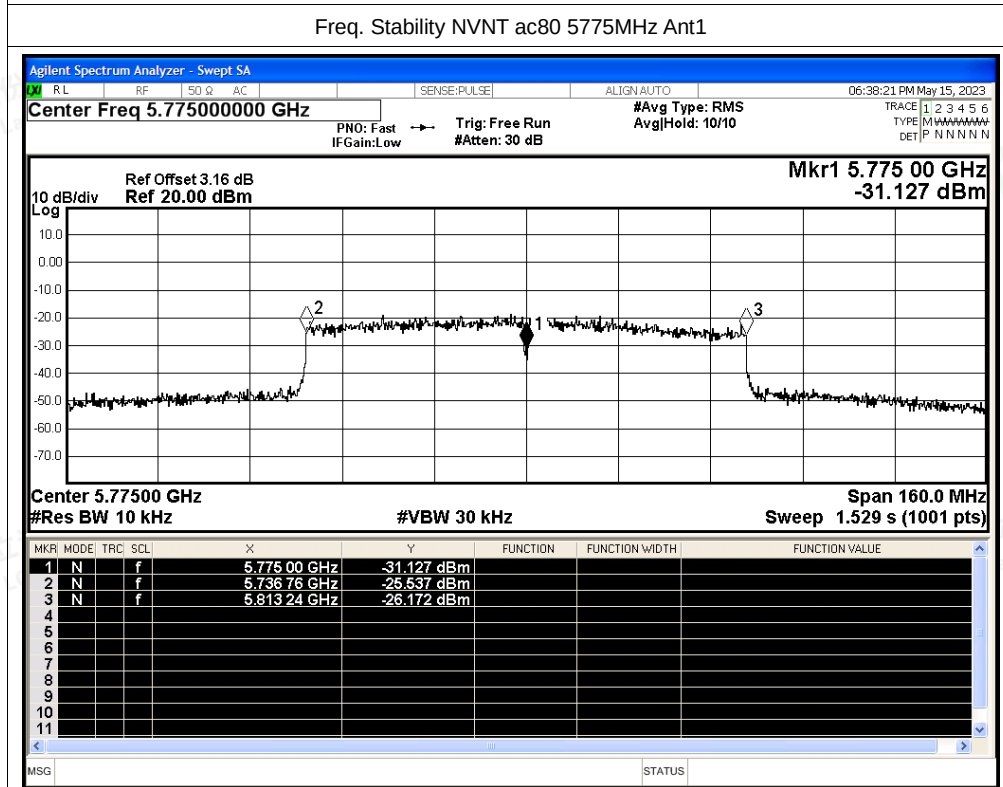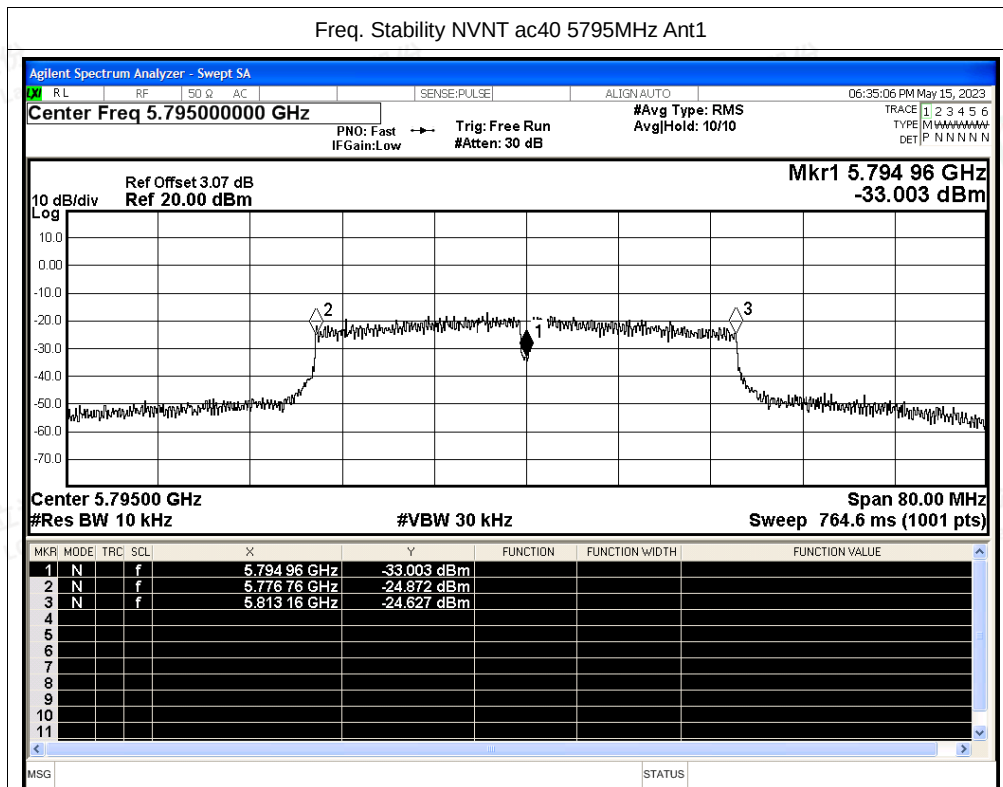



G.6 Duty Cycle


Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5745	Ant0	96.94	0.13	0.72
NVNT	a	5785	Ant0	96.94	0.13	0.72
NVNT	a	5825	Ant0	96.94	0.13	0.72
NVNT	n20	5745	Ant0	96.73	0.14	0.77
NVNT	n20	5785	Ant0	96.73	0.14	0.77
NVNT	n20	5825	Ant0	96.65	0.15	0.77
NVNT	n40	5755	Ant0	93.65	0.28	1.54
NVNT	n40	5795	Ant0	93.64	0.29	1.54
NVNT	ac20	5745	Ant0	96.76	0.14	0.76
NVNT	ac20	5785	Ant0	96.68	0.15	0.76
NVNT	ac20	5825	Ant0	96.76	0.14	0.76
NVNT	ac40	5755	Ant0	93.68	0.28	1.53
NVNT	ac40	5795	Ant0	93.68	0.28	1.53
NVNT	ac80	5775	Ant0	88.08	0.55	3.08








Test Graphs



Duty Cycle NVNT a 5745MHz Ant0

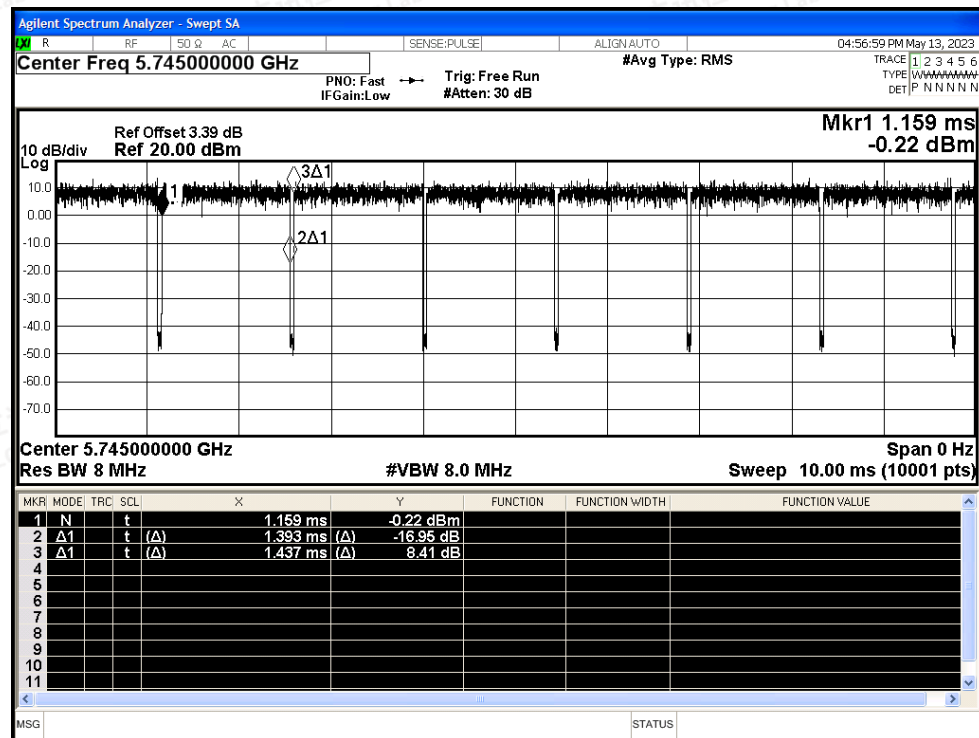

Duty Cycle NVNT a 5785MHz Ant0

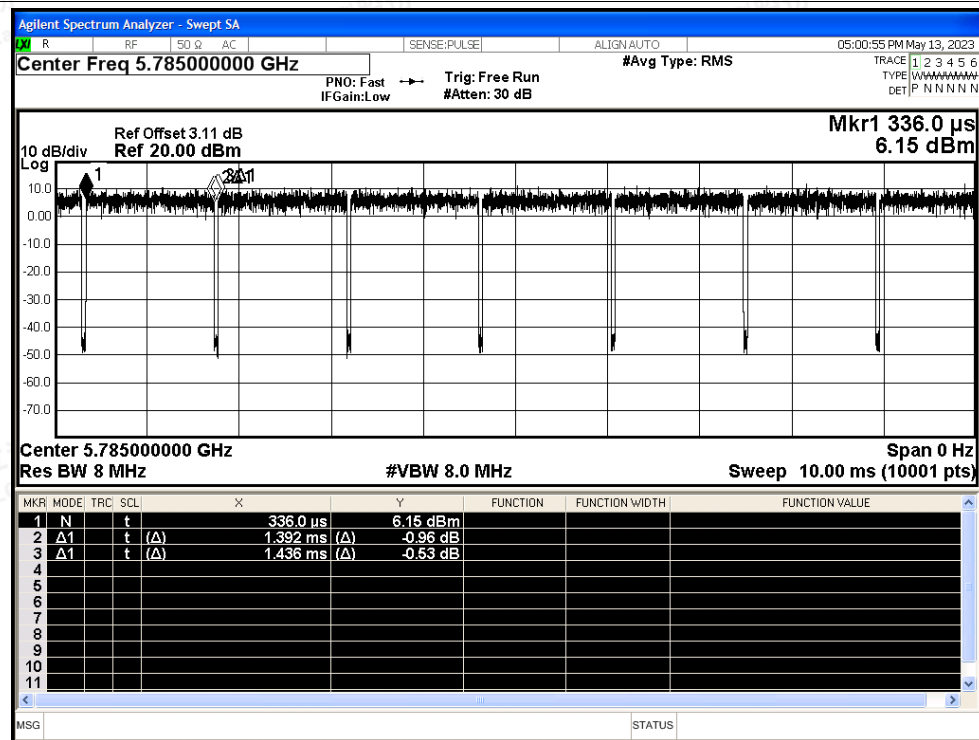

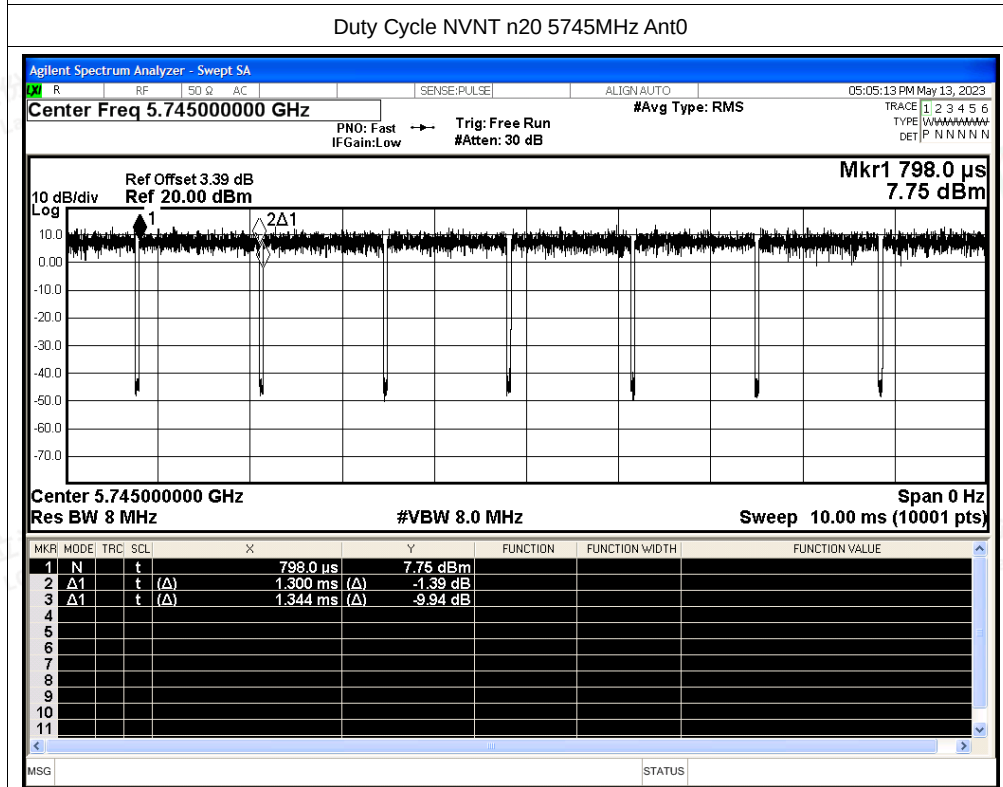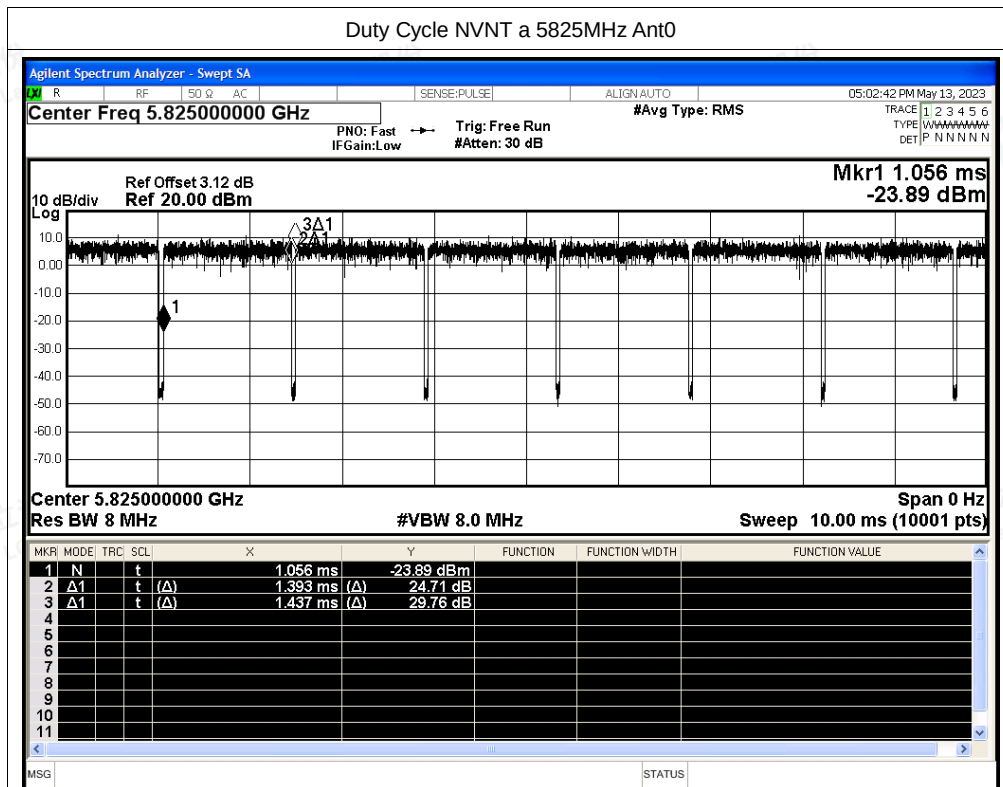

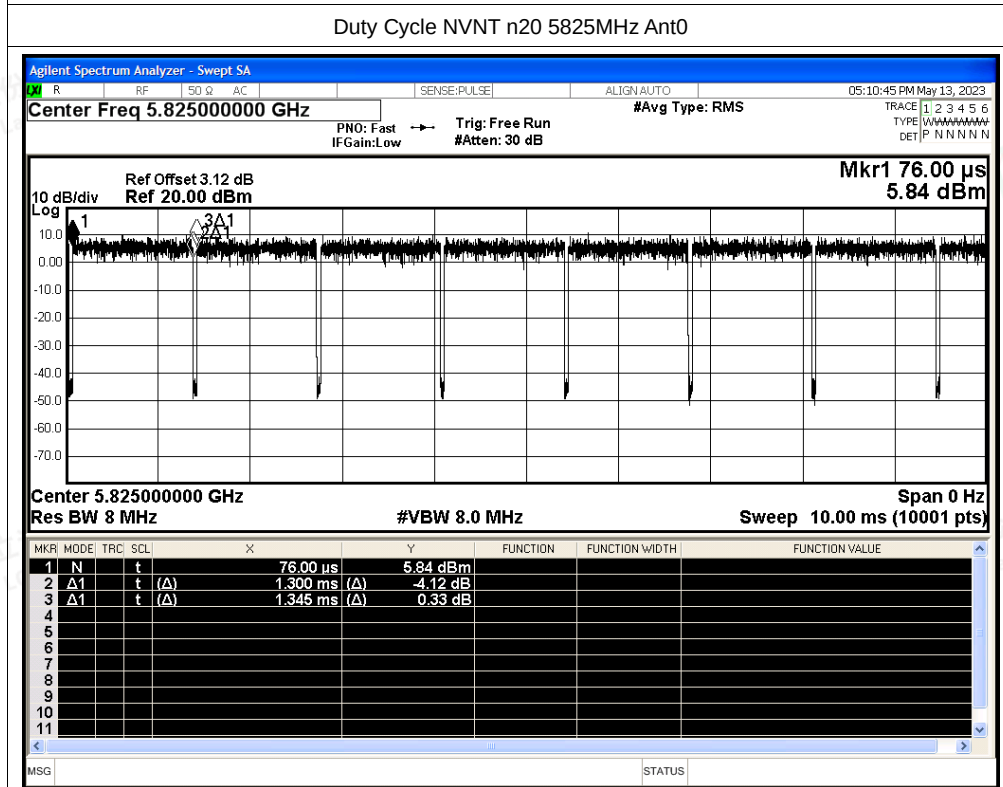
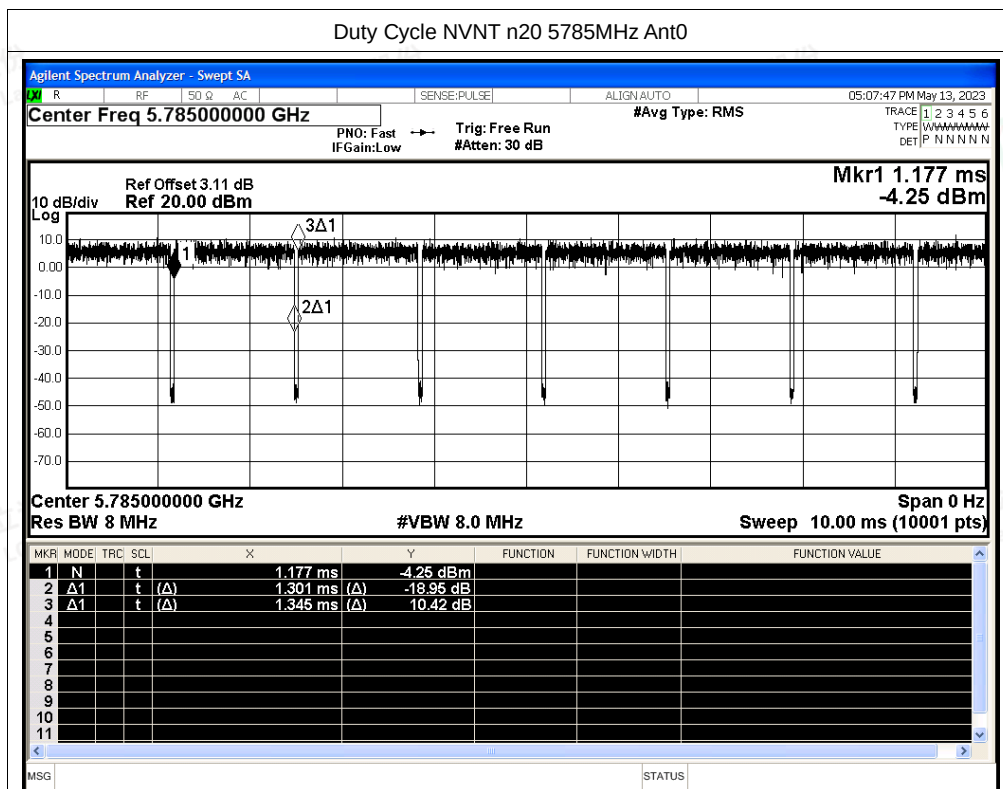




Shenzhen LCS Compliance Testing Laboratory Ltd.



Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China



Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com

Scan code to check authenticity

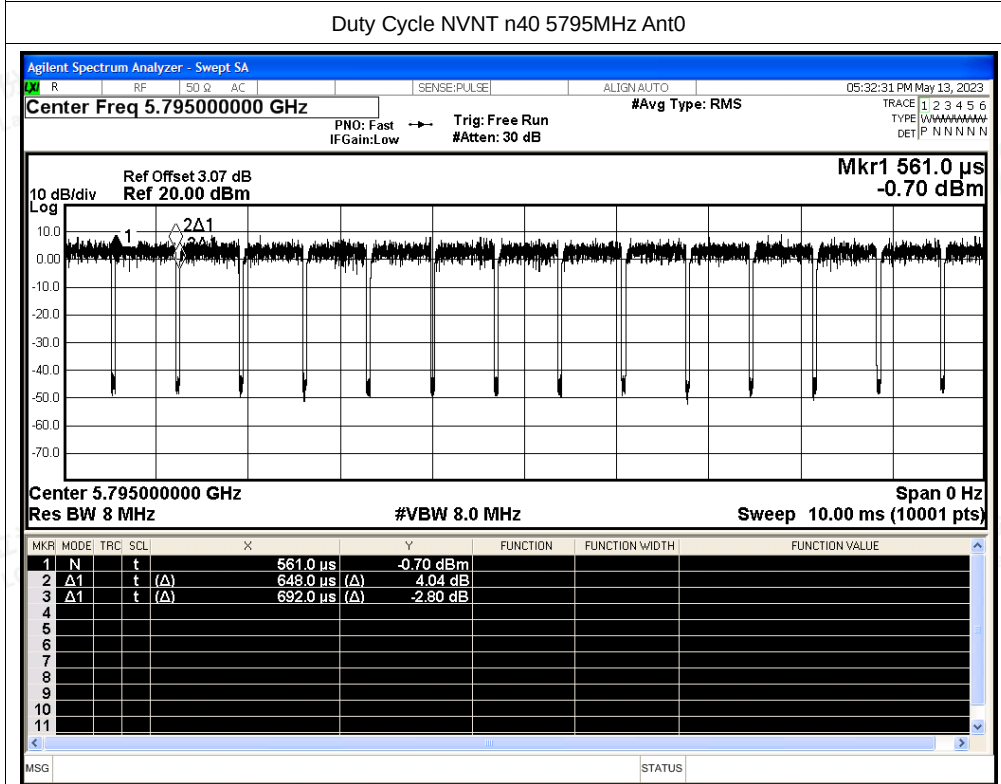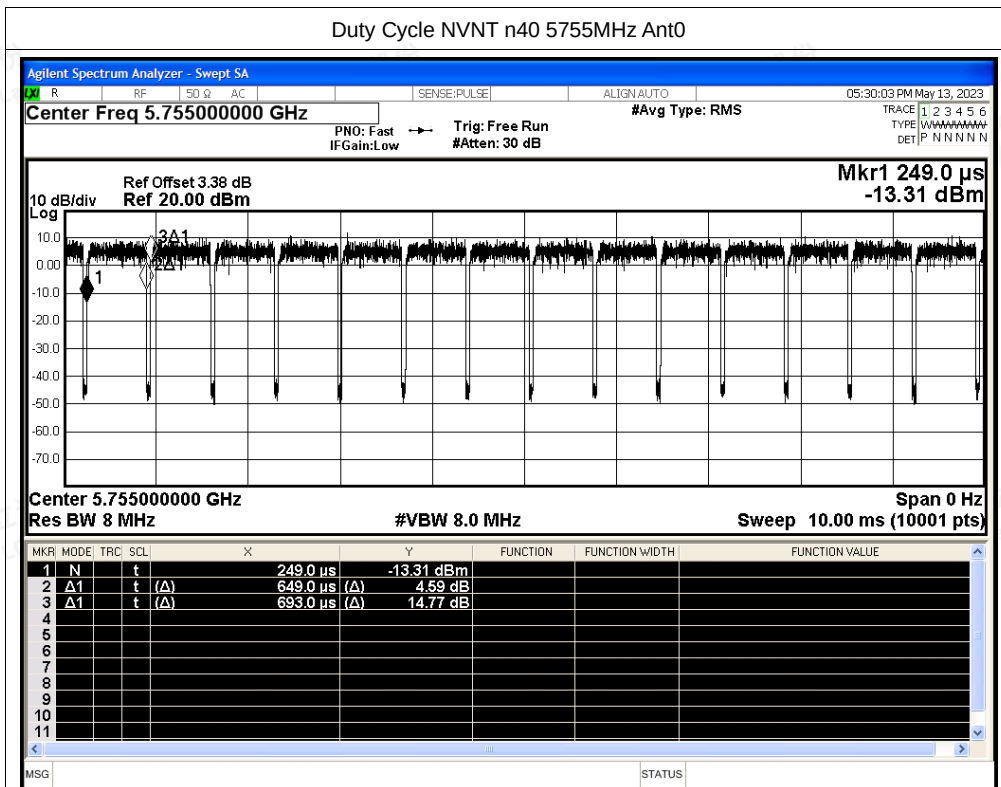

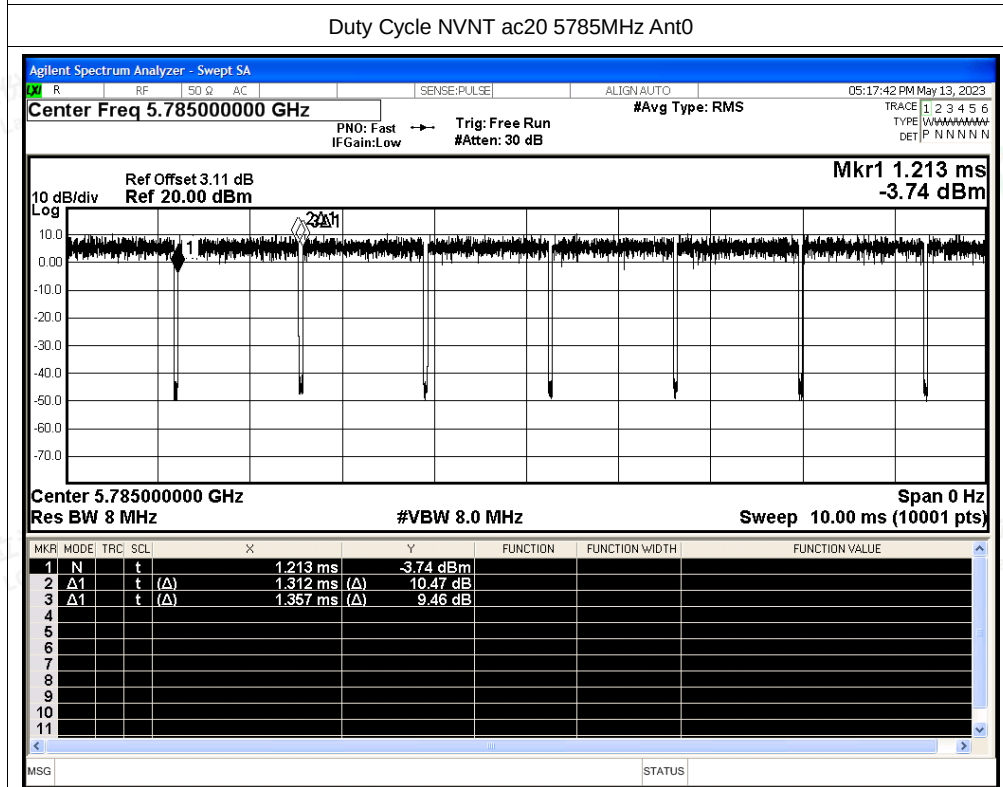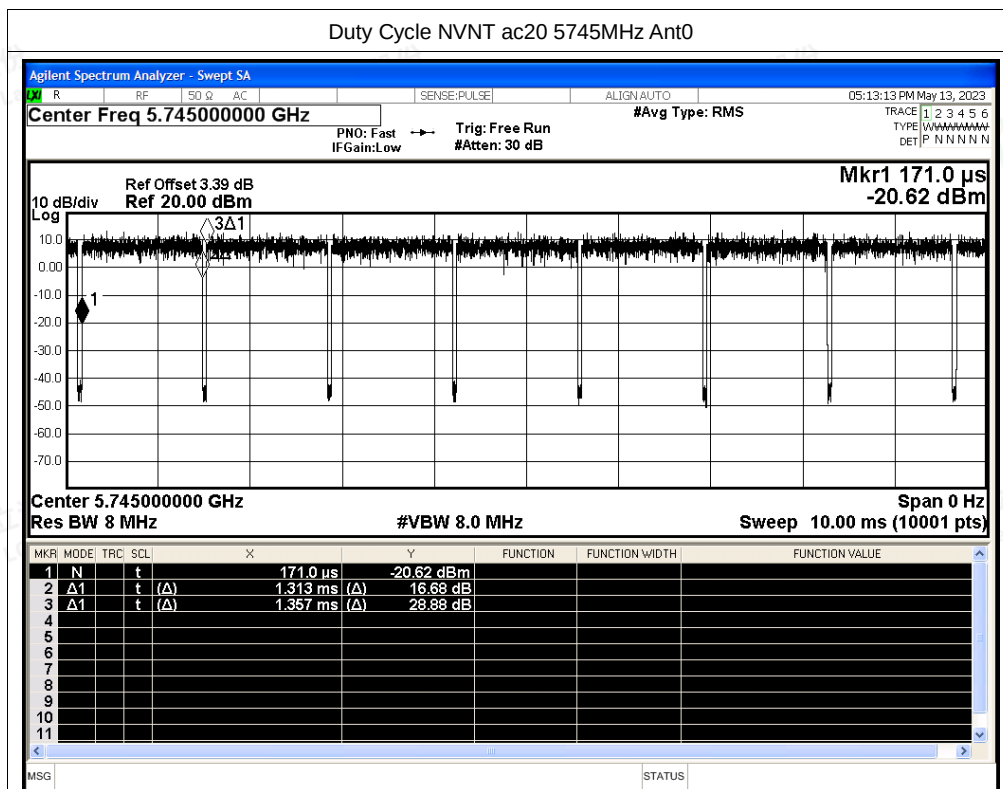

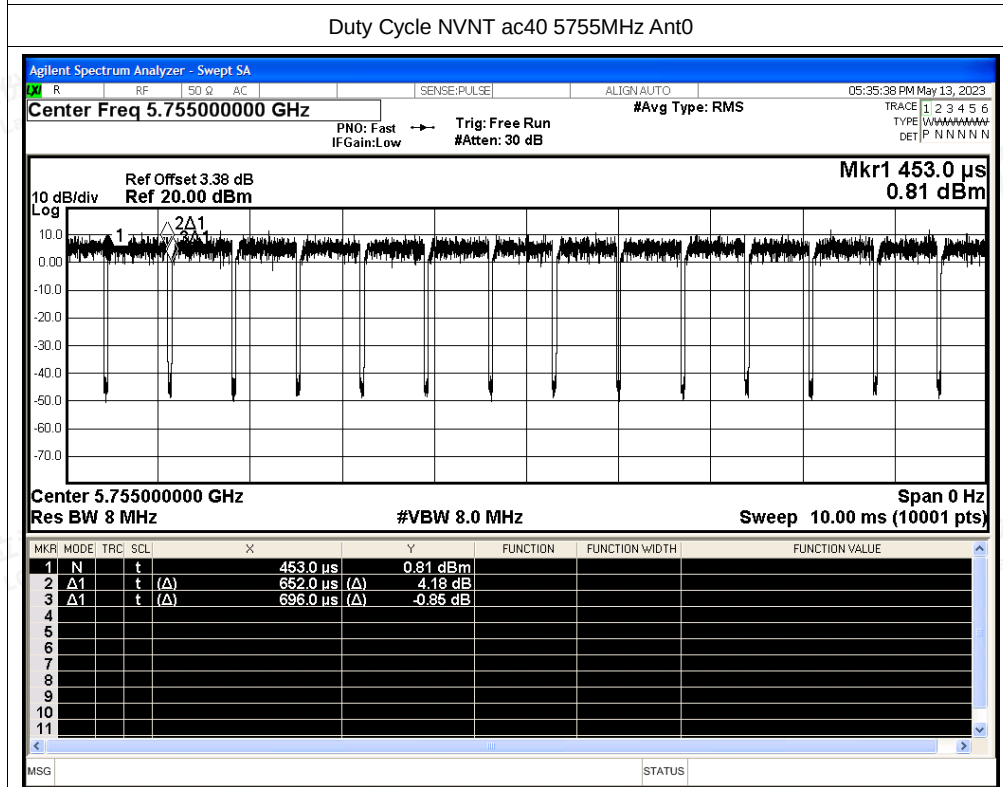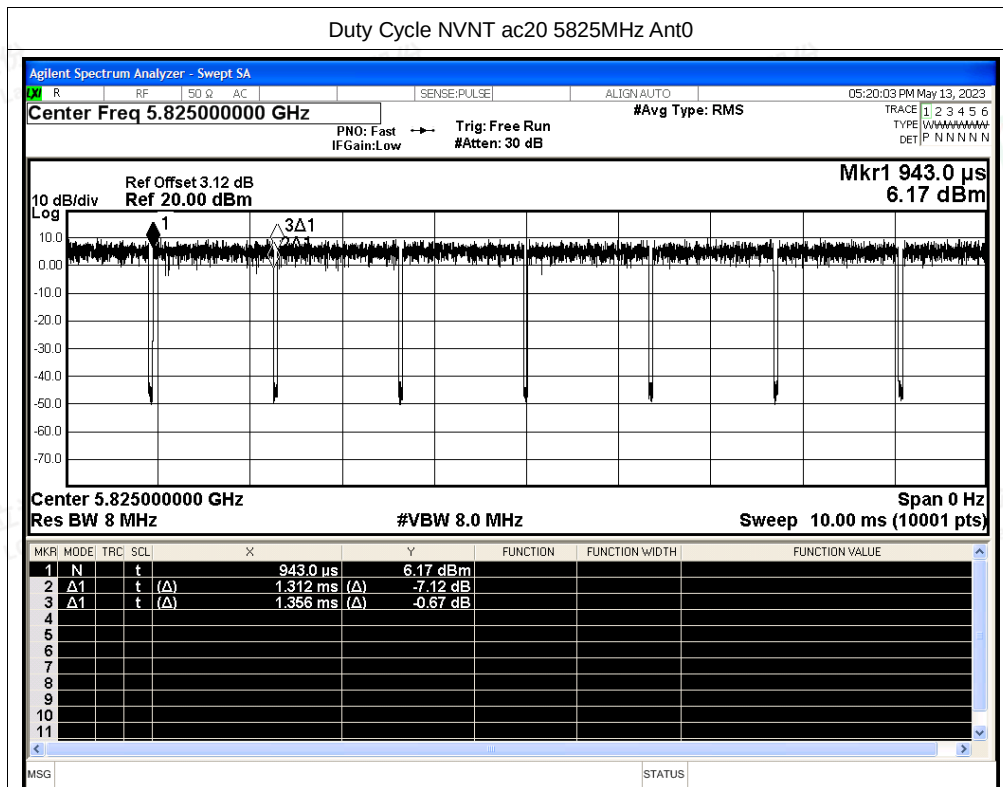

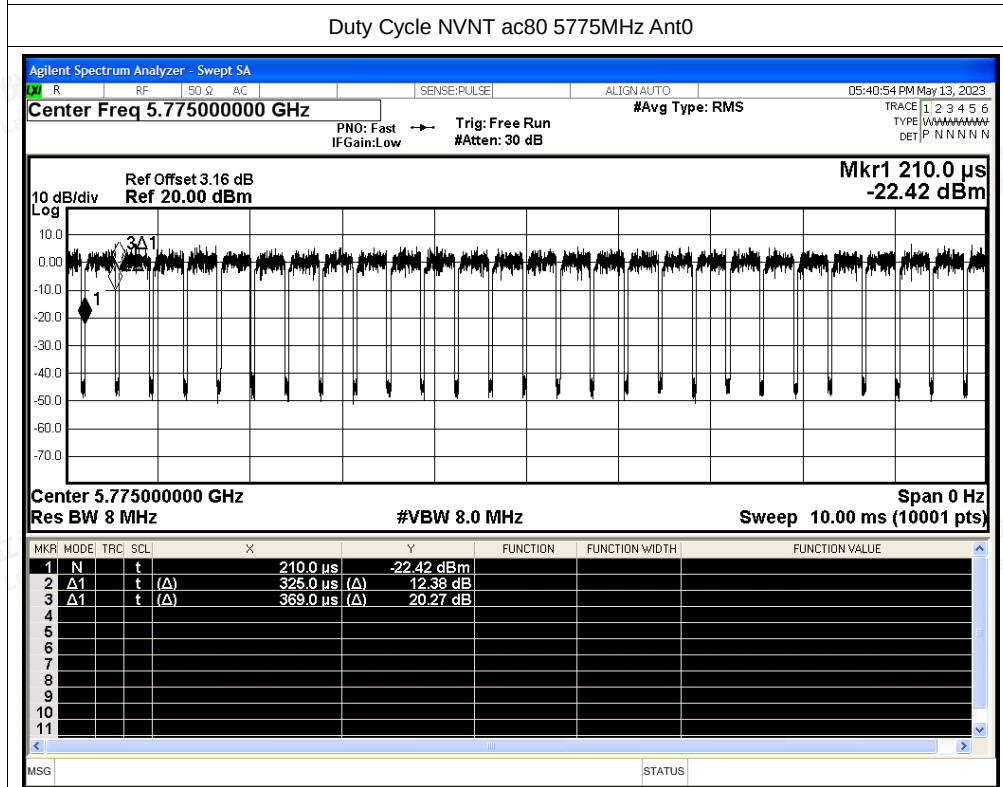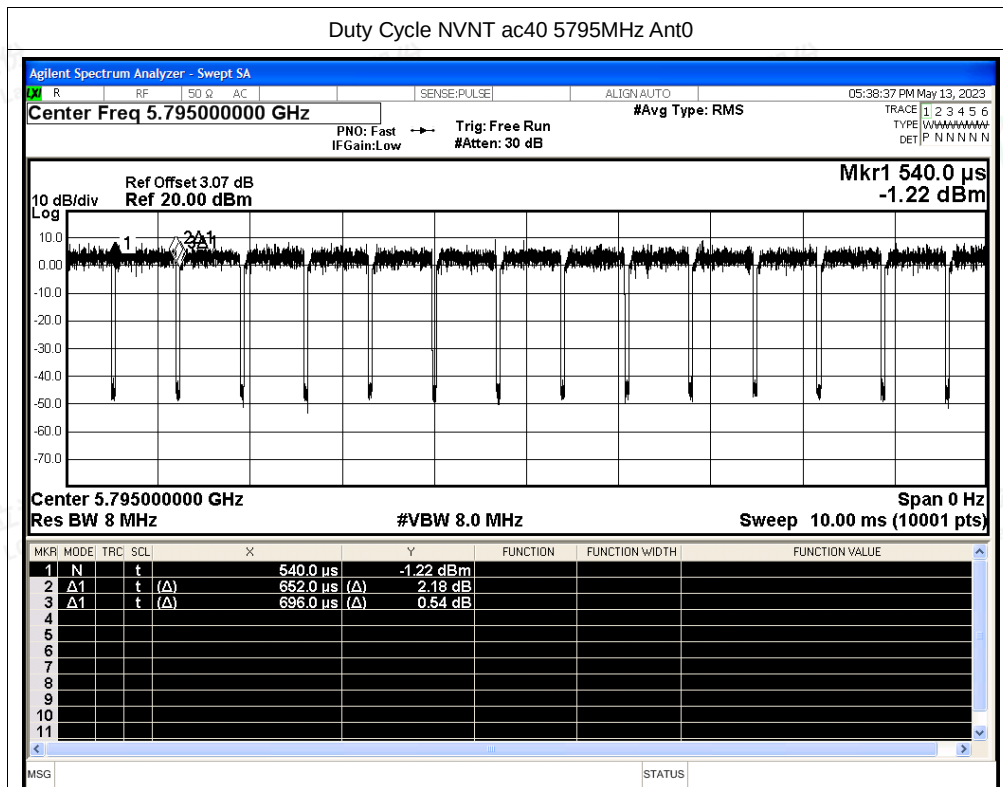




Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5745	Ant1	96.94	0.13	0.72
NVNT	a	5785	Ant1	96.94	0.13	0.72
NVNT	a	5825	Ant1	96.87	0.14	0.72
NVNT	n20	5745	Ant1	96.73	0.14	0.77
NVNT	n20	5785	Ant1	96.73	0.14	0.77
NVNT	n20	5825	Ant1	96.65	0.15	0.77
NVNT	n40	5755	Ant1	93.64	0.29	1.54
NVNT	n40	5795	Ant1	93.64	0.29	1.54
NVNT	ac20	5745	Ant1	96.76	0.14	0.76
NVNT	ac20	5785	Ant1	96.76	0.14	0.76
NVNT	ac20	5825	Ant1	96.76	0.14	0.76
NVNT	ac40	5755	Ant1	93.68	0.28	1.53
NVNT	ac40	5795	Ant1	93.68	0.28	1.53
NVNT	ac80	5775	Ant1	88.04	0.55	3.09





Test Graphs

Duty Cycle NVNT a 5745MHz Ant1

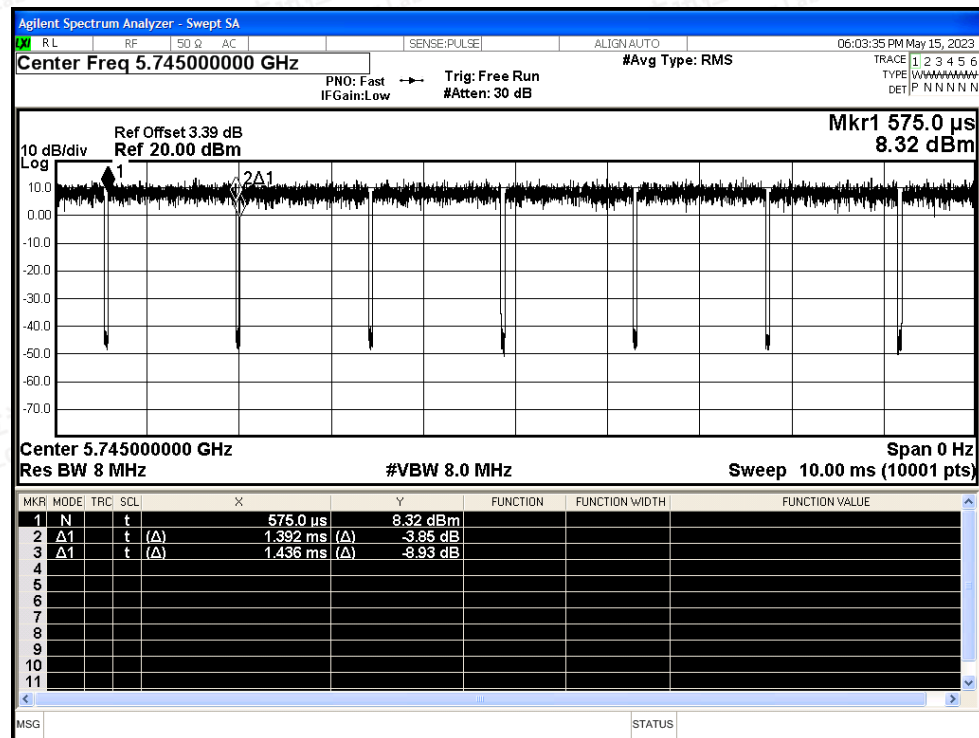

Duty Cycle NVNT a 5785MHz Ant1

