

## **USER MANUAL**

# SMART SHOPPING CART Model 2

**EN** 

Caper - V011.0

## TABLE OF CONENTS

IMPORTANT SAFETY INSTRUCTIONS	3
Read All INSTRUCTIONS BEFORE USE	3
Technical Safety	4
Operation Safety	4
Charging Safety	5
Maintenance Safety	6
Disposal Safety	6
SPECIFICATIONS & DIMENSIONS	7
Front View	7
Top Module	8
Top View Dimensions	9
Side View Dimensions	10
Five cart stacking dimension	11
Specifications	12
Extra options and functions	13
OPERATIONS	14
Basic Shopping - Transaction Overview	14
Add Produce and PLU items	15
Removing Items from the Shopping List	17
Checking Out	19
Staff Audit	20
MAINTENANCE	21
TROUBLESHOOTING	22
LEAGL AND REGULATION	23

This manual may contain images or content different from the model you purchased. This manual is subject to revision by the manufacturer.

## **IMPORTANT SAFETY INSTRUCTIONS**

#### **READ ALL INSTRUCTIONS BEFORE USE**

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the device.

The guidelines are separated into "WARNINGS" and "CAUTION" as described below.

This symbol is displayed to indicate matters and opearations that can cause risk. Read the part with this symbol carefully and follow the instructions in order to avoid risk.



WARNING

This indicates that the failure to follow the instruction can casue serious injury or death.



CAUTION

This indicates that the failure to follow the instruction can cause the minor injury or damage to the product.



#### WARNING

To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this product, follow basic precautions, including the following:

#### **Technical Safety**

- This product can be used by children aged from 12 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instructions concerning use of the device in a safe way and understand the hazards involved. Children shall not play with the device. Cleaning and user maintenance shall not be made by children even with supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Don't put children inside the cart's basket.
- This product is intended to be operated in restricted areas. Which will be defined by business owners.
- Do not step on, or stand on top of this product.
- Do not use this product in extremely hot (above 60°C) or extremely cold (below -20°C)
   environments

#### **Operation Safety**

- Never attempt to operate the device if it is damaged, malfunctioning, partially disassembled, or
  has missing or broken parts. Such devices should be inactive and taken offline immediately.
- Do not stack this product with other shopping cart models.
- Do not attempt to separate any panels or disassemble the appliance.
- Do not apply any sharp objects to the touch screen in order to operate the device.
- Do not put animals, such as pets into the device.
- If the cart's battery is damaged, it must be replaced by the manufacturer, its service agent, authorized staff or similarly qualified person in order to avoid hazard.
- Do not leave this device outdoors for more than 45 mins.

#### **Charging Safety**

- Do not modify the power plug provided with the product. If it does not fit the outlet, please talk
  with manufacturer and replace the defect power plug, or have a proper outlet installed by a
  qualified electrician.
- Do not use other power adapters to charge the device except the ones provided with the product.
- Do not try to move the device while charging. Make sure all charging cables are disconnected before anyone attempt to take the device out of its charging area.
- No customers are allowed to step into the device's charging area.
- Keep the charging area (underneath, above and around the device) free of combustible materials such as lint, paper, rags, chemicals, etc.
- Keep the magnetic charging port free of dust, dirt, and magnetic debris.
- Keep the charging area free from water logging.
- Do not use flammable gas and combustible substances (benzene, gasoline, thinner, petroleum, alcohol, etc.) near the device and the charging area.
- Do not remove or insert the battery while the device is still charging.
- Do not operate the device's controls, power plugs, magnetic connector and other charging accessories with wet hands.
- In case of flood, disconnect the power plug if its and move the device to high ground.
- Do not plug or unplug the charging cable while the device is powered on.
- Do not unplug the device by pulling on the power cable. Always grip the power cable firmly and pull straight out from the socket outlet.

#### **Maintenance Safety**


- Disconnect the device from the power supply (power cable and battery) before cleaning the device. Turn off the switch does not disconnect the device from power supply.
- Do not repair or replace any part of the device. All repairs and servicing must be performed by qualified service personnel unless specifically recommended in this User's Manual.
- Use only authorized factory parts or tools for maintenance.
- Do not spray water inside or outside the device to clean it.
- Do not let customers to clean the device.
- All cleaning process should be conducted by employees following the cleaning SOP.
- Make sure there's no dust, dirt, and magnetic debris inside the magnetic charging port before charging.

### **Disposal Safety**

• Dispose of all packaging materials (such as plastic bags and Styrofoam) away from children. The packaging materials can cause suffocation.


## **SPECIFICATIONS & DIMENSIONS**

• Appearance and specifications may change without notice to improve the quality of the product.

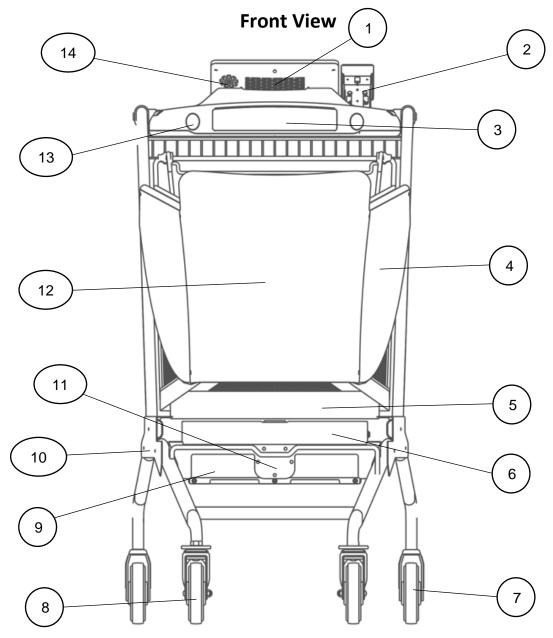


1	Top unit heat sink	6	Bottom unit fence	11	Bottom unit cover
2	Payment terminal	7	5-inch rear wheels	12	Front Cover
3	Top unit main LED light bar	8	5-inch front wheels	13	Top unit CV camera
4	PC Side Panel	9	Battery housing	14	Speaker
5	Basket	10	Side cover	15	

## **Top Module**

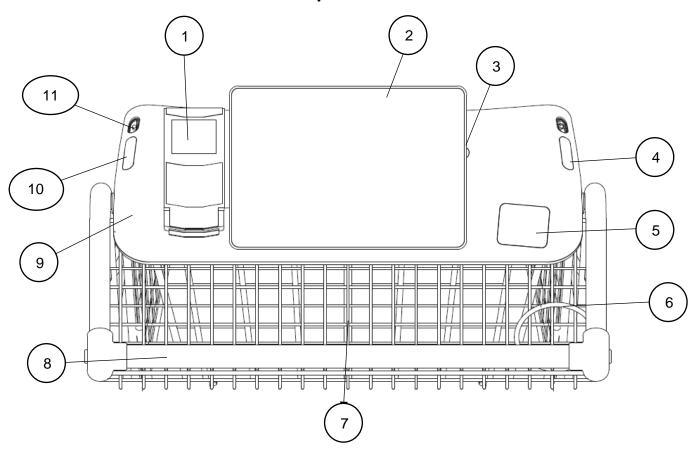


1	Payment Terminal	5	Barcode Scanner	9	Top unit encasing
2	LCD touch screen	6	Personal Basket	10	Side LED indicator
3	Produce - Camera	7	Cup holder	11	IR sensor lens
4	Side LED Indicator	8	Handrail		


### **Top View Dimensions**

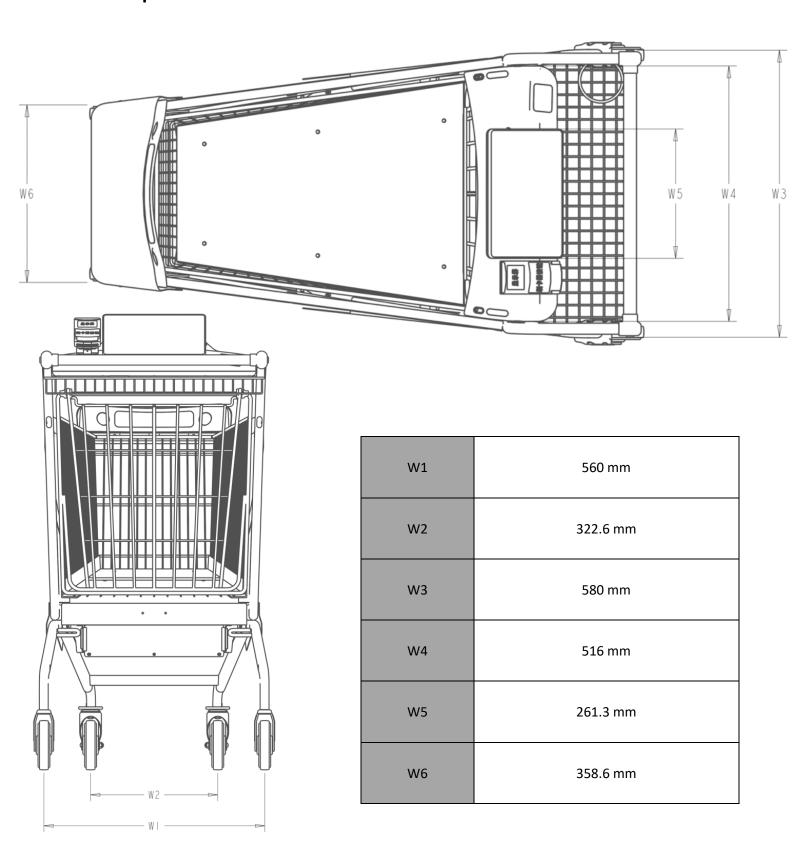


#### **Side View Dimension**

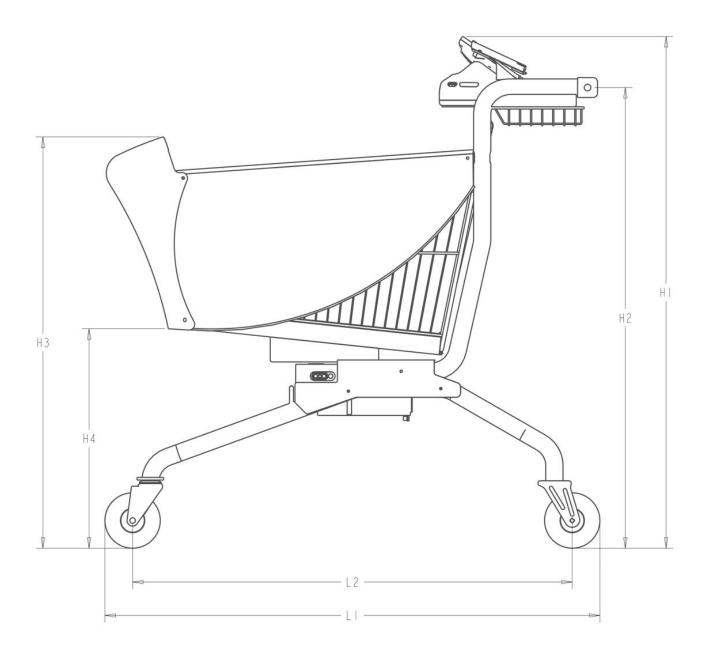

H1	1156 mm
H2	1040 mm
Н3	929 mm
H4	496 mm
L1	993 mm
L2	1118 mm

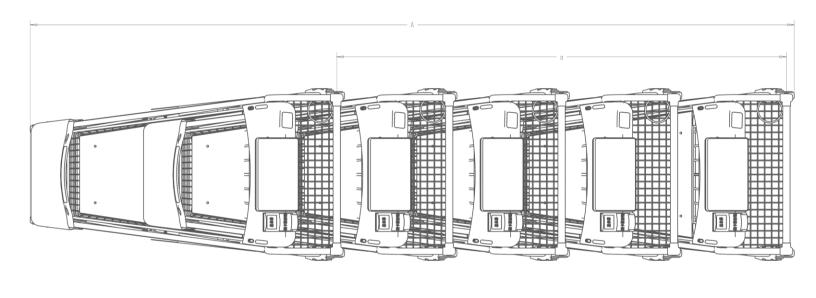

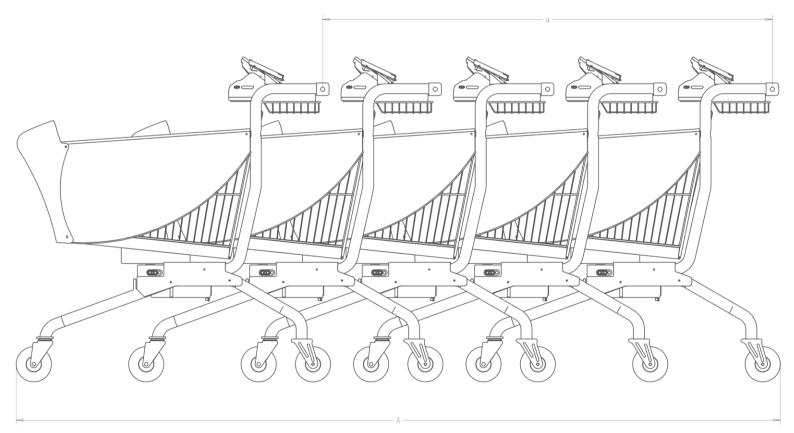

### Five cart stacking dimensions

А	2718.36 mm
а	1600 mm

## **Specifications**

CPU	AIOC3399
Operating System	Android
Charger input voltage	AC100V∽240V
Charging condition	DC24V,6.25A
Battery output	21-18V, 8A
Battery life	24 hours (Stand by); 10 hours (normal usage)
Battery capacity	INR 18650 3200 mAH * 18 = 57600 mAh,
	367.0*206.0*58.1mm, SBS1.1, Imax=8A
Charging time	Approx. 8 hours
Switch – bottom unit	Red Push-button
Switch – top unit	Red Push-button
Speaker	2W, 108dB ±3dB SPL
Wheels	5-inch rubber wheels
Indicators	CAP-CA02AL V1.0
Main CV Camera	5MP@35 fps
Produce Camera	8MP
Wi-Fi standard	802.11a/ b/g/n/ac
Wi-Fi distance	30 – 50 m
Barcode	F21 Scanner, 64.8(W)×60.5(D)×32.7(H)mm
Barcode scanning angle	Elevation angle 45°, Inclination angle 45°
Barcode resolution	640*480
Display	10.1 Inch TFT display, 1280*720, 600 nits
Weight scale	50kg / 110 lbs.
Weight accuracy?	±1g
Load Cell	L6E3-C3-100kg-3G
Operating Temperature	-20°C to 40°C
Operating Humidity	10% to 90%
Debug Port	USB-A Port

Top Unit Shell	ABS/PC
Front Unit Shell	ABS/PC
Top Unit shell color	Matte white/grey
Front unit shell color	Matte white/grey
Frame material	Iron
Frame color	Glossy grey
Basket material	Iron tube
Basket color	Matte white
Side Panel Material	PC
Side Panel Color	50% Translucent, single-sided matte
Bottom unit encasing material	ADC 12 Aluminum-Alloy
Bottom unit encasing color	Dark grey

## **Extra Options and Functions**

This feature is only available if client choose to install specific accessories and services.

- OTA update
- Magnetic Charging
- Charging Station
- Silicone Waterproof P/T Cover

## **OPERATIONS**

#### 1 - Basic Shopping - Transaction Overview

- 1. Shopper taps on "Start Shopping!" Button
- 2. Shopper goes through Onboarding Tutorial by tapping "NEXT"
- 3. At the end of tutorial, shopper taps "I'm Ready" to begin shopping.
- 4. Shopper takes any item and puts it in the cart. Barcode must be clearly visible to any of the cameras facing the inside of the cart
- 5. Item is successfully added to the shopping list.


If item was not successfully added, shopper will be prompted with "Did You Add Anything?" prompt and expected to follow the directions on the prompt to properly add the item in.

- 6. Shopper can continue adding additional demo items into the cart
- 7. When shopper is done shopping, shopper taps "Checkout"
- 8. Shopper is directed to make their way to checkout area.
- 9. Shopper taps "Pay for Cart"
- 10. Shopper confirms prices and taps "Pay \$ ."
- 11. Shopper instructed to insert or swipe credit card into card reader.
- 12. Payment is successful when shopper sees "Payment Success" screen.
- 13. Shopper is automatically led to **Rating Screen** and is allowed to give a rating or skip directly to the receipt.
- 14. Shopper is then able to enter their email address or phone number to receive their receipt or they can choose to refuse one.
- 15. Shopper is then directed to remove all items from the cart.
- 16. When all items are removed, the transaction will end and the cart will return to the onboarding video.

#### 2 - Add Produce and PLU items


#### A. Adding by Quantity Steps


- 1. Shopper starts on Shopping Home screen
- 2. Shopper taps on "Add Item Without Barcode"
- 3. Shopper searches for item by PLU or Name
- 4. Shopper puts produce into the cart
- 5. Cart stabilizes and calculates weight of the produce
- 6. Shopper confirms calculated price
- 7. Item is added to shopping list

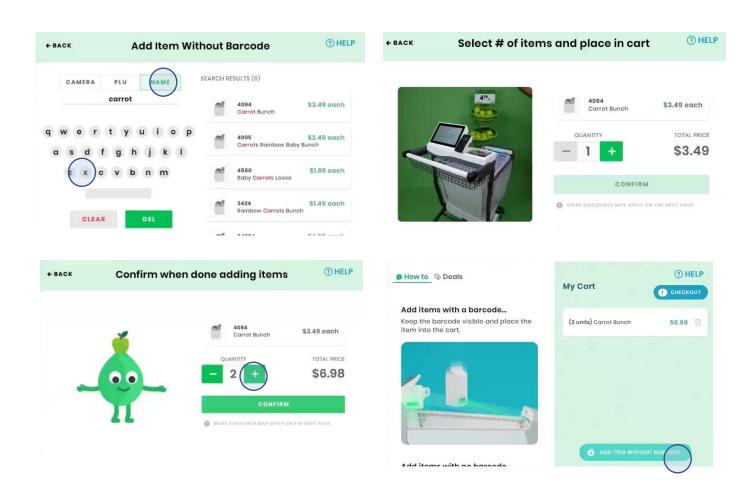



#### **B.** Adding by Weights Steps

- 1. Shopper starts on Shopping Home screen
- 2. Shopper taps on "Add Item Without Barcode"
- 3. Shopper searches for item by PLU or Name
- 4. Shopper puts produce into the cart
- 5. Cart stabilizes and calculates weight of the produce
- 6. Shopper confirms calculated price
- 7. Item is added to shopping list

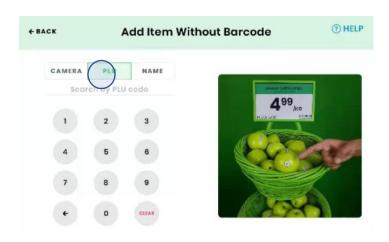

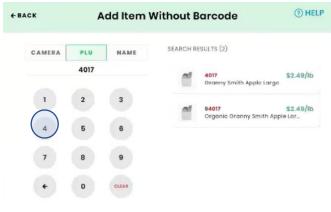

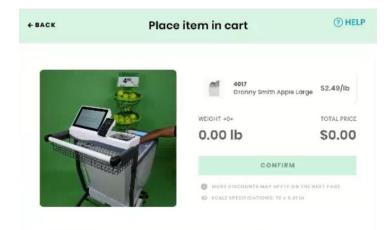

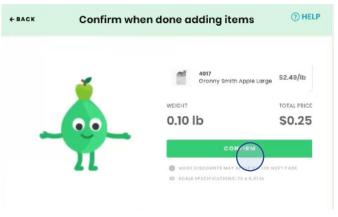

#### 3 - Removing Items from the Shopping List


#### A. Removing Items Directly from the Cart

- 1. Items can be removed directly from the cart. The cart uses computer vision and weight logic to determine what has been taken out of the cart.
- 2. Item card will be automatically removed from the shopping list.

\*If the cart cannot confirm what was removed, shopper will be prompted with a "Multi-Match Removal" screen to manually choose what was removed from the cart. \*

#### B. Removing by Tapping "Trash" Icon

- 1. Items can also be removed by first tapping on the trash can icon next to the item name on your shopping list.
- 2. Shopper will be prompted to take item out of your cart.
- 3. Item can be removed from the cart
- 4. Cart will use its computer vision and weight logic to confirm removal of item.
- 5. Item card will be automatically removed from the shopping list.

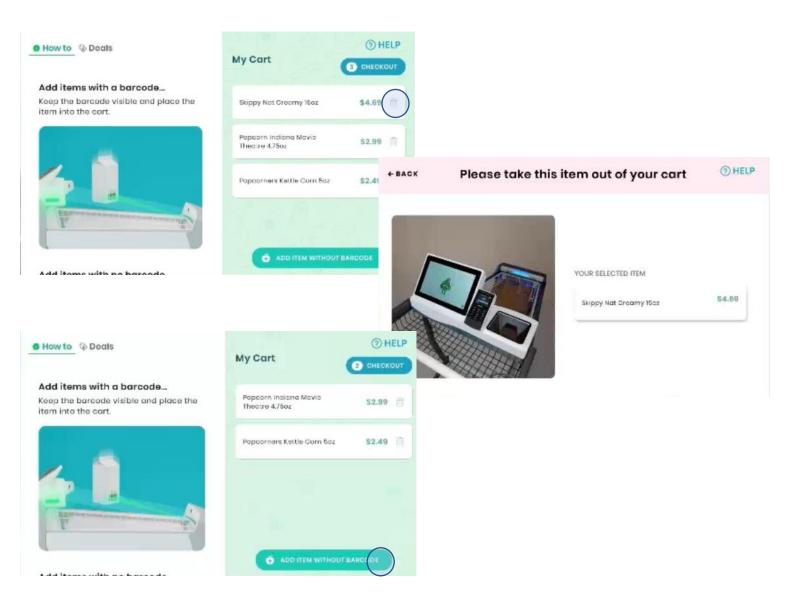

#### 4 - Checking Out

- 1. When shopper is done shopping, shopper taps "Checkout"
- 2. Shopper is directed to make their way to checkout area.
- 3. Shopper taps "Pay for Cart"
- 4. Shopper confirms prices and taps "Pay \$\_\_."
- 5. Shopper instructed to insert or swipe credit card into card reader
- 6. Payment is successful when shopper sees "Payment Success" screen.
- 7. Shopper is automatically led to Rating Screen and is allowed to rate their experience or skip directly to the receipt.
- Payment Success!

Your Total

\$2.99

\$2.00 Saved

Cart Subtotal

Paper Bags(0)


Promo Code


\$0.00

\$2.00

\$0.00

- 8. Shopper is then able to enter their email address or phone number to receive their receipt or they can choose to refuse a receipt.
- 9. Shopper is directed to remove all items from the cart.
- 10. When all items are removed, the transaction will end and the cart will return to the onboarding video.

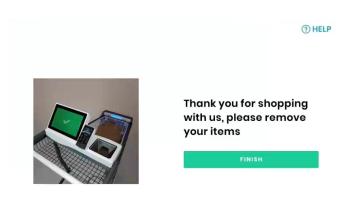

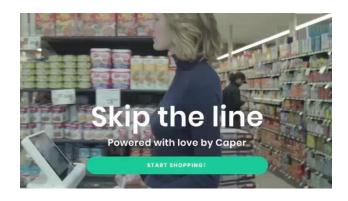



#### 5 – Staff Audit

- 1. Store Admin reaches shopping home screen.
- 2. Admin taps on "HELP" on the top right corner of the screen
- 3. Admin taps on "Person" icon
- 4. Admin logs in with following information

**Username/Password**: Please inquire Caper staff

5. Store Admin allowed to resolve any cart issues including: resolving auditrequired items, transferring to cashier, and starting over transaction.

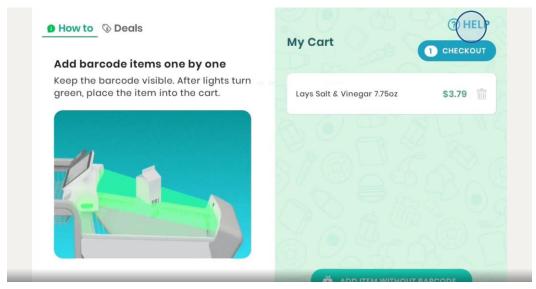

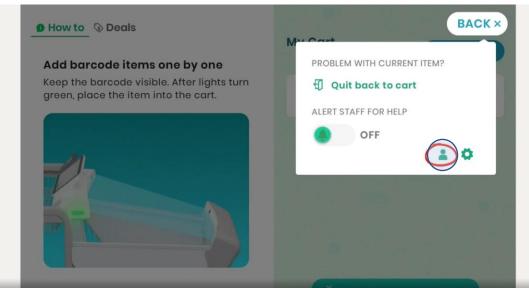

## **MAINTENANCE**

#### **A** WARNING

- Unplug the device before cleaning to avoid the risk of electric shock. Failure to follow this warning may results in serious injury, fire, electric shock, or death.
- Never use harsh chemicals, abrasive cleaners, or solvents to clean the device. They may damage the finish.
- 1. Cleaning the exterior
- 2. Cleaning the basket
- 3. Cleaning the bottom unit
- 4. Cleaning the top unit
- 5. Cleaning the battery housing
- 6. Cleaning the front unit

## **TROUBLESHOOTING**

Operation of the device can lead to errors and malfunctions. The following tables contain possible causes and notes for resolving an error message or malfunction.

#### **Before Calling for Service**

As a trained staff, you can remedy most of the problems by yourself. NOT every trouble you encountered need to call Caper service center. The following table should assist you by troubleshooting.

Our smart shopping cart is equipped with an automatic error-monitoring system to detect and diagnose problems at an early stage. If the device does not function properly or does not function at all. Check the table below before calling Caper Service Center.

## **LEGAL AND REGULATION**


#### Smart shopping cart model 2


Model: Caper-V011.0 FCC ID: 2A3Q4CAPER-V011 SBOT Technologies LLC 230 W 39th St, 8th FL, New York, NY, USA, 10018

Input: 100-240V Output:12V=6.67A Made in China

The E-label FCC Identifier will be displayed on the device's built-in display.

Products with a **built-in display**, or that only operate in conjunction with another product that has an electronic display, have the option to display on the electronic display the FCC Identifier, any warning statements, or other information that the Commission's rules would otherwise require to be shown on a physical label attached to the device (See 47 CFR § 2.935)

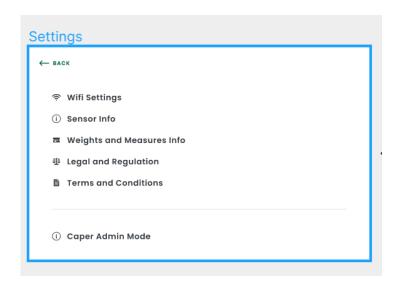

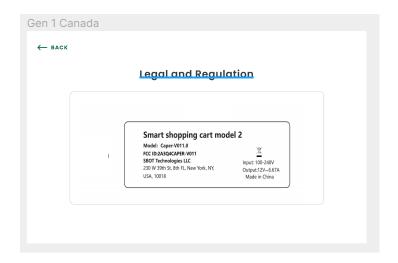

#### **FCC STATEMENT:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) Information:

This Smart shopping cart model 2 meets government requirements for exposure to radio waves. Guidelines are based on standards developed by independent scientific bodies Evaluate the organization through regular and thorough scientific research. These standards include substantial safety margins designed to keep everyone safe Regardless of age or health.

FCC Radio Frequency Exposure Information and Statement:

The SAR in the United States (FCC) is below the limit of 1g 1.6 W/kg. Device Type: Smart shopping cart model 2 (FCC ID: 2A3Q4CAPER-V011 has also been tested against this SAR limit. During product certification, when properly worn on the body, the maximum SAR value reported in accordance with this standard is less than 1.6 W/kg. The device has been tested for typical body-worn operation and has a back