

NVNT	ax40	5965	AntB	6.48	3.35	9.83	Pass
NVNT	ax40	6165	AntB	7.14	3.35	10.49	Pass
NVNT	ax40	6405	AntB	6.9	3.35	10.25	Pass
NVNT	ax40	6445	AntB	7.19	3.41	10.6	Pass
NVNT	ax40	6485	AntB	6.96	3.35	10.31	Pass
NVNT	ax40	6525	AntB	5.5	3.21	8.71	Pass
NVNT	ax40	6565	AntB	5.59	3.41	9	Pass
NVNT	ax40	6685	AntB	4.7	3.41	8.11	Pass
NVNT	ax40	6845	AntB	4.04	3.35	7.39	Pass
NVNT	ax40	6885	AntB	4.88	3.41	8.29	Pass
NVNT	ax40	6925	AntB	5.94	3.35	9.29	Pass
NVNT	ax40	6965	AntB	6.26	3.35	9.61	Pass
NVNT	ax40	7085	AntB	6.83	3.35	10.18	Pass
NVNT	ax80	5985	AntA	5.55	3.64	9.19	Pass
NVNT	ax80	6145	AntA	6.02	3.55	9.57	Pass
NVNT	ax80	6385	AntA	6.41	3.64	10.05	Pass
NVNT	ax80	6465	AntA	6.16	3.64	9.8	Pass
NVNT	ax80	6545	AntA	5.81	3.55	9.36	Pass
NVNT	ax80	6625	AntA	5.7	3.49	9.19	Pass
NVNT	ax80	6705	AntA	4.29	3.64	7.93	Pass
NVNT	ax80	6785	AntA	6	3.83	9.83	Pass
NVNT	ax80	6865	AntA	4.69	3.68	8.37	Pass
NVNT	ax80	6945	AntA	4.96	3.55	8.51	Pass
NVNT	ax80	7025	AntA	5.52	3.83	9.35	Pass
NVNT	ax80	5985	AntB	6.1	3.49	9.59	Pass
NVNT	ax80	6145	AntB	6.65	3.68	10.33	Pass
NVNT	ax80	6385	AntB	6.88	3.55	10.43	Pass
NVNT	ax80	6465	AntB	6.42	3.83	10.25	Pass
NVNT	ax80	6545	AntB	5.63	3.68	9.31	Pass
NVNT	ax80	6625	AntB	5.45	3.55	9	Pass
NVNT	ax80	6705	AntB	4.16	3.64	7.8	Pass
NVNT	ax80	6785	AntB	5	3.64	8.64	Pass
NVNT	ax80	6865	AntB	4.3	3.49	7.79	Pass
NVNT	ax80	6945	AntB	4.93	3.55	8.48	Pass
NVNT	ax80	7025	AntB	5.35	3.83	9.18	Pass
NVNT	ax160	6025	AntA	5.47	5.08	10.55	Pass
NVNT	ax160	6185	AntA	5.69	5.08	10.77	Pass
NVNT	ax160	6345	AntA	6.83	5.08	11.91	Pass
NVNT	ax160	6505	AntA	6.56	5.08	11.64	Pass
NVNT	ax160	6665	AntA	5.47	5.01	10.48	Pass
NVNT	ax160	6825	AntA	4.67	5.08	9.75	Pass
NVNT	ax160	6985	AntA	5.7	5.16	10.86	Pass
NVNT	ax160	6025	AntB	6.04	4.01	10.05	Pass

NVNT	ax160	6185	AntB	7.11	3.86	10.97	Pass
NVNT	ax160	6345	AntB	7.72	4.01	11.73	Pass
NVNT	ax160	6505	AntB	5.94	4.01	9.95	Pass
NVNT	ax160	6665	AntB	4.98	3.95	8.93	Pass
NVNT	ax160	6825	AntB	5.98	3.92	9.9	Pass
NVNT	ax160	6985	AntB	6.11	3.95	10.06	Pass

Condition	Mode	Frequency (MHz)	Antenna	Conducted Power ANT A	Conducted Power ANT B	MIMO	Verdict
NVNT	ax20	5955	AntA	6.35	8.47	10.55	Pass
NVNT	ax20	6175	AntA	6.62	8.39	10.60	Pass
NVNT	ax20	6415	AntA	6.54	8.32	10.53	Pass
NVNT	ax20	6435	AntA	6.36	8.51	10.58	Pass
NVNT	ax20	6475	AntA	6.1	6.65	9.39	Pass
NVNT	ax20	6515	AntA	6.43	6.48	9.47	Pass
NVNT	ax20	6535	AntA	6.44	6.28	9.37	Pass
NVNT	ax20	6695	AntA	6.37	6.27	9.33	Pass
NVNT	ax20	6855	AntA	6.5	5.66	9.11	Pass
NVNT	ax20	6875	AntA	5.94	6.38	9.18	Pass
NVNT	ax20	6895	AntA	6.21	5.76	9.00	Pass
NVNT	ax20	6995	AntA	6.01	6.47	9.26	Pass
NVNT	ax20	7115	AntA	6.06	6.76	9.43	Pass
NVNT	ax40	5965	AntA	8.63	3.35	9.76	Pass
NVNT	ax40	6165	AntA	10.11	3.41	10.95	Pass
NVNT	ax40	6405	AntA	11.39	3.35	12.02	Pass
NVNT	ax40	6445	AntA	10.91	9.83	13.41	Pass
NVNT	ax40	6485	AntA	9.4	10.49	12.99	Pass
NVNT	ax40	6525	AntA	9.36	10.25	12.84	Pass
NVNT	ax40	6565	AntA	9.43	10.6	13.06	Pass
NVNT	ax40	6685	AntA	8.38	10.31	12.46	Pass
NVNT	ax40	6845	AntA	8.5	8.71	11.62	Pass
NVNT	ax40	6885	AntA	8.63	9	11.83	Pass
NVNT	ax40	6925	AntA	8.76	8.11	11.46	Pass
NVNT	ax40	6965	AntA	8.66	7.39	11.08	Pass
NVNT	ax40	7085	AntA	9.58	8.29	11.99	Pass
NVNT	ax80	5985	AntA	9.19	9.59	12.40	Pass
NVNT	ax80	6145	AntA	9.57	10.33	12.98	Pass
NVNT	ax80	6385	AntA	10.05	10.43	13.25	Pass
NVNT	ax80	6465	AntA	9.8	10.25	13.04	Pass
NVNT	ax80	6545	AntA	9.36	9.31	12.35	Pass
NVNT	ax80	6625	AntA	9.19	9	12.11	Pass
NVNT	ax80	6705	AntA	7.93	7.8	10.88	Pass


NVNT	ax80	6785	AntA	9.83	8.64	12.29	Pass
NVNT	ax80	6865	AntA	8.37	7.79	11.10	Pass
NVNT	ax80	6945	AntA	8.51	8.48	11.51	Pass
NVNT	ax80	7025	AntA	9.35	9.18	12.28	Pass
NVNT	ax160	6025	AntA	10.55	10.05	13.32	Pass
NVNT	ax160	6185	AntA	10.77	10.97	13.88	Pass
NVNT	ax160	6345	AntA	11.91	11.73	14.83	Pass
NVNT	ax160	6505	AntA	11.64	9.95	13.89	Pass
NVNT	ax160	6665	AntA	10.48	8.93	12.78	Pass
NVNT	ax160	6825	AntA	9.75	9.9	12.84	Pass
NVNT	ax160	6985	AntA	10.86	10.06	13.49	Pass



Condition	Mode	Frequency (MHz)	eirp Power (ANT A)	eirp Power (ANT B)	MIMO	Limit (dBm)	Verdict
NVNT	ax20	5955	9.9	12.05	14.12	24	Pass
NVNT	ax20	6175	10.17	11.97	14.17	24	Pass
NVNT	ax20	6415	10.09	11.9	14.10	24	Pass
NVNT	ax20	6435	9.91	12.09	14.15	24	Pass
NVNT	ax20	6475	9.65	10.23	12.96	24	Pass
NVNT	ax20	6515	9.98	10.06	13.03	24	Pass
NVNT	ax20	6535	9.99	9.86	12.94	24	Pass
NVNT	ax20	6695	9.92	9.85	12.90	24	Pass
NVNT	ax20	6855	10.05	9.24	12.67	24	Pass
NVNT	ax20	6875	9.49	9.96	12.74	24	Pass
NVNT	ax20	6895	9.76	9.34	12.57	24	Pass
NVNT	ax20	6995	9.56	10.05	12.82	24	Pass
NVNT	ax20	7115	9.61	10.34	13.00	24	Pass
NVNT	ax40	5965	12.18	13.41	15.85	24	Pass
NVNT	ax40	6165	13.66	14.07	16.88	24	Pass
NVNT	ax40	6405	14.94	13.83	17.43	24	Pass
NVNT	ax40	6445	14.46	14.18	17.33	24	Pass
NVNT	ax40	6485	12.95	13.89	16.46	24	Pass
NVNT	ax40	6525	12.91	12.29	15.62	24	Pass
NVNT	ax40	6565	12.98	12.58	15.79	24	Pass
NVNT	ax40	6685	11.93	11.69	14.82	24	Pass
NVNT	ax40	6845	12.05	10.97	14.55	24	Pass
NVNT	ax40	6885	12.18	11.87	15.04	24	Pass
NVNT	ax40	6925	12.31	12.87	15.61	24	Pass
NVNT	ax40	6965	12.21	13.19	15.74	24	Pass
NVNT	ax40	7085	13.13	13.76	16.47	24	Pass
NVNT	ax80	5985	12.74	13.17	15.97	24	Pass
NVNT	ax80	6145	13.12	13.91	16.54	24	Pass

NVNT	ax80	6385	13.6	14.01	16.82	24	Pass
NVNT	ax80	6465	13.35	13.83	16.61	24	Pass
NVNT	ax80	6545	12.91	12.89	15.91	24	Pass
NVNT	ax80	6625	12.74	12.58	15.67	24	Pass
NVNT	ax80	6705	11.48	11.38	14.44	24	Pass
NVNT	ax80	6785	13.38	12.22	15.85	24	Pass
NVNT	ax80	6865	11.92	11.37	14.66	24	Pass
NVNT	ax80	6945	12.06	12.06	15.07	24	Pass
NVNT	ax80	7025	12.9	12.76	15.84	24	Pass
NVNT	ax160	6025	14.1	13.63	16.88	24	Pass
NVNT	ax160	6185	14.32	14.55	17.45	24	Pass
NVNT	ax160	6345	15.46	15.31	18.40	24	Pass
NVNT	ax160	6505	15.19	13.53	17.45	24	Pass
NVNT	ax160	6665	14.03	12.51	16.35	24	Pass
NVNT	ax160	6825	13.3	13.48	16.40	24	Pass
NVNT	ax160	6985	14.41	13.64	17.05	24	Pass

Note: The Duty Cycle Factor is compensated in the graph.


Antenna gain A:3.55dBi, Antenna gain B:3.58dBi,

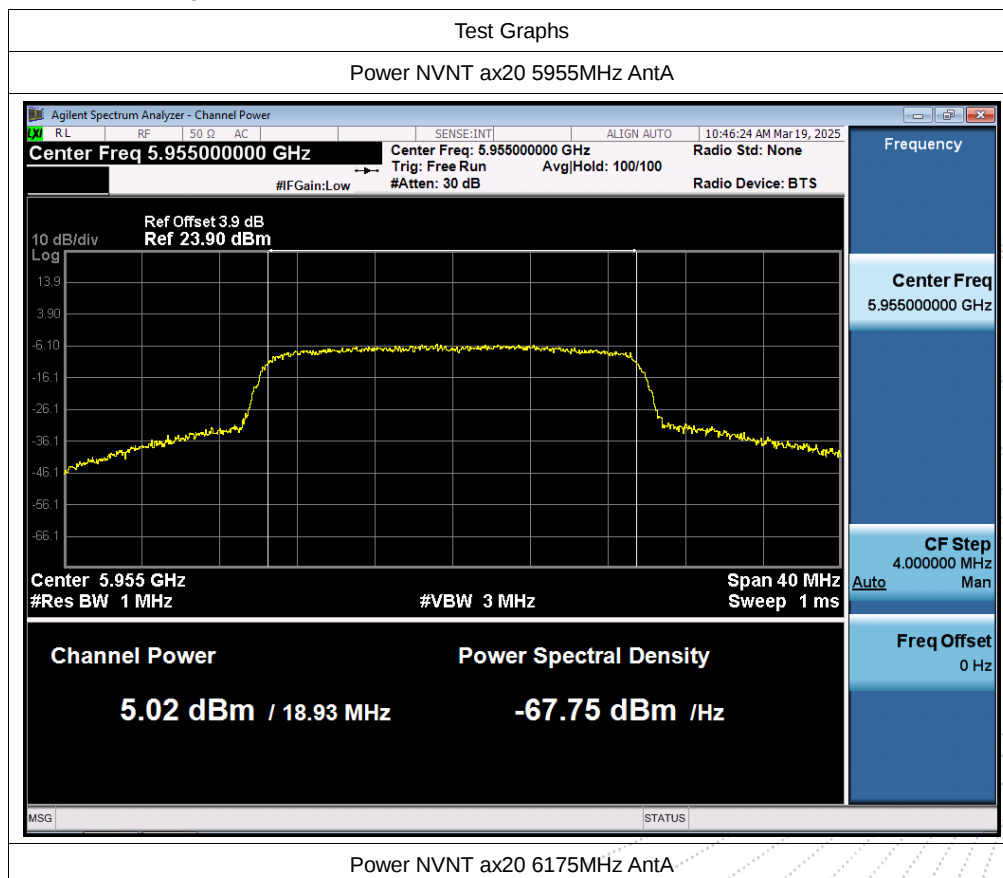

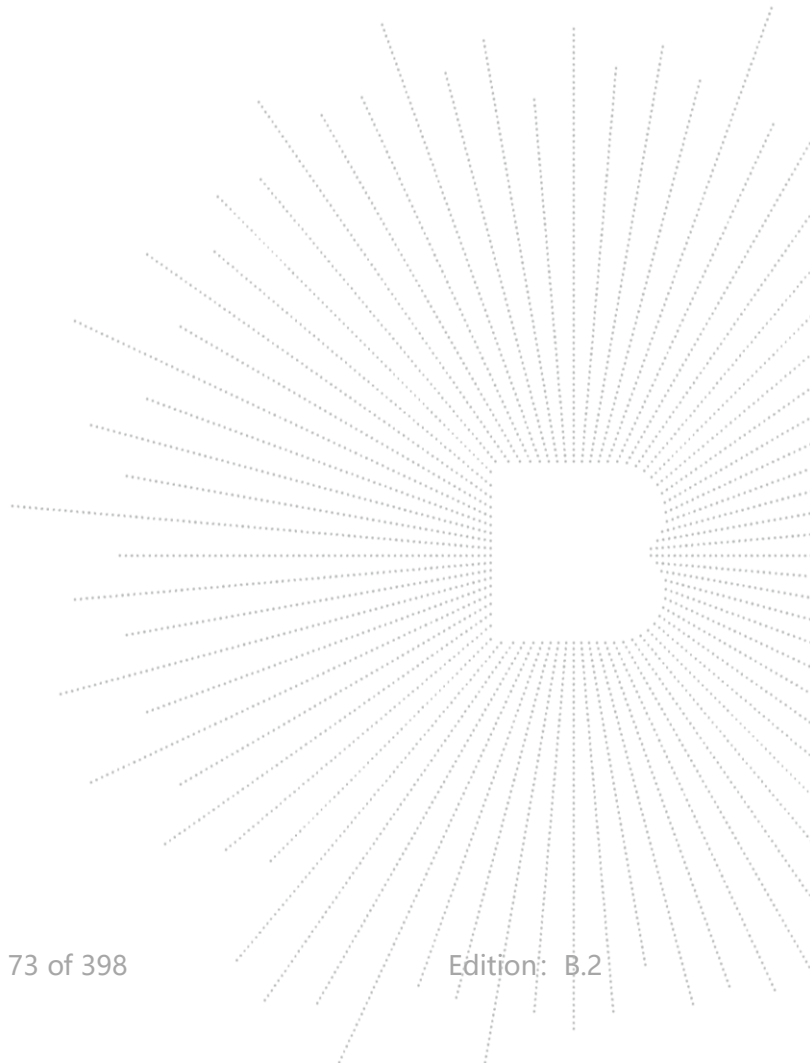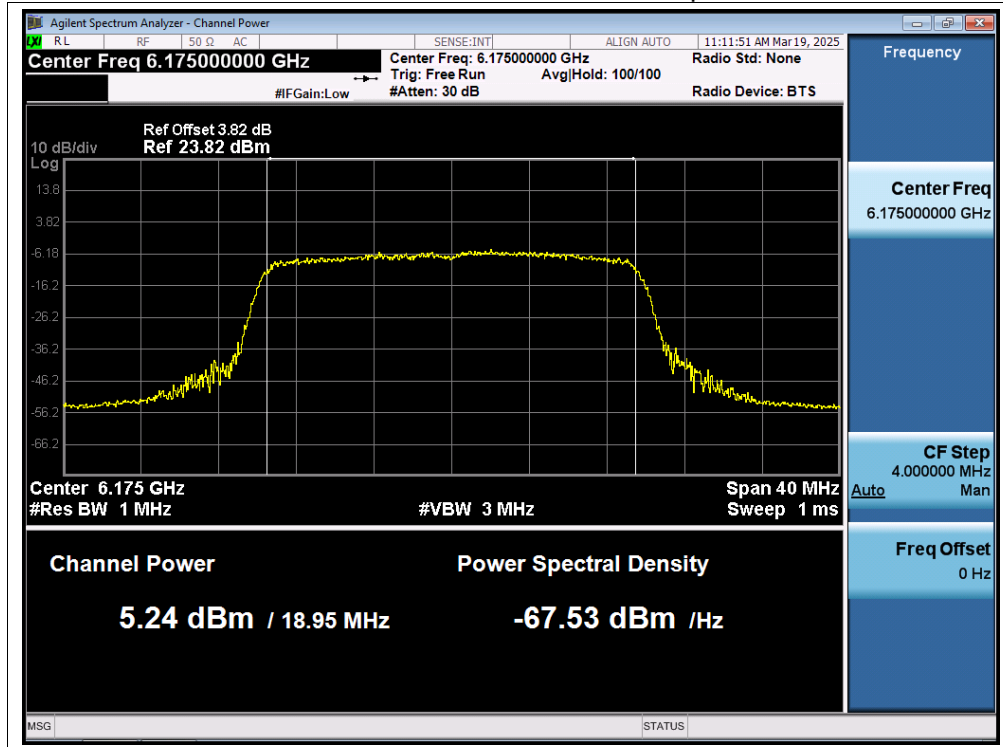




Power NVNT ax20 6415MHz AntA

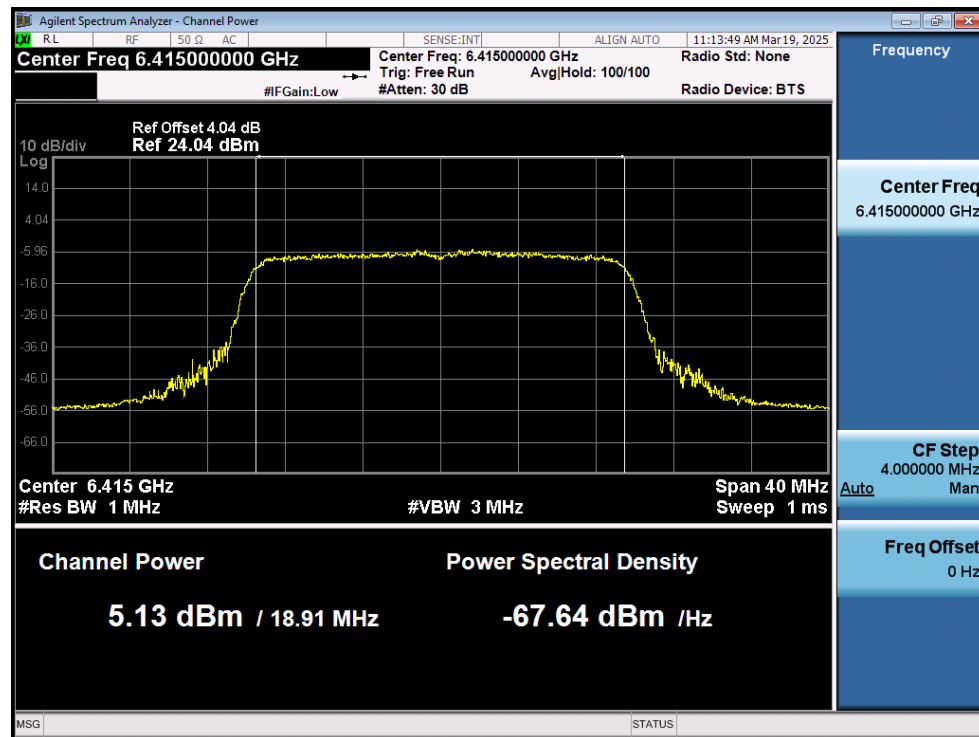


Power NVNT ax20 6435MHz AntA

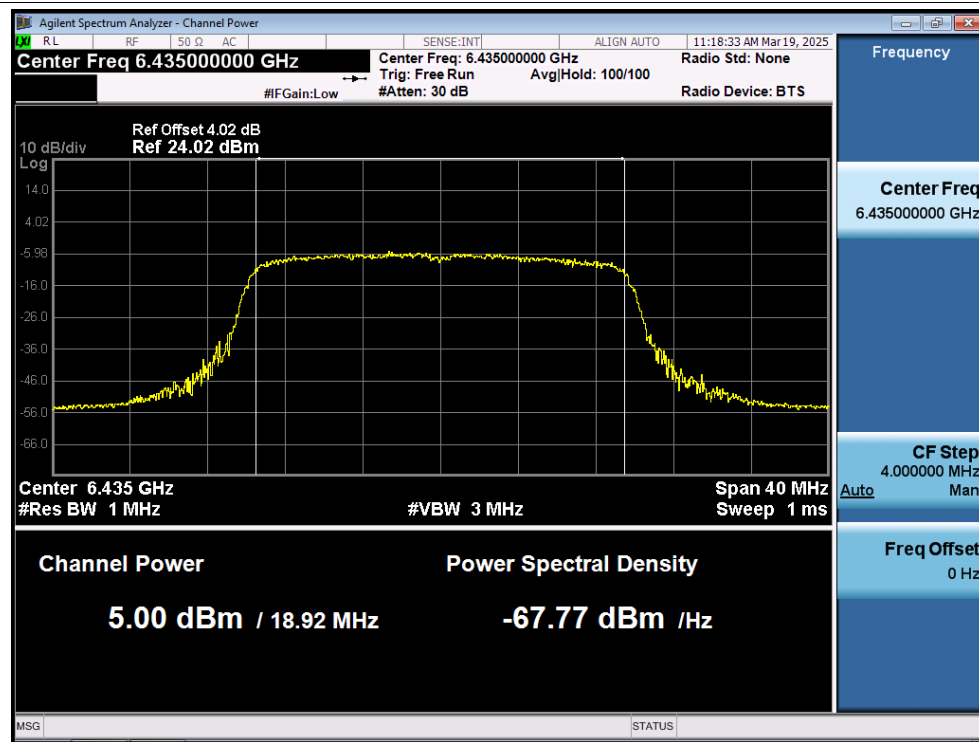




Power NVNT ax20 6475MHz AntA

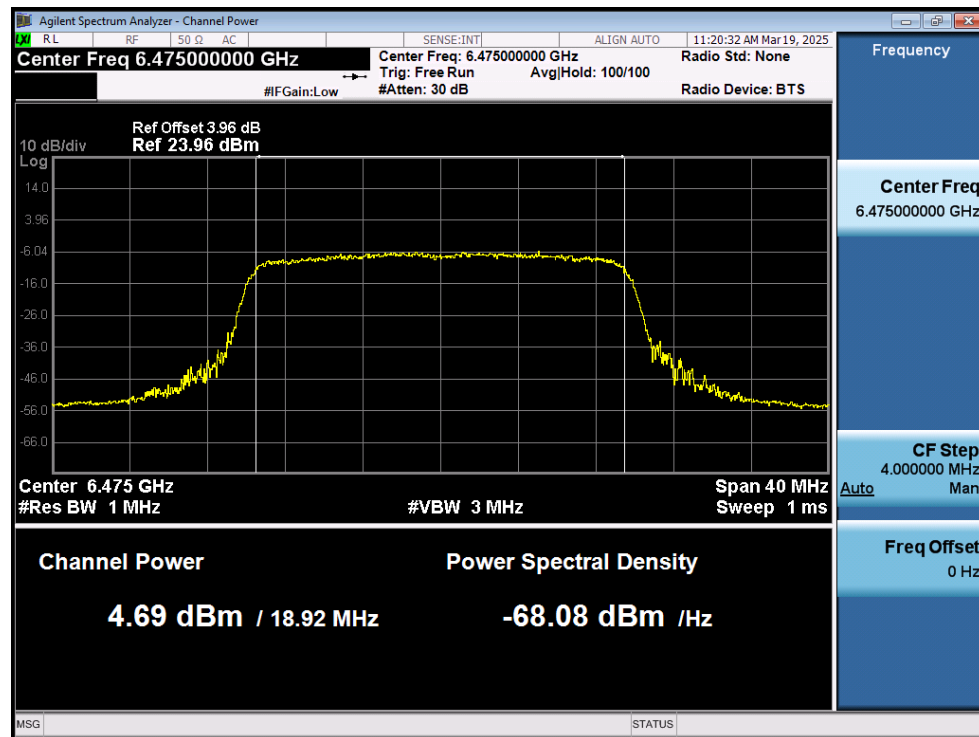


Power NVNT ax20 6515MHz AntA

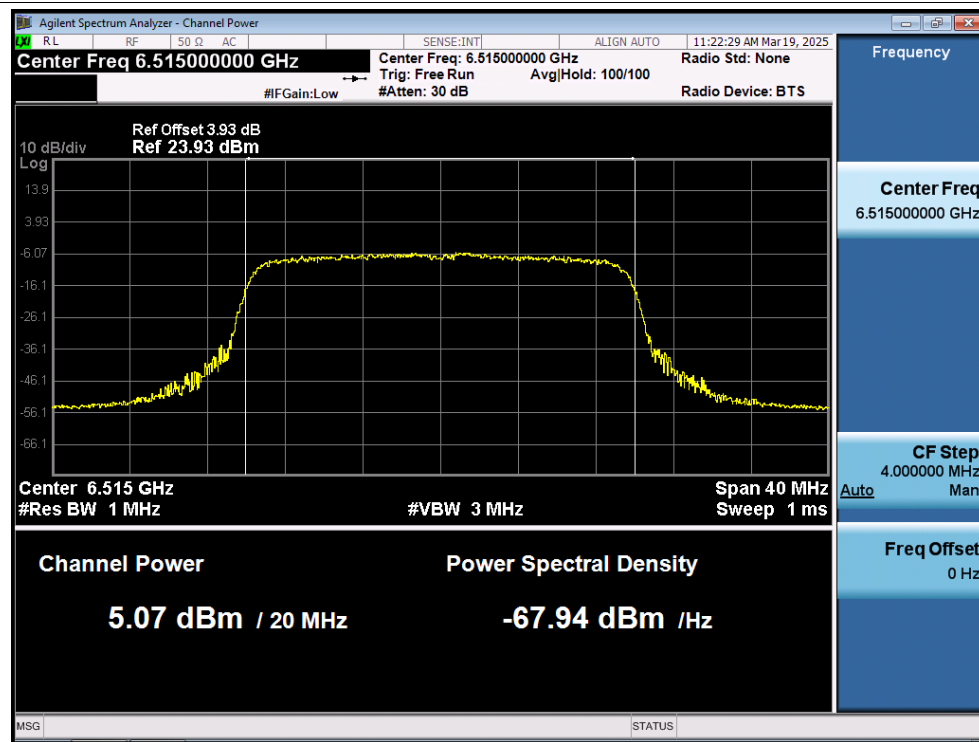




Power NVNT ax20 6535MHz AntA

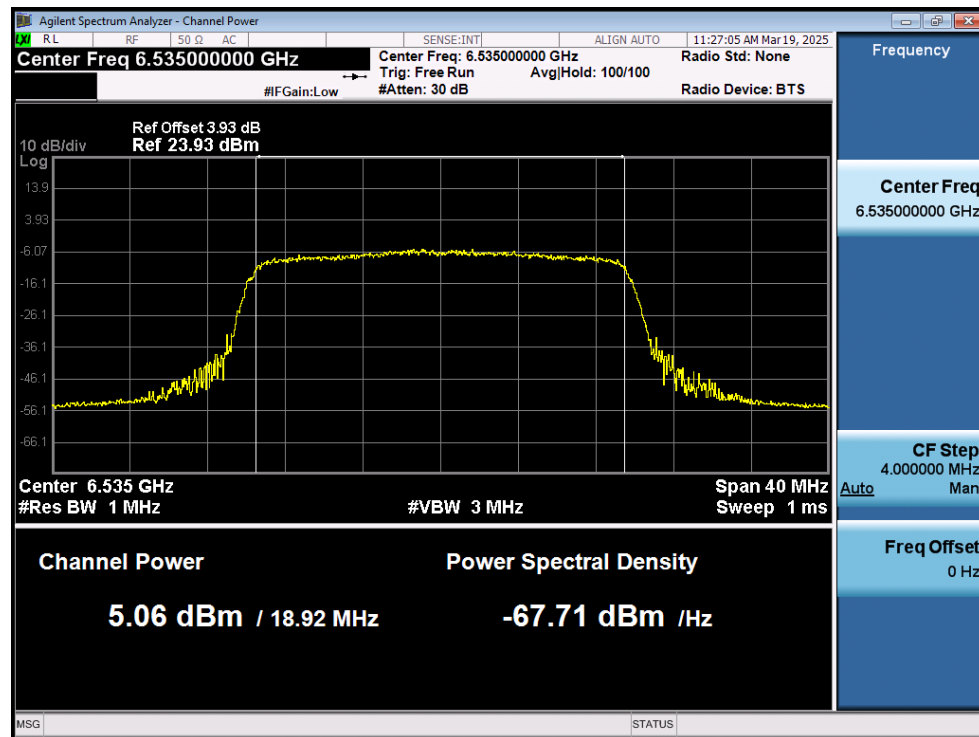


Power NVNT ax20 6695MHz AntA

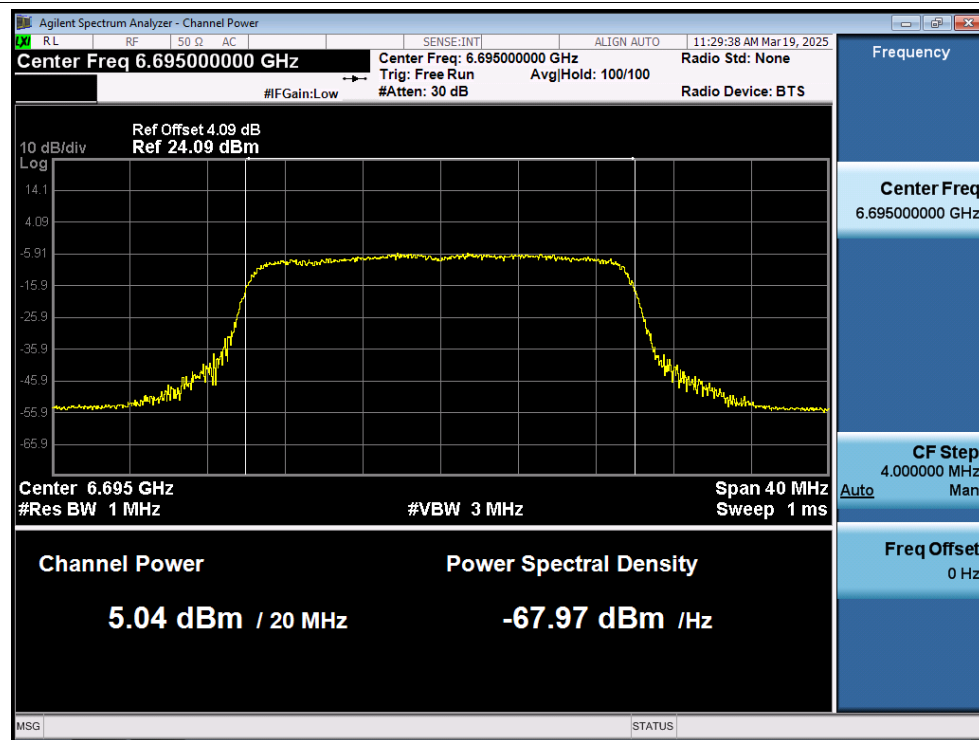




Power NVNT ax20 6855MHz AntA

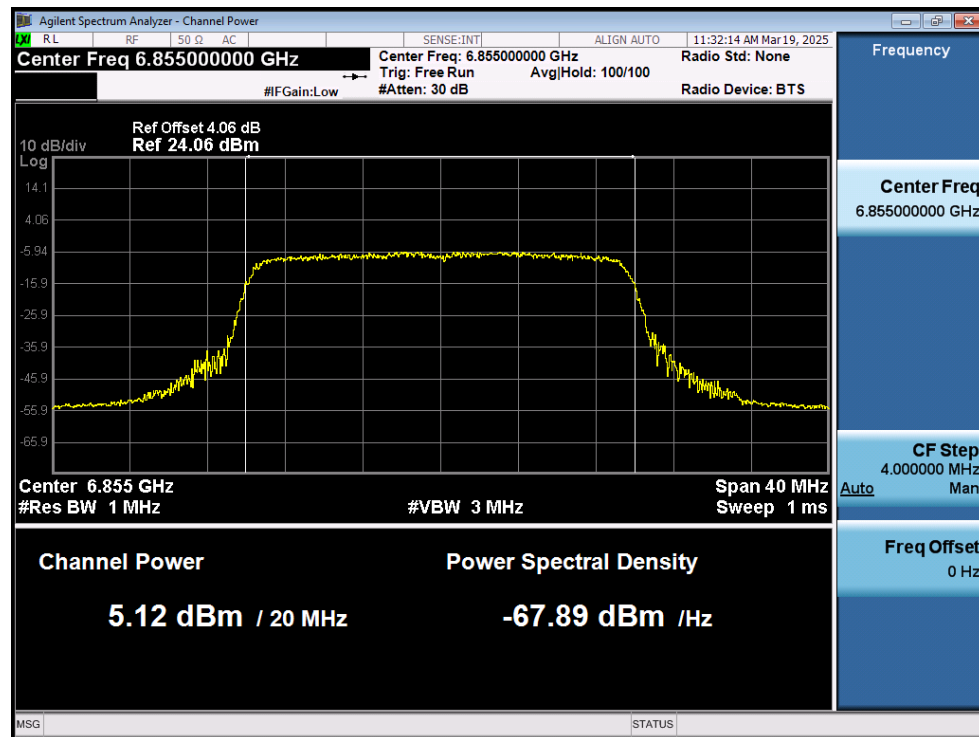


Power NVNT ax20 6875MHz AntA

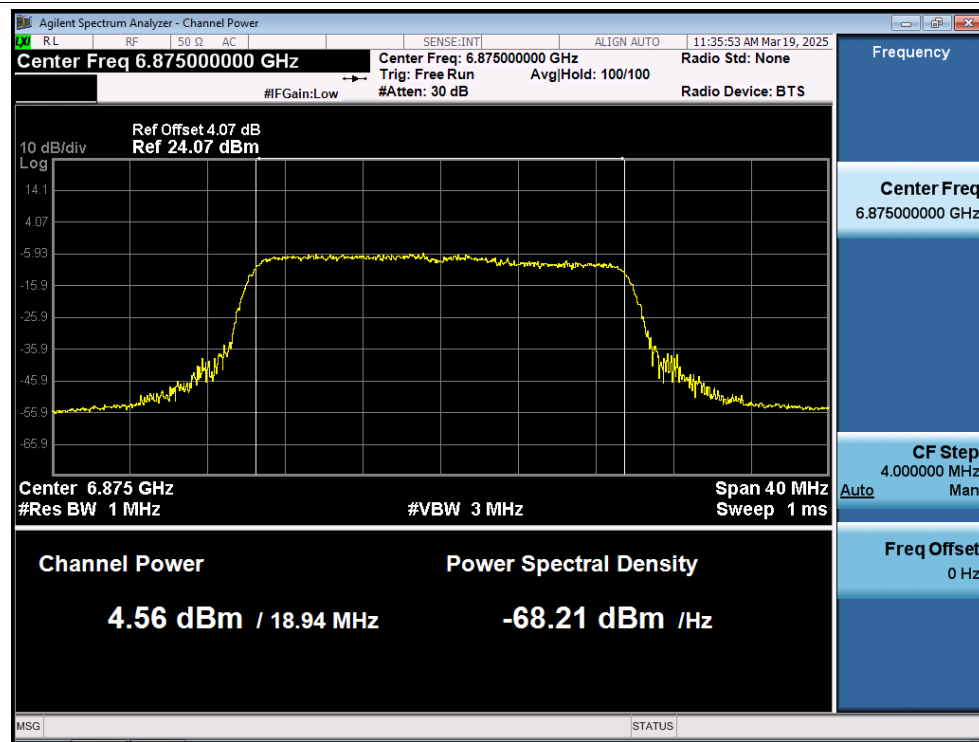




Power NVNT ax20 6895MHz AntA

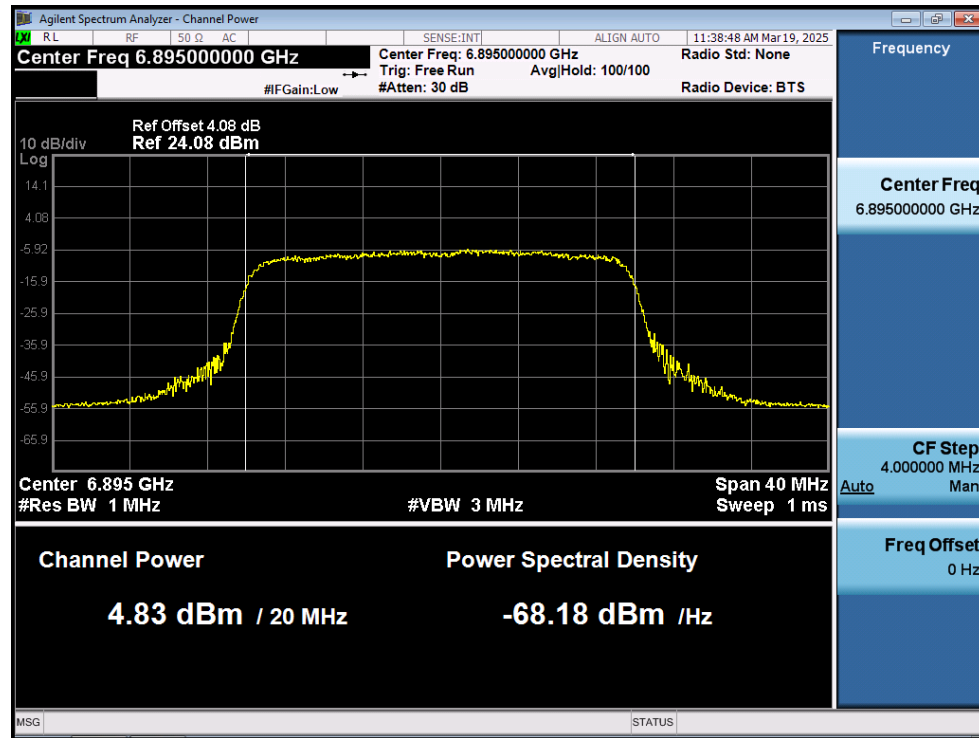


Power NVNT ax20 6995MHz AntA

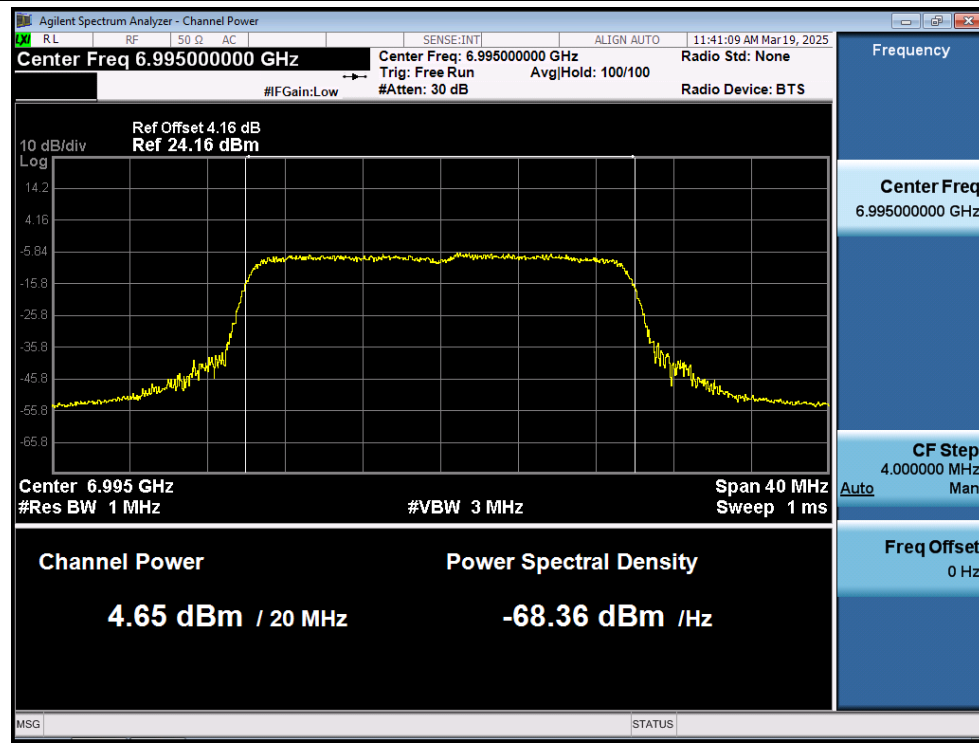




Power NVNT ax20 7115MHz AntA

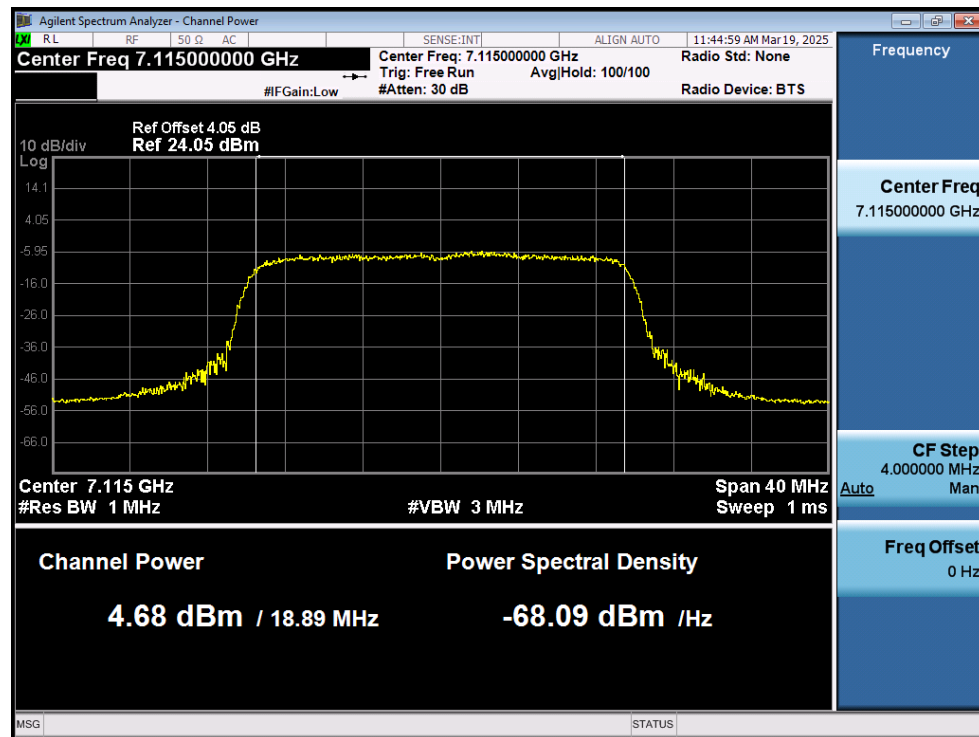


Power NVNT ax20 5955MHz AntB

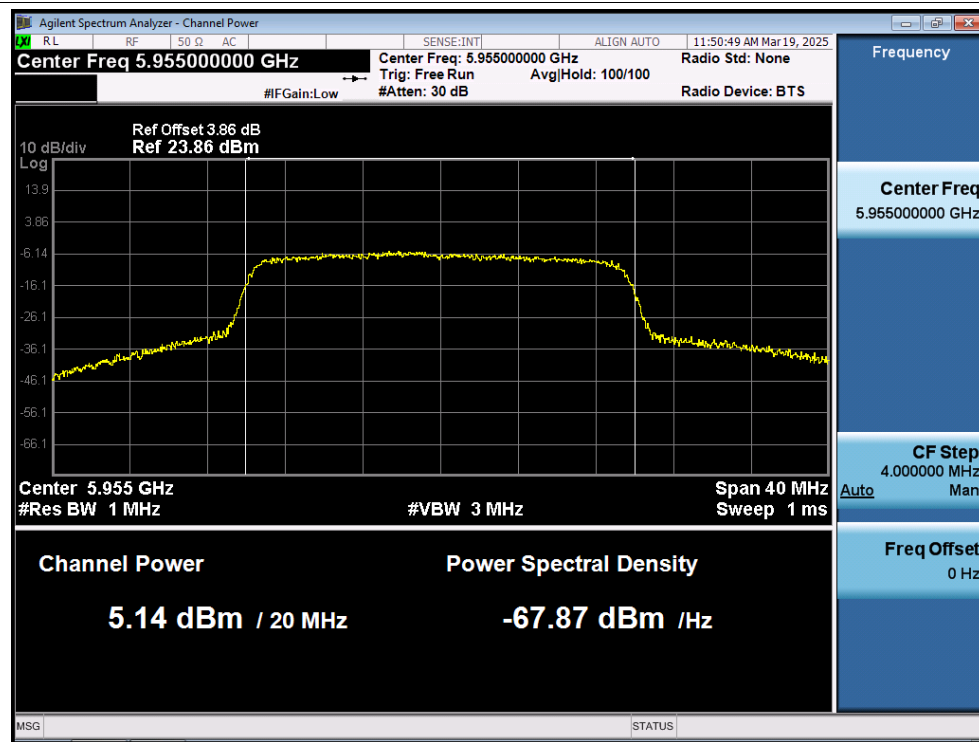




Power NVNT ax20 6175MHz AntB

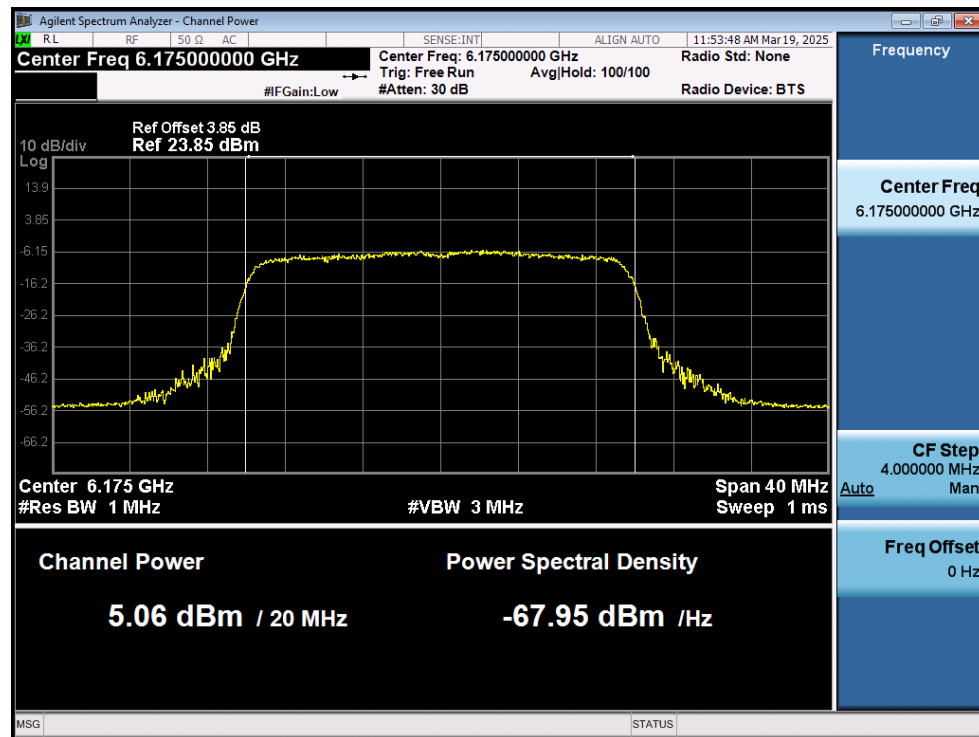


Power NVNT ax20 6415MHz AntB

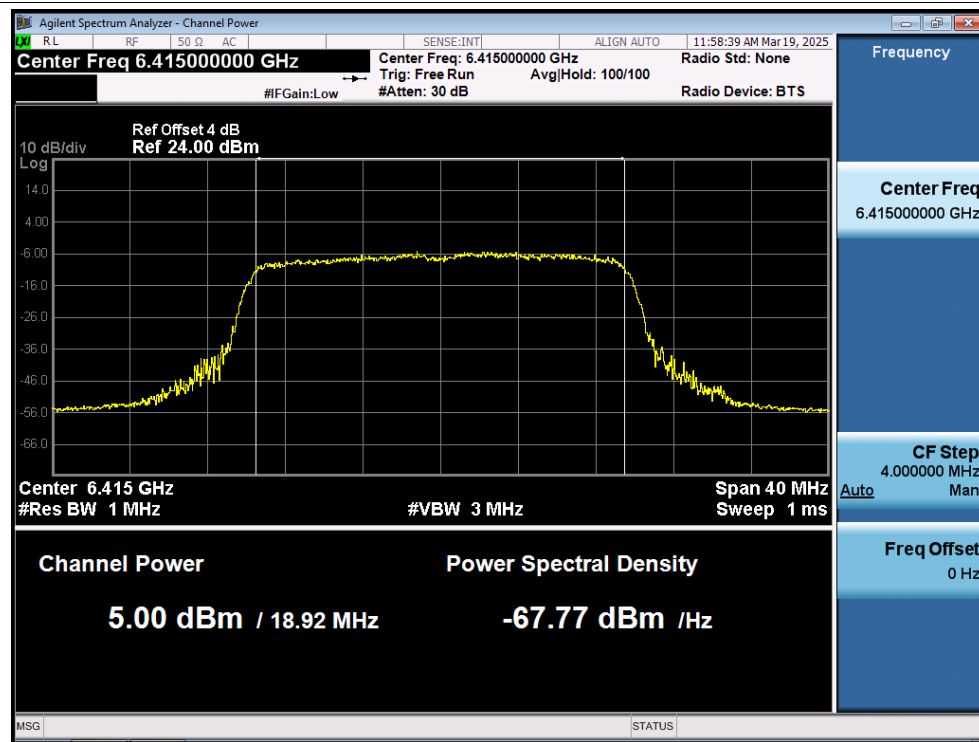




Power NVNT ax20 6435MHz AntB

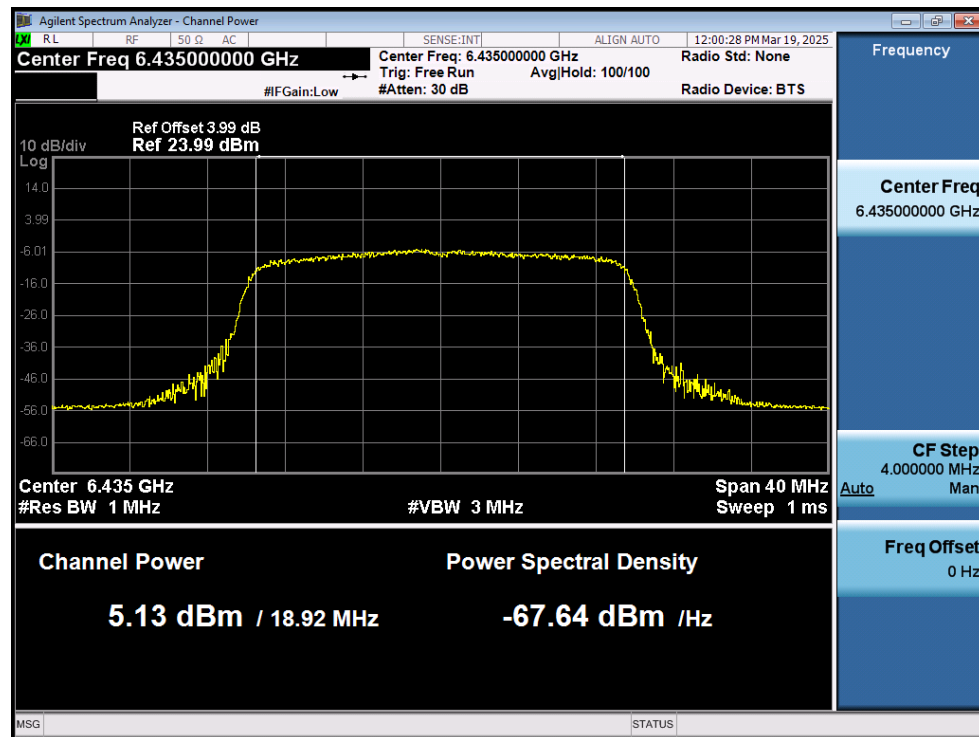


Power NVNT ax20 6475MHz AntB

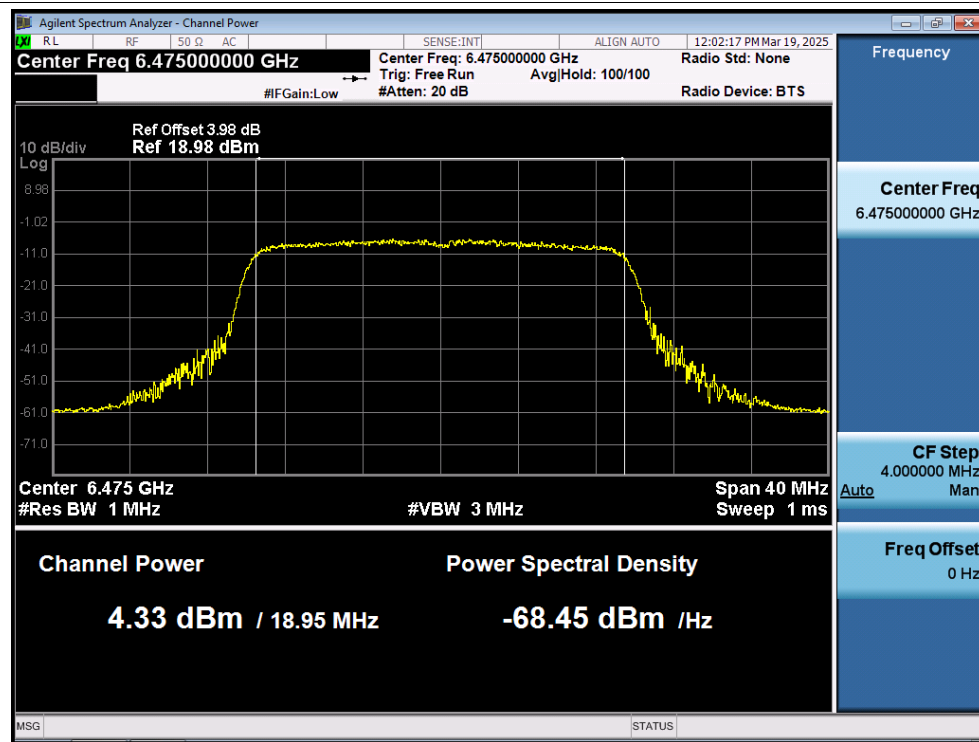




Power NVNT ax20 6515MHz AntB

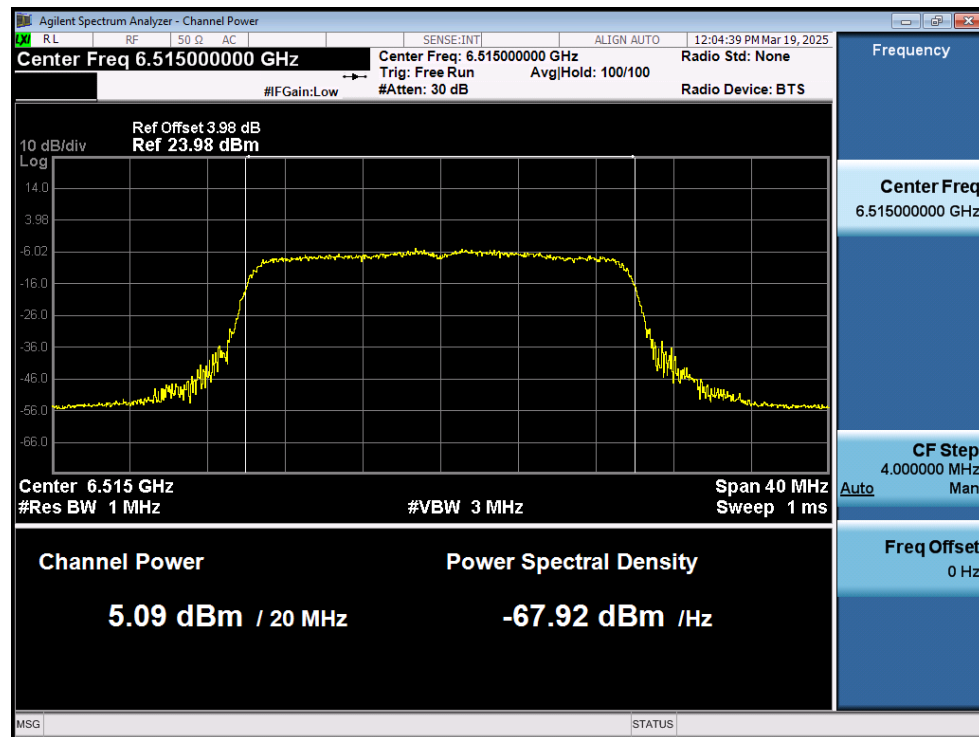


Power NVNT ax20 6535MHz AntB

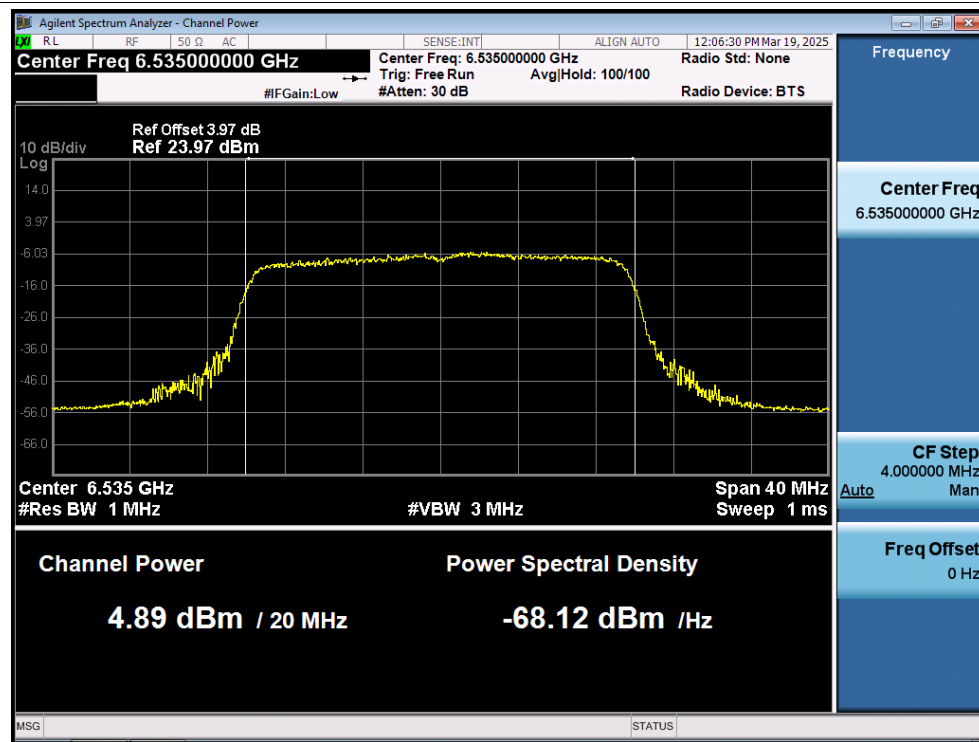




Power NVNT ax20 6695MHz AntB

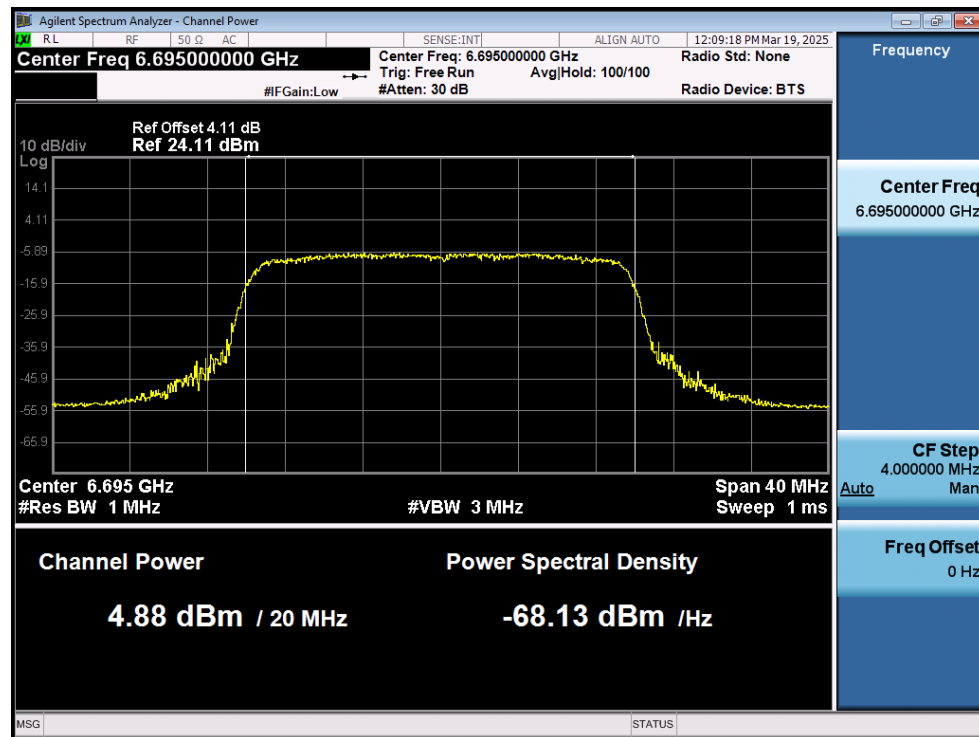


Power NVNT ax20 6855MHz AntB

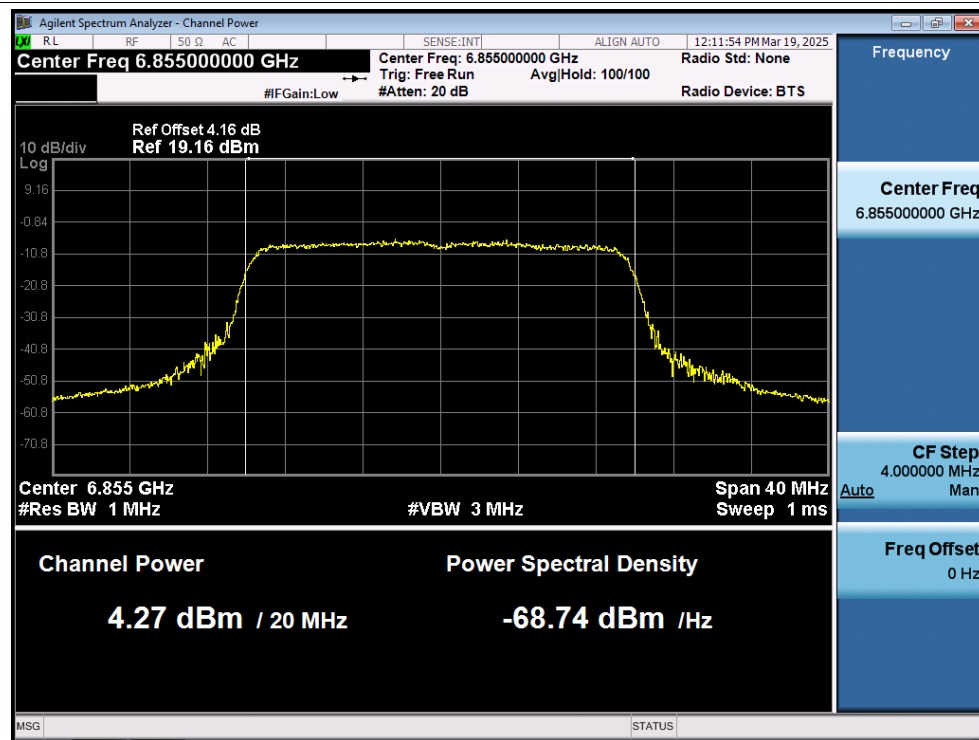




Power NVNT ax20 6875MHz AntB

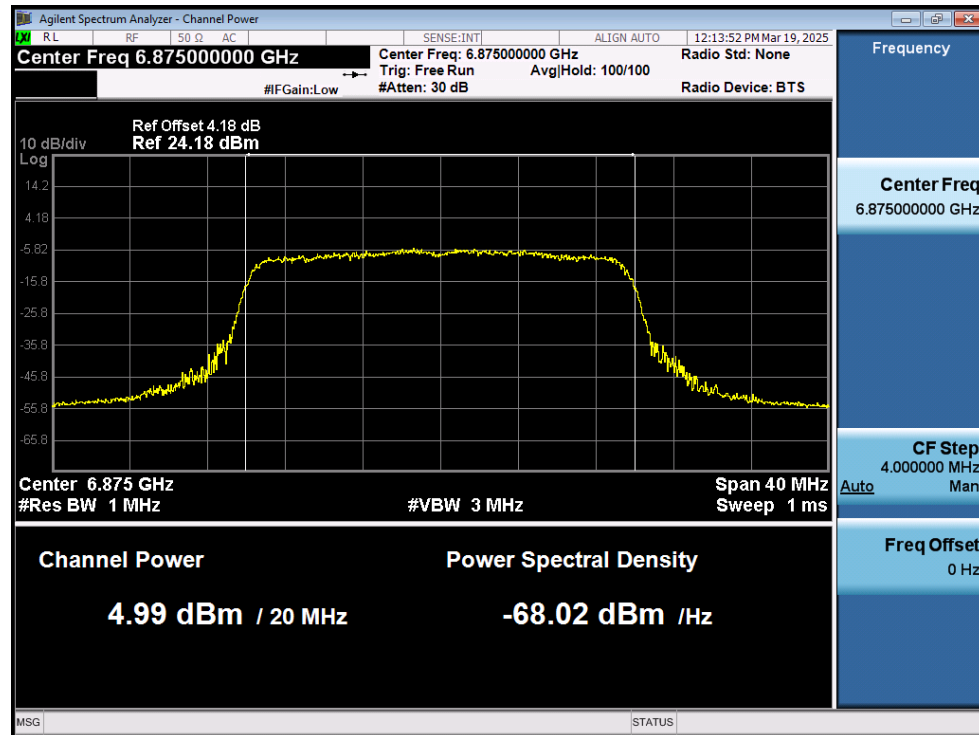


Power NVNT ax20 6895MHz AntB

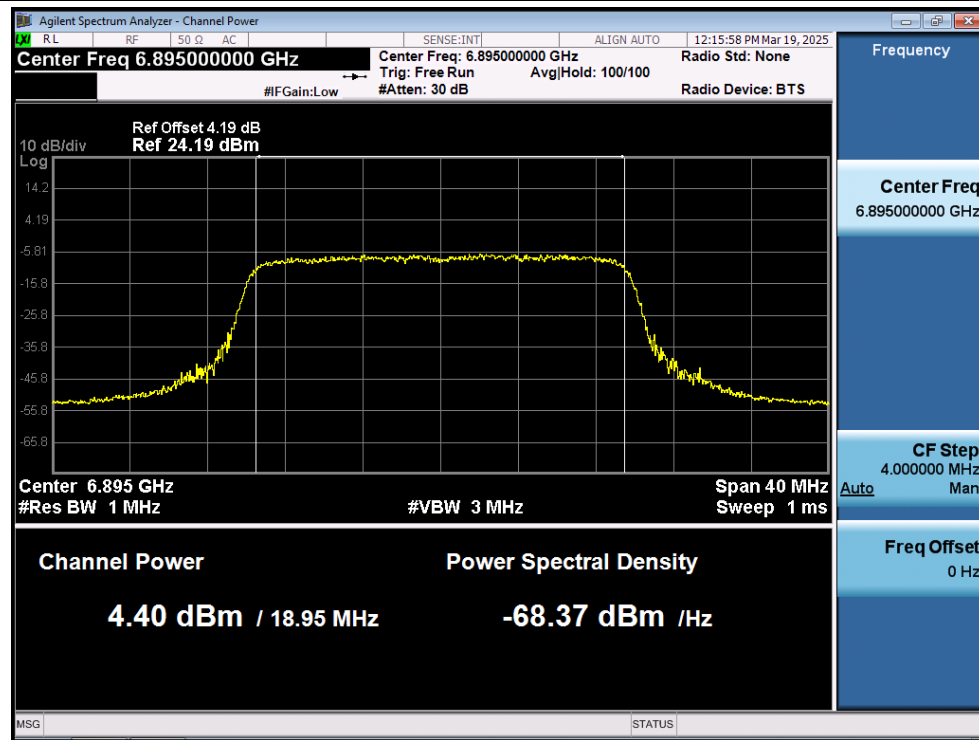




Power NVNT ax20 6995MHz AntB

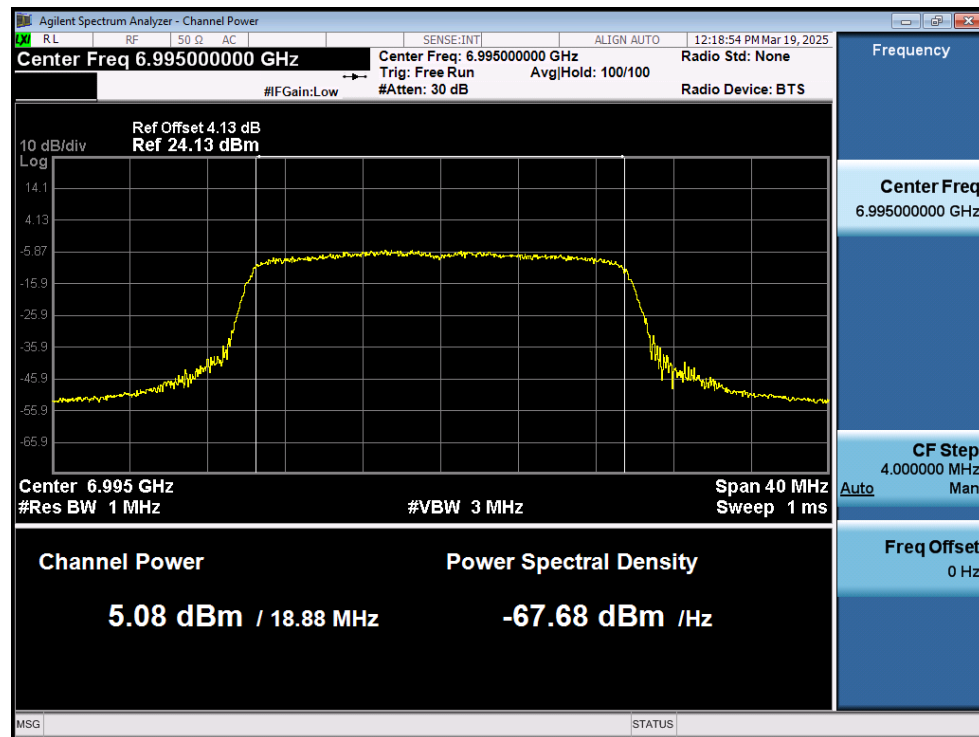


Power NVNT ax20 7115MHz AntB

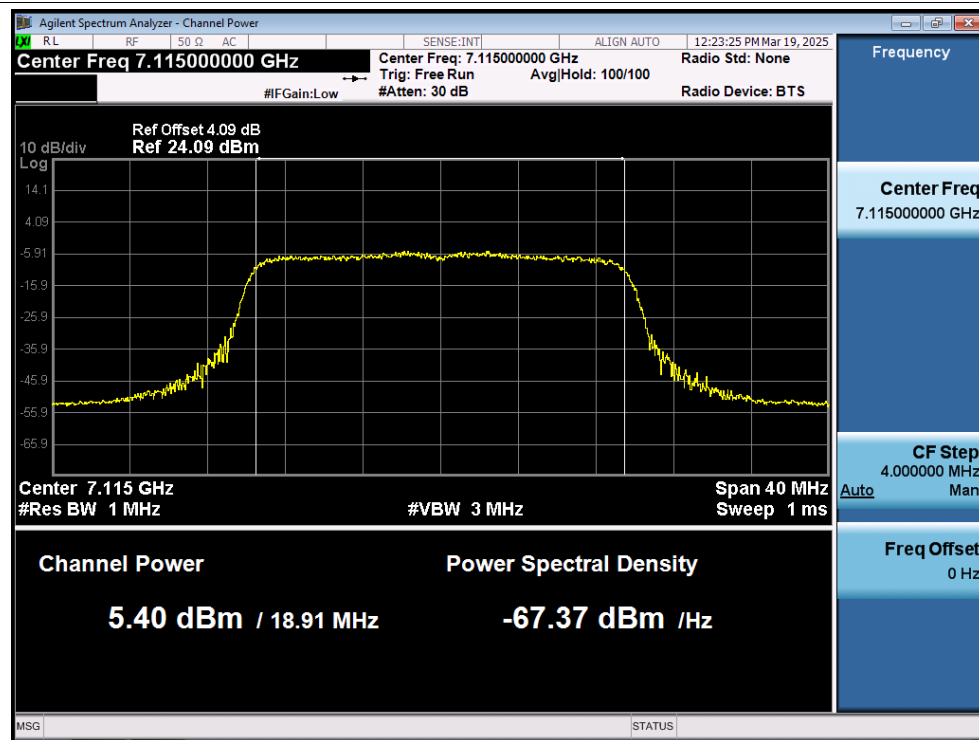




Power NVNT ax40 5965MHz AntA

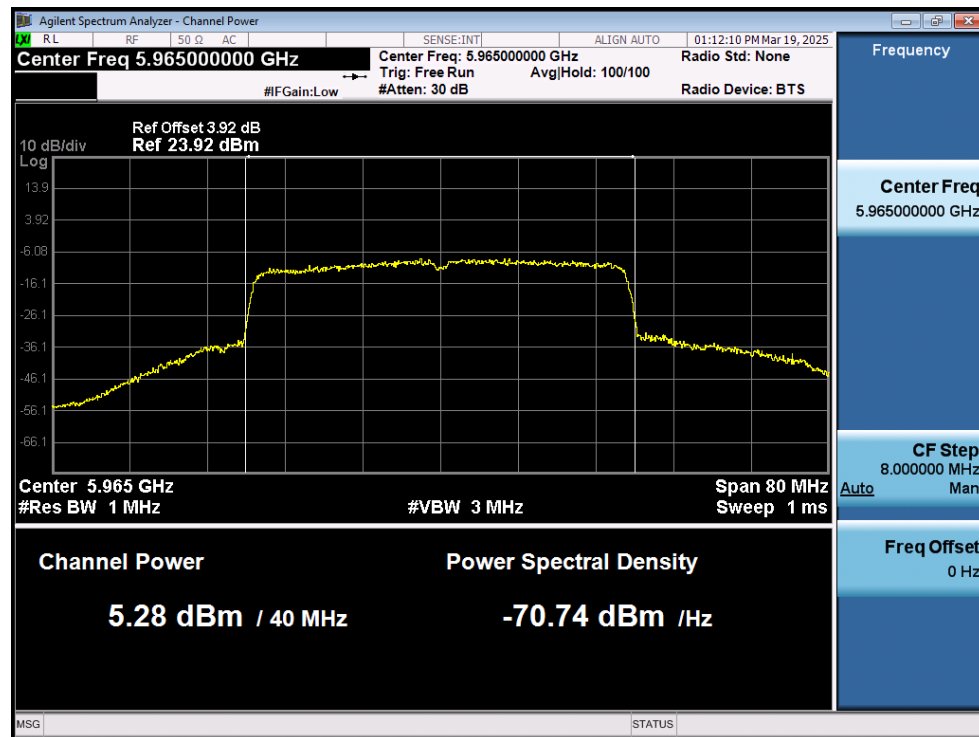


Power NVNT ax40 6165MHz AntA

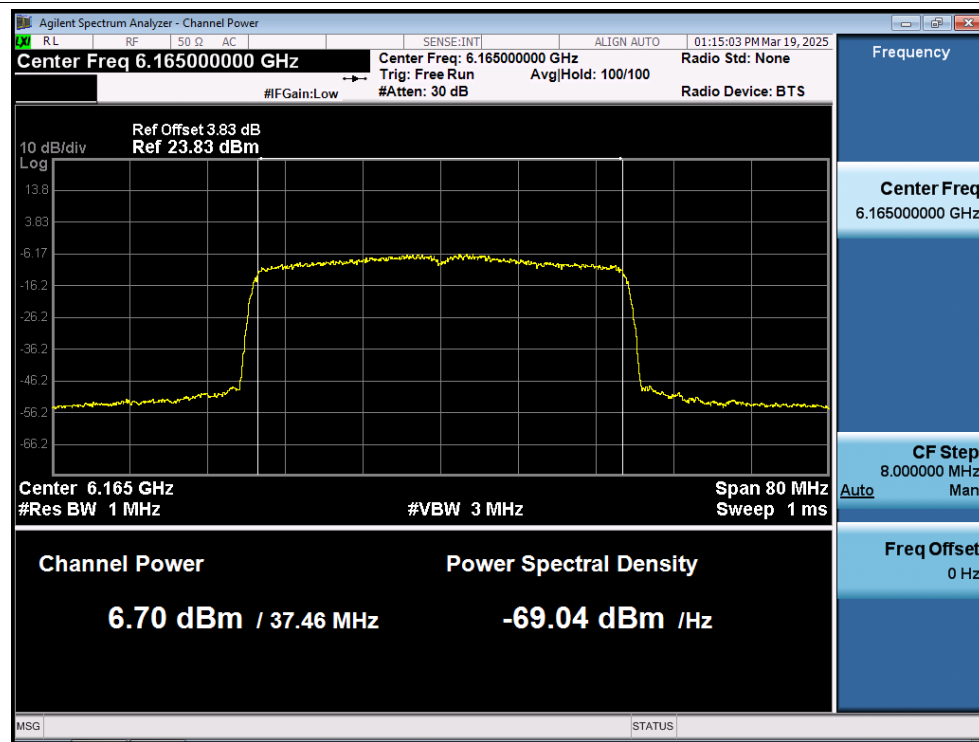




Power NVNT ax40 6405MHz AntA

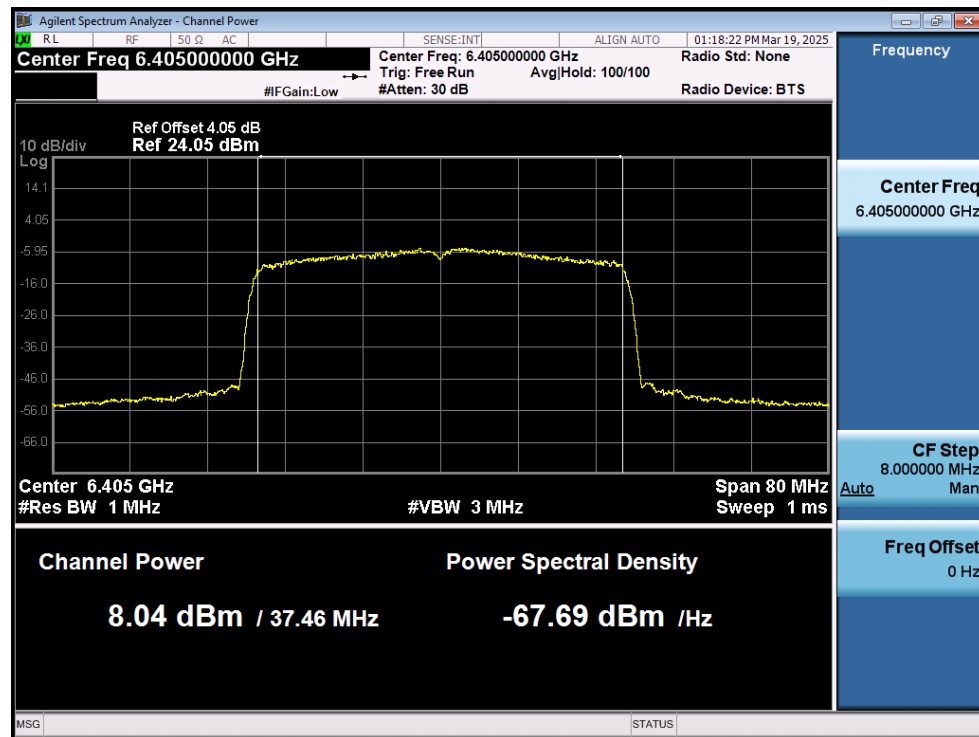


Power NVNT ax40 6445MHz AntA

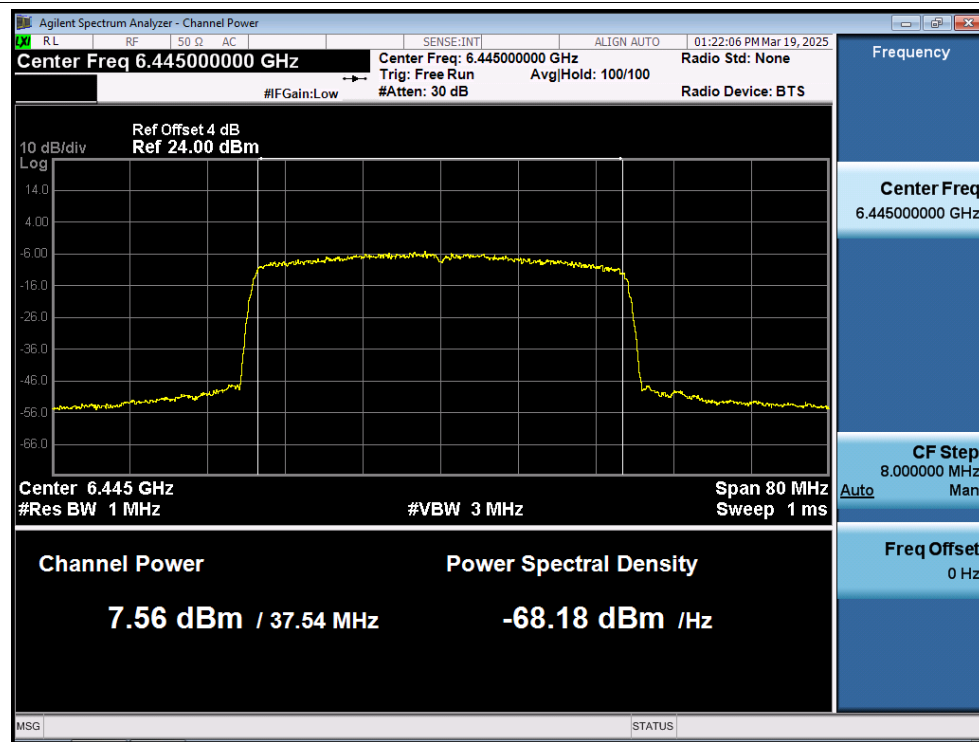




Power NVNT ax40 6485MHz AntA

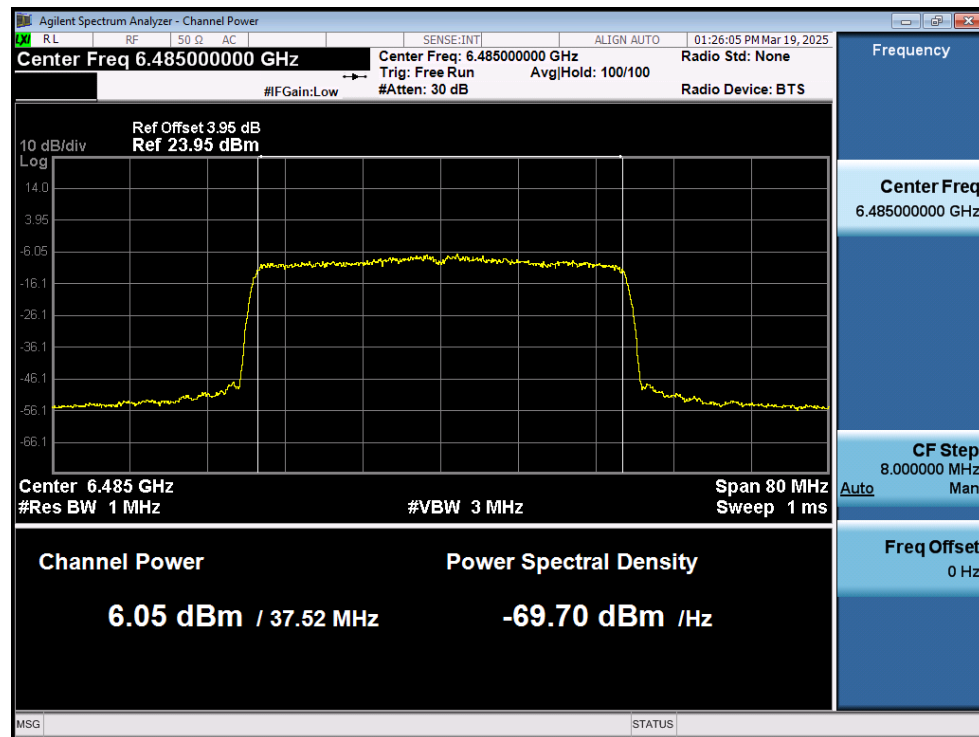


Power NVNT ax40 6525MHz AntA

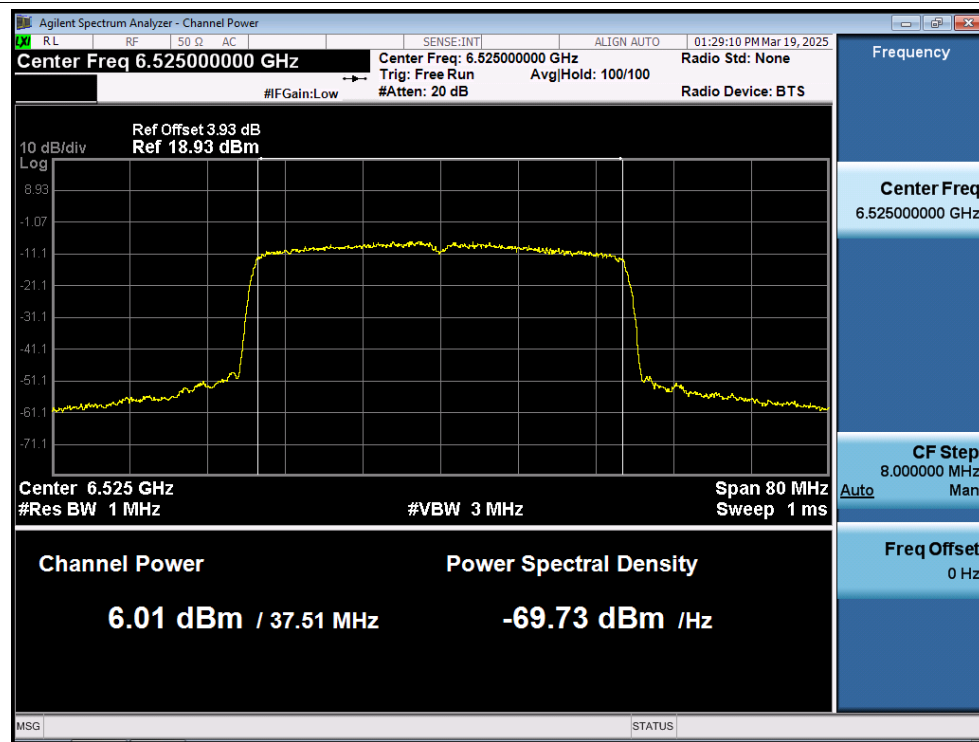




Power NVNT ax40 6565MHz AntA

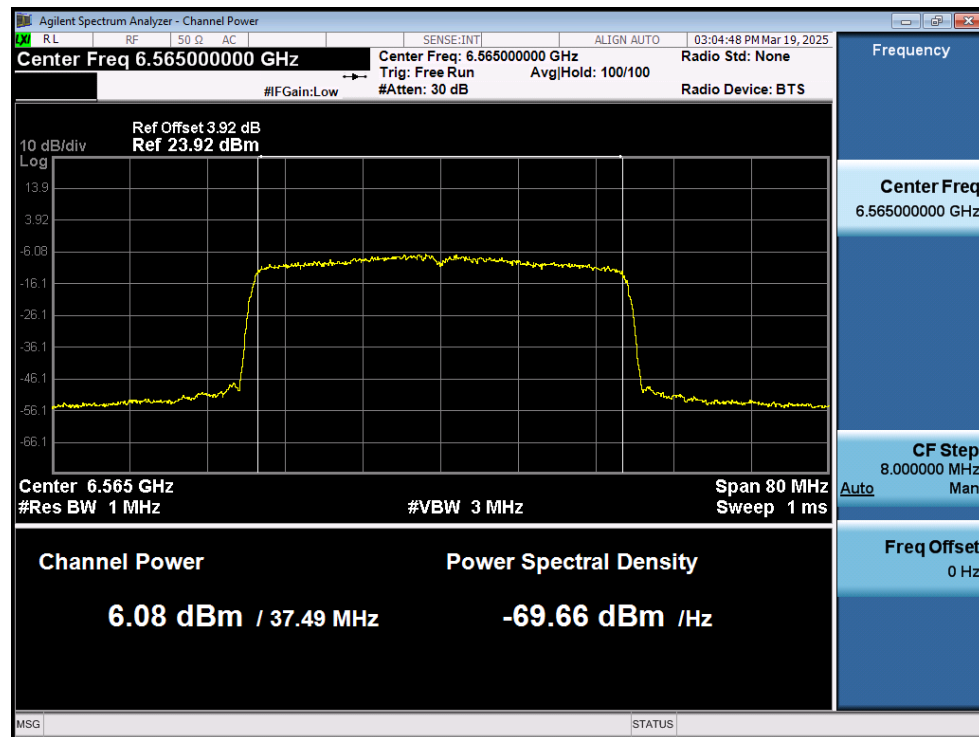


Power NVNT ax40 6685MHz AntA

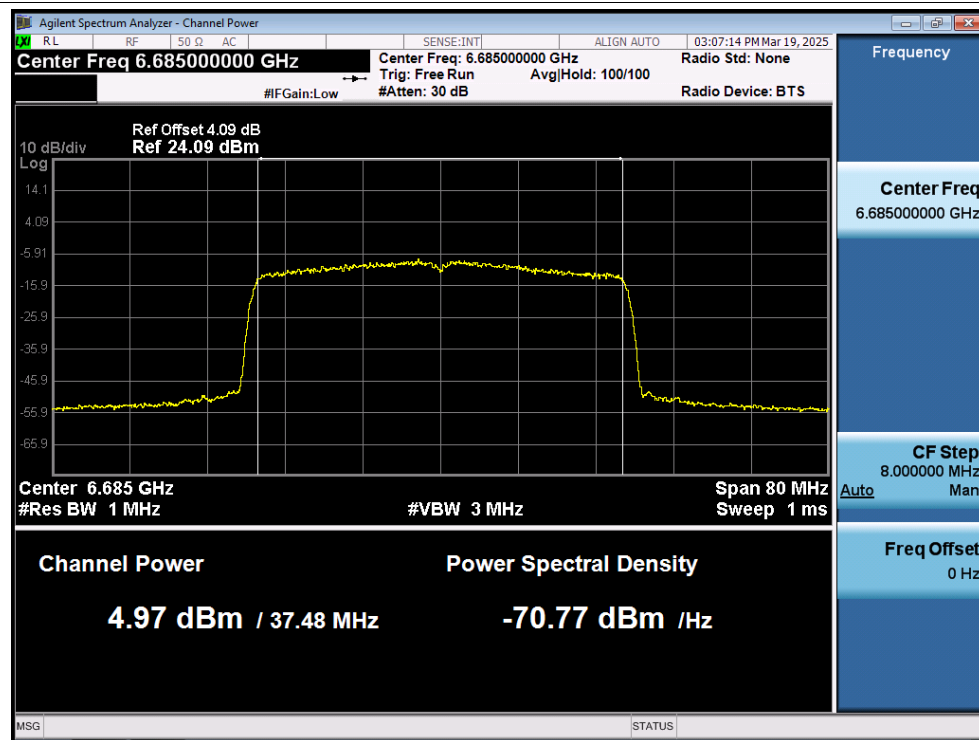




Power NVNT ax40 6845MHz AntA

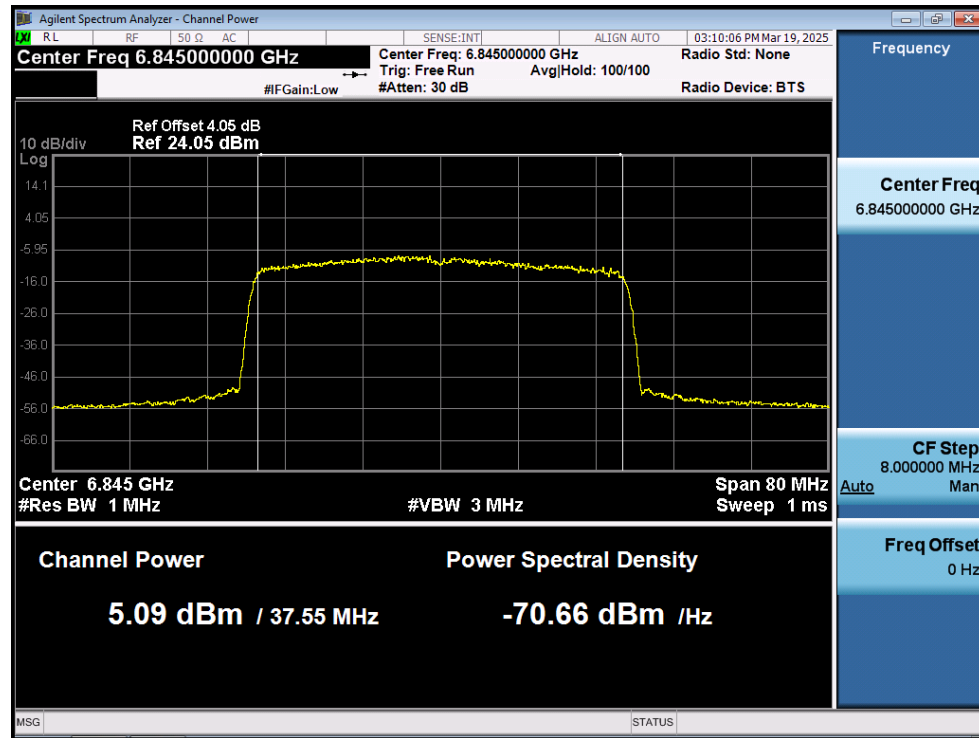


Power NVNT ax40 6885MHz AntA

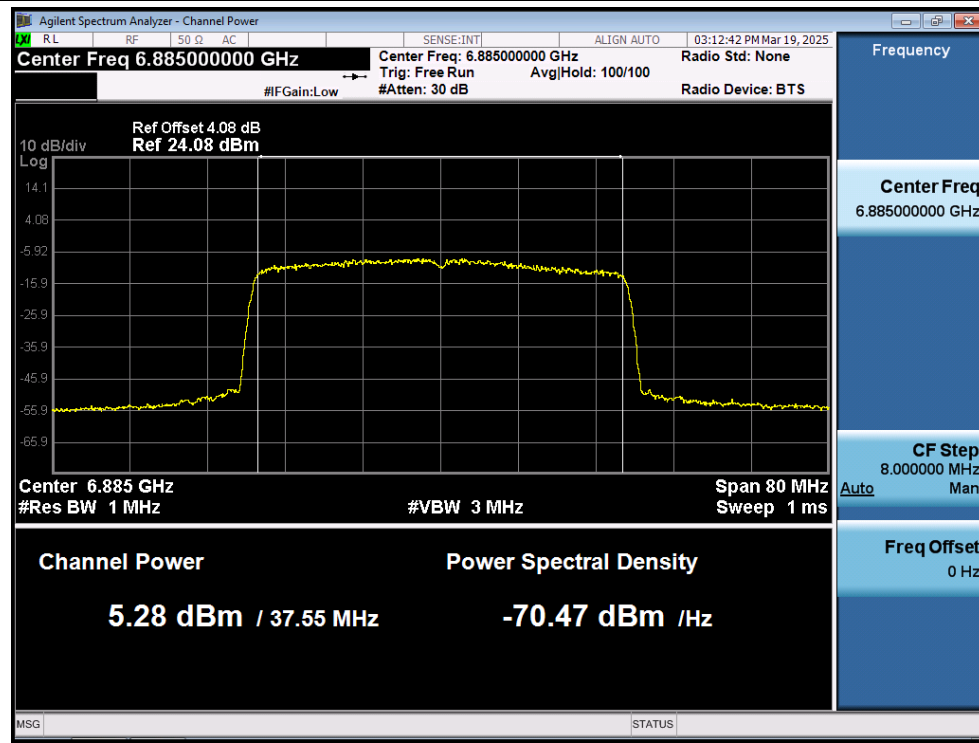




Power NVNT ax40 6925MHz AntA

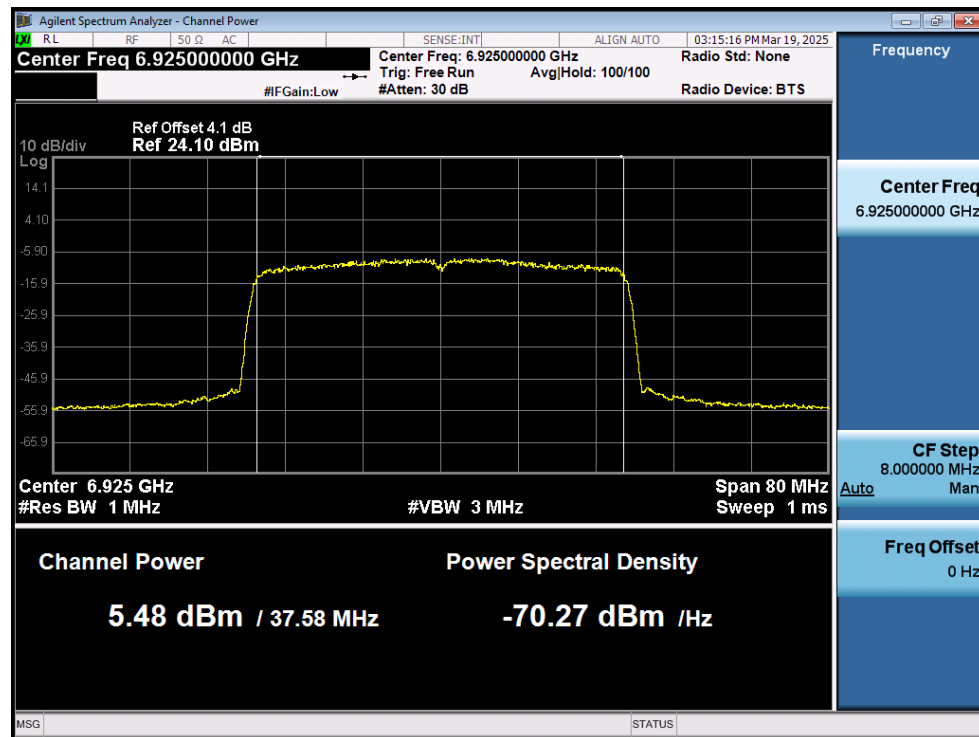


Power NVNT ax40 6965MHz AntA

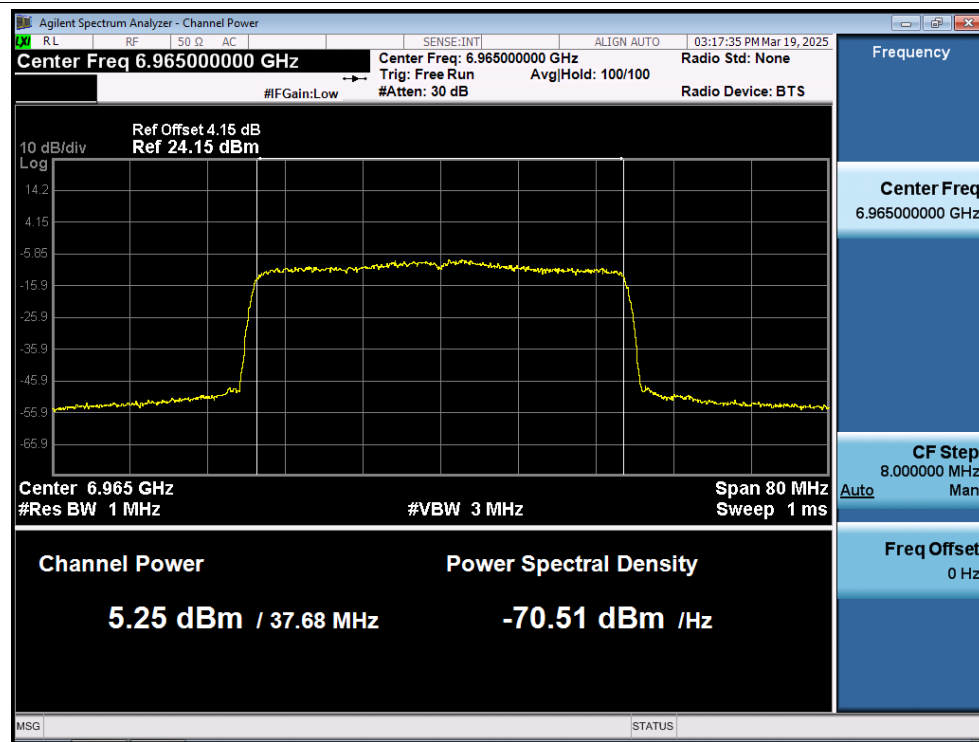



Power NVNT ax40 7085MHz AntA

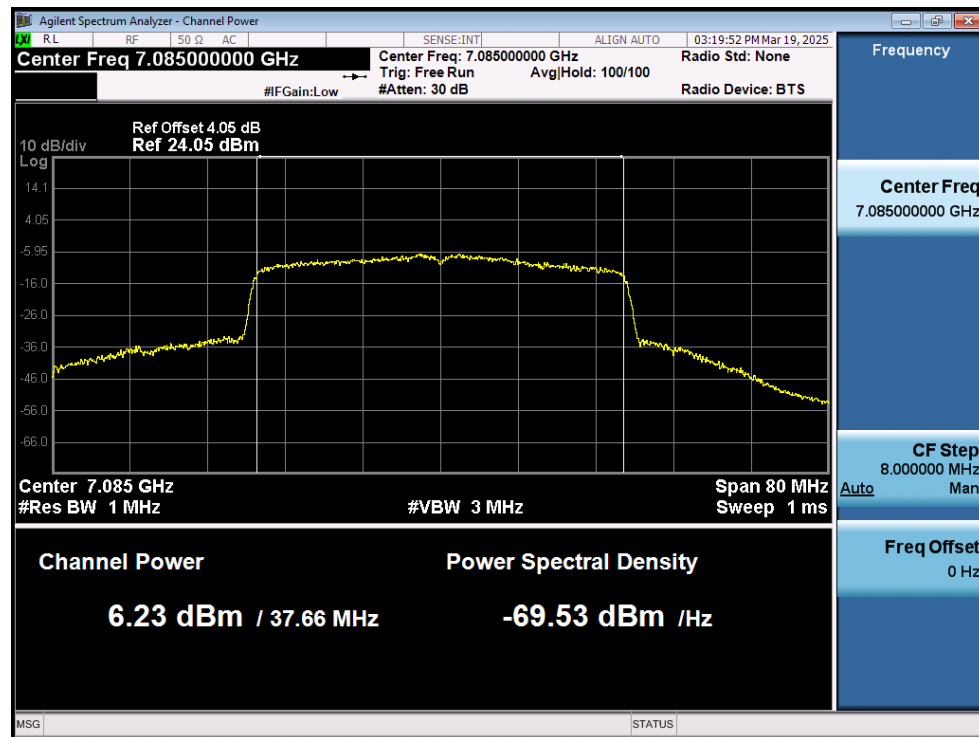


Power NVNT ax40 5965MHz AntB






Power NVNT ax40 6165MHz AntB

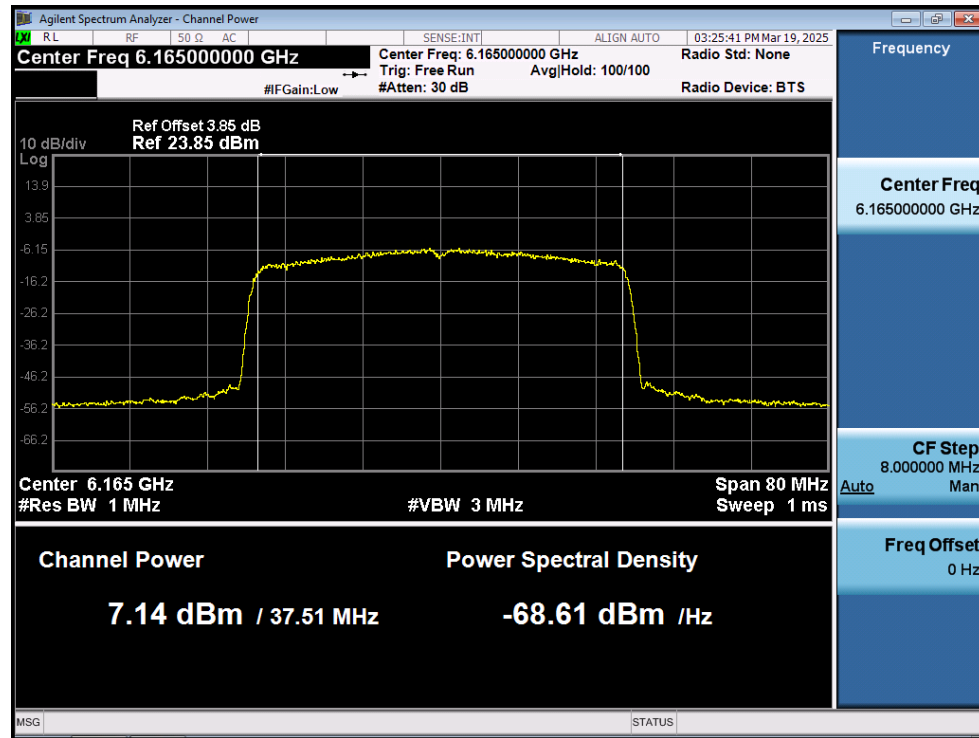


Power NVNT ax40 6405MHz AntB

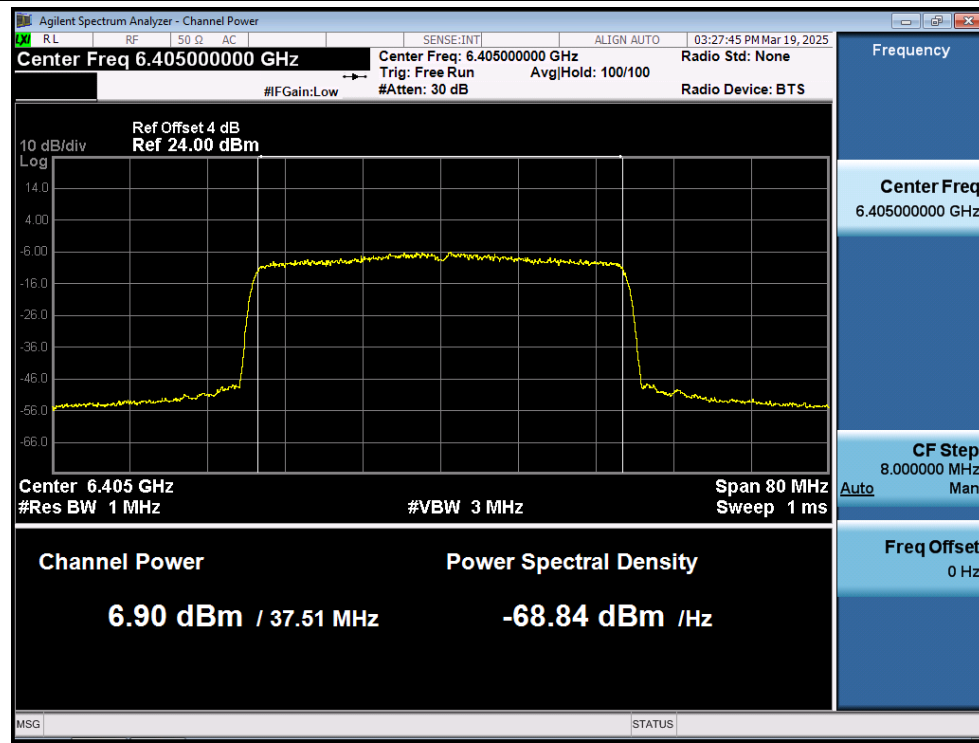




Power NVNT ax40 6445MHz AntB

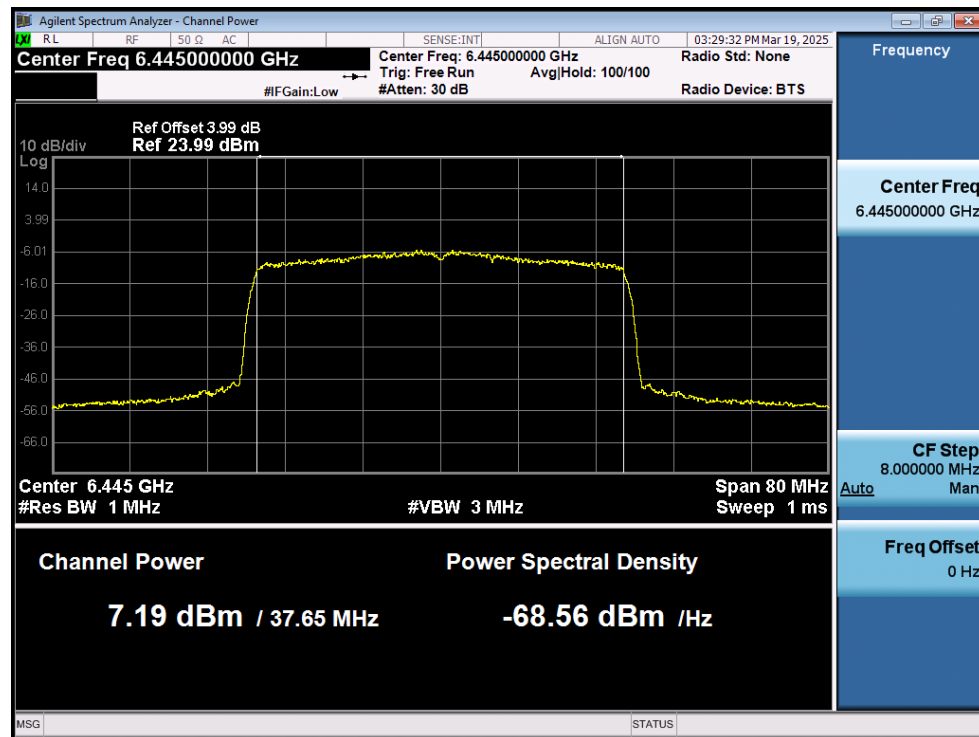


Power NVNT ax40 6485MHz AntB

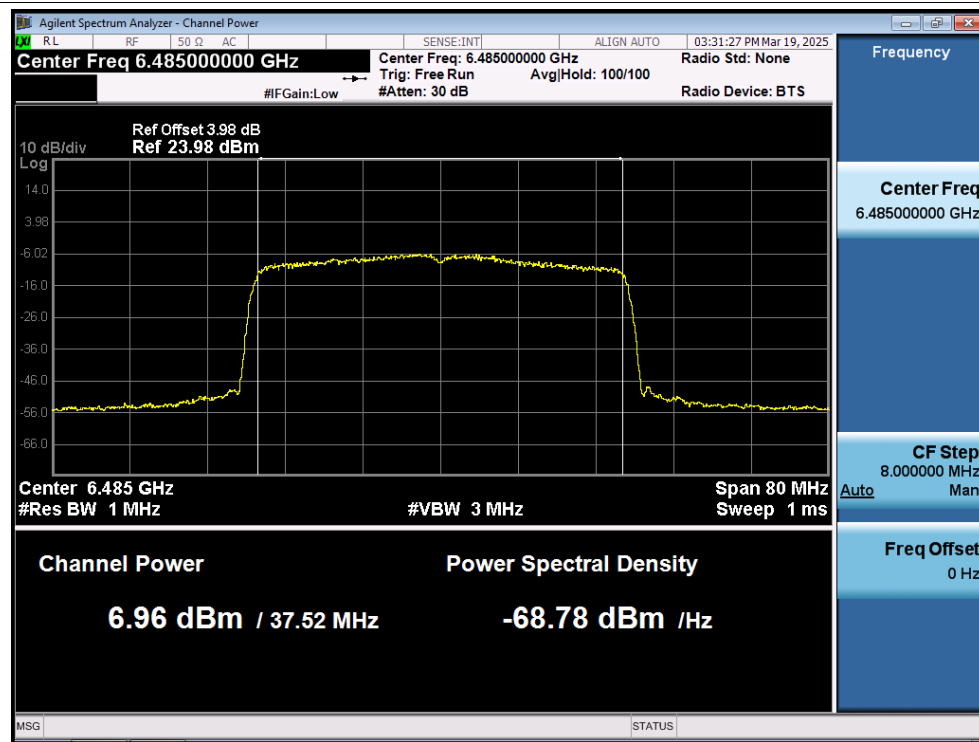




Power NVNT ax40 6525MHz AntB

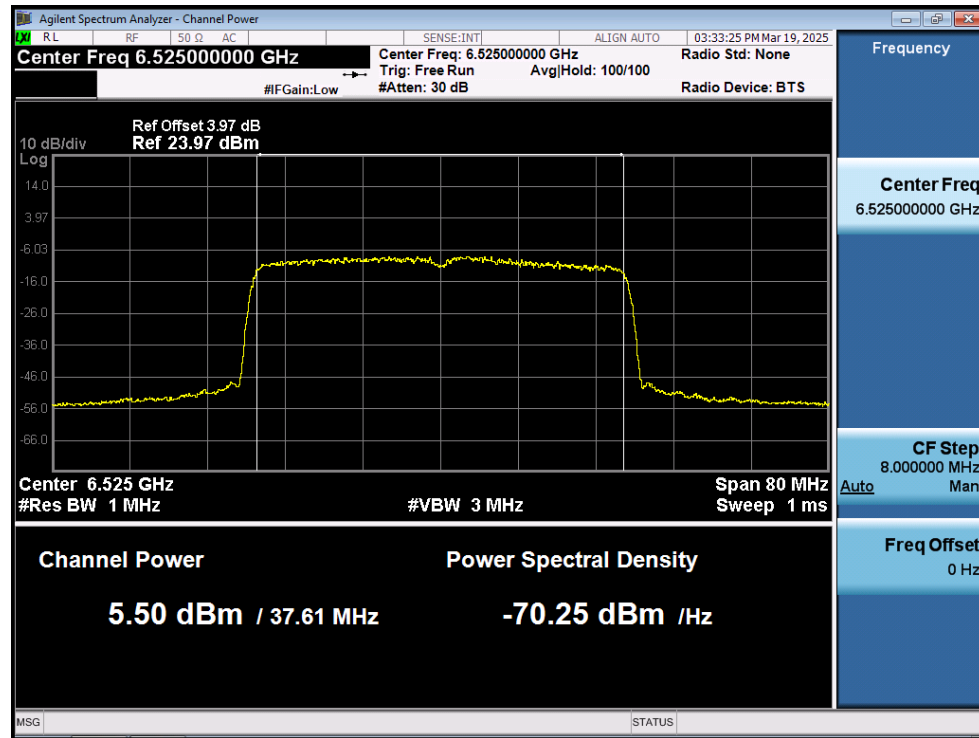


Power NVNT ax40 6565MHz AntB

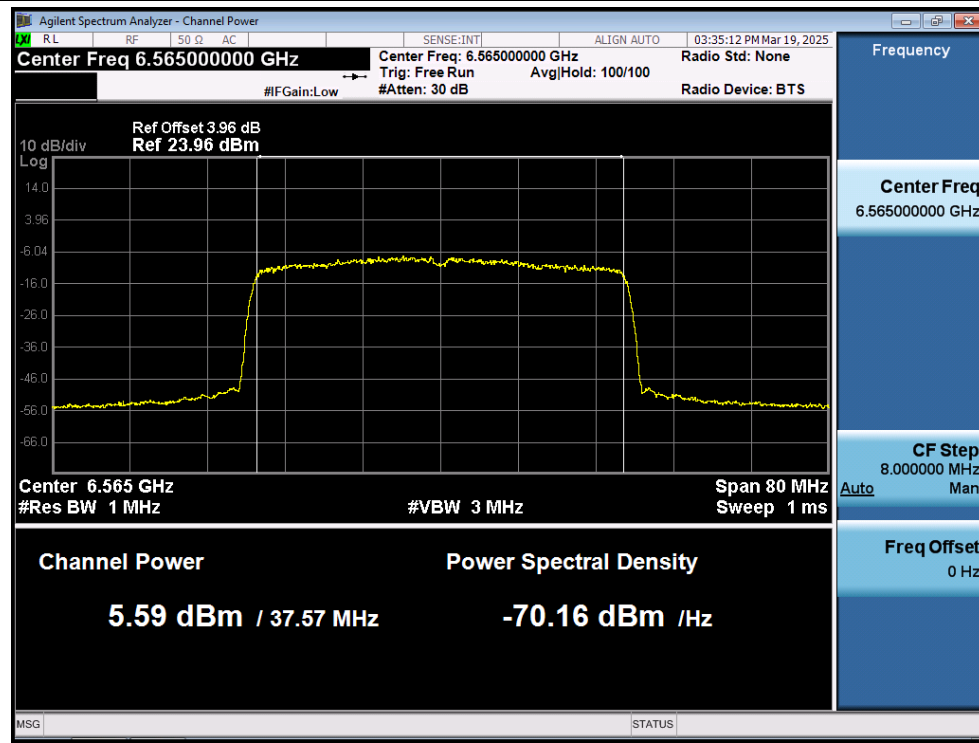




Power NVNT ax40 6685MHz AntB

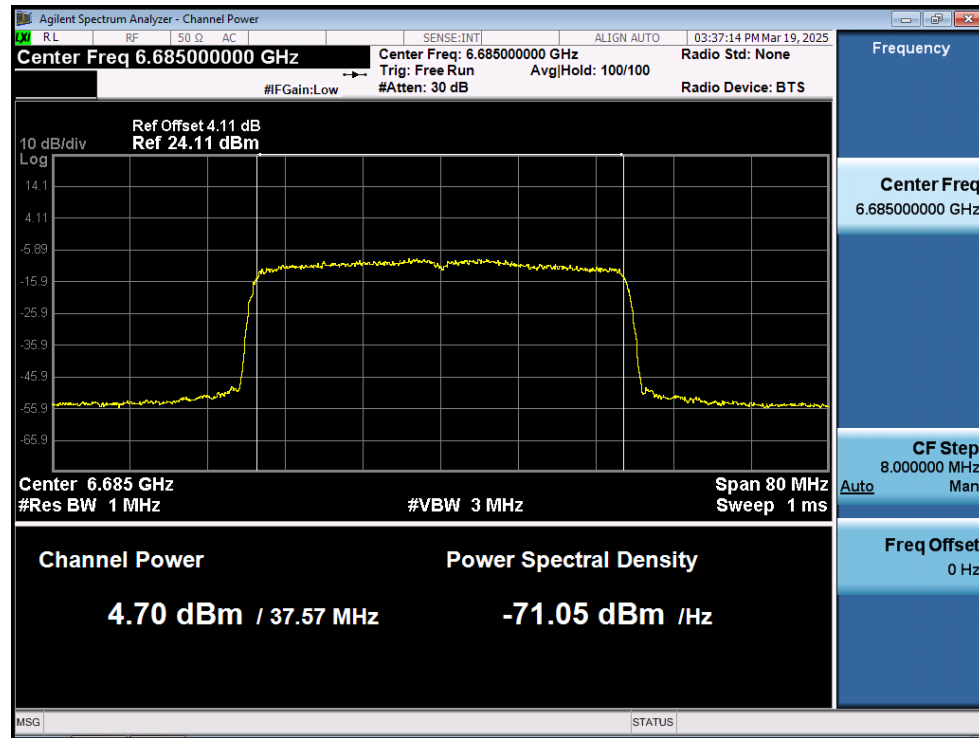


Power NVNT ax40 6845MHz AntB

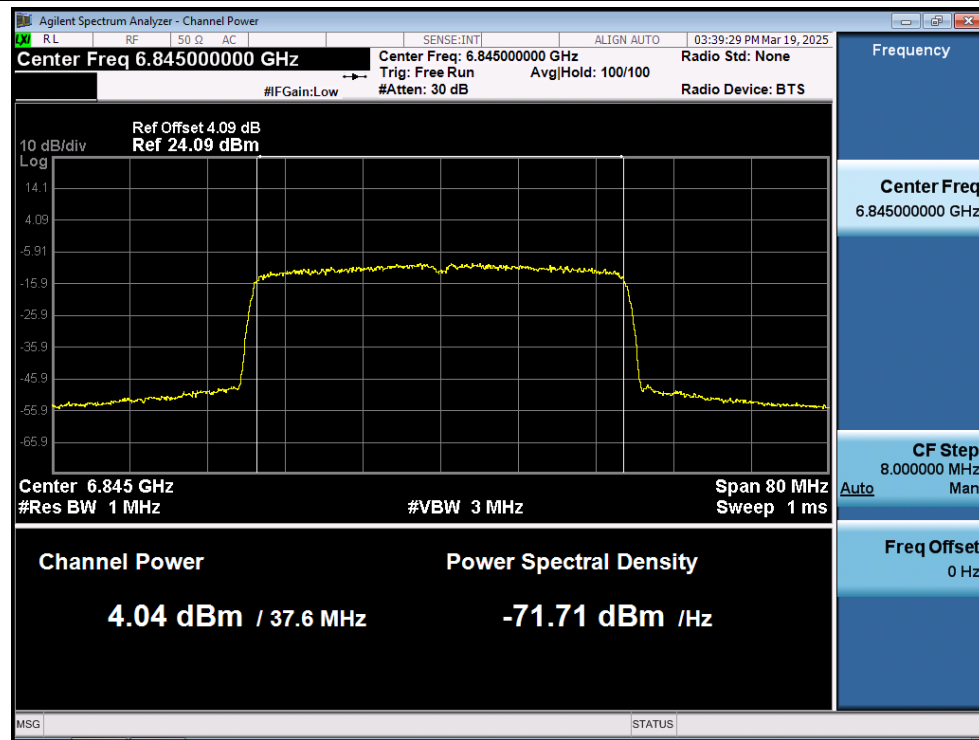




Power NVNT ax40 6885MHz AntB

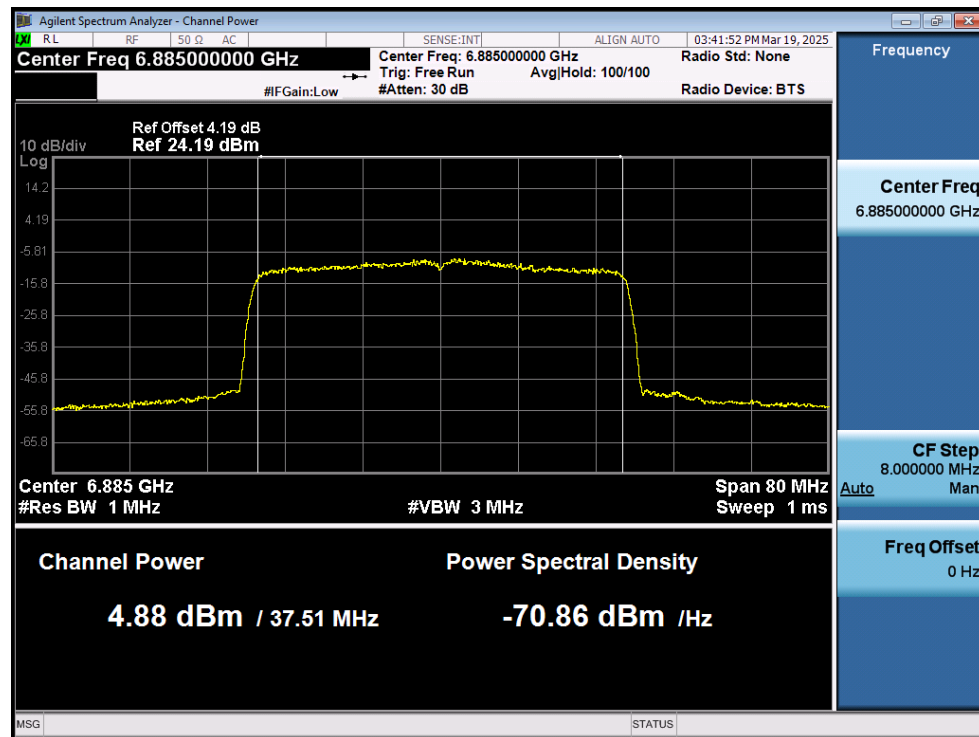


Power NVNT ax40 6925MHz AntB

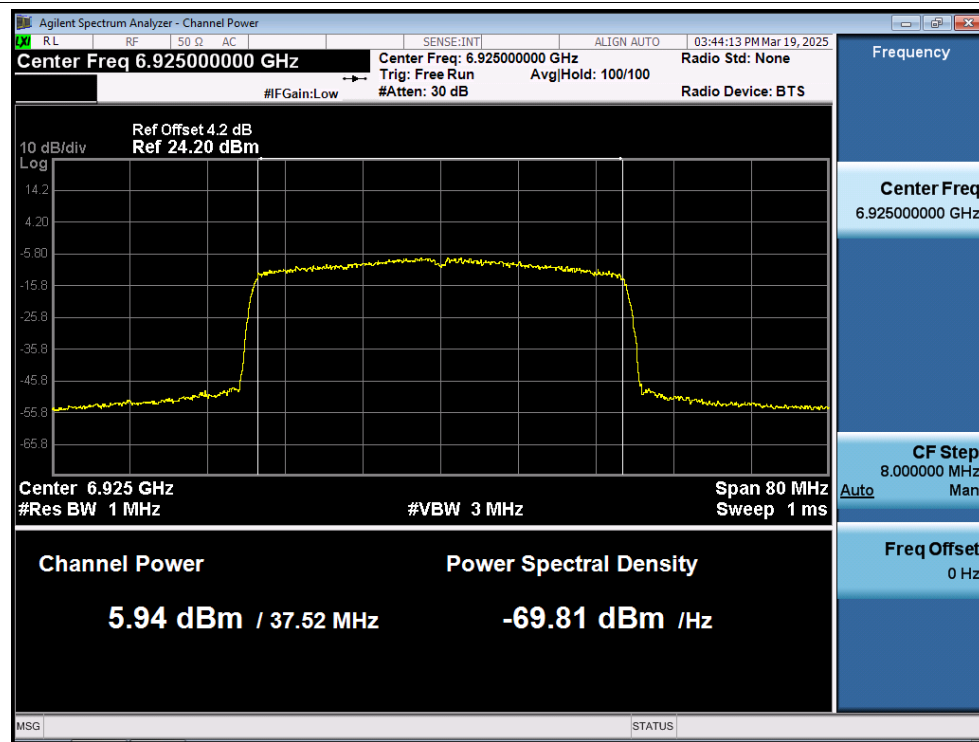




Power NVNT ax40 6965MHz AntB

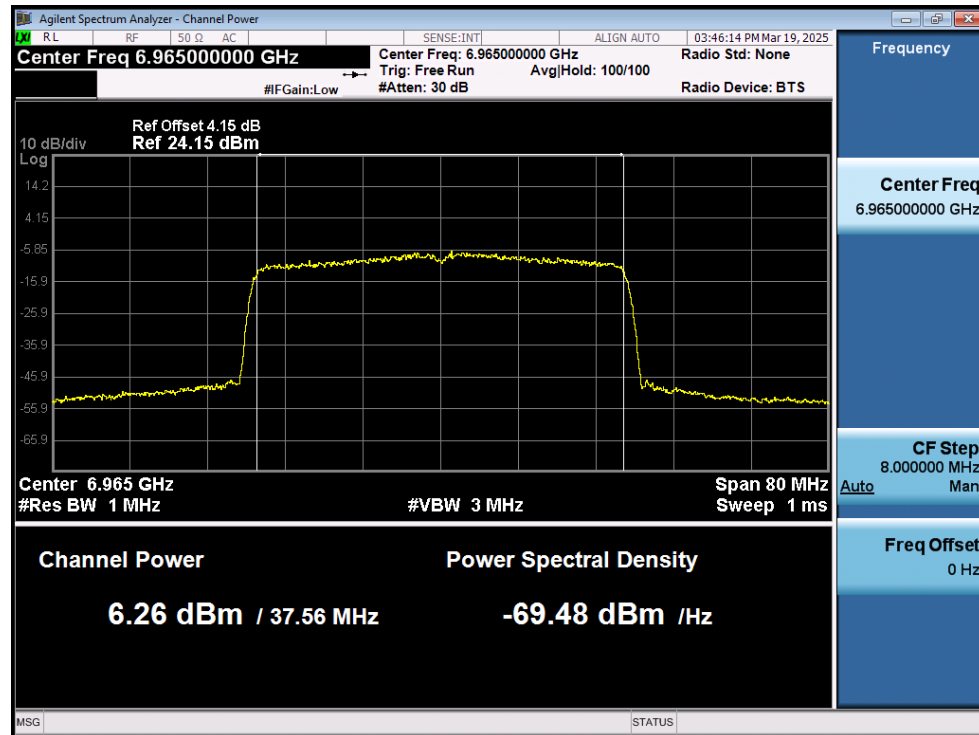


Power NVNT ax40 7085MHz AntB

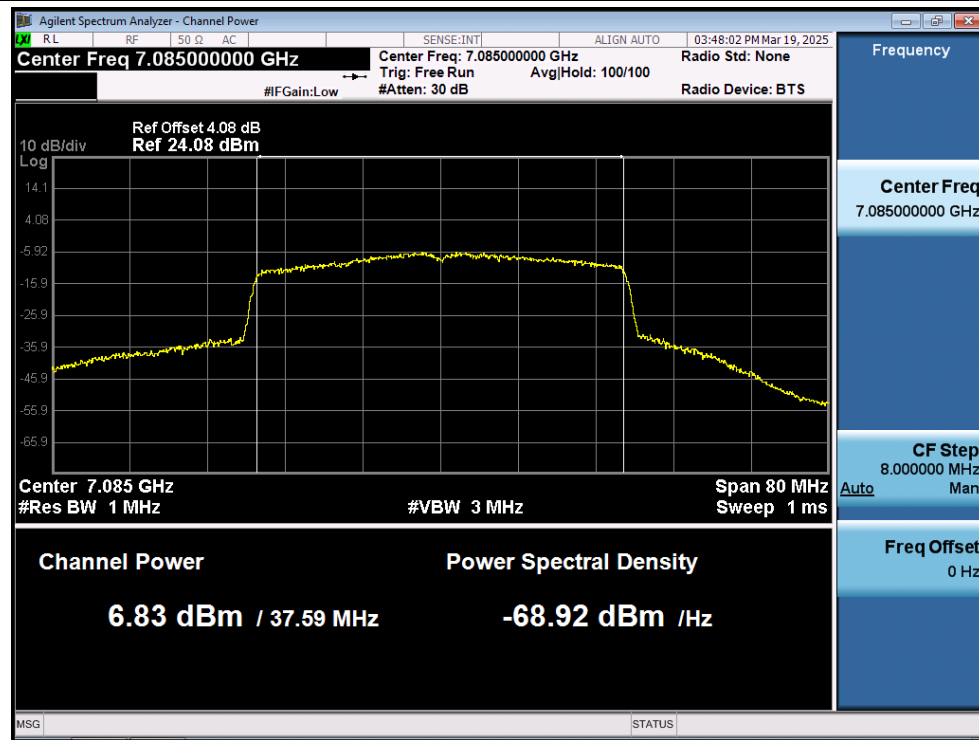




Power NVNT ax80 5985MHz AntA

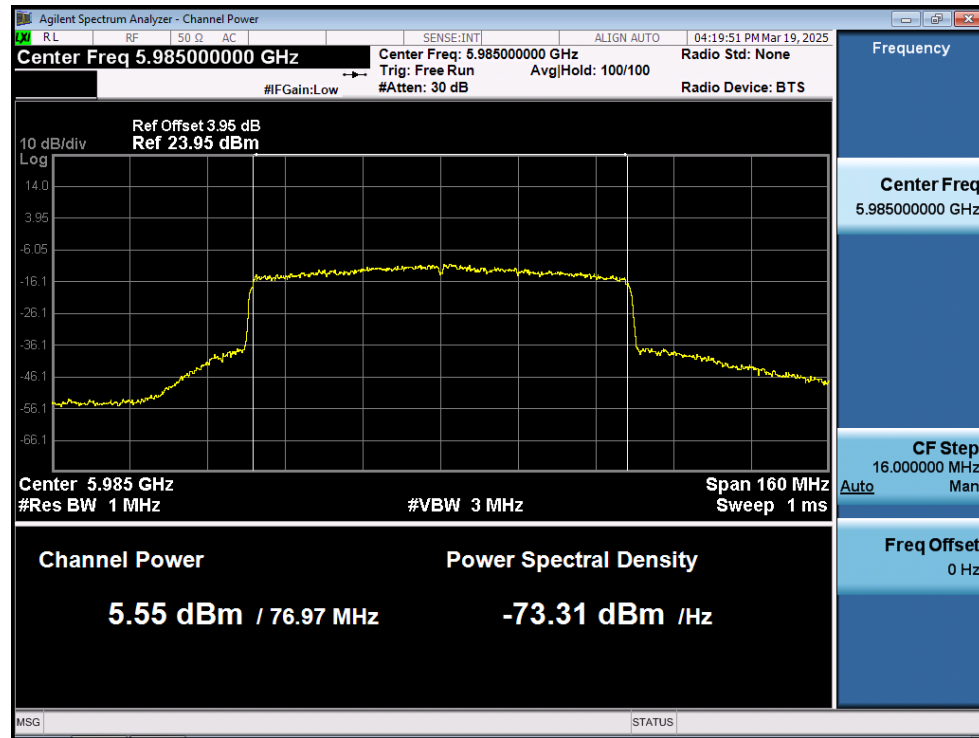


Power NVNT ax80 6145MHz AntA

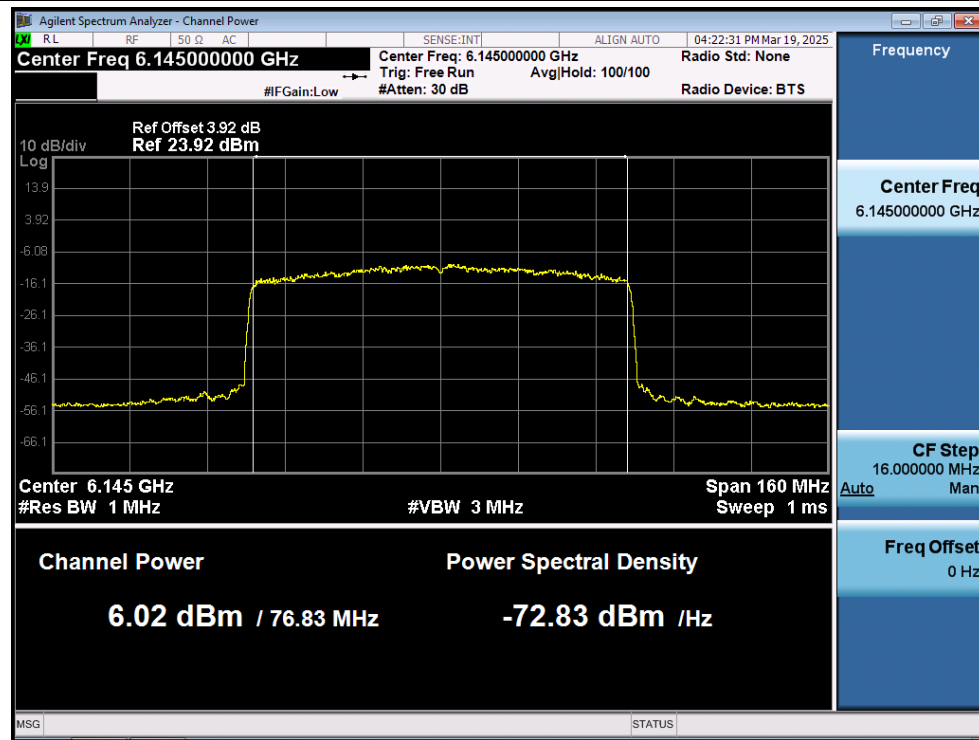




Power NVNT ax80 6385MHz AntA

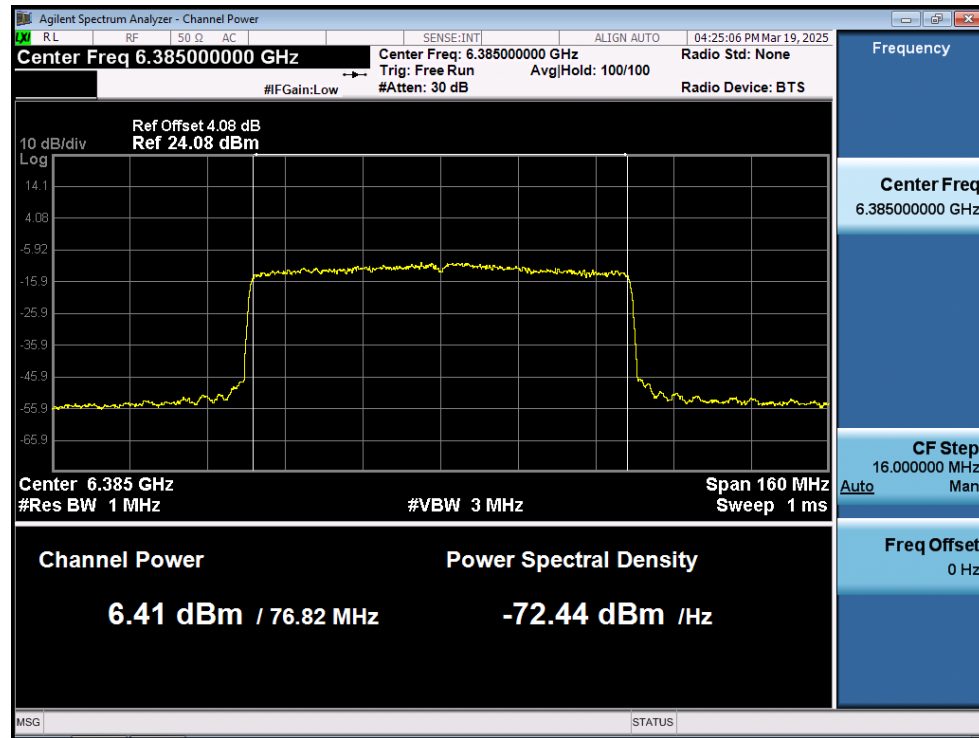


Power NVNT ax80 6465MHz AntA

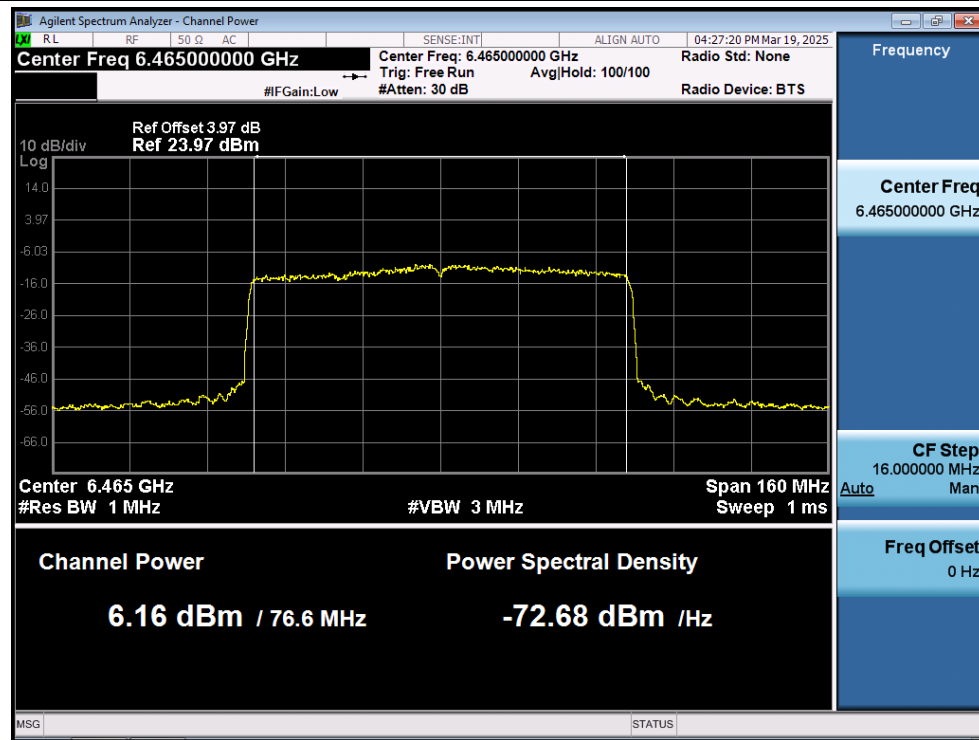




Power NVNT ax80 6545MHz AntA

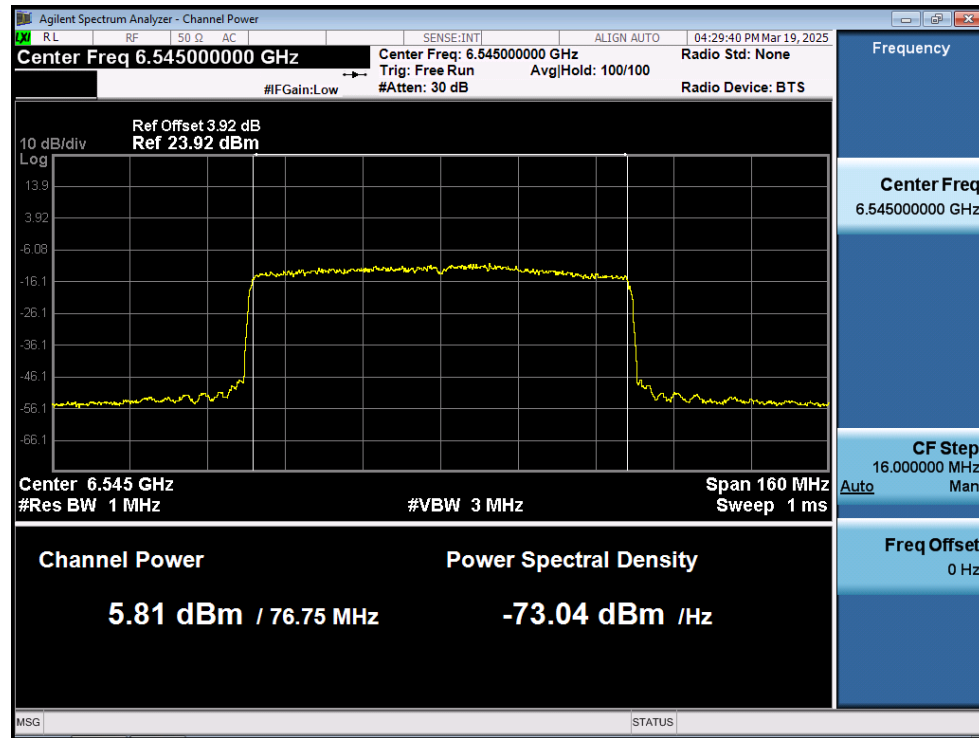


Power NVNT ax80 6625MHz AntA

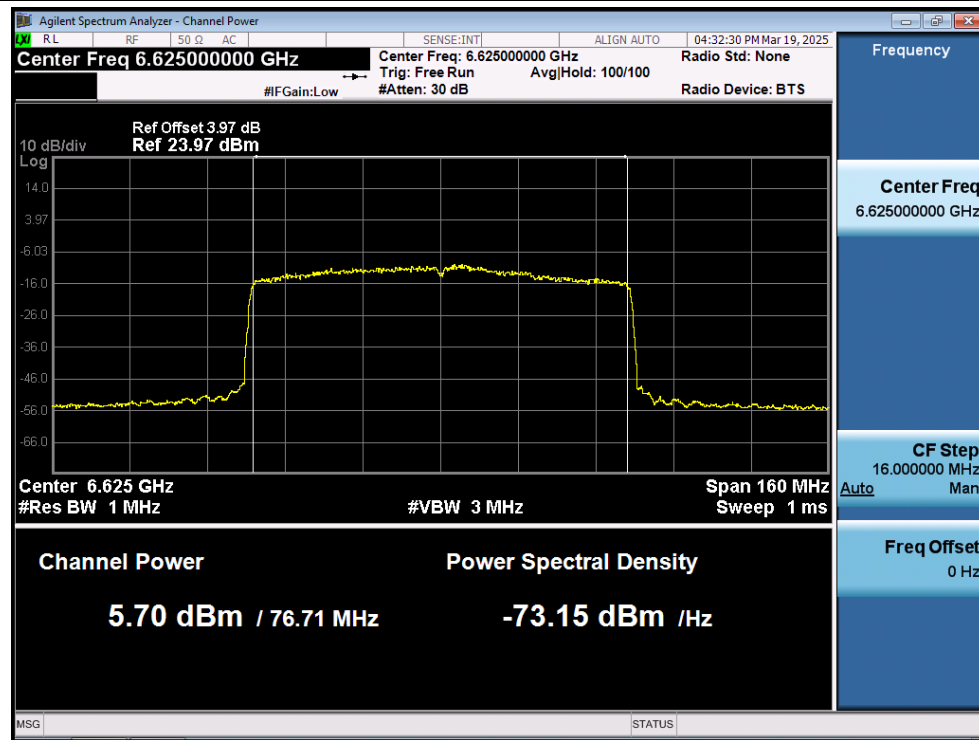




Power NVNT ax80 6705MHz AntA

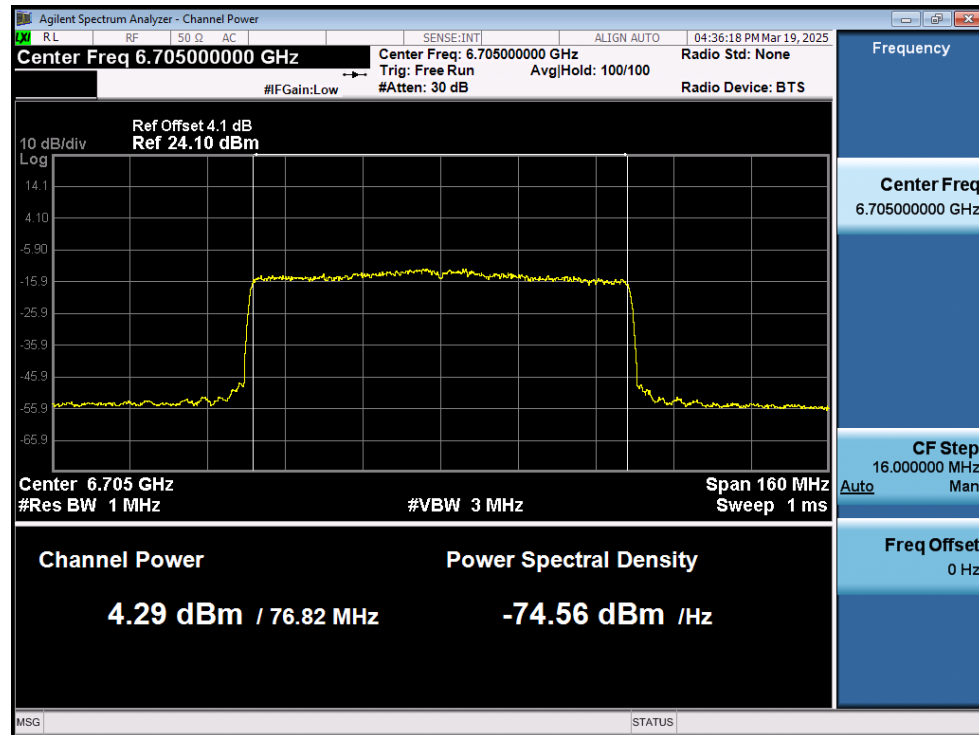


Power NVNT ax80 6785MHz AntA

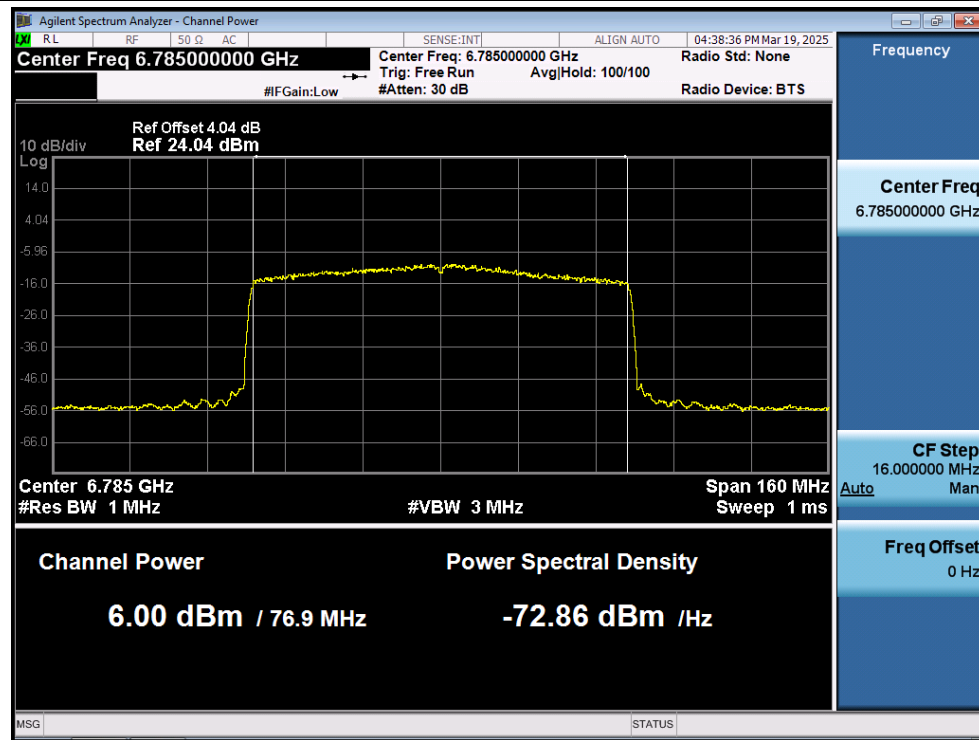




Power NVNT ax80 6865MHz AntA

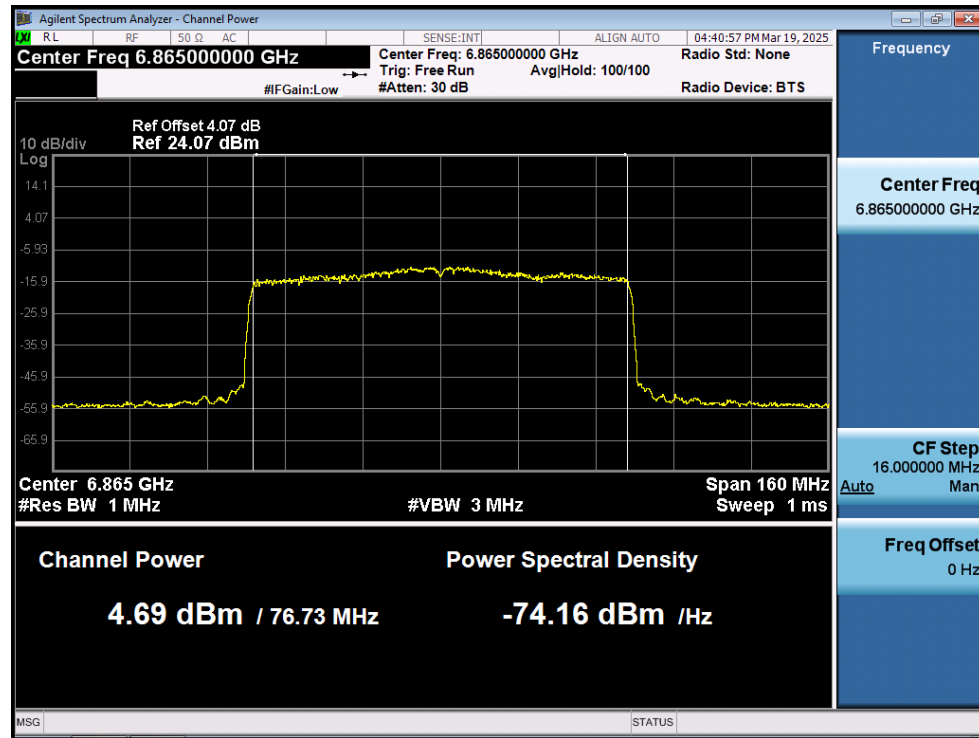


Power NVNT ax80 6945MHz AntA

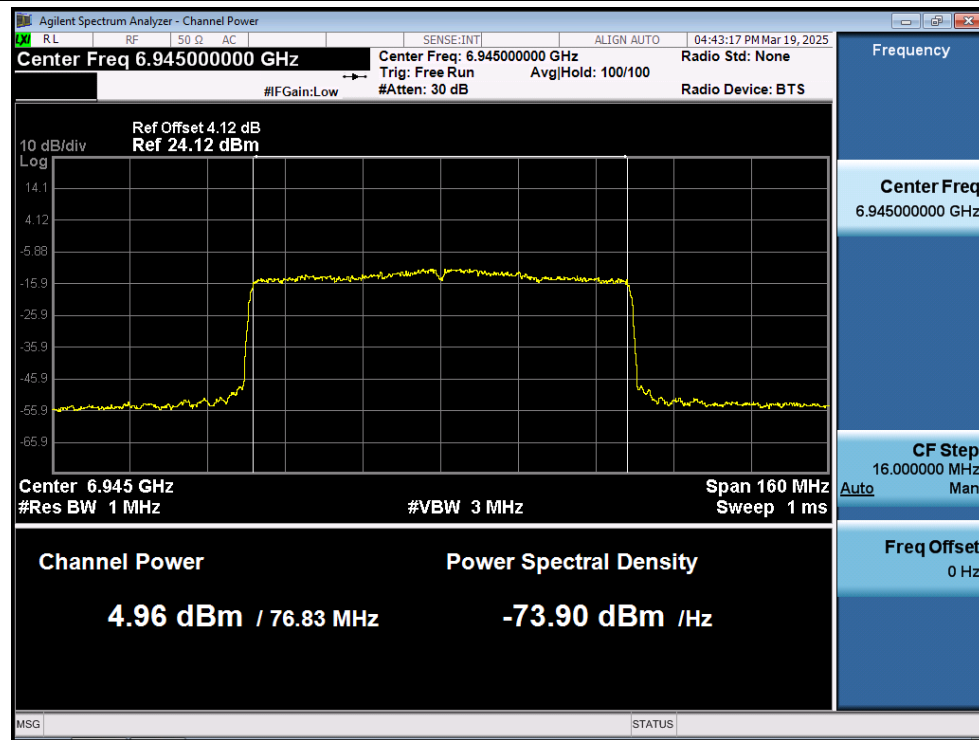




Power NVNT ax80 7025MHz AntA

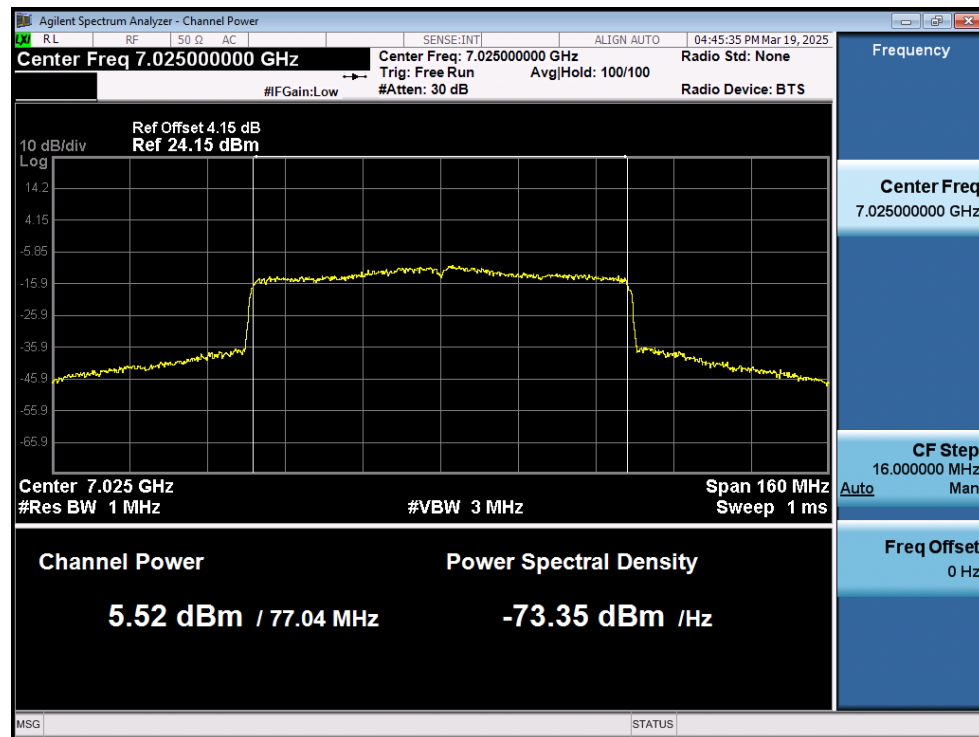


Power NVNT ax80 5985MHz AntB

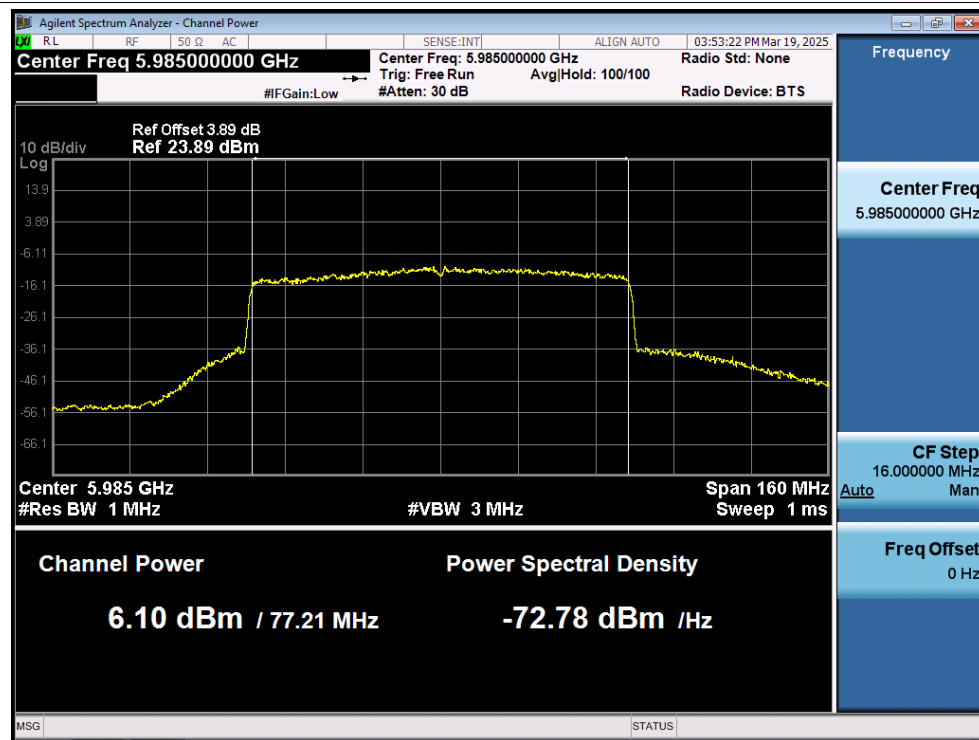



Power NVNT ax80 6145MHz AntB

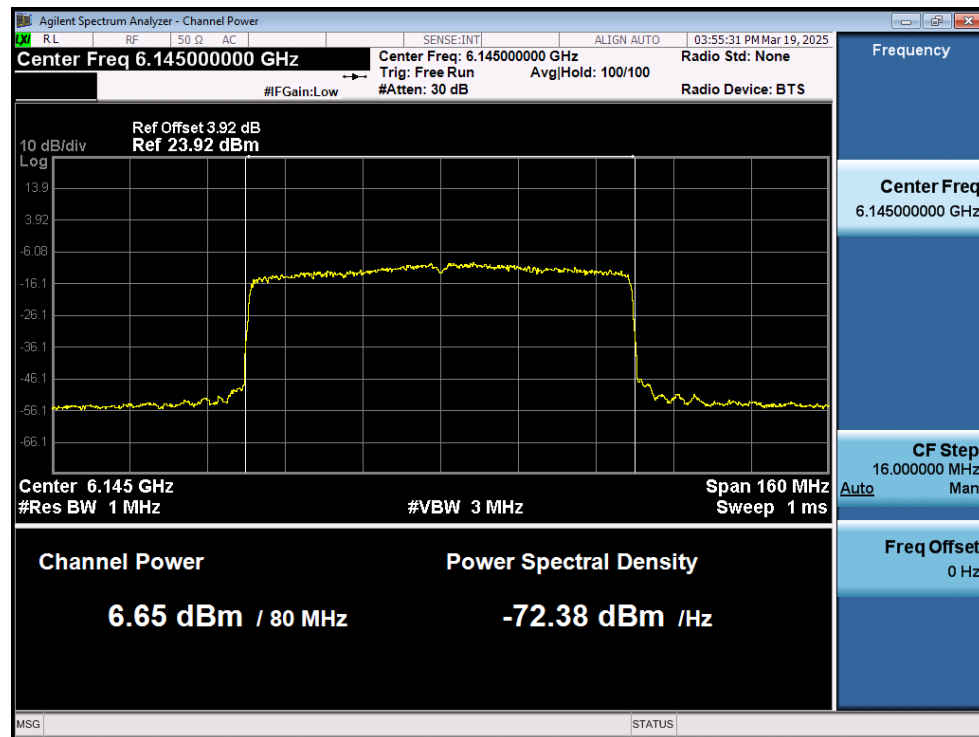

Power NVNT ax80 6385MHz AntB

