


Multifunctional Toothbrush Sterilizer



User Manual

Thank you for purchasing this product, please read the manual carefully before using it.

Product List

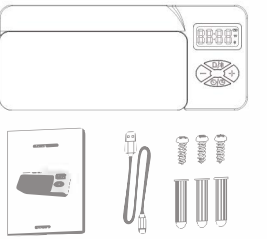

Multifunctional toothbrush sterilizer*1
Micro USB Cable*1
User manual*1
Screw set*3


Specifications

Product name: Multifunctional toothbrush sterilizer	Input: 5V / 1A
Product model: AC01	Rated voltage: 5V
Color: white + gray	Audio power: 3W
Product size: 190mm* 80mm* 57mm	Rated frequency: 50Hz
Material: ABS+PC	UV LED Power: 2-5mW


Notice

- Do not disassemble or modify this product.
- If you find that the power management light on the display is flashing, please charge it in time, otherwise the time will be inaccurate.
- When charging, the current should not exceed 1A, otherwise it will cause permanent damage to the electronic devices.
- Please choose a dry location that is not easy to be directly wetted by water to install this machine. This equipment uses a moderate waterproof design.
- Do not immerse the body directly in water, otherwise the electronic components of the machine will be permanently damaged.
- Do not use the product if the back shell of the fuselage is found to be deformed or raised, otherwise there will be safety hazards.
- Please stop using the product if you find that it cannot be charged or cannot be fully charged, the battery may be damaged.
- Please stop using the product if you find a peculiar smell or smoke from the fuselage, the electronic components may be damaged by moisture.

Parts Schematic

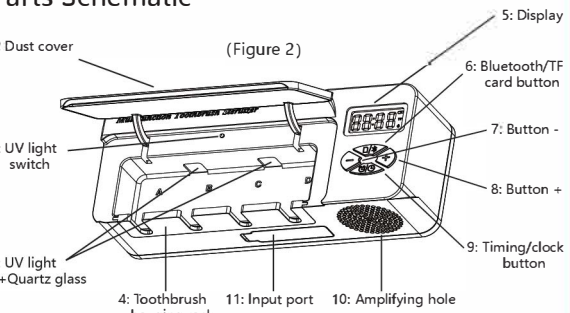

Input Port Details

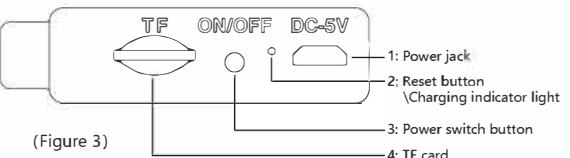

Input Port Instructions

- Turn on the silicone waterproof plug at the bottom of the fuselage, and you will see the content shown in (Picture 3).
- On the right is the Micro USB port for charging the host, and the left side of the charging port is the reset button hole.
- When charging is connected to the Micro USB port, the reset hole on the left side of the port will light up in red. The charging time is about 5 hours, and it will light up in green after charging.
- In the middle is the ON/OFF button, which is used to power on the electronic appliances of the equipment. Note: It must be turned on first, otherwise the device will not work normally.
- After the operation, please put back the silicone waterproof plug and make sure that the surface of the silicone waterproof plug is flush with the body.


Turn On

- Turn the bottom of the fuselage upwards, open the silicone waterproof rubber plug (Figure 3), and long press the ON/OFF button to turn on the machine. Note: It must be turned on first, otherwise the device will not work normally.
- After pressing the ON/OFF button, the device is powered on, the display screen lights up, and the time number "00:00" flashes.
- The power management indicator light on the far right side of the display is on, Bluetooth indicator light, and TF indicator light on the rightmost side of the display screen will light up and flash to remind. At this time, if there is no other operation, the flashing will automatically stop.
- After pressing the ON/OFF button, the ultraviolet light in the toothbrush disinfection compartment will flash three times to remind you that it is powered on.
- After 3 minutes without any operation, the display will automatically enter sleep mode, and the screen will turn to black at this time.
- When the machine crashes, please press the reset button in the reset hole with a needle to restart the machine.

Quick Operation Guide


- Take out the equipment from the package, and refer to (Figure 1) to check whether the equipment is in good condition, whether it is deformed or damaged, and whether all accessories are complete.
- Turn on the waterproof rubber plug at the bottom of the device and press the ON/OFF button to turn it on.
- Check whether the display on the front of the device is turned on, Check if the UV lamp has flashing light.
- Remove the back panel behind the device, tear off the double-sided tape on the back panel or directly use the attached screws to fix the toothbrush sterilizer in a suitable position and let it stand still.
- Insert the toothbrush sterilizer into the socket on the wall back panel and it can be used normally.

Button function operation diagram

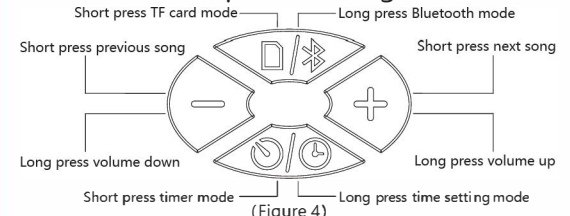


Time Settings

- After the machine is turned on, the display on the front of the fuselage will turn on, displaying the time number "00:00" and flashing, then the time can be set.
- Long press the clock button to set the time. the hour digit "00" of the time number will flash to remind (Figure 5), Press the "+" "-" buttons to adjust to standard time. Long press the clock button again, the minute digit "00" of the time digit will flash to remind (Figure 6), Press the "+" "-" buttons to adjust to standard time. After the time adjustment is completed, long press the clock button to end and exit the time setting.

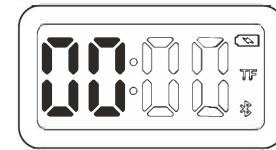

(Figure 5)

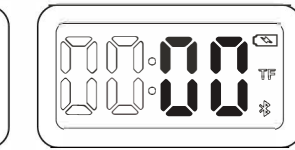

(Figure 6)

Manual of shower timer


- The timer has three time files to choose from, namely 10 minutes, 20 minutes, and 30 minutes.
- Short press the clock button once (Figure 7), it is 10 minutes bath time.
- Short press the clock button twice (Figure 7), which is a 20-minute bath time.
- Short press the clock button three times (Figure 7), which is a 30-minute bath time.
- When the bath time is selected, the currently selected time will be displayed on the display screen, and flashing reminders, the time will count down after 5 seconds.
- After the bathing time is over, the speaker will sound an alarm clock to remind you, and the reminding time is 30 seconds.
- When the alarm reminds, short press the clock button to stop ringing.



(Figure 7)

Toothbrush Disinfection Introduction


- Toothbrush disinfection and sterilization are performed automatically, without manual operation.
- Remove the dust cover (Figure 8), put the toothbrush in and put down the dust cover, the ultraviolet sterilization will automatically turn on.
- Each sterilization work lasts for 3 minutes and stops automatically.
- The disinfection function will be automatically turned on every 6 hours to supplement the sterilization and antibacterial effects, and will automatically stop for 180 seconds.
- When the anti-virus cover is closed, the anti-virus function will automatically turn on, and when the dust cover is opened, the anti-virus function will automatically stop.

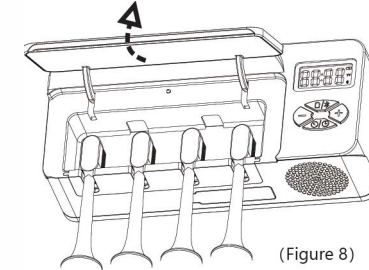

(Figure 8)

Cleaning and maintenance


- The equipment should be cleaned regularly. Wipe it with a dry warm cloth, not directly rinsed with water.
- Toothbrush holder is used to hang toothbrushes. The toothbrush holder can be removed and cleaned, which is more convenient. (Figure 9)
- Please do not use sharp and hard objects when placing the cleaning brush head in the bin, so as not to damage the glass filter.

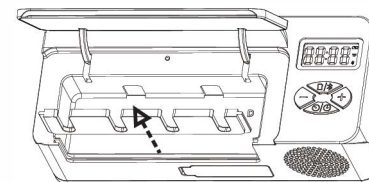

(Figure 9)

Use of the player

- The player has two modes of TF card and Bluetooth to choose from.
- Short press the Bluetooth/TF card button (Figure 10), the player will turn on and automatically play the music in the TF card.
- The TF logo light on the right side of the display is always on.
- This machine does not contain TF card, you need to buy it yourself.
- Long press the Bluetooth/TF card button, the player will turn on the Bluetooth mode to connect to the mobile phone or Pad, and operate the mobile phone or Pad to play music.
- During music playback, short press the Bluetooth/TF card button to stop music playback.

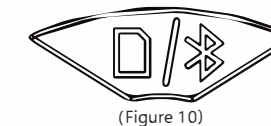

(Figure 10)

Bluetooth connection


- When the machine is turned on, long press the Bluetooth/TF card button (Figure 10), the player will turn on the Bluetooth mode, and the Bluetooth identification light on the right side of the display will light up and flash to remind you.
- Turn on the Bluetooth function on the phone, search for the Bluetooth name AC01 and click Connect.
- When the Bluetooth indicator light on the display stops flashing and changes to a long light, it means that the Bluetooth device has been connected.

Volume adjustment and song selection

- Long press the "+" and "-" buttons to adjust the volume of the player. (Figure 4)
- Short press the "+" and "-" buttons to select up and down songs.



Installation

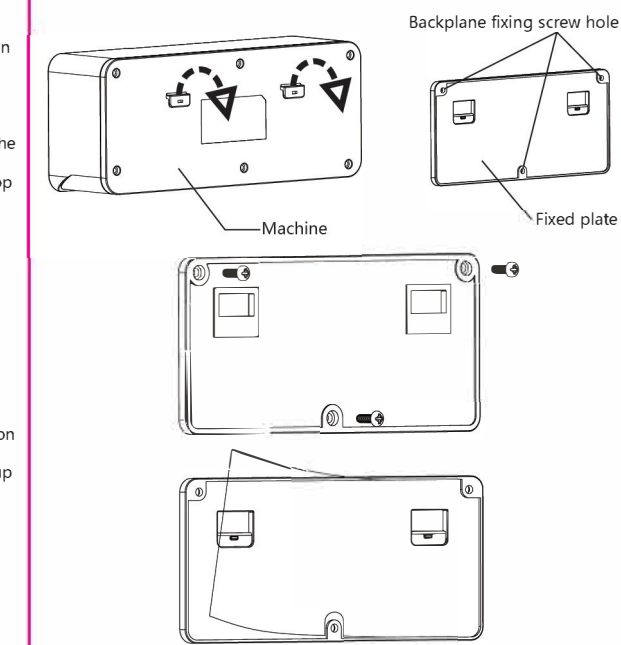

- Two installation methods: 3M glue paste and screw fixation.
- Fix the backplane in a proper position first, and then snap the buckle on the back of the fuselage into the slot on the backplane to complete the installation.
- Please choose a location that is not easy to be sprayed directly by water to install this machine.
- If you choose 3M glue for installation, please make sure the place to be pasted is dry and clean, paste the backboard and compact it, and let it stand for 12 hours before installing the equipment.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.