




M1-S^{PRO}

HELMET BLUETOOTH INTERCOM

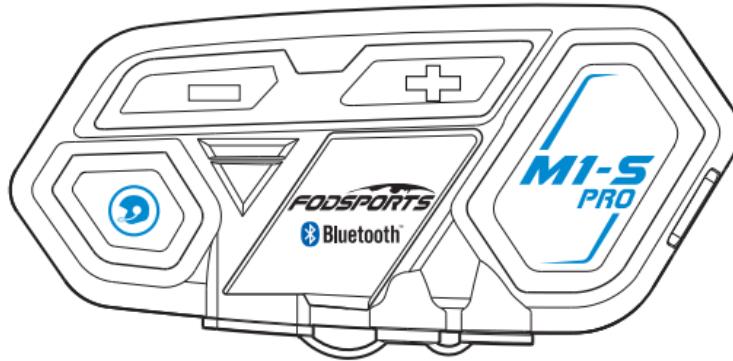

User Manual




FOCUS ON OUTDOOR SPORTS


CONTENTS

1. Package Include -----	2
2. Charging -----	3
3. Installation & Disassembly -----	4
4. Button and basic function operation -----	8
5. Device Pairing -----	11
6. Multi-device pairing connection -----	15
7. Technical Specifications -----	20
8. Q&A / Warning -----	20
9. Statement / Warranty/After-Sale Service -----	21

1. Package Include :

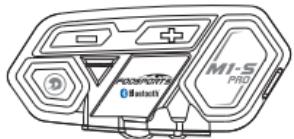

M1-S PRO

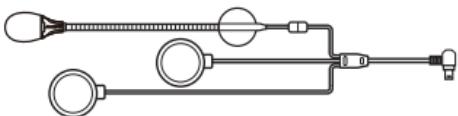


Speakers & Hard Tube Microphone



USB Cable



Wired Microphone

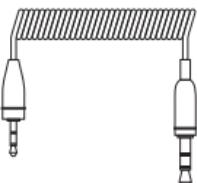

2.5mm to 3.5mm Cable




Unit base



Metal Clip



3M Glue Velcro

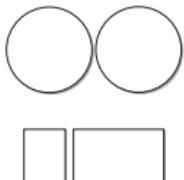

Velcro



EVA Booster




User Manual



User Guide

2.Charging:

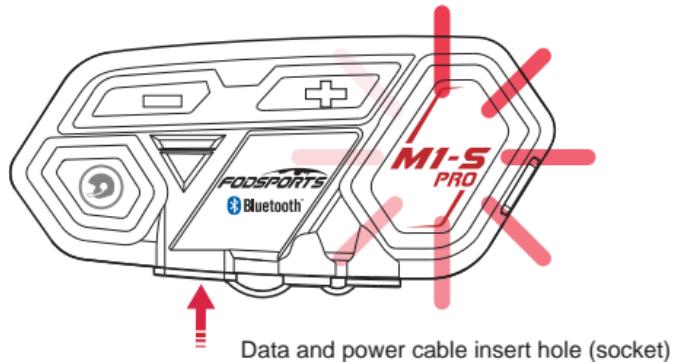


- 2.1 The function button lights up red when charging, and the red light goes out after finishing(As shown below). Please charge before using for the first time.
- 2.2 Please use a qualified charger 5V/1A±0.5A.
- 2.3 Please keep charging at least once every 2 months If the product is not used for a long time.

3. Installation & Disassembly

3.1 Speaker Installation



1.1. Open the inner helmet lining on the ear position and attach the velcro loops.

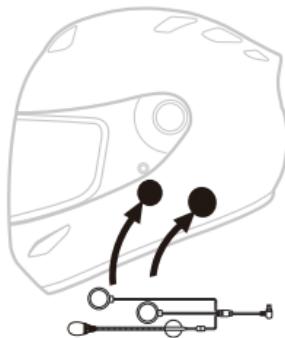


2. Attach the Headphone with Velcro hook to the loop (the short-line speaker is on the left).



3. Place Velcro on the right position on the left side of the helmet, match the microphone with the mouth position, and tidy up the cable and lining.

Remark: the microphone should be closed to and aim at the mouth as possible. The speakers are as close to ears as possible. If installation position of the speaker is too deep so that the speaker is too far away from the ear, the sponge in accessory may be used to jack up.

3.2 Fixed by clamp

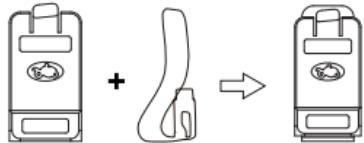

1.Find and assemble the Unit base and metal clip.

2.Fix the base on the right position.



3. Assemble the M1 S-PLUS: Insert the snap of the bottom of the host in to the groove of the base, press the host to the base so that the clip of the base buckle the top of the host.

4. Insert the microphone and earphone connection line, installation complete.

3.3 Disassembly of the Device




1.1.Pull out the headset plug.



2. Press the upper clamp buckle and move the device upward to remove it.

4. Button and basic function operation

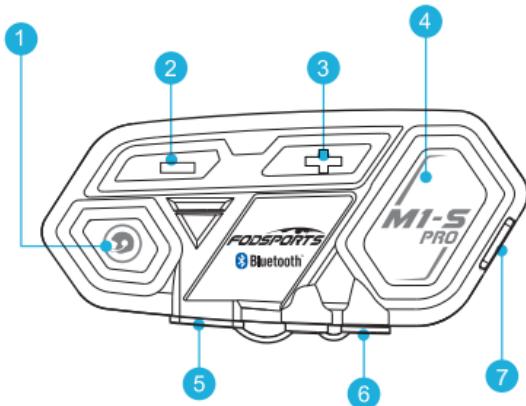

Outlook / Button

1. Intercom
2. Volume -
3. Volume +
4. Function
5. MICRO-5Pin port (charging / Data)
6. AUX In
7. Speaker/microphone assembly insert hole

Switch On / OFF

Switch On: Long press Intercom button and Function button at the same time for 3 seconds, Voice message will also say " Welcome to FODSPORTS Bluetooth Communication System".

Switch Off: Long press Intercom button and Function button at the same time for 3 seconds. Voice message will also say "Power off".

*For first time use,please recharge the device until the red light is off.

Power Detect & Notification Function

M1-S PRO has power detect function, when device is on, long press Function button and Volume- button at the same time for 3 seconds, recorded voice message will tell you:

Power over 90%

Power over 50%

Power lower than 50%

Low Power Notification

When power lower than 20%, red light flash in the function button and voice message will remind "Power lower than 20%, please recharge immediately".

When power lower than 10%, red light flash in the function button and voice message will remind "Power lower than 10%, will be turning off. please recharge immediately".

Cellphone

Answering Call: Short press Function button.

Hangup Call: Call ended, short press Function button.

Refuse Call: Long press Function button for 2 seconds.


Redial: Short press Function button twice.

Volume Up: Short press Volume+ button.

Volume Down: Short press Volume- button.

Switch manual/automatic answering calls : While in standby, press and hold the intercom button and volume “+” “-” button at the same time for 3 seconds.(Default: answer incoming calls automatically)

Voice Command

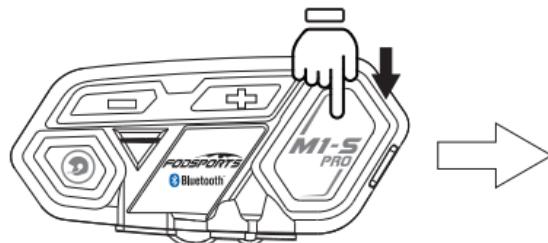

Short press function button once.



Automatically switch on voice command input function

When your M1-S PRO is paired up with cellphone. Short press function button once, will automatically switch on the voice command function (only for iOS and Android).

Cellphone must have voice command function.

Music Function

Play: Short press Volume+ button twice.

Pause: Short press Volume+ button twice.

Volume Up: Short press Volume+ button once.

Volume Down: Short press Volume- button once.

Play Previous: Long press Volume+ button 2 seconds.

Play Next: Long press Volume- button 2 seconds.

Intercom Function


Switch Intercom On: Short press Intercom button.

Switch Intercom Off: Short press Intercom button.

Volume Up: Short press Volume+ button .

Volume Down: Short press Volume- button .

Memory Clear

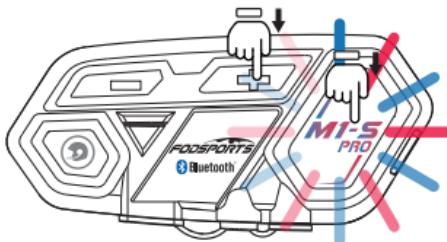


Memory Clear: When device is on, press Function and Volume+ buttons at the same time for 5 seconds. Then MI-S PRO will clear the pairing memory with other devices. The red and blue lights flash at the same time, clearing memory completely.

5.Device Pairing


5.1 Pairing Modes

5.1.1 Passive pairing mode

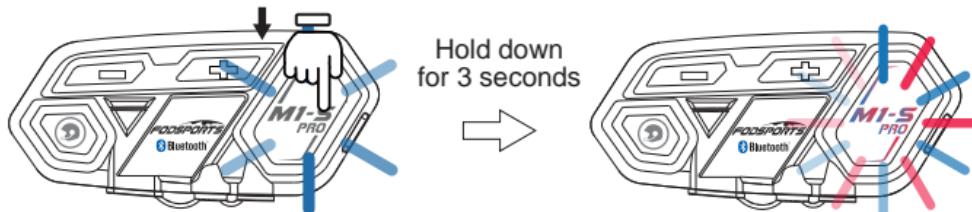

When device is on, long press Function button to enter Pairing Mode, red and blue lights flash quickly, voice notice "pairing". Pairing mode for connection to Bluetooth devices such as mobile phones and Bluetooth GPS.


5.1.2 Active search mode

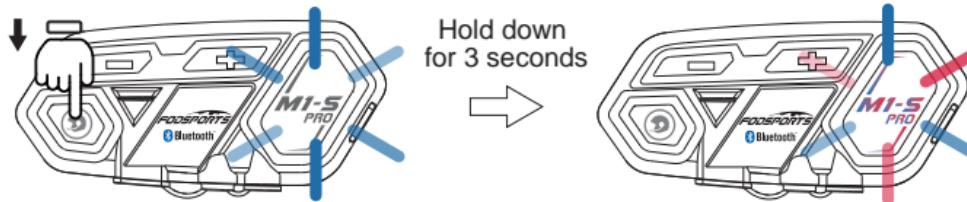

When device is on, long press Intercom button to enter Search Mode , red and blue lights flash slowly, voice


message says “ Searching ”. Search mode only use for intercom function connection between M1-S PRO devices.

5.2 (A) M1-S PRO connect with (B) M1-S PRO

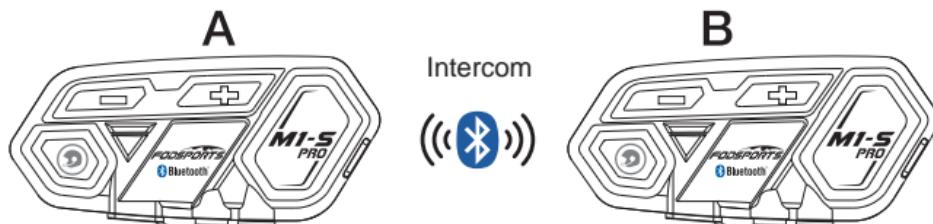


A M1-S PRO is on positive search mode(refer to 5.1.2), B M1-S PRO is on passive search mode(refer to 5.1 .1),A and B M1-S PRO change from flashing red and blue lights alternately to function and intercom buttons flashing blue lights at the same time,connect successfully.

5.3 Pairing With Cellphone

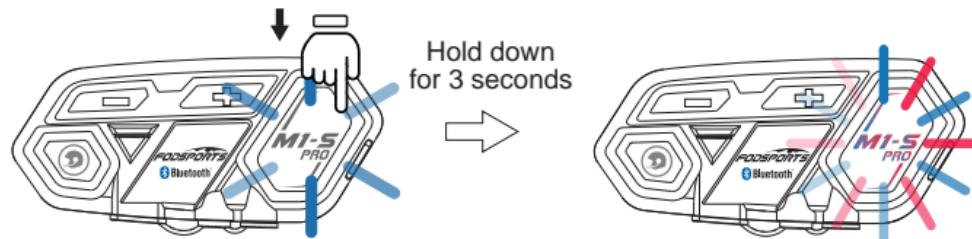

STEP1. When device is on, long press Function button, red and blue light flash quickly, entering passive pairing mode.(refer to 5.1.1)

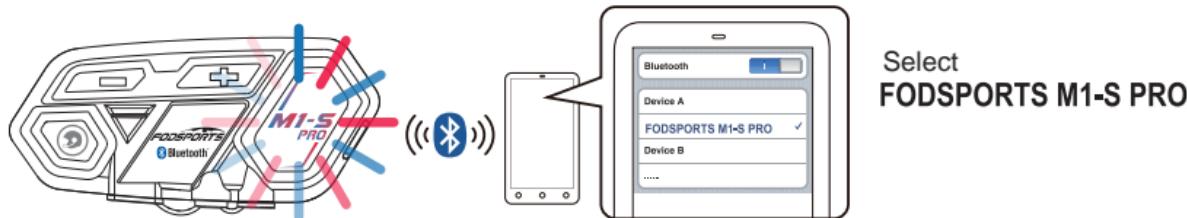

STEP2. Turn on cellphone Bluetooth, Select“ FODSPORTS M1-S PRO”,the pairing is complete. Voice message will notice “Device Connected”.

5.4 Connect with two phones




Step1 . Connect to the first phone(refer to 5.3)

Step2 . Long press the Function button, M1-S PRO on passive search mode, connect to the second phone (refer to 5.3)

Notice: M1-S PRO can connect with two phones, but only support one phone for audio input.


5.5 Wire Connecting

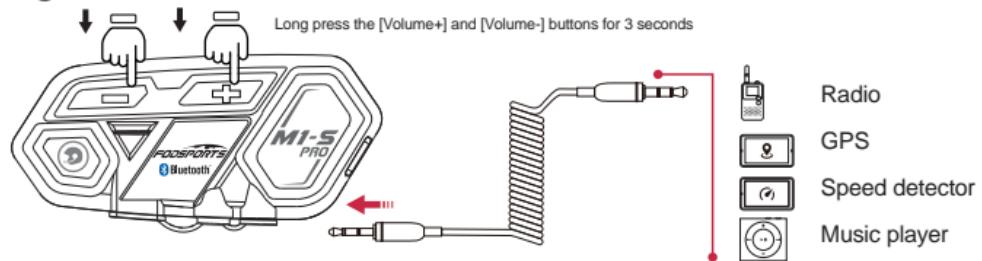

Any device with 3.5mm connector can transmit voice signal to M1-S PRO.

When device wire connected by 2.5mm to 3.5mm cable to M1-S PRO, Complete the wired sound source input.


Long press the [Volume+] and [Volume-] buttons for 3 seconds to turn on or turn off the wired audio input.

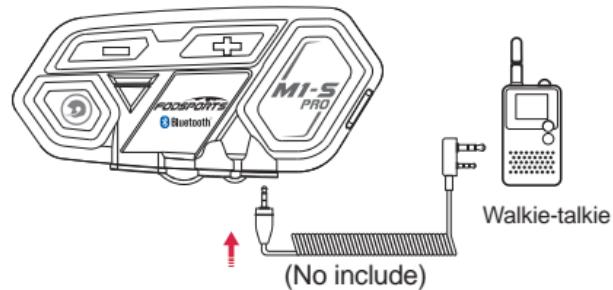

You need to purchase a cable if you need a wired connection for Walkie-talkie equipment.

6. Multi-device pairing connection

6.1 Occasions: Rider A connect with Passenger B for intercom. Then A connect with two bluetooth devices and one wired equipment and B connect with one bluetooth device(as shown below).

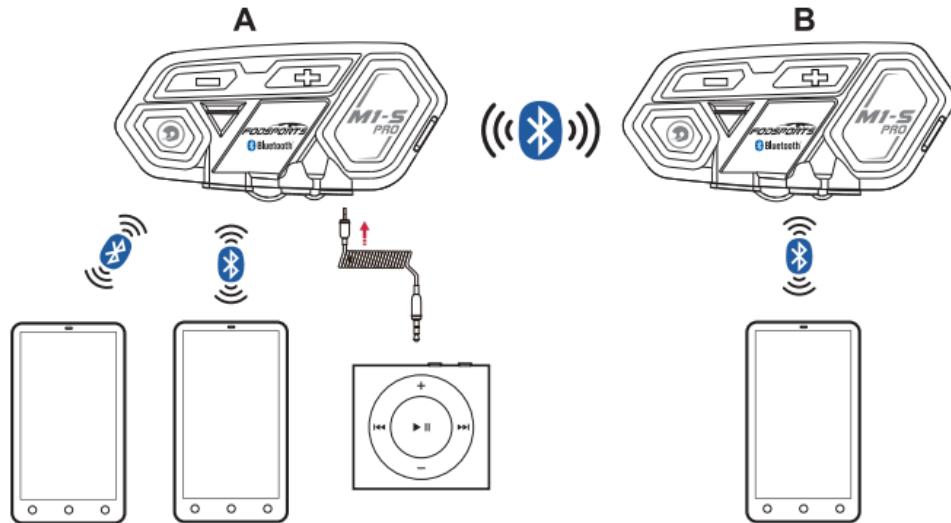

Step 1. A M1-S PRO connect with B M1-S PRO(refer to 5.2)

Step 2. Short press one time A or B intercom button to disconnect intercom

Step 3. A connect with 2 phones(refer to 5.4)

Step 4. A use 2.5 mm to 3.5 mm AUX audio line to connect with one audio device


Step 5. B connect with one phone(blueooth device)


Step 6. Short press intercome button of A or B for connection.

Notice: If A or B need to use the audio function of phone(blueooth device), you need to disconnect the intercom.

6.2 Multiple Intercom

6.2.1.M1-S PRO equipped with multiple intercom function, recommended 4 units(A,B,C,D), pairing procedure as follow:

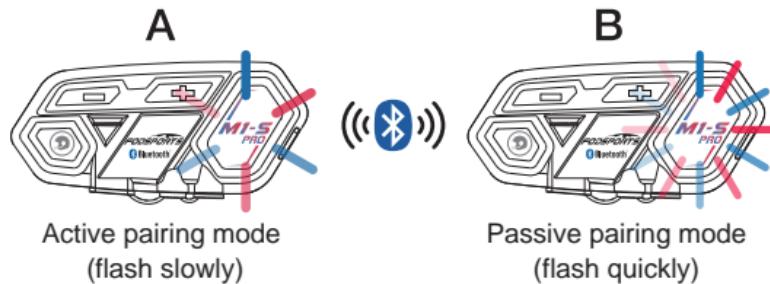

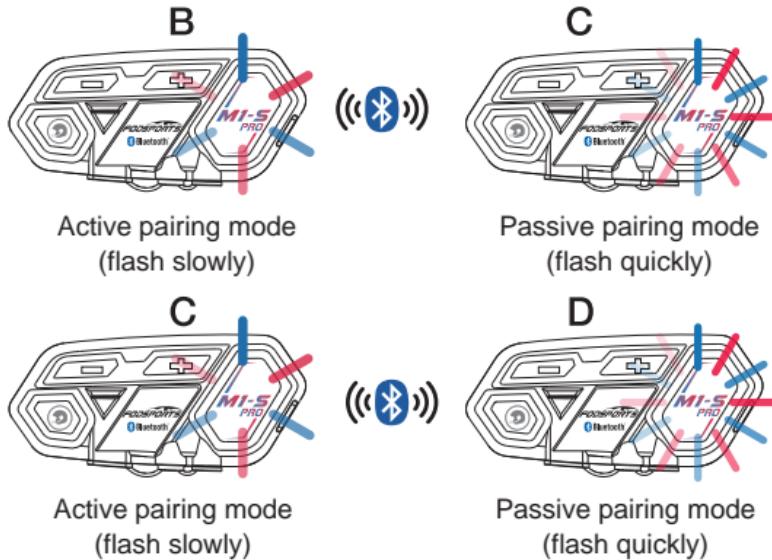

Step 1: Unit A is on positive search mode(refer to 5.1.2), Unit B is on passive search mode(refer to 5.1.1), Unit A and Unit B change from flashing red and blue lights alternately to function button and intercom button flashing blue lights at the same time,connect successfully.Short press the intercom button of Unit B for one time, exit intercom state temporarily.

Step 2: Unit B is on positive search mode(refer to 5.1.2), Unit C is on passive search mode(refer to 5.1.1), Unit B and Unit C change from flashing red and blue lights alternately to function button and intercom button

flashing blue lights at the same time, connect successfully. Short press the intercom button of Unit C for one time, exit intercom state temporarily.

Step 3: Unit C is on positive search mode(refer to 5.1.2), Unit D is on passive search mode(refer to 5.1.1), Unit C and Unit D change from flashing red and blue lights alternately to function button and intercom button flashing blue lights at the same time, connect successfully.

Step 4: The intercom buttons and function buttons of Unit A, B, C and D flash blue light at the same time, the connection of group intercom successfully.

*You can connect more M1-S PRO by repeating the above methods.

Notice: The first and the last one M1-S PRO can connect with another 2 Bluetooth devices. The M1-S PRO in the middle connection position of the group can connect with an additional Bluetooth device.


For example: When in the group intercom mode, Unit B and C can only connect with one bluetooth device. Unit A and D can connect with two bluetooth devices.

***Intercom Interruption**

In multiple intercoms mode, if there is an incoming call caused one unit away from the connection, after call, will reconnected automatically. If interruption is caused by distance or bad signal, please press intercom button to reconnect.

6.2.2 Memory Connection Function

M1-S PRO will remember paired units, but after switch off and want to reconnect again, please follow the procedure:

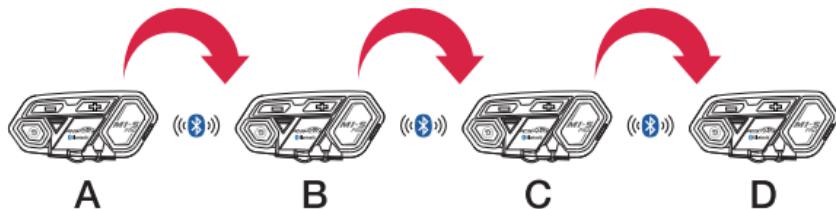

STEP1. Switch off all 4 units(A,B,C,D) and all Bluetooth devices connected to the headset such as cellphone and GPS. (It will affect the pairing)

STEP2. Switch on all 4 units(A,B,C,D) in the same time(long press intercom and function buttons about 3 seconds).

STEP3. Short press one intercom button of the 4 M1-S PRO and they flash blue and red lights in the same time. Memory connection start successfully.

STEP4. After all 4 units reconnected , switch on original connected Bluetooth devices such as cellphone and GPS.

7. Technical Specifications

Bluetooth Support: HSP,HFP,A2DP,AVRCP, AGHSP

Battery: lithium battery, 900mAh , 3.7v

Dimensions: 8.7cm * 4.2cm * 2.3cm

Weight: 44G, 92G(Include Headphone & Mic Kits)

Frequency Range: 2.4GHz~2.485GHz

Operating temperature: -20℃~50℃

Certification: CE FCC ROHS BQB TELEC

USB Adapter standard charge voltage: DC 5V±0.2V

USB Adapter standard charge circuit: DC 1A±0.5A

Charging time: 2~3 hours

8.Q&A / Warning

Q1: No sounds from one or two side speaker.

A1: Check device plug,needs to firmly connected.

Q2: Can it be recharged from bike USB charger while riding ?

A2: 1.Not recommended,unstable power source will cause damage on internal circuit, may cause unable to recharge/can't fully charged/can't switch on.

2.Power bank will be good.

Q3: When using radio,not transmission or continuous transmission.

A3: Check 2.5mm pin,has to insert firmly.The pin equipped with waterproof aprons,user might think its already plugged.

Q4: New device can't switch on.

A4: Recharged at least 30 minutes before switch use.

***Warning**

Sound Volume Warning

Long period or too loud may hurt hearing ability.

Disassemble or Modification

The M1-S PRO is precisely made in factory. Any disassemble or modification may damage the device, please do not tear any of the safety regulation and serial sticker from the device , that will void the warranty. Please contact us directly if needed .

9. Statement / Warranty/After-Sale Service

9.1 FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


This device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

9.2 After-Sale Service

For any quality problem or missing accessories, especially pairing problem between 2 or more M1-S PRO headsets, please feel free to contact us at email: winzon.cs@outlook.com. We're always here ready to help, will reply to you in 24 hours.

M1-S PRO

ルメットBluetoothインターバル

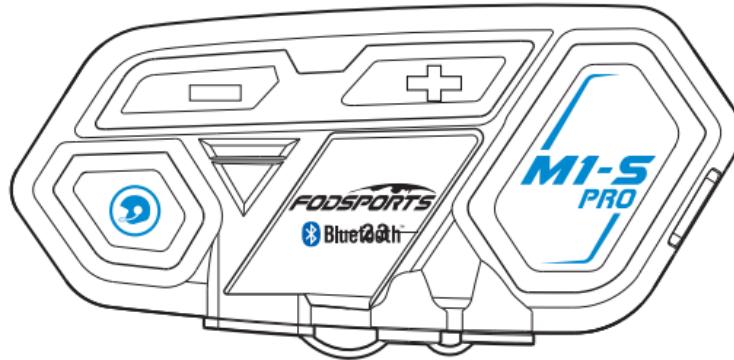


ユーザーマニュアル


目次

1. パッケージ内容	2
2. 充電	3
3. 取り付け&取り外し	4
4. ボタン機能及び基本操作	7
5. デバイスとのペアリング	11
6. マルチデバイス接続	15
7. 製品仕様	19
8. Q&A/警告	20
9. 声明/保証/アフターサービス	21

1. パッケージ内容

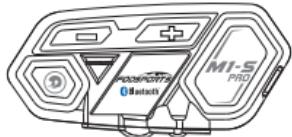

M1-S PRO本体

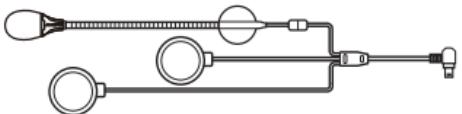


スピーカー&ハードマイク



USB充電ケーブル



ソフトマイク

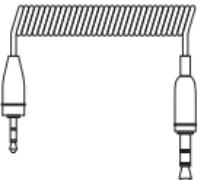

2.5mm～3.5mmケーブル




ユニットベース



メタルクリップ



3M両面テープ

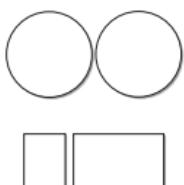

マジックテープ



EVAゴム




ユーザーマニュアル



ユーザーガイド

2. 充電

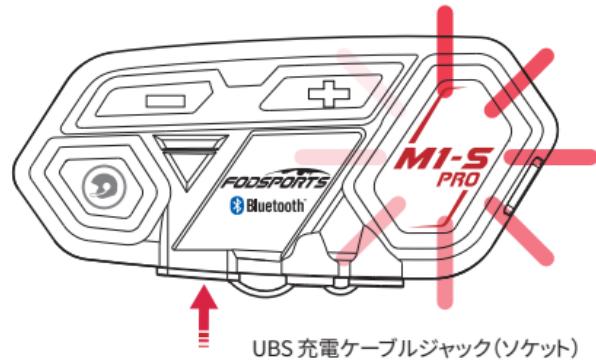

2.1 充電中に機能ボタンが赤く点灯し、満充電は赤ランプが消えます(下の通り)。

**初めての使用する場合は、赤ランプが消えるまで充電してください。

2.2 5V/1A±0.5Aの認定済みACアダプターを使用してください。

2.3 長期間使用されない場合は、最低でも2ヶ月に1回は充電してください。

3. 取り付け&取り外し

3.1スピーカーの取り付け



1. 耳の位置でインナーヘルメットの裏地を開き、マジックテープループを取り付けます。




2. ループにマジックテープフック付きのヘッドフォンを取り付けます(ショートラインスピーカーは左側にあります)。



3. ヘルメットの左側の正しい位置にマジックテープを置き、マイクを口の位置に合わせ、ケーブルと裏地を片付けます。

備考:マイクはできるだけ口元まで近づけてください。スピーカーはできるだけ耳に近い位置に設置してください。スピーカーの設置位置が深すぎて耳から遠い場合は、付属のスポンジでジャッキ上げる場合があります。

3.2 クランプで固定する

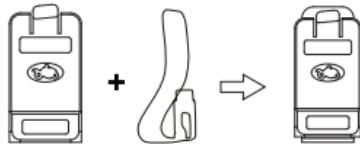

1.ユニットベースとメタルクリップを取り出し、組み立てます。

2.ベースを正しい位置に固定します。



3.M1-S PROを組み立てる:ベースの溝にホストの底のスナップを挿入してください。ベースのクリップがホストの上をバックルで止めるようにベースにホストを押し込んでください。

4.マイクとイヤホンの接続線を差し込んで、取り付け完了です。

3.3 デバイスを取り外す




1. ヘッドセットプラグを引き抜きます。



2. 上部のクランプバックルを押して、デバイスを
上に移動させ、取り外します。

4.ボタン機能及び基本操作

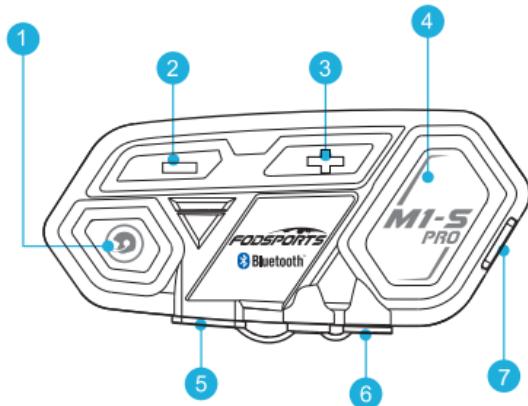

外観/ボタン名前

1. インターコム
2. 音量-
3. 音量+
4. 機能
5. 充電ジャック
6. AUXジャック
7. スピーカー&マイクのジャック

電源オン/オフ

電源オンにする: インターコムボタンと機能ボタンを同時に3秒長押しすると、「FODSPORTS Bluetoothコミュニケーションシステムへようこそ」という音声メッセージが流れます。

電源オフにする: インターコムボタンと機能ボタンを同時に3秒長押しすると、「パワーオフ」という音声メッセージが流れます。

*初めての使用する場合は、赤色のライトが消えるまでデバイスを充電してください。

電源検出&通知機能

M1-S PROには電源検出機能があり、デバイスがオンになっている時、音量-ボタンと音量+ボタンを同時に1回押すと、音声メッセージが以下のことをお知らせします。

バッテリー残量は90%以上あります

バッテリー残量は50%以上あります

バッテリー残量が50%以下です

低電力通知

電源が20%以下の場合、機能ボタンの赤ランプが点滅し、[バッテリー残量が20%以下です。

充電してください]という音声メッセージが流れます。

電源が10%以下の場合、機能ボタンの赤ランプが点滅し、[バッテリー残量が10%以下です。

まもなくパワーオフにします。すぐに充電してください]という音声メッセージが流れます。

携帯電話

電話に応答する:機能ボタンを1回押します。

電話を切る:機能ボタンを1回押します。

通話を拒否する:機能ボタンを2秒以上長押しします。


リダイアル:機能ボタンを2回押します。

音量を上げる:音量+ボタンを1回押します。

音量を下げる:音量-ボタンを1回押します。

手動/自動応答切り替え:待機中にインターホンボタンと音量「+」「-」ボタンを同時に3秒以上長押ししてください。
(初期設定:着信に自動的に応答)

音声コマンド

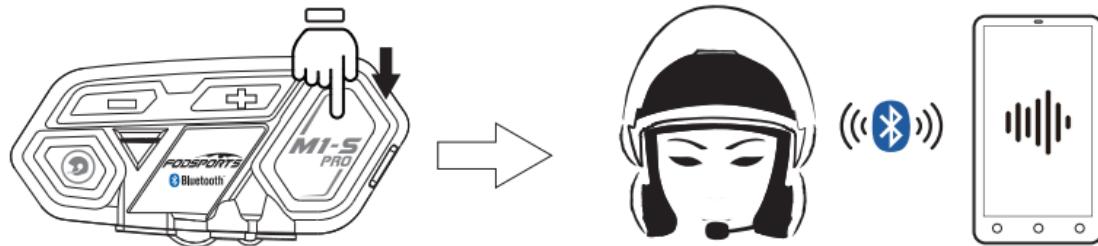

機能ボタンを1回押します

自動的に携帯電話の音声入力機能が開きます

M1-S PROと携帯電話をペアリングしている際、機能ボタンを1回押します、自動的に音声コマンド機能に切り替わります(iOSの場合のみ)。

携帯電話に音声コマンド機能が備わっている必要があります。

音楽機能


再生する:音量+ボタンを2回押します。

一時停止する:音量+ボタンを2回押します。
音量を上げる:音量+ボタンを1回押します。
音量を下げる:音量-ボタンを1回押します。
前の曲を再生する:音量+ボタンを2秒以上押します。
次の曲を再生する:音量-ボタンを2秒以上押します。

インターホン機能

インターホンをオンにする:インターホンボタンを1回押します。
インターホンをオフにする:インターホンボタンを1回押します。
音量を上げる:音量+ボタンを1回押します。
音量を下げる:音量-ボタンを1回押します。

メモリをクリアする

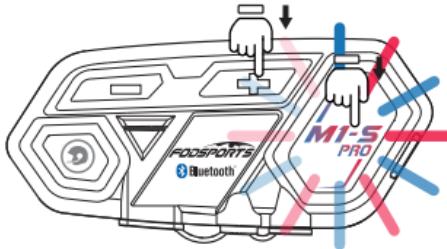

メモリをクリアする:待機中に、機能ボタンと音量+ボタンを5秒同時に長押しすると、他のデバイスとのペアリングメモリをクリアします。赤と青のライトが同時に点滅し、完全にメモリがクリアされます。

5. デバイスとのペアリング

5.1 接続モード

5.1.1 ペアリングモード



電源onの状態では機能ボタンを長押しし、ペアリングモードに入ります。赤と青のライトが高速点滅し、「ペアリング」という音声通知が流れます。携帯電話やBluetooth GPSなどのBluetooth機器と接続することができます。

5.1.2 検索モード



電源onの状態ではインターモンボタンを長押しし、検索モードに入ります。赤と青のライトがゆっくり点滅し、「検索中」


という音声メッセージが流れます。M1-S PRO同士のペアリング通信を使用することになります。

5.2 (A) M1-S PROと(B) M1-S PROを接続する




A M1-S PROは検索モード(5.1.2を参照)、B M1-S PROはペアリングモード(5.1.1を参照) にあり、A M1-S PROとB M1-S PROは赤と青のライトに交互に点滅する状態から、機能ボタンとインターホムボタンが青のライトに同時に点滅する状態に変わると、正常に接続されたことになります。

5.3 携帯電話との接続

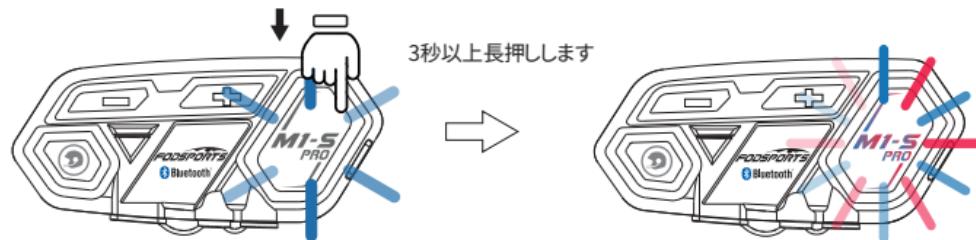

ステップ1.電源onの状態では機能ボタンを長押しし、赤と青のライトが高速点滅し、ペアリングモード(5.1.1を参照)に入ります。

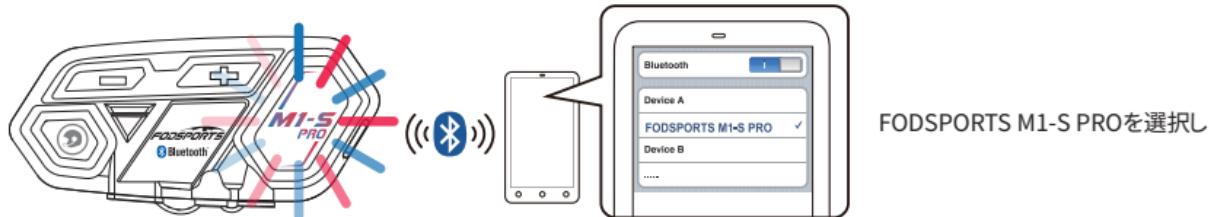

ステップ2.携帯電話のBluetoothをオンにして、「FODSPORTS M1-S PRO」を選択して、ペアリングが完了します。「デバイスの接続に成功しました」という音声メッセージが流れます。

5.4 2つの携帯電話との接続




ステップ1. 1台目の携帯電話と接続します(5.3を参照)


ステップ2. 機能ボタンを長押しし、M1-S PROをペアリングモードにして、2台目の携帯電話と接続します(5.3参照)

ご注意:M1-S PROは、2台の携帯電話と接続することができますが、オーディオインプットについては1台しかサポートされません。

5.5有線接続

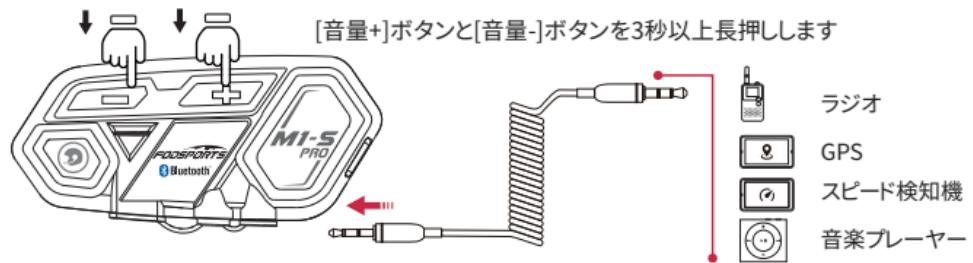


3.5mmコネクターと持つデバイスであれば、どのデバイスでもM1-S PROに音声信号を送信することができます。先に2.5mm-3.5mmケーブルをしっかりとM1-S PRO本体に差し込むかご確認ください。後に待機中に音量+ボタンと音量-ボタンを同時に3秒以上長押しすると、AUX機能がonになります。

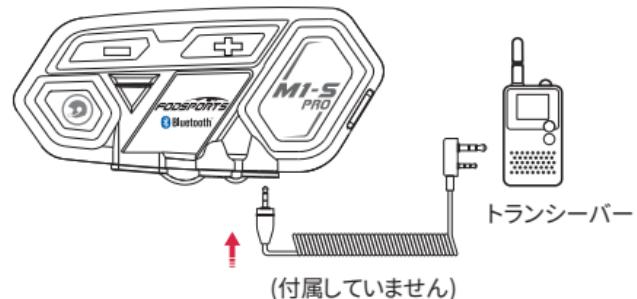

トランシーバーと有線接続する場合は、専用ケーブルを購入する必要があります。

6. マルチデバイス接続

6.1例:ライダーAはインターホンのために乗客Bと接続します。その後、Aは2つのBluetoothデバイスと1つの有線機器と接続し、Bは1つのBluetoothデバイス(以下の通り)を接続します。

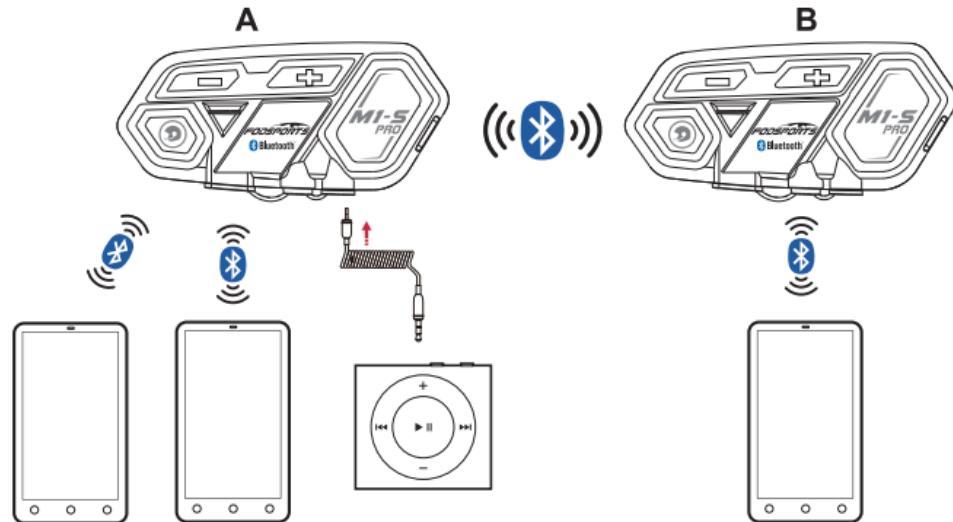

ステップ1. A M1-S PROとB M1-S PROを接続します(5.2を参照).

ステップ2. AまたはBのインターモトボタンを1回押し、インターモトの接続を解除します.

ステップ3. 2台の携帯電話とAを接続します(5.4を参照).

ステップ4. 2.5mm-3.5mmAUXケーブルを使用して、Aを1つのオーディオデバイスと接続します。


ステップ5. 1台の携帯電話(Bluetoothデバイス)とBを接続します.


ステップ6. AまたはBのインターモトボタンを1回押し、接続します。

ご注意:AまたはBが携帯電話(Bluetoothデバイス)のオーディオ機能を使用する必要がある場合は、インターモトの接続を解除する必要があります。

6.2複数のインターモト

6.2.1本製品は最大8人同時通信をサポートしますが、通信音質を保証する為に、4人-6人のペアリングをおすすめします。4台(A、B、C、D)のペアリング手順は以下の通りです。

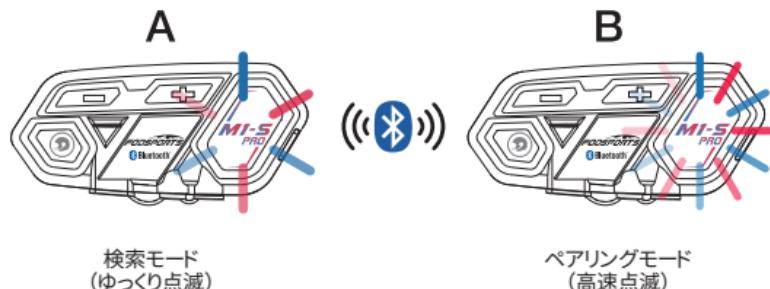

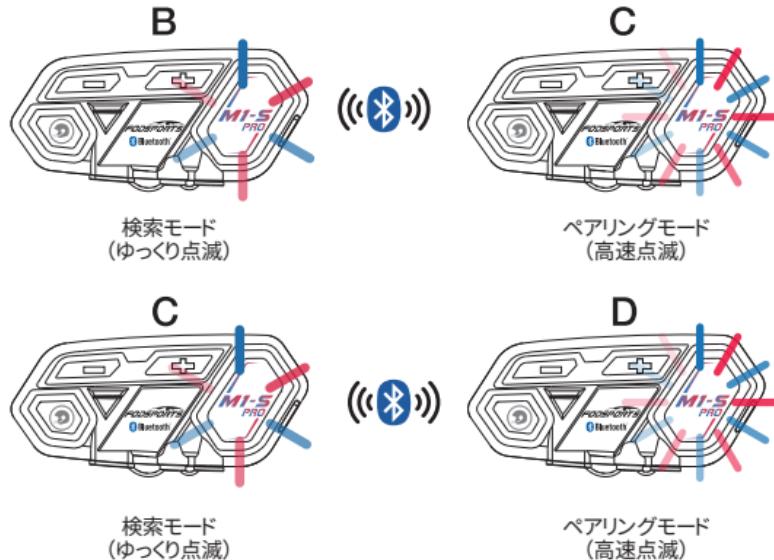

ステップ1: ユニットAは検索モード(5.1.2を参照)にあり、ユニットBはパッシブサーチモード(5.1.1を参照)にある状態で、ユニットAおよびユニットBは赤と青のライトに交互に点滅した状態から、機能ボタンとインターモークムボタンが青のライトが同時に点滅する状態に変わると、正常に接続されたことになります。ユニットBのインターモークムボタンを1回短く押し、インターモークム状態を一時的に終了させます。

ステップ2: ユニットBは検索モード(5.1.2を参照)にあり、ユニットCはパッシブサーチモード(5.1.1を参照)にあり、

ユニットBとユニットCは赤と青のライトが交互に点滅する状態から、機能ボタンとインターホンボタンが同時に青のライトに点滅する状態に変わると、正常に接続されたことになります。ユニットCのインターホンボタンを1回短く押し、インターホン状態を一時的に終了させます。

ステップ3：ユニットCが検索モードにあり、ユニットDがペアリングモード(5.1.1を参照)、ユニットCとユニットDは赤と青のライトが交互に点滅する状態から、機能ボタンとインターホンボタンが同時に青のライトに点滅する状態に変わると、正常に接続されたことになります。

ステップ4：ユニットA、ユニットB、ユニットC、ユニットDのインターホンボタンと機能ボタンの青のライトが同時に点滅すると、グループインターホンが正常に接続されたことになります。

*上記の方法を繰り返すことで、もっと多くのM1-S PROを接続することができます。

ご注意：最初と最後のM1-S PROはあと2つのBluetoothデバイスと接続することができます。グループの間に接続されたM1-S PROは、追加で1つのBluetoothデバイスと接続することができます。


例：グループインターホンモードでは、ユニットBとユニットCは、1つのBluetoothデバイスのみと接続することができます。ユニットAとユニットDは2つのBluetoothデバイスと接続することができます。

*インターホンの中断

多人の通信中に、着信により1つのユニットの接続が解除された場合は、通話が終わると自動的に再接続されます。距離または電波の悪さにより中断された場合は、インターホンボタンを押し、再度接続してください。

6.2.2メモリ接続機能

M1-S PROはペアリングされたユニットを記憶していますが、電源を切った後に再度接続したい場合は、以下の手順に従ってください。

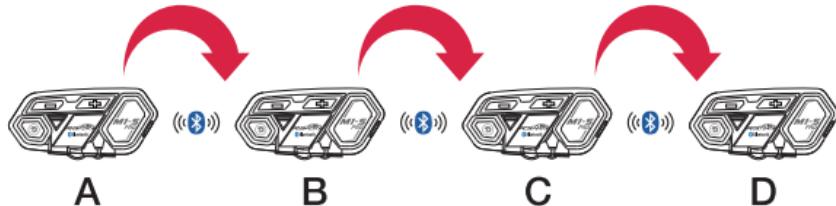

ステップ1. 4台(A、B、C、D)すべてと、ヘッドセットに接続されたすべてのBluetoothデバイス(携帯電話やGPS)の電源を切ります(ペアリングに影響を及ぼすため)。

ステップ2. 4台(A、B、C、D)すべての電源を同時にオンにします(インターホンボタンと機能ボタンを3秒以上長押しします)。

ステップ3. 4台のM1-S PROのインターホンボタンを短く押し、青と赤のライトが同時に点滅します。メモリ接続が正常に開始されます。

ステップ4. 4台すべてが再接続された後、元々接続されていたBluetoothデバイス(携帯電話やGPS)の電源を入れてください。

7. 製品仕様

ブルートゥースサポート:HSP,HFP,A2DP,AVRCP, AGHSP

バッテリー:リチウム電池,900mAh, 3.7v

サイズ: 8.7cm * 4.2cm * 2.3cm

重量:44G, 92G(ヘッドフォン & マイク付き)

周波数範囲:2.4GHz～2.485GHz

動作温度:-20°C-50°C

取り済み認証:CE FCC ROHS BQB TELEC

USBアダプタ標準充電電圧:DC 5V±0.2V

USBアダプタ標準充電電流:DC 1A±0.5A

充電時間:2-3 時間

8. Q&A/警告

Q1:スピーカーの片方または両方から音が聞こえません。

A1:ヘッドセットの端子をしっかりと本体に差し込むかご確認ください。

Q2:バイクに乗っている時にバイク用USB充電器から充電できますか。

A2:1.お薦めしません。不安定な電源は内部回路に損傷を与える可能性があって、充電できなかったり、完全に充電できなかったり、電源を入れることができなくなる可能性があります。

2. モバイルバッテリーは利用可能です。

Q3:ラジオ利用中に送信できなかったり、送信を続けることができません。

A3:2.5mmのピンがしっかりと入っているかご確認ください。ピンは防水カバーが付いているため、挿入されているように見えることがあります。

Q4:新しいデバイスの電源が入りません。

A4:使用前に少なくとも30分充電してくださいますよう申し上げます。

警告

音量について

長時間大音量で使用すると聴覚を損傷する可能性があります。

分解または修正

M1-S PROは厳選工場で厳密に作られています。分解や修正はデバイスを損傷する恐れがあります。必要な保証のため、デバイスから安全規制やシリアル・ステッカーを外さないでください。何かご質問がありましたら当社に直接ご連絡ください。

9.声明/保証/アフターサービス

9.1 FCC声明

法令に担当する当事者によって認められない変更や修正は、ユーザーが本機器を使用する権限を無効にする可能性があります。

本機器はテスト済みで、FCC規定第15に基づくクラスBデジタルデバイスの制限に準拠していることが確認済みです。これらの制限は家庭での設置において、有害な干渉からの適切な保護を提供するものです。本機器は無線周波数エネルギーを使用・発生するため、指示に従わない設置や使用は無線通信に有害な干渉を起こす可能性があります。しかし、特定の設置によって干渉が起こらないことは保証できません。本機器がラジオやテレビの受信に有害な干渉を起こした場合は、本機器の電源を切って再度入れることで確認でき、干渉を以下の方法で修正することをお薦めします。

- 受信アンテナの方向や位置を変える。
- 本機器と受信機の間の距離を開ける。
- 受信機が接続されている回路とは異なるコンセントに本機器を接続する。
- 販売先または経験豊富なラジオ/テレビ技術者に問い合わせせる。

本機器はFCC規定第15に準拠しています。操作には次の2つの条件が適用されます。(1)本機器は有害な干渉を起こさない可能性があり、(2)本機器は望ましくない操作によって起こる干渉を含む、いかなる受信された干渉を受け入れる必要があります。

本機器は評価済みで、一般的なRF暴露の要件を満たします。本機器は制限なしでポータブルで暴露された状態での使用が可能です。

9.2 アフターサービス

品質の問題やアクセサリーの欠品、特に2台以上のM1-S PROインカム間のペアリング問題については、お気軽にメール(winzon.cs@outlook.com)にてお問い合わせください。私たちは常にサポートを提供しており、24時間以内にご返信いたします。



Warranty Card

Purchase Date: _____

Dealer/Retailer: _____

Item No.: _____

Customer Name: _____

Customer Tel: _____

Customer E-mail: _____



Product Failure Description:

(Please be sure to fill in your related information so that we can better serve you in time)



User Manual Download



<https://community.fodsports.com/support/m1-s-pro-user-manual/>



fodsports.com

20211228V1.1

