


Eye Massager

———— User Manual ————



Sleep Music

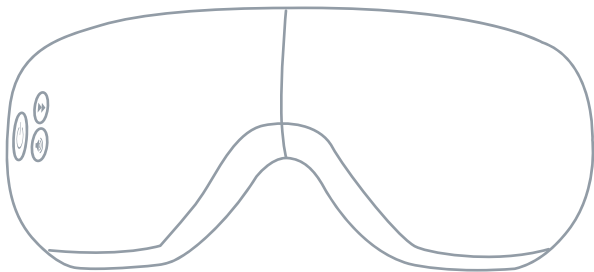

Pneumatic Kneading

Please read this user manual carefully before use and keep it for further reference.


Safety Precautions

- DO NOT disassemble, impact, or squeeze the internal lithium battery throw it into fire, or immerse it in water; if serious bulging occurs, do not continue to use it.
- DO NOT clean the device with water, clean it with cotton soaked in disinfecting alcohol.
- Remove contact lenses, hairpins, hair accessories, etc before using.
- Juveniles, disabled people, and the elderly should only use this device under proper supervision.
- This device has a heating surface. People who are not sensitive to heat must pay extra attention when using it.
- This device will obscure vision, please do not use it while walking or driving.
- This device is designed as a personal care device; it is NOT intended to replace medical care and medical devices.
- DO NOT use it in high temperature or humid environments, and avoid strong sunlight and gas corrosion.
- DO NOT use if you have symptoms of eye disease. DO NOT use it if you have had an eye operation, or have any eye diseases such as glaucoma, cataract or amotio retinae.
- Charge this device with a smartphone charger (5V,1A).
- Please use it under medical supervision if you have sensitive skin, facial atopic dermatitis, or there are any plastic materials placed on your face.
- You must have your eyes closed while massaging. After use, your eyes will become blurry at first and will gradually become clear after 1-3 minutes of closing your eyes.
- Wear the device over your eyes before turning it on to avoid over-pressure damage to the airbag.
- DO NOT scratch or puncture this device with sharp objects.
- DO NOT disassemble this device by yourself.

Product Features

- 4 massaging mode (Gentle mode, Strong mode, Wake-up mode, sleep mode)
- Automatic timing
- Intelligent touch control
- Intelligent air pressure
- Intelligent voice prompt
- Intelligent hot compress
- Bluetooth music
- 180°folding

Parts of Eye Massager

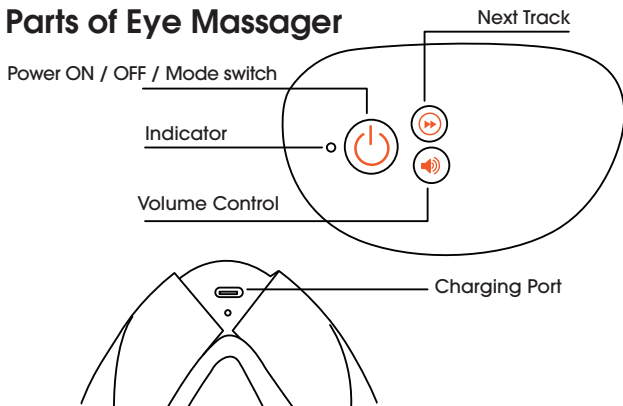

Button Description

Long press the power button  for 3 seconds to turn on / off the eye massager; short press for mode switching.

Note: When switching mode, there will be a voice to prompt current mode.

Music will be paused during this operation, it will auto-restore after 2 seconds

Press  once to play next track.

Press  once to adjust volume.

Bluetooth Music

1. Bluetooth pairing device: Eye Massager
2. Bluetooth is on by default. The Massage will play built-in music by default after start-up. It will switch to a Bluetooth device to play the Bluetooth music after the smartphone connects to the Bluetooth.
3. It will automatically restore the built-in music play after Bluetooth disconnect.

Massage Mode

Gentle mode (moderate air pressure)



Strong mode (Strong Air Pressure)



Wake-up mode (Moderate Air Pressure)



Sleep Mode

NOTE: Bluetooth music can be played via Bluetooth connection



Wearing the Eye Massager

Align the cloth cover to your eyes, put on the device, adjust the elastic band, adjust the massager to the most comfortable position.

Attention: Remove any glasses, contact lenses, hairpins and hair accessories before use to avoid discomfort. Do not operate the device with wet hands. Do not drop or step on the device.



Charging Notes

1. Please charge this device with a 5V charger
2. Insert the USB-C plug into the device's jack.
3. The USB-A plug is inserted into the USB jack of the charger.
4. Plug the charger into an electrical outlet.
5. While charging, the red light of the LED indicator keeps lighting up, and the green light stays on while charging is completed.
6. The device will not work while charging.
7. It takes 2-3 hours to fully charge. Please disconnect the charger after charging is complete.
8. Please charge it once every 3 months if it is not in use for a long time.

Cleaning and Maintenance

- Please turn off the device when cleaning.
- Wipe the device with a soft, dry towel if it needs to be clean.
- DO NOT wipe it with wet towels, brushes, or any hard materials as it may damage the device
- Keep the device dry.

Trouble Shooting

Problem	Possible Cause	Solution
There's a swooshing or clacking sound.	Normal sound of air pump inflating, motor working, valve deflating, or cloth rubbing.	No need to do anything
Device turns off automatically	Battery is low	Charge the device
Device does not turn on	Battery is low	Charge the device
Buttons are not responsive	Battery is low	Charge the device
Air pressure is weak	Battery is low	Charge the device



At the end of its life, the device has to be separated from the other waste. Consign the device and all its components together to a center of electronical and electrotechnical waste recycling center, designated by your local authorities

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.