


6014-E FINAL OTO ASSEMBLY

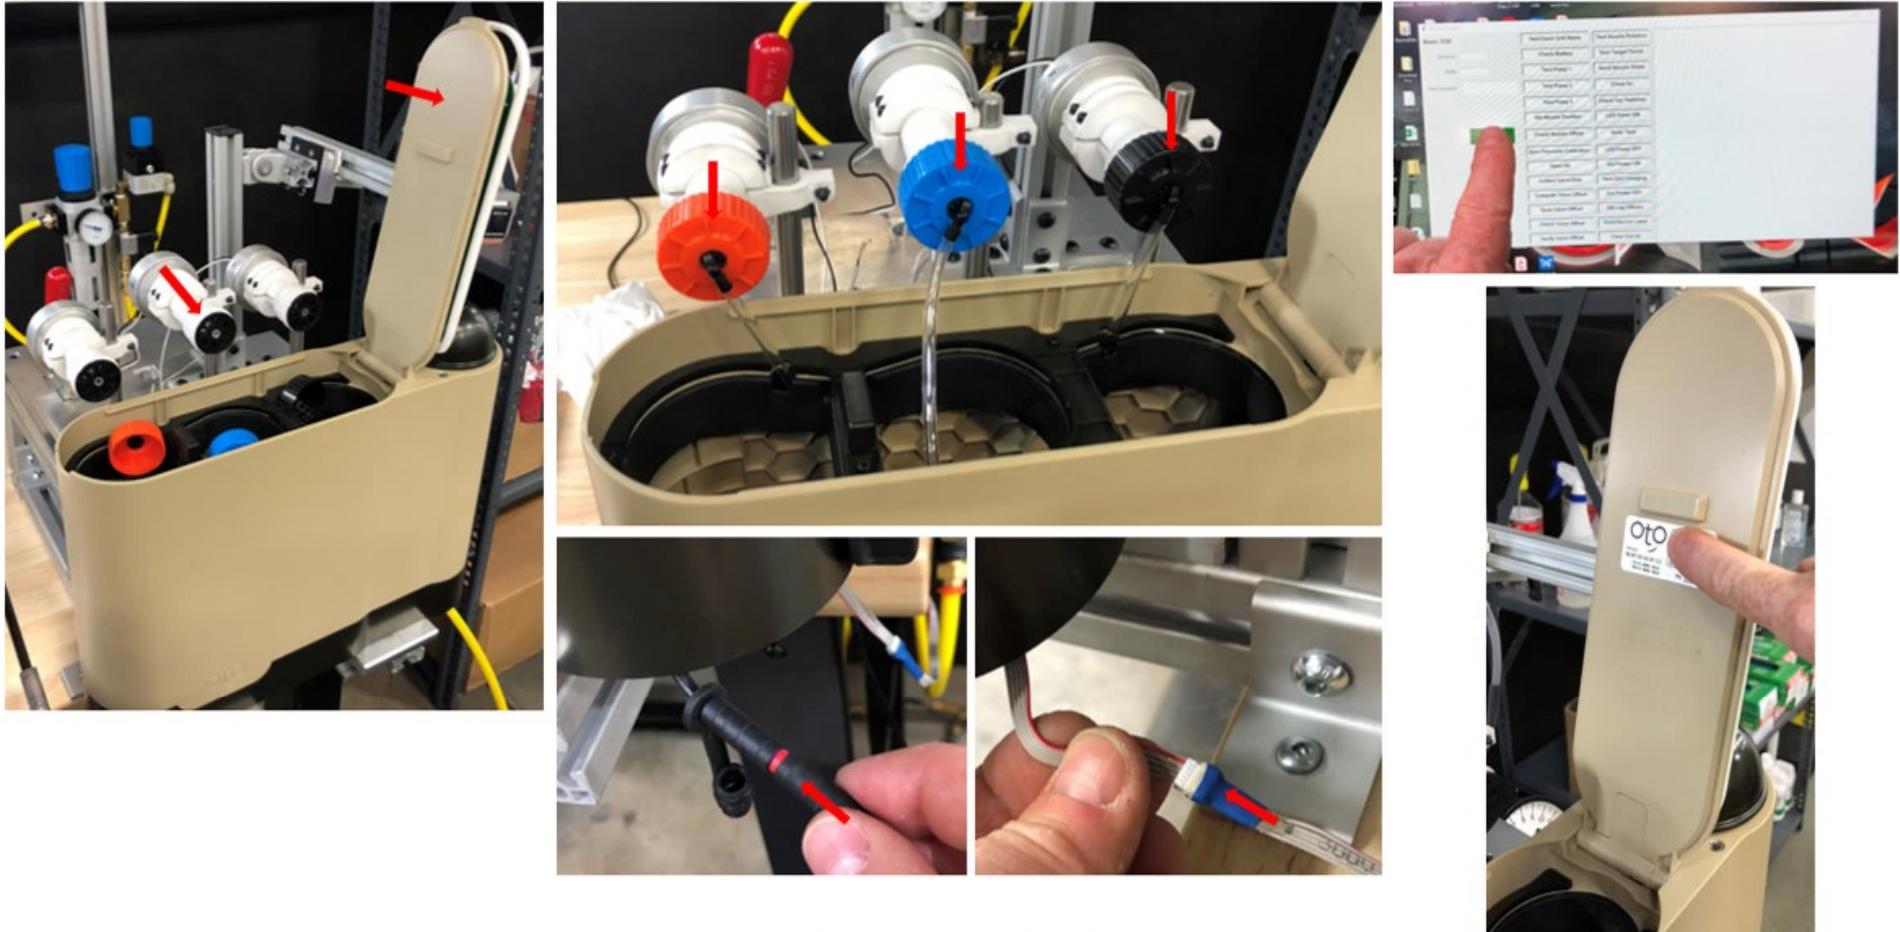

10

Lift the lid and position the solar panel tester of the EOL test, and screw in all three bottle caps to the end of line tester as shown. Plug in both the power cable and the controller cable to the EOL test stand. Push the start button on the computer touch screen to start the end of line test, which includes testing of each motor, pump, position and pressure sensors, and solar panel. If the test fails (red on the screen), set the part on a reject shelf, otherwise (green on the screen) put a label under the lid as shown. The label will not print unless the unit passes.