


Remote Control

Pair your remote with your smart shade



Part	Description
①	LED Light
②	Left Channel Select
③	Up/Open
④	Up tilt/75% position
⑤	Down/Close
⑥	Right Channel Select
⑦	Down tilt/25% position
⑧	Stop/Horizontal 50% position
⑨	Channel setting

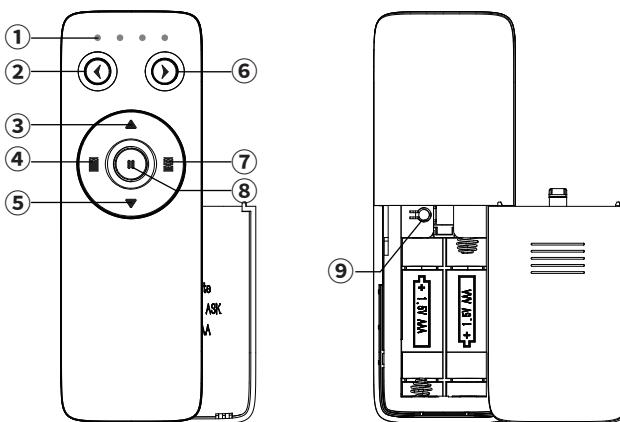

NOTE:
1. Before using remote control, each remote must be paired with motor
2. Each motor can record up to 16 remote control channels.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Entering Pairing / Setting Mode

- ① Long press the motor [Up] [Down] key for 3 seconds, motor will jitter and LED indicator will long light.
- ② Press the channel setting button on back of the remote control, shade will jig and motor LED will flash 4 times, indicating the pairing is completed. The motor LED will go out.

Entering Setting Mode

For shades already paired

Only applicable for remote control that is already successfully paired with existing shades. Useful for adjusting the top and bottom shade limits. On the remote control that has paired successfully, long press the [channel setting] button of the remote control for 4 seconds. The motor of the shade will jig, and the shade LED will begin flashing and shade will be sent into pairing mode.

Reversing Roll Direction

only needed for over-the-roll direction shade install

- ① Long press the motor [up] [Down] key for 3 seconds to enter the learning / pairing state. Motor will jitter and the LED will be long lit.
- ② Hold the [channel left selection]+[Stop] button simultaneously. After the signal has been received, the motor will shake once and the motor LED will blink 3 times.

Removing Existing Pairing


Long press motor [up] & [down] button together for 10 seconds. Motor will jitter, motor LED will go out, all existing remote control pairings will be wiped on motor.

Inching Shade Up or Down

for setting upper and lower limits


- ① Whilst shade is in pairing mode (or if upper and lower limits have not yet been set), short press the [up] button to have shade open continuously.
- ② Long press the [up] button (for up to 15 seconds) for the shade to move up continuously. Shade will stop when the button is let go of.

③



Whilst shade is in pairing mode (or if upper and lower limits have not yet been set), short press the [down] button to have shade close continuously.

④



Long press the [down] button (for up to 15 seconds) for the shade to move down continuously. Shade will stop when the button is let go of.

Setting upper shade limits

- ① Long press the [Channel setting]+[Up] buttons together for 4 seconds to enter setting mode for the upper limit. The motor will jig and the LED will light up.
- ② Long press the [Channel setting]+[Up] buttons together for 4 seconds to enter setting mode for the upper limit. The motor will jig and the LED will light up.
- ③ Hold the [Channel setting] button for 4 seconds to complete defining the lower limit. Note that action must be completed within 3 minutes or the setting will time out.

Setting lower shade limits

- ① Long press [Channel setting]+[Down] buttons together for 4 seconds to enter setting mode for the lower limit. The motor will jig and the LED will light up.
- ② Inch the blind by long pressing or short pressing the [Up] or [Down] button to the desired lower limit position.
- ③ Hold the [Channel setting] button for 4 seconds to complete defining the lower limit. Note that action must be completed within 3 minutes or the setting will time out.