




Band Edge NVNT n20 5180MHz Low Ant2

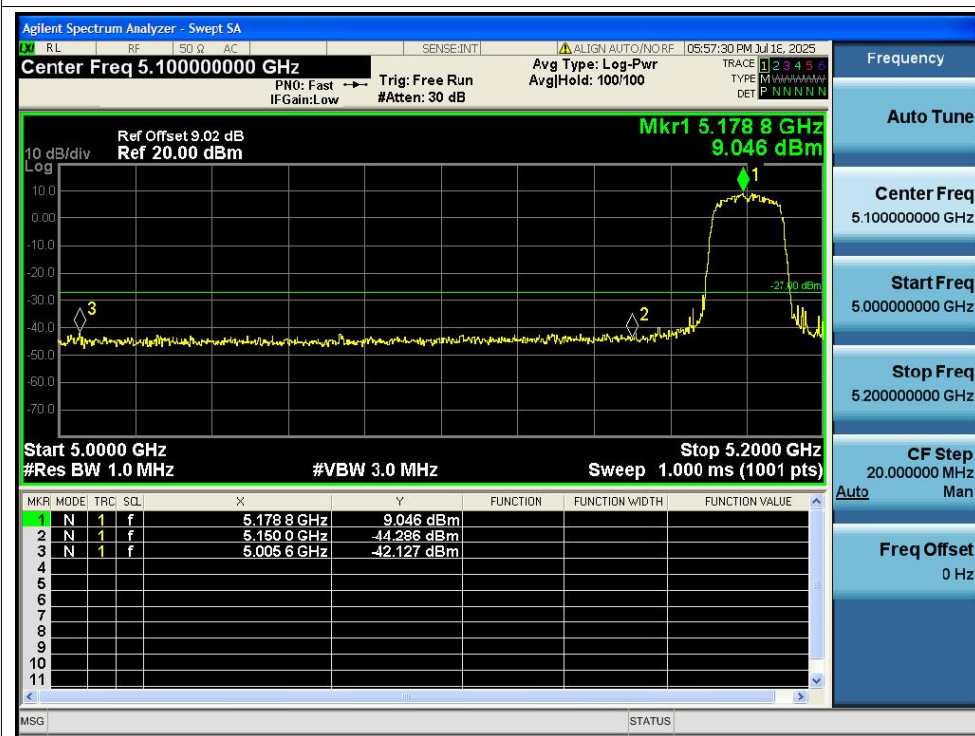


Band Edge NVNT n20 5240MHz High Ant2

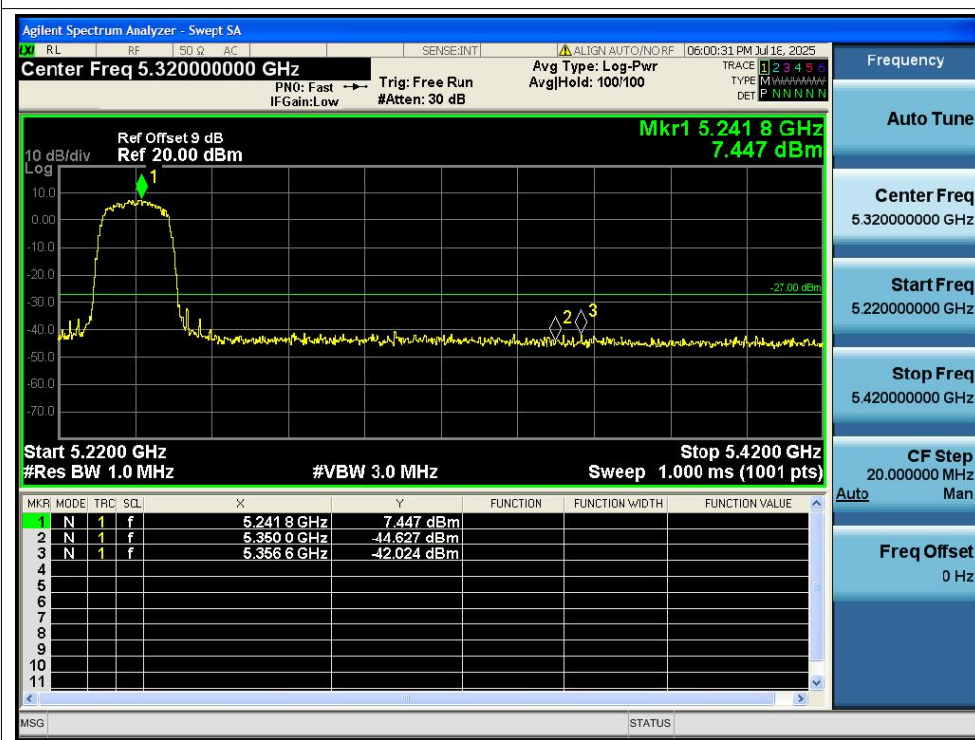


Band Edge NVNT n20 5745MHz Low Ant2

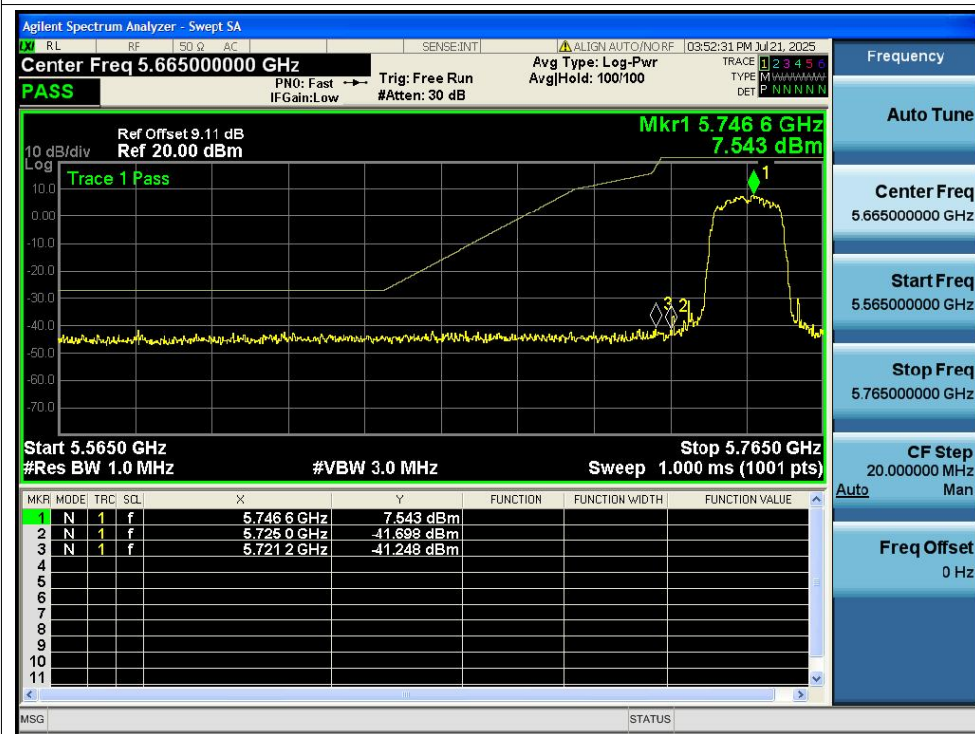


Band Edge NVNT n20 5825MHz High Ant2

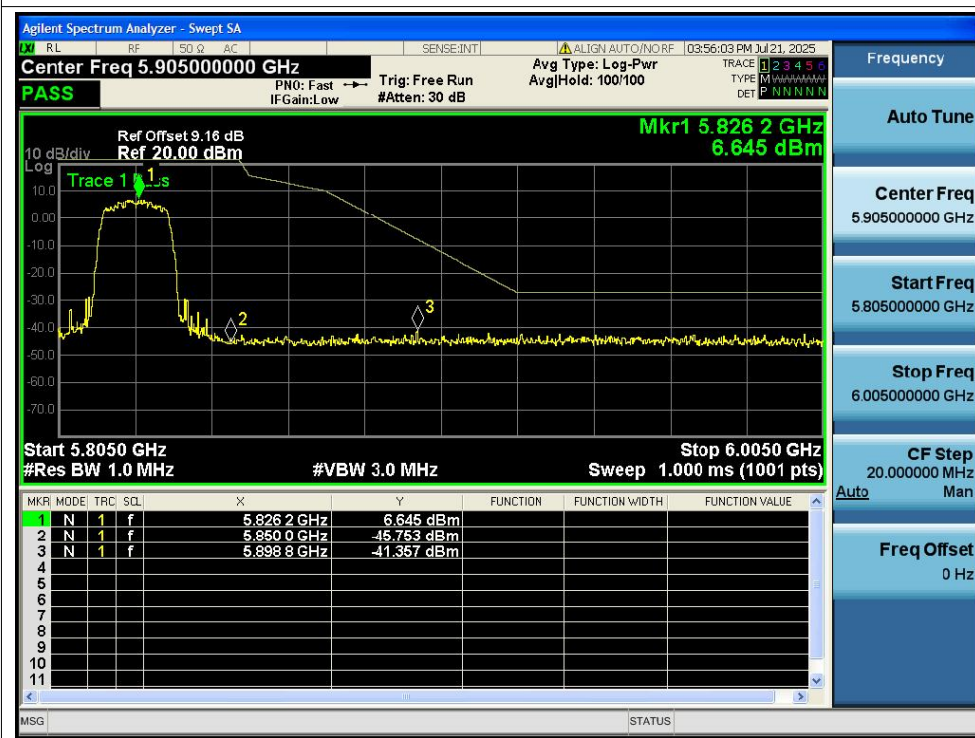


Band Edge NVNT n40 5190MHz Low Ant2

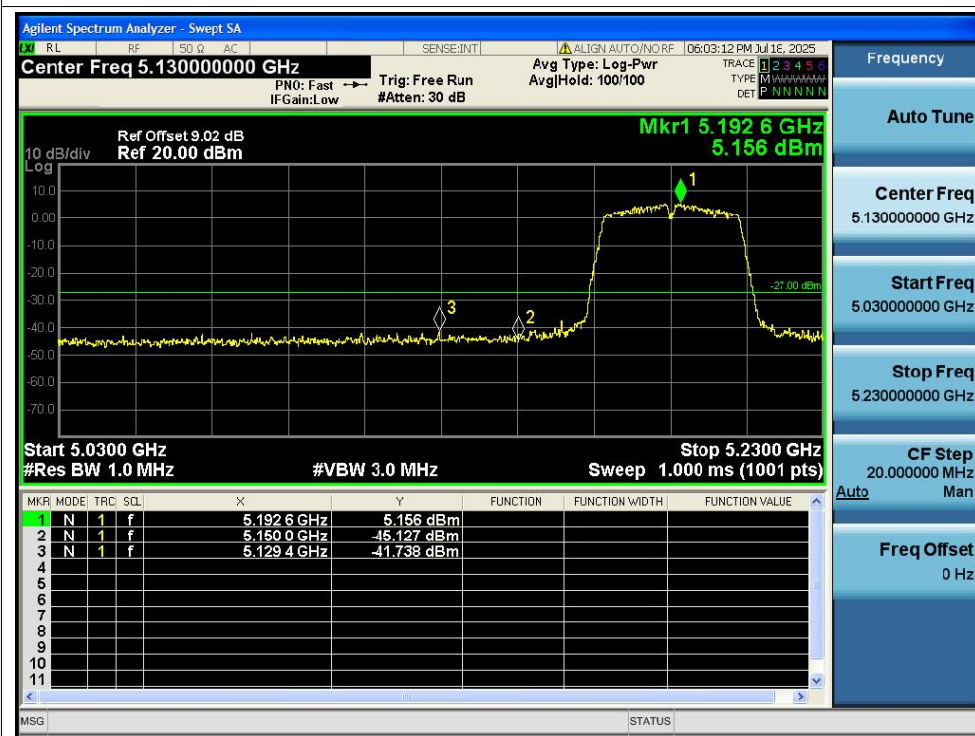


Band Edge NVNT n40 5230MHz High Ant2

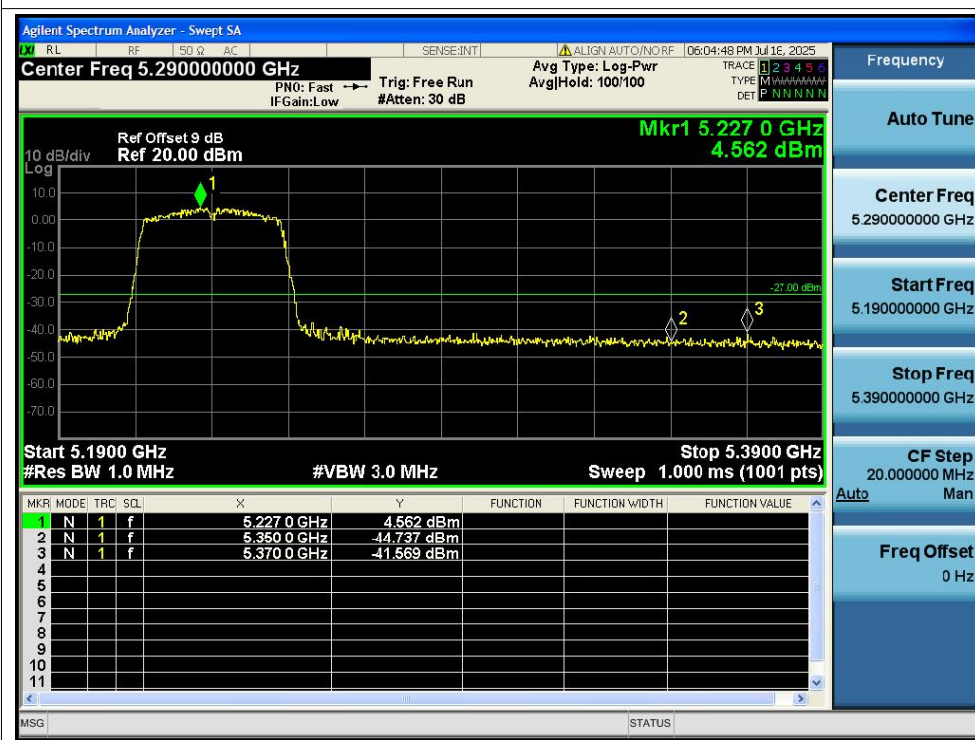


Band Edge NVNT n40 5755MHz Low Ant2

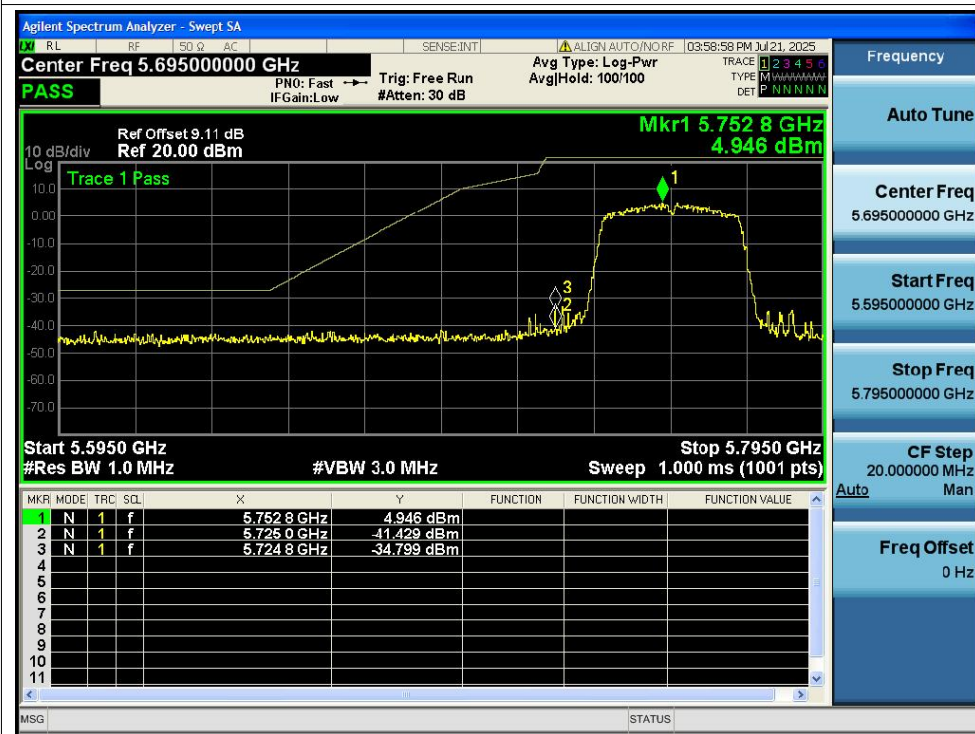


Band Edge NVNT n40 5795MHz High Ant2

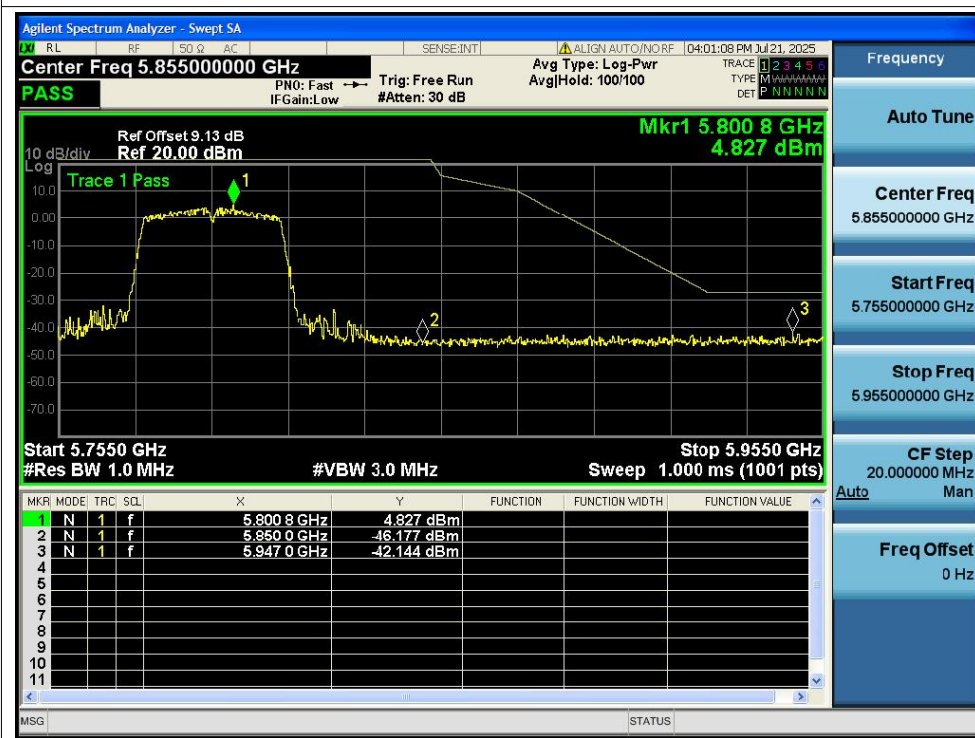


Band Edge NVNT ac20 5180MHz Low Ant2

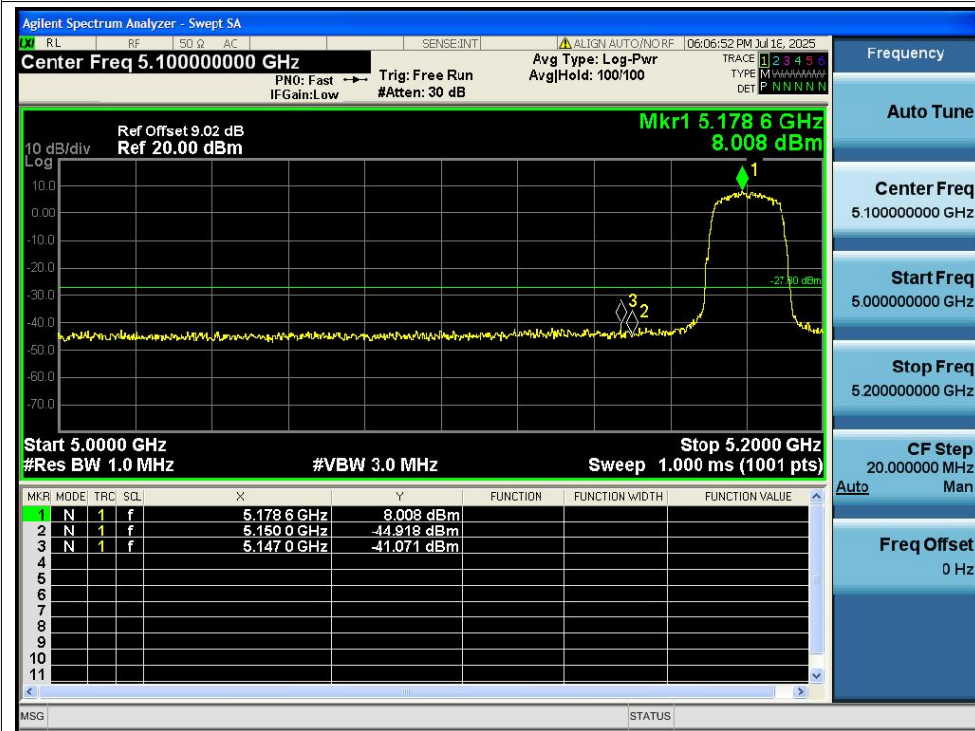


Band Edge NVNT ac20 5240MHz High Ant2

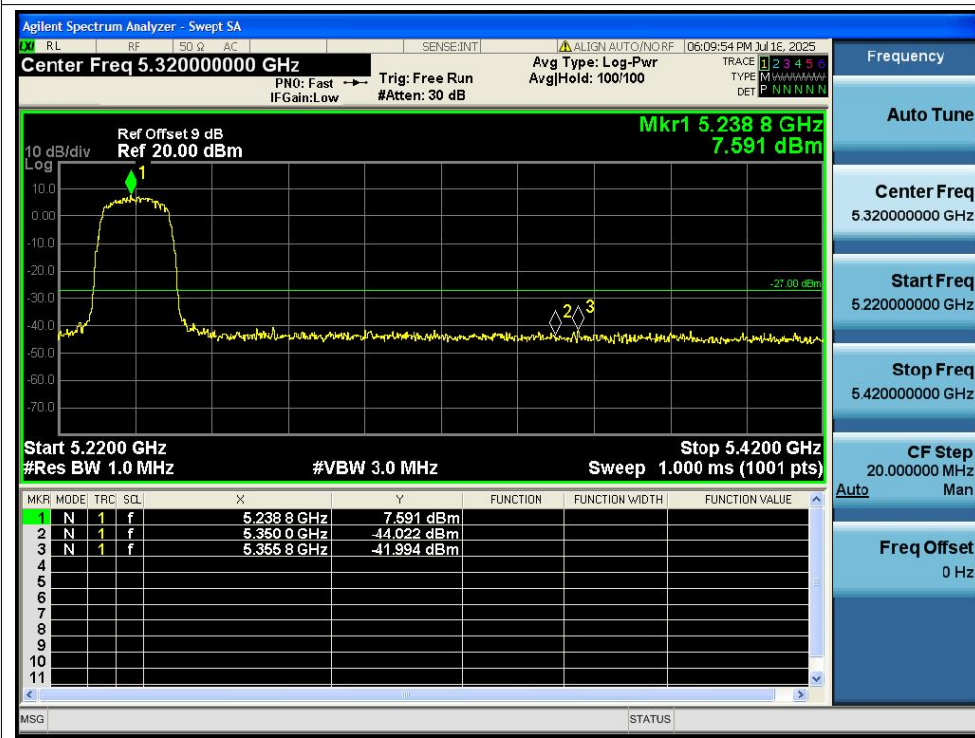


Band Edge NVNT ac20 5745MHz Low Ant2

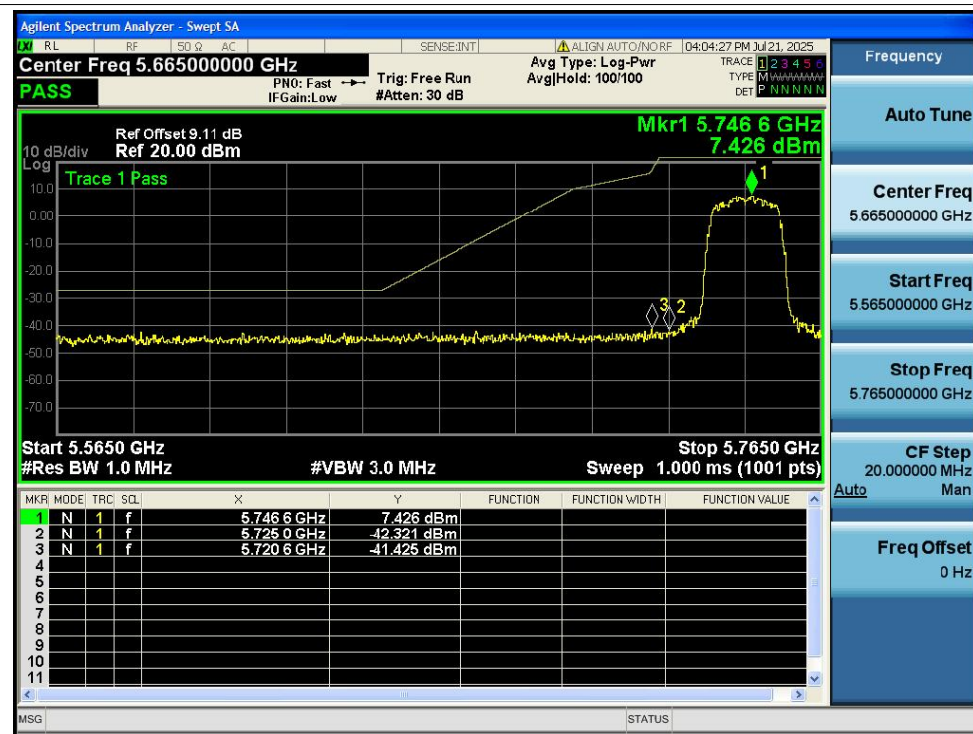


Band Edge NVNT ac20 5825MHz High Ant2

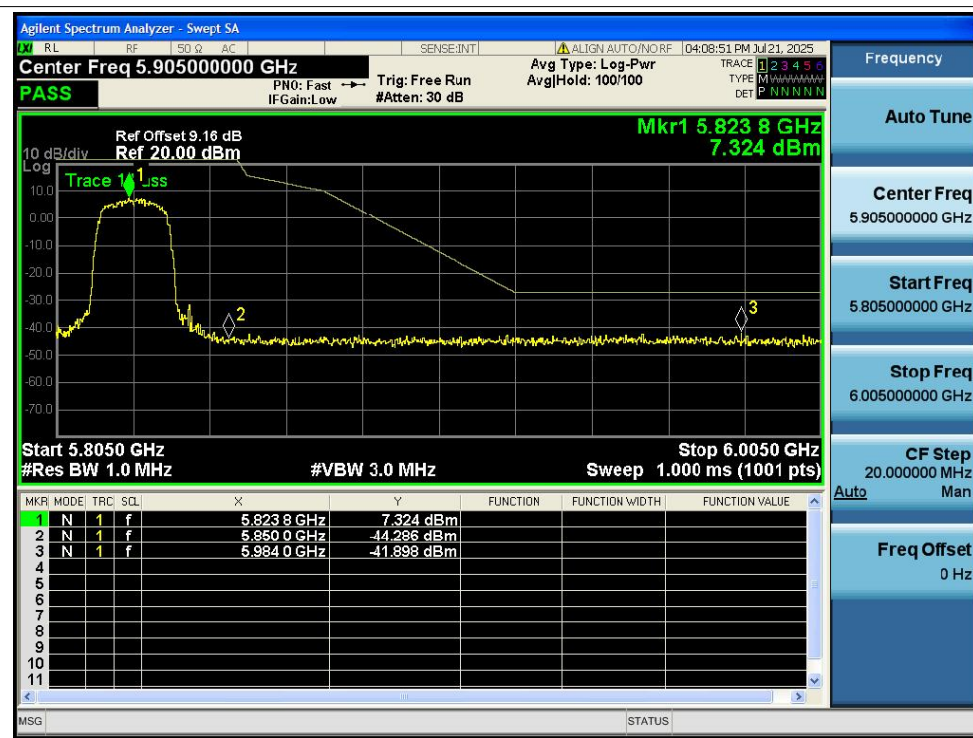


Band Edge NVNT ac40 5190MHz Low Ant2

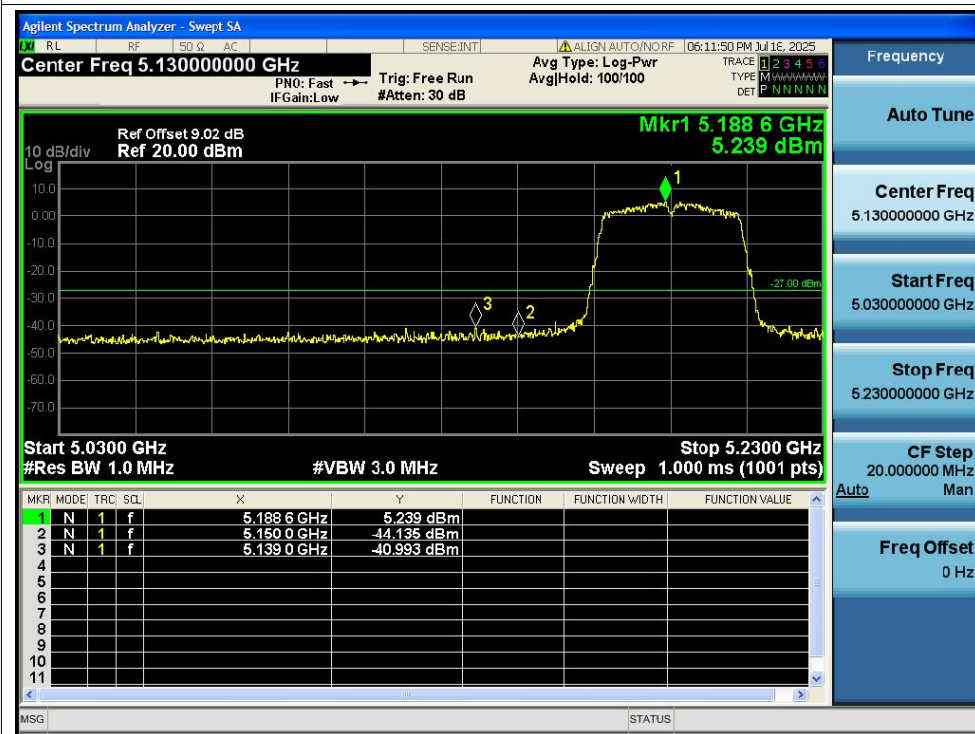


Band Edge NVNT ac40 5230MHz High Ant2

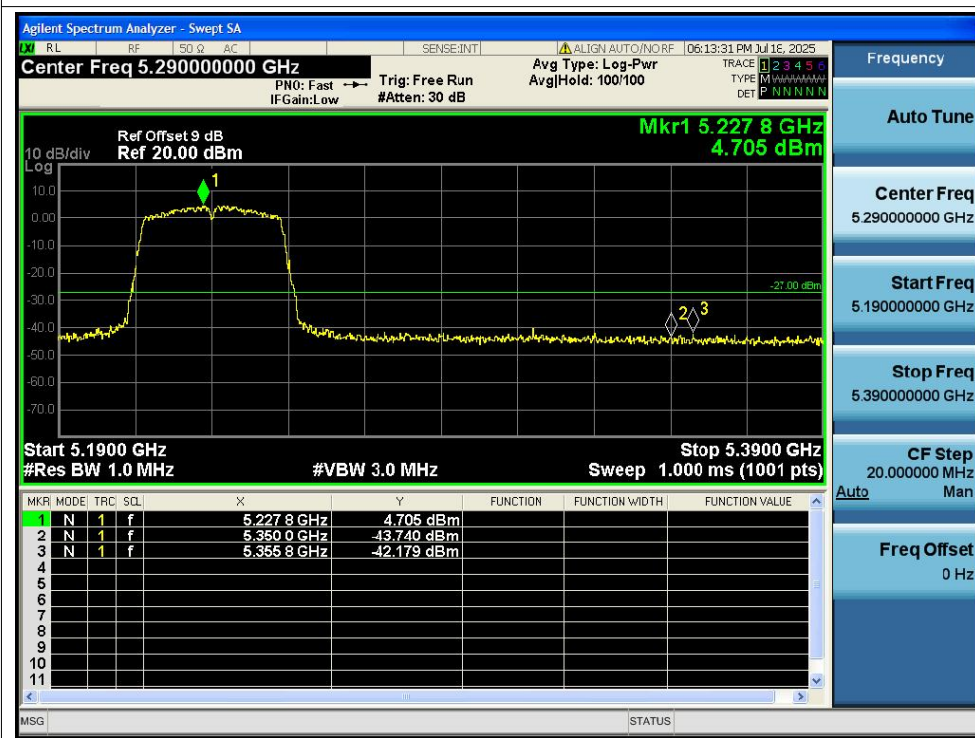


Band Edge NVNT ac40 5755MHz Low Ant2

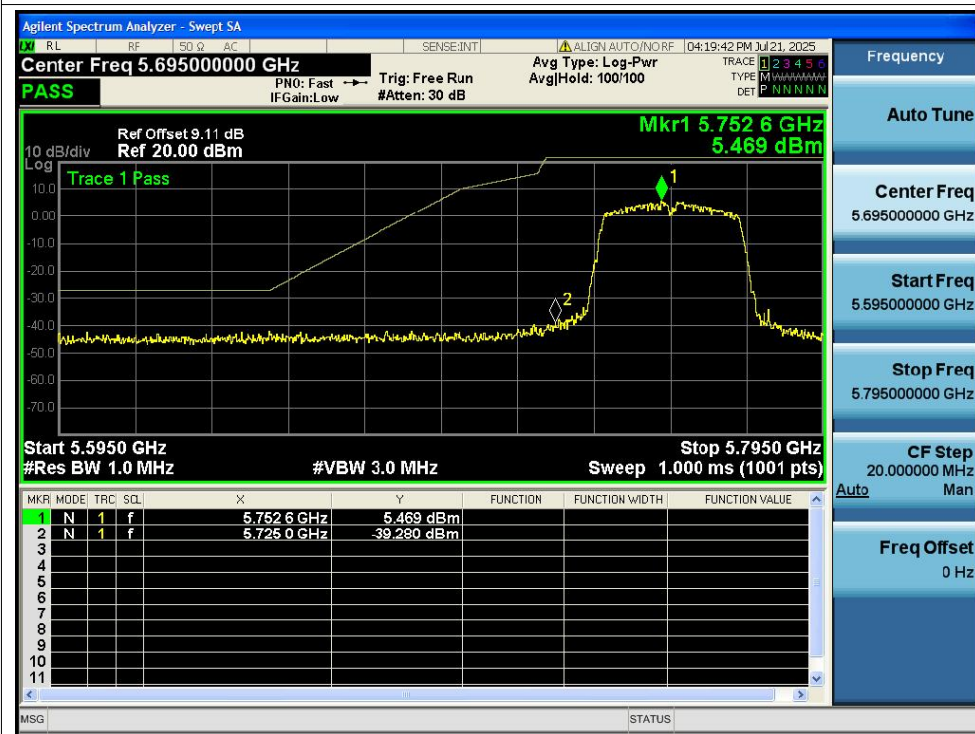

Band Edge NVNT ac40 5795MHz High Ant2

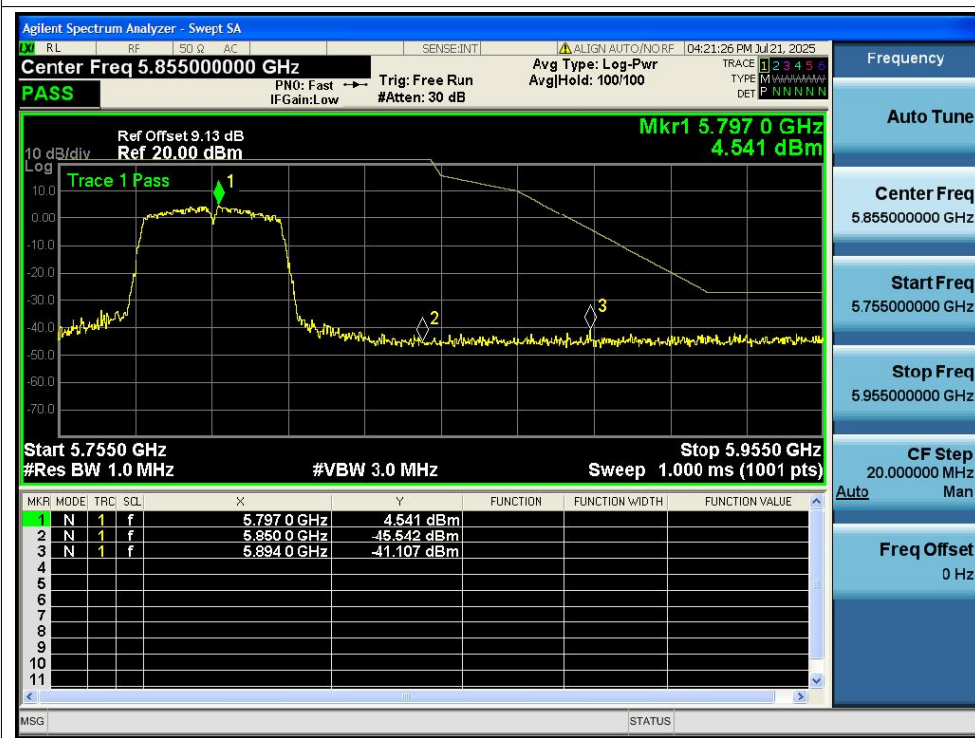

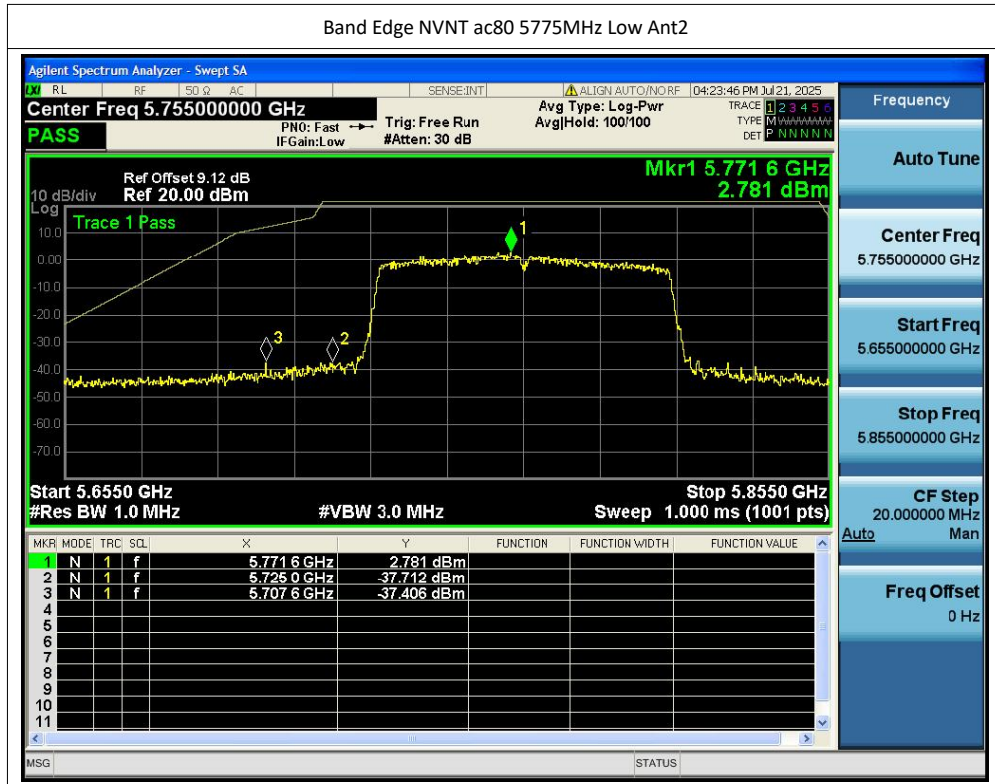




Frequency Stability


Condition	Mode	Time (mins)	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	a	0	5180	Ant2	5180	0	0	25	Pass
NVNT	a	0	5200	Ant2	5200	0	0	25	Pass
NVNT	a	0	5240	Ant2	5240	0	0	25	Pass
NVNT	a	0	5745	Ant2	5745	0	0	25	Pass
NVNT	a	0	5785	Ant2	5785.02	20000	3.46	25	Pass
NVNT	a	0	5825	Ant2	5825	0	0	25	Pass
NVNT	n20	0	5180	Ant2	5180	0	0	25	Pass
NVNT	n20	0	5200	Ant2	5200.02	20000	3.85	25	Pass
NVNT	n20	0	5240	Ant2	5240	0	0	25	Pass
NVNT	n20	0	5745	Ant2	5745	0	0	25	Pass
NVNT	n20	0	5785	Ant2	5784.98	-20000	-3.46	25	Pass
NVNT	n20	0	5825	Ant2	5825.02	20000	3.43	25	Pass
NVNT	n40	0	5190	Ant2	5190	0	0	25	Pass
NVNT	n40	0	5230	Ant2	5230	0	0	25	Pass
NVNT	n40	0	5755	Ant2	5755	0	0	25	Pass
NVNT	n40	0	5795	Ant2	5795	0	0	25	Pass
NVNT	ac20	0	5180	Ant2	5180	0	0	25	Pass
NVNT	ac20	0	5200	Ant2	5200	0	0	25	Pass
NVNT	ac20	0	5240	Ant2	5240	0	0	25	Pass
NVNT	ac20	0	5745	Ant2	5744.98	-20000	-3.48	25	Pass
NVNT	ac20	0	5785	Ant2	5785	0	0	25	Pass
NVNT	ac20	0	5825	Ant2	5824.98	-20000	-3.43	25	Pass
NVNT	ac40	0	5190	Ant2	5189.96	-40000	-7.71	25	Pass
NVNT	ac40	0	5230	Ant2	5229.96	-40000	-7.65	25	Pass
NVNT	ac40	0	5755	Ant2	5755.04	40000	6.95	25	Pass
NVNT	ac40	0	5795	Ant2	5795.04	40000	6.9	25	Pass
NVNT	ac80	0	5210	Ant2	5210	0	0	25	Pass
NVNT	ac80	0	5775	Ant2	5775	0	0	25	Pass

Test Graphs


Freq. Stability NVNT a 5180MHz Ant2 0 Minutes

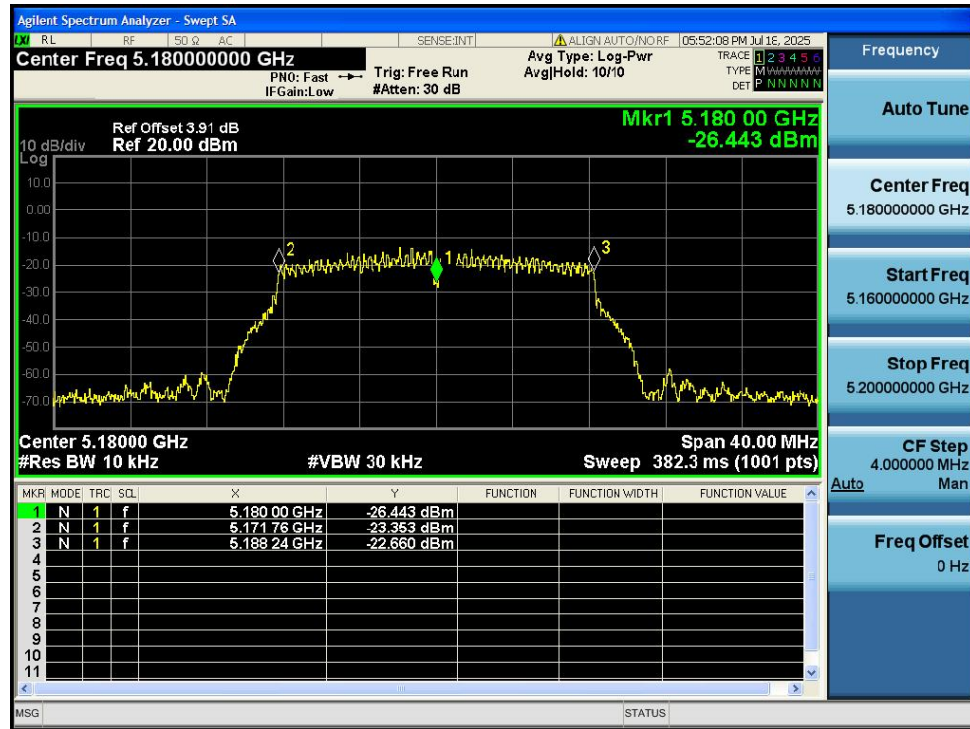


Freq. Stability NVNT a 5200MHz Ant2 0 Minutes

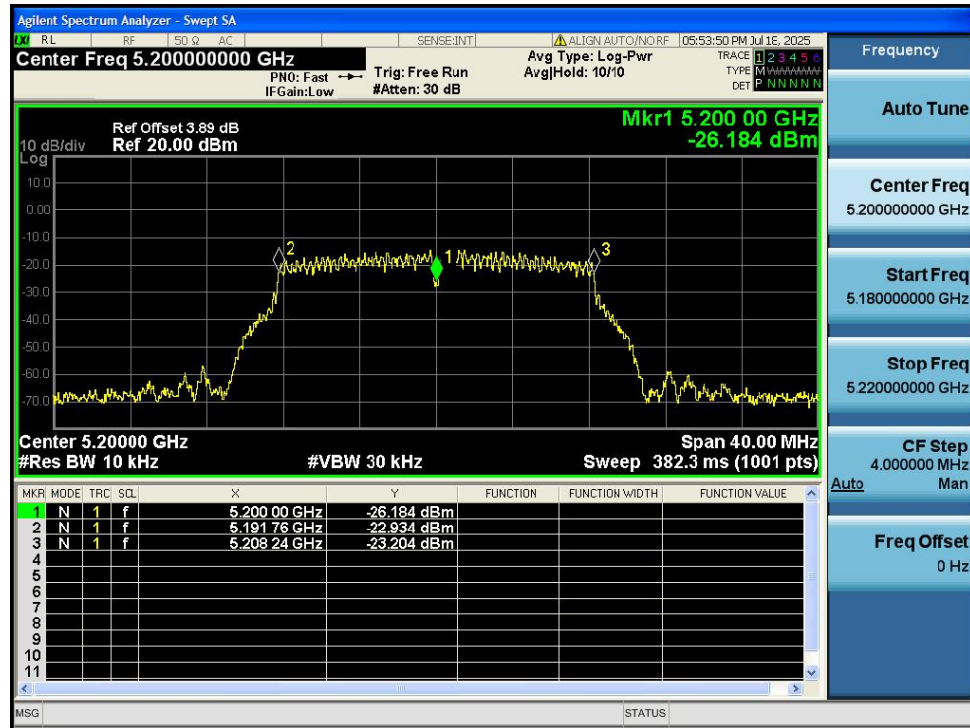


Freq. Stability NVNT a 5240MHz Ant2 0 Minutes

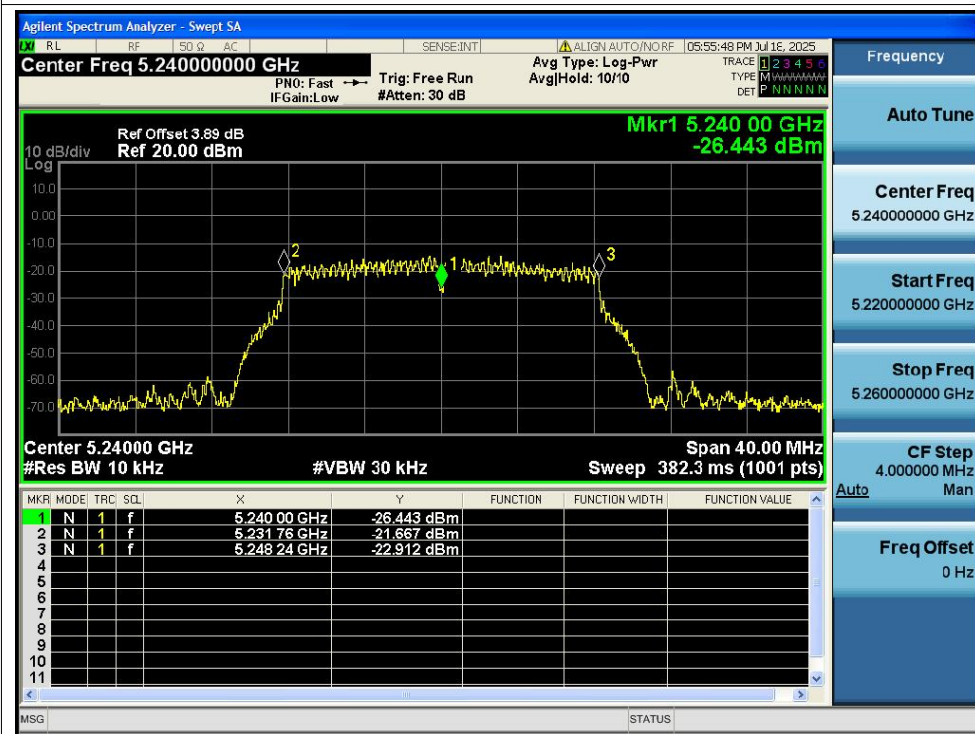


Freq. Stability NVNT a 5745MHz Ant2 0 Minutes

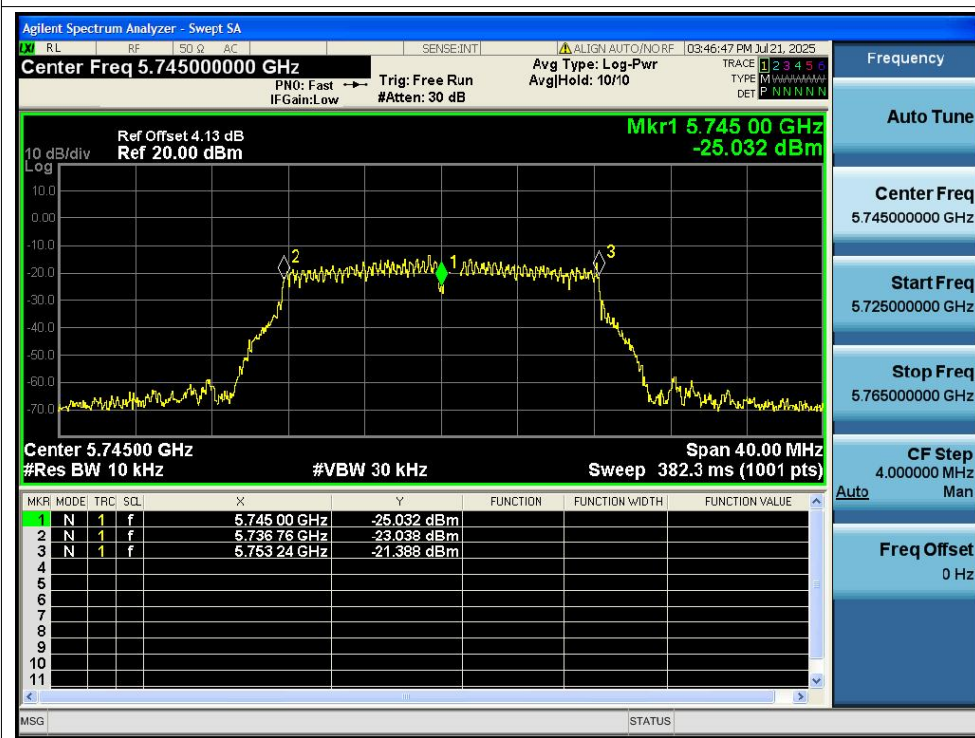


Freq. Stability NVNT a 5785MHz Ant2 0 Minutes

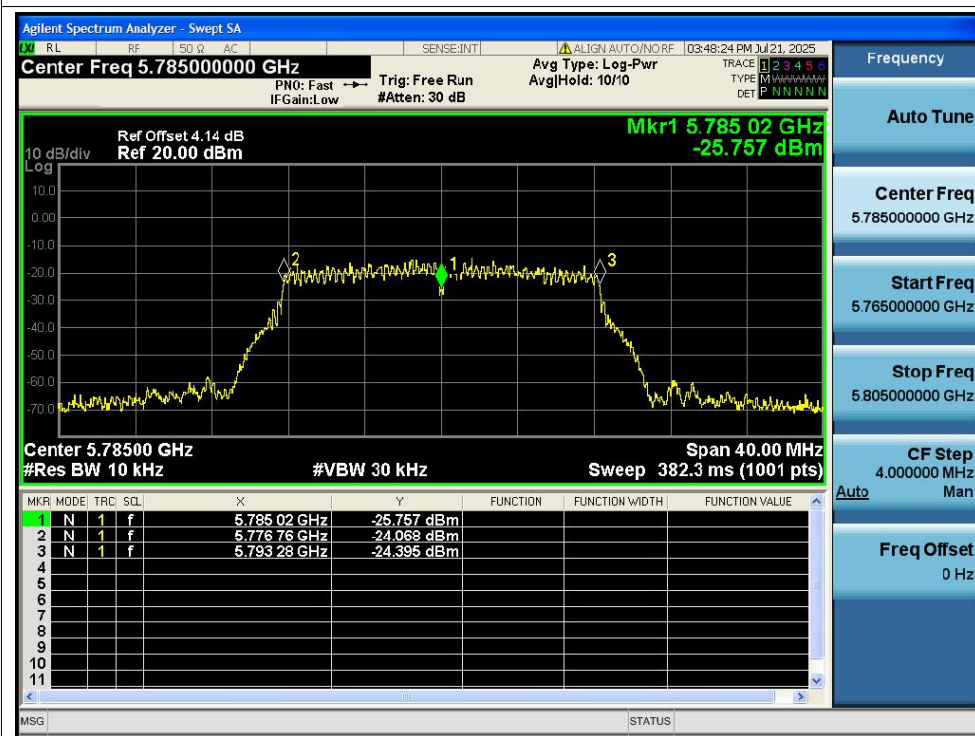


Freq. Stability NVNT a 5825MHz Ant2 0 Minutes

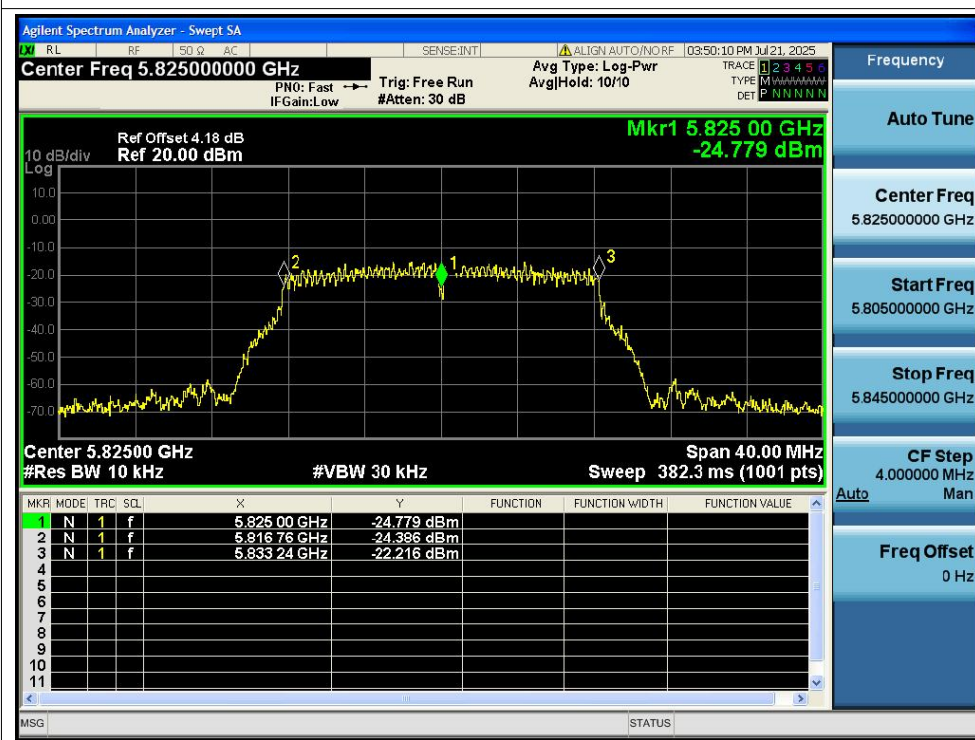


Freq. Stability NVNT n20 5180MHz Ant2 0 Minutes

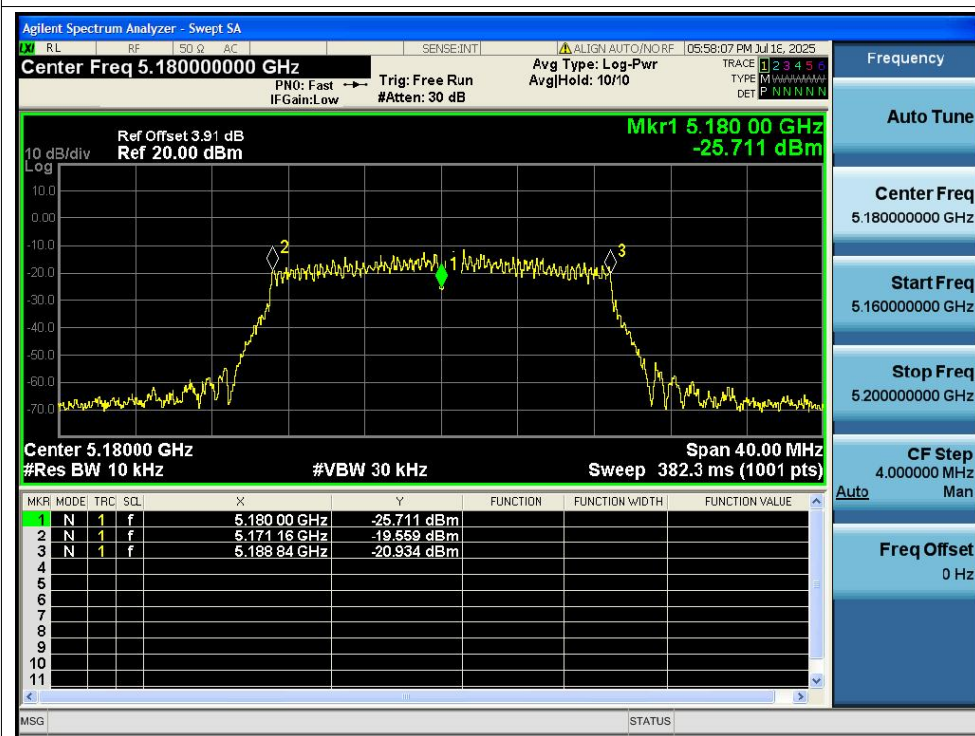


Freq. Stability NVNT n20 5200MHz Ant2 0 Minutes

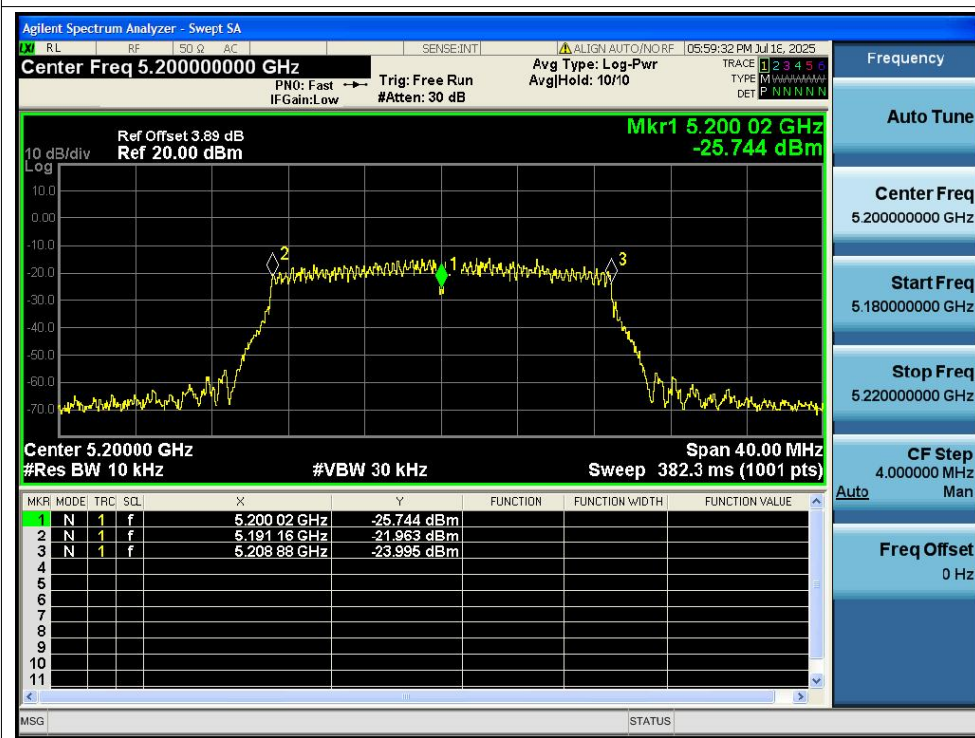


Freq. Stability NVNT n20 5240MHz Ant2 0 Minutes

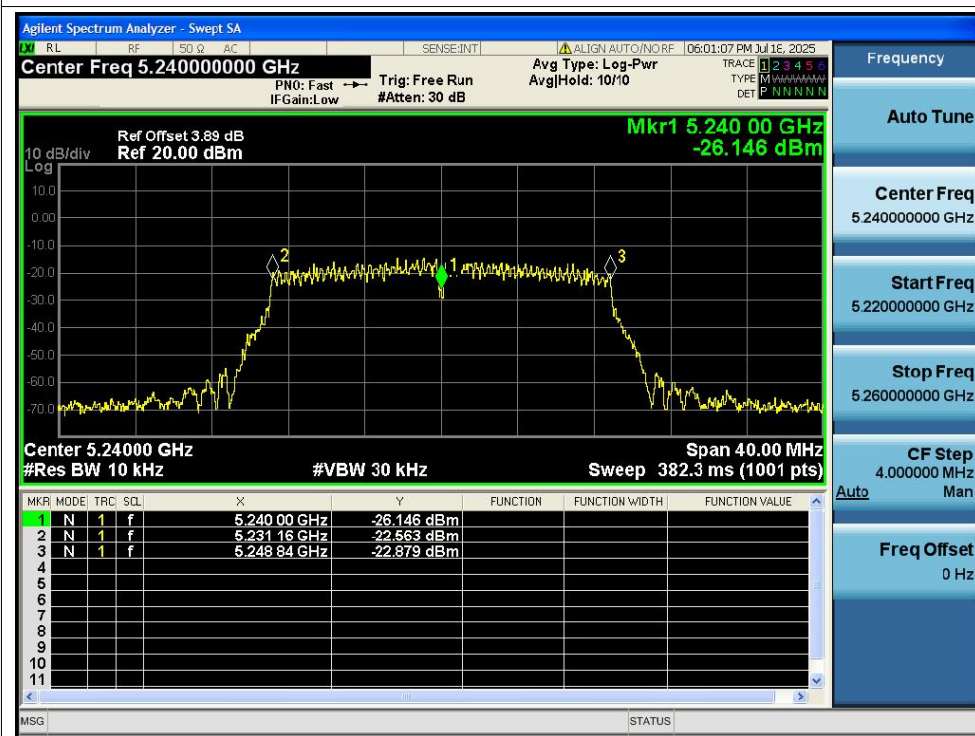


Freq. Stability NVNT n20 5745MHz Ant2 0 Minutes

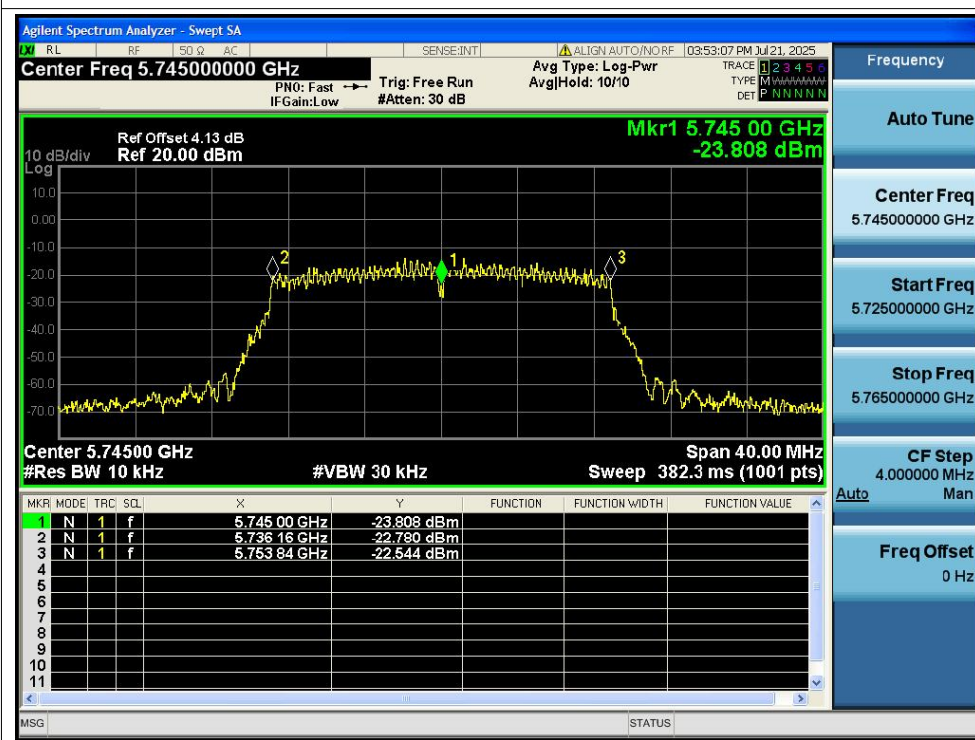


Freq. Stability NVNT n20 5785MHz Ant2 0 Minutes

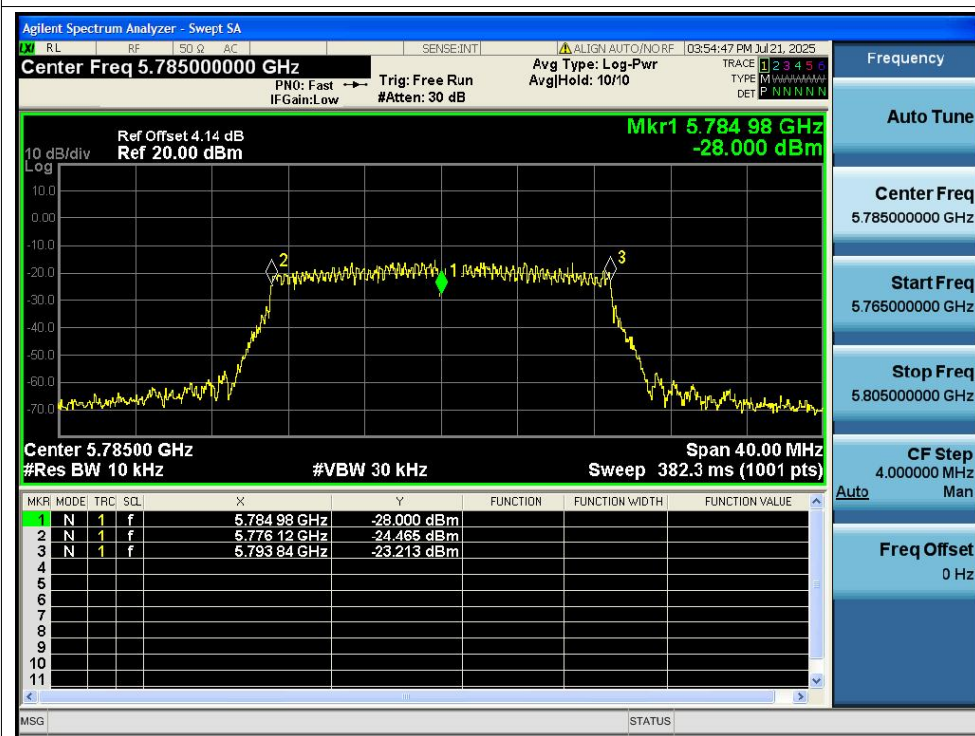


Freq. Stability NVNT n20 5825MHz Ant2 0 Minutes

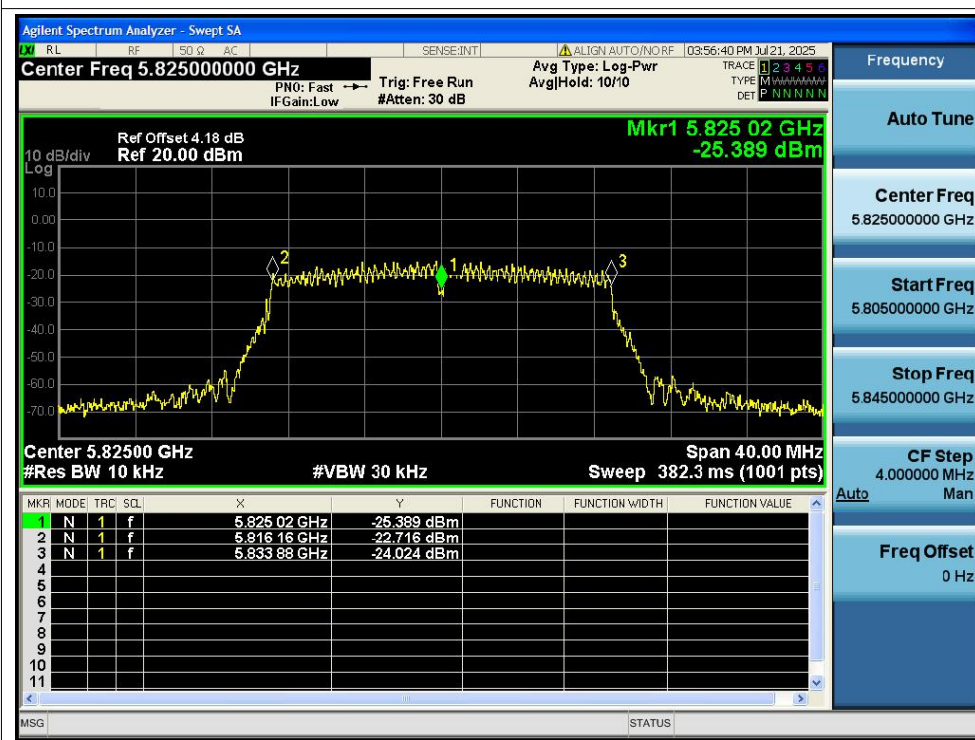


Freq. Stability NVNT n40 5190MHz Ant2 0 Minutes

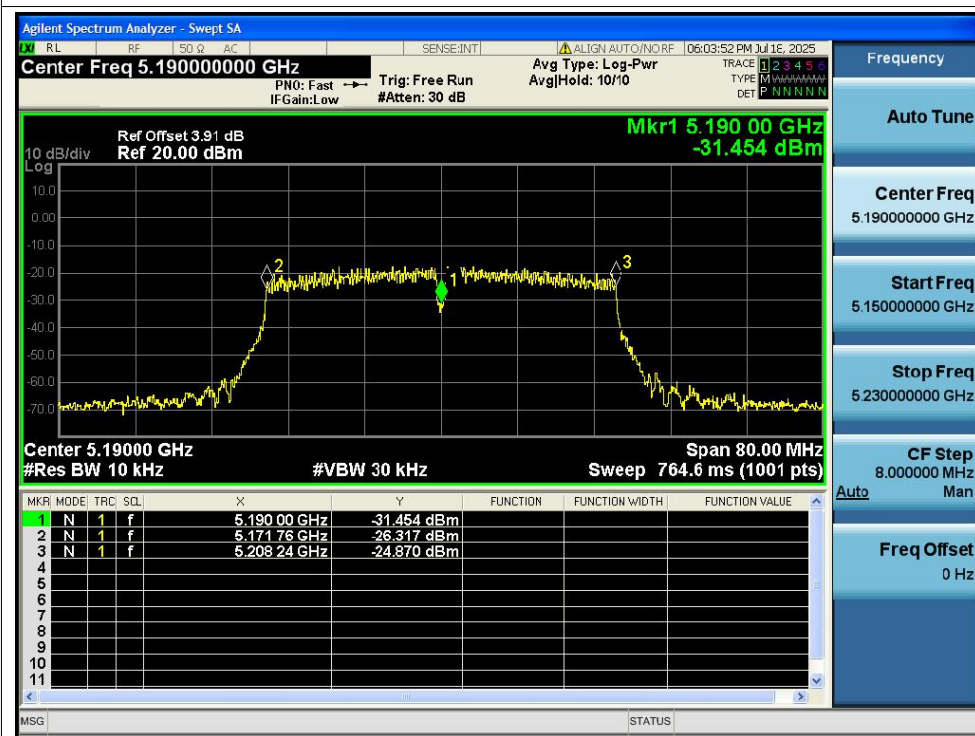


Freq. Stability NVNT n40 5230MHz Ant2 0 Minutes

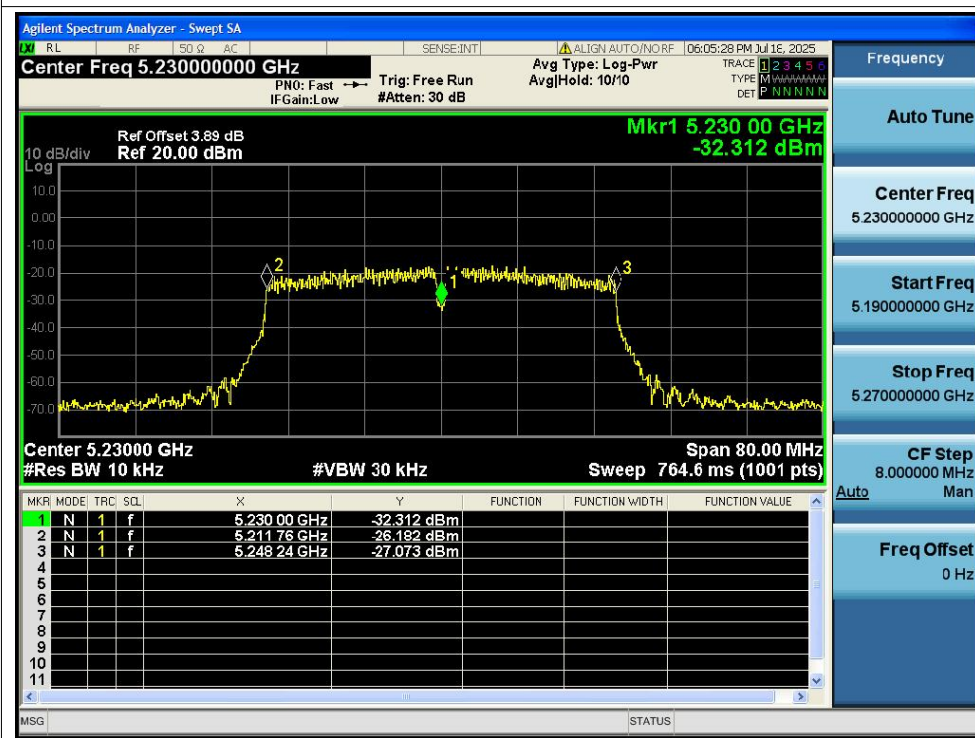


Freq. Stability NVNT n40 5755MHz Ant2 0 Minutes

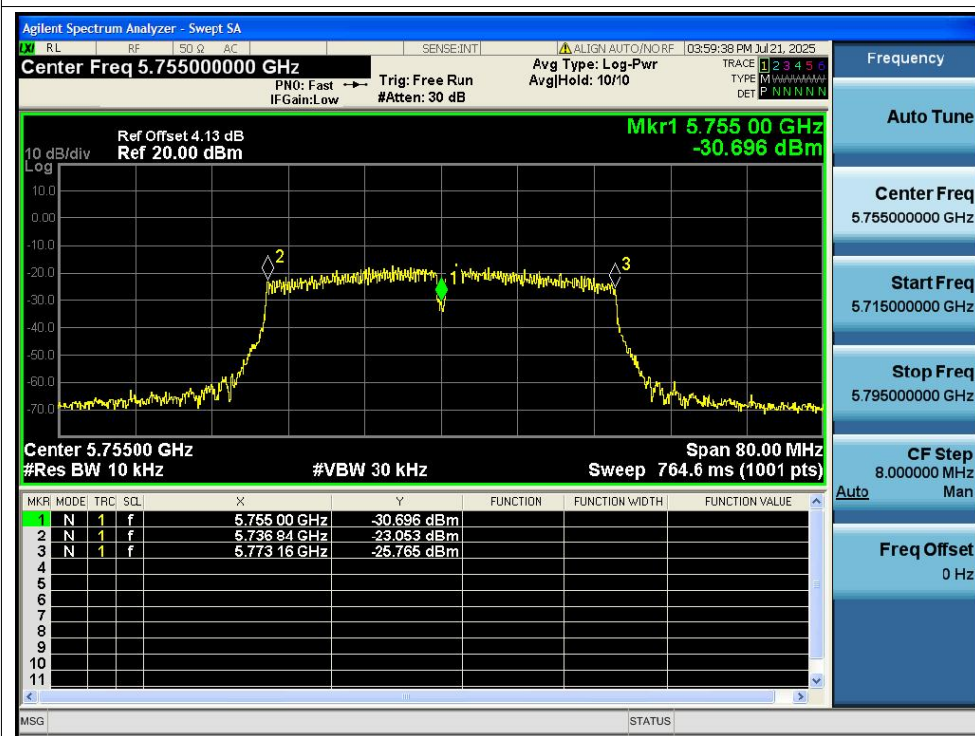


Freq. Stability NVNT n40 5795MHz Ant2 0 Minutes

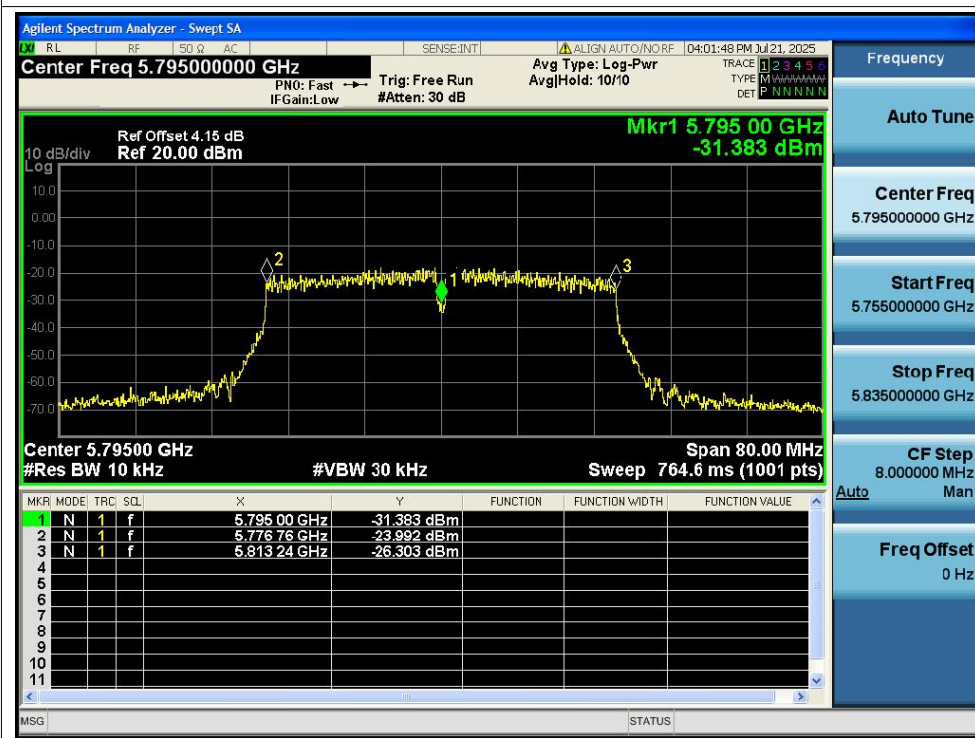


Freq. Stability NVNT ac20 5180MHz Ant2 0 Minutes

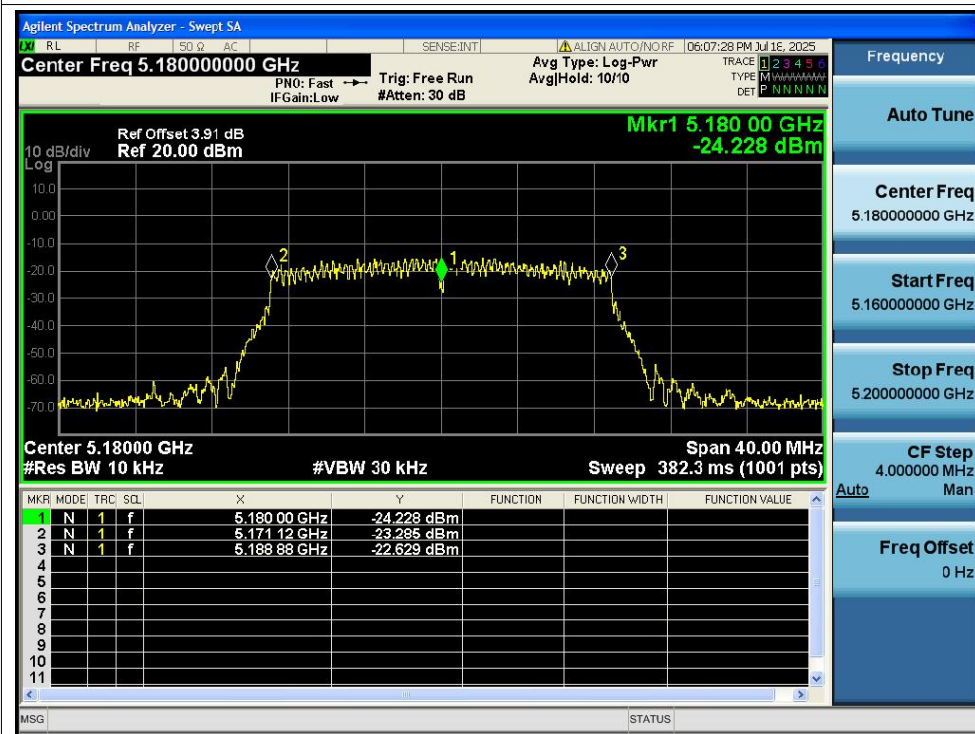

Freq. Stability NVNT ac20 5200MHz Ant2 0 Minutes

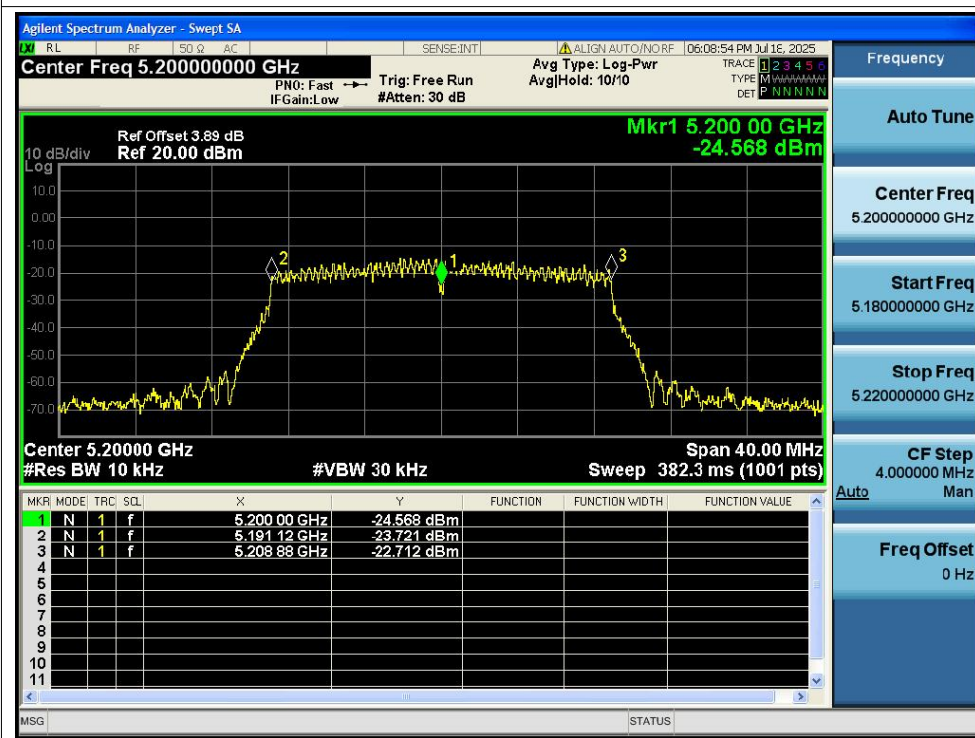

Freq. Stability NVNT ac20 5240MHz Ant2 0 Minutes

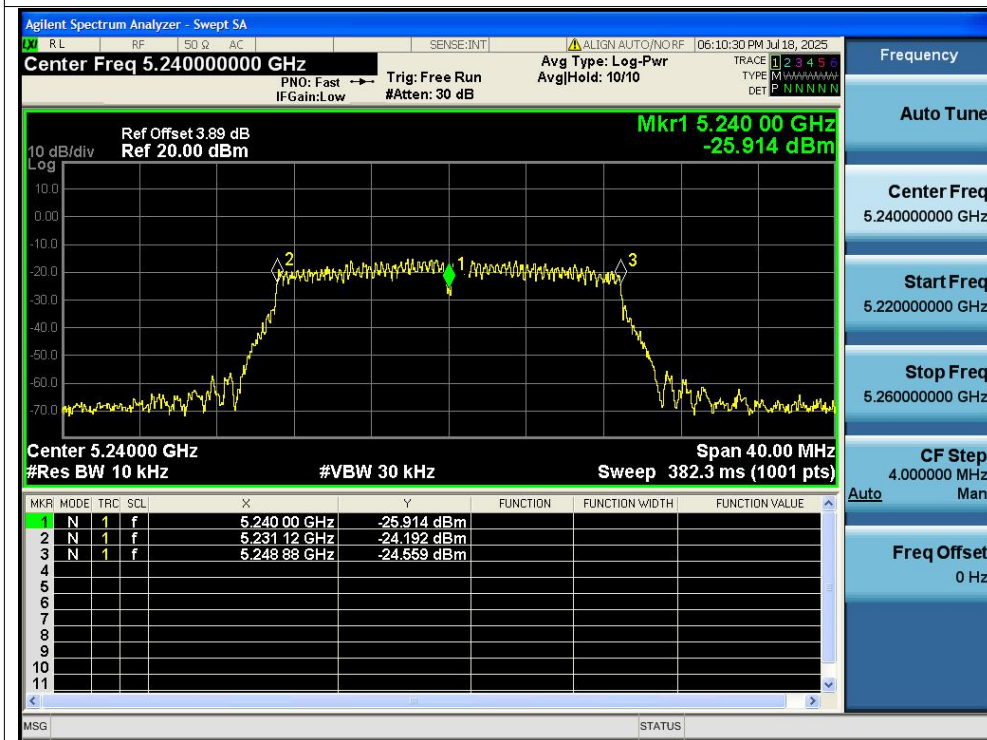

Freq. Stability NVNT ac20 5745MHz Ant2 0 Minutes

