



infanttech

INSTRUCTION MANUAL
ALWAYS IN VIEW™ BABY MONITOR FOR CARS

[Model numbers 1000-GM; 1000- BP; 1000- YG]



PLEASE READ THE FOLLOWING INSTRUCTIONS AND WARNINGS CAREFULLY BEFORE USING YOUR **ALWAYS IN VIEW™** BABY MONITOR. KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE.

For Technical Support call [855-422-2983]
or email us at info@infanttech.com.

For use with Children from birth to toddlers.

 **WARNING:**
Adult installation required.

Thank you for purchasing Infanttech's **Always In View™** baby monitor for cars. This unique monitor allows parents to safely operate a vehicle by reducing the need to turn around while driving. Your **Always In View™** will allow you to monitor your baby while he or she is facing backwards in a rear passenger seat. Additionally, your **Always In View™** can also be used when your baby becomes a toddler and is facing forward in the rear passenger seat. The parent's unit includes a digital video monitor that easily attaches to the dashboard window of any vehicle, with a convenient car adapter charger, and a camera installed in a cute plush that can be secured in various locations in the backseat. Both the monitor and camera are equipped with a rechargeable battery.

Please note, that use of the *Always In View™* does not replace a driver's need to obey all traffic and safety laws and use reasonable safety precautions while driving to minimize distractive driving.

 **CAUTION:**

KEEP SMALL PARTS OUT OF CHILD'S REACH

WARNING:

THIS PRODUCT CANNOT REPLACE RESPONSIBLE ADULT SUPERVISION AND VEHICLE DRIVING.

- Test monitor before first use, periodically, and when changing location of the units.
- Prevent distracted driving- before you are ready to start your vehicle, make sure you have adjusted all of your vehicle's options such as seats, mirrors, seatbelts, the position of the camera from the *Always In View™* facing your child, etc.
- Prevent Cord entanglement- do not place any cords within arm's reach of baby. Never use extension cords with AC adapters. Only use the AC Adapters provided.
- When an AC Adapter is plugged into an electrical outlet, do not touch the exposed end.
- Do not use monitor near water.
- Keep monitor away from heat sources and make sure there is proper ventilation.
- **THIS PRODUCT IS NOT A TOY. DO NOT ALLOW CHILDREN TO PLAY WITH IT. NOT INTENDED FOR CHILD'S PLAY.**

BATTERY WARNING:

- Do not Mix old and new batteries.
- Do not mix alkaline, standard, or rechargeable batteries.
- Remove batteries and unplug the rechargeable battery pack when product is stored for a long period of time or when batteries are exhausted.
- Dispose of exhausted batteries properly.
- Use only the original rechargeable battery pack. Warranty is void if other batteries are used. Please contact Infantech Solutions, Inc. for a replacement battery, contact information can be found at the end of the instruction booklet.

CAUTION:

KEEP SMALL PARTS OUT OF CHILD'S REACH

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Industry Canada (IC) Compliance Statement

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Industrie Canada (IC) Déclaration de conformité

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

CAUTION: Changes or modifications not expressly approved by Infantech Solutions, Inc., may void the users' authority to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio reception, which can be determined by turning the equipment on and off, the user is encouraged to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (monitor)
- Increase the separation between the equipment and the receiver
- Connect the equipment into a different circuit from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Use only the original rechargeable battery pack or approved battery replacement. Warranty void if other batteries are used. Please contact Infantech Solutions, Inc. for replacement battery pack, contact information can be found on the next page.


QUICK REFERENCE FOR DAILY OPERATION:

After your initial set up (see instructions below), follow these easy steps for optimal performance of your *Always in View* monitor:


1. Make sure the safety buckle straps on the plush of the camera are always used and adjusted to fit snugly on any headrest the plush is mounted on.
2. Turn on the monitor by holding the power button for 5 seconds.
3. When you place your baby/toddler in the backseat, turn on the camera in the plush by unzipping the zipper and holding the power button until the light turns green. Zip up the plush.
4. The monitor should display the images from the camera. Adjust the camera in the plush for the view you like.
5. When exiting the vehicle, turn off the monitor by holding the power button for 5 seconds. When taking your baby out of the vehicle, turn off the camera in the plush. **This will ensure optimal battery life and performance.**
6. Remember to charge monitor or camera as needed. If your vehicle is equipped with cigarette lighter or power outlets, you can keep your monitor plugged in with the included 2-port USB car adapter. The camera in the plush may be charged in the vehicle when your child is not in the car.
7. When your monitor and camera are fully charged, enjoy a wireless unit.

FEATURES AND COMPONENTS:

Monitor (Front View):

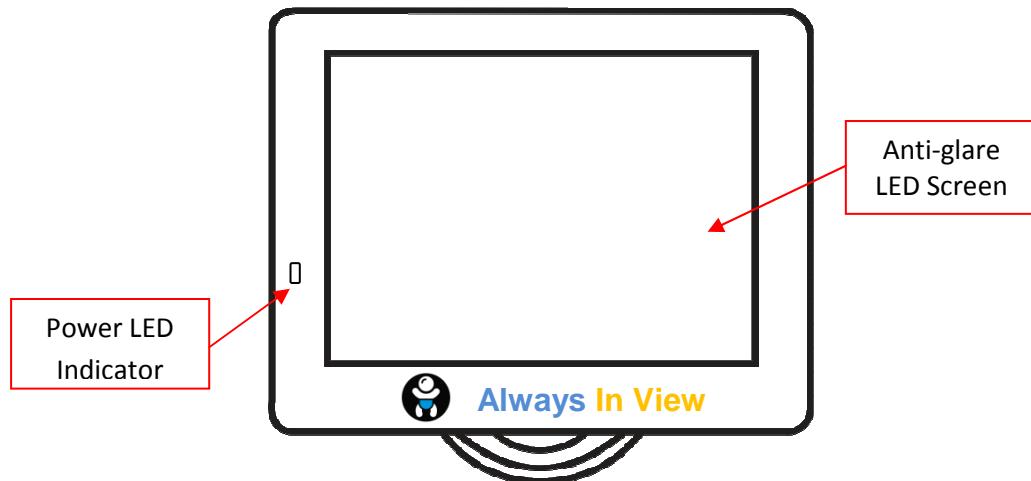


Monitor (Side View):

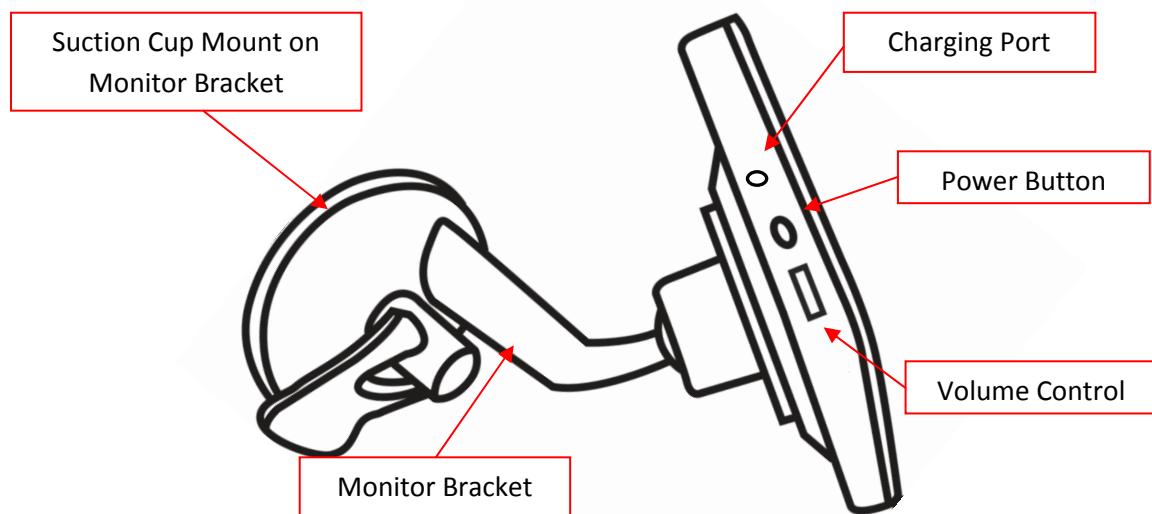


FEATURES AND COMPONENTS (Continued):

Monitor (Back View):

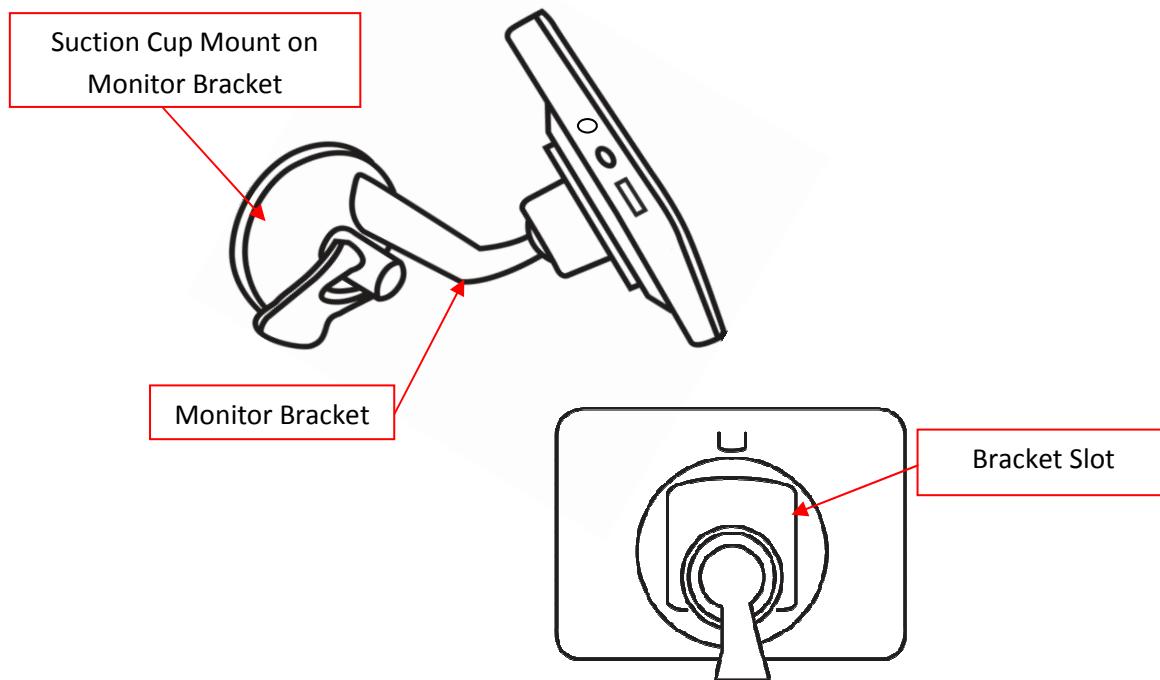


Camera Plush (Front View):

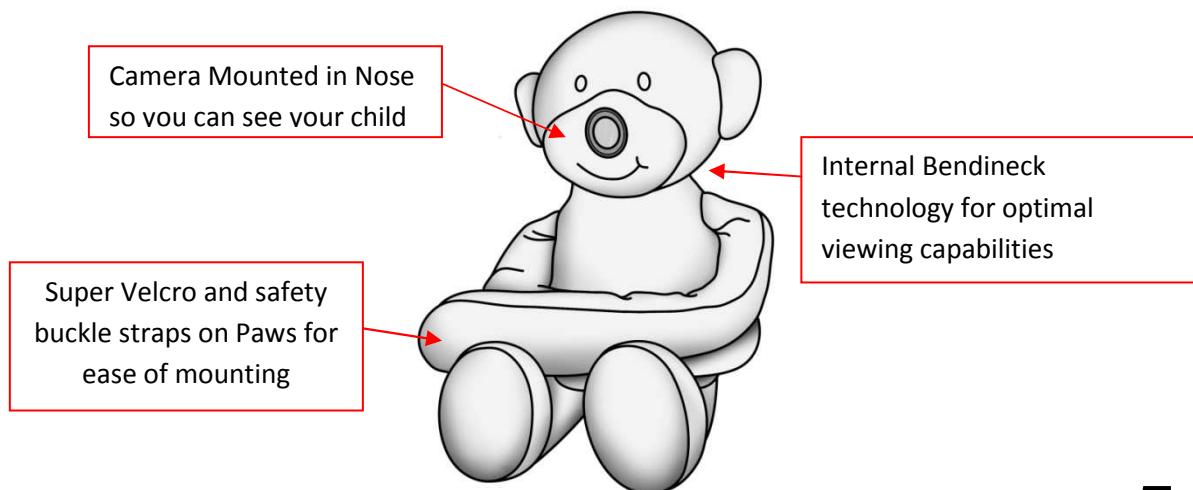


FEATURES AND COMPONENTS (Continued):

Camera Plush (bottom View):

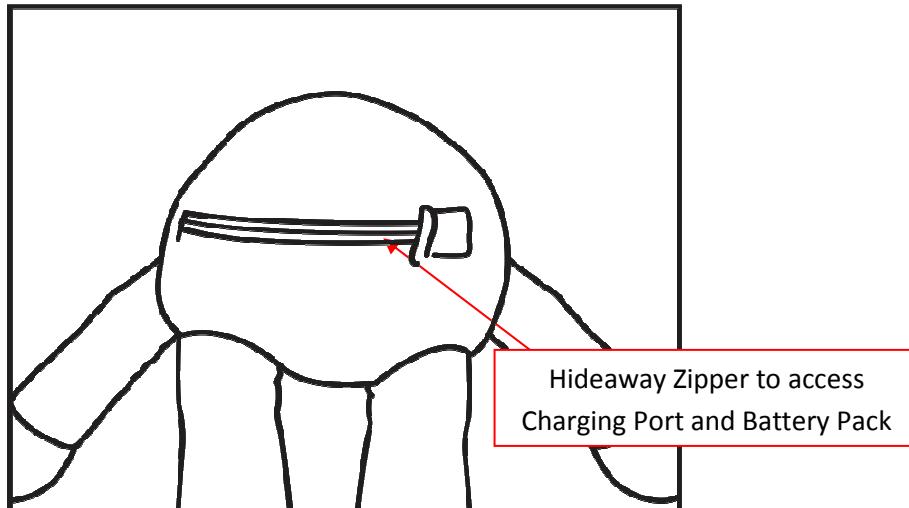


Battery Pack inside the Plush:

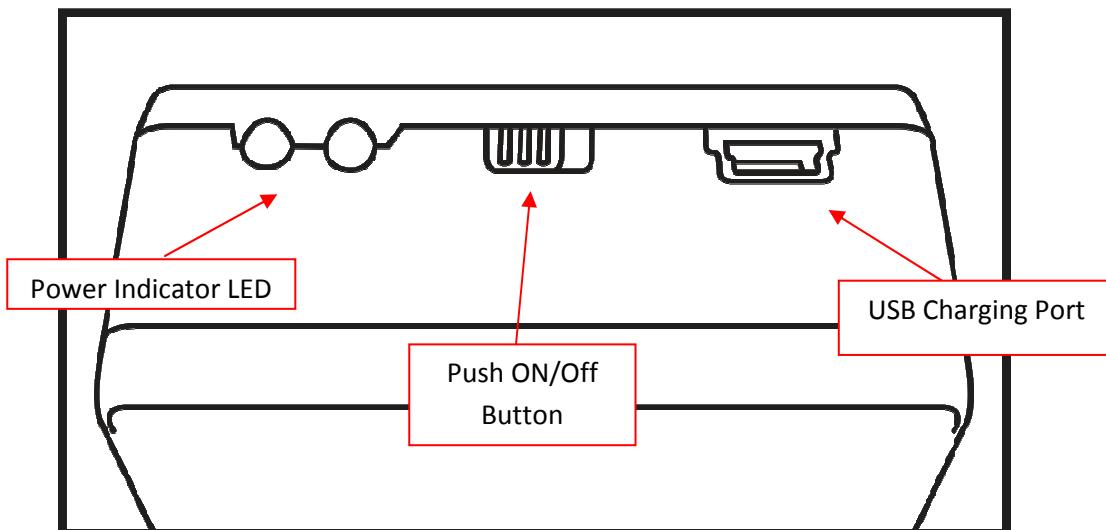


ACCESSORIES:


2-Port USB Car Charger (1)

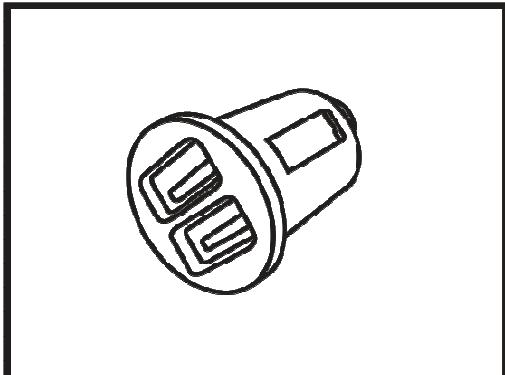


AC adapters (1)

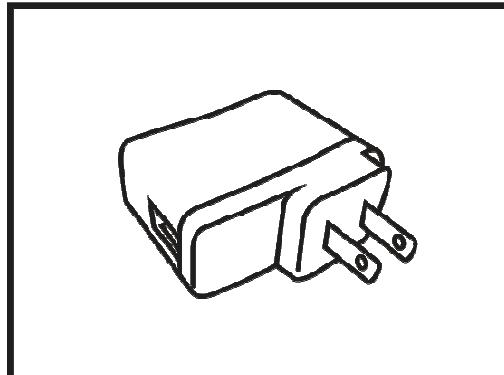

3Ft AND 7Ft USB Cables (1 of Each)

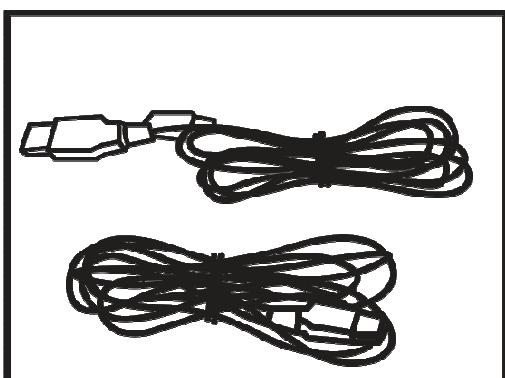

Monitor mount w/ suction cup (1)

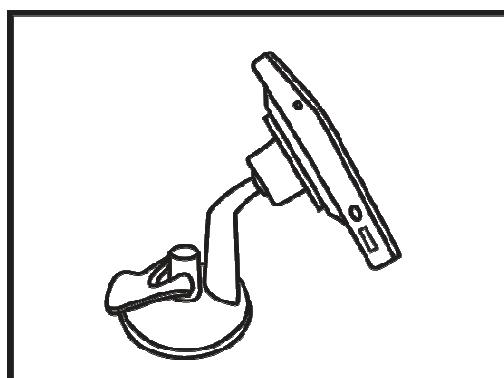

NOTE: Style and designs may vary from pictures


Contents:

- 1-Plush with Camera
- 1- 1000Mah Lithium ion Battery (Inside Plush)
- 1- 3.5" LCD Monitor
- 1- Monitor bracket with suction cup mount
- 1- USB Charging cable for plush
- 1- Monitor charging cable
- 1- 2-Port USB car adapter
- 1- USB AC wall adapter
- 1- Instruction Manual


SET UP & USE:

Monitor (Charge for 24 hours prior to first use):

Step 1: Attach the mounting bracket to the back of the monitor slot.

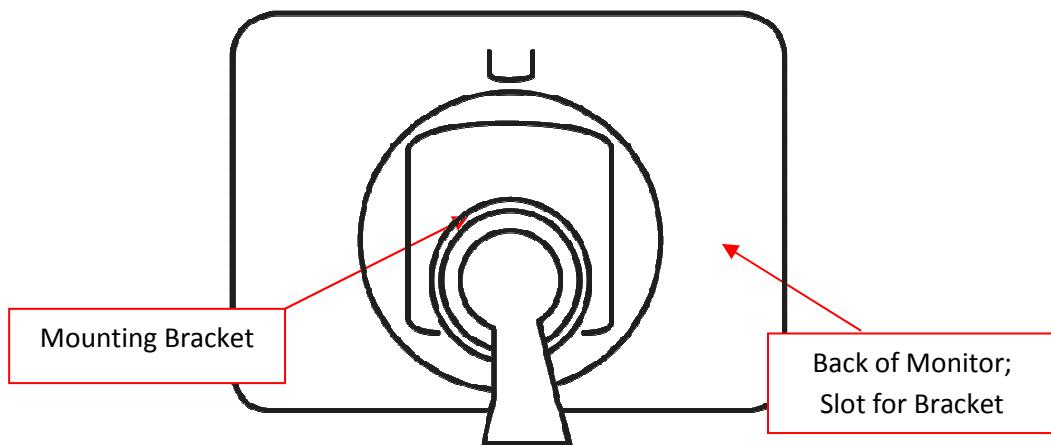


Step 2: Attach the monitor to the windshield of the car in a secure location that **does not obstruct your view**. We recommend the left corner of the driver's windshield. (only place it in a location allowed by law so that it doesn't interfere with vision.)

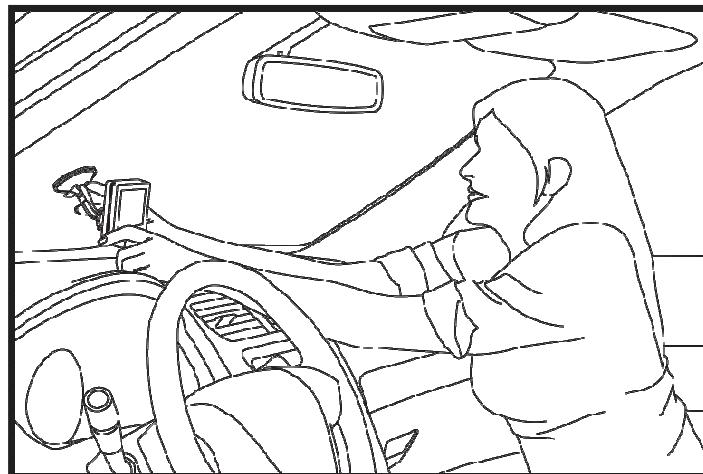


SET UP & USE (Continued):

Step 3: Press On/Off button for 5 seconds to turn monitor On.

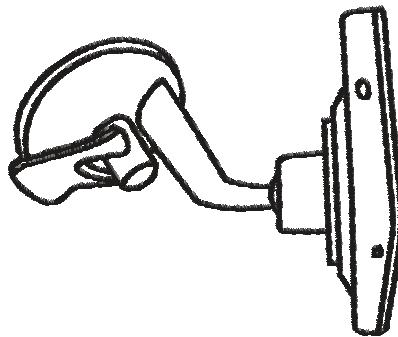

Step 4: Unzip bottom of plush and turn On/Off button to On position. Reclose zipper.

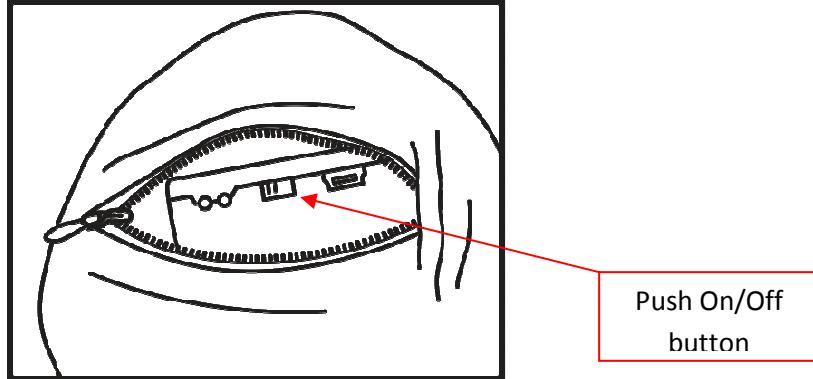


Step 5: Once the camera and monitor are on, they will pair. Signal strength / Battery status will show on the LCD monitor. Meanwhile, the monitor can receive the video from the camera.

SET UP & USE (Continued):


REAR FACING SET UP

Camera in Plush: For rear facing seat installation for Infants
(Charge for 24 hours prior to first use):

Step 6: Wrap plush's arms around the backseat headrest in front of car seat and attach palms together with the Velcro. Attach the plastic safety buckle straps and pull for a snug fit around the headrest posts. **Always use the buckle straps to ensure the camera will stay in place.** **Note-** due to differences in headrest post width, Velcro use may not be possible. The buckle straps should always fit.

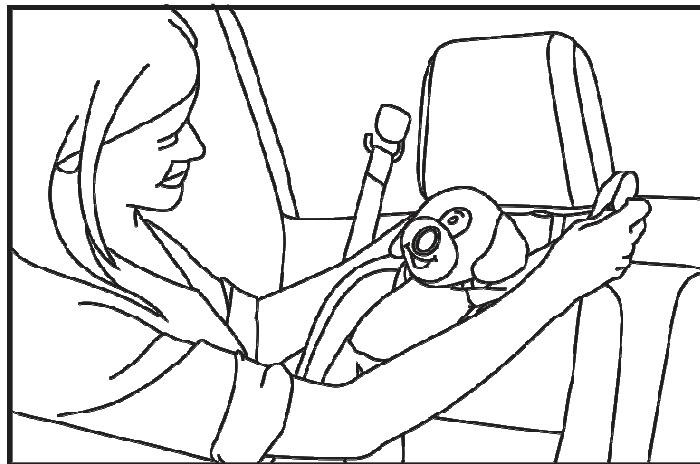

Step 7: Adjust plush's head by flexing the internal bendineck for optimal viewing.

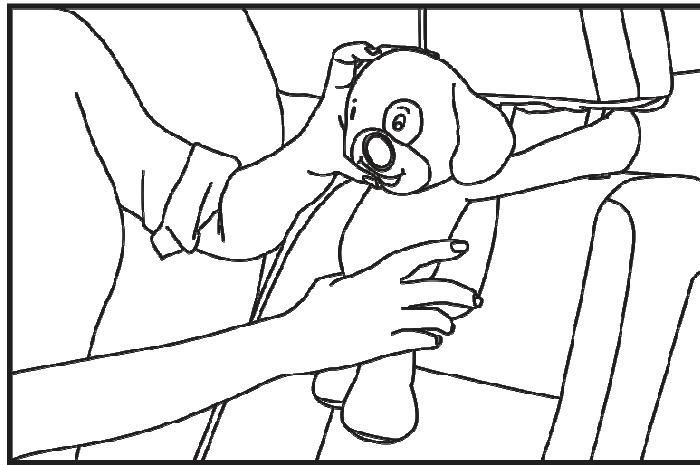

SET UP & USE (Continued):

Step 8: Before you are ready to drive, make sure you have adjusted all of your vehicle's options such as seats, mirrors, seatbelts, and the position of the camera in the plush facing your child.



Step 9: Drive safely and with quick glances knowing that your child is *Always In View*. If you see something in the monitor that alerts you to attend to your child, continue to follow safe driving practices, and calmly and safely pull off the road.


SET UP & USE (Continued):

FORWARD FACING SET UP


Camera in Plush: For Forward facing Seat installation for toddlers (Charge for 24 hours prior to use):

See steps 1-5 above.

Step 6: Wrap plush's arms around the front passenger's seat headrest in front of the toddler car seat and attach palms together with Velcro. . Attach the plastic safety buckle straps and pull for a snug fit around the headrest posts. **Always use the buckle straps to ensure the camera will stay in place.** **Note-** due to differences in headrest post width, Velcro use may not be possible. The buckle straps should always fit.

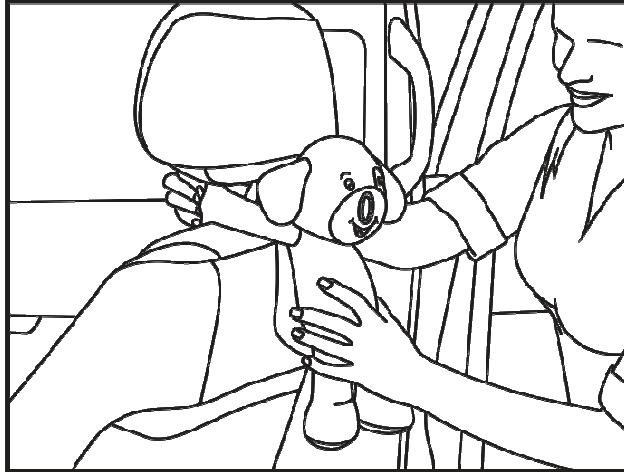

Step 7: Adjust plush's head by flexing the internal bendi-neck for optimal viewing.

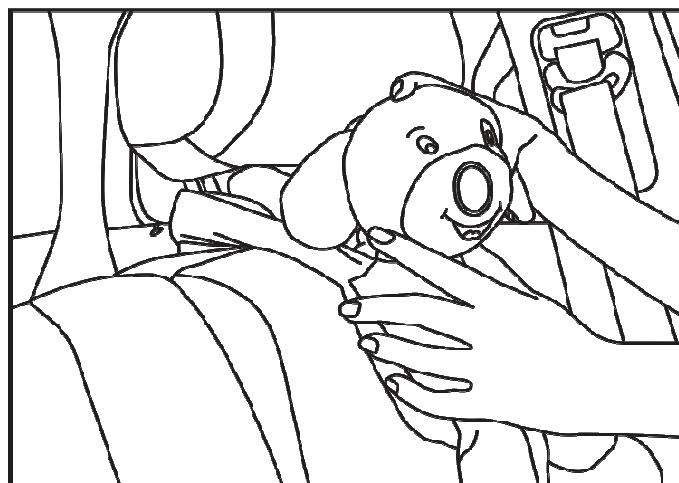

SET UP & USE (Continued):

Step 8: Before you are ready to drive, make sure you have adjusted all of your vehicle's options such as seats, mirrors, seatbelts, and the position of the camera in the plush facing your child.

See step 9 above on page 11.



BATTERY CHARGING

Monitor

Connect USB adapter to the monitor, the light will be red. Once charging is complete, the light will be green. Monitor screen indicates battery charge.

Camera

Connect USB adapter to the camera, the light will be red. Once charging is complete, the light will be green.

Signal Indicators

Signal Strength Indicators	Description
	Strong Signal
	Moderate Signal
	Poor Signal

Note: Verify the signal strength on the LCD monitor. Please reference the above table.

PROBLEM SOLVING:

Pair Mode

- While the monitor is off, press and hold the power button until the light flashes. Then, while the camera is off, press and hold the power button on the pluses battery pack for approximately 3-5 seconds. You will see the video from the camera once the pairing is complete. The power light will stop flashing.

No Sound coming from speaker

- Make sure both units are powered on.
- Set Volume to a higher setting.

No Video

- Check the DC power or battery on the camera.
- Make sure the camera and monitor are in effective range.

Infrared (IR) Lighting

- In the dark, the IR lights will automatically work, but IR lights do not provide light.

PROBLEM SOLVING (Continued):

Static

- Monitor and plush are too close together – move farther apart.
- Turn down the volume on the monitor.
- Make sure the battery is fully charged.

Flickering monitor

- Make sure monitor and camera are moved away from other wireless devices (i.e. Wi-Fi, Bluetooth, GPS, etc).

Weak reception or no reception

- Make sure both units are turned on.
- Move plush closer to monitor.
- Make sure batteries are charged on both plush and monitor.

Accidentally tried Pairing camera and monitor while camera is on

- Open up battery pack in plush animal.
- Remove battery.
- Get paperclip and short outer pins of battery connectors.
- Camera will shut off.
- Connect USB power cable.
- Connect power cable to house or car charger and plug into respective outlet.

NOTE: Make sure both units are fully charged for optimal performance

If you experience a problem that is not noted in this manual, please do not return the product to the store as once it is returned it cannot be re-sold and the materials and energy used to make it are wasted. Our Customer Service Department may have a simple solution to your problem. Please contact our Customer Service Department by phone at 1-855-422-2983 between the hours of 9:00 a.m. and 4:30 p.m. (PST) or via email 24 hours a day at info@infanttech.com.

Infanttech Solutions, Inc. warranty Policy

Infanttech Solutions, Inc will repair or replace your unit free of charge for 12 months from the date of purchase if the unit is defective in workmanship or materials. To claim your repair/replacement, the product must be returned to Infanttech Solutions along with a copy of the original purchase receipt. In the absence of the purchase receipt, the warranty will be 12 months from the date of manufacture. Please visit www.infanttech.com to register your product.

Void Warranty :

This warranty does not apply to normal wear or damage from misuse, removal or tampering of serial numbers, abuse, improper storage and handling, installation, accident, unauthorized repair or alteration. If possible, Infanttech can replace or repair unit for a fee.

For most recent manual visit www.infanttech.com

Para manual mas reciente visite www.infanttech.com

Pour manuel plus tard visite www.infanttech.com



infantech

Infanttech Solutions, Inc.

515 W Whittier Blvd
Montebello, CA 90640
855-422-2983

© 2013 Infanttech Solutions, Inc.
Please retain information for future
reference. Color and styles may vary.
MADE IN CHINA