

Appendix A. Test Result of Maximum Conducted Output Power

Modulation	Frequency (MHz)	Maximum Conducted Output Power (dBm)			Limit (dBm)	Result
		Ant. 1	Ant. 2	Total		
802.11a (20MHz)	5180	14.38	14.89	17.65	24	Pass
	5220	14.25	14.68	17.48	24	Pass
	5240	14.69	15.25	17.99	24	Pass
	5260	14.96	16.05	18.55	24	Pass
	5300	14.69	15.62	18.19	24	Pass
	5320	14.06	15.71	17.97	24	Pass
	5500	13.52	14.46	17.03	24	Pass
	5580	13.02	13.46	16.26	24	Pass
	5700	12.51	12.46	15.50	24	Pass
	5745	11.82	12.06	14.95	30	Pass
	5785	11.85	12.55	15.22	30	Pass
	5825	11.80	13.03	15.47	30	Pass
802.11n (20MHz)	5180	14.22	15.09	17.69	24	Pass
	5220	12.94	13.41	16.19	24	Pass
	5240	13.11	13.92	16.54	24	Pass
	5260	13.40	15.06	17.32	24	Pass
	5300	13.05	14.88	17.07	24	Pass
	5320	13.93	14.36	17.16	24	Pass
	5500	11.43	13.24	15.44	24	Pass
	5580	11.15	12.41	14.84	24	Pass
	5700	11.24	11.28	14.27	24	Pass
	5745	10.53	11.06	13.81	30	Pass
	5785	10.70	11.42	14.09	30	Pass
	5825	10.58	11.72	14.20	30	Pass
802.11n (40MHz)	5190	13.08	13.62	16.37	24	Pass
	5230	13.38	14.55	17.01	24	Pass
	5270	13.19	15.12	17.27	24	Pass
	5310	12.82	13.56	16.22	24	Pass
	5510	11.44	13.02	15.31	24	Pass
	5550	11.37	13.25	15.42	24	Pass
	5670	11.66	11.73	14.71	24	Pass
	5755	10.74	11.30	14.04	30	Pass
	5795	10.53	11.35	13.97	30	Pass

Note: Total Output Power (dBm) = $10 \cdot \log (\text{Ant.1 (mW)} + \text{Ant.2 (mW)})$.

For straddle channels, the total power = conducted output power + duty factor, and the duty factor refer to section 2.3.

Modulation	Frequency (MHz)	Maximum Conducted Output Power (dBm)			Limit (dBm)	Result
		Ant. 1	Ant. 2	Total		
802.11ac (20MHz)	5180	10.28	10.76	13.54	24	Pass
	5220	10.21	10.78	13.51	24	Pass
	5240	10.39	11.15	13.80	24	Pass
	5260	10.68	11.97	14.38	24	Pass
	5300	10.06	11.94	14.11	24	Pass
	5320	9.59	11.72	13.79	24	Pass
	5500	8.87	10.46	12.75	24	Pass
	5580	8.64	9.30	11.99	24	Pass
	5700	10.18	9.84	13.02	24	Pass
	5745	9.95	9.75	12.86	30	Pass
	5785	10.14	9.71	12.94	30	Pass
	5825	9.00	10.88	13.05	30	Pass
802.11ac (40MHz)	5190	11.71	11.48	14.61	24	Pass
	5230	11.71	13.56	15.74	24	Pass
	5270	11.72	13.66	15.81	24	Pass
	5310	11.35	13.40	15.51	24	Pass
	5510	10.55	12.13	14.42	24	Pass
	5550	10.75	11.89	14.37	24	Pass
	5670	10.35	10.59	13.48	24	Pass
	5755	9.61	11.42	13.62	30	Pass
	5795	10.32	10.99	13.68	30	Pass
802.11ac (80MHz)	5210	12.23	11.70	14.98	24	Pass
	5290	11.54	13.47	15.62	24	Pass
	5530	10.16	11.51	13.90	24	Pass
	5610	9.77	10.27	13.04	24	Pass
	5775	10.30	11.44	13.92	30	Pass
802.11ac (160MHz)	5250	13.88	12.68	16.33	24	Pass
	5570	13.62	11.70	15.78	24	Pass

Note: Total Output Power (dBm) = $10 \cdot \log (\text{Ant.1 (mW)} + \text{Ant.2 (mW)})$.

For straddle channels, the total power = conducted output power + duty factor, and the duty factor refer to section 2.3.

Modulation	Frequency (MHz)	RU Config	Maximum Conducted Output Power (dBm)			Limit (dBm)	Result
			Ant. 1	Ant. 2	Total		
802.11ax (20MHz)	5180	26/0	5.83	6.24	9.05	24	Pass
		52/37	6.88	7.55	10.24	24	Pass
		106/53	7.79	6.10	10.04	24	Pass
		242/61	11.78	11.36	14.59	24	Pass
	5200	26/0	6.42	7.55	10.03	24	Pass
		52/37	6.34	7.22	9.81	24	Pass
		106/53	7.43	6.57	10.03	24	Pass
		242/61	9.73	12.22	14.16	24	Pass
	5240	26/0	7.51	6.38	9.99	24	Pass
		52/37	6.88	8.09	10.54	24	Pass
		106/53	7.64	6.28	10.02	24	Pass
		242/61	10.46	12.54	14.63	24	Pass
	5260	26/0	7.97	6.44	10.28	24	Pass
		52/37	7.02	8.64	10.92	24	Pass
		106/53	8.36	6.50	10.54	24	Pass
		242/61	10.32	12.84	14.77	24	Pass
	5280	26/0	7.76	6.08	10.01	24	Pass
		52/37	6.67	8.64	10.78	24	Pass
		106/53	6.18	7.13	9.69	24	Pass
		242/61	10.50	12.54	14.65	24	Pass
	5320	26/0	7.12	5.97	9.59	24	Pass
		52/37	6.72	8.66	10.81	24	Pass
		106/53	6.02	6.67	9.37	24	Pass
		242/61	10.16	12.34	14.40	24	Pass
	5500	26/0	6.53	7.33	9.96	24	Pass
		52/37	6.24	7.16	9.73	24	Pass
		106/53	6.83	6.29	9.58	24	Pass
		242/61	10.81	11.72	14.30	24	Pass
	5580	26/0	5.93	6.61	9.29	24	Pass
		52/37	5.62	6.28	8.97	24	Pass
		106/53	6.31	5.91	9.12	24	Pass
		242/61	9.20	10.77	13.07	24	Pass
	5700	26/0	6.30	5.93	9.13	24	Pass
		52/37	6.66	6.56	9.62	24	Pass
		106/53	6.26	6.24	9.26	24	Pass
		242/61	7.91	11.07	12.78	24	Pass
	5745	26/0	6.32	6.58	9.46	30	Pass
		52/37	6.10	6.36	9.24	30	Pass
		106/53	5.94	5.98	8.97	30	Pass
		242/61	8.35	10.41	12.51	30	Pass
	5785	26/0	6.42	6.77	9.61	30	Pass
		52/37	6.31	6.38	9.36	30	Pass
		106/53	5.78	6.17	8.99	30	Pass
		242/61	8.87	10.14	12.56	30	Pass
	5825	26/0	6.11	7.05	9.62	30	Pass
		52/37	5.96	6.97	9.50	30	Pass
		106/53	6.09	6.51	9.32	30	Pass
		242/61	8.71	10.78	12.88	30	Pass

Modulation	Frequency (MHz)	RU Config	Maximum Conducted Output Power (dBm)			Limit (dBm)	Result
			Ant. 1	Ant. 2	Total		
802.11ax (40MHz)	5190	26/0	7.45	8.13	10.81	24	Pass
		52/37	5.59	7.71	9.79	24	Pass
		106/53	5.56	7.33	9.54	24	Pass
		242/61	6.81	6.09	9.48	24	Pass
		484/65	9.44	9.23	12.35	24	Pass
	5230	26/0	5.87	7.43	9.73	24	Pass
		52/37	6.00	7.57	9.87	24	Pass
		106/53	6.23	7.66	10.01	24	Pass
		242/61	6.09	7.54	9.89	24	Pass
		484/65	9.02	10.85	13.04	24	Pass
	5270	26/0	5.91	7.67	9.89	24	Pass
		52/37	5.55	7.69	9.76	24	Pass
		106/53	6.01	7.35	9.74	24	Pass
		242/61	6.06	7.88	10.07	24	Pass
		484/65	9.18	10.89	13.13	24	Pass
	5310	26/0	6.21	7.17	9.73	24	Pass
		52/37	5.59	7.51	9.67	24	Pass
		106/53	5.76	7.46	9.70	24	Pass
		242/61	8.66	6.66	10.78	24	Pass
		484/65	8.80	10.47	12.73	24	Pass
	5510	26/0	7.21	6.70	9.97	24	Pass
		52/37	7.64	6.48	10.11	24	Pass
		106/53	7.57	6.36	10.02	24	Pass
		242/61	6.69	5.83	9.29	24	Pass
		484/65	7.93	9.63	11.87	24	Pass
	5550	26/0	7.54	6.30	9.97	24	Pass
		52/37	8.00	6.17	10.19	24	Pass
		106/53	7.85	6.15	10.09	24	Pass
		242/61	7.17	6.51	9.86	24	Pass
		484/65	8.27	9.17	11.75	24	Pass
	5670	26/0	6.31	6.23	9.28	24	Pass
		52/37	6.71	6.23	9.49	24	Pass
		106/53	7.22	6.45	9.86	24	Pass
		242/61	8.19	7.03	10.66	24	Pass
		484/65	8.06	11.24	12.95	24	Pass
	5755	26/0	6.53	5.93	9.25	30	Pass
		52/37	6.89	6.35	9.64	30	Pass
		106/53	6.39	5.68	9.06	30	Pass
		242/61	7.84	6.74	10.34	30	Pass
		484/65	8.23	11.08	12.90	30	Pass
	5795	26/0	6.85	6.07	9.49	30	Pass
		52/37	6.98	6.30	9.66	30	Pass
		106/53	6.62	6.13	9.39	30	Pass
		242/61	7.37	6.58	10.00	30	Pass
		484/65	8.53	10.86	12.86	30	Pass

Modulation	Frequency (MHz)	RU Config	Maximum Conducted Output Power (dBm)			Limit (dBm)	Result
			Ant. 1	Ant. 2	Total		
802.11ax (80MHz)	5210	26/0	7.94	8.60	11.29	24	Pass
		52/37	5.96	7.80	9.99	24	Pass
		106/53	6.33	7.91	10.20	24	Pass
		242/61	6.29	8.10	10.30	24	Pass
		484/65	5.97	7.70	9.93	24	Pass
		996/67	12.12	11.70	14.93	24	Pass
	5290	26/0	7.57	6.74	10.19	24	Pass
		52/37	7.73	6.93	10.36	24	Pass
		106/53	7.40	6.54	10.00	24	Pass
		242/61	7.76	6.50	10.19	24	Pass
		484/65	7.15	6.29	9.75	24	Pass
		996/67	11.01	9.07	13.16	24	Pass
	5530	26/0	6.85	7.06	9.97	24	Pass
		52/37	7.05	6.77	9.92	24	Pass
		106/53	7.02	6.50	9.78	24	Pass
		242/61	6.85	6.38	9.63	24	Pass
		484/65	6.48	7.83	10.22	24	Pass
		996/67	7.55	10.35	12.18	24	Pass
	5610	26/0	6.48	6.26	9.38	24	Pass
		52/37	6.49	6.33	9.42	24	Pass
		106/53	6.51	5.77	9.17	24	Pass
		242/61	6.10	5.65	8.89	24	Pass
		484/65	6.73	7.26	10.01	24	Pass
		996/67	7.61	10.73	12.45	24	Pass
	5775	26/0	6.50	6.52	9.52	30	Pass
		52/37	6.38	6.27	9.34	30	Pass
		106/53	6.12	5.81	8.98	30	Pass
		242/61	6.33	5.57	8.98	30	Pass
		484/65	7.50	6.95	10.24	30	Pass
		996/67	8.57	11.24	13.12	30	Pass

Note: Total Output Power (dBm) = $10 \cdot \log (\text{Ant.1 (mW)} + \text{Ant.2 (mW)})$.


For straddle channels, the total power = conducted output power + duty factor, and the duty factor refer to section 2.3.

Modulation	Frequency (MHz)	RU Config	Maximum Conducted Output Power (dBm)			Limit (dBm)	Result
			Ant. 1	Ant. 2	Total		
802.11ax (160MHz)	5250	26/0	6.43	6.13	9.29	24	Pass
		52/37	6.48	5.97	9.24	24	Pass
		106/53	6.47	6.05	9.28	24	Pass
		242/61	6.26	5.85	9.07	24	Pass
		484/65	6.95	6.30	9.65	24	Pass
		996/67	6.60	5.95	9.30	24	Pass
		2x996/68	10.22	9.87	13.06	24	Pass
	5570	26/0	6.03	6.25	9.15	24	Pass
		52/37	6.16	6.23	9.21	24	Pass
		106/53	6.05	5.88	8.98	24	Pass
		242/61	5.69	6.11	8.92	24	Pass
		484/65	6.89	7.47	10.20	24	Pass
		996/67	4.54	5.19	7.89	24	Pass
		2x996/68	10.13	11.39	13.82	24	Pass


Note: Total Output Power (dBm) = $10 \cdot \log (\text{Ant.1 (mW)} + \text{Ant.2 (mW)})$.

For straddle channels, the total power = conducted output power + duty factor, and the duty factor refer to section 2.3.


Appendix B. Test Result of Transmitter Radiated Spurious Emission

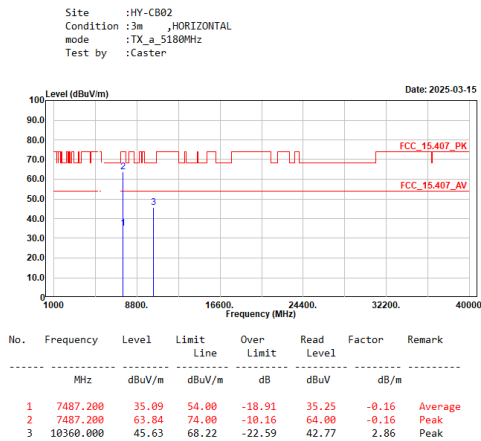

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

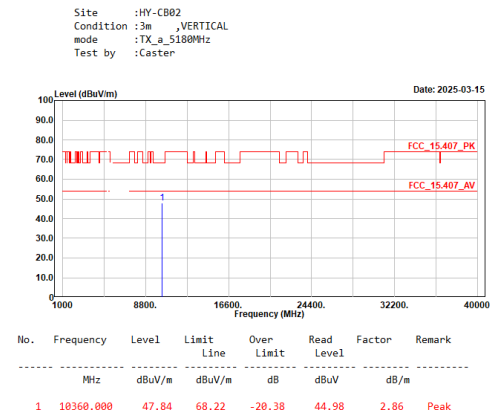

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

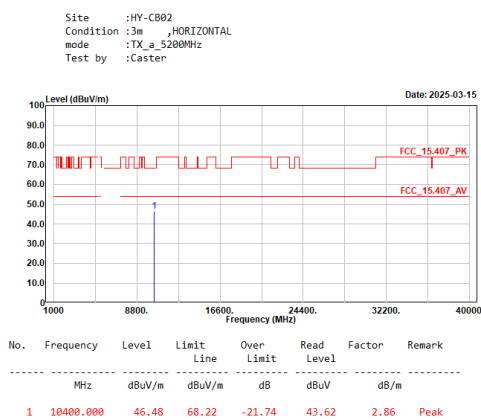


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.



Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5240MHz
Test by :Caster

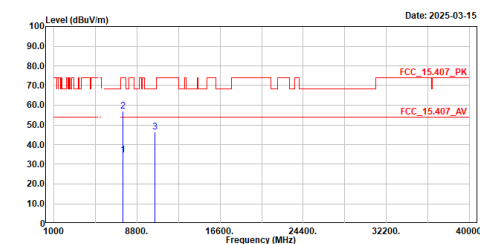


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	7449.800	34.66	54.00	-19.34	34.78	-0.04	Average
2	7449.800	56.87	74.00	-17.13	56.91	-0.04	Peak
3	10480.000	46.45	68.22	-21.77	43.60	2.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5240MHz
Test by :Caster

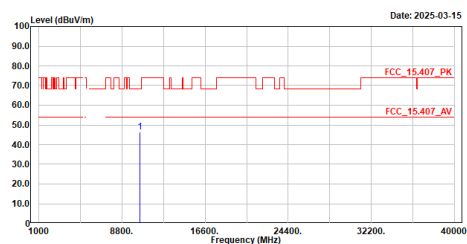


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	10480.000	46.41	68.22	-21.81	43.56	2.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5260MHz
Test by :Caster

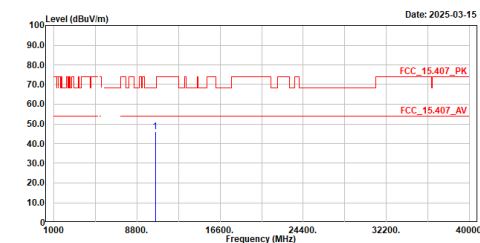


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	18520.000	45.99	68.22	-22.23	43.14	2.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5260MHz
Test by :Caster

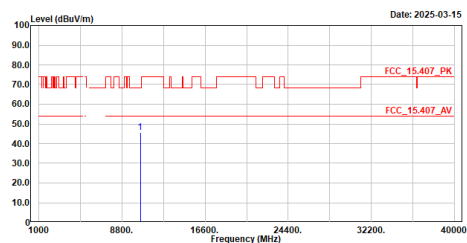


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	18520.000	45.78	68.22	-22.44	42.93	2.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5280MHz
Test by :Caster

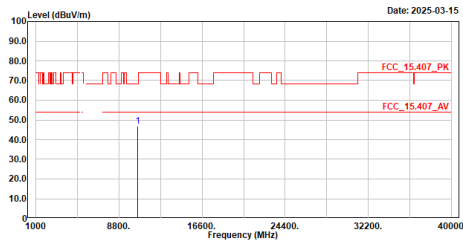


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10560.000	46.62	68.22	-21.60	43.76	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5280MHz
Test by :Caster

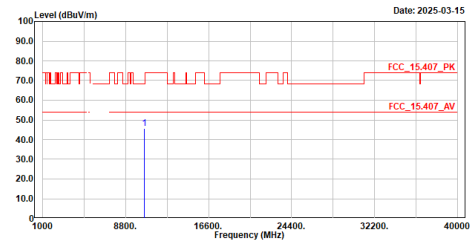


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10560.000	45.57	68.22	-22.65	42.71	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5320MHz
Test by :Caster

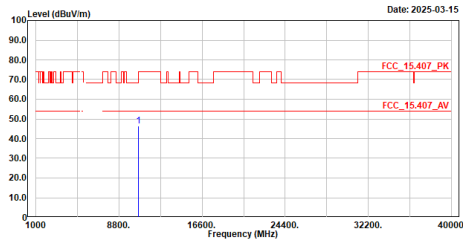


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10640.000	46.35	74.00	-27.65	43.23	3.12	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.



Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5320MHz
Test by :Caster

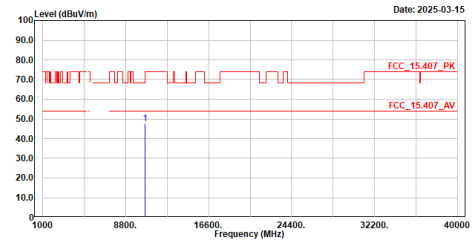


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10640.000	47.48	74.00	-26.52	44.36	3.12	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.



Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5700MHz
Test by :Caster

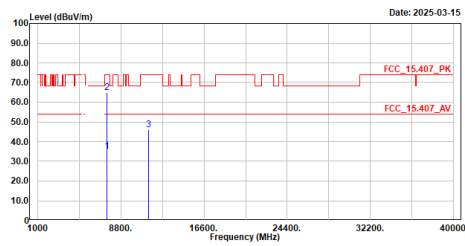


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	7487.200	34.97	54.00	-19.03	35.13	-0.16	Average
2	7487.200	64.93	74.00	-9.07	65.09	-0.16	Peak
3	11400.000	46.08	74.00	-27.92	41.76	4.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5700MHz
Test by :Caster

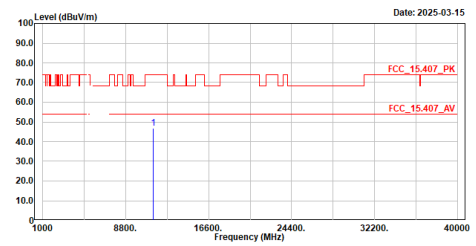


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11400.000	46.81	74.00	-27.19	42.49	4.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5745MHz
Test by :Caster

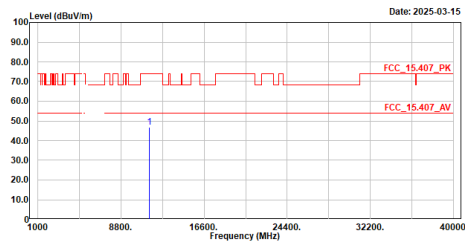


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11490.000	46.87	74.00	-27.13	42.50	4.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5745MHz
Test by :Caster

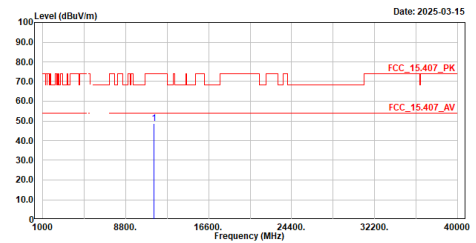


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11490.000	48.51	74.00	-25.49	44.14	4.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5785MHz
Test by :Caster

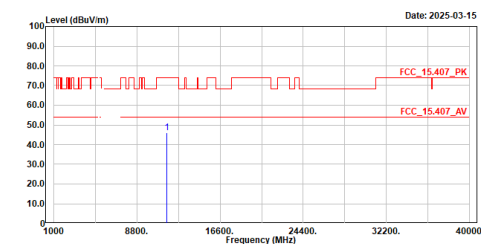


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11570.000	46.20	74.00	-27.80	41.71	4.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5785MHz
Test by :Caster

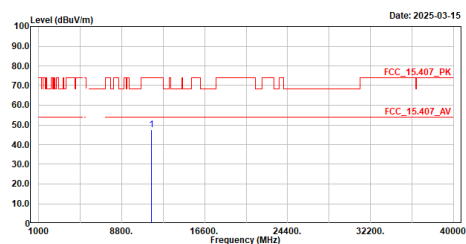


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11570.000	47.63	74.00	-26.37	43.14	4.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5825MHz
Test by :Caster

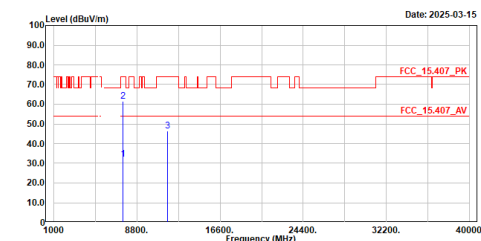


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	7494.000	32.09	54.00	-21.91	32.28	-0.19	Average
2	7494.000	61.54	74.00	-12.46	61.73	-0.19	Peak
3	11650.000	46.54	74.00	-27.46	42.05	4.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5825MHz
Test by :Caster

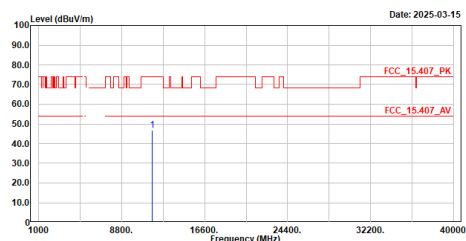


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11650.000	46.73	74.00	-27.27	42.24	4.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5180MHz
Test by :Rock

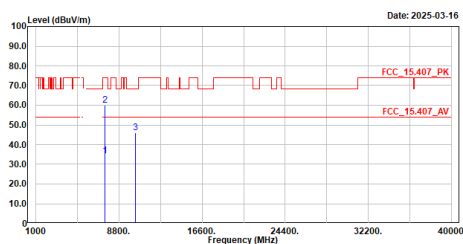


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	7497.400	34.48	54.00	-19.52	34.67	-0.19	Average
2	7497.400	60.08	74.00	-13.92	60.27	-0.19	Peak
3	10360.000	46.03	68.22	-22.19	43.17	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5180MHz
Test by :Rock

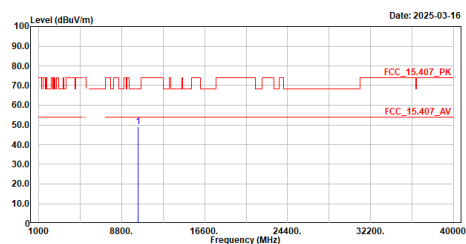


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10360.000	49.08	68.22	-19.14	46.22	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5200MHz
Test by :Rock

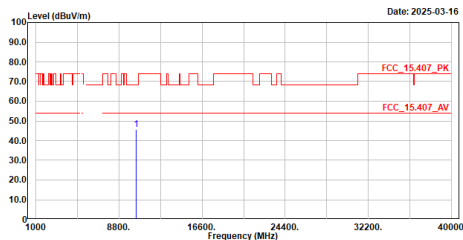


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10400.000	45.68	68.22	-22.54	42.82	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5200MHz
Test by :Rock

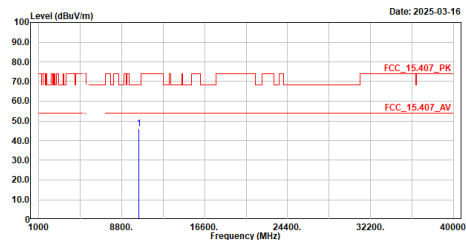


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10400.000	46.22	68.22	-22.00	43.36	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5240MHz
Test by :Rock

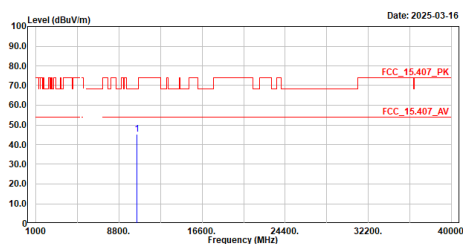


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	10480.000	45.33	68.22	-22.89	42.48	2.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5240MHz
Test by :Rock

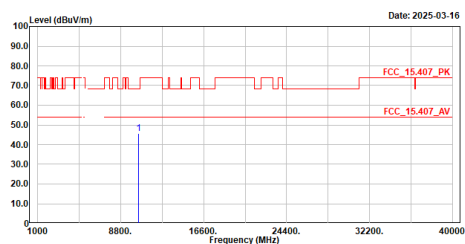


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	10480.000	45.54	68.22	-22.68	42.69	2.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5260MHz
Test by :Rock

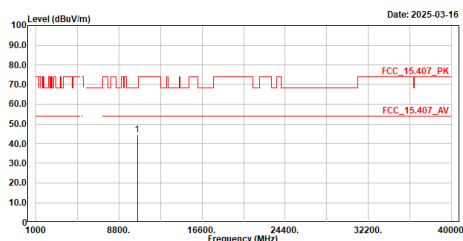


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	10520.000	44.71	68.22	-23.51	41.86	2.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5260MHz
Test by :Rock

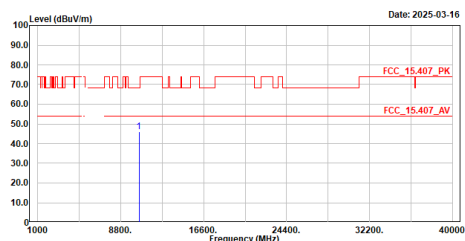


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	10520.000	46.09	68.22	-22.13	43.24	2.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5280MHz
Test by :Rock

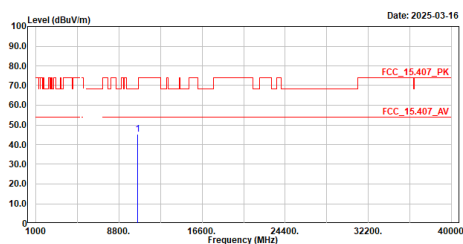


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10560.000	45.41	68.22	-22.81	42.55	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5280MHz
Test by :Rock

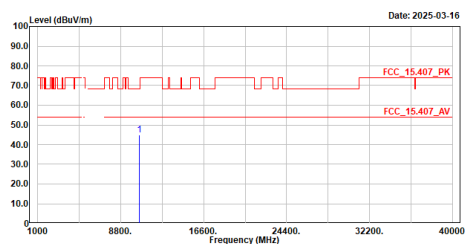


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10560.000	44.72	68.22	-23.50	41.86	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5320MHz
Test by :Rock

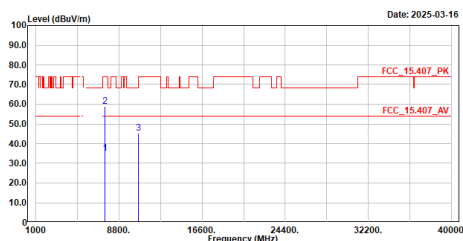


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	7585.900	35.00	54.00	-19.00	35.22	-0.22	Average
2	7585.900	58.92	74.00	-15.08	59.14	-0.22	Peak
3	10640.000	45.24	74.00	-28.76	42.12	3.12	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5320MHz
Test by :Rock

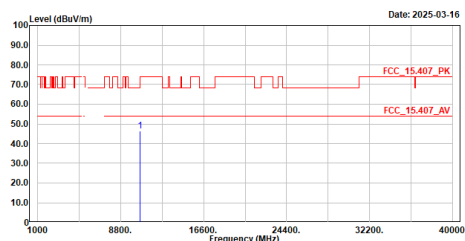

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10640.000	46.34	74.00	-27.66	43.22	3.12	Peak


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

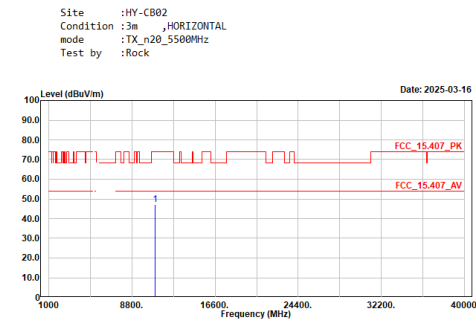


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11000.000	47.03	74.00	-26.97	43.69	3.34	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

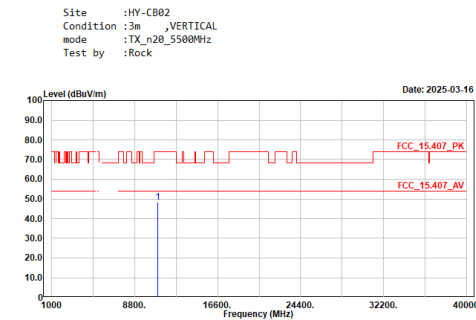


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11000.000	48.13	74.00	-25.87	44.79	3.34	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

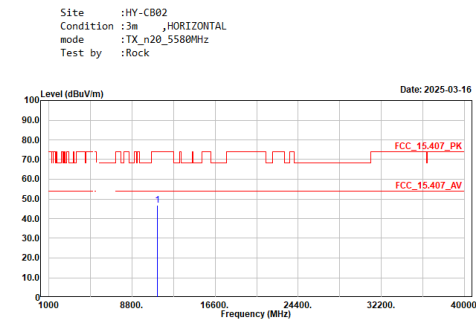





No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11160.000	46.69	74.00	-27.31	42.86	3.83	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

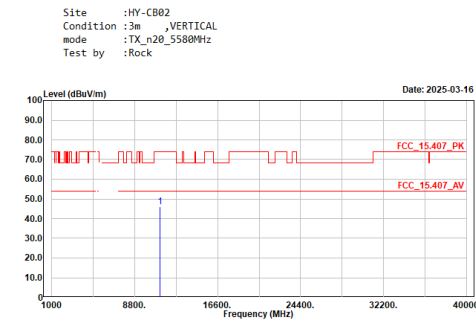


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11160.000	46.07	74.00	-27.93	42.24	3.83	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.



Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5785MHz
Test by :Rock

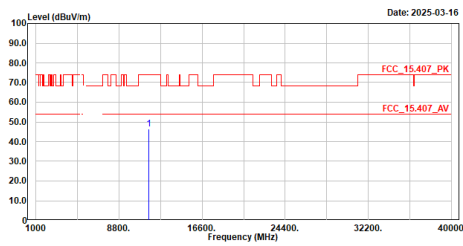


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	11570.000	46.36	74.00	-27.64	41.87	4.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5785MHz
Test by :Rock

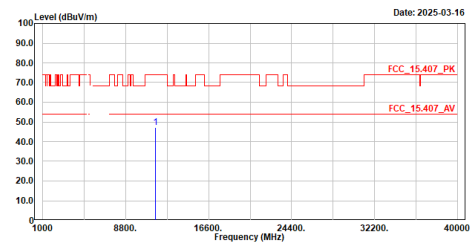


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	11570.000	47.11	74.00	-26.89	42.62	4.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5825MHz
Test by :Rock

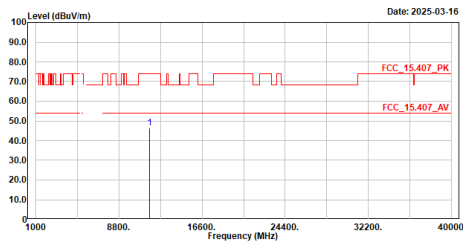


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	11650.000	46.42	74.00	-27.58	41.93	4.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5825MHz
Test by :Rock

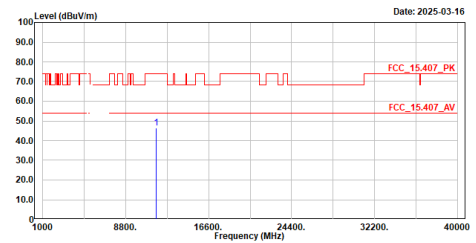


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	11650.000	46.37	74.00	-27.63	41.88	4.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5190MHz
Test by :Rock

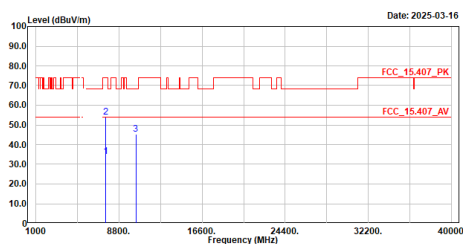


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	7524.600	33.99	54.00	-20.01	34.24	-0.25	Average
2	7524.600	54.15	74.00	-19.85	54.40	-0.25	Peak
3	10380.000	45.45	68.22	-22.77	42.59	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5190MHz
Test by :Rock

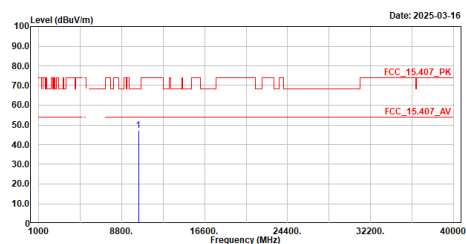


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10380.000	47.20	68.22	-21.02	44.34	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5230MHz
Test by :Rock

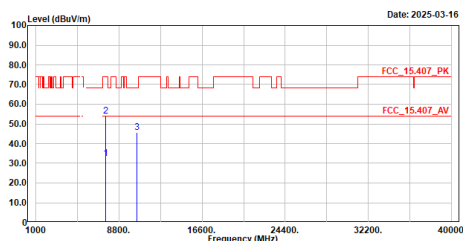


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	7524.600	32.58	54.00	-21.42	32.83	-0.25	Average
2	7524.600	54.15	74.00	-19.85	54.40	-0.25	Peak
3	10460.000	45.82	68.22	-22.40	43.00	2.82	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5230MHz
Test by :Rock

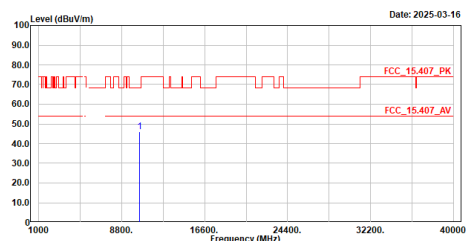


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10460.000	45.94	68.22	-22.28	43.12	2.82	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5270MHz
Test by :Rock

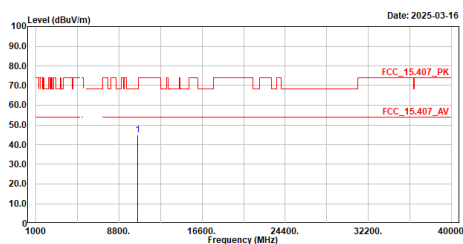


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	10540.000	44.98	68.22	-23.24	42.13	2.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5270MHz
Test by :Rock

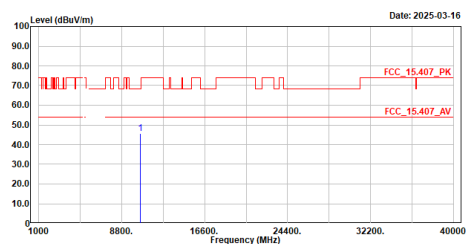


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	10540.000	45.78	68.22	-22.44	42.93	2.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5310MHz
Test by :Rock

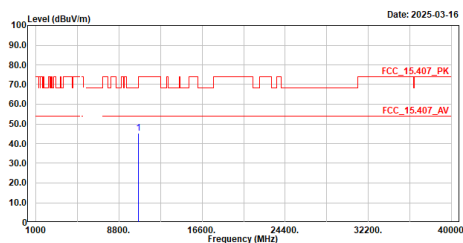


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	10620.000	45.26	74.00	-28.74	42.25	3.01	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5310MHz
Test by :Rock

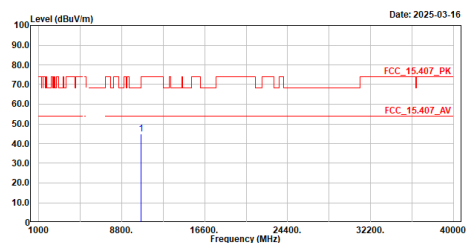

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	10620.000	44.87	74.00	-29.13	41.86	3.01	Peak


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

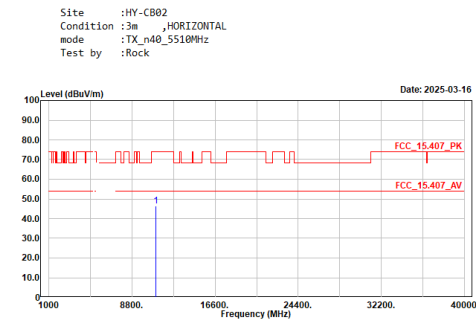


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11020.000	46.52	74.00	-27.48	43.13	3.39	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

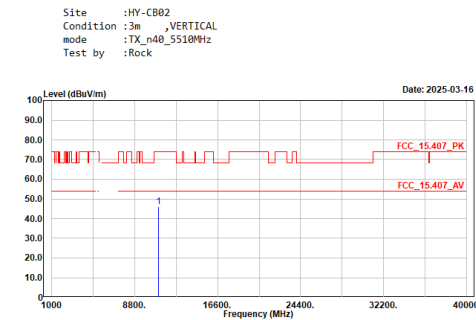


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11020.000	46.06	74.00	-27.94	42.67	3.39	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

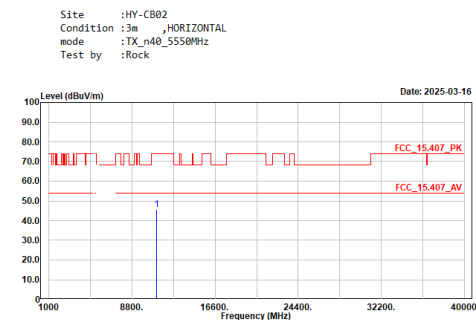

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11100.000	45.58	74.00	-28.42	41.93	3.65	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

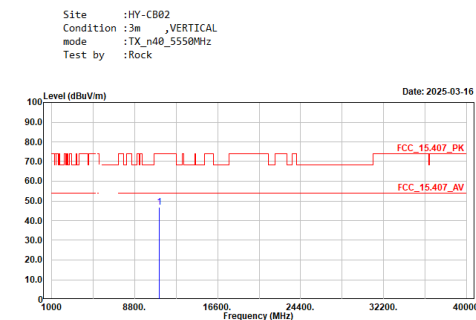

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11100.000	46.64	74.00	-27.36	42.99	3.65	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5670MHz
Test by :Rock

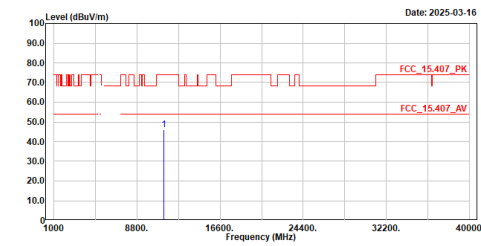


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11340.000	45.97	74.00	-28.03	41.69	4.28	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5670MHz
Test by :Rock

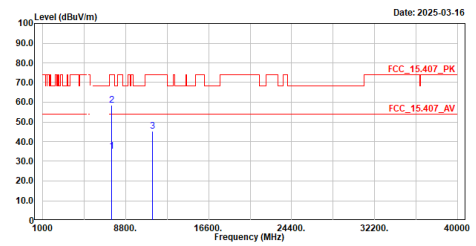


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	7507.600	34.95	54.00	-19.05	35.18	-0.23	Average
2	7507.600	58.54	74.00	-15.46	58.77	-0.23	Peak
3	11340.000	45.45	74.00	-28.55	41.17	4.28	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5755MHz
Test by :Rock

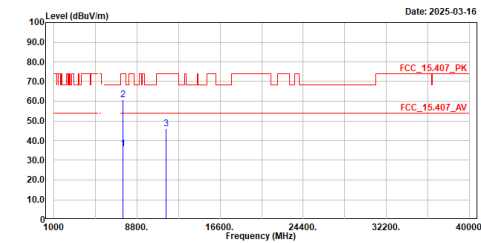


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	7482.100	35.97	54.00	-18.03	36.12	-0.15	Average
2	7482.100	60.64	74.00	-13.36	60.79	-0.15	Peak
3	11510.000	46.00	74.00	-28.00	41.62	4.38	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5755MHz
Test by :Rock

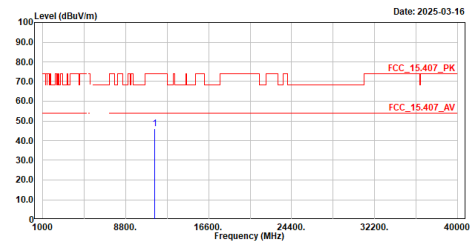


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11510.000	45.95	74.00	-28.05	41.57	4.38	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5795MHz
Test by :Rock

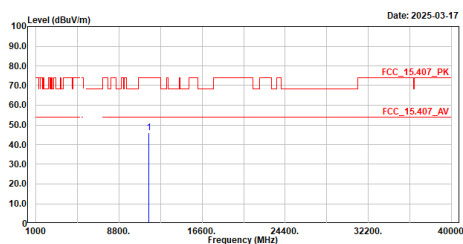


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11590.000	46.18	74.00	-27.82	41.68	4.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5795MHz
Test by :Rock

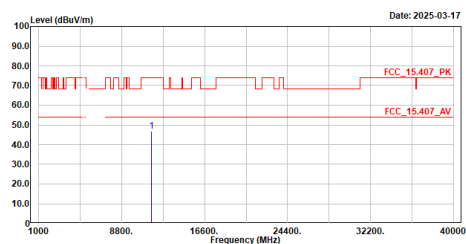


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11590.000	46.86	74.00	-27.14	42.36	4.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5180MHz
Test by :Rock

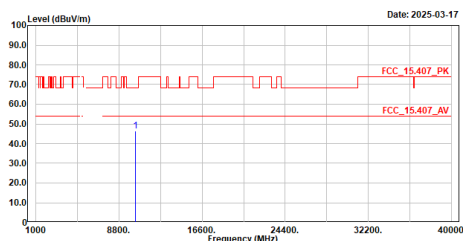


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10360.000	46.44	68.22	-21.78	43.58	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5180MHz
Test by :Rock

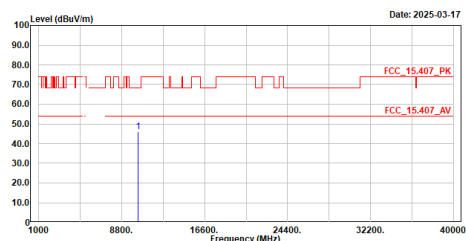


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10360.000	46.19	68.22	-22.03	43.33	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5200MHz
Test by :Rock

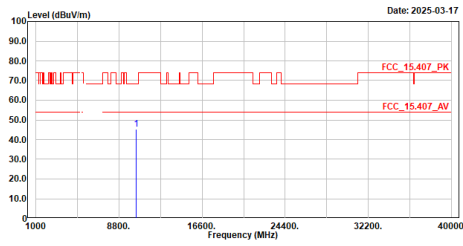


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10480.000	45.36	68.22	-22.86	42.50	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5200MHz
Test by :Rock

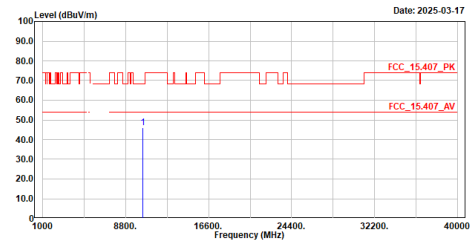


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10480.000	45.89	68.22	-22.33	43.03	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5240MHz
Test by :Rock

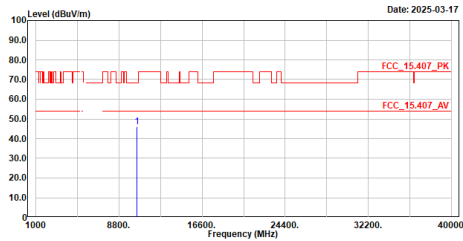


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10480.000	45.95	68.22	-22.27	43.10	2.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5240MHz
Test by :Rock

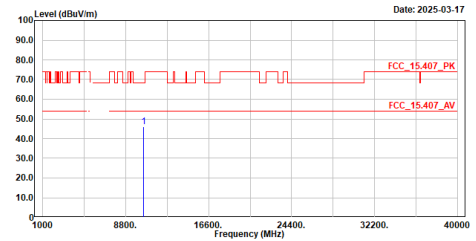


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10480.000	45.95	68.22	-22.27	43.10	2.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5260MHz
Test by :Rock

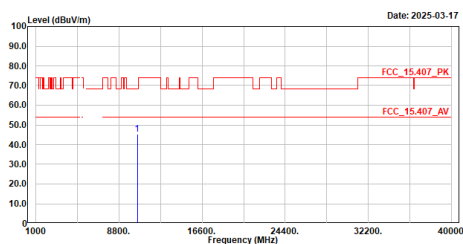


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10520.000	45.23	68.22	-22.99	42.38	2.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5260MHz
Test by :Rock

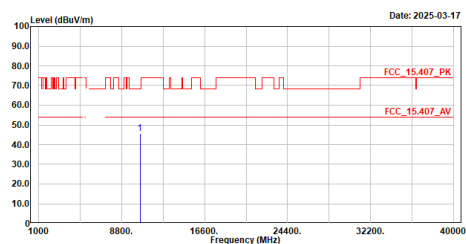


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10520.000	45.69	68.22	-22.53	42.84	2.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5280MHz
Test by :Rock

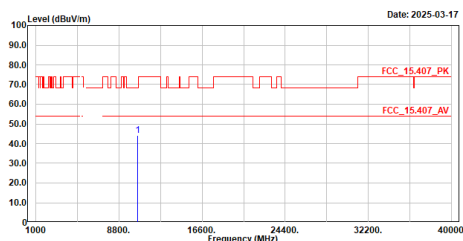


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10560.000	44.22	68.22	-24.00	41.36	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5280MHz
Test by :Rock

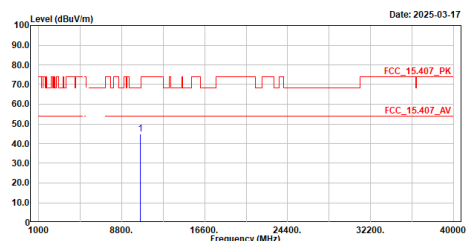


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10560.000	45.04	68.22	-23.18	42.18	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5320MHz
Test by :Rock

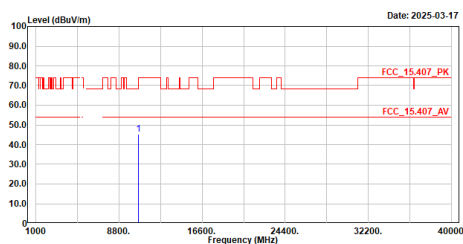


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10640.000	45.19	74.00	-28.81	42.07	3.12	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5320MHz
Test by :Rock

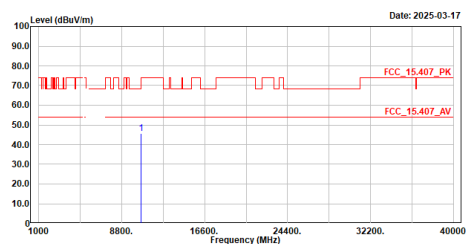


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10640.000	45.51	74.00	-28.49	42.39	3.12	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5500MHz
Test by :Peter

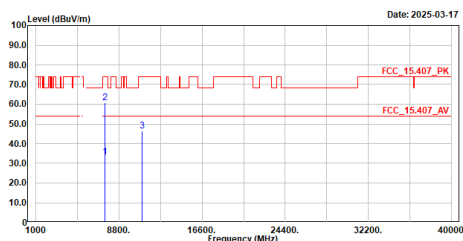


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	7463.400	33.25	54.00	-20.75	33.32	-0.07	Average
2	7463.400	60.88	74.00	-13.12	60.95	-0.07	Peak
3	11000.000	46.42	74.00	-27.58	43.08	3.34	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5500MHz
Test by :Peter

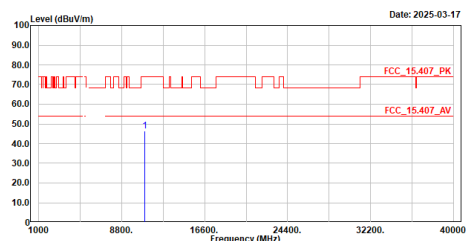


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11000.000	46.25	74.00	-27.75	42.91	3.34	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5580MHz
Test by :Peter

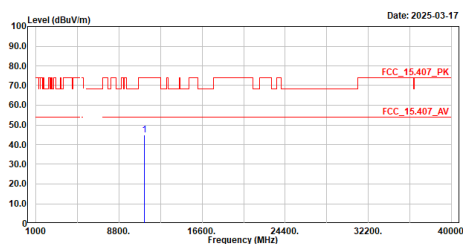


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11160.000	44.83	74.00	-29.17	41.00	3.83	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5580MHz
Test by :Peter

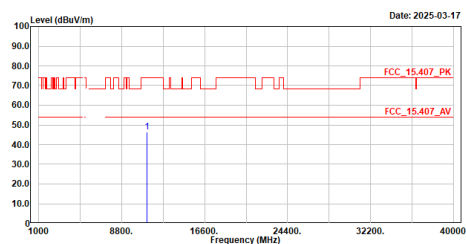


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11160.000	46.52	74.00	-27.48	42.69	3.83	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5780MHz
Test by :Peter

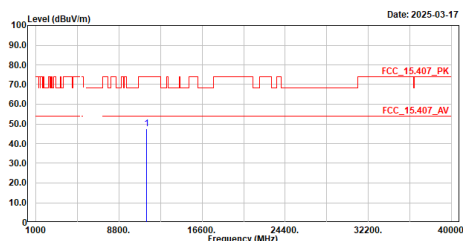


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11400.000	47.39	74.00	-26.61	43.07	4.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5780MHz
Test by :Peter

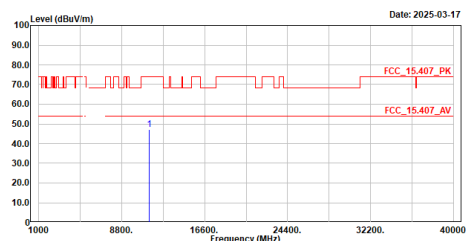


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11400.000	47.30	74.00	-26.70	42.98	4.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5745MHz
Test by :Peter

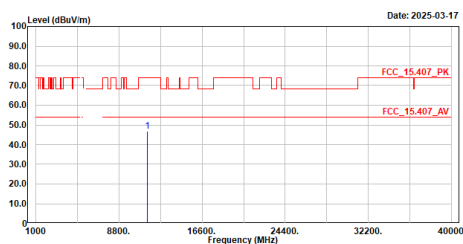


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11490.000	46.70	74.00	-27.30	42.33	4.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5745MHz
Test by :Peter

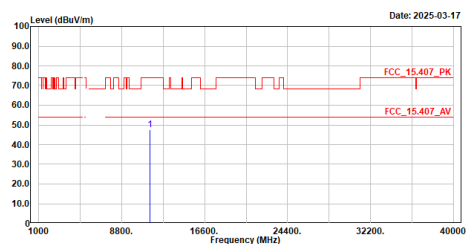


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11490.000	47.39	74.00	-26.61	43.02	4.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5785MHz
Test by :Peter

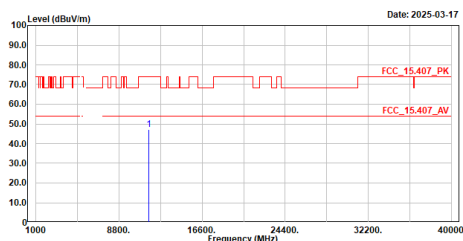


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11570.000	47.18	74.00	-26.82	42.69	4.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5785MHz
Test by :Peter

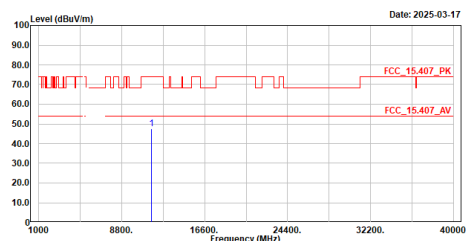


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11570.000	47.46	74.00	-26.54	42.97	4.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5825MHz
Test by :Peter

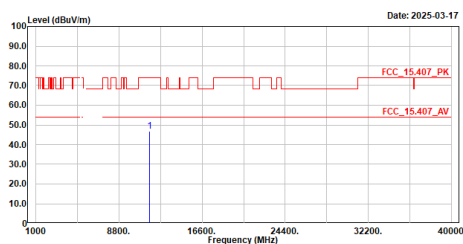


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	11650.000	46.88	74.00	-27.12	42.39	4.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5825MHz
Test by :Peter

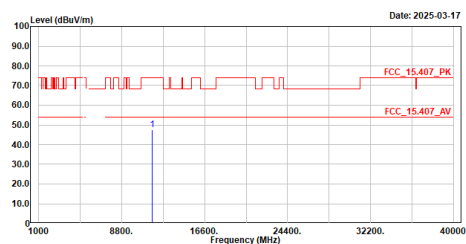


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	11650.000	47.39	74.00	-26.61	42.90	4.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac40_5190MHz
Test by :Peter

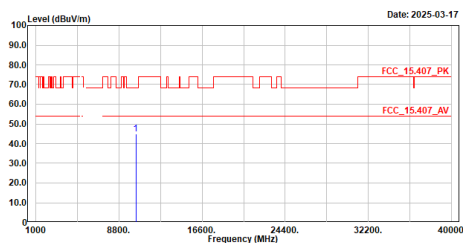


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	10380.000	44.86	68.22	-23.36	42.00	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac40_5190MHz
Test by :Peter

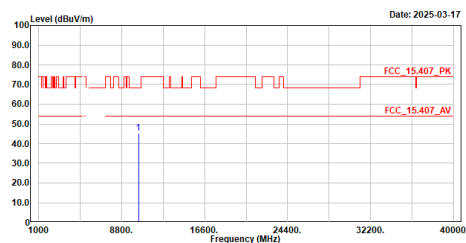


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	10380.000	45.10	68.22	-23.12	42.24	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac40_5230MHz
Test by :Peter

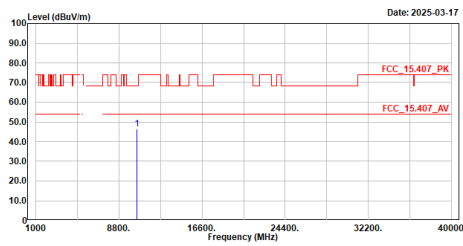


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10460.000	46.26	68.22	-21.96	43.44	2.82	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac40_5230MHz
Test by :Peter

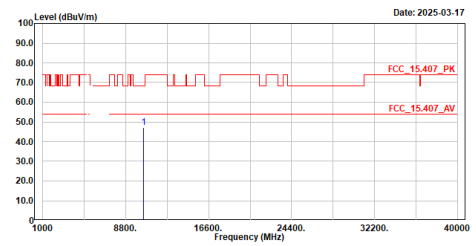


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10460.000	47.18	68.22	-21.04	44.36	2.82	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac40_5270MHz
Test by :Peter

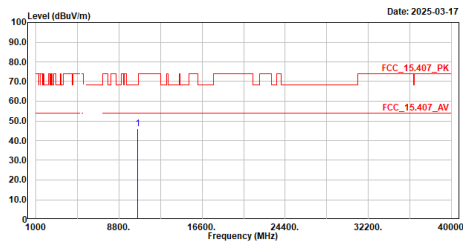


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10540.000	46.13	68.22	-22.09	43.28	2.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.





Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac40_5270MHz
Test by :Peter

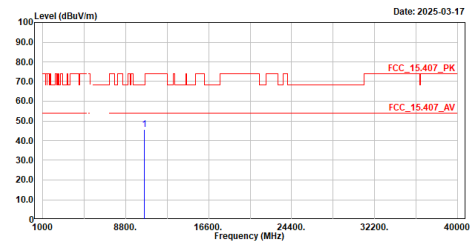


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10540.000	45.81	68.22	-22.41	42.96	2.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.



Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac40_5550MHz
Test by :Peter

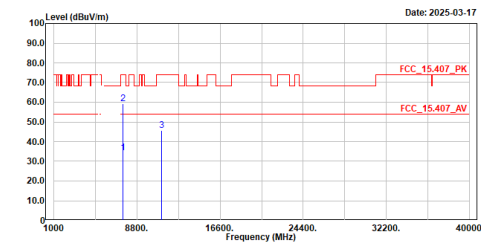


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	7463.400	34.34	54.00	-19.66	34.41	-0.07	Average
2	7463.400	59.18	74.00	-14.82	59.25	-0.07	Peak
3	11100.000	45.68	74.00	-28.32	42.03	3.65	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac40_5550MHz
Test by :Peter

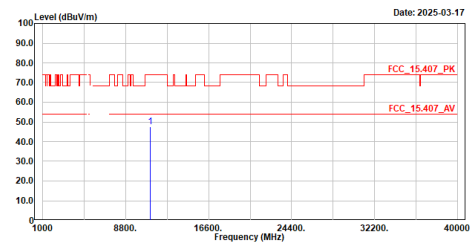


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11100.000	47.46	74.00	-26.54	43.81	3.65	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac40_5670MHz
Test by :Peter

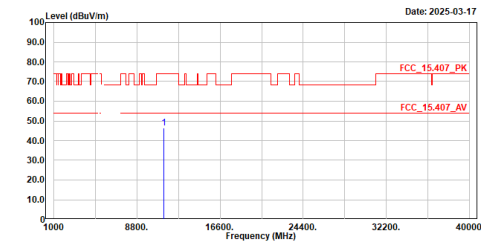


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11340.000	46.46	74.00	-27.54	42.18	4.28	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.





Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac40_5670MHz
Test by :Peter

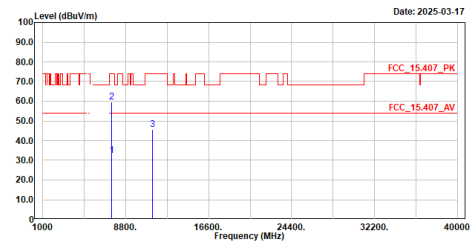


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	7482.100	32.43	54.00	-21.57	32.58	-0.15	Average
2	7482.100	59.81	74.00	-14.19	59.96	-0.15	Peak
3	11340.000	45.72	74.00	-28.28	41.44	4.28	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.



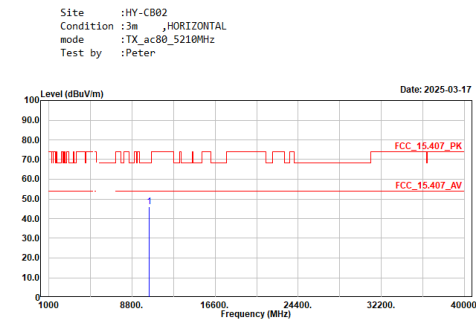


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10420.000	45.97	68.22	-22.25	43.11	2.86	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

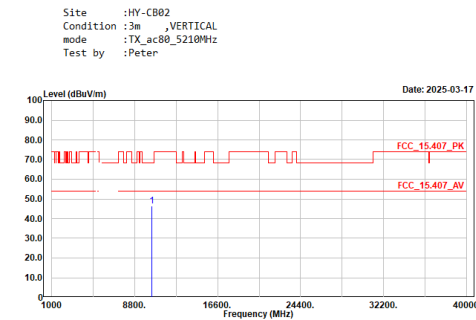


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10420.000	46.32	68.22	-21.90	43.46	2.86	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

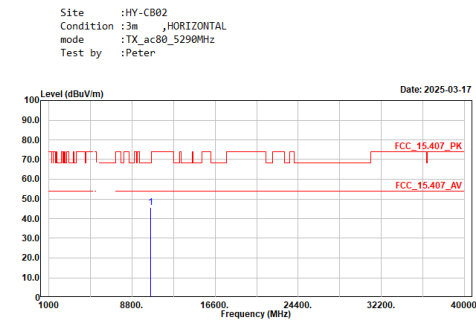

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10580.000	45.64	68.22	-22.58	42.74	2.90	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

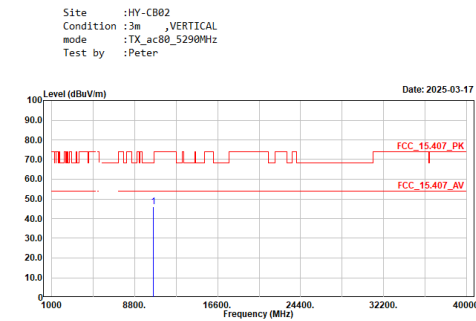

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10580.000	45.87	68.22	-22.35	42.97	2.90	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5530MHz
Test by :Peter

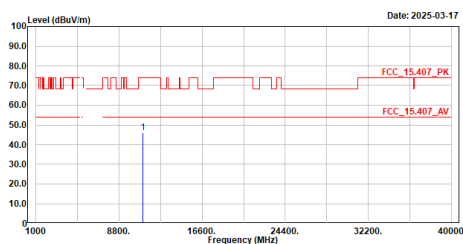


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	11060.000	46.10	74.00	-27.90	42.60	3.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5530MHz
Test by :Peter

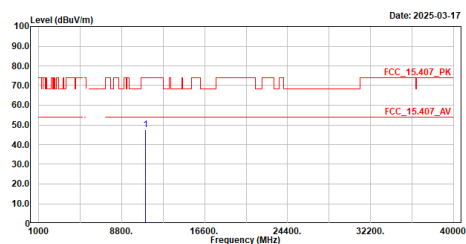


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	11060.000	47.71	74.00	-26.29	44.21	3.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5610MHz
Test by :Peter

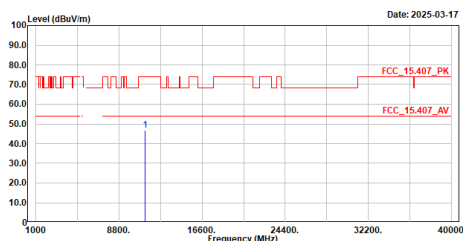


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	11220.000	46.68	74.00	-27.32	42.58	4.10	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5610MHz
Test by :Peter

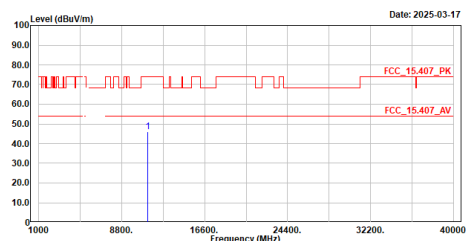


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	11220.000	46.09	74.00	-27.91	41.99	4.10	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.




1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.



1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.




1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.



1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac160_5570MHz
Test by :Peter

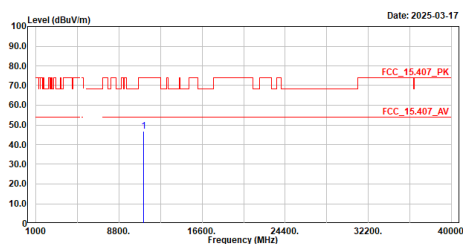


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11140.000	46.98	74.00	-27.02	43.23	3.75	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac160_5570MHz
Test by :Peter

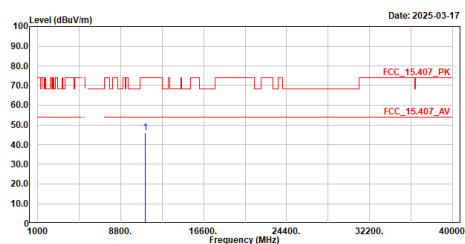


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11140.000	45.91	74.00	-28.09	42.16	3.75	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac160_5570MHz
Test by :Caster

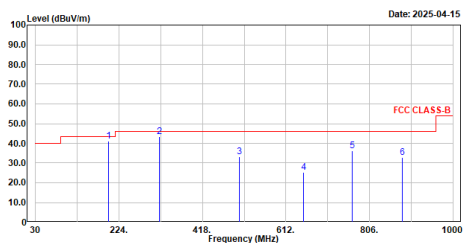


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	199.750	41.24	43.50	-2.26	68.68	-27.44	QP
2	318.090	43.34	46.00	-2.66	66.44	-23.10	QP
3	504.330	33.10	46.00	-12.90	51.68	-18.58	QP
4	652.740	25.31	46.00	-20.69	48.84	-15.53	QP
5	766.230	36.06	46.00	-9.94	49.61	-13.55	QP
6	881.660	32.87	46.00	-13.13	45.60	-12.73	QP

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac160_5570MHz
Test by :Caster

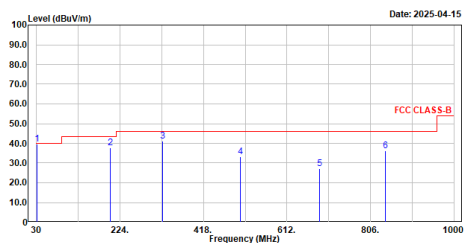


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	30.970	39.52	40.00	-0.48	65.06	-25.54	QP
2	201.690	37.60	43.50	-5.90	65.00	-27.40	QP
3	322.940	41.11	46.00	-4.89	64.02	-22.91	QP
4	504.330	33.33	46.00	-12.67	51.91	-18.58	QP
5	687.660	27.24	46.00	-18.76	42.19	-14.95	QP
6	840.920	36.29	46.00	-9.71	49.15	-12.86	QP

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Partial RU

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax20_5180MHz_RU 242 61
Test by :Rock

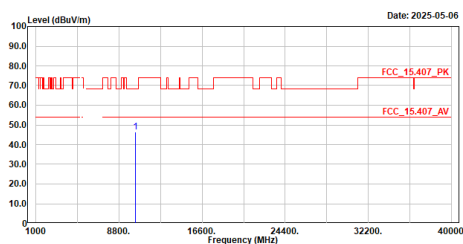


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	10360.000	46.48	68.22	-21.74	43.62	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax20_5180MHz_RU 242 61
Test by :Rock

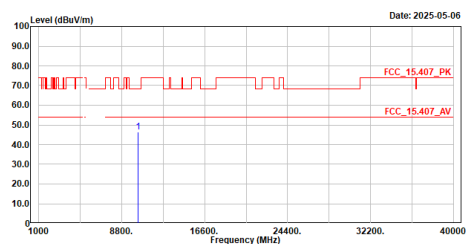


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	10360.000	46.38	68.22	-21.84	43.52	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax20_5280MHz_RU 242 61
Test by :Rock

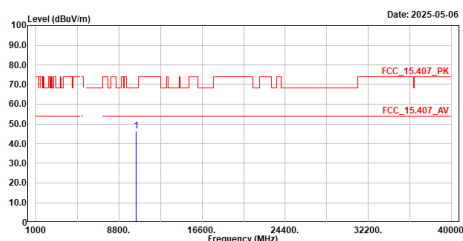


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	10400.000	46.46	68.22	-21.76	43.60	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax20_5280MHz_RU 242 61
Test by :Rock

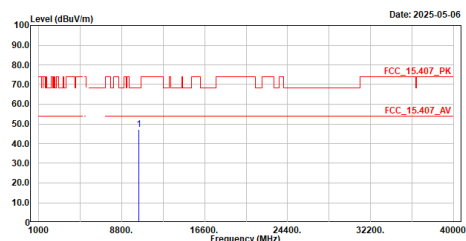


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	10400.000	47.13	68.22	-21.09	44.27	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax20_5280MHz_RU 242 61
Test by :Rock

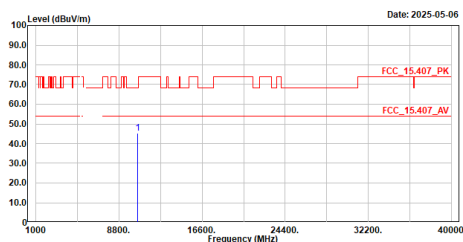


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10560.000	45.43	68.22	-22.79	42.57	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax20_5280MHz_RU 242 61
Test by :Rock

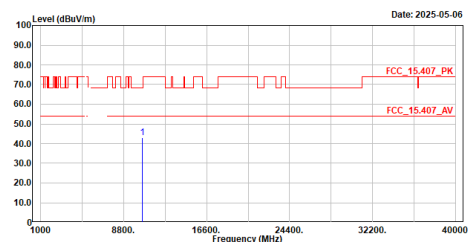


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10560.000	43.02	68.22	-25.20	40.16	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax20_5320MHz_RU 242 61
Test by :Rock

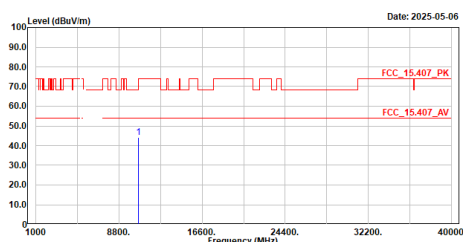


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10640.000	44.17	74.00	-29.83	41.05	3.12	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.





Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax20_5320MHz_RU 242 61
Test by :Rock

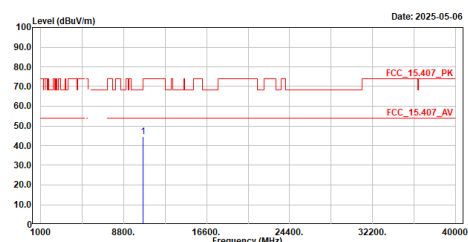


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10640.000	44.72	74.00	-29.28	41.60	3.12	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.



Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax20_5700MHz_RU 242 61
Test by :Rock

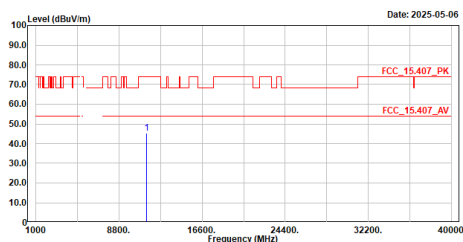


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11400.000	45.45	74.00	-28.55	41.13	4.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax20_5700MHz_RU 242 61
Test by :Rock

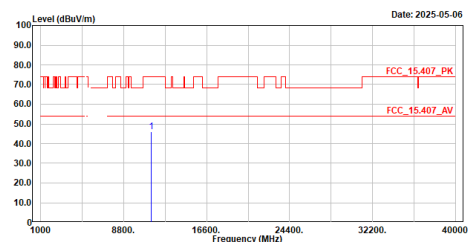


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11400.000	45.86	74.00	-28.14	41.54	4.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax20_5745MHz_RU 242 61
Test by :Rock

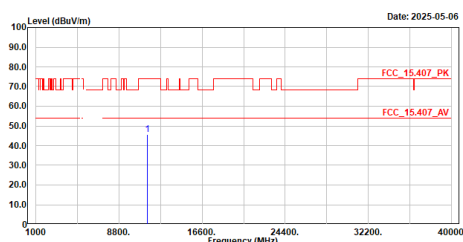


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11490.000	45.60	74.00	-28.40	41.23	4.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax20_5745MHz_RU 242 61
Test by :Rock

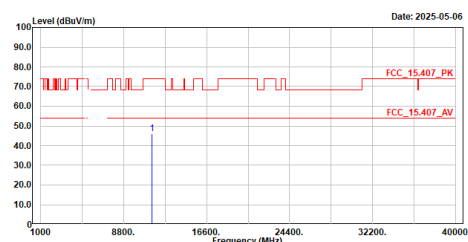


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11490.000	46.17	74.00	-27.83	41.80	4.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax20_5785MHz_RU 242 61
Test by :Rock

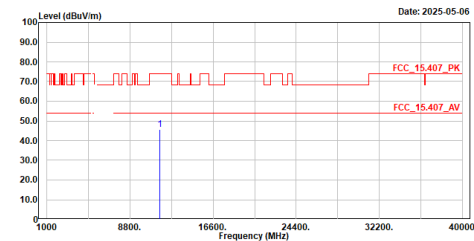

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11570.000	45.59	74.00	-28.41	41.18	4.49	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax20_5785MHz_RU 242 61
Test by :Rock

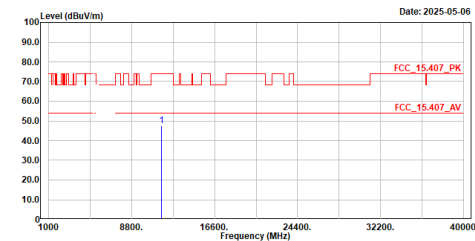

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11570.000	47.44	74.00	-26.56	42.95	4.49	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax20_5825MHz_RU 242 61
Test by :Rock

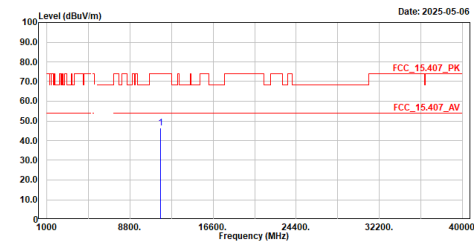

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11650.000	46.37	74.00	-27.63	41.88	4.49	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax20_5825MHz_RU 242 61
Test by :Rock

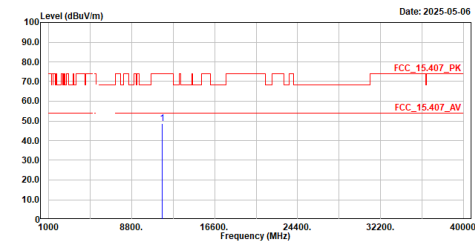

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11650.000	48.72	74.00	-25.28	44.23	4.49	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax40_5190MHz_RU 484 65
Test by :Rock

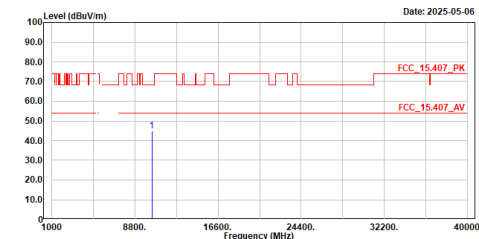


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10380.000	45.06	68.22	-23.16	42.20	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax40_5190MHz_RU 484 65
Test by :Rock

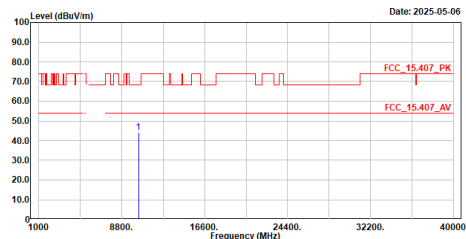


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10380.000	44.26	68.22	-23.96	41.40	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax40_5230MHz_RU 484 65
Test by :Rock

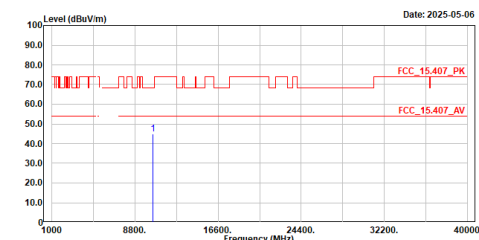


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10460.000	44.83	68.22	-23.39	42.01	2.82	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax40_5230MHz_RU 484 65
Test by :Rock

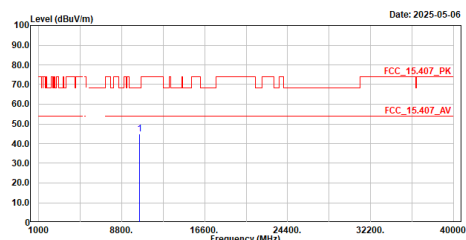


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10460.000	45.09	68.22	-23.13	42.27	2.82	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax40_5270MHz_RU 484 65
Test by :Rock

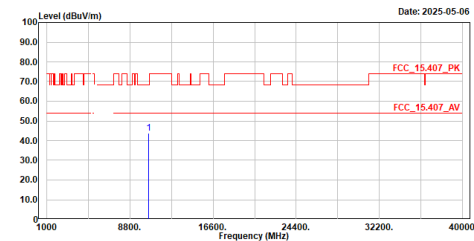

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10540.000	43.66	68.22	-24.56	40.81	2.85	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax40_5270MHz_RU 484 65
Test by :Rock

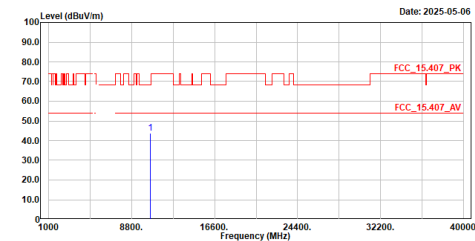

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10540.000	43.63	68.22	-24.59	40.78	2.85	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax40_5310MHz_RU 484 65
Test by :Rock

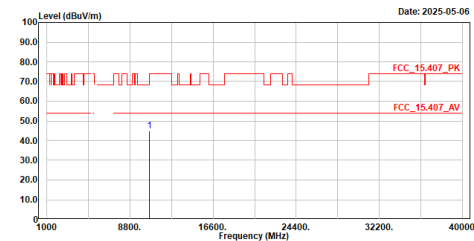

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10620.000	44.73	74.00	-29.27	41.72	3.01	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax40_5310MHz_RU 484 65
Test by :Rock

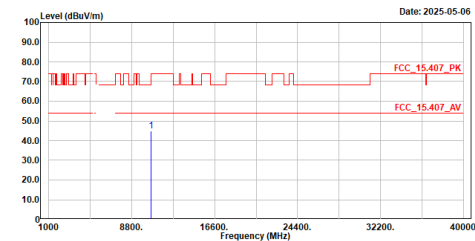

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10620.000	44.88	74.00	-29.12	41.87	3.01	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax40_5510MHz_RU 484 65
Test by :Rock

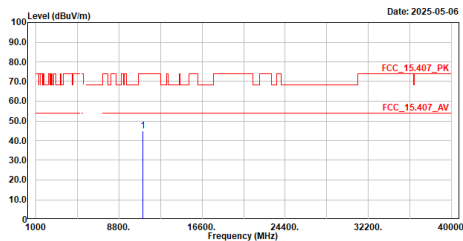


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11020.000	44.80	74.00	-29.20	41.41	3.39	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax40_5510MHz_RU 484 65
Test by :Rock

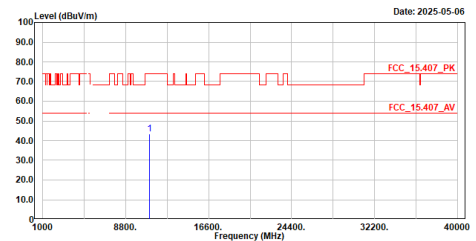


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11020.000	43.45	74.00	-30.55	40.06	3.39	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax40_5550MHz_RU 484 65
Test by :Rock

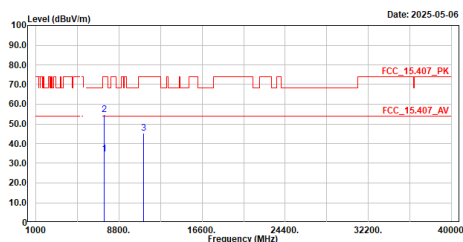


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7441.300	34.79	54.00	-19.21	34.83	-0.04	Average
2	7441.300	54.63	74.00	-19.37	54.67	-0.04	Peak
3	11100.000	45.33	74.00	-28.67	41.68	3.65	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax40_5550MHz_RU 484 65
Test by :Rock

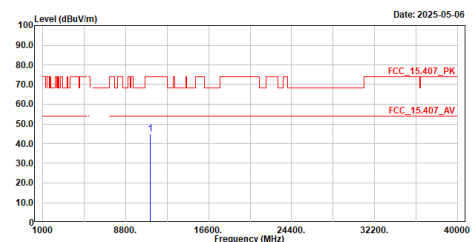


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11100.000	44.92	74.00	-29.08	41.27	3.65	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax40_5670MHz_RU 484 65
Test by :Rock

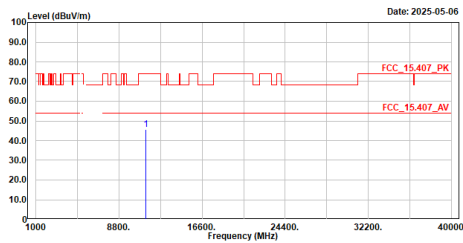


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11340.000	45.59	74.00	-28.41	41.31	4.28	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax40_5670MHz_RU 484 65
Test by :Rock

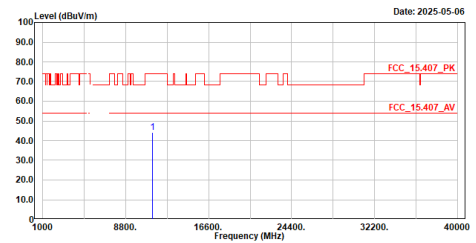


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11340.000	44.07	74.00	-29.93	39.79	4.28	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax40_5755MHz_RU 484 65
Test by :Rock

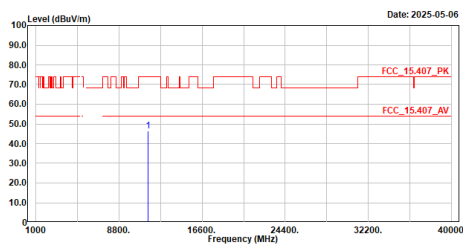


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11510.000	46.40	74.00	-27.60	42.02	4.38	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax40_5755MHz_RU 484 65
Test by :Rock

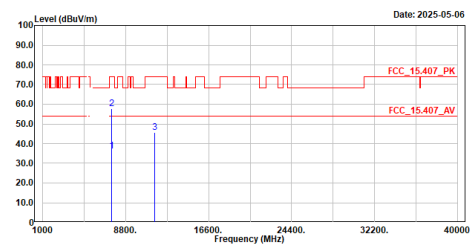


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7482.100	36.14	54.00	-17.86	36.29	-0.15	Average
2	7482.100	57.89	74.00	-16.11	58.04	-0.15	Peak
3	11510.000	45.58	74.00	-28.42	41.20	4.38	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax40_5795MHz_RU 484 65
Test by :Rock

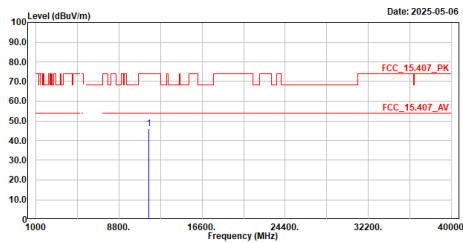


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11590.000	46.02	74.00	-27.98	41.52	4.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax40_5795MHz_RU 484 65
Test by :Rock

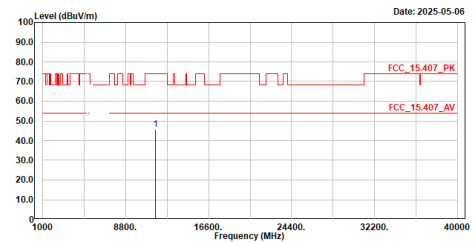


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11590.000	45.49	74.00	-28.51	40.99	4.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax80_5210MHz_RU 996 67
Test by :Caster

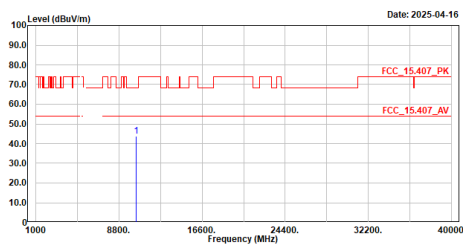


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10420.000	43.82	68.22	-24.40	40.96	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax80_5210MHz_RU 996 67
Test by :Caster

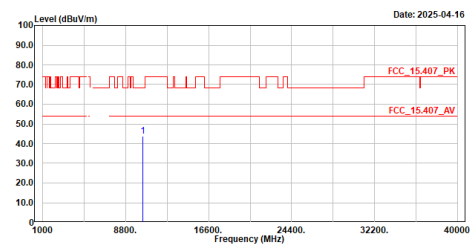


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10420.000	43.90	68.22	-24.32	41.04	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax80_5290MHz_RU 996 67
Test by :Rock

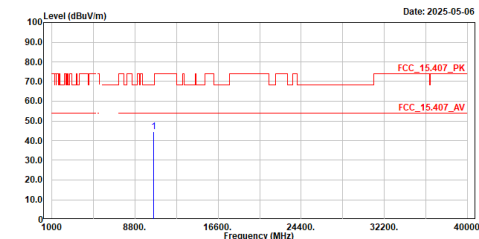

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10580.000	44.39	68.22	-23.83	41.49	2.90	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax80_5290MHz_RU 996 67
Test by :Rock

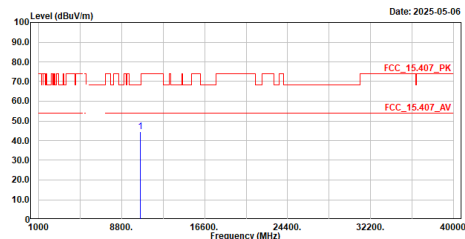

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10580.000	44.43	68.22	-23.79	41.53	2.90	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax80_5530MHz_RU 996 67
Test by :Rock

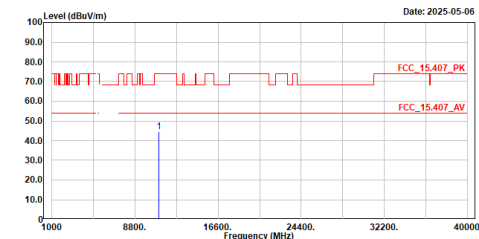

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11060.000	44.46	74.00	-29.54	40.96	3.50	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax80_5530MHz_RU 996 67
Test by :Rock

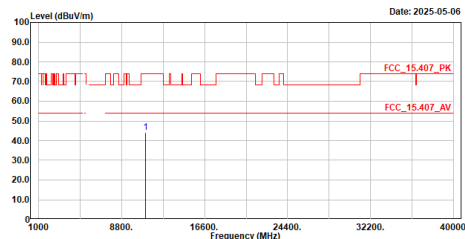

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11060.000	44.31	74.00	-29.69	40.81	3.50	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax80_5610MHz_RU 996 67
Test by :Rock

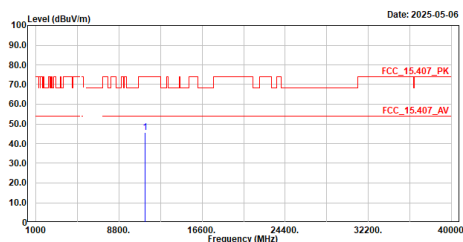


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11220.000	45.80	74.00	-28.20	41.70	4.10	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax80_5610MHz_RU 996 67
Test by :Rock

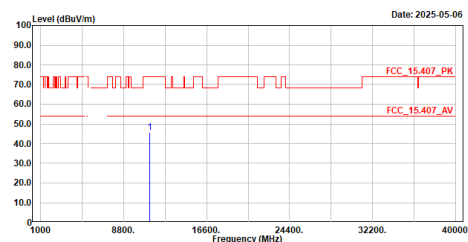


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11220.000	45.61	74.00	-28.39	41.51	4.10	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax80_5775MHz_RU 996 67
Test by :Rock

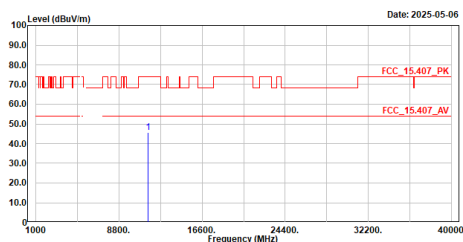


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11550.000	45.74	74.00	-28.26	41.27	4.47	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax80_5775MHz_RU 996 67
Test by :Rock

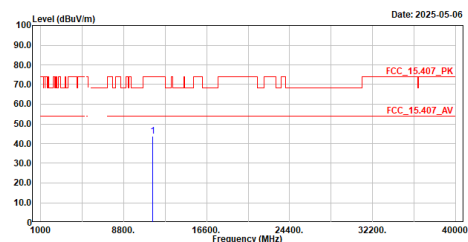


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11550.000	43.92	74.00	-30.08	39.45	4.47	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax160_5250MHz_RU 2x996 68
Test by :Rock

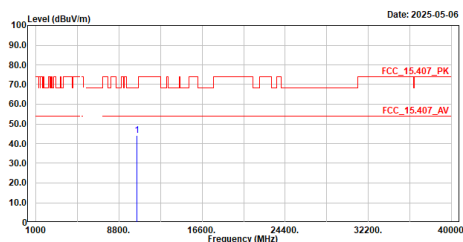


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10500.000	44.01	68.22	-24.21	41.13	2.88	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax160_5250MHz_RU 2x996 68
Test by :Rock

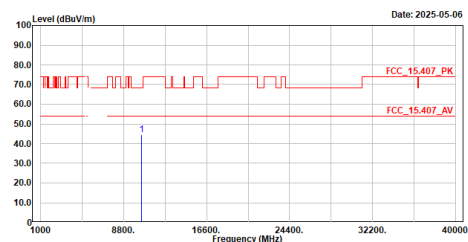


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10500.000	44.43	68.22	-23.79	41.55	2.88	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax160_5570MHz_RU 2x996 68
Test by :Rock

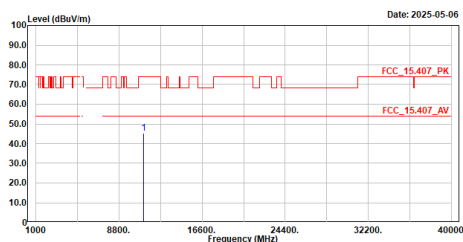


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11140.000	45.20	74.00	-28.80	41.45	3.75	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax160_5570MHz_RU 2x996 68
Test by :Rock

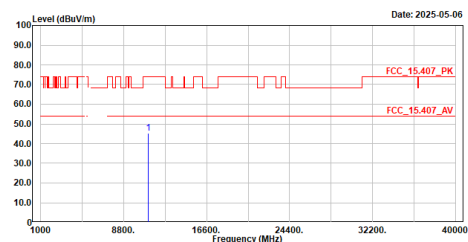


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11140.000	45.37	74.00	-28.63	41.62	3.75	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax160_5250MHz_RU 2x996 68
Test by :Caster

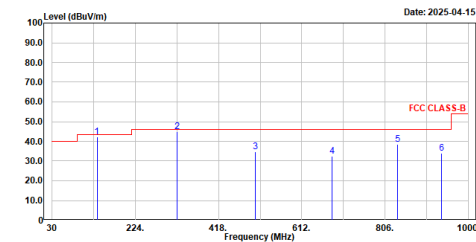

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	134.760	42.21	43.50	-1.29	67.66	-25.45	QP
2	321.000	45.03	46.00	-0.97	68.03	-23.00	QP
3	504.330	34.75	46.00	-11.25	53.33	-18.58	QP
4	681.840	32.46	46.00	-13.54	47.59	-15.13	QP
5	835.100	38.58	46.00	-7.42	51.57	-12.99	QP
6	937.920	33.93	46.00	-12.07	45.54	-11.61	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax160_5250MHz_RU 2x996 68
Test by :Caster

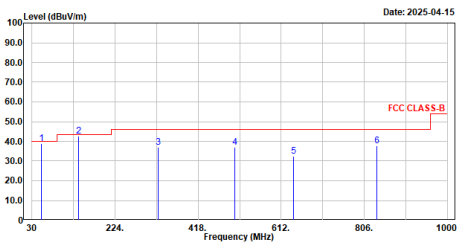

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	52.310	38.87	40.00	-1.13	62.90	-24.03	QP
2	139.610	42.56	43.50	-0.94	67.58	-25.02	QP
3	324.880	37.07	46.00	-8.93	59.89	-22.82	QP
4	504.330	36.81	46.00	-9.19	55.39	-18.58	QP
5	640.130	32.40	46.00	-13.60	48.10	-15.70	QP
6	835.100	37.62	46.00	-8.38	50.61	-12.99	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5180MHz
Test by :Caster

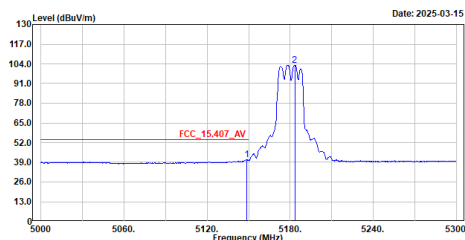


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5148.500	40.91	54.00	-13.09	26.39	14.52	Average
2	5183.300	103.20	-----	-----	88.71	14.49	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5180MHz
Test by :Caster

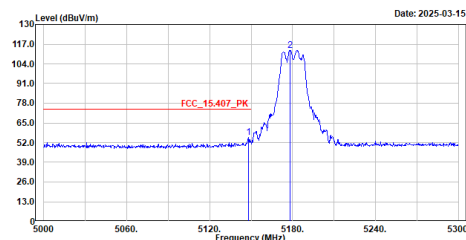


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5147.900	55.47	74.00	-18.53	40.95	14.52	Peak
2	5178.200	112.91	-----	-----	98.43	14.48	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_a_5180MHz
Test by :Caster

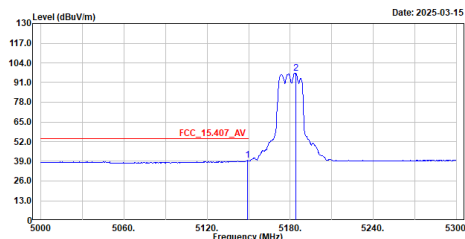


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5149.100	39.50	54.00	-14.50	24.98	14.52	Average
2	5183.900	97.35	-----	-----	82.86	14.49	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_a_5180MHz
Test by :Caster

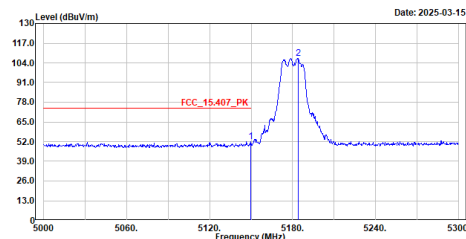


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5149.700	52.00	74.00	-22.00	37.48	14.52	Peak
2	5183.900	107.09	-----	-----	92.60	14.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5320MHz
Test by :Caster

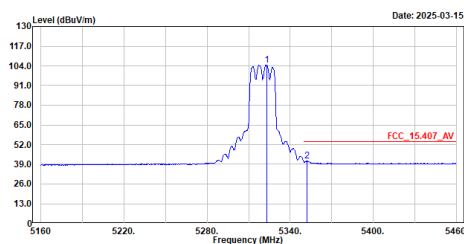


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5323.200	104.59	-----	-----	90.18	14.49	Average
2	5352.300	41.10	54.00	-12.90	26.63	14.47	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5320MHz
Test by :Caster

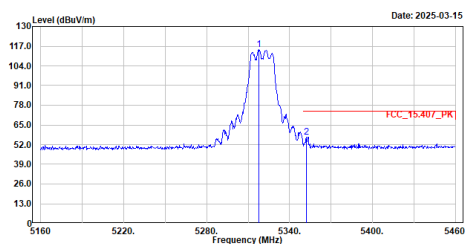


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5317.800	114.55	-----	-----	100.06	14.49	Peak
2	5352.000	56.84	74.00	-17.16	42.37	14.47	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5320MHz
Test by :Caster

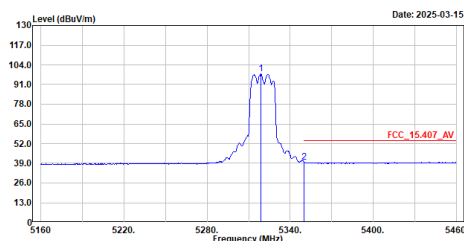


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5318.700	97.88	-----	-----	83.39	14.49	Average
2	5350.200	39.92	54.00	-14.08	25.45	14.47	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5320MHz
Test by :Caster

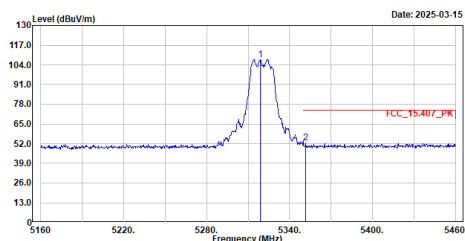


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5318.700	107.67	-----	-----	93.18	14.49	Peak
2	5351.700	52.44	74.00	-21.56	37.97	14.47	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5500MHz
Test by :Caster

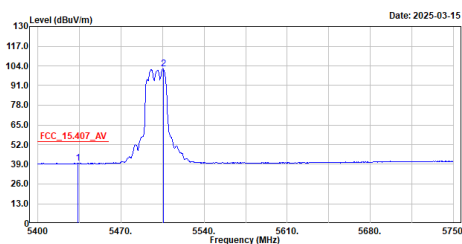


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5433.600	39.91	54.00	-14.09	25.24	14.67	Average
2	5505.700	102.06	-----	-----	86.87	15.19	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5500MHz
Test by :Caster

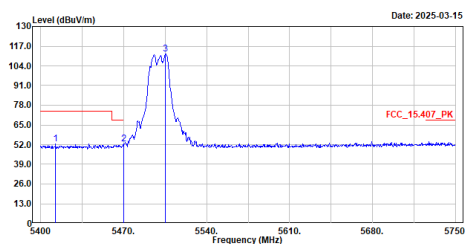


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5412.600	52.36	74.00	-21.64	37.83	14.53	Peak
2	5470.000	52.31	68.22	-15.91	37.37	14.94	Peak
3	5505.350	111.72	-----	-----	96.53	15.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_a_5500MHz
Test by :Caster

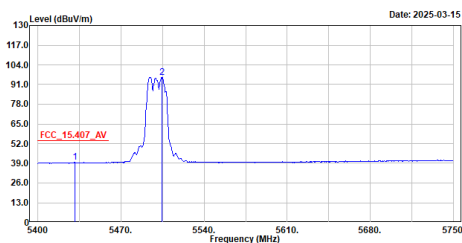


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5431.150	39.70	54.00	-14.30	25.04	14.66	Average
2	5504.300	95.88	-----	-----	80.69	15.19	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_a_5500MHz
Test by :Caster

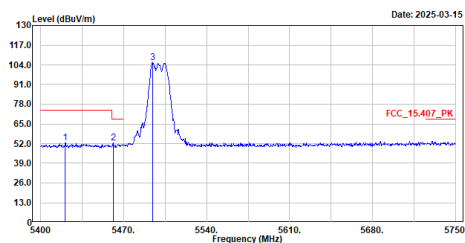


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5420.650	52.46	74.00	-21.54	37.88	14.58	Peak
2	5461.250	52.26	68.22	-15.96	37.38	14.88	Peak
3	5494.500	105.64	-----	-----	90.52	15.12	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5700MHz
Test by :Caster

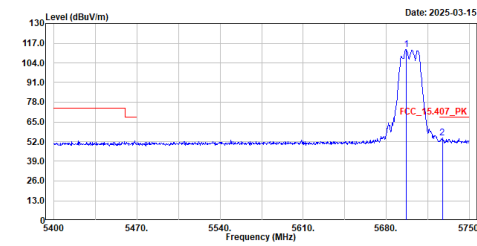


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5696.800	112.89	-----	-----	96.67	16.22	Peak
2	5727.250	54.31	68.22	-13.91	37.90	16.41	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5700MHz
Test by :Caster

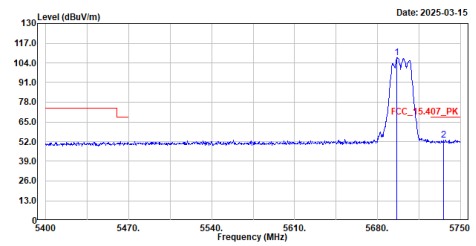


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5696.450	107.33	-----	-----	91.11	16.22	Peak
2	5735.650	53.17	68.22	-15.05	36.72	16.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5745MHz
Test by :Caster

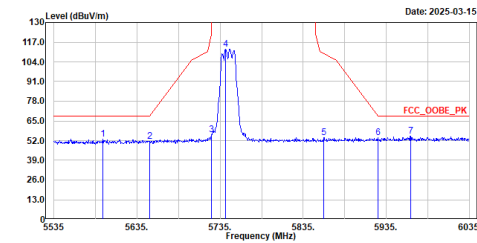


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5594.000	53.10	68.20	-15.10	37.73	15.37	Peak
2	5650.000	51.34	68.21	-16.87	35.57	15.77	Peak
3	5725.000	55.79	122.20	-66.41	39.40	16.39	Peak
4	5742.000	112.35	-----	-----	95.87	16.48	Peak
5	5800.000	53.91	109.40	-55.49	37.45	16.46	Peak
6	5925.000	54.01	68.21	-14.20	37.28	16.73	Peak
7	5964.500	54.86	68.20	-13.34	38.13	16.73	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5745MHz
Test by :Caster

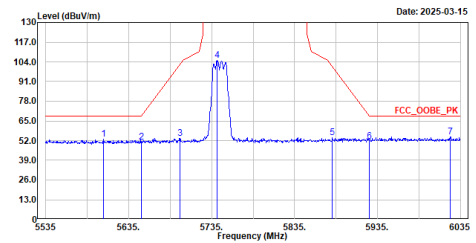


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5604.500	53.14	68.20	-15.06	37.72	15.42	Peak
2	5650.000	51.11	68.21	-17.10	35.34	15.77	Peak
3	5696.500	53.53	102.61	-49.08	37.31	16.22	Peak
4	5742.000	105.21	-----	-----	88.73	16.48	Peak
5	5800.500	54.06	101.13	-47.07	37.52	16.54	Peak
6	5925.000	51.58	68.21	-16.63	34.85	16.73	Peak
7	6023.000	54.54	68.20	-13.66	37.80	16.74	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5825MHz
Test by :Caster

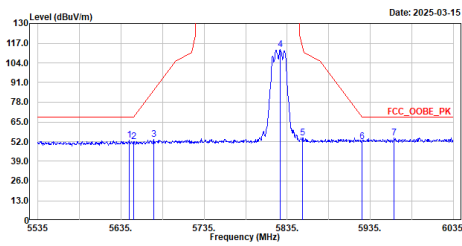


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5645.000	52.77	68.20	-15.43	37.03	15.74	Peak
2	5650.000	52.19	68.21	-16.02	36.42	15.77	Peak
3	5674.500	53.46	86.33	-32.87	37.44	16.02	Peak
4	5826.500	112.73	-----	-----	96.27	16.46	Peak
5	5853.500	54.62	114.22	-59.60	38.19	16.43	Peak
6	5925.000	52.02	68.21	-16.19	35.29	16.73	Peak
7	5964.000	54.43	68.20	-13.77	37.71	16.72	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5825MHz
Test by :Caster

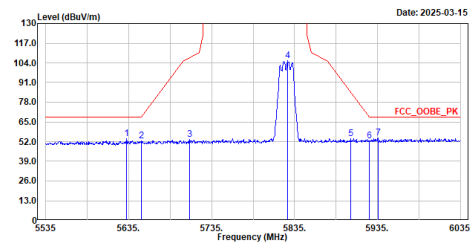


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5632.500	53.72	68.20	-14.48	38.07	15.65	Peak
2	5650.000	52.54	68.21	-15.67	36.77	15.77	Peak
3	5708.500	53.60	107.58	-53.98	37.30	16.30	Peak
4	5827.000	105.30	-----	-----	88.84	16.46	Peak
5	5903.000	54.11	84.48	-30.37	37.47	16.64	Peak
6	5925.000	52.62	68.21	-15.59	35.09	16.73	Peak
7	5935.500	54.24	68.20	-13.96	37.50	16.74	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5180MHz
Test by :Caster

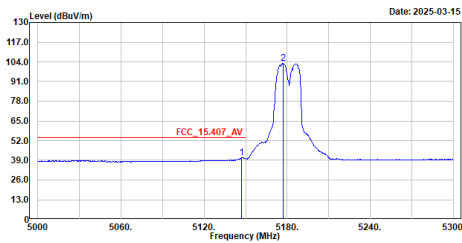


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5147.300	40.66	54.00	-13.34	26.14	14.52	Average
2	5177.000	102.97	-----	-----	88.48	14.49	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5180MHz
Test by :Caster

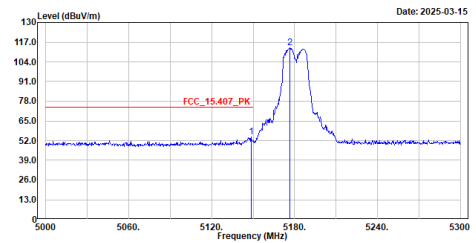


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5148.500	54.45	74.00	-19.55	39.93	14.52	Peak
2	5176.700	113.15	-----	-----	98.66	14.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5180MHz
Test by :Caster

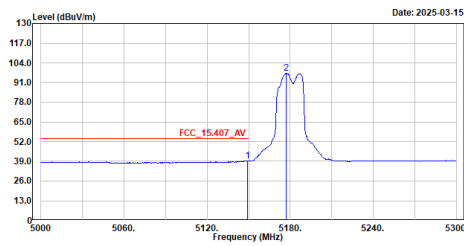

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5149.400	39.43	54.00	-14.57	24.91	14.52	Average
2	5177.300	97.12	-----	-----	82.63	14.49	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5180MHz
Test by :Caster

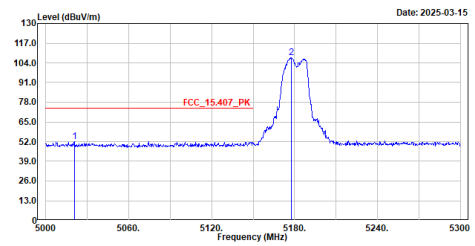

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5020.700	51.89	74.00	-22.11	37.44	14.45	Peak
2	5177.600	107.33	-----	-----	92.85	14.48	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5320MHz
Test by :Caster

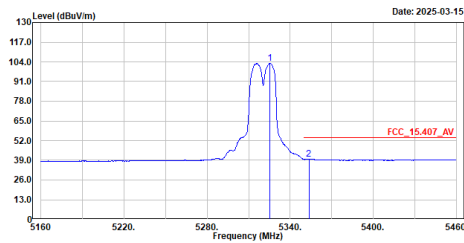

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5325.300	103.03	-----	-----	88.54	14.49	Average
2	5353.500	39.95	54.00	-14.05	25.47	14.48	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5320MHz
Test by :Caster

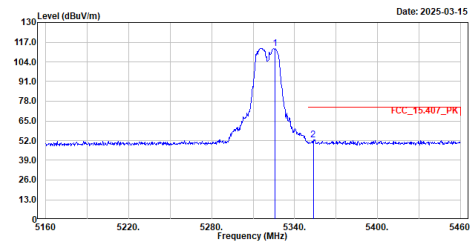

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5325.600	113.01	-----	-----	98.52	14.49	Peak
2	5353.500	52.60	74.00	-21.40	38.12	14.48	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5320MHz
Test by :Caster

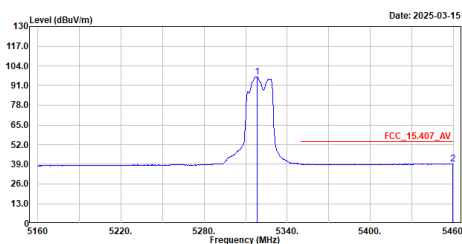


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5318.100	96.81	-----	-----	82.32	14.49	Average
2	5459.400	39.24	54.00	-14.76	24.38	14.86	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5320MHz
Test by :Caster

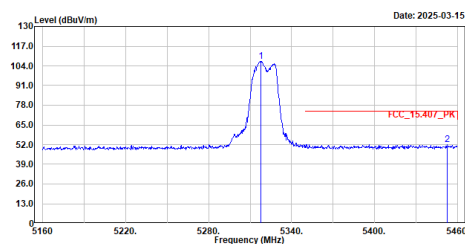


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5317.800	106.85	-----	-----	92.36	14.49	Peak
2	5452.500	52.08	74.00	-21.92	37.26	14.82	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5500MHz
Test by :Caster

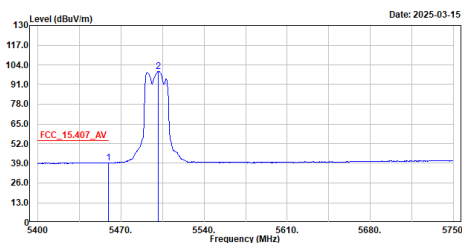


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5459.500	39.35	54.00	-14.65	24.49	14.86	Average
2	5501.500	99.75	-----	-----	84.58	15.17	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5500MHz
Test by :Caster

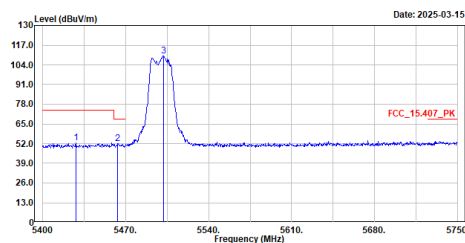


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5428.000	52.31	74.00	-21.69	37.68	14.63	Peak
2	5463.350	52.10	68.22	-16.12	37.21	14.89	Peak
3	5501.850	109.75	-----	-----	94.58	15.17	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5500MHz
Test by :Caster

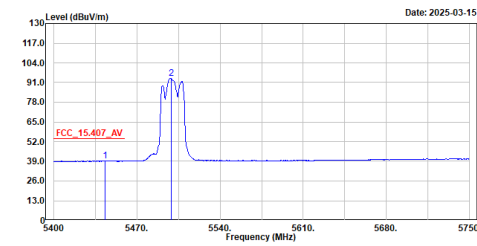


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5443.400	39.26	54.00	-14.74	24.51	14.75	Average
2	5498.700	93.89	-----	-----	78.74	15.15	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5500MHz
Test by :Caster

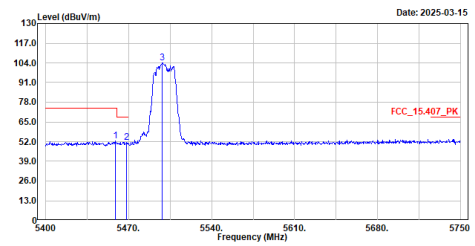


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5458.800	52.68	74.00	-21.32	37.82	14.86	Peak
2	5467.900	51.68	68.22	-16.54	36.76	14.92	Peak
3	5498.350	103.88	-----	-----	88.74	15.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5700MHz
Test by :Caster

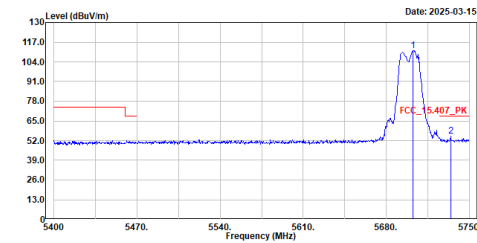


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5702.750	111.33	-----	-----	95.05	16.28	Peak
2	5734.250	55.06	68.22	-13.16	38.61	16.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5700MHz
Test by :Caster

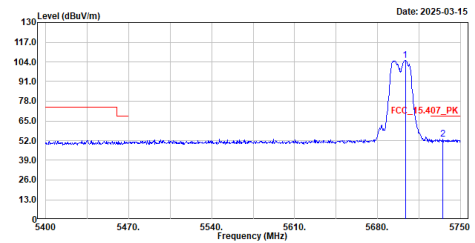


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5703.450	105.15	-----	-----	88.87	16.28	Peak
2	5735.300	53.11	68.22	-15.11	36.66	16.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5745MHz
Test by :Caster

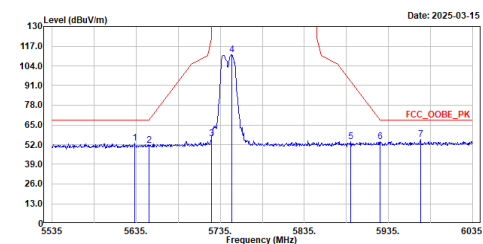


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5633.000	52.90	68.20	-15.30	37.25	15.65	Peak
2	5650.000	51.69	68.21	-16.52	35.92	15.77	Peak
3	5725.000	56.03	122.20	-66.17	39.64	16.39	Peak
4	5748.500	111.30	-----	-----	94.79	16.51	Peak
5	5890.500	53.77	93.73	-39.96	37.19	16.58	Peak
6	5925.000	53.74	68.21	-14.47	37.01	16.73	Peak
7	5973.000	55.28	68.20	-12.92	38.56	16.72	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5745MHz
Test by :Caster

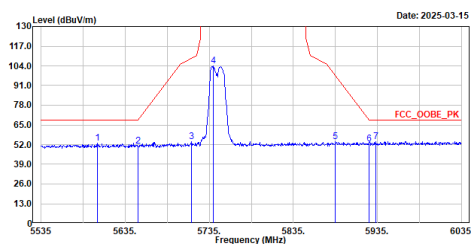


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5602.000	53.18	68.20	-15.02	37.78	15.40	Peak
2	5650.000	51.08	68.21	-17.13	35.31	15.77	Peak
3	5713.500	54.08	108.98	-54.90	37.75	16.33	Peak
4	5739.500	103.83	-----	-----	87.36	16.47	Peak
5	5885.000	53.75	97.80	-44.05	37.19	16.56	Peak
6	5925.000	52.38	68.21	-15.83	35.65	16.73	Peak
7	5933.000	54.20	68.20	-14.00	37.45	16.75	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5825MHz
Test by :Caster

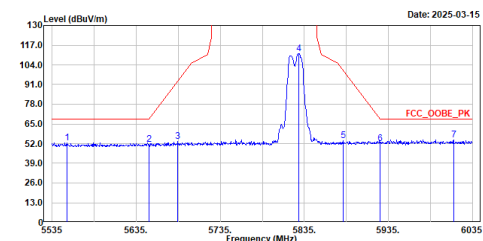


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5553.000	52.61	68.20	-15.59	37.29	15.32	Peak
2	5650.000	51.71	68.21	-16.50	35.94	15.77	Peak
3	5684.500	53.31	93.73	-40.42	37.19	16.12	Peak
4	5828.500	111.49	-----	-----	95.04	16.45	Peak
5	5881.500	54.07	100.39	-46.32	37.52	16.55	Peak
6	5925.000	51.93	68.21	-16.28	35.20	16.73	Peak
7	6012.500	54.54	68.20	-13.66	37.83	16.71	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5825MHz
Test by :Caster

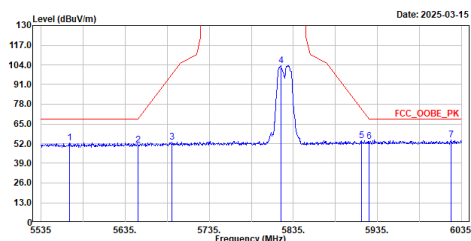


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5568.500	52.55	68.20	-15.65	37.21	15.34	Peak
2	5650.000	51.23	68.21	-16.98	35.46	15.77	Peak
3	5691.000	53.15	98.54	-45.39	36.97	16.18	Peak
4	5820.000	103.68	-----	-----	87.22	16.46	Peak
5	5916.000	53.97	74.87	-20.90	37.28	16.69	Peak
6	5925.000	53.42	68.21	-14.79	36.69	16.73	Peak
7	6022.500	54.39	68.20	-13.81	37.66	16.73	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5190MHz
Test by :Caster

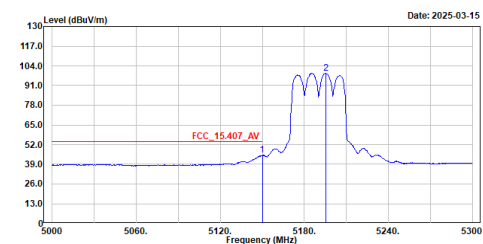


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5150.000	44.90	54.00	-9.10	30.38	14.52	Average
2	5195.600	99.11	-----	-----	84.62	14.49	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5190MHz
Test by :Caster

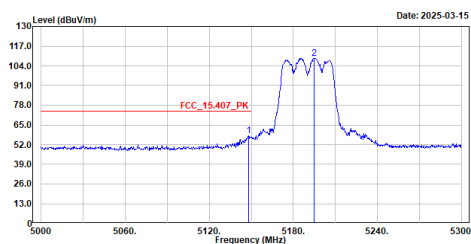


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5148.200	57.99	74.00	-16.01	43.47	14.52	Peak
2	5194.700	108.92	-----	-----	94.43	14.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n40_5190MHz
Test by :Caster

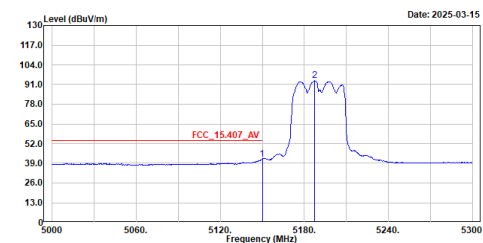


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5150.000	41.91	54.00	-12.09	27.39	14.52	Average
2	5187.500	93.68	-----	-----	79.19	14.49	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n40_5190MHz
Test by :Caster

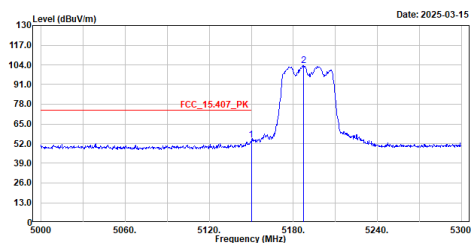


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5150.000	54.68	74.00	-19.32	40.16	14.52	Peak
2	5187.200	103.67	-----	-----	89.18	14.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_m40_5310MHz
Test by :Caster

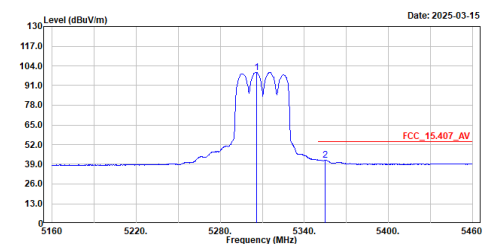


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5306.100	99.80	-----	-----	85.28	14.52	Average
2	5354.700	41.87	54.00	-12.13	27.39	14.48	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_m40_5310MHz
Test by :Caster

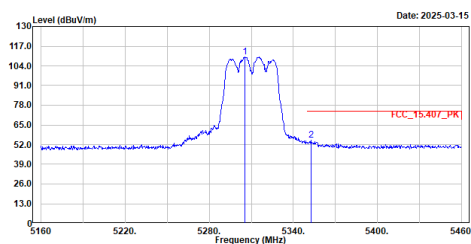


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5305.500	109.82	-----	-----	95.30	14.52	Peak
2	5352.900	54.71	74.00	-19.29	40.25	14.46	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_m40_5310MHz
Test by :Caster

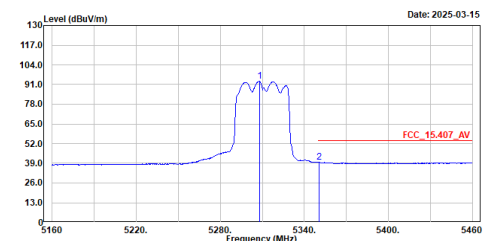


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5307.900	93.29	-----	-----	78.78	14.51	Average
2	5358.800	39.67	54.00	-14.33	25.20	14.47	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_m40_5310MHz
Test by :Caster

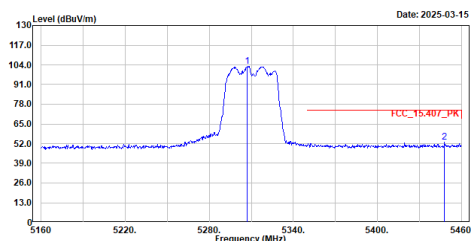


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5307.300	103.15	-----	-----	88.63	14.52	Peak
2	5448.000	52.94	74.00	-21.06	38.16	14.78	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_m40_5510MHz
Test by :Caster

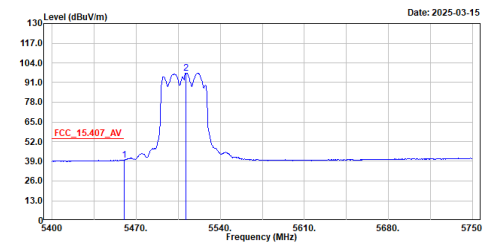


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5459.850	39.69	54.00	-14.31	24.83	14.86	Average
2	5511.300	97.37	-----	-----	82.16	15.21	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_m40_5510MHz
Test by :Caster

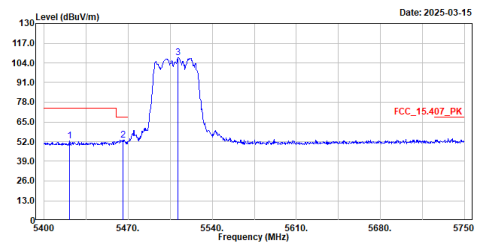


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5421.350	52.32	74.00	-21.68	37.73	14.59	Peak
2	5465.800	53.22	68.22	-15.00	38.31	14.91	Peak
3	5511.650	107.50	-----	-----	92.29	15.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_m40_5510MHz
Test by :Caster

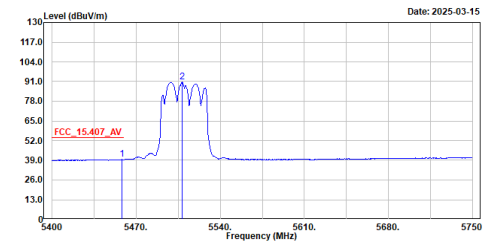


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5458.450	39.52	54.00	-14.48	24.67	14.85	Average
2	5508.150	90.71	-----	-----	75.52	15.19	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_m40_5510MHz
Test by :Caster

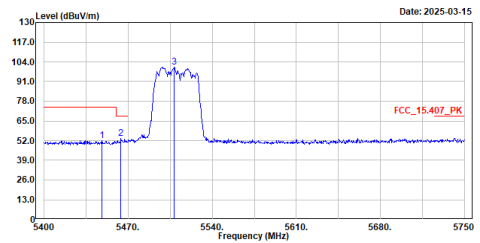


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5448.300	52.15	74.00	-21.85	37.37	14.78	Peak
2	5464.050	53.42	68.22	-14.80	38.52	14.90	Peak
3	5508.500	100.56	-----	-----	85.37	15.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5670MHz
Test by :Caster

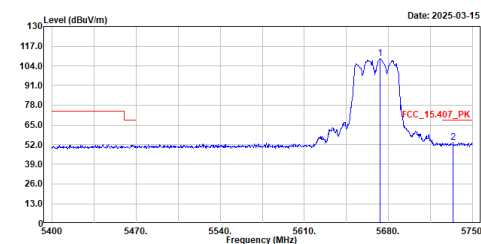


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5673.350	108.83	68.22	-14.91	92.82	16.01	Peak
2	5733.900	53.31	68.22	-14.91	36.86	16.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5670MHz
Test by :Caster

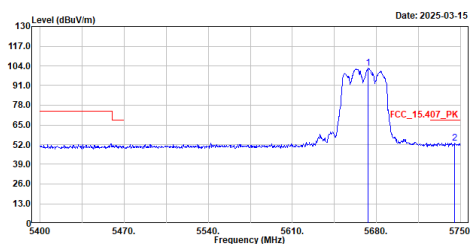


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5673.000	102.33	68.22	-15.03	86.33	16.00	Peak
2	5745.100	53.19	68.22	-15.03	36.69	16.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5755MHz
Test by :Caster

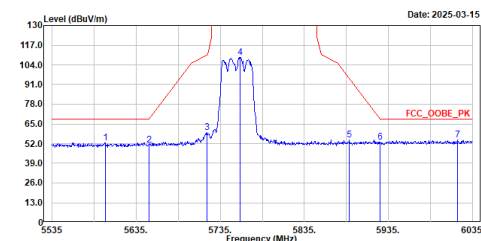


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5598.000	52.60	68.20	-15.60	37.22	15.38	Peak
2	5650.000	50.97	68.21	-17.24	35.20	15.77	Peak
3	5719.500	59.41	110.66	-51.25	43.05	16.36	Peak
4	5758.500	108.99	68.22	-40.73	92.45	16.54	Peak
5	5888.500	54.52	95.21	-40.69	37.95	16.57	Peak
6	5925.000	52.75	68.21	-15.46	36.02	16.73	Peak
7	6017.500	54.27	68.20	-13.93	37.56	16.71	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5755MHz
Test by :Caster

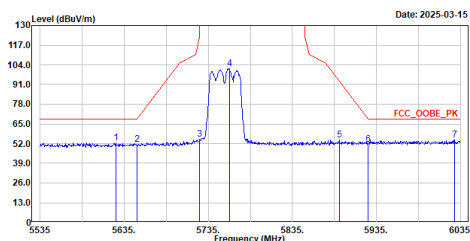


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5625.000	52.46	68.20	-15.74	36.88	15.58	Peak
2	5650.000	51.44	68.21	-16.77	35.67	15.77	Peak
3	5725.000	54.73	122.20	-67.47	38.34	16.39	Peak
4	5760.000	101.63	68.22	-33.41	85.09	16.54	Peak
5	5891.000	54.42	93.36	-38.94	37.84	16.58	Peak
6	5925.000	51.71	68.21	-16.50	34.98	16.73	Peak
7	6028.000	54.52	68.20	-13.68	37.76	16.76	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_m40_5795MHz
Test by :Caster

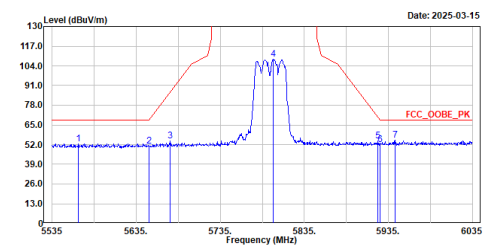


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5566.500	52.66	68.20	-15.54	37.33	15.33	Peak
2	5650.000	50.78	68.21	-17.43	35.01	15.77	Peak
3	5675.000	54.31	86.70	-32.39	38.29	16.02	Peak
4	5798.000	108.18	-----	-----	91.66	16.52	Peak
5	5922.500	54.50	70.06	-15.56	37.78	16.72	Peak
6	5925.000	51.95	68.21	-16.26	35.22	16.73	Peak
7	5943.000	54.71	68.20	-13.49	37.97	16.74	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_m40_5795MHz
Test by :Caster

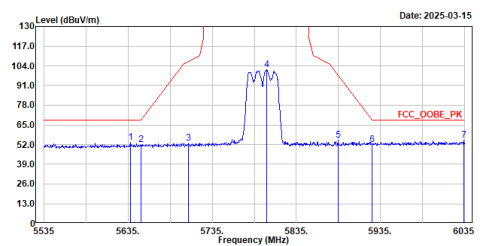


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5637.500	53.35	68.20	-14.85	37.67	15.68	Peak
2	5650.000	51.95	68.21	-16.26	36.18	15.77	Peak
3	5707.000	53.06	107.16	-54.10	36.76	16.30	Peak
4	5800.000	101.37	-----	-----	84.85	16.52	Peak
5	5884.500	55.02	98.17	-43.15	38.46	16.56	Peak
6	5925.000	51.76	68.21	-16.45	35.03	16.73	Peak
7	6034.000	54.86	68.20	-13.34	38.08	16.78	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5180MHz
Test by :Caster

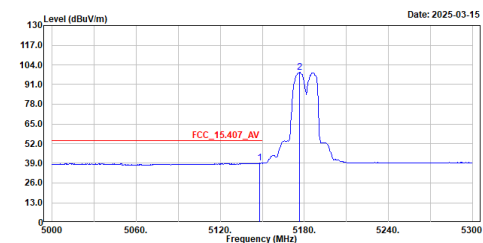


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5148.200	39.16	54.00	-14.84	24.64	14.52	Average
2	5176.700	98.89	-----	-----	84.40	14.49	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5180MHz
Test by :Caster

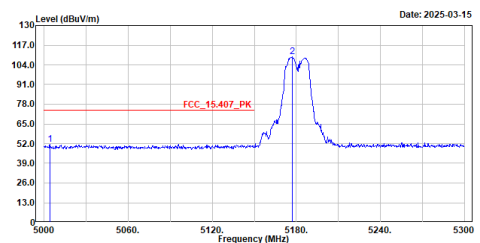


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5004.200	51.44	74.00	-22.56	36.99	14.45	Peak
2	5177.000	109.19	-----	-----	94.70	14.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5180MHz
Test by :Caster

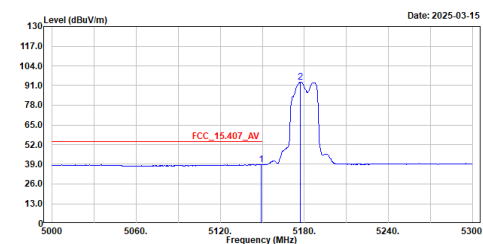


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5149.100	38.85	54.00	-15.15	24.33	14.52	Average
2	5177.000	93.33	-----	-----	78.84	14.49	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5180MHz
Test by :Caster

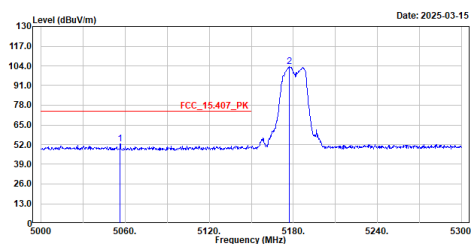


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5056.400	52.73	74.00	-21.27	38.29	14.44	Peak
2	5177.300	103.39	-----	-----	88.90	14.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5320MHz
Test by :Caster

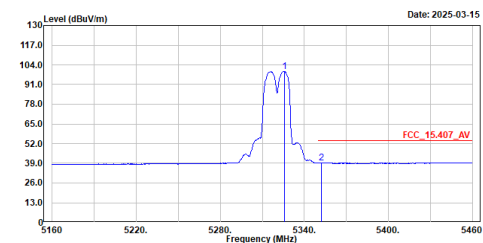


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5325.600	99.75	-----	-----	85.26	14.49	Average
2	5352.300	39.36	54.00	-14.64	24.89	14.47	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5320MHz
Test by :Caster

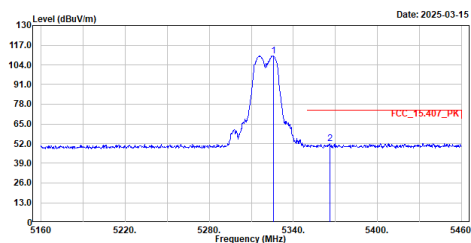


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5325.600	109.79	-----	-----	95.30	14.49	Peak
2	5366.100	52.00	74.00	-22.00	37.52	14.48	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5320MHz
Test by :Caster

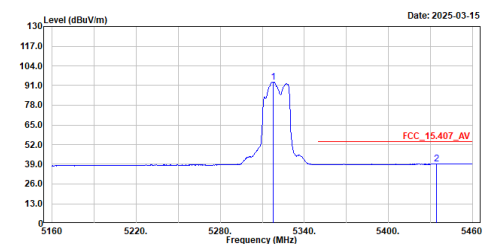


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5317.800	93.41	-----	-----	78.92	14.49	Average
2	5434.200	39.27	54.00	-14.73	24.59	14.68	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5320MHz
Test by :Caster

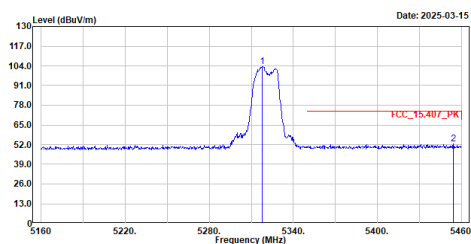


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5317.800	103.71	-----	-----	89.22	14.49	Peak
2	5454.300	52.59	74.00	-21.41	37.76	14.83	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5500MHz
Test by :Caster

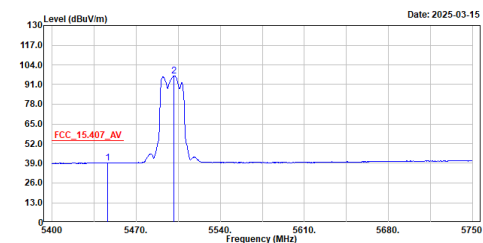


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5446.200	39.43	54.00	-14.57	24.67	14.76	Average
2	5501.500	96.84	-----	-----	81.67	15.17	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5500MHz
Test by :Caster

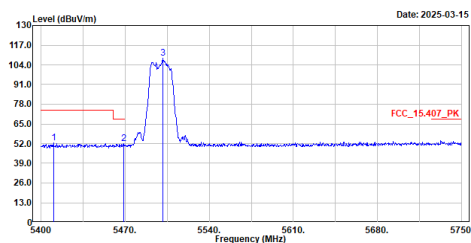


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5410.500	52.33	74.00	-21.67	37.81	14.52	Peak
2	5468.600	51.79	68.22	-16.43	36.87	14.92	Peak
3	5501.150	108.20	-----	-----	93.04	15.16	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5500MHz
Test by :Caster

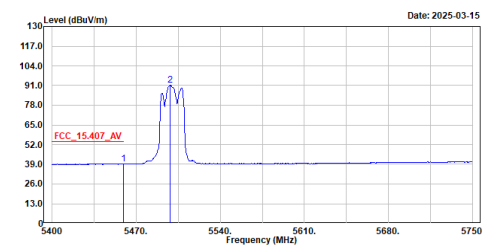


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5459.150	39.25	54.00	-14.75	24.39	14.86	Average
2	5498.350	91.08	-----	-----	75.94	15.14	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5500MHz
Test by :Caster

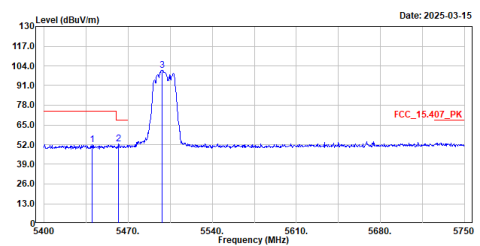


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5440.250	52.07	74.00	-21.93	37.34	14.73	Peak
2	5461.950	52.36	68.22	-15.86	37.48	14.88	Peak
3	5498.350	101.20	-----	-----	86.06	15.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5700MHz
Test by :Caster

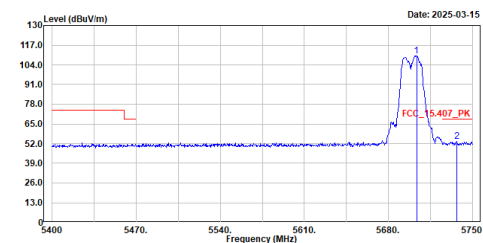


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5703.450	109.95	-----	-----	93.67	16.28	Peak
2	5737.050	53.26	68.22	-14.96	36.80	16.46	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5700MHz
Test by :Caster

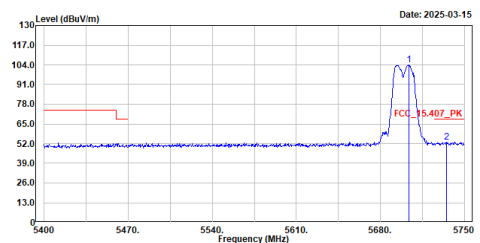


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5703.800	103.86	-----	-----	87.57	16.29	Peak
2	5734.950	53.00	68.22	-15.22	36.55	16.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5745MHz
Test by :Caster

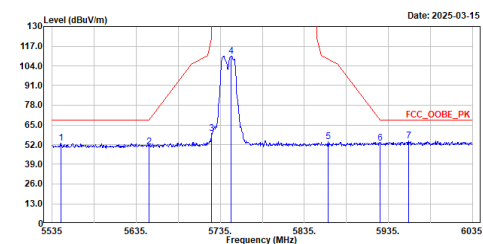


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5545.500	53.19	68.20	-15.01	37.89	15.30	Peak
2	5650.000	50.40	68.21	-17.81	34.63	15.77	Peak
3	5725.000	59.26	122.20	-62.94	42.87	16.39	Peak
4	5748.000	110.55	-----	-----	94.04	16.51	Peak
5	5863.000	53.89	108.56	-54.67	37.42	16.47	Peak
6	5925.000	52.81	68.21	-15.40	36.88	16.73	Peak
7	5959.500	54.45	68.20	-13.75	37.72	16.73	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5745MHz
Test by :Caster

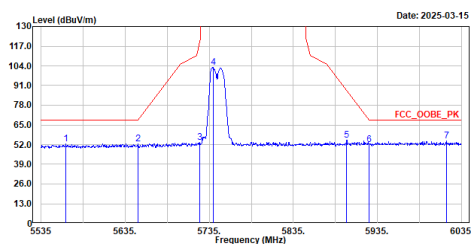


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5564.500	52.71	68.20	-15.49	37.38	15.33	Peak
2	5650.000	52.40	68.21	-15.81	36.63	15.77	Peak
3	5723.500	53.28	118.78	-65.50	36.90	16.38	Peak
4	5739.500	102.91	-----	-----	86.44	16.47	Peak
5	5898.500	54.91	87.81	-32.90	38.29	16.62	Peak
6	5925.000	52.17	68.21	-16.04	35.44	16.73	Peak
7	6017.000	54.32	68.20	-13.88	37.61	16.71	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5825MHz
Test by :Caster

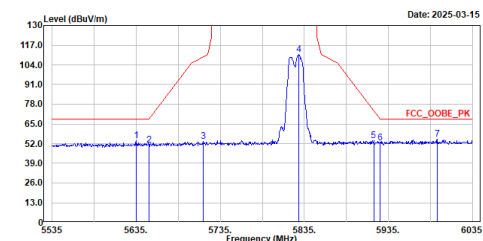


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5635.500	53.74	68.20	-14.46	38.08	15.66	Peak
2	5650.000	50.78	68.21	-17.43	35.01	15.77	Peak
3	5715.000	53.44	109.40	-55.96	37.10	16.34	Peak
4	5828.500	110.67	-----	-----	94.22	16.45	Peak
5	5917.500	54.12	73.76	-19.64	37.42	16.70	Peak
6	5925.000	52.58	68.21	-15.63	35.85	16.73	Peak
7	5993.500	54.70	68.20	-13.50	37.99	16.71	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5825MHz
Test by :Caster

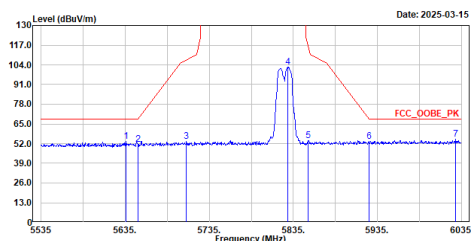


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5636.000	53.24	68.20	-14.96	37.57	15.67	Peak
2	5650.000	51.54	68.21	-16.67	35.77	15.77	Peak
3	5708.000	53.42	107.44	-54.02	37.12	16.30	Peak
4	5828.000	102.45	-----	-----	86.00	16.45	Peak
5	5852.500	53.85	116.50	-62.65	37.42	16.43	Peak
6	5925.000	53.34	68.21	-14.87	36.61	16.73	Peak
7	6028.000	55.09	68.20	-13.11	38.33	16.76	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac40_5190MHz
Test by :Caster

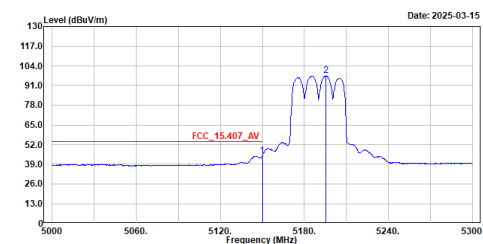


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5159.000	44.60	54.00	-9.40	39.08	14.52	Average
2	5195.300	97.41	-----	-----	82.92	14.49	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac40_5190MHz
Test by :Caster

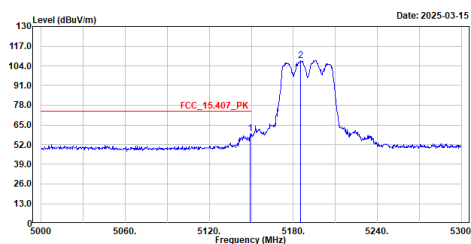


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5149.100	59.16	74.00	-14.84	44.64	14.52	Peak
2	5185.400	107.34	-----	-----	92.85	14.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac40_5190MHz
Test by :Caster

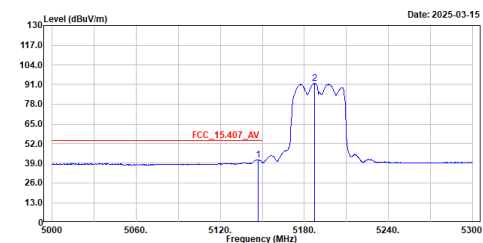


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5147.000	41.36	54.00	-12.64	26.84	14.52	Average
2	5187.500	91.76	-----	-----	77.27	14.49	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac40_5190MHz
Test by :Caster

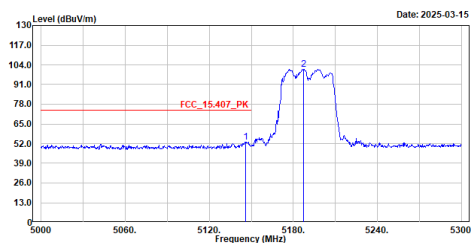


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5145.800	53.00	74.00	-21.00	38.49	14.51	Peak
2	5187.500	101.06	-----	-----	86.57	14.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac40_5310MHz
Test by :Caster

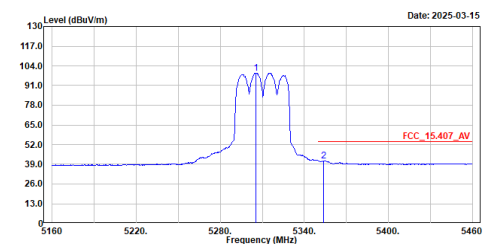


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5305.500	99.21	-----	-----	84.69	14.52	Average
2	5353.800	41.32	54.00	-12.68	26.84	14.48	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac40_5310MHz
Test by :Caster

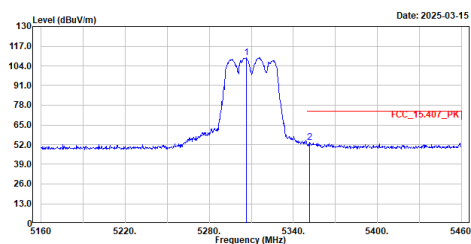


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5306.400	109.56	-----	-----	95.04	14.52	Peak
2	5351.400	53.23	74.00	-20.77	38.76	14.47	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac40_5310MHz
Test by :Caster

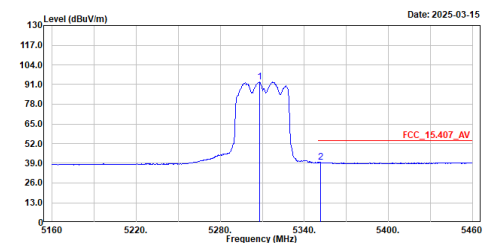


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5307.900	92.49	-----	-----	77.98	14.51	Average
2	5351.400	39.64	54.00	-14.36	25.17	14.47	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac40_5310MHz
Test by :Caster

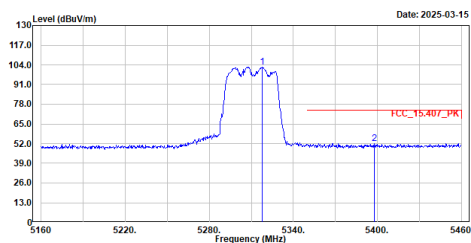


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5317.800	102.49	-----	-----	88.00	14.49	Peak
2	5397.600	52.10	74.00	-21.90	37.64	14.46	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac40_5510MHz
Test by :Caster

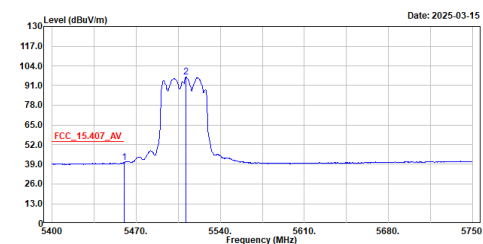


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5459.850	48.15	54.00	-13.85	25.29	14.86	Average
2	5511.650	96.75	-----	-----	81.54	15.21	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac40_5510MHz
Test by :Caster

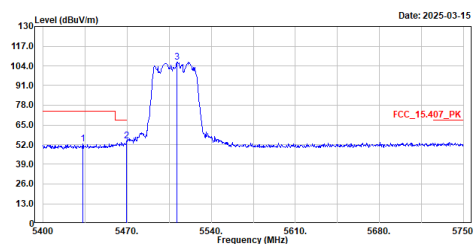


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5433.250	52.48	74.00	-21.52	37.81	14.67	Peak
2	5469.650	54.45	68.22	-13.77	39.51	14.94	Peak
3	5511.650	106.59	-----	-----	91.38	15.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac40_5510MHz
Test by :Caster

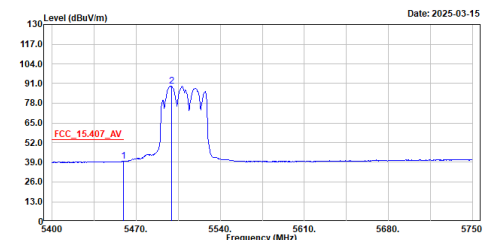


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5459.500	39.65	54.00	-14.35	24.79	14.86	Average
2	5499.400	89.25	-----	-----	74.09	15.16	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac40_5510MHz
Test by :Caster

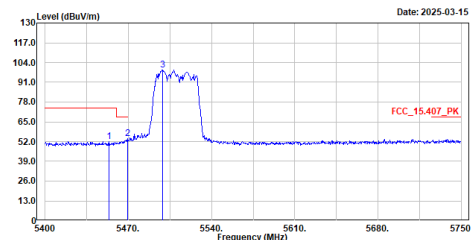


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5453.900	52.00	74.00	-22.00	37.17	14.83	Peak
2	5469.300	53.85	68.22	-14.37	38.91	14.94	Peak
3	5499.050	99.08	-----	-----	83.92	15.16	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac40_5670MHz
Test by :Caster

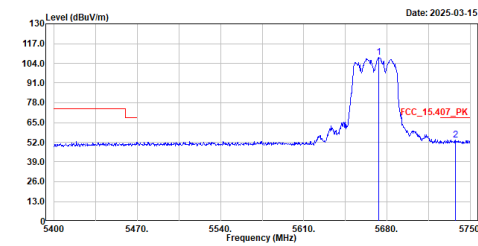


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5673.350	107.82	-----	-----	91.81	16.01	Peak
2	5737.400	53.61	68.22	-14.61	37.15	16.46	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac40_5670MHz
Test by :Caster

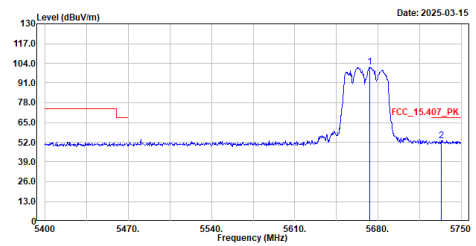


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5673.000	101.39	-----	-----	85.39	16.00	Peak
2	5733.200	53.06	68.22	-15.16	36.63	16.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac40_5755MHz
Test by :Caster

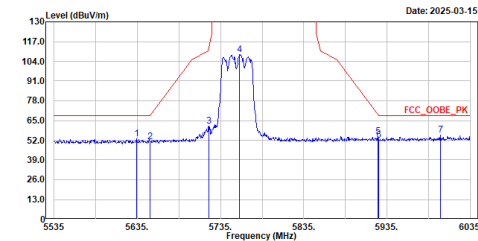


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5634.500	53.14	68.20	-15.06	37.48	15.66	Peak
2	5650.000	50.94	68.21	-17.27	35.17	15.77	Peak
3	5721.000	61.20	113.08	-51.88	44.84	16.36	Peak
4	5758.000	108.58	-----	-----	92.04	16.54	Peak
5	5924.000	54.35	68.95	-14.60	37.62	16.73	Peak
6	5925.000	51.89	68.21	-16.32	35.16	16.73	Peak
7	5999.000	55.25	68.20	-12.95	38.55	16.70	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac40_5755MHz
Test by :Caster

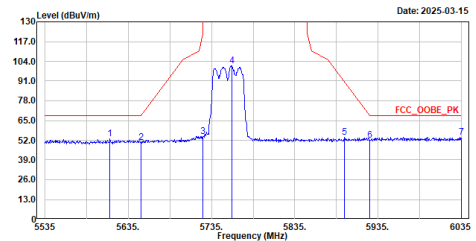


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5613.000	52.76	68.20	-15.44	37.27	15.49	Peak
2	5650.000	50.74	68.21	-17.47	34.97	15.77	Peak
3	5725.000	54.68	122.20	-67.52	38.29	16.39	Peak
4	5759.500	101.09	-----	-----	84.55	16.54	Peak
5	5895.000	53.78	90.40	-36.62	37.17	16.61	Peak
6	5925.000	51.94	68.21	-16.27	35.21	16.73	Peak
7	6035.000	54.19	68.20	-14.01	37.41	16.78	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac40_5795MHz
Test by :Caster

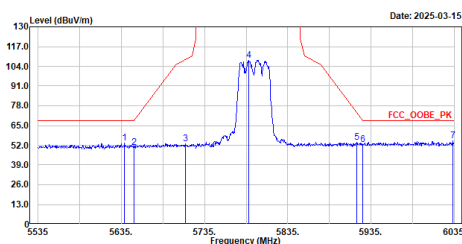


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5639.000	53.54	68.20	-14.66	37.85	15.69	Peak
2	5650.000	50.77	68.21	-17.44	35.00	15.77	Peak
3	5712.500	52.96	108.70	-55.74	36.63	16.33	Peak
4	5788.000	107.77	-----	-----	91.25	16.52	Peak
5	5918.000	53.94	73.39	-19.45	37.24	16.70	Peak
6	5925.000	52.61	68.21	-15.60	35.88	16.73	Peak
7	6033.000	54.83	68.20	-13.37	38.86	16.77	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac40_5795MHz
Test by :Caster

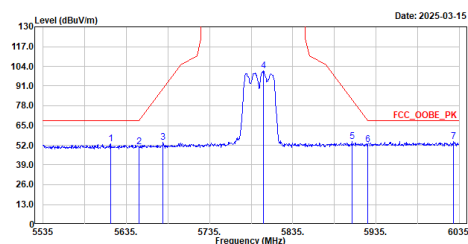


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5616.000	53.04	68.20	-15.16	37.52	15.52	Peak
2	5650.000	50.92	68.21	-17.29	35.15	15.77	Peak
3	5679.000	53.79	89.66	-35.87	37.73	16.06	Peak
4	5799.500	100.81	-----	-----	84.29	16.52	Peak
5	5906.000	54.22	82.26	-28.04	37.57	16.65	Peak
6	5925.000	52.37	68.21	-15.84	35.64	16.73	Peak
7	6028.000	54.53	68.20	-13.67	37.77	16.76	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5210MHz
Test by :Caster

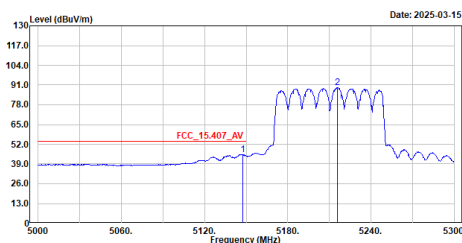


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5147.600	45.33	54.00	-8.67	30.81	14.52	Average
2	5216.000	89.24	-----	-----	74.75	14.49	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5210MHz
Test by :Caster

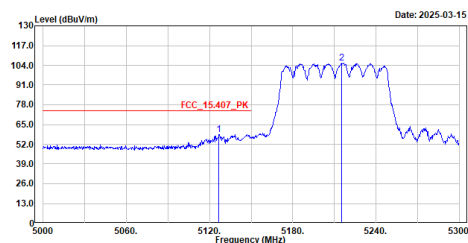


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5126.900	50.34	74.00	-15.66	43.03	14.51	Peak
2	5215.400	105.34	-----	-----	90.85	14.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5210MHz
Test by :Caster

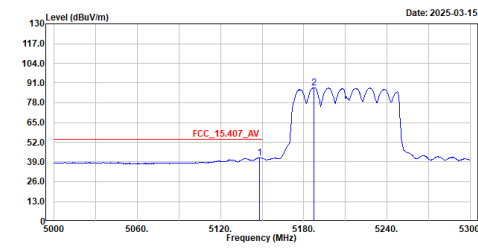


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5149.200	41.93	54.00	-12.07	27.41	14.52	Average
2	5187.200	87.92	-----	-----	73.43	14.49	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5210MHz
Test by :Caster

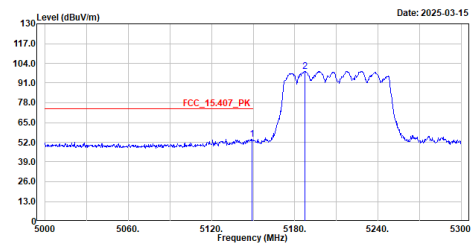


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5149.100	54.01	74.00	-19.99	39.49	14.52	Peak
2	5187.200	98.77	-----	-----	84.28	14.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5290MHz
Test by :Caster

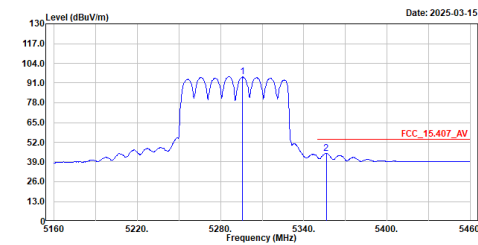


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5295.900	95.10	-----	-----	80.58	14.52	Average
2	5356.200	44.87	54.00	-9.13	30.39	14.48	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5290MHz
Test by :Caster

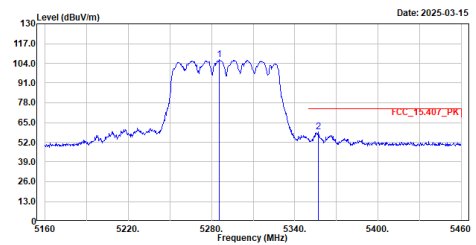


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5285.400	106.25	-----	-----	91.74	14.51	Peak
2	5356.800	58.96	74.00	-15.04	44.48	14.48	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5290MHz
Test by :Caster

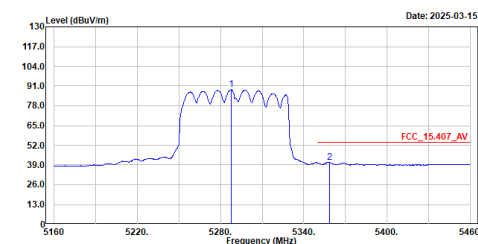


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5287.800	88.57	-----	-----	74.06	14.51	Average
2	5358.600	40.84	54.00	-13.16	26.37	14.47	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5290MHz
Test by :Caster

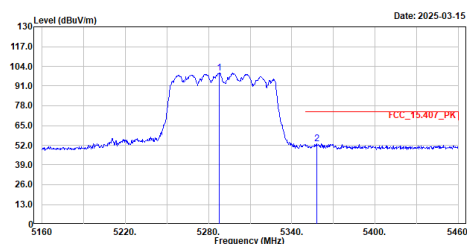


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5287.800	99.43	-----	-----	84.92	14.51	Peak
2	5358.300	52.89	74.00	-21.11	38.42	14.47	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5530MHz
Test by :Caster

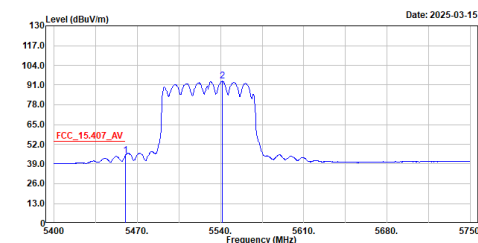


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5459.850	44.41	54.00	-9.59	29.55	14.06	Average
2	5541.400	93.57	-----	-----	78.27	15.30	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5530MHz
Test by :Caster

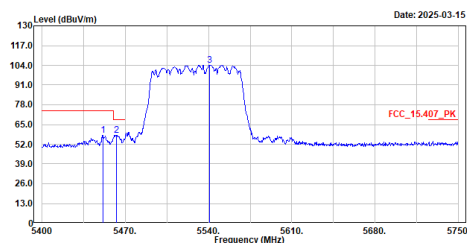

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5451.100	57.08	74.00	-16.12	43.00	14.00	Peak
2	5462.300	58.09	68.22	-10.13	43.20	14.89	Peak
3	5541.050	104.15	-----	-----	88.86	15.29	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.