




OBW NVNT a 5200MHz Ant0

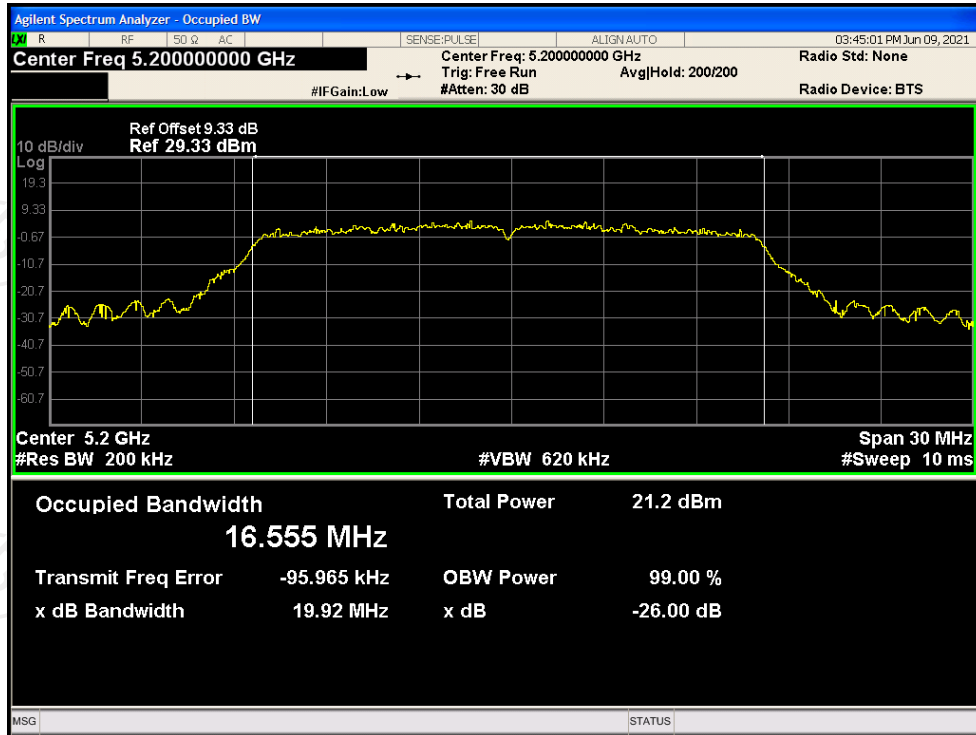


OBW NVNT a 5240MHz Ant0

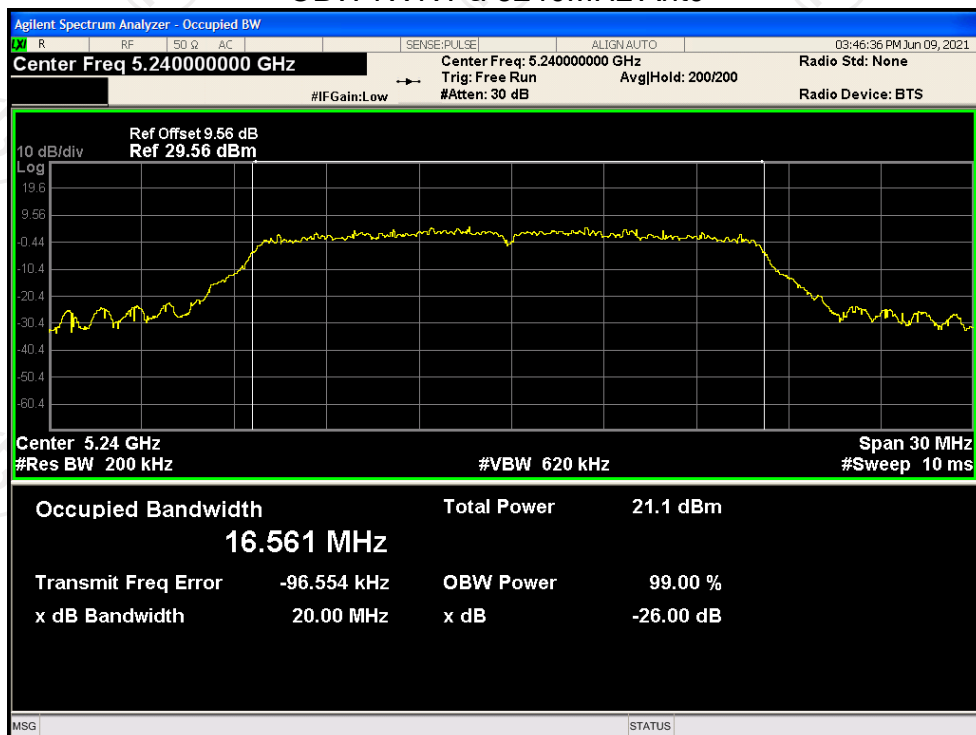


OBW NVNT ac20 5180MHz Ant0

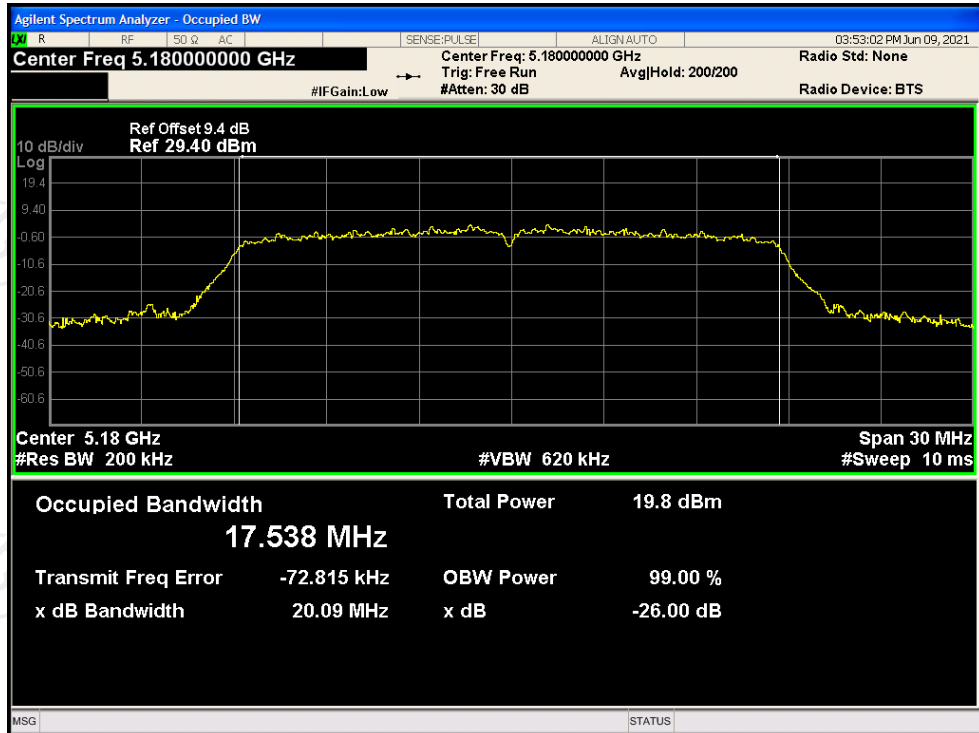


OBW NVNT ac20 5200MHz Ant0

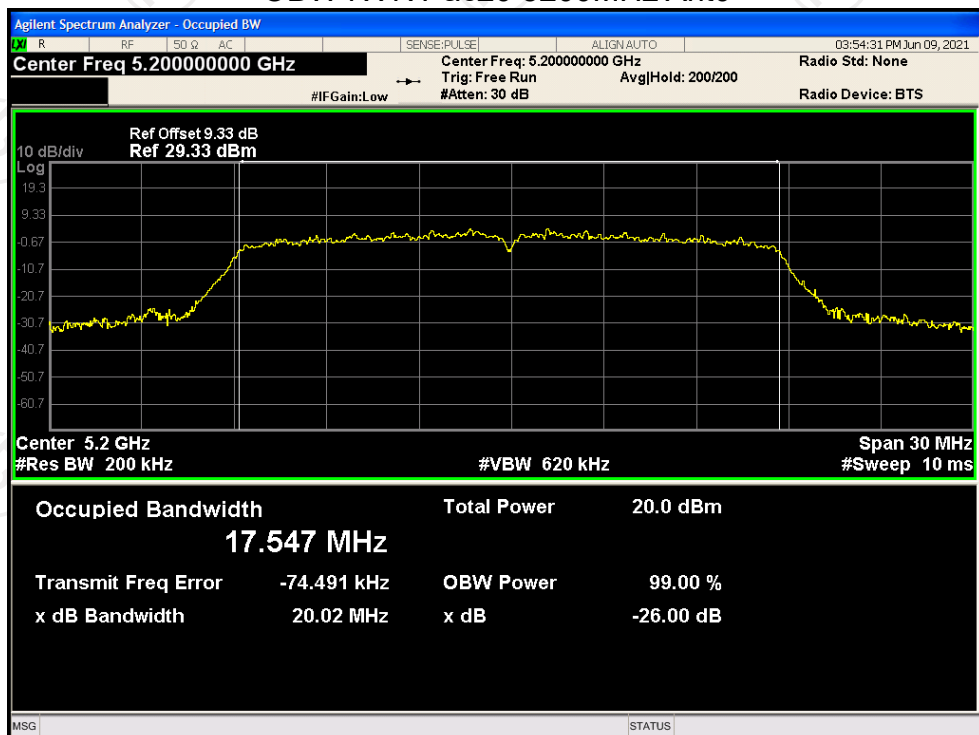


OBW NVNT ac20 5240MHz Ant0

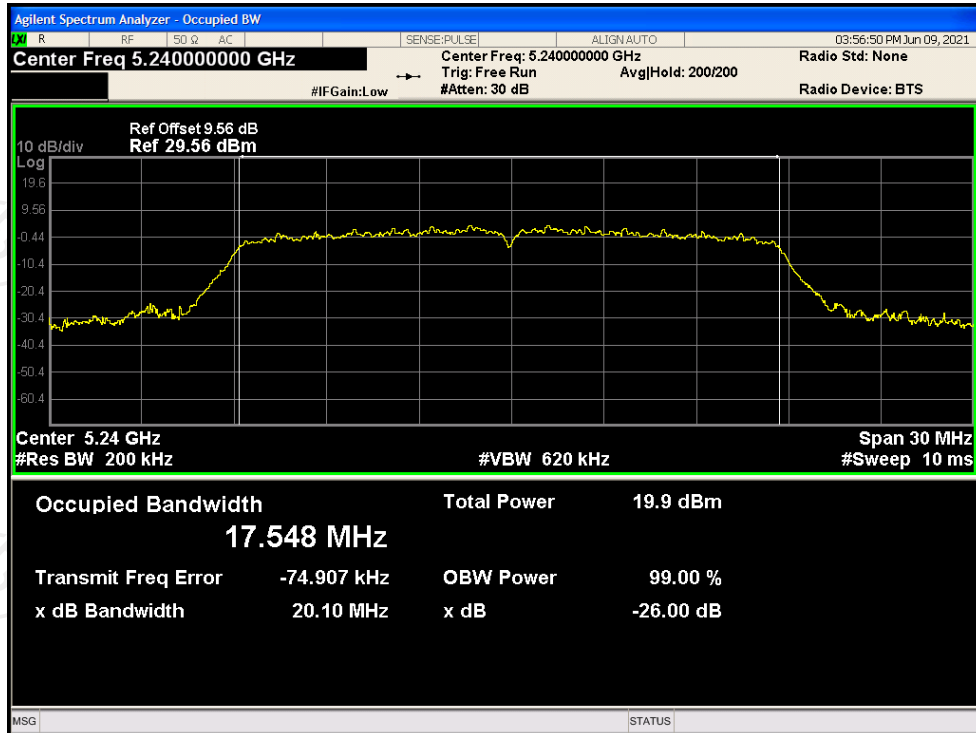


OBW NVNT ac40 5190MHz Ant0

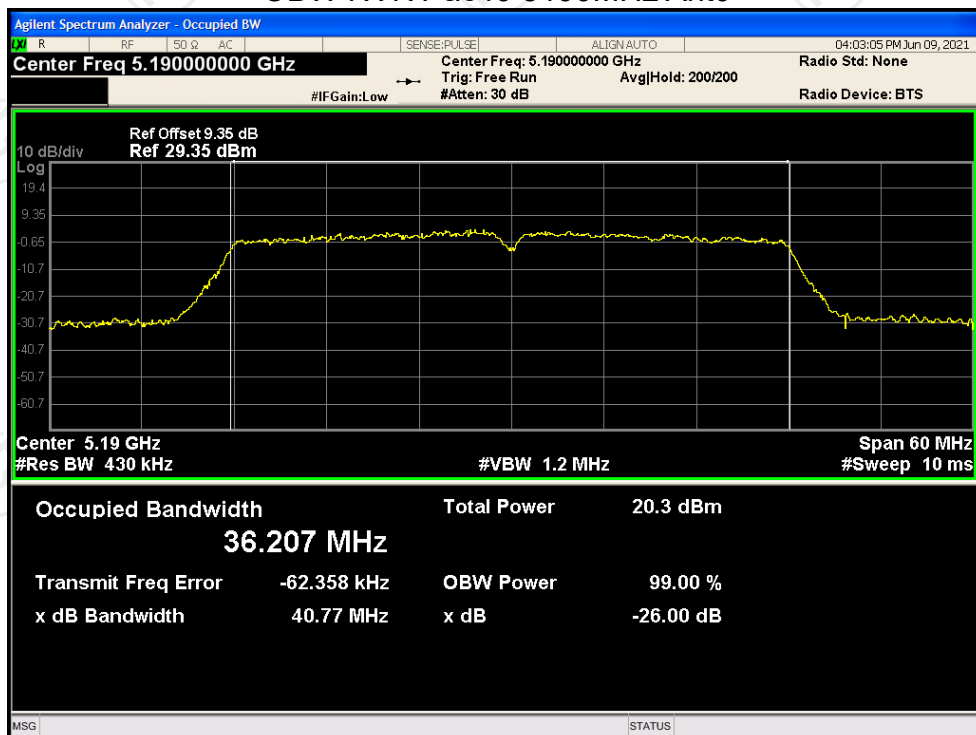


OBW NVNT ac40 5230MHz Ant0

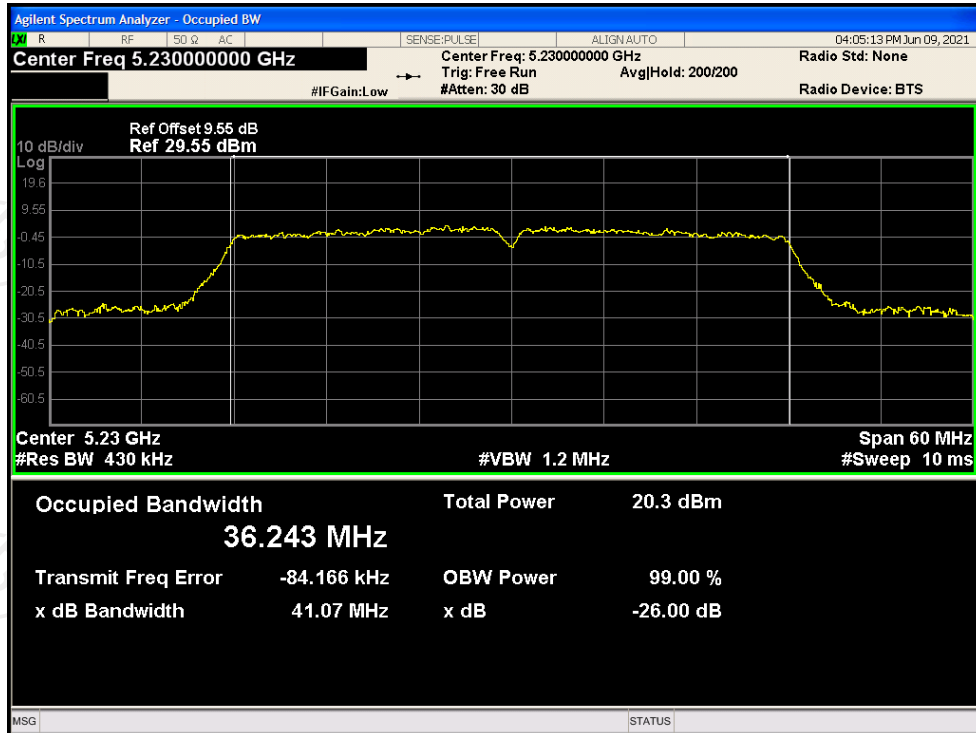


OBW NVNT ac80 5210MHz Ant0

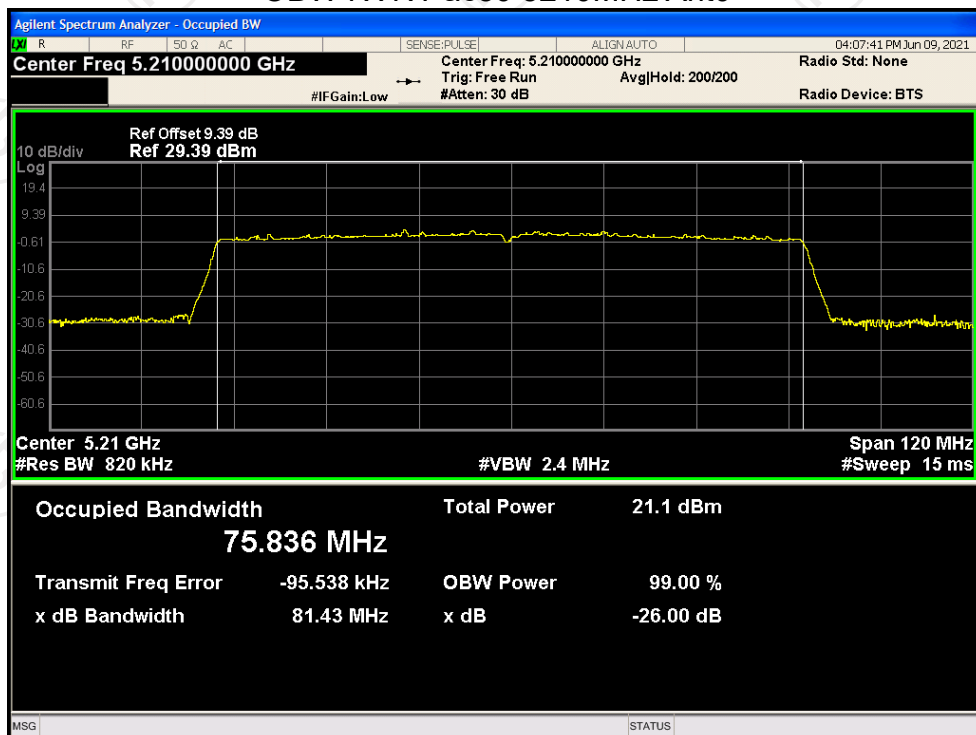


OBW NVNT n20 5180MHz Ant0

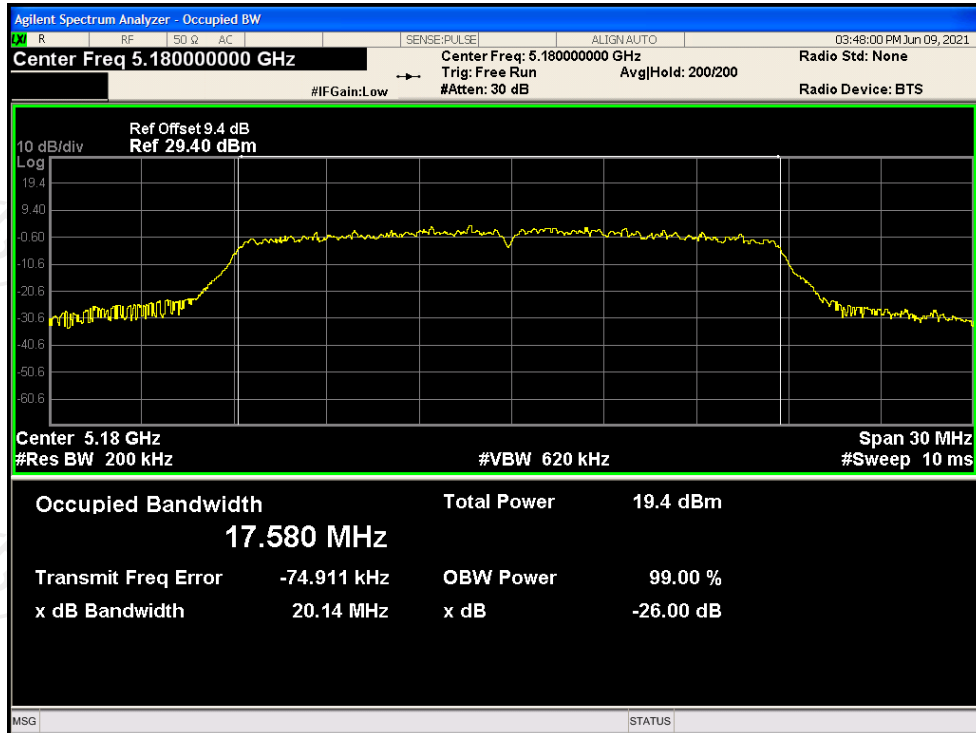


OBW NVNT n20 5200MHz Ant0

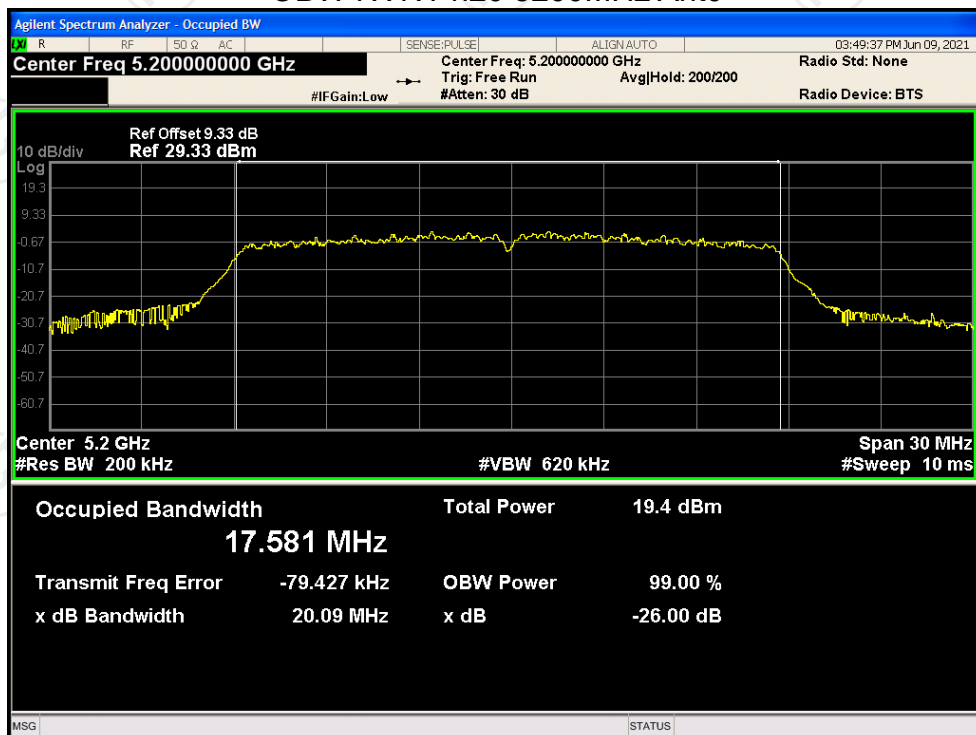


OBW NVNT n20 5240MHz Ant0

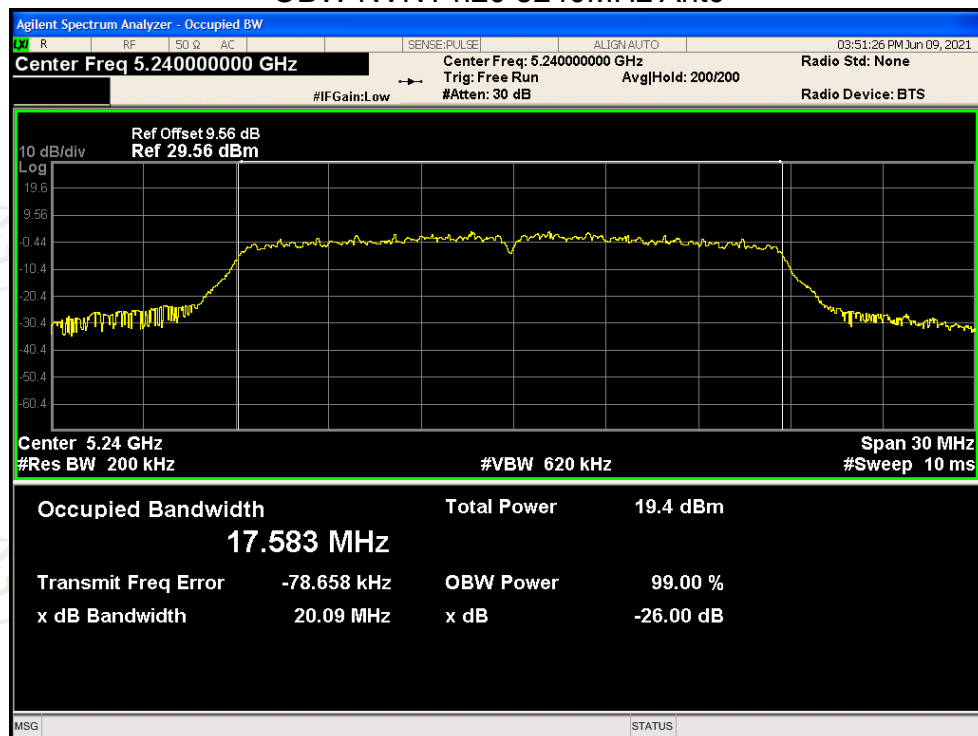


OBW NVNT n40 5190MHz Ant0

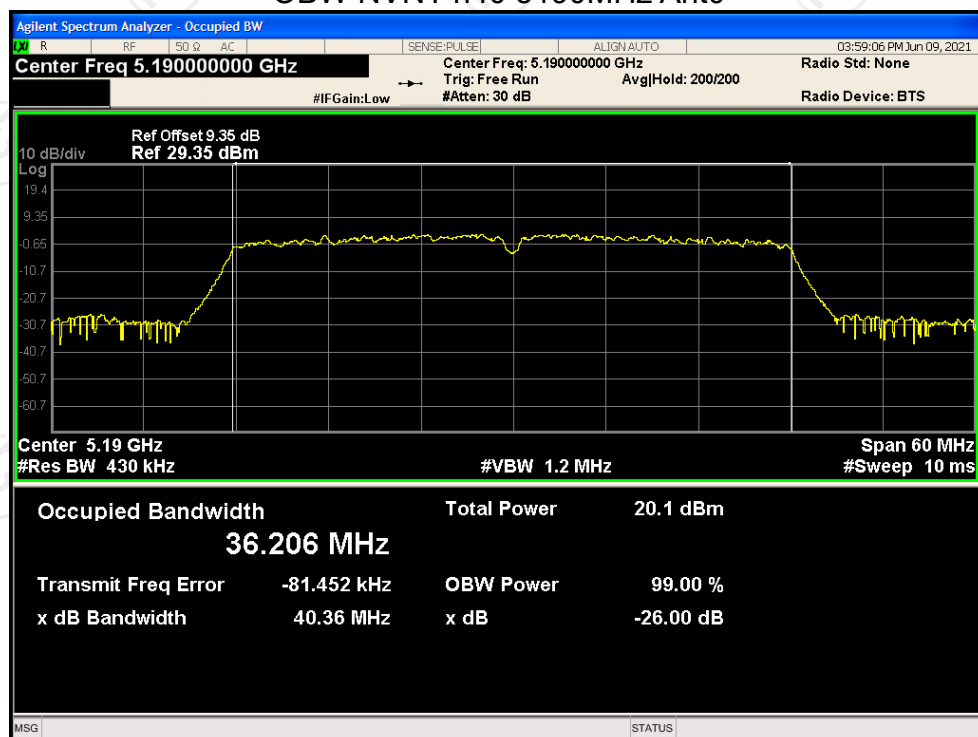


OBW NVNT n40 5230MHz Ant0

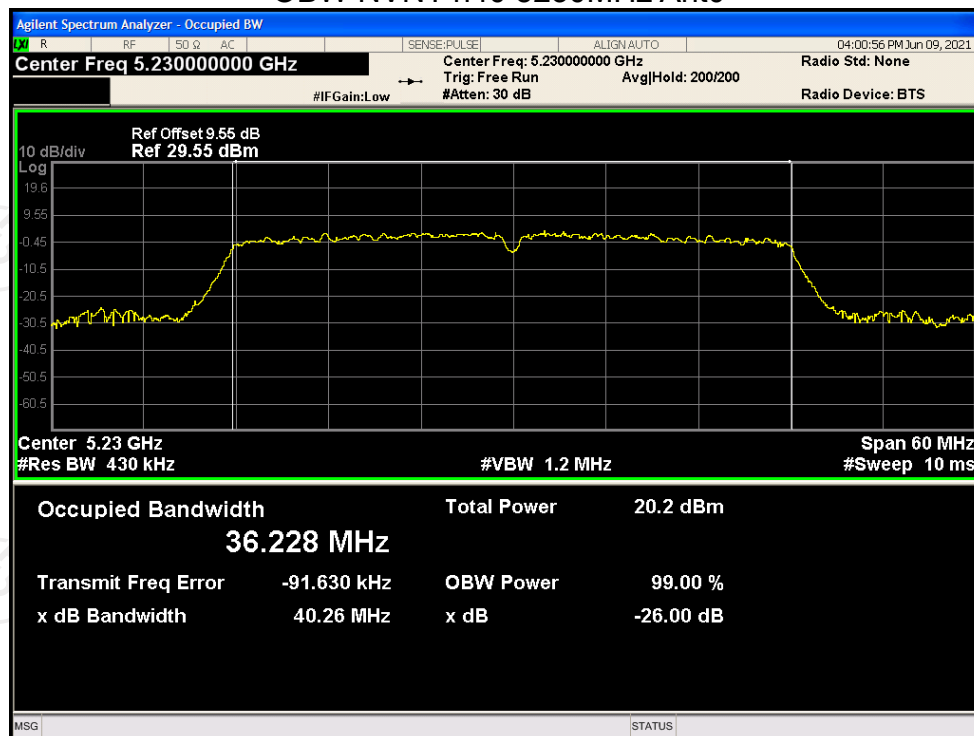


OBW NVNT a 5260MHz Ant0

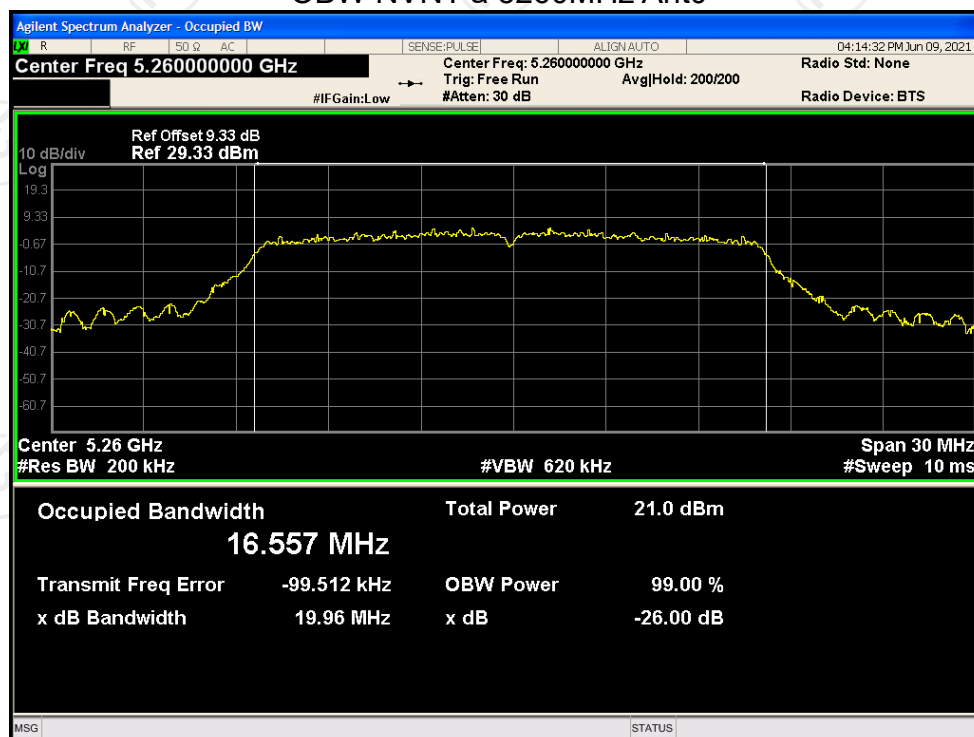


OBW NVNT a 5280MHz Ant0

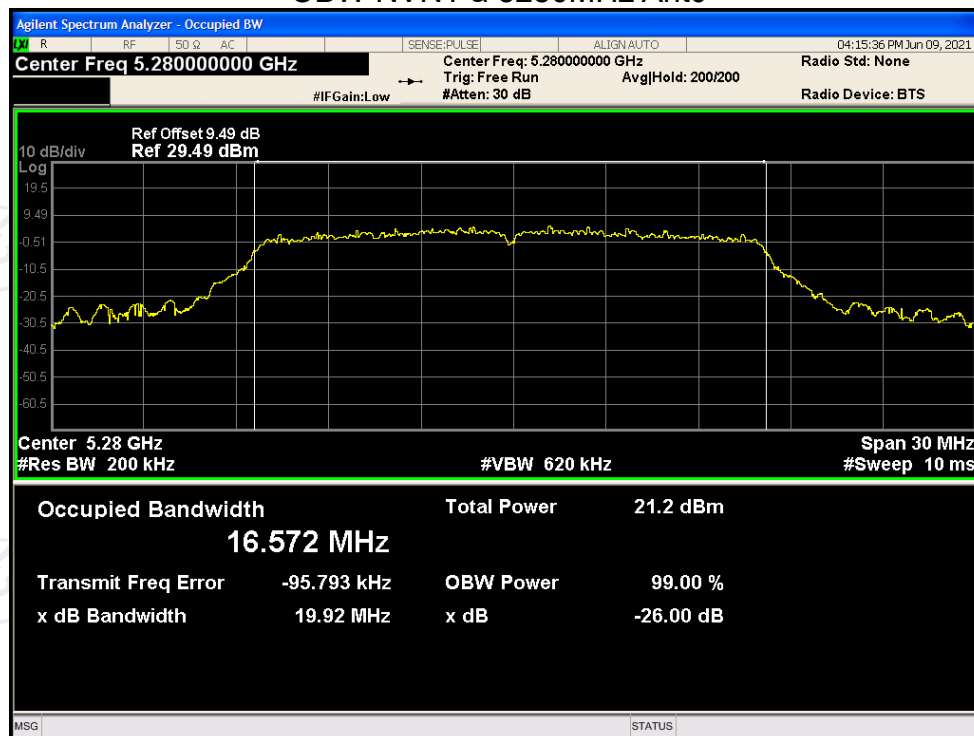


OBW NVNT a 5320MHz Ant0

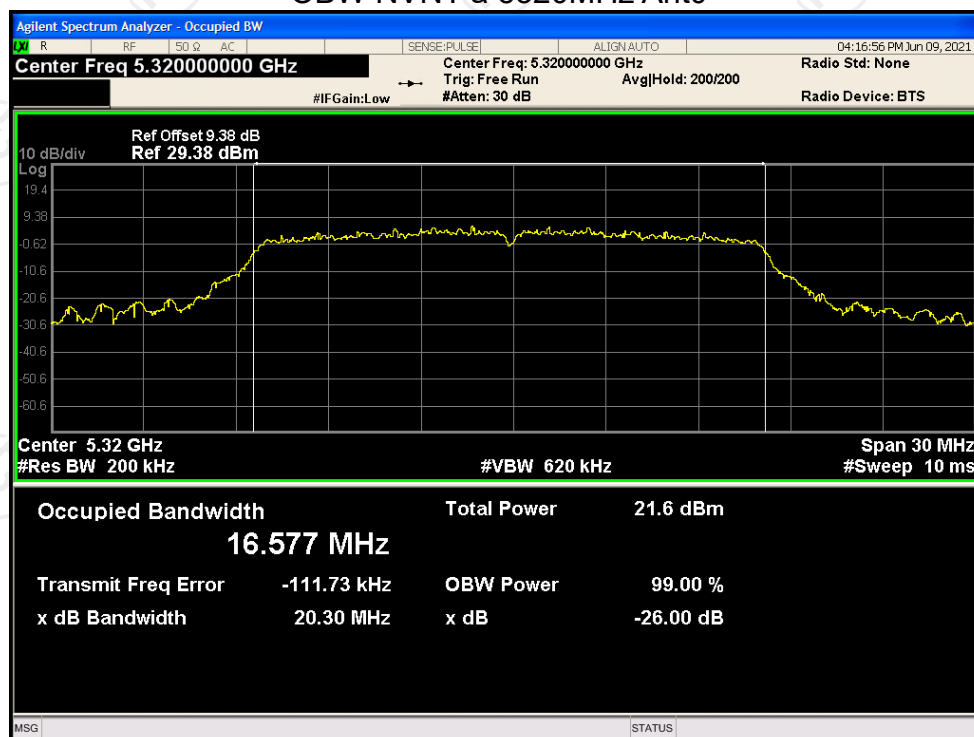


OBW NVNT ac20 5260MHz Ant0

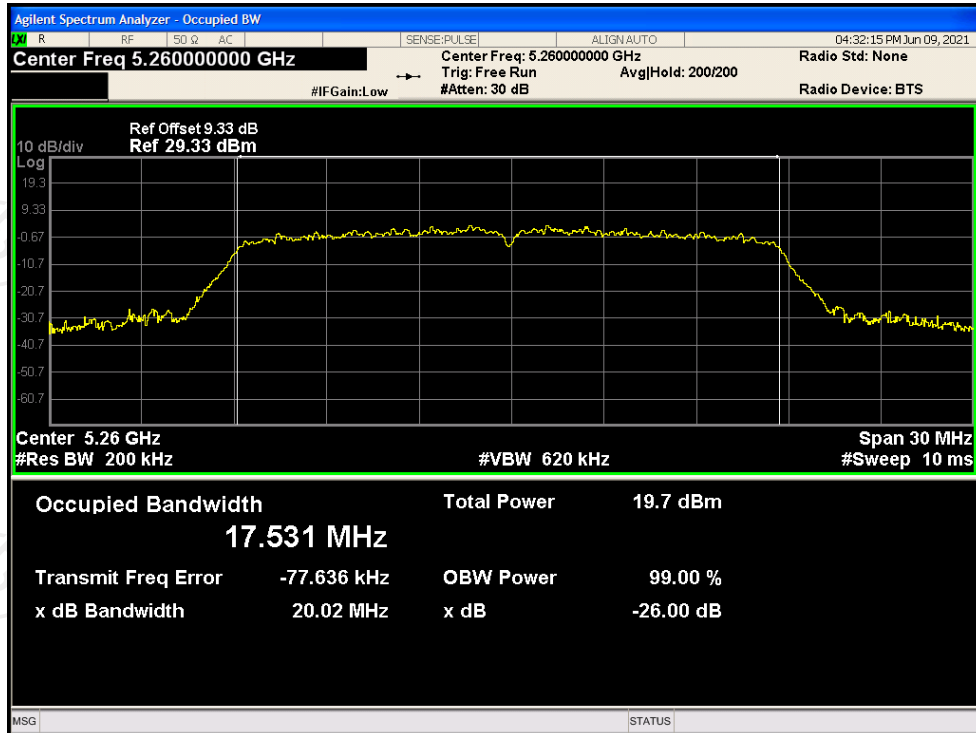


OBW NVNT ac20 5280MHz Ant0

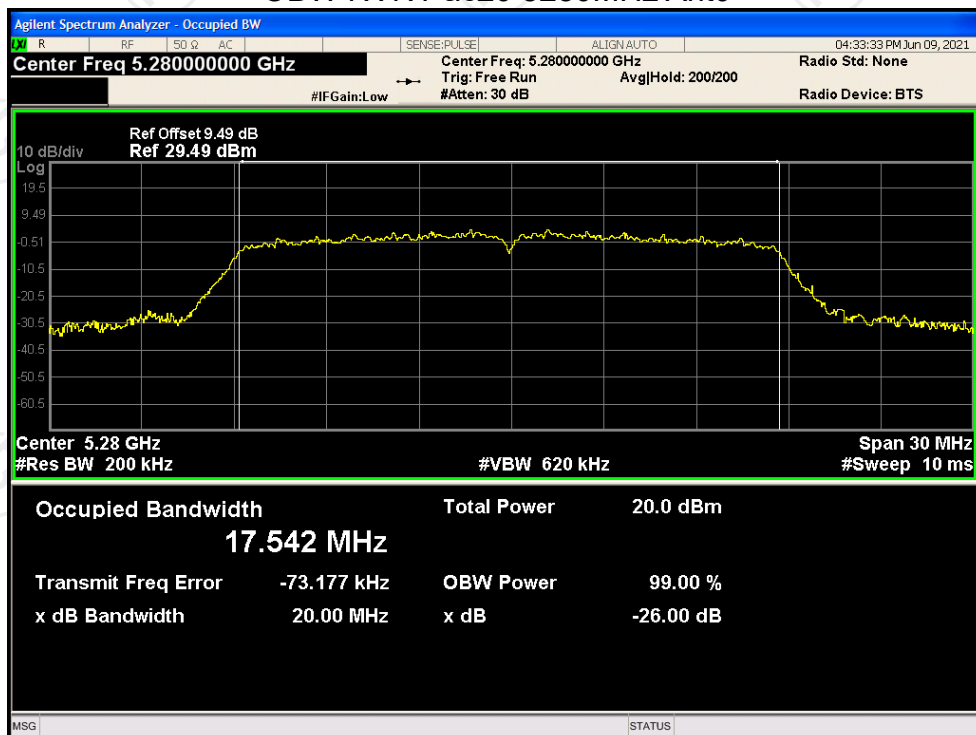


OBW NVNT ac20 5320MHz Ant0

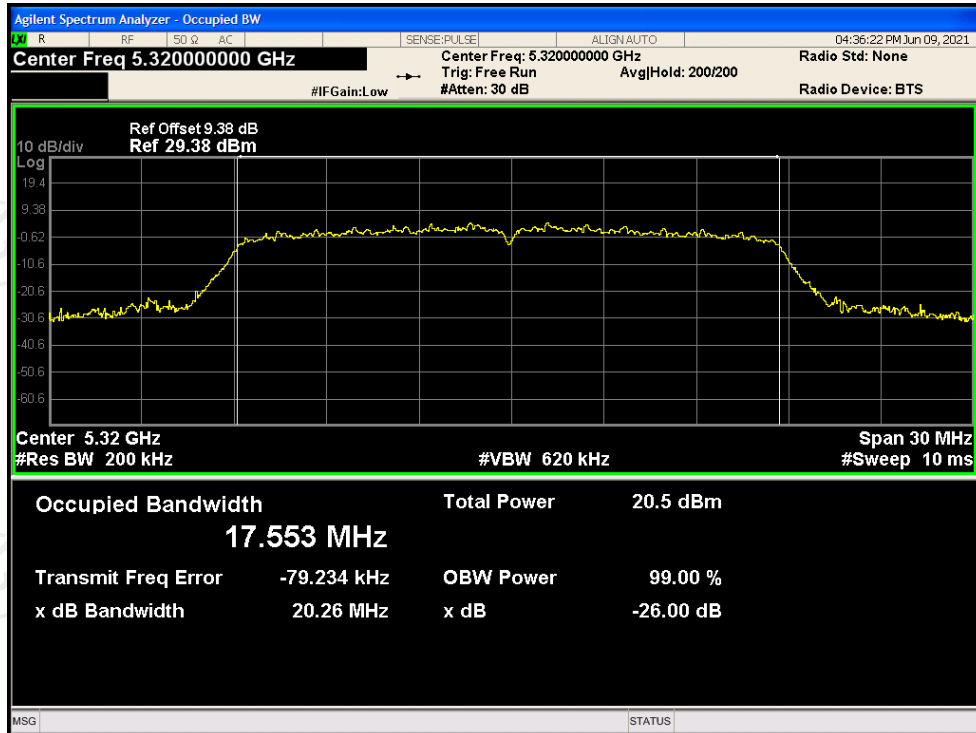


OBW NVNT ac40 5270MHz Ant0

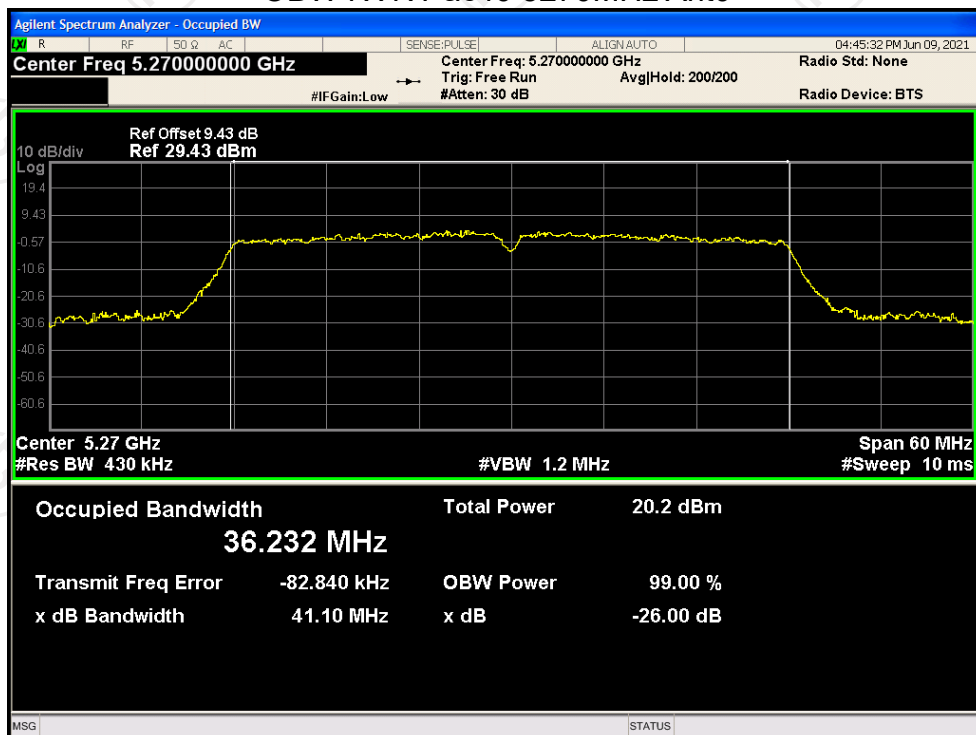


OBW NVNT ac40 5310MHz Ant0

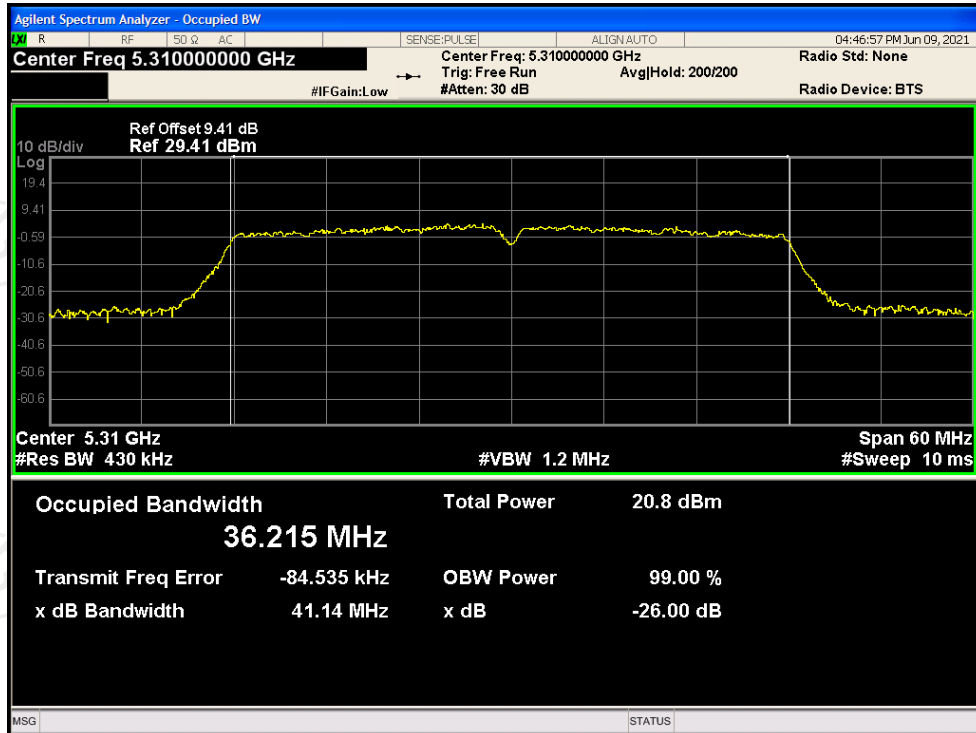


OBW NVNT ac80 5290MHz Ant0

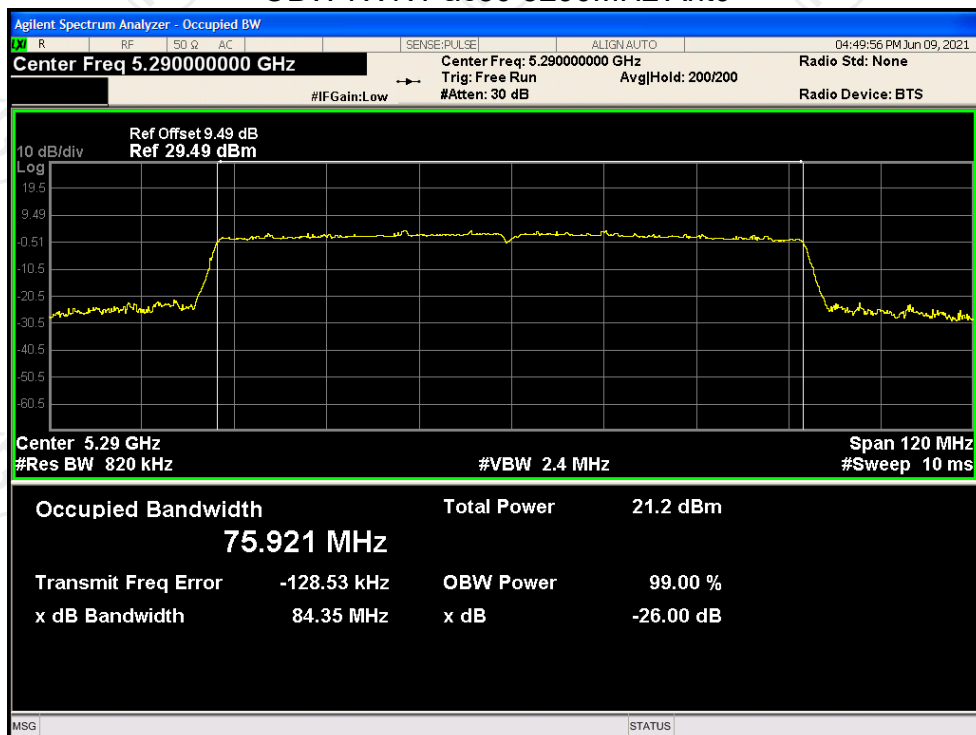


OBW NVNT n20 5260MHz Ant0

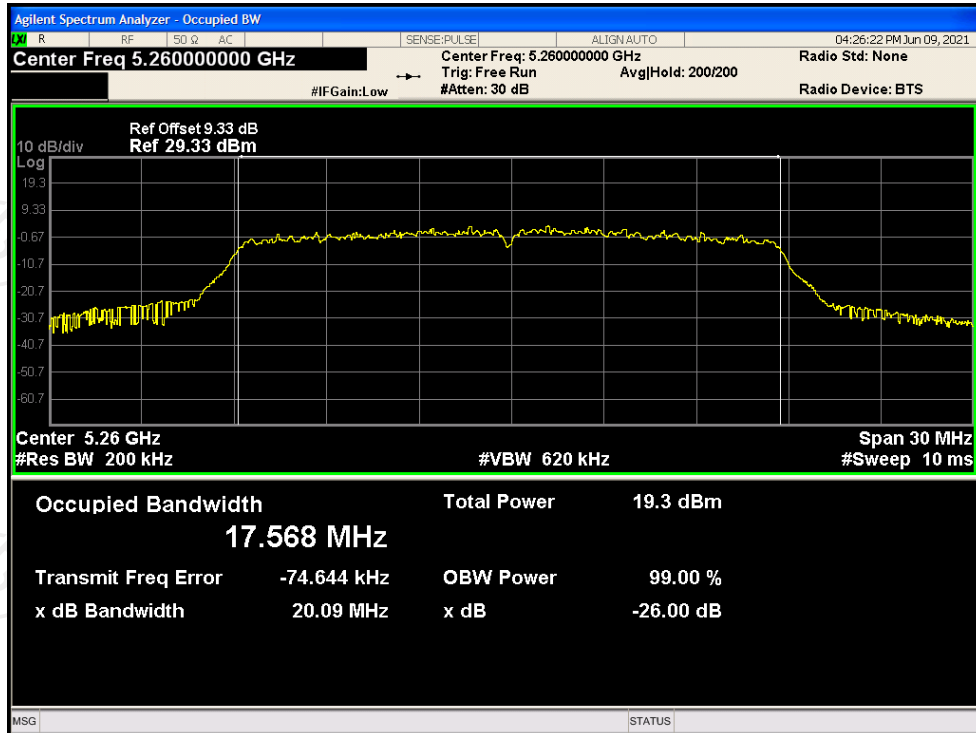


OBW NVNT n20 5280MHz Ant0

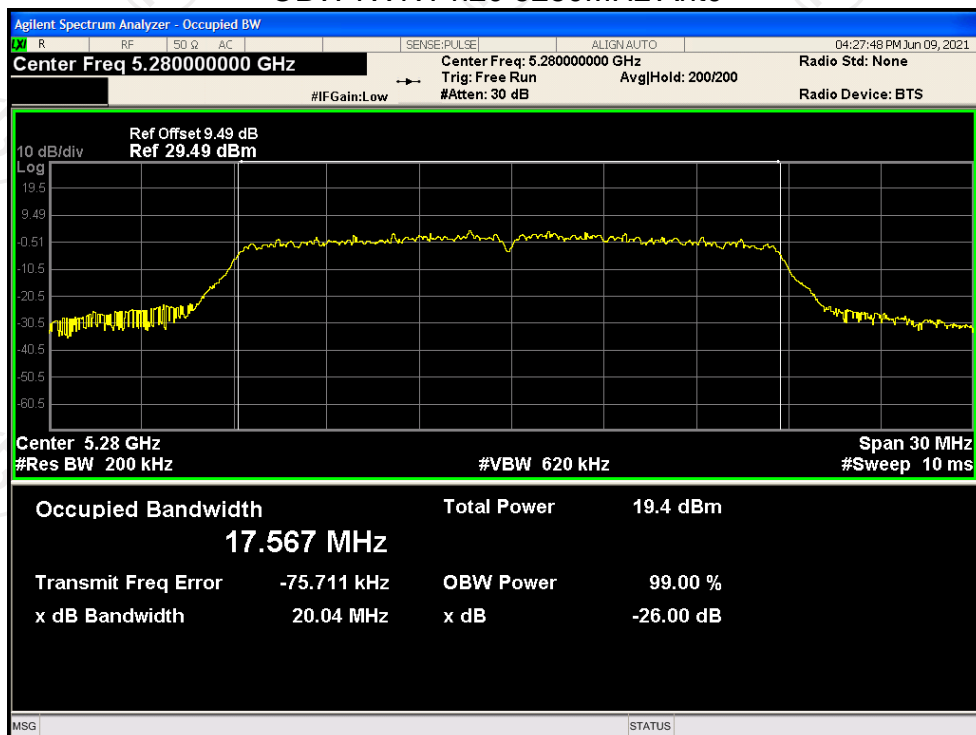


OBW NVNT n20 5320MHz Ant0

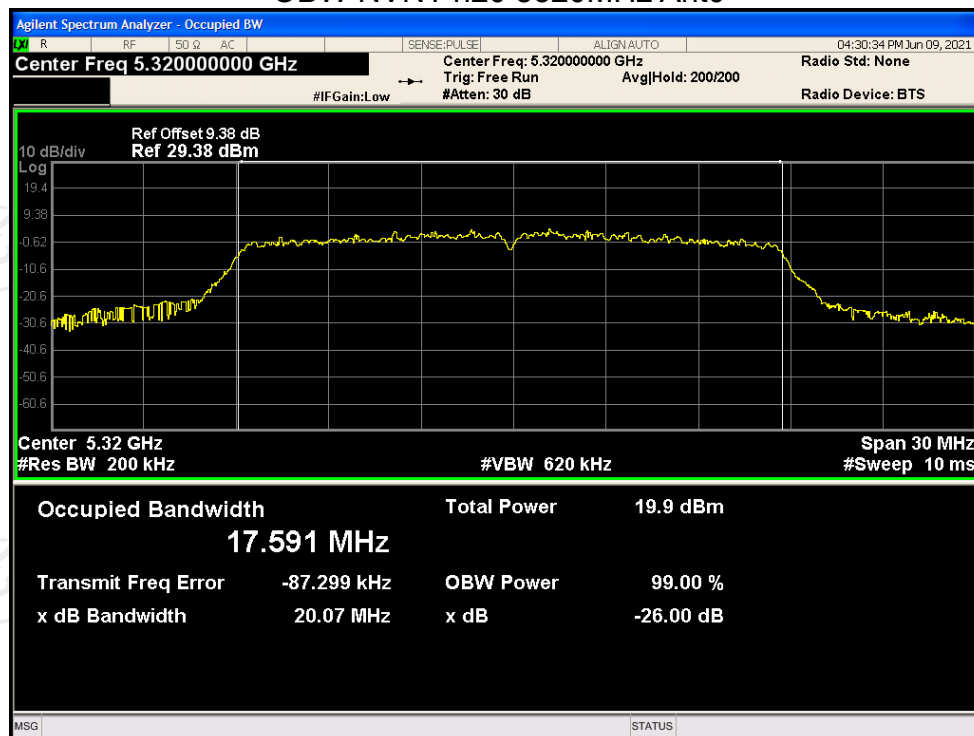


OBW NVNT n40 5270MHz Ant0

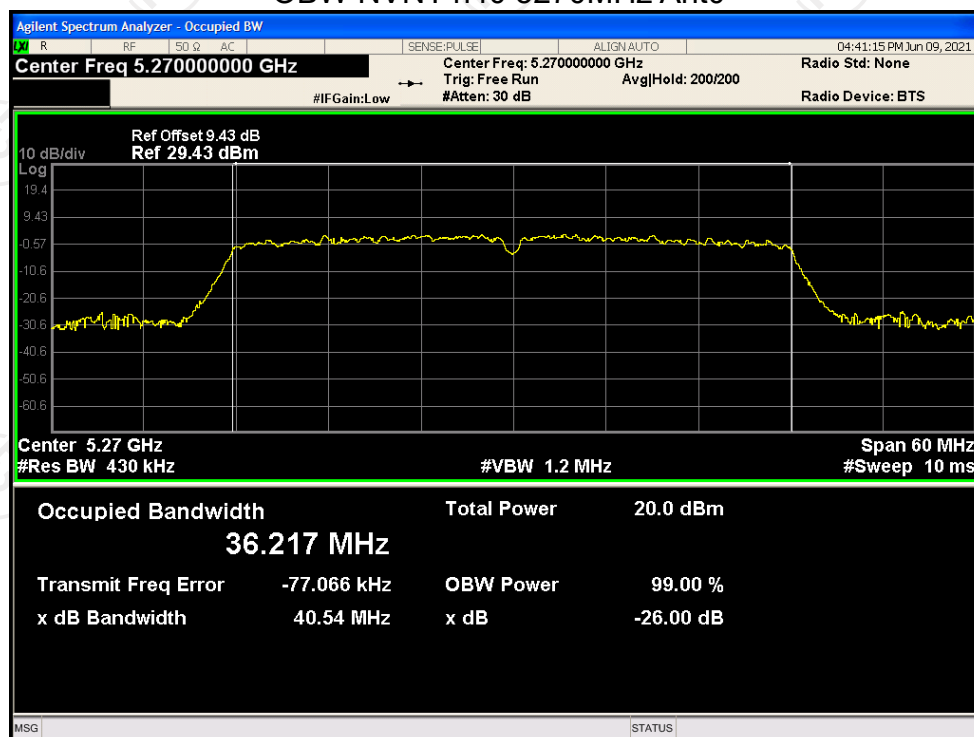


OBW NVNT n40 5310MHz Ant0

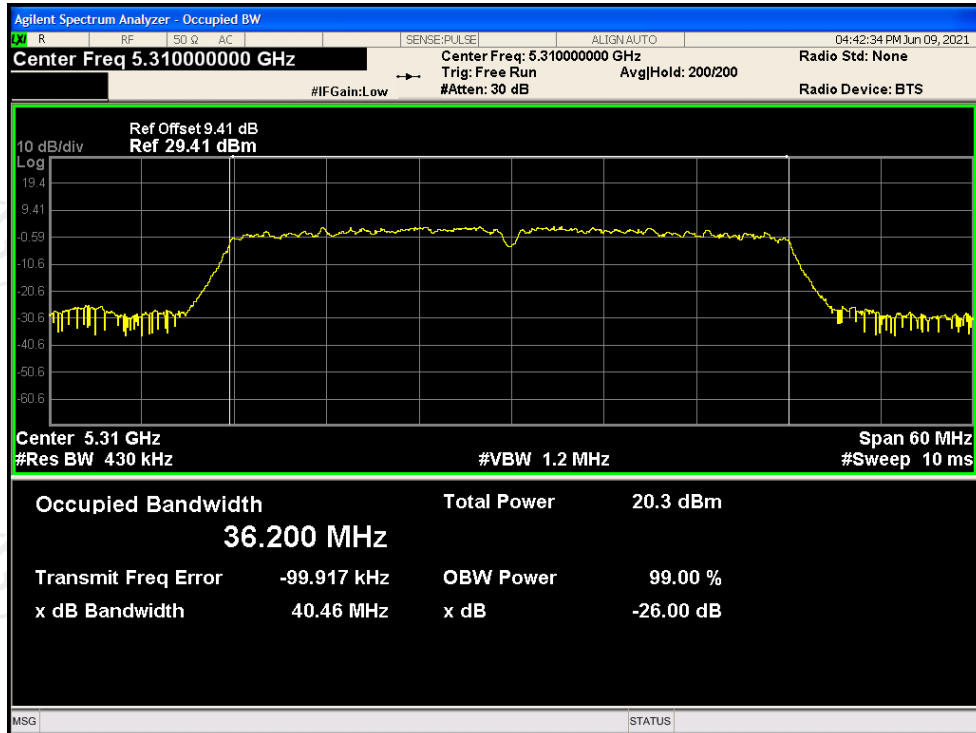


OBW NVNT a 5500MHz Ant0

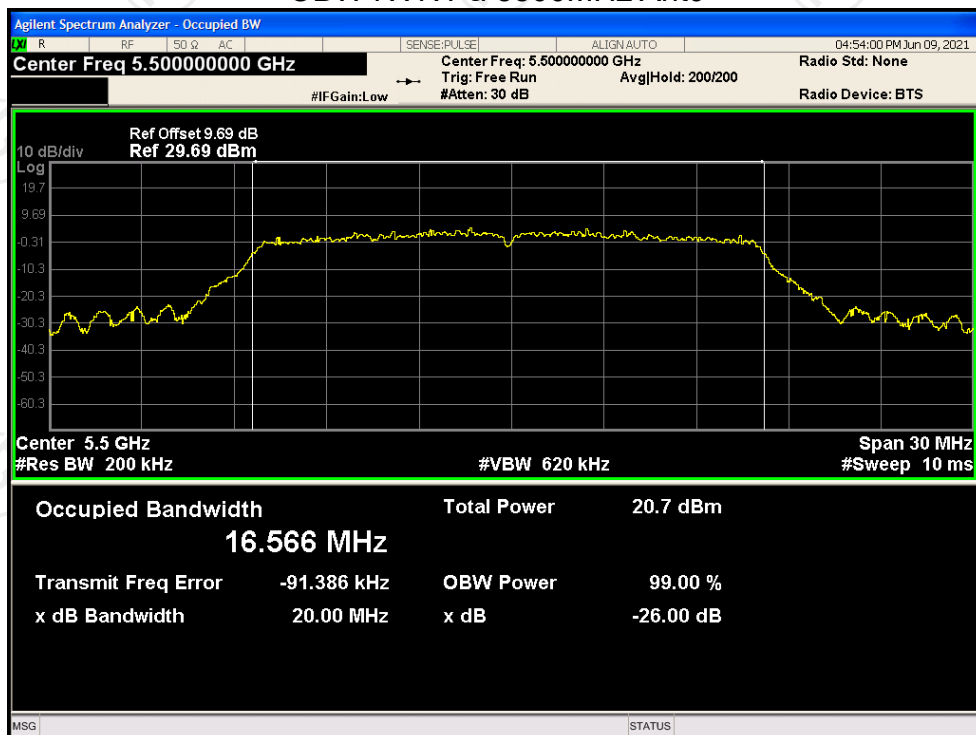


OBW NVNT a 5600MHz Ant0

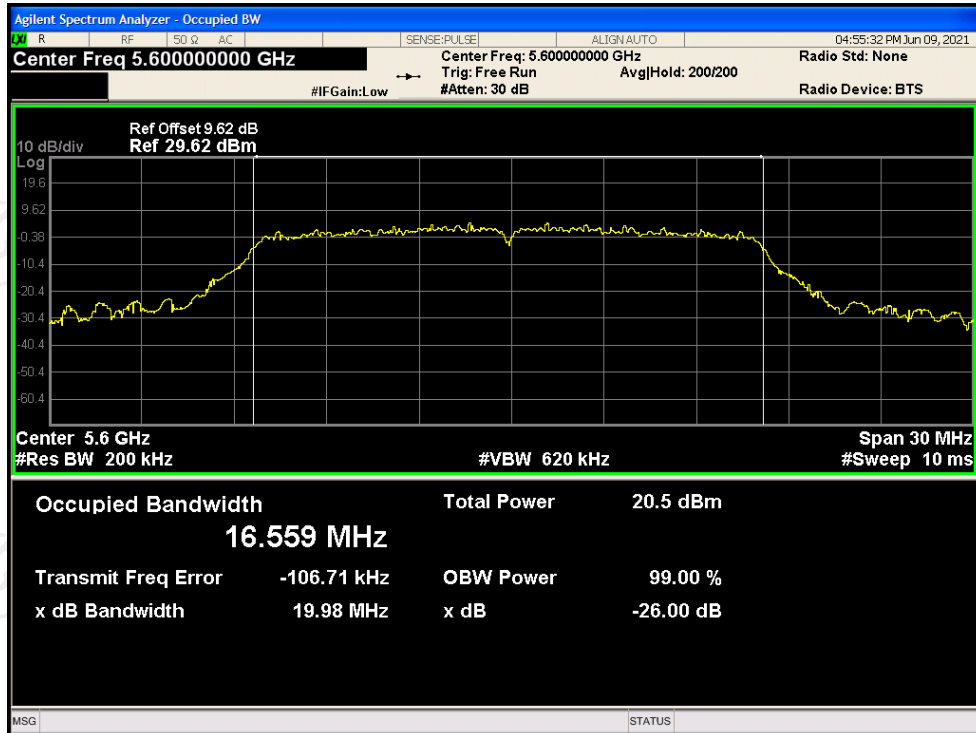


OBW NVNT a 5700MHz Ant0

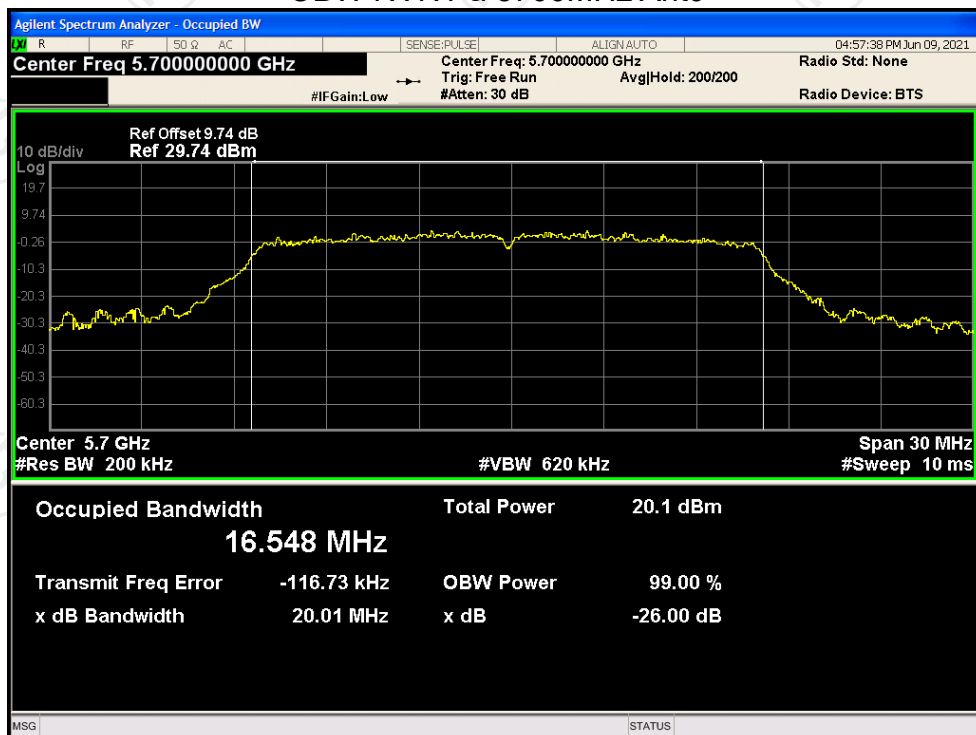


OBW NVNT ac20 5500MHz Ant0

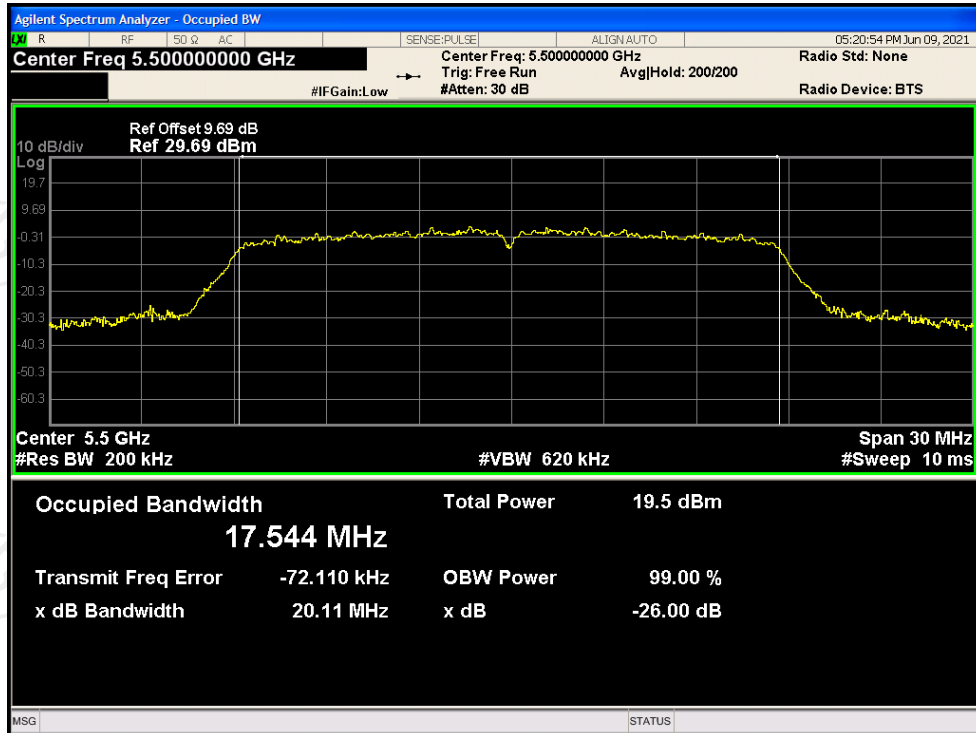


OBW NVNT ac20 5600MHz Ant0

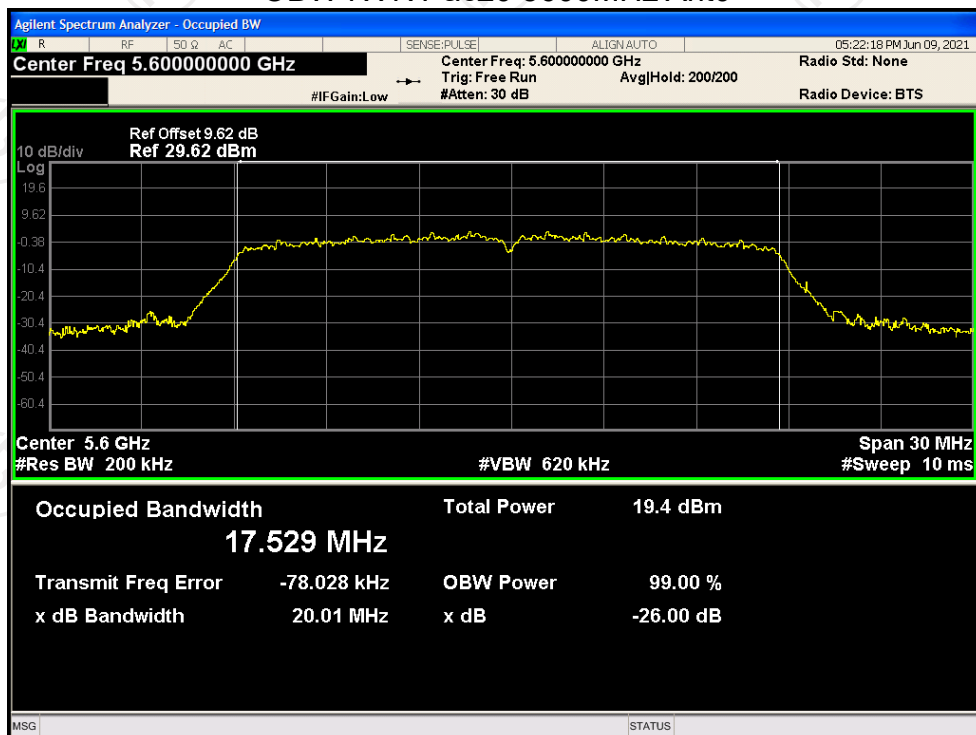


OBW NVNT ac20 5700MHz Ant0

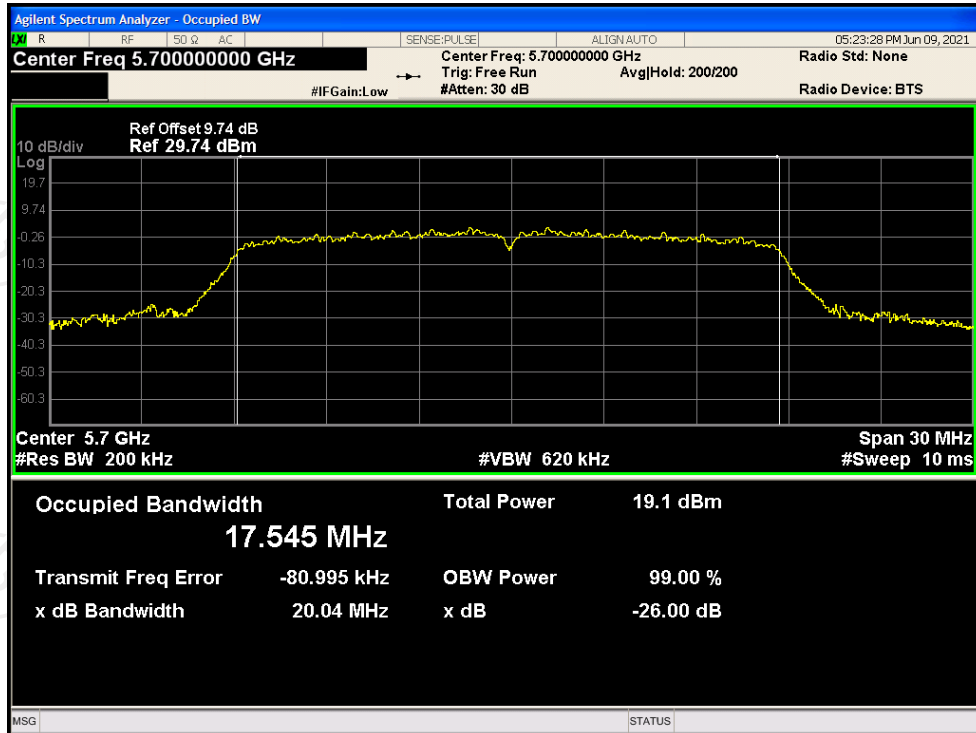


OBW NVNT ac40 5510MHz Ant0

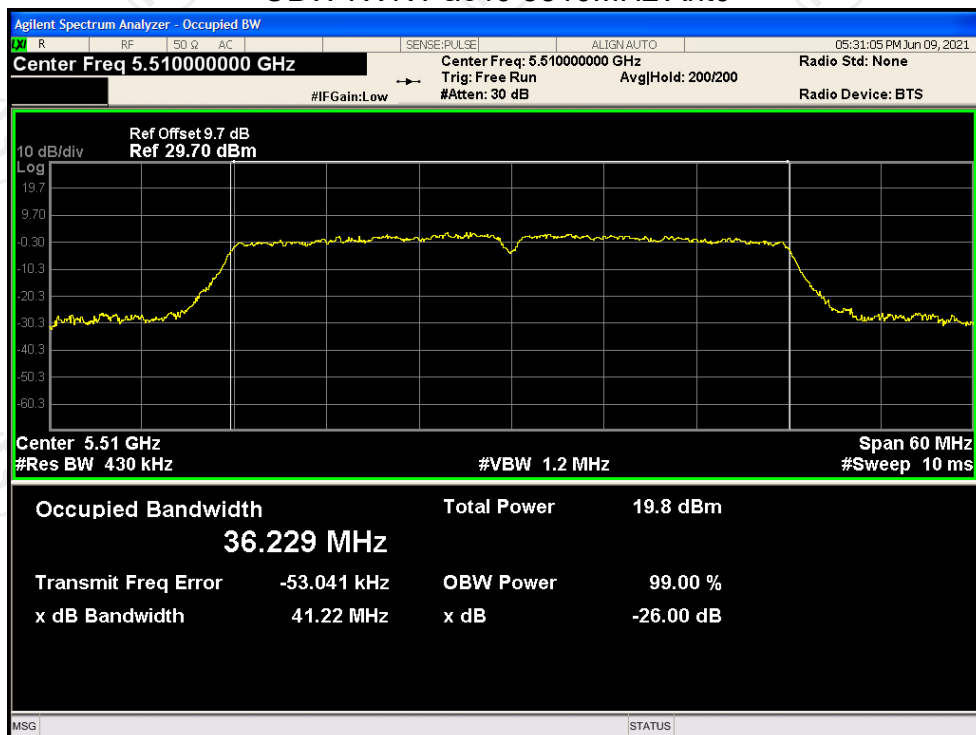


OBW NVNT ac40 5590MHz Ant0

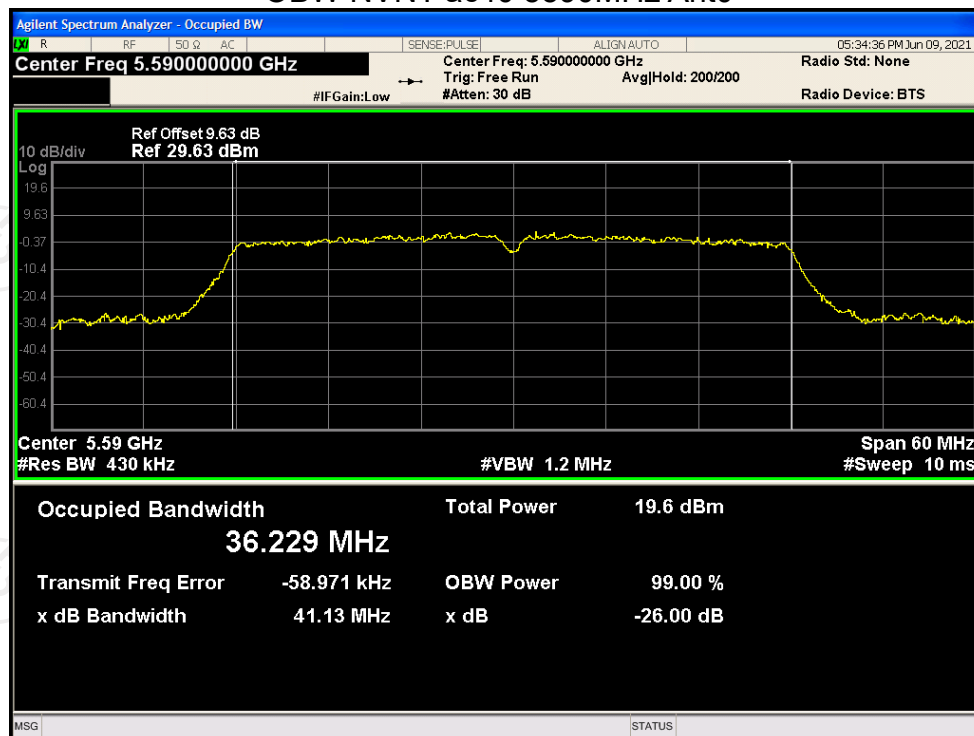


OBW NVNT ac40 5670MHz Ant0

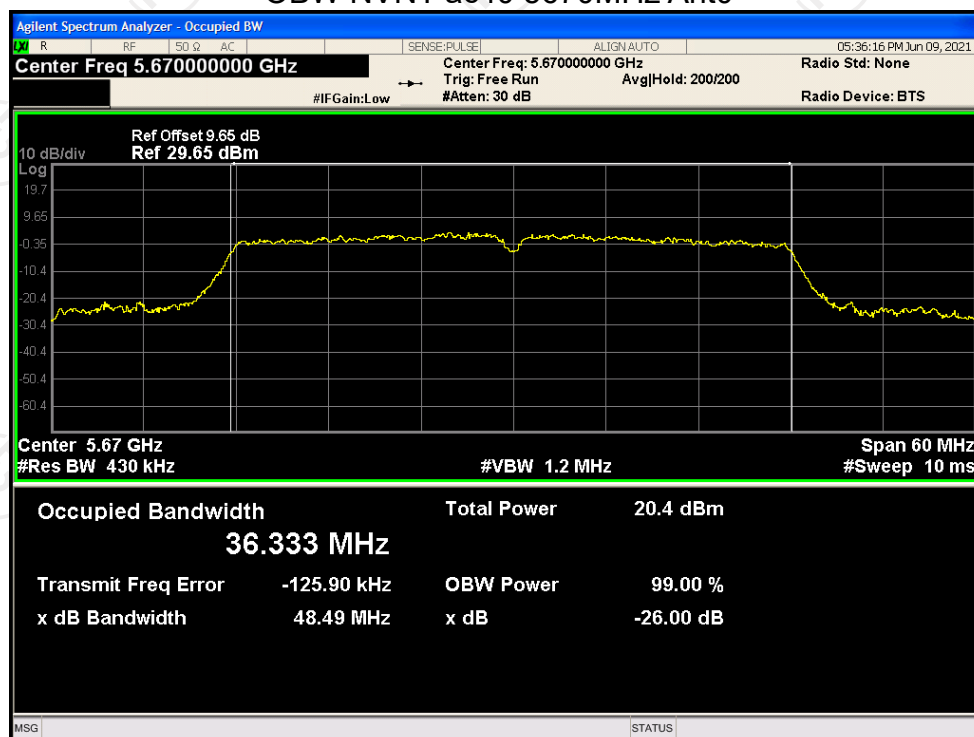


OBW NVNT ac80 5530MHz Ant0

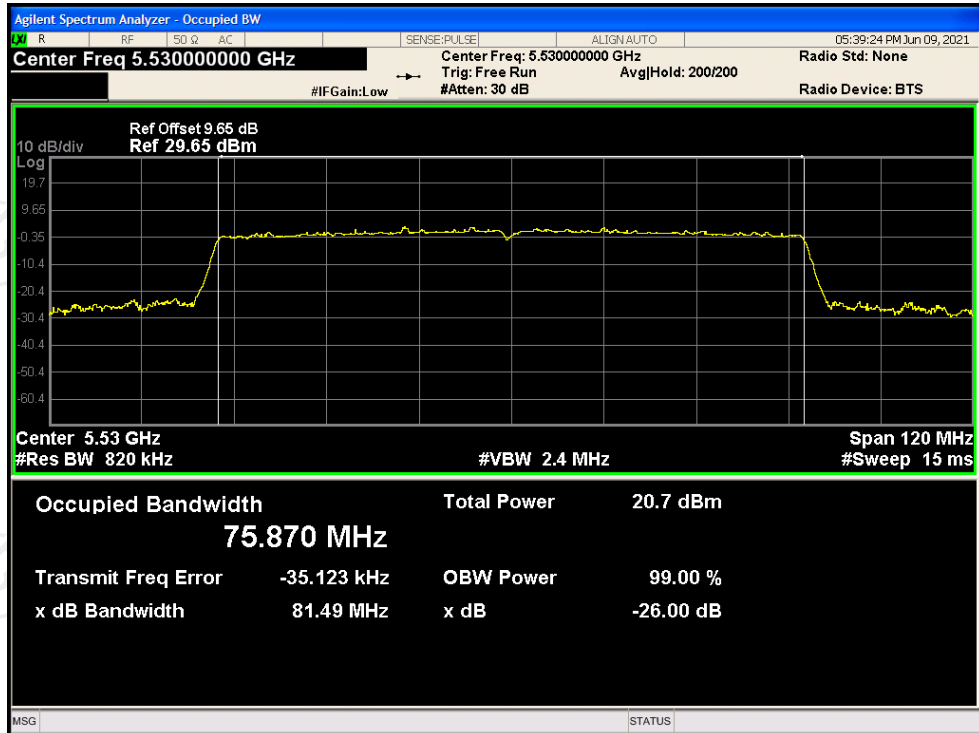


OBW NVNT ac80 5610MHz Ant0

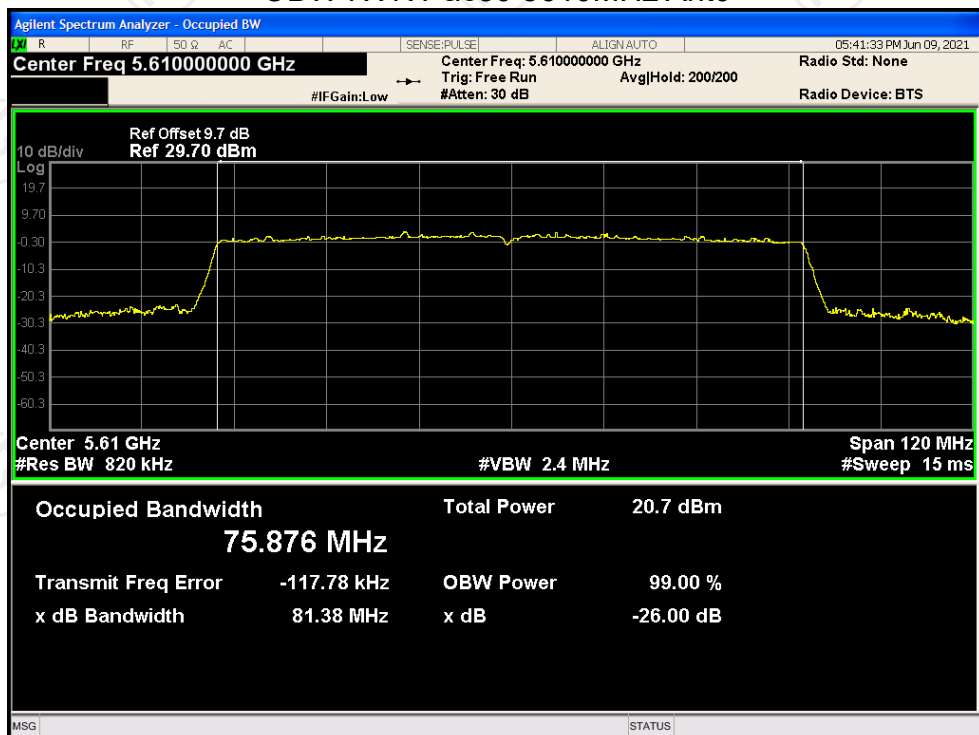


OBW NVNT n20 5500MHz Ant0

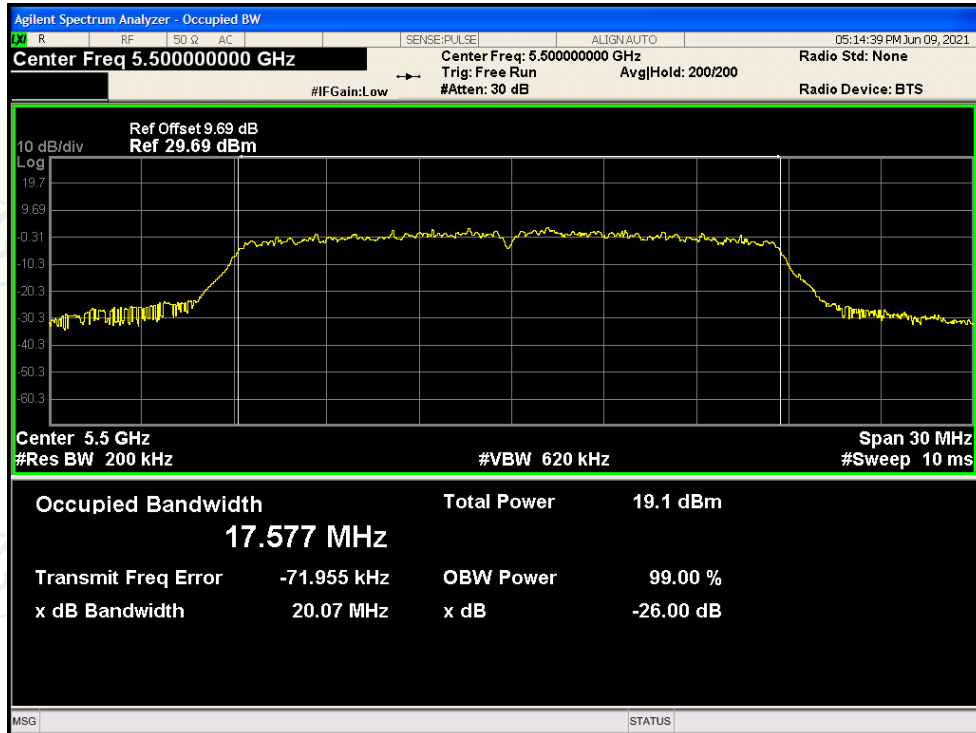


OBW NVNT n20 5600MHz Ant0

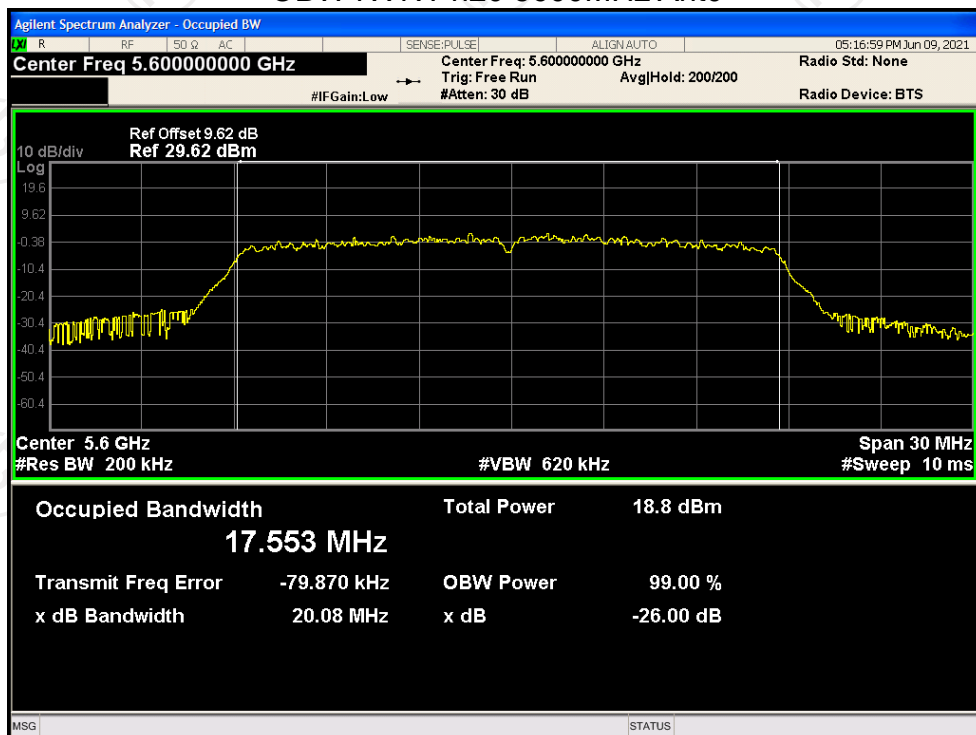


OBW NVNT n20 5700MHz Ant0

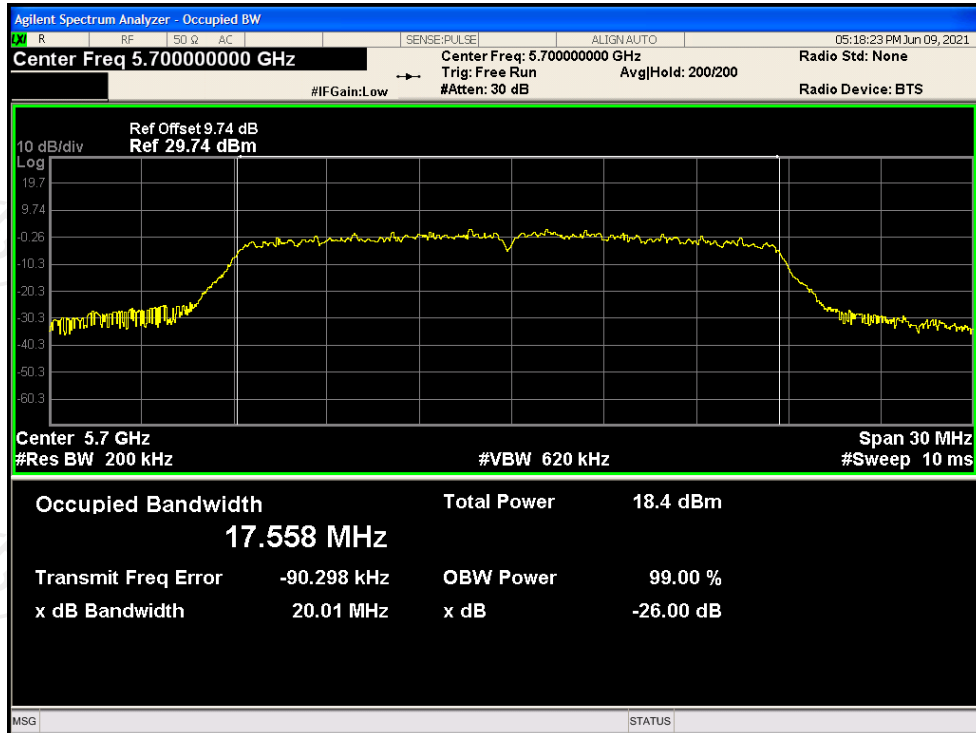


OBW NVNT n40 5510MHz Ant0

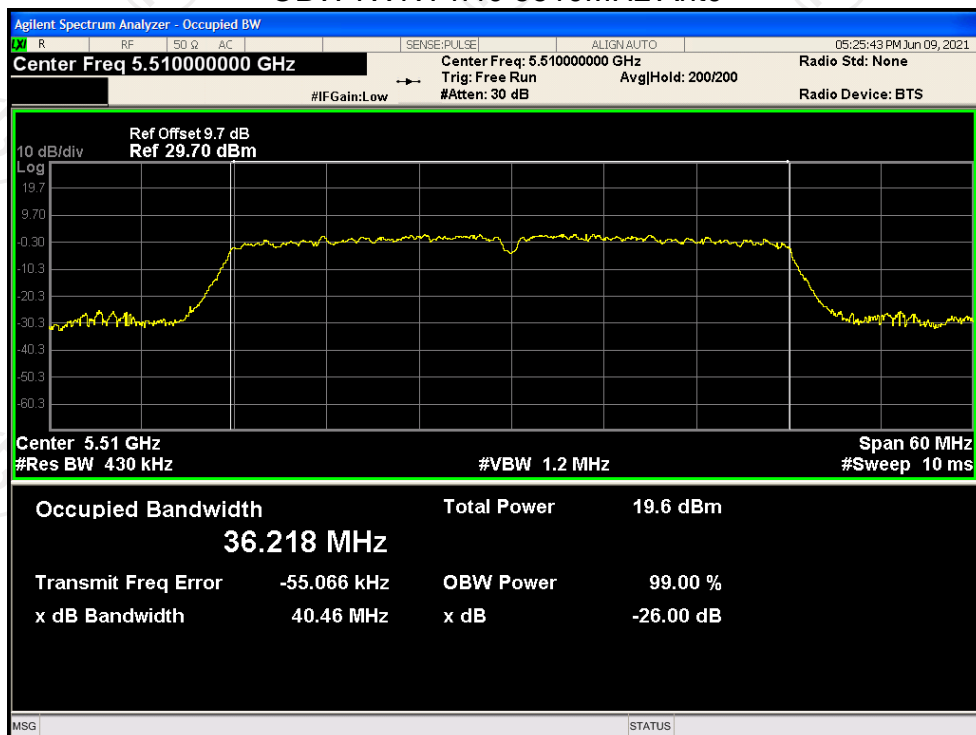


OBW NVNT n40 5590MHz Ant0

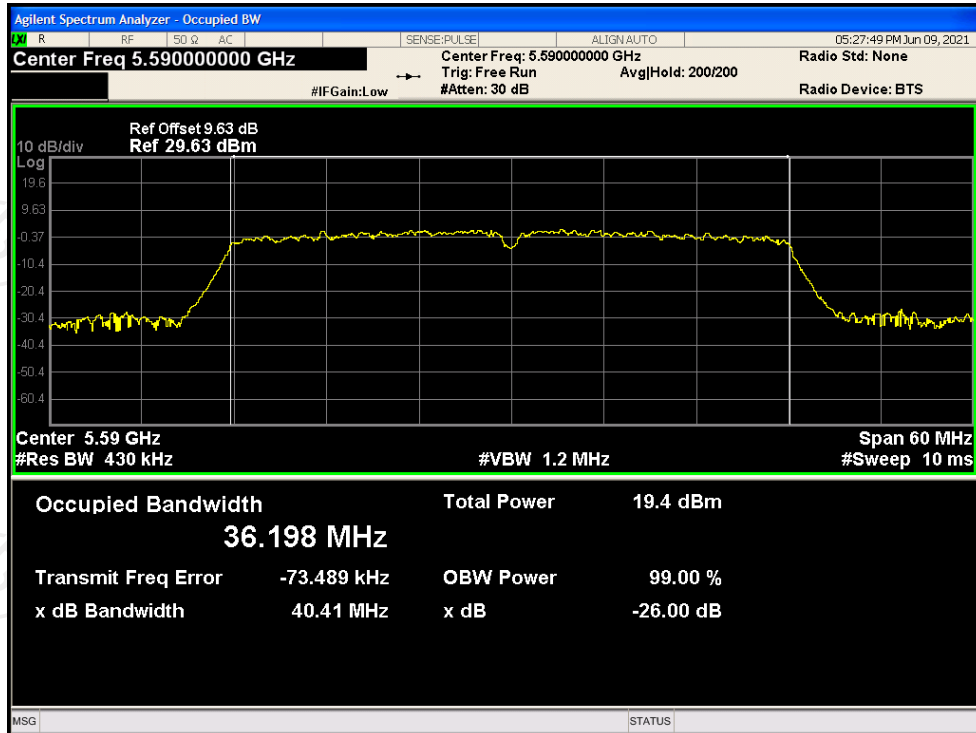


OBW NVNT n40 5670MHz Ant0

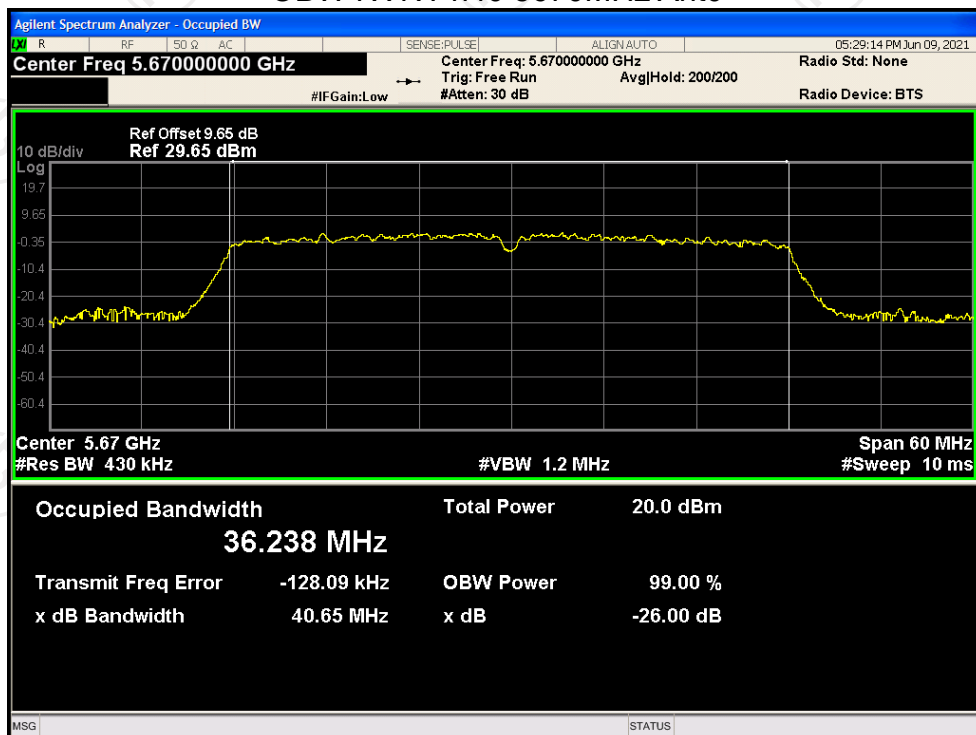


OBW NVNT a 5745MHz Ant0

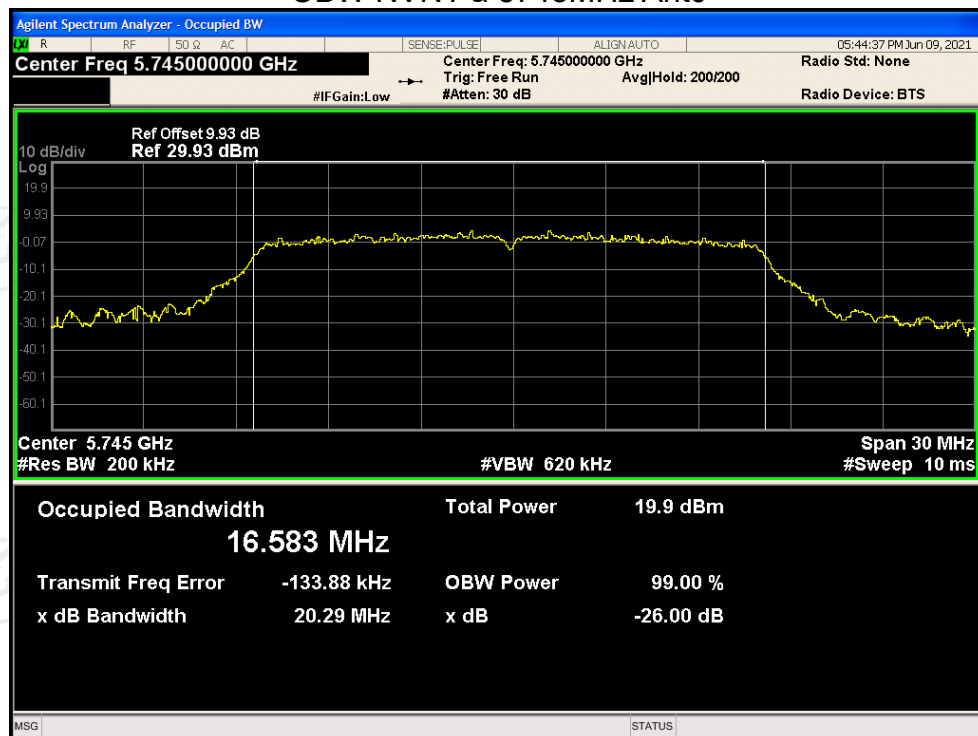


OBW NVNT a 5785MHz Ant0

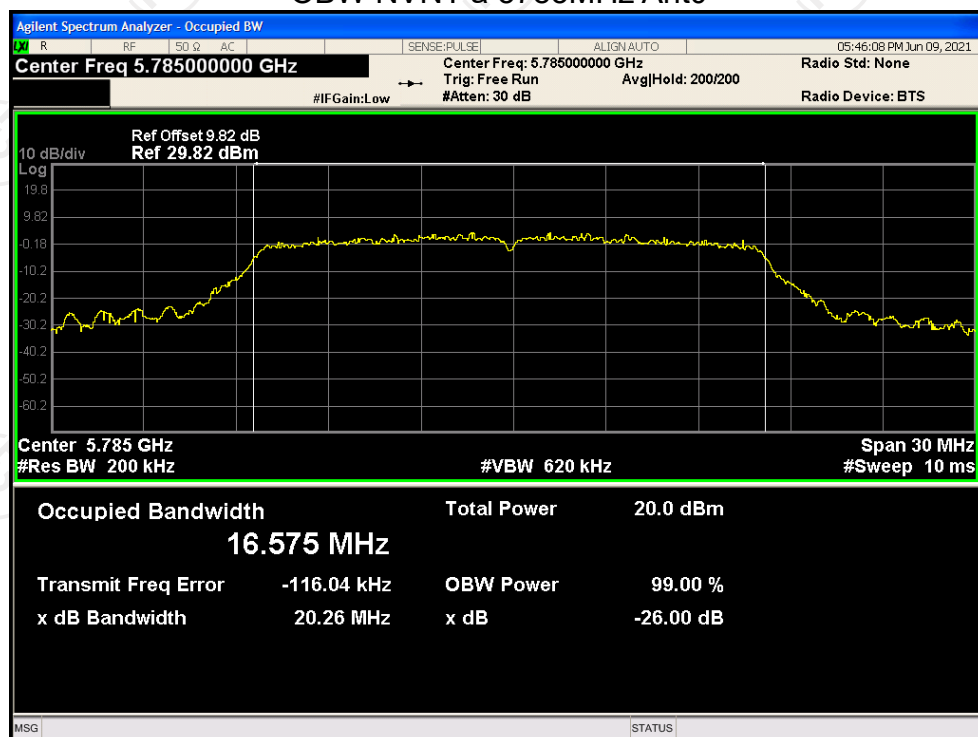


OBW NVNT a 5825MHz Ant0

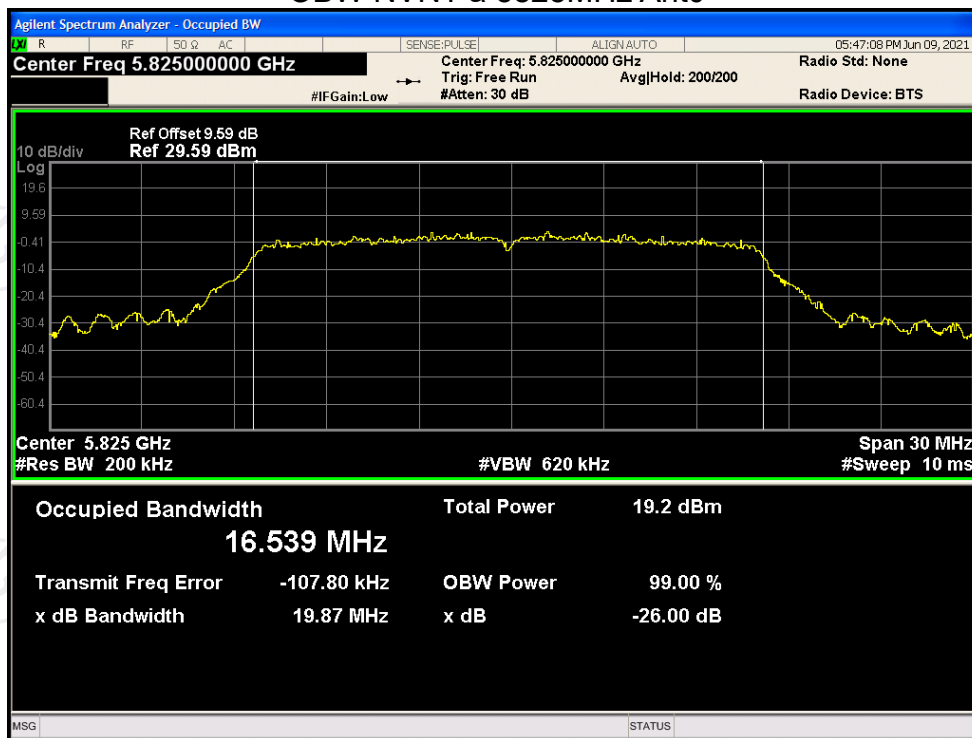


OBW NVNT ac20 5745MHz Ant0

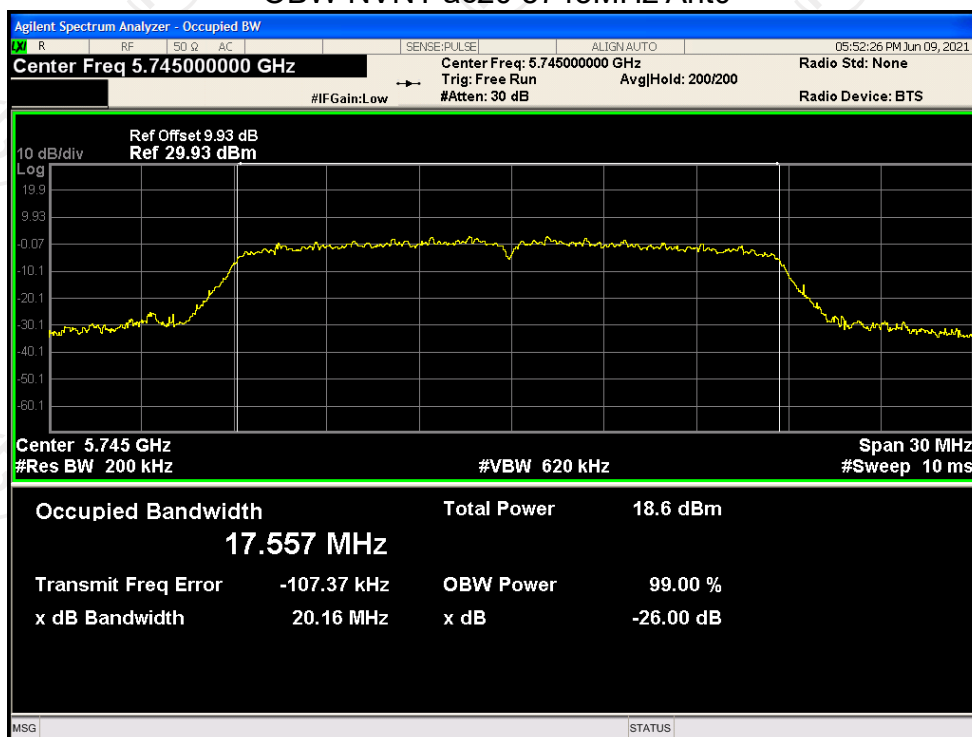


OBW NVNT ac20 5785MHz Ant0

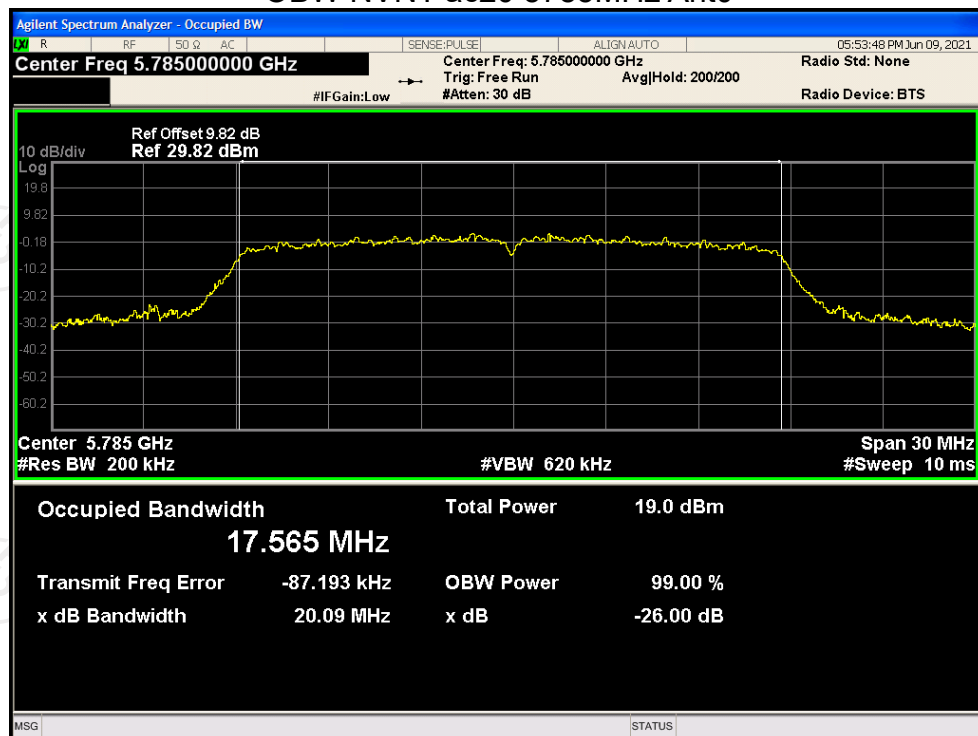


OBW NVNT ac20 5825MHz Ant0

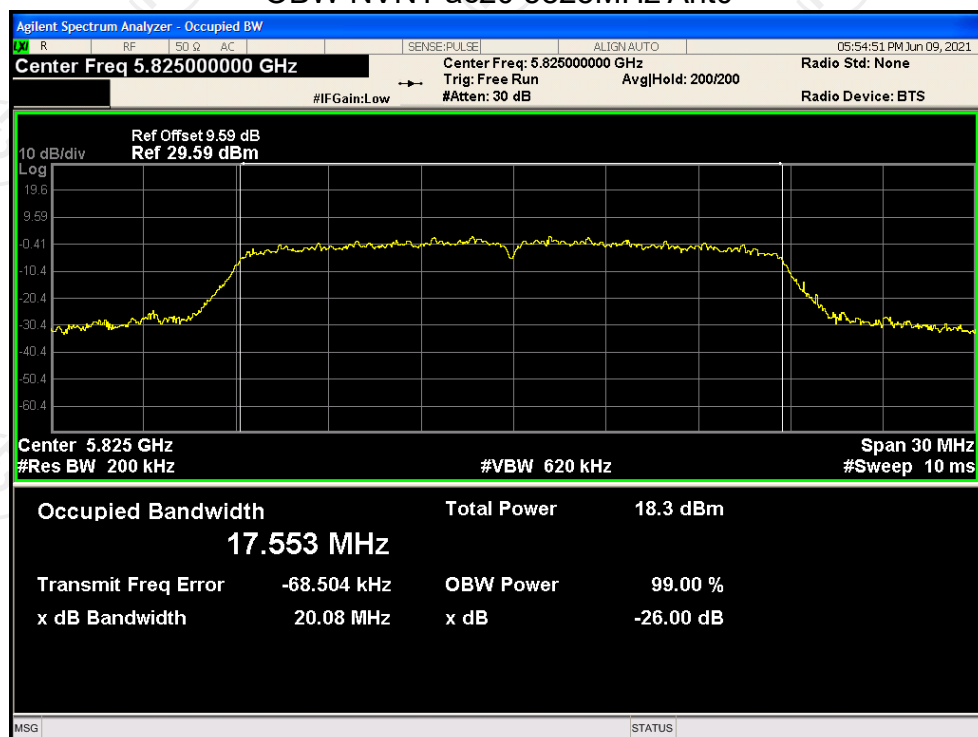


OBW NVNT ac40 5755MHz Ant0

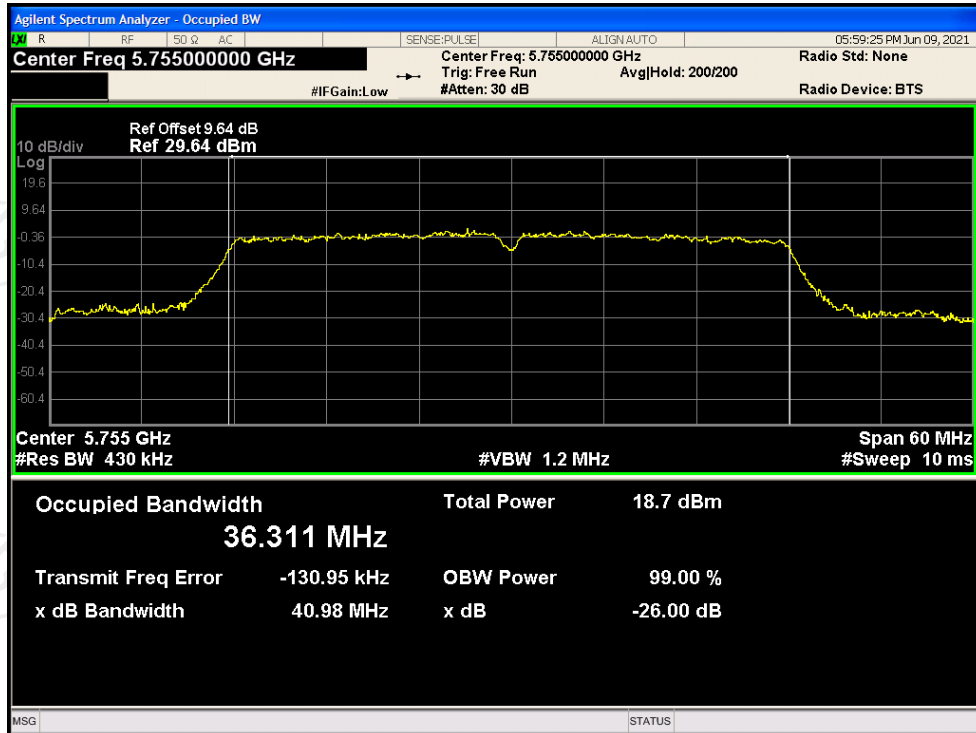


OBW NVNT ac40 5795MHz Ant0

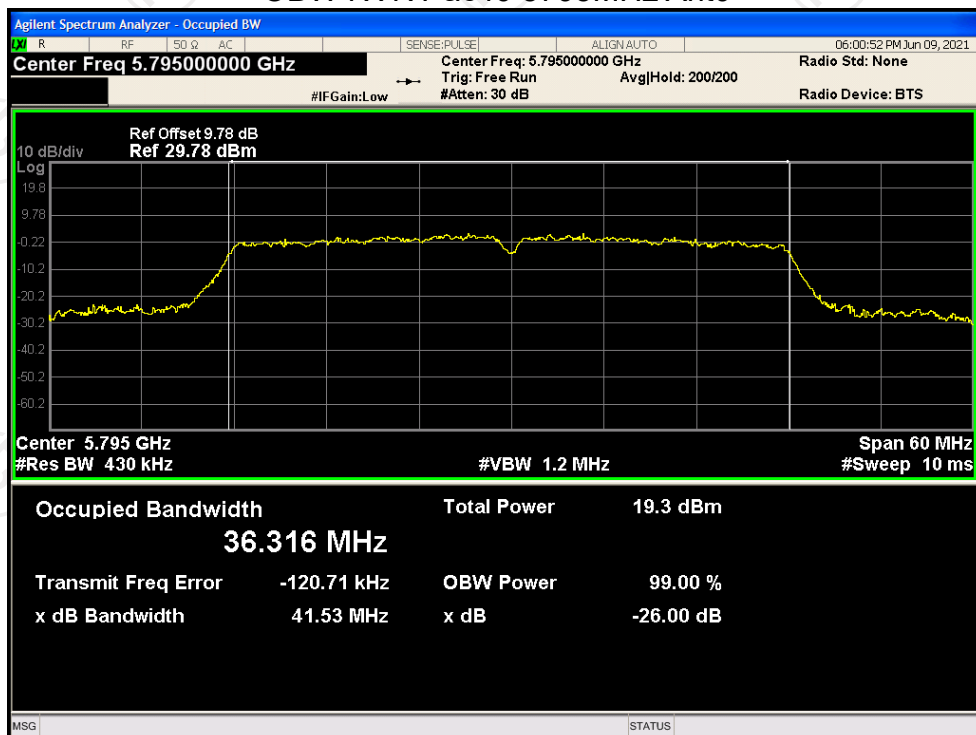


OBW NVNT ac80 5775MHz Ant0

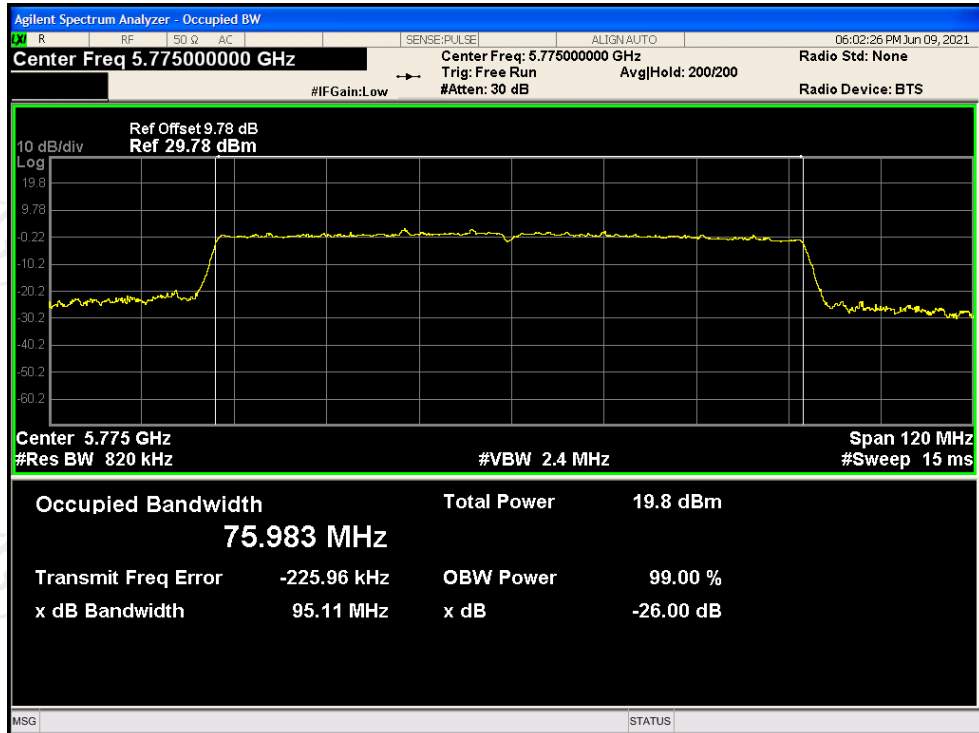


OBW NVNT n20 5745MHz Ant0

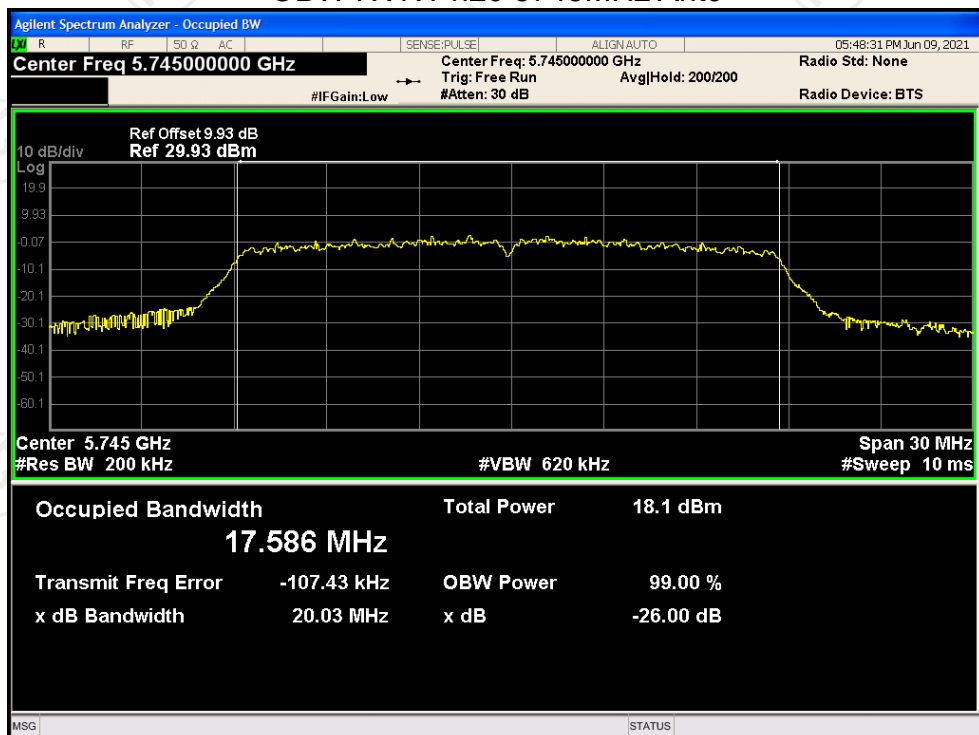


OBW NVNT n20 5785MHz Ant0

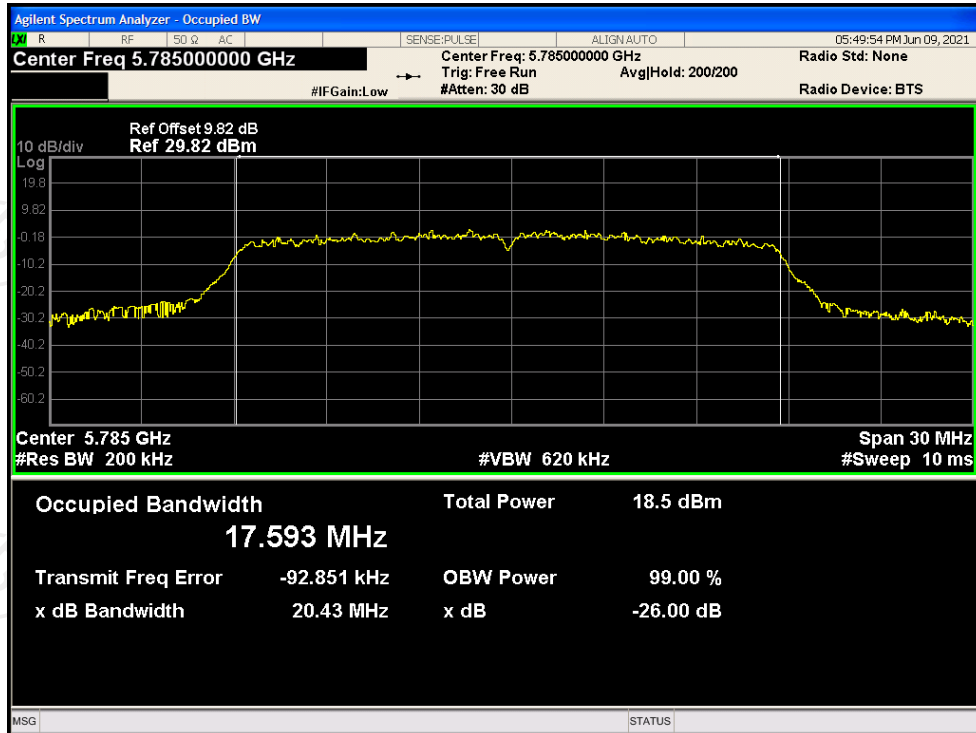


OBW NVNT n20 5825MHz Ant0

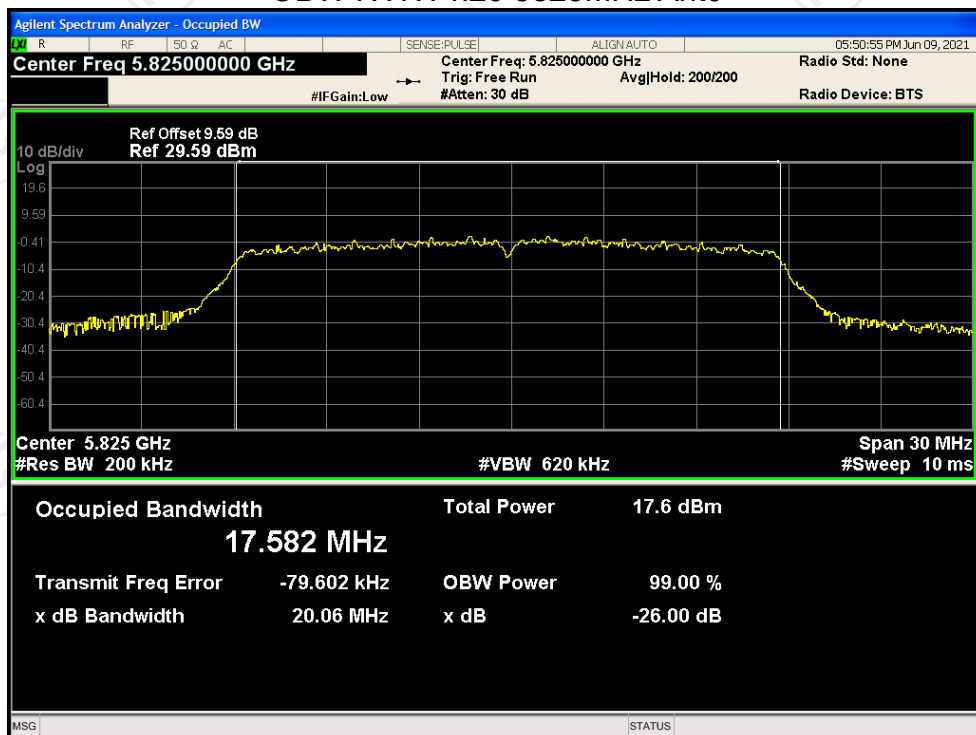

OBW NVNT n40 5755MHz Ant0

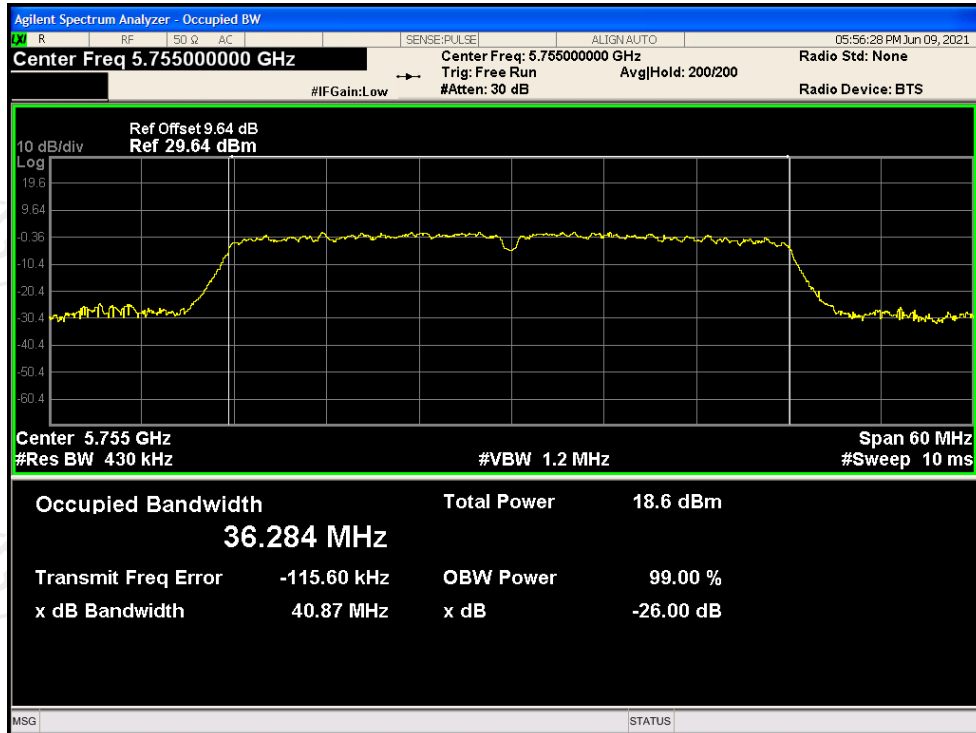


OBW NVNT n40 5795MHz Ant0

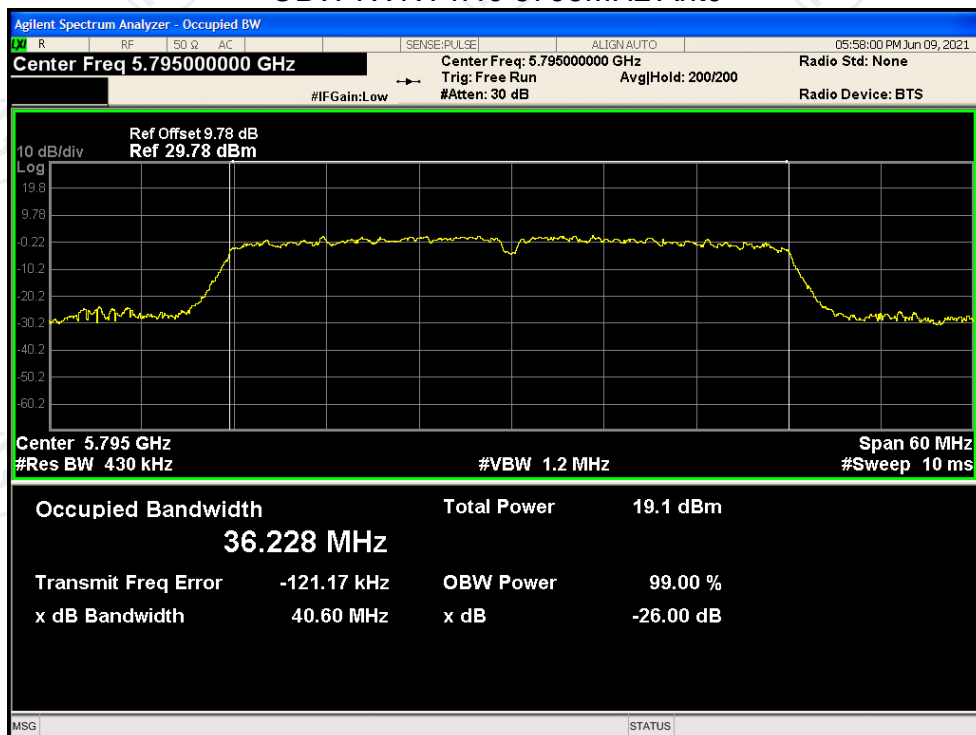


Maximum Power Spectral Density Level


PSD NVNT a 5180MHz Ant0

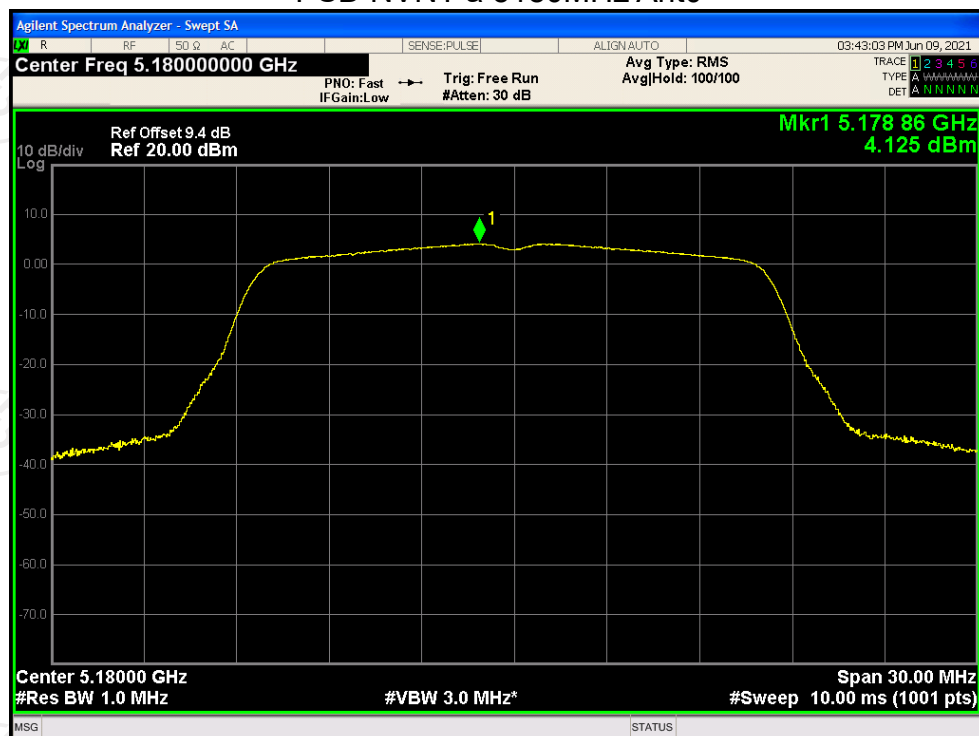


PSD NVNT a 5200MHz Ant0

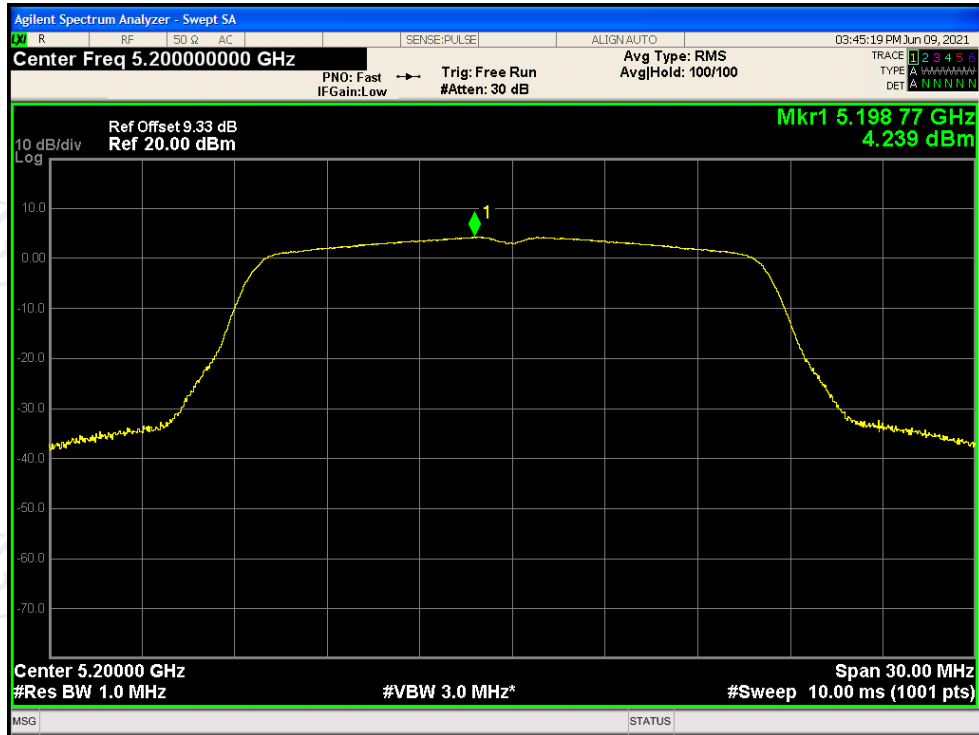


PSD NVNT a 5240MHz Ant0

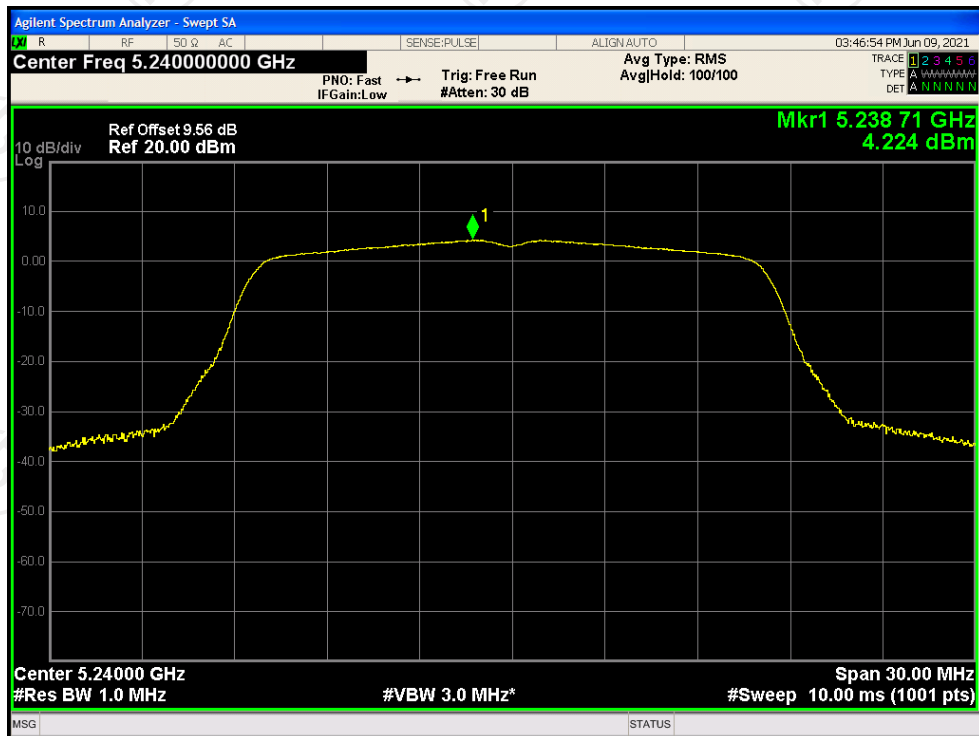


PSD NVNT ac20 5180MHz Ant0

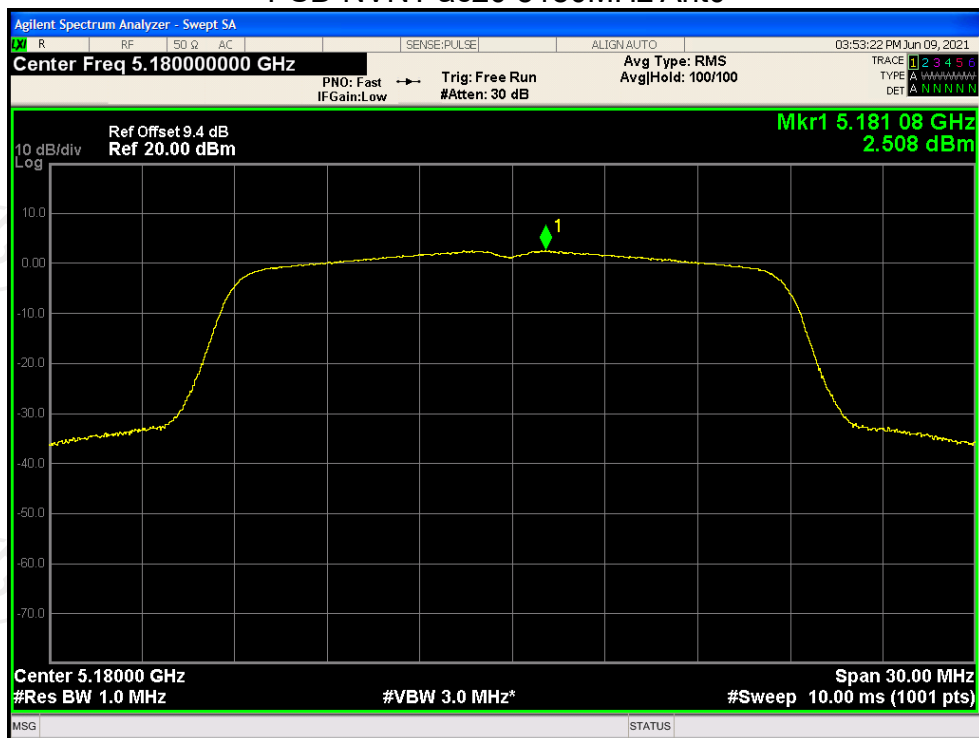


PSD NVNT ac20 5200MHz Ant0

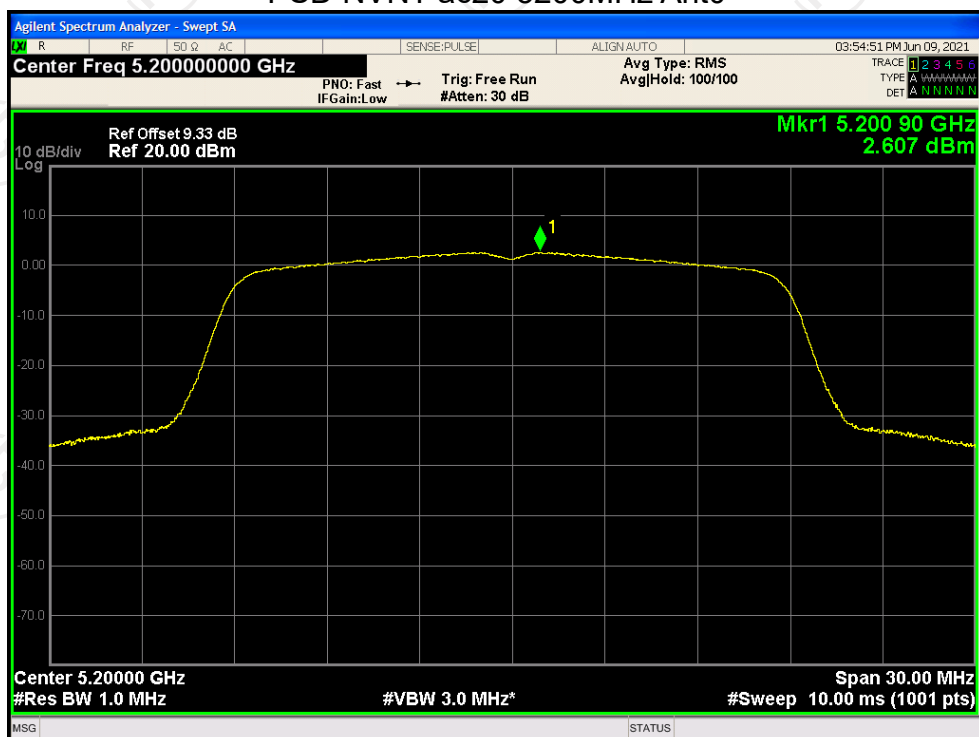


PSD NVNT ac20 5240MHz Ant0

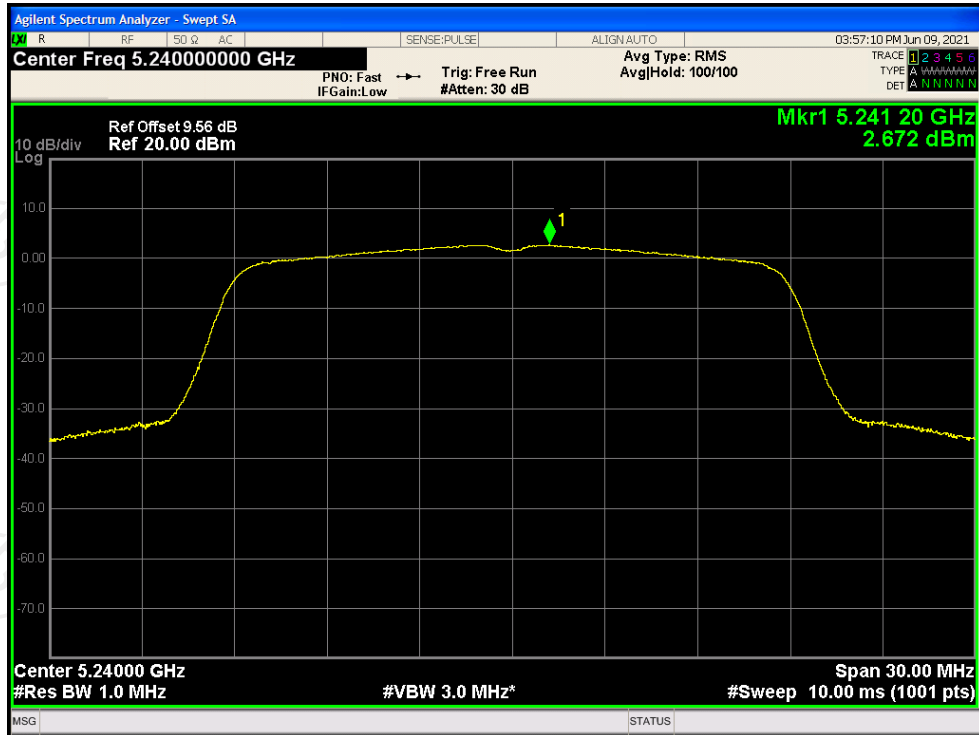


PSD NVNT ac40 5190MHz Ant0

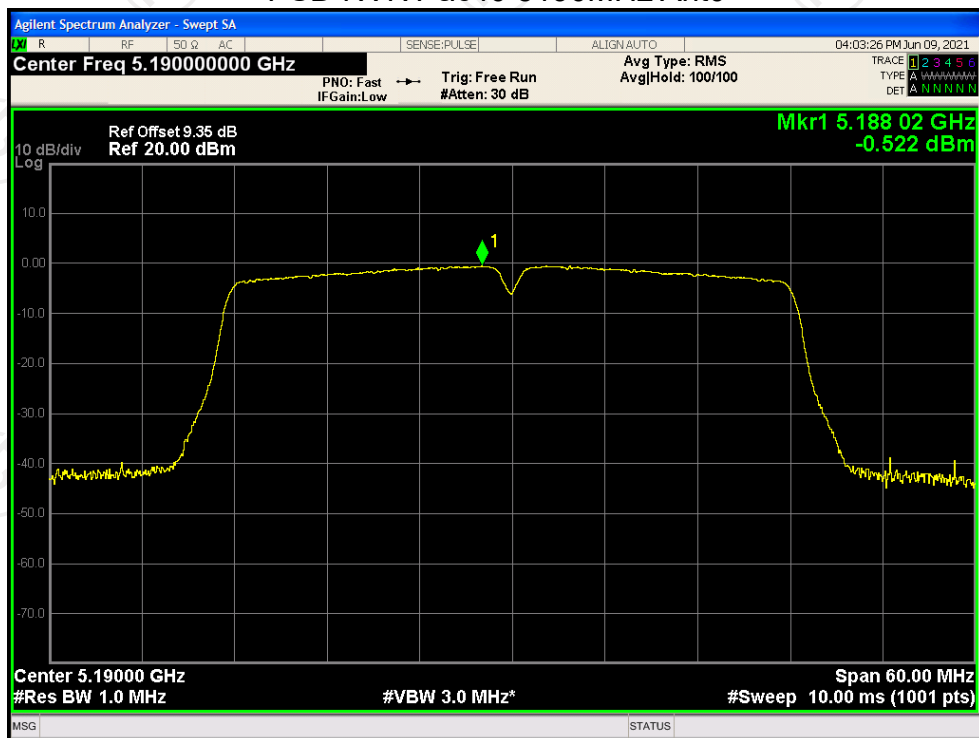


PSD NVNT ac40 5230MHz Ant0

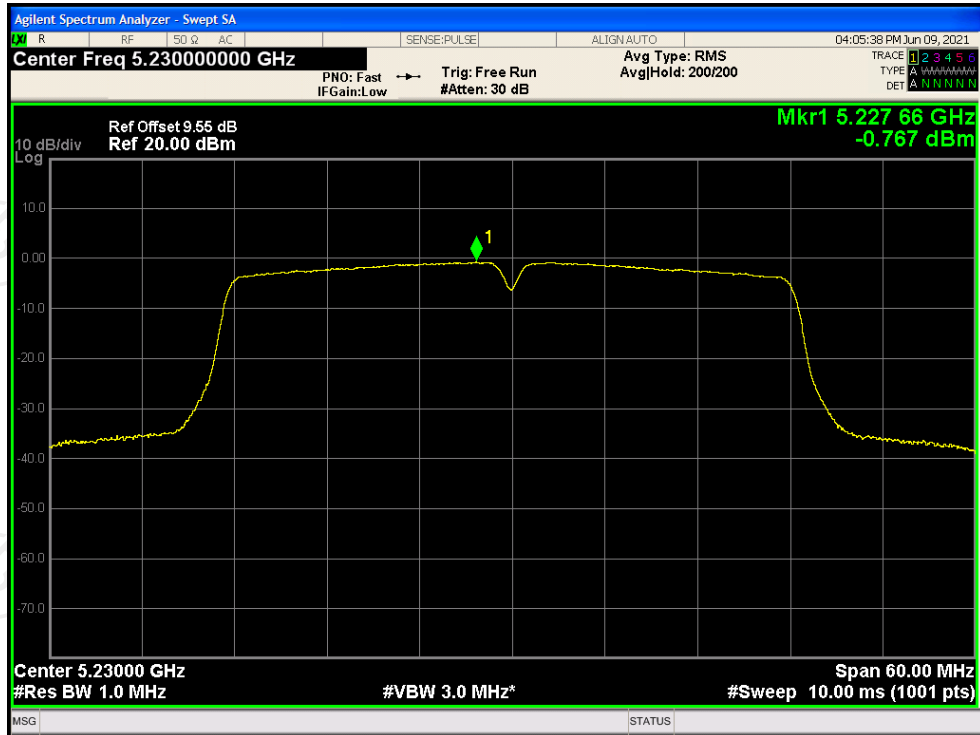


PSD NVNT ac80 5210MHz Ant0

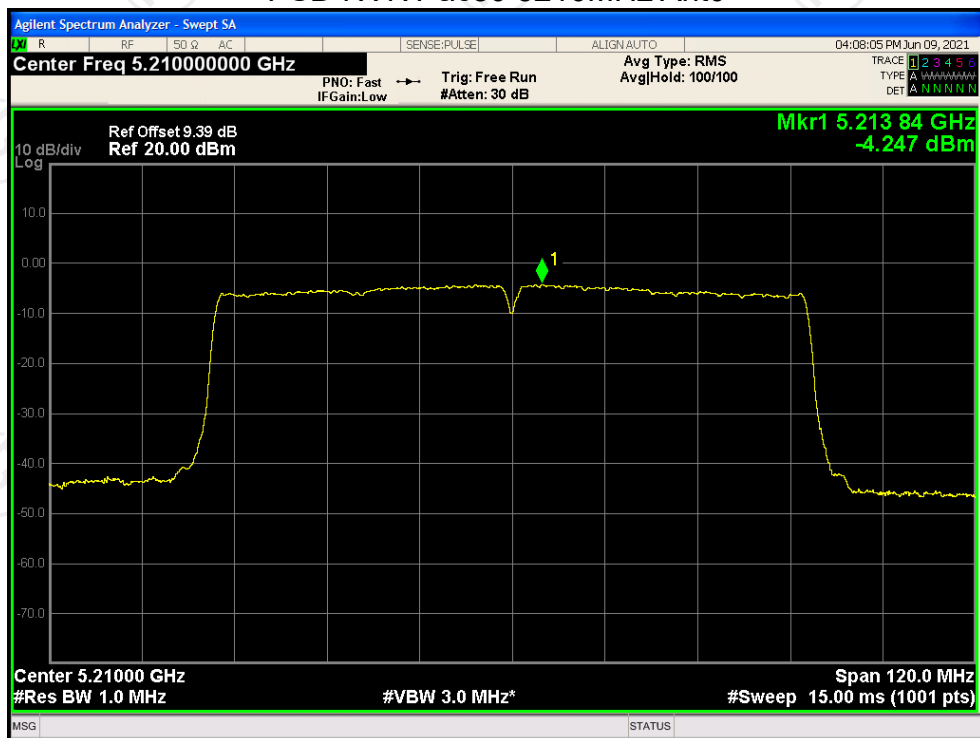


PSD NVNT n20 5180MHz Ant0

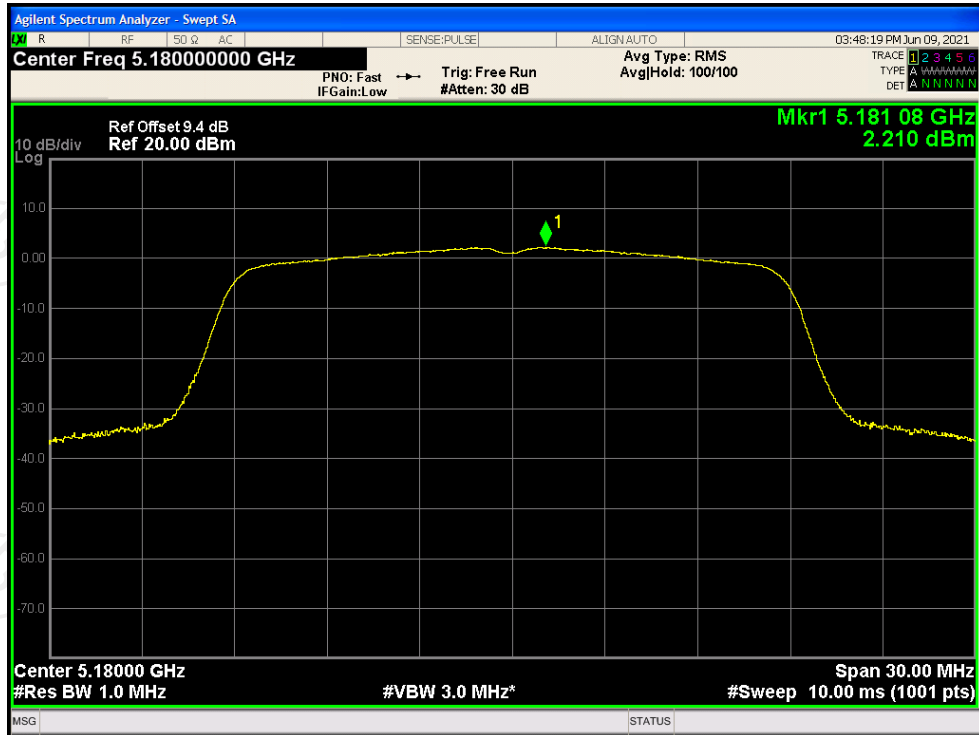


PSD NVNT n20 5200MHz Ant0

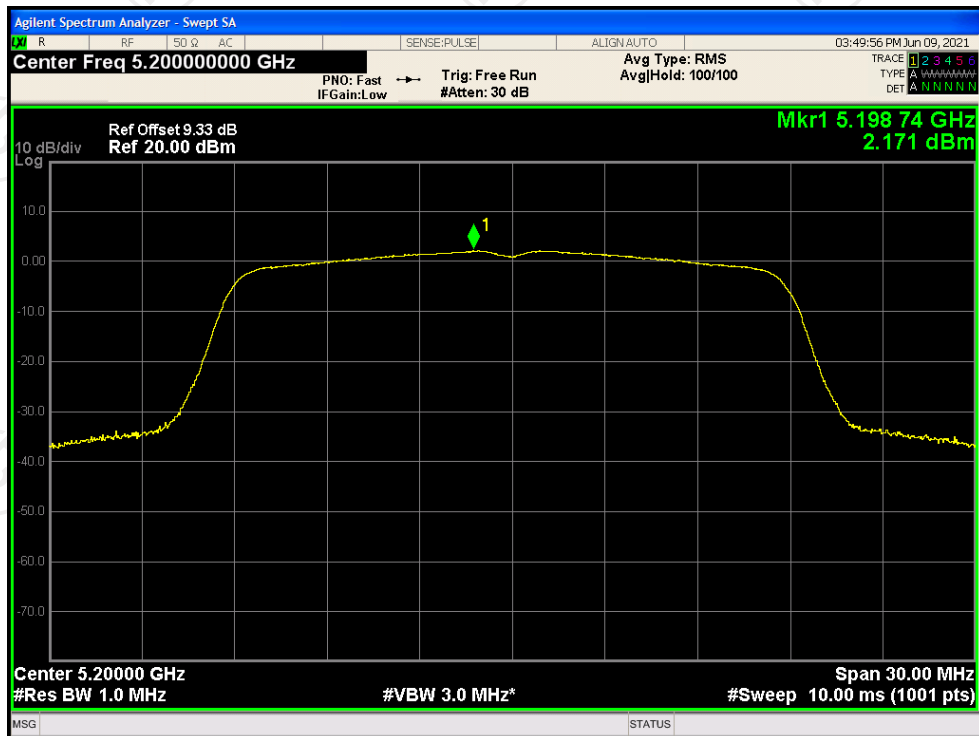


PSD NVNT n20 5240MHz Ant0

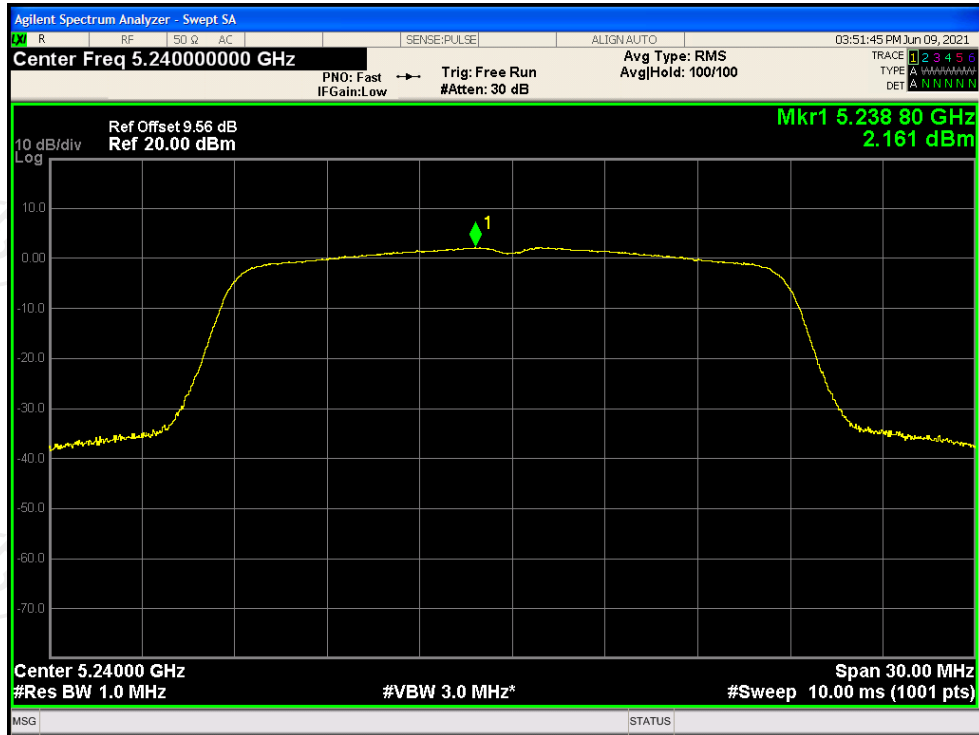


PSD NVNT n40 5190MHz Ant0

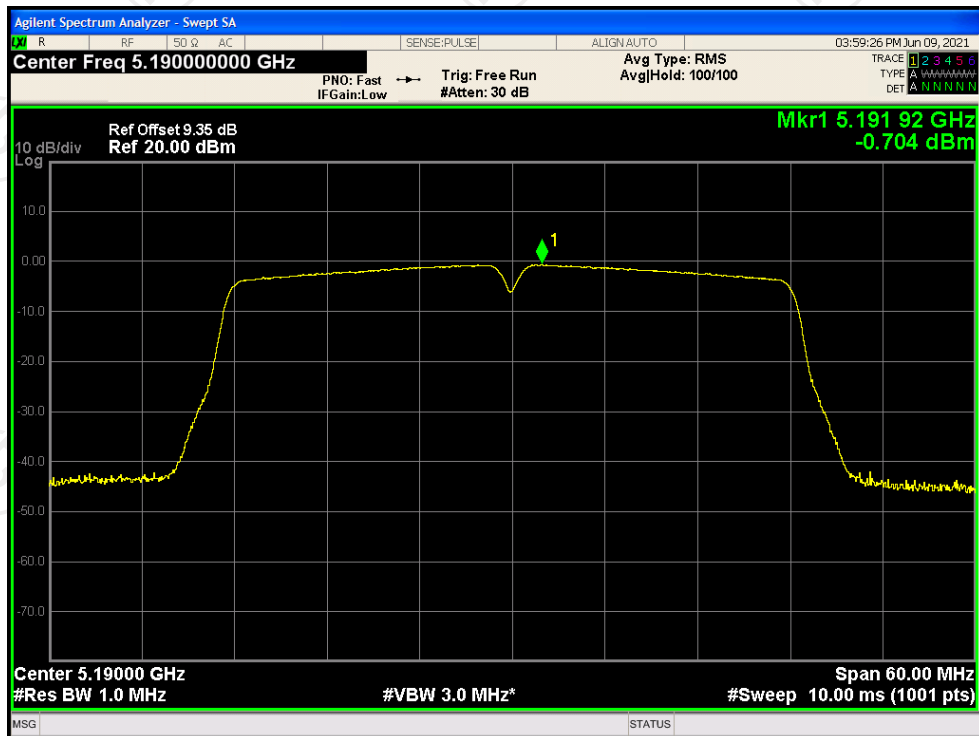


PSD NVNT n40 5230MHz Ant0

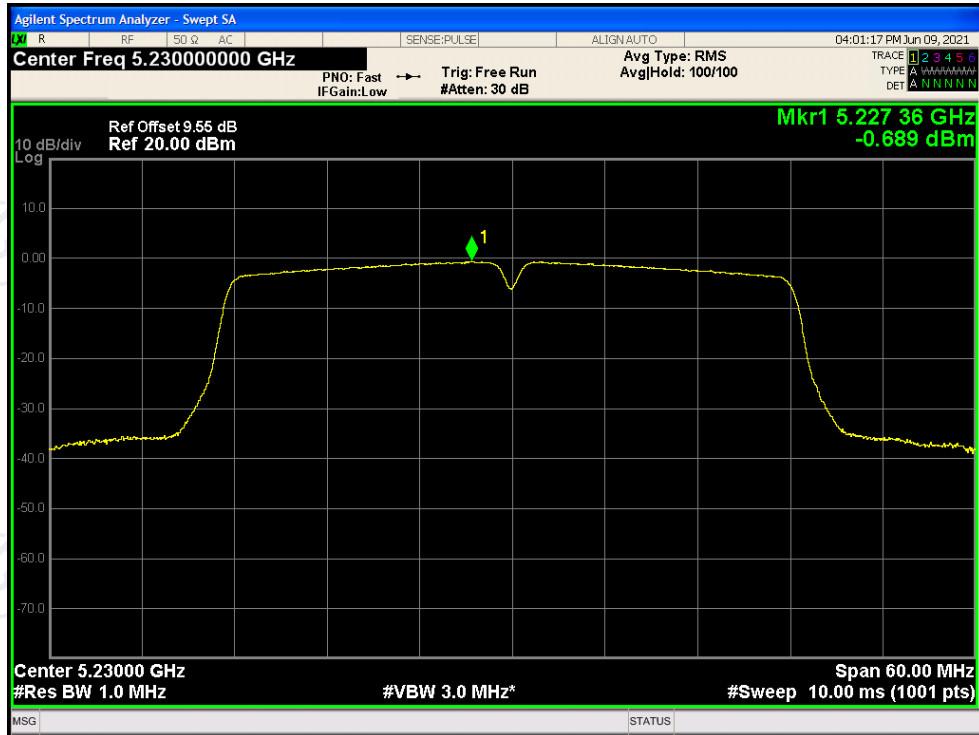


PSD NVNT a 5260MHz Ant0

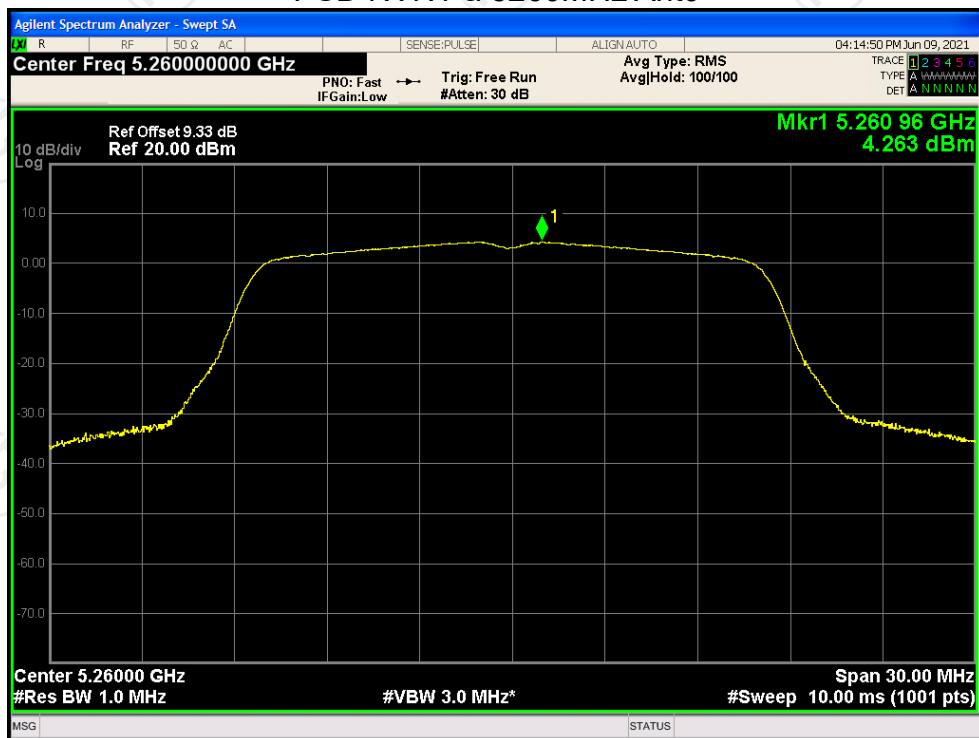


PSD NVNT a 5280MHz Ant0

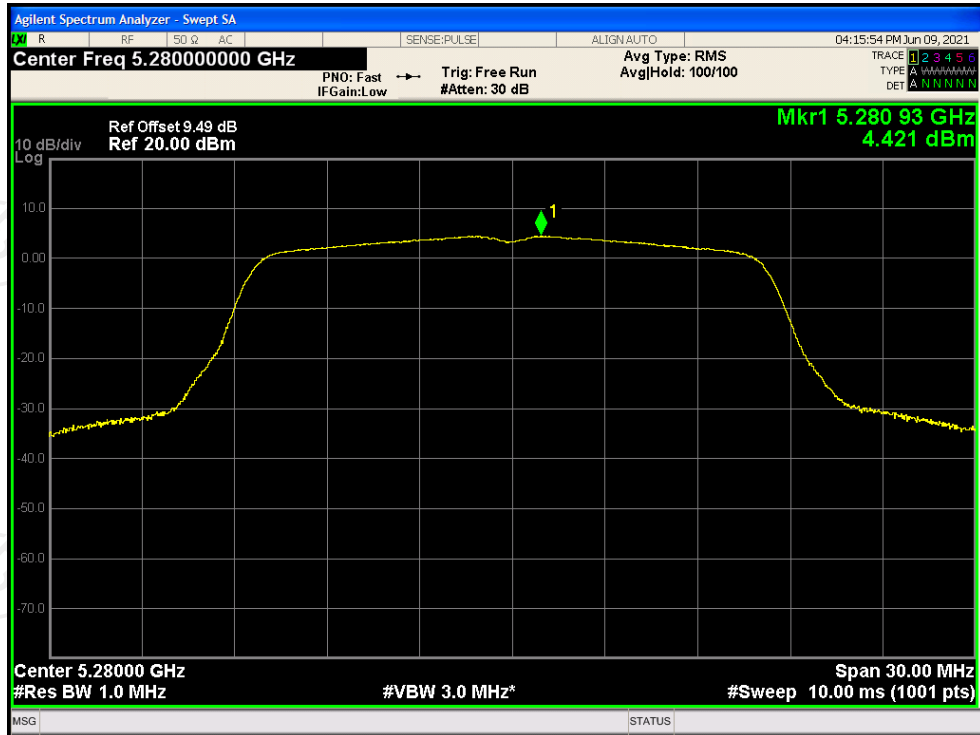


PSD NVNT a 5320MHz Ant0

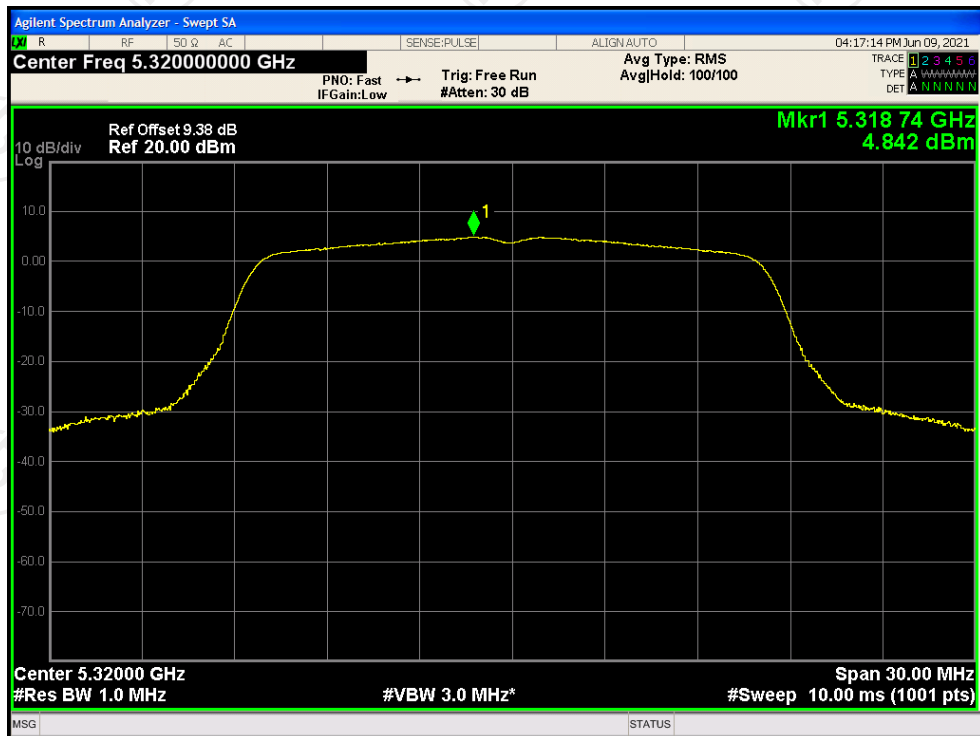


PSD NVNT ac20 5260MHz Ant0

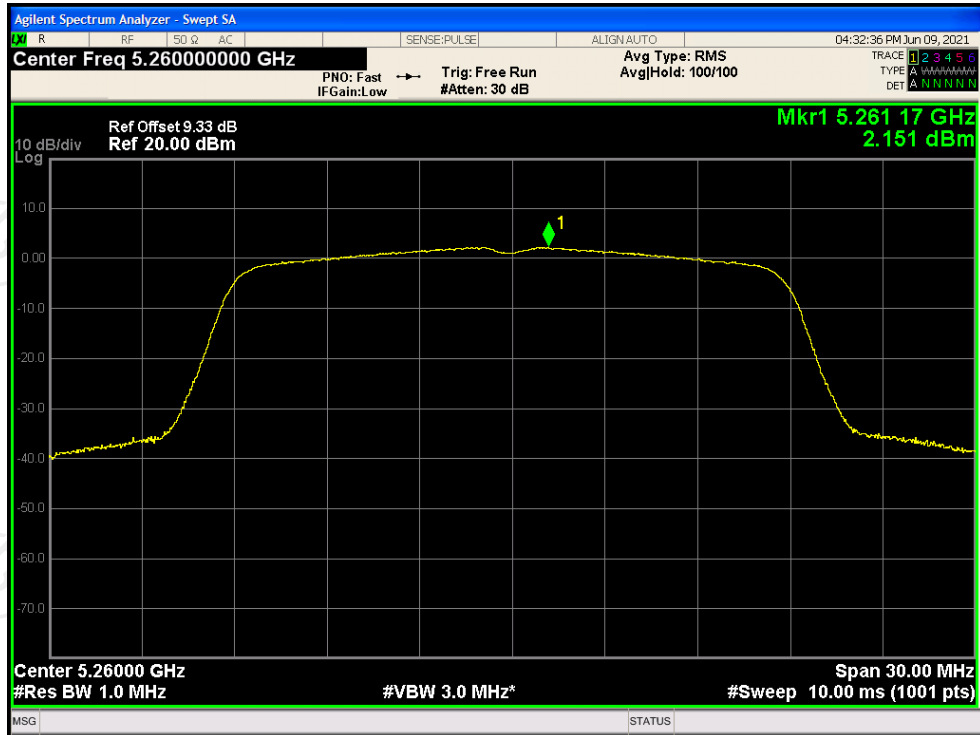


PSD NVNT ac20 5280MHz Ant0

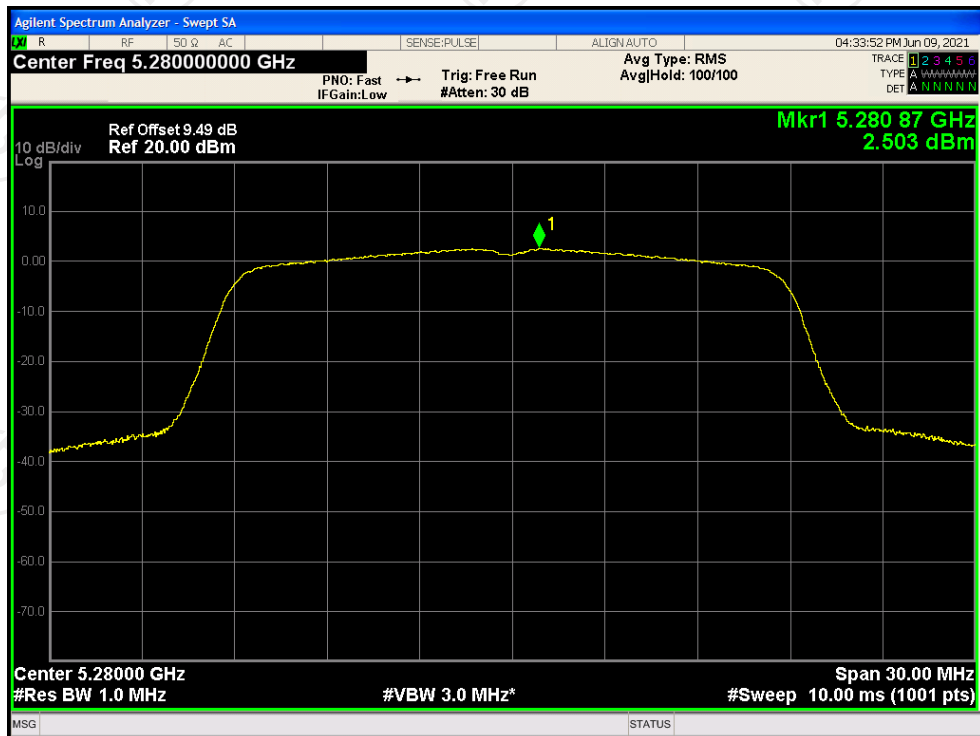


PSD NVNT ac20 5320MHz Ant0

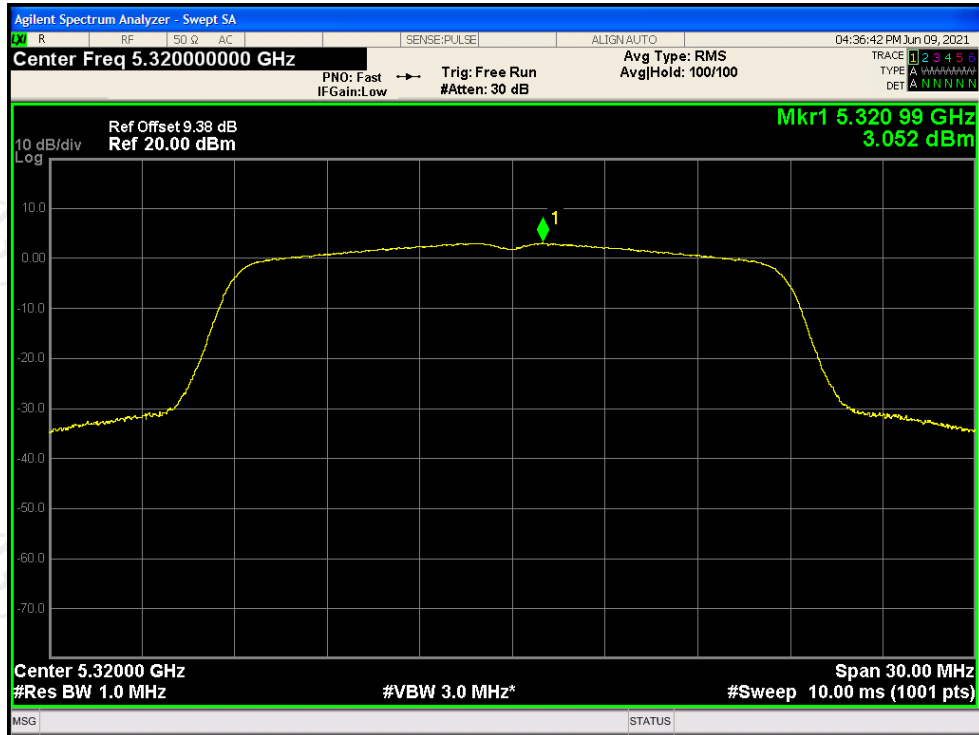


PSD NVNT ac40 5270MHz Ant0

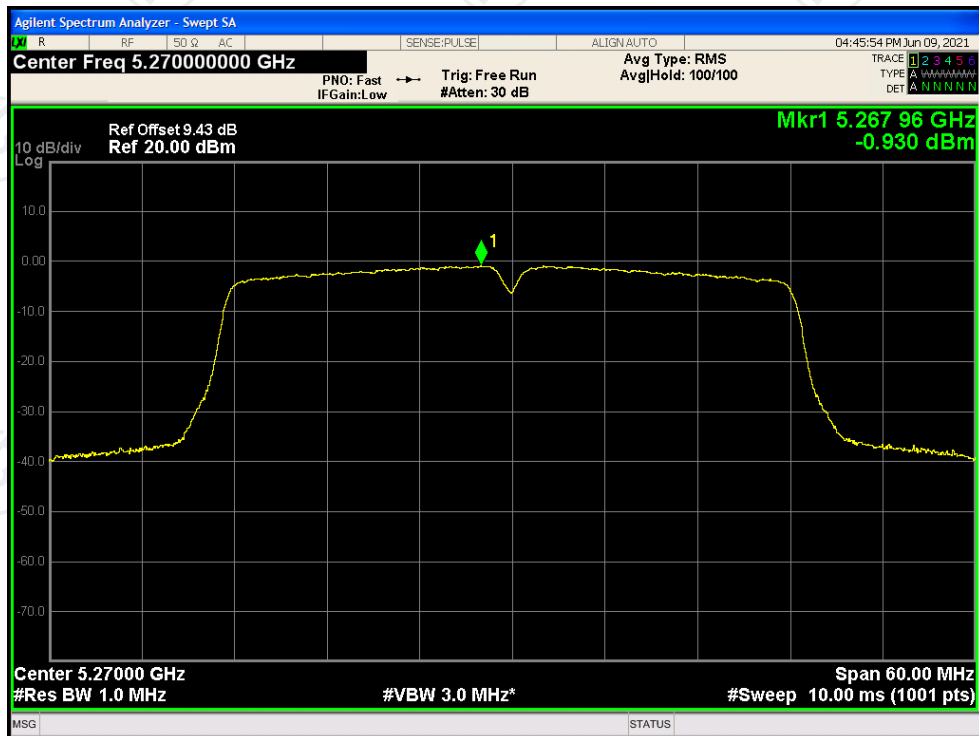


PSD NVNT ac40 5310MHz Ant0

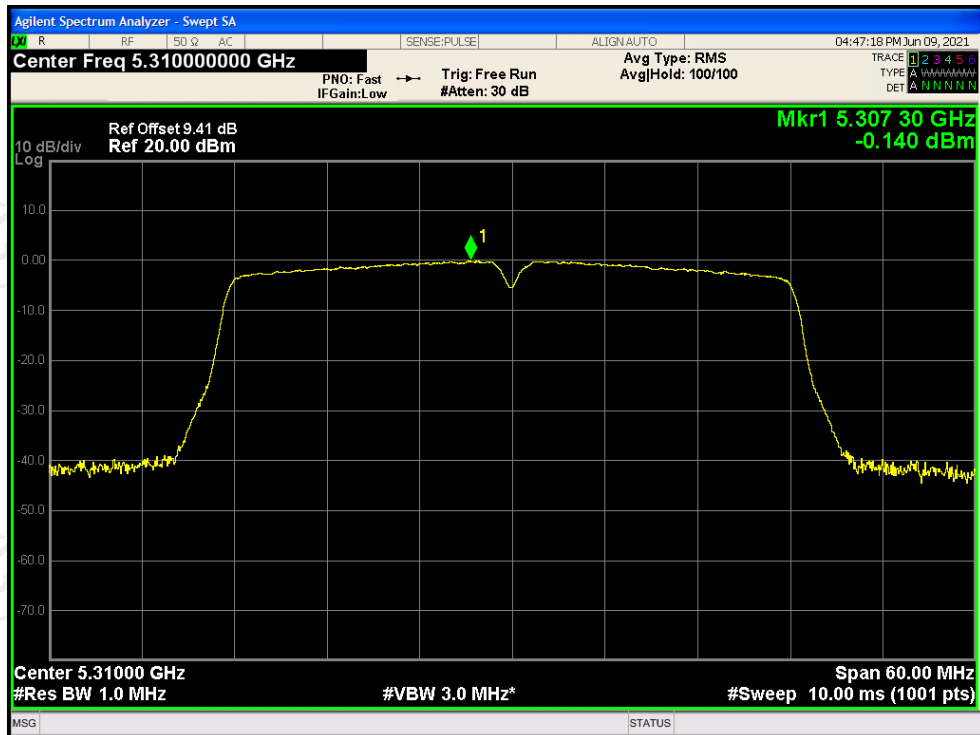


PSD NVNT ac80 5290MHz Ant0

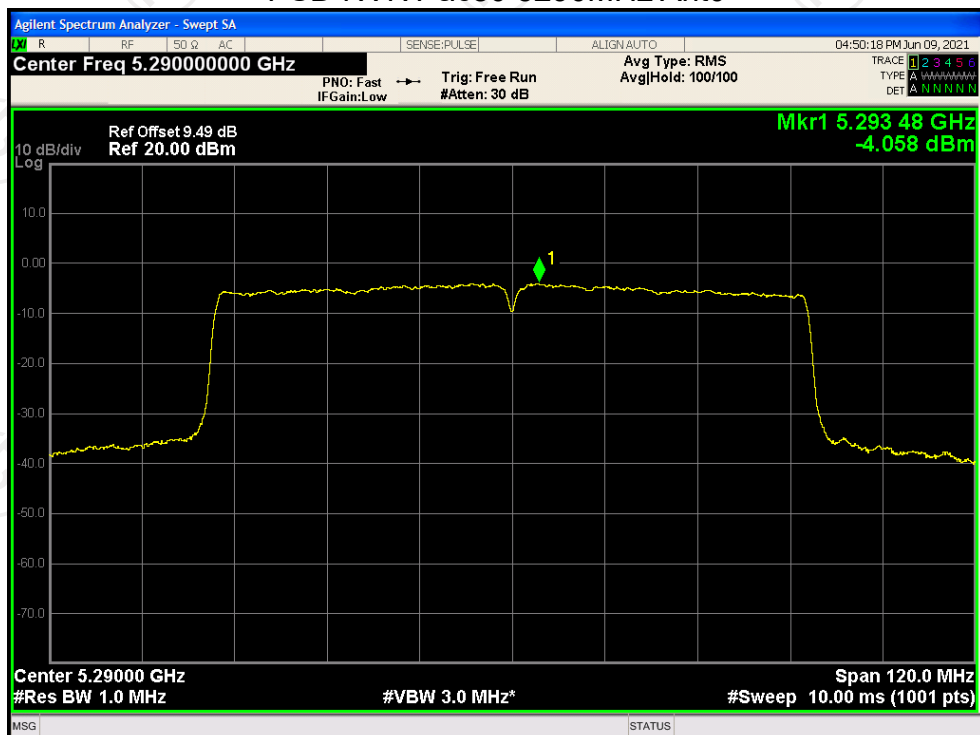


PSD NVNT n20 5260MHz Ant0

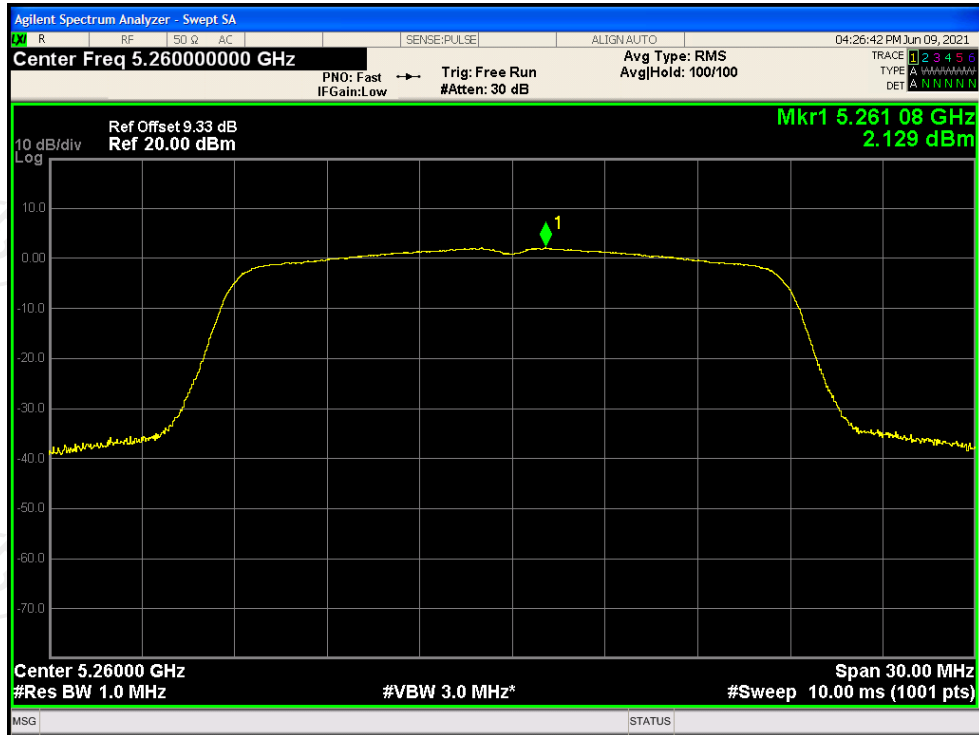


PSD NVNT n20 5280MHz Ant0

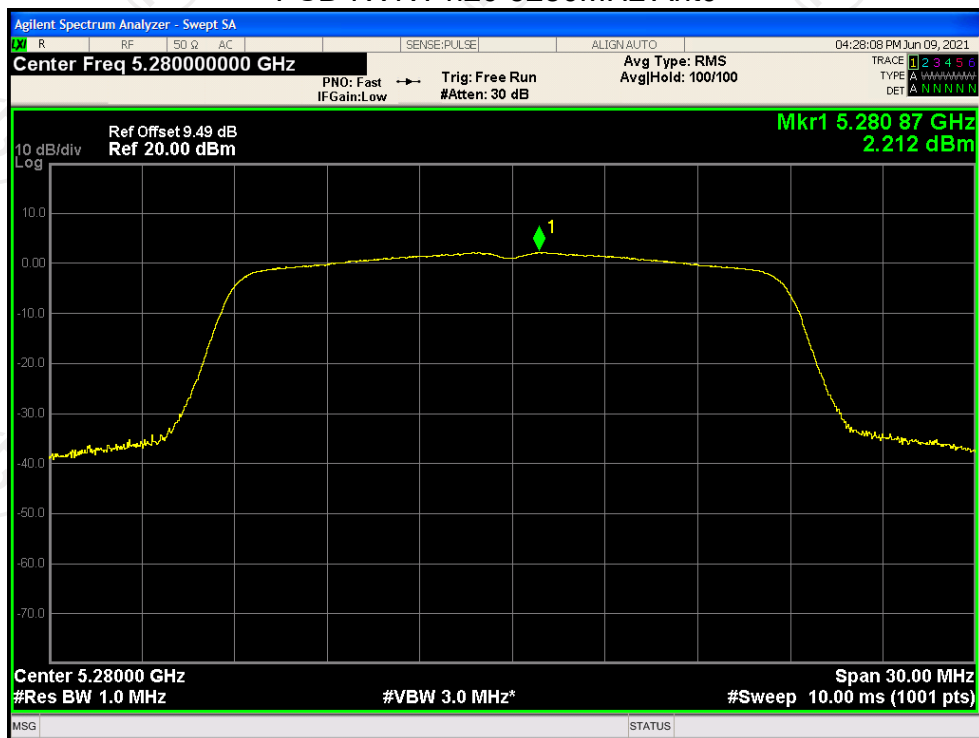


PSD NVNT n20 5320MHz Ant0

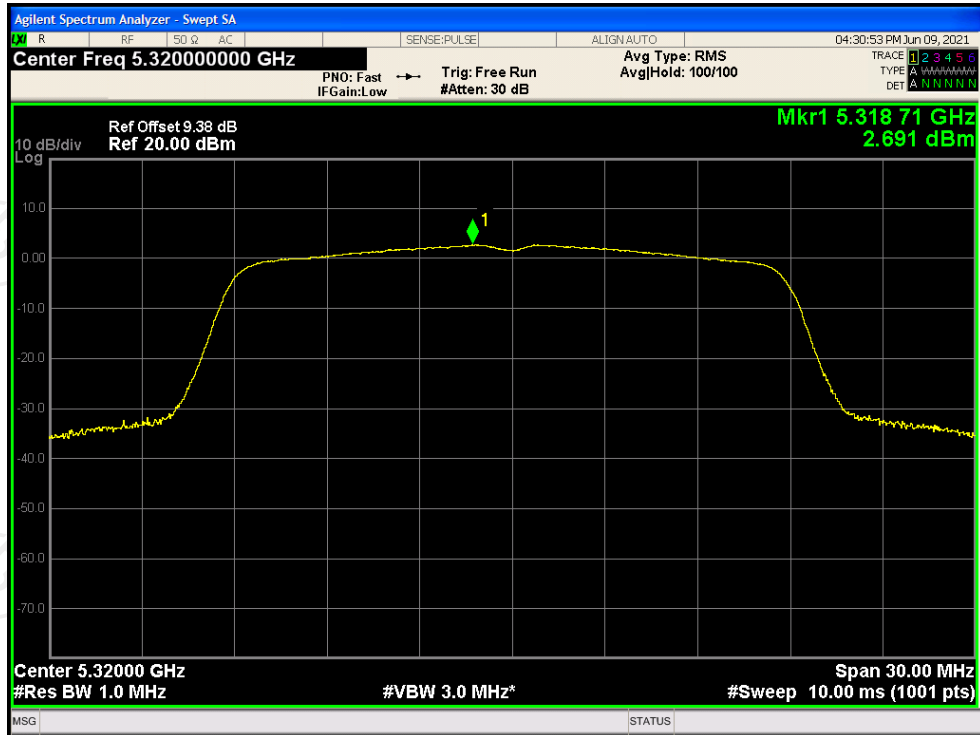


PSD NVNT n40 5270MHz Ant0

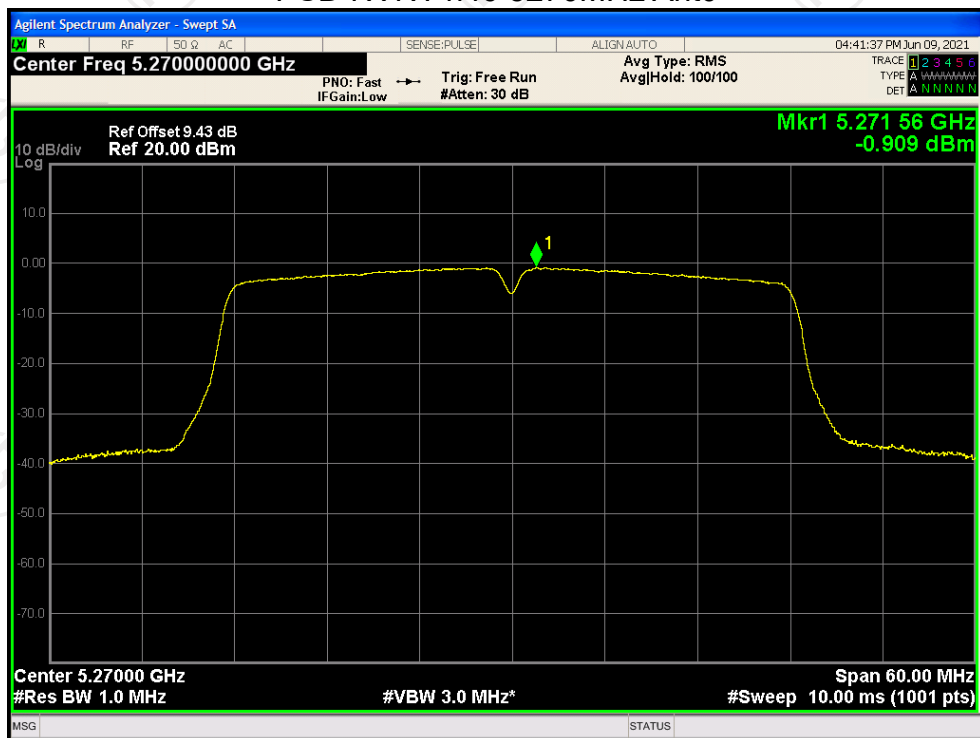


PSD NVNT n40 5310MHz Ant0

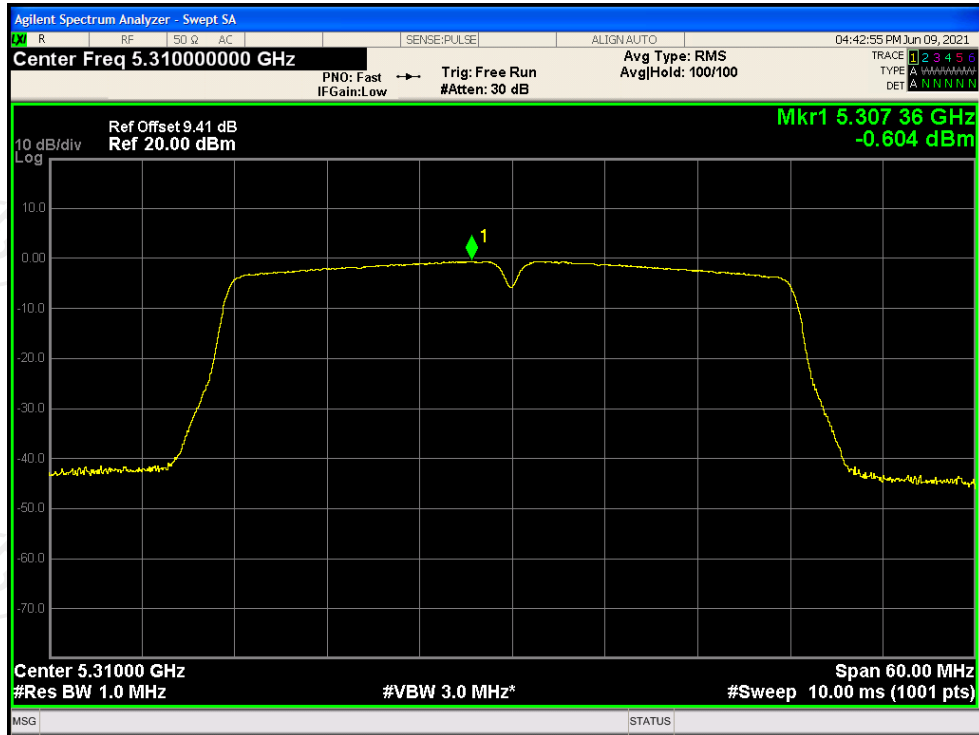


PSD NVNT a 5500MHz Ant0

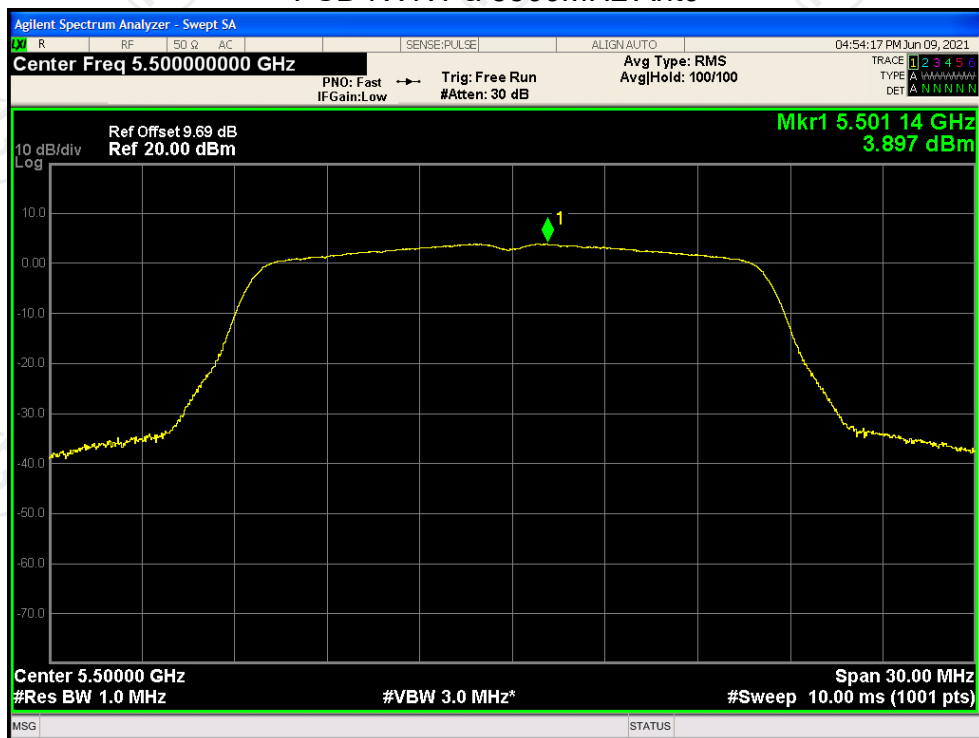


PSD NVNT a 5600MHz Ant0

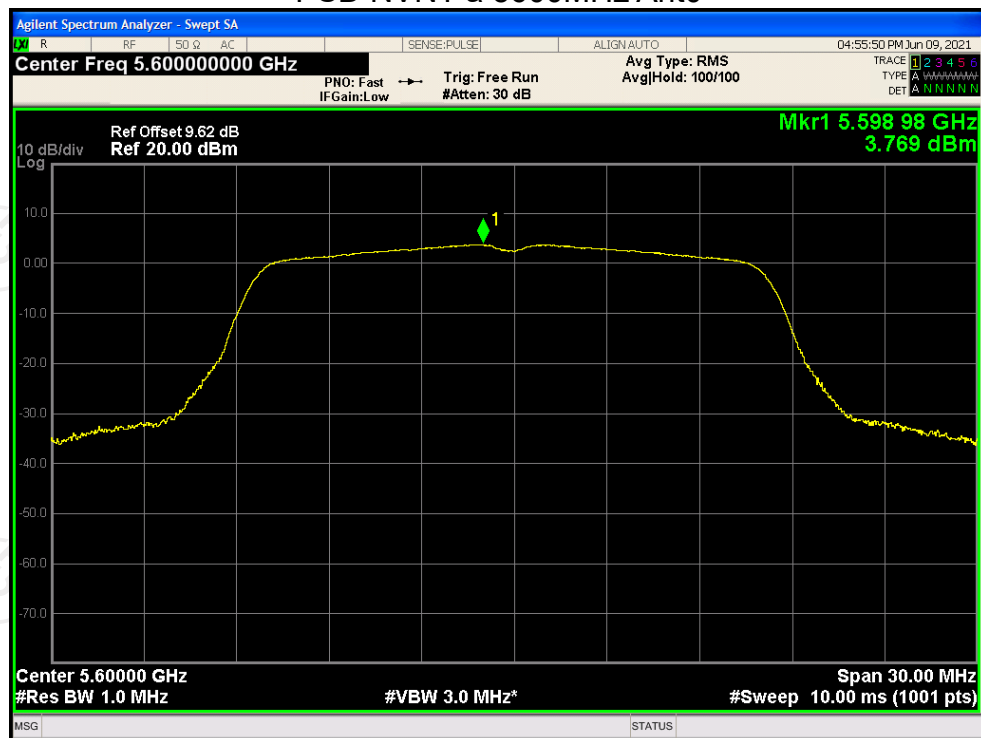


PSD NVNT a 5700MHz Ant0

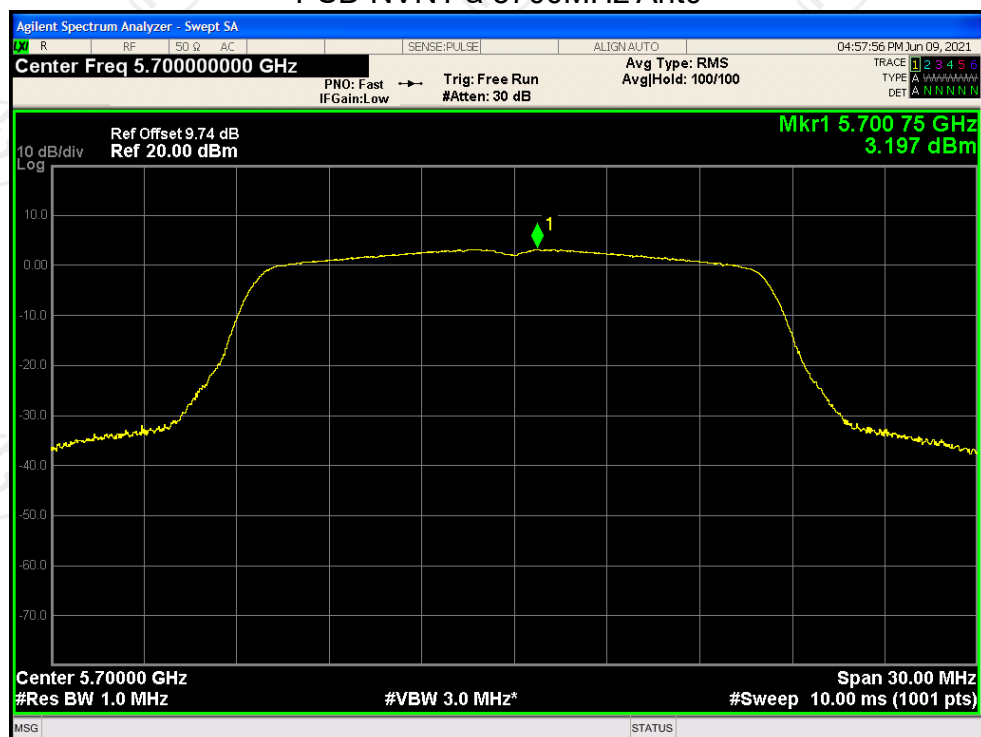


PSD NVNT ac20 5500MHz Ant0

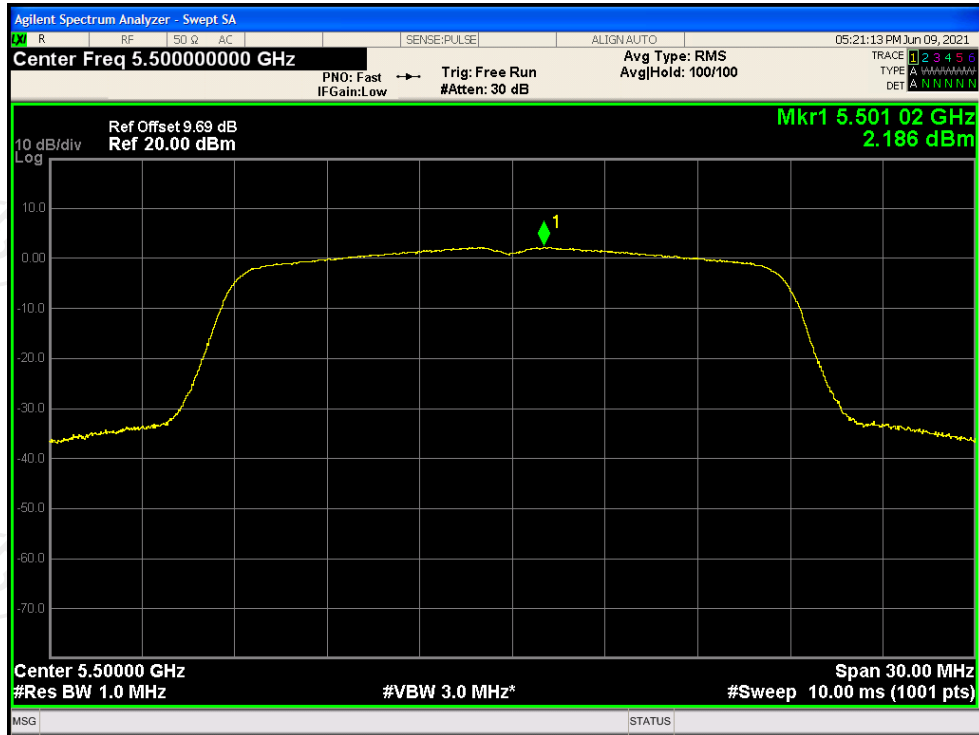


PSD NVNT ac20 5600MHz Ant0

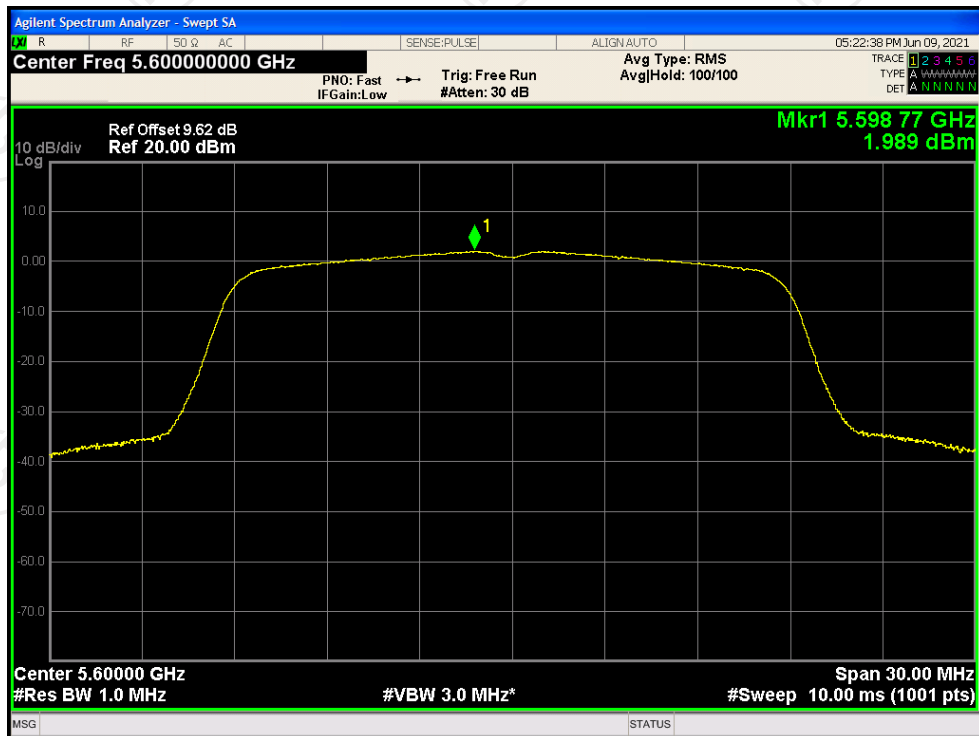


PSD NVNT ac20 5700MHz Ant0

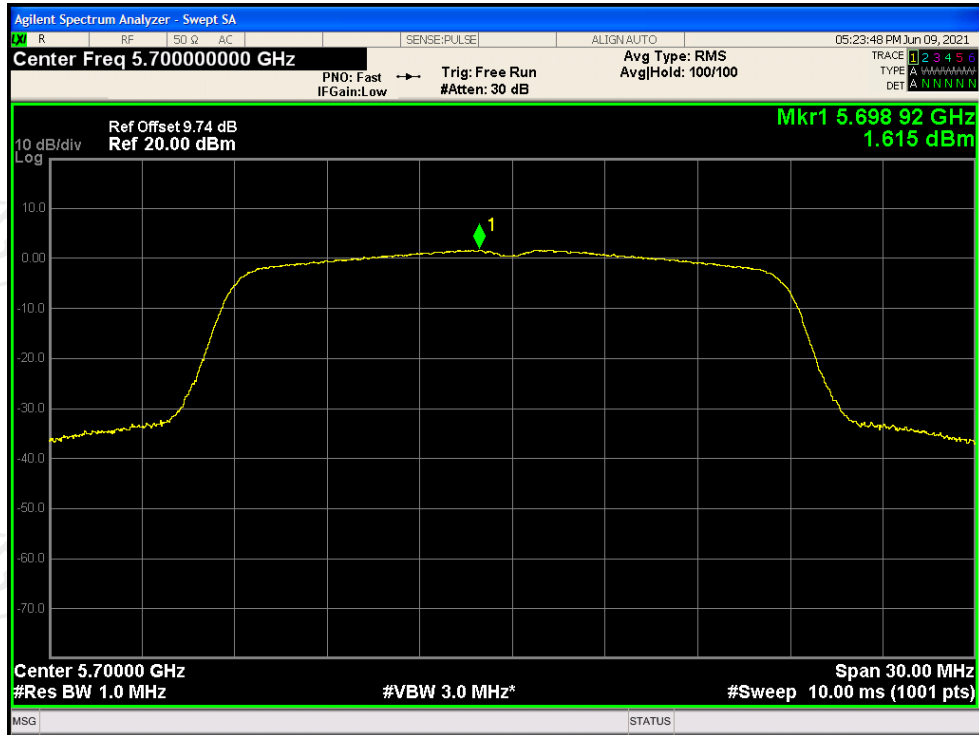


PSD NVNT ac40 5510MHz Ant0

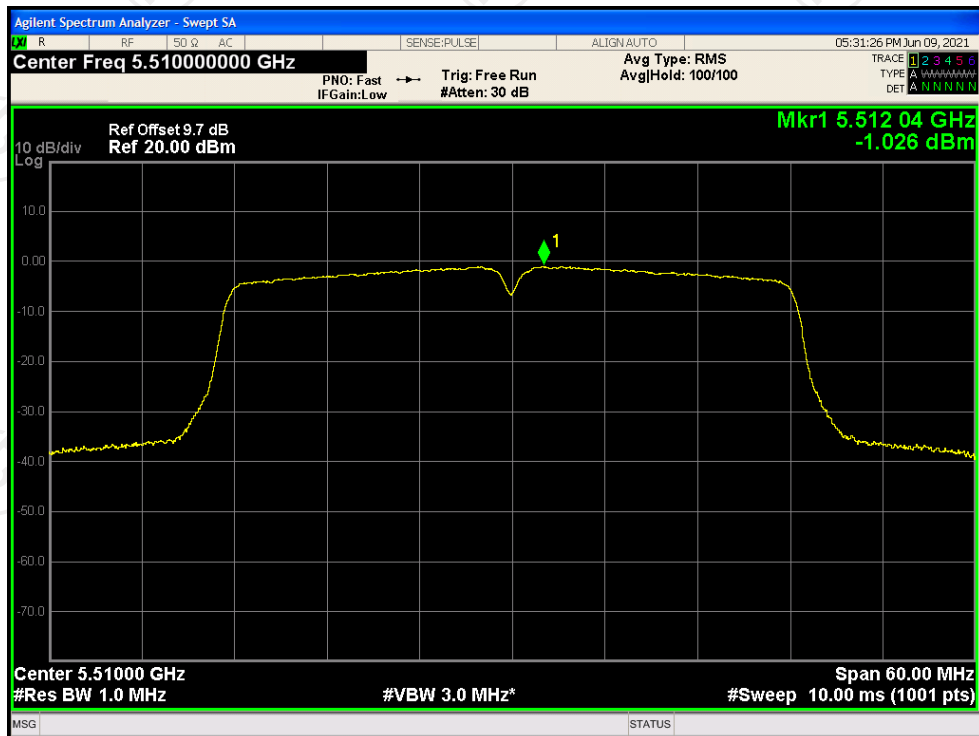


PSD NVNT ac40 5590MHz Ant0

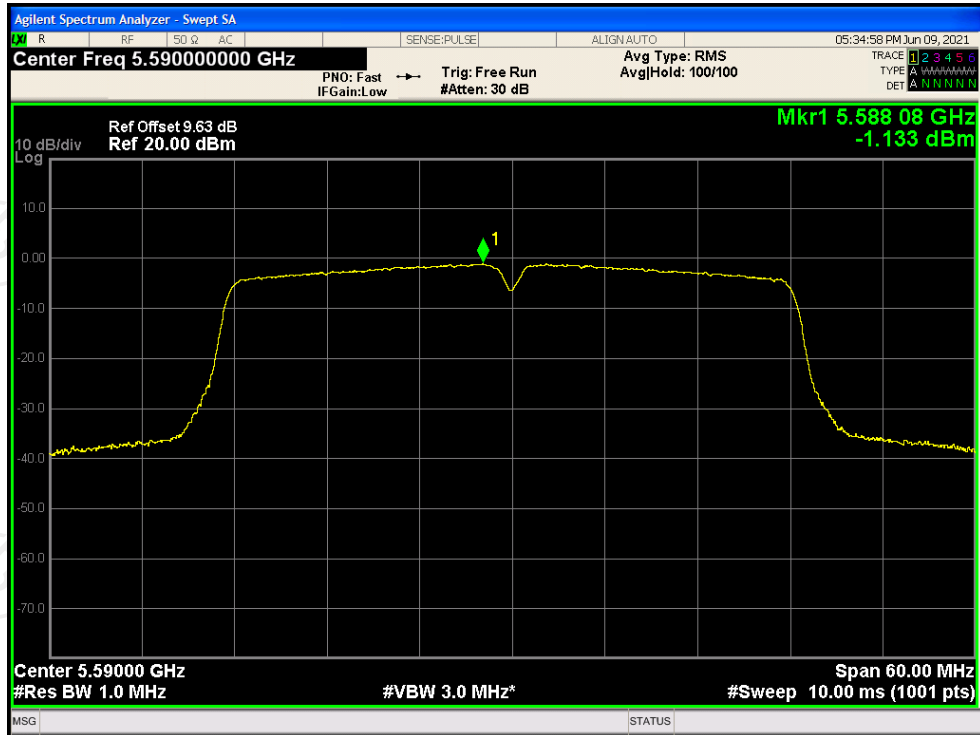


PSD NVNT ac40 5670MHz Ant0

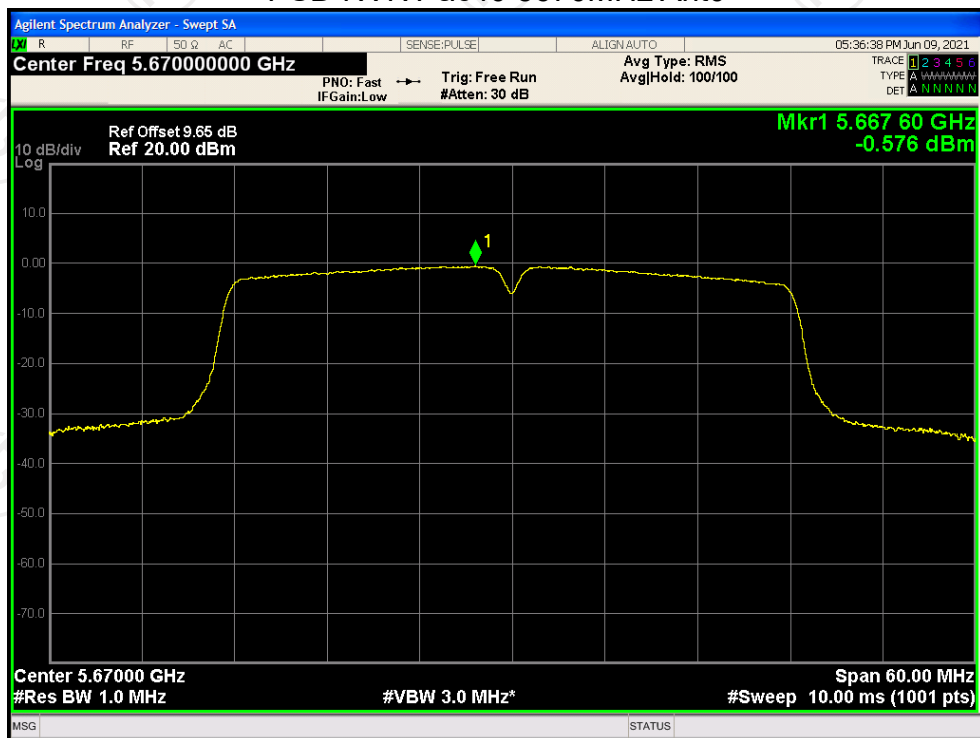


PSD NVNT ac80 5530MHz Ant0

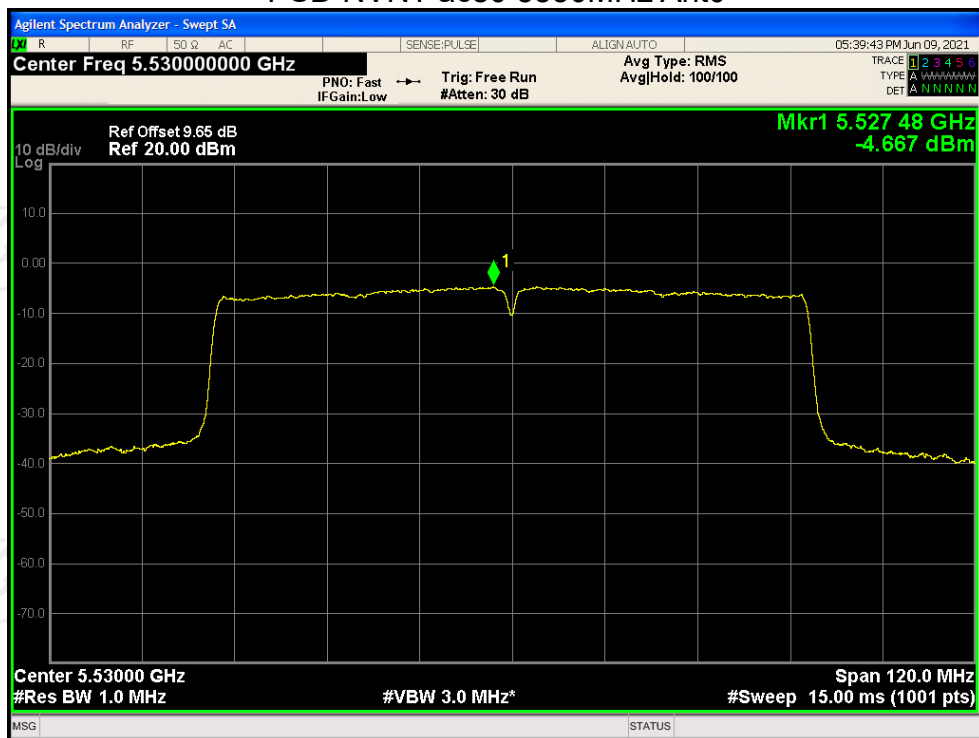


PSD NVNT ac80 5610MHz Ant0

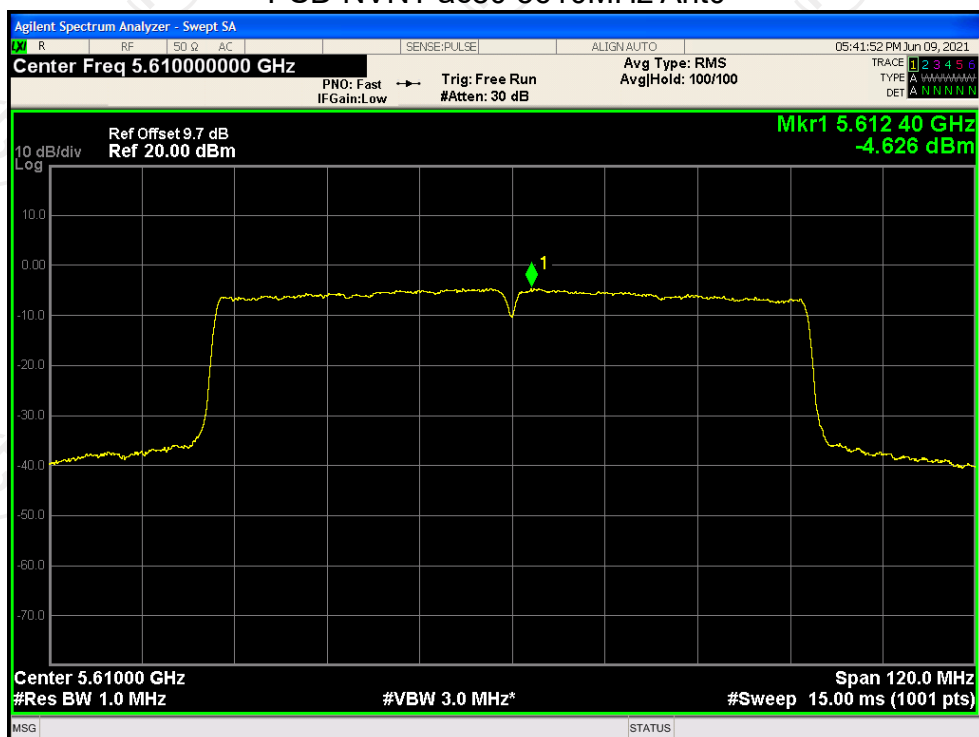


PSD NVNT n20 5500MHz Ant0

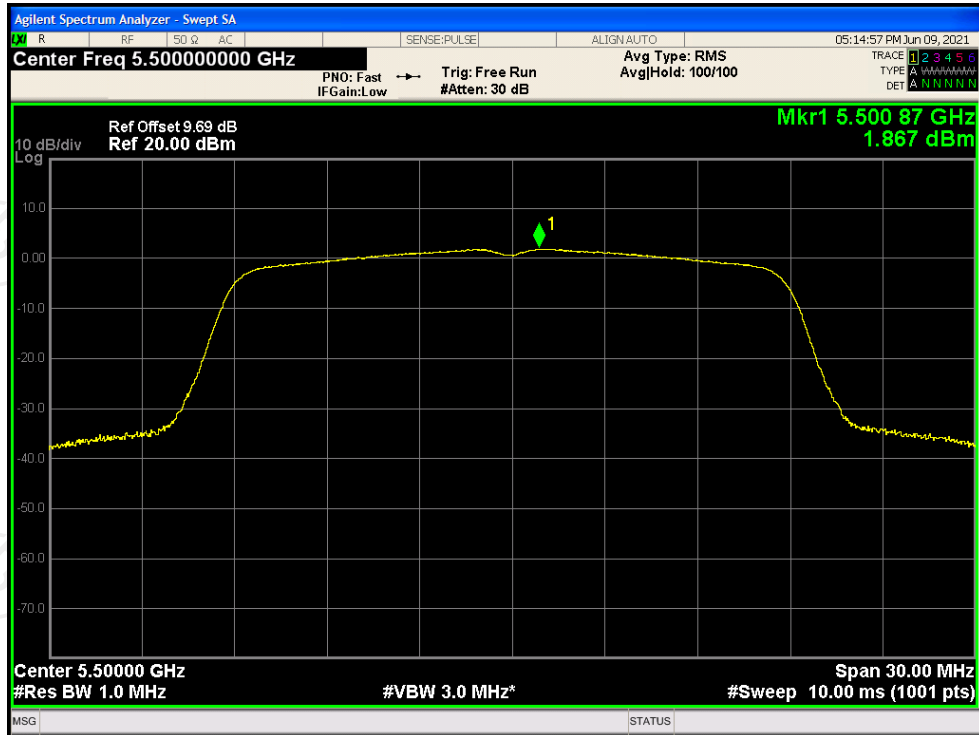


PSD NVNT n20 5600MHz Ant0

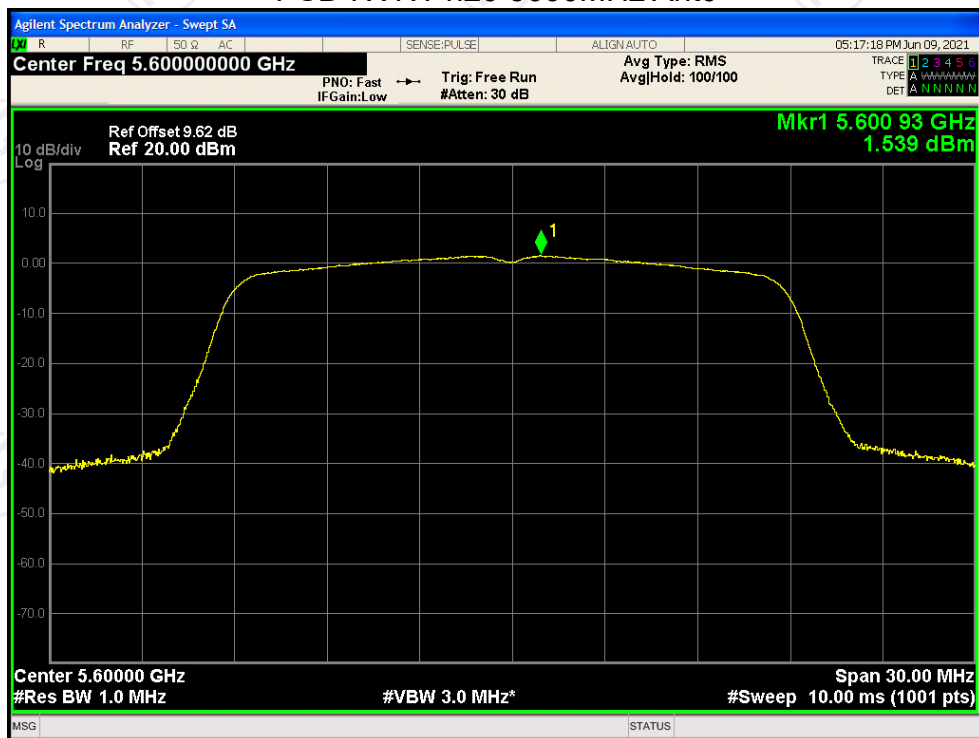


PSD NVNT n20 5700MHz Ant0

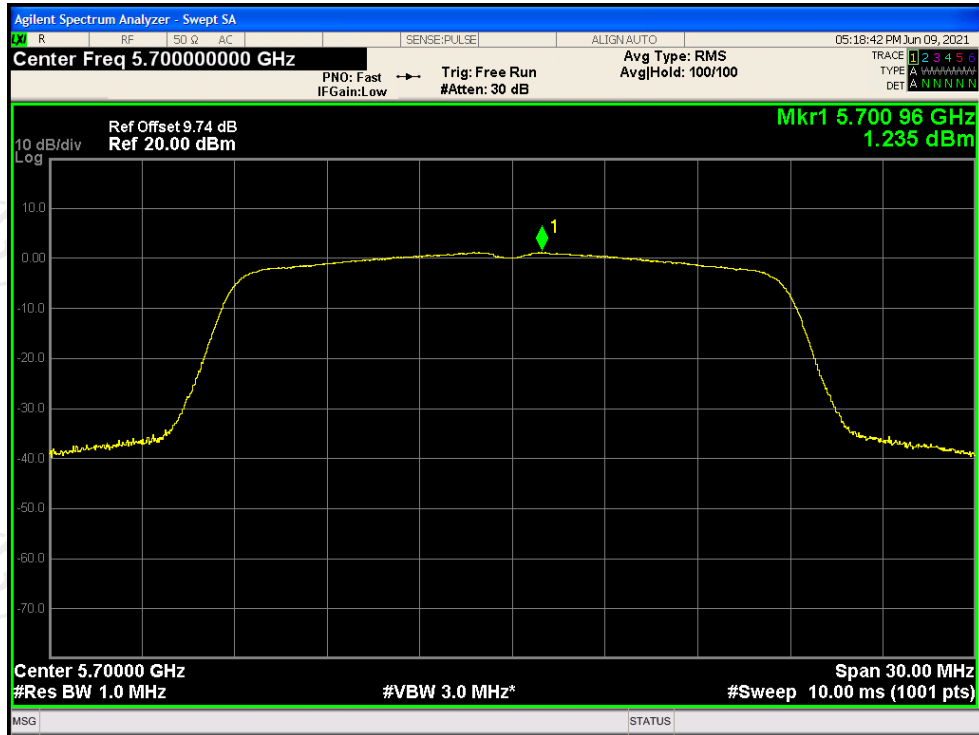


PSD NVNT n40 5510MHz Ant0

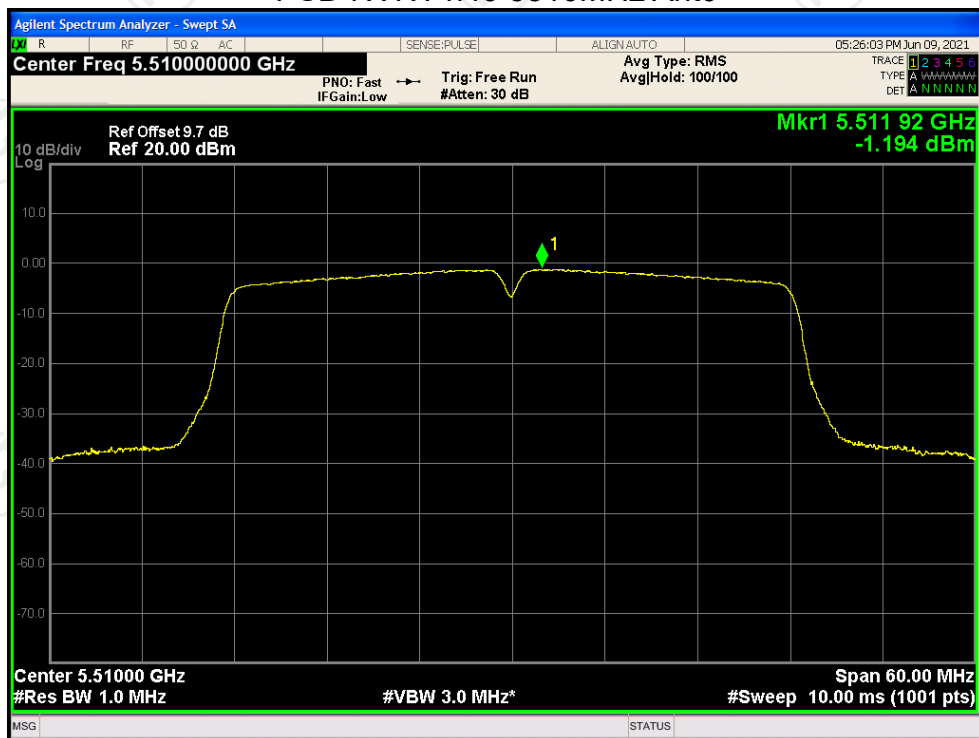


PSD NVNT n40 5590MHz Ant0

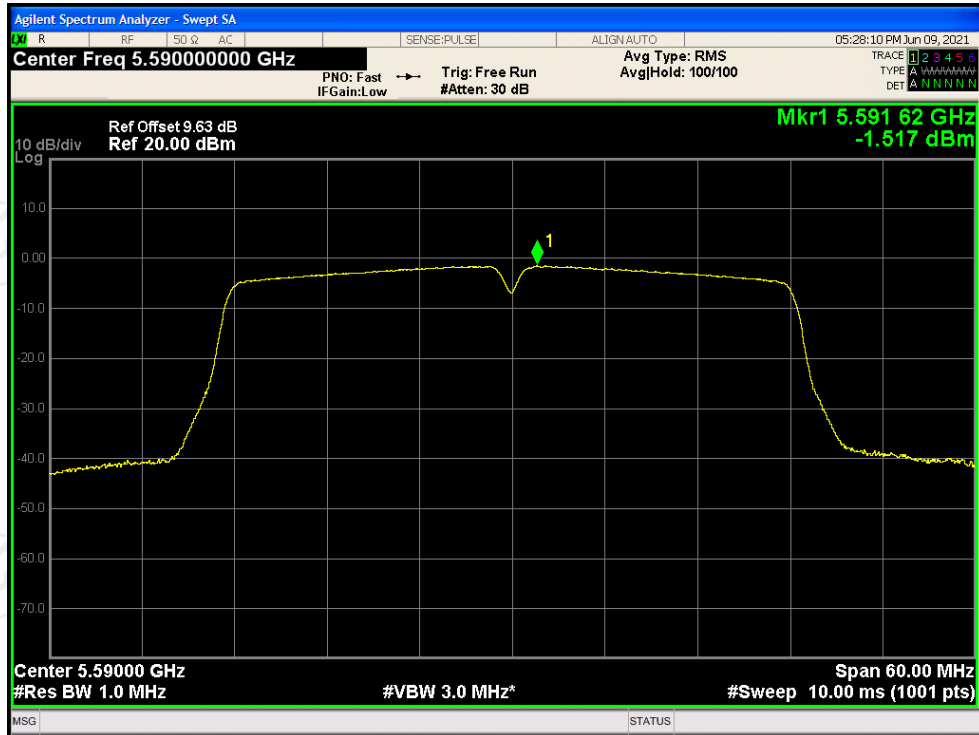


PSD NVNT n40 5670MHz Ant0

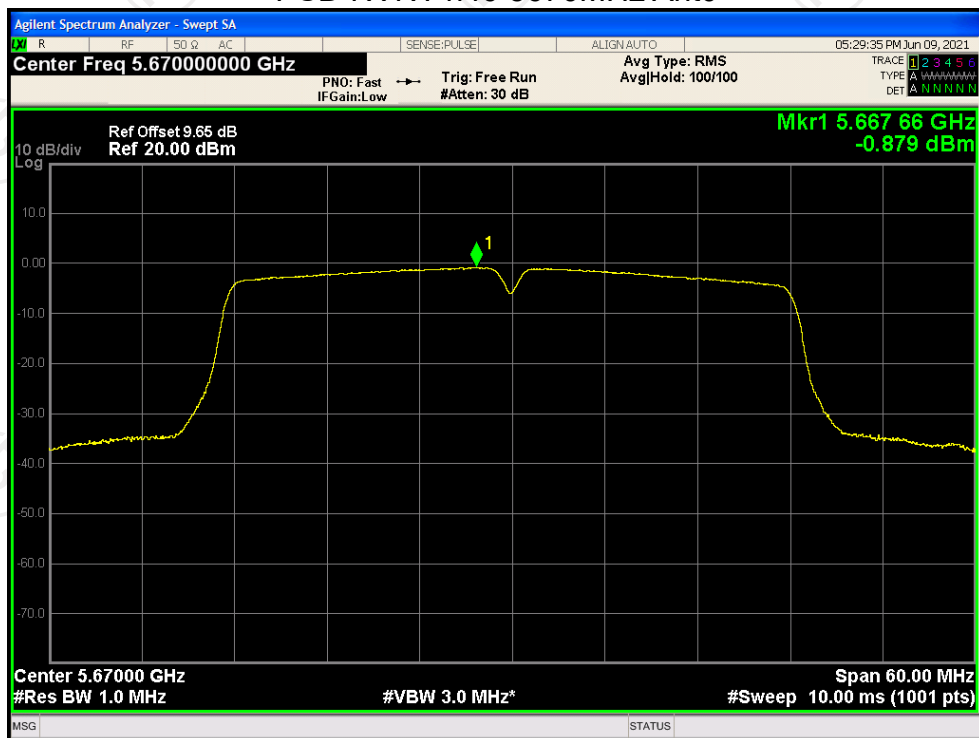


PSD NVNT a 5745MHz Ant0

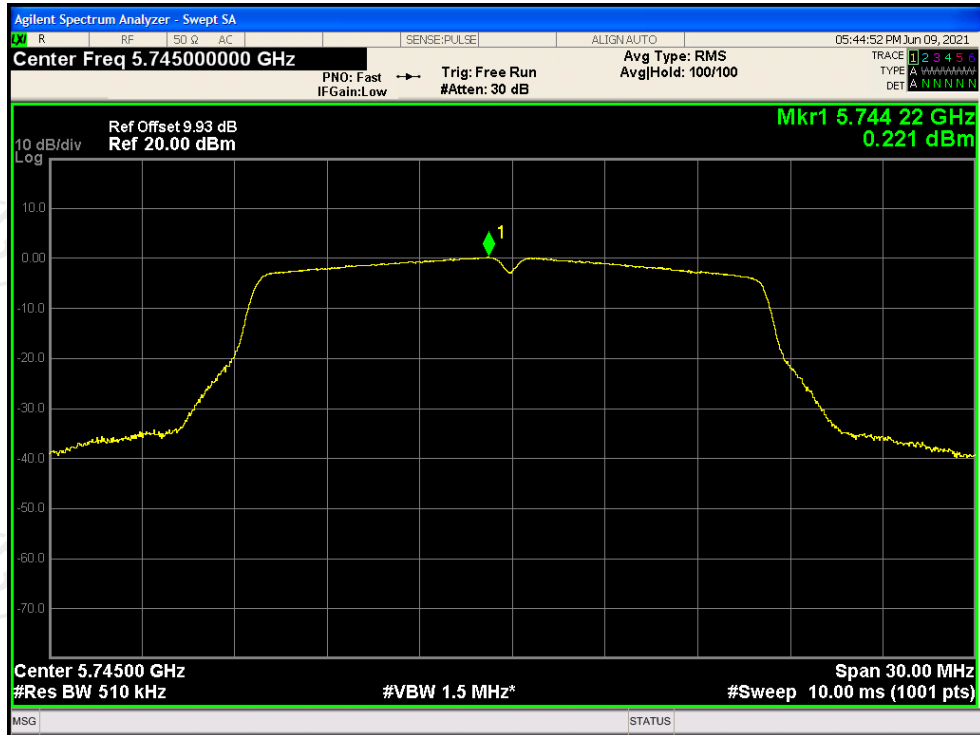


PSD NVNT a 5785MHz Ant0

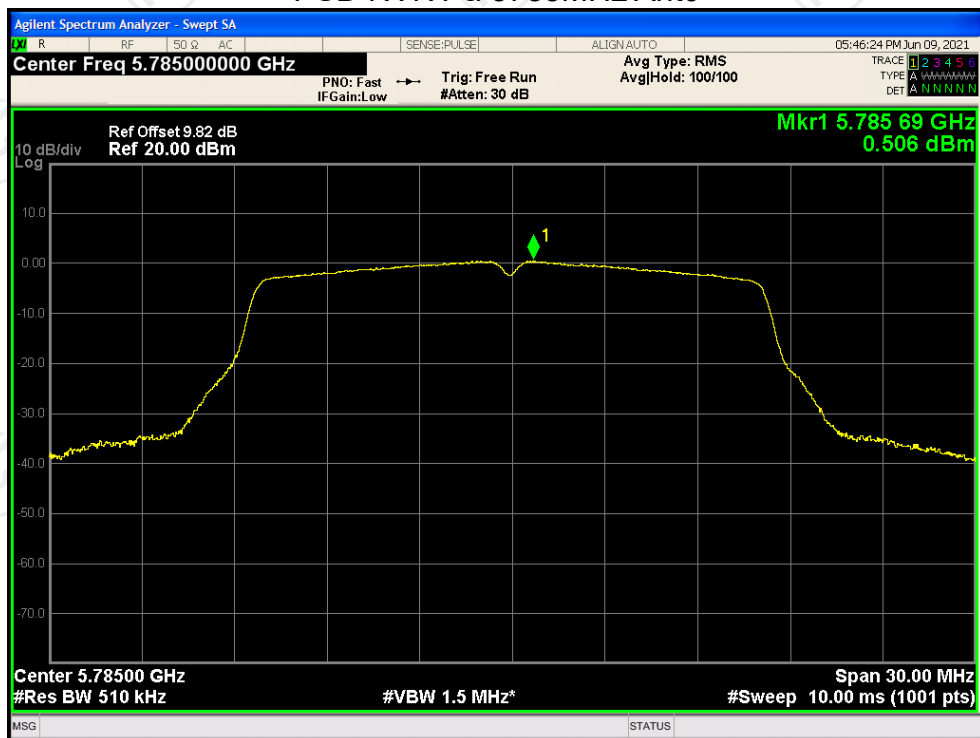


PSD NVNT a 5825MHz Ant0

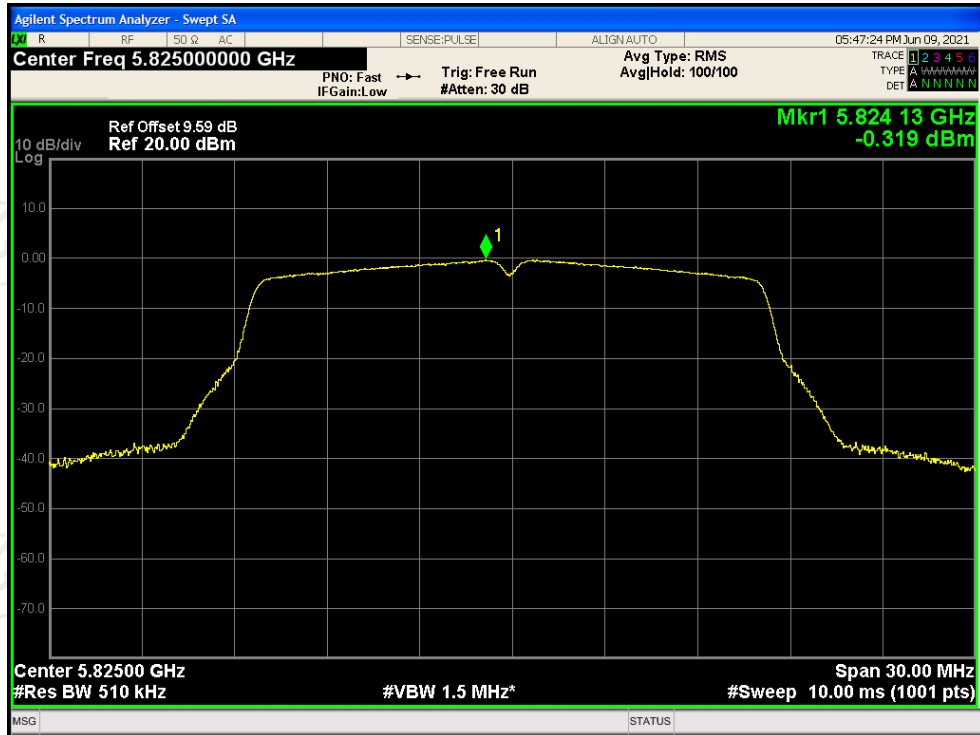


PSD NVNT ac20 5745MHz Ant0

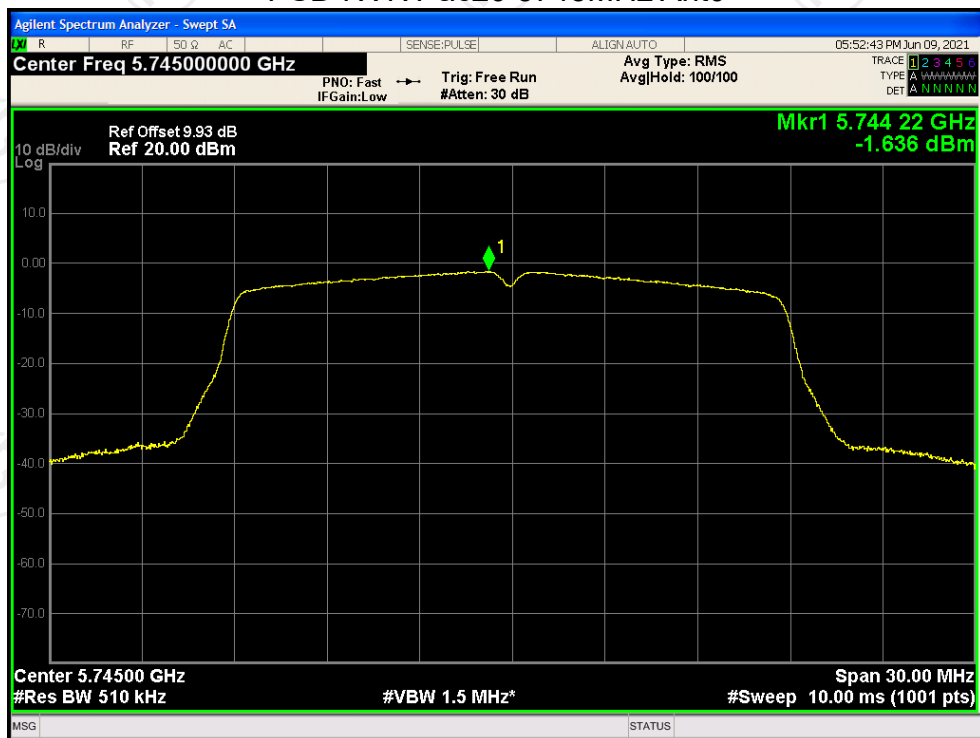


PSD NVNT ac20 5785MHz Ant0

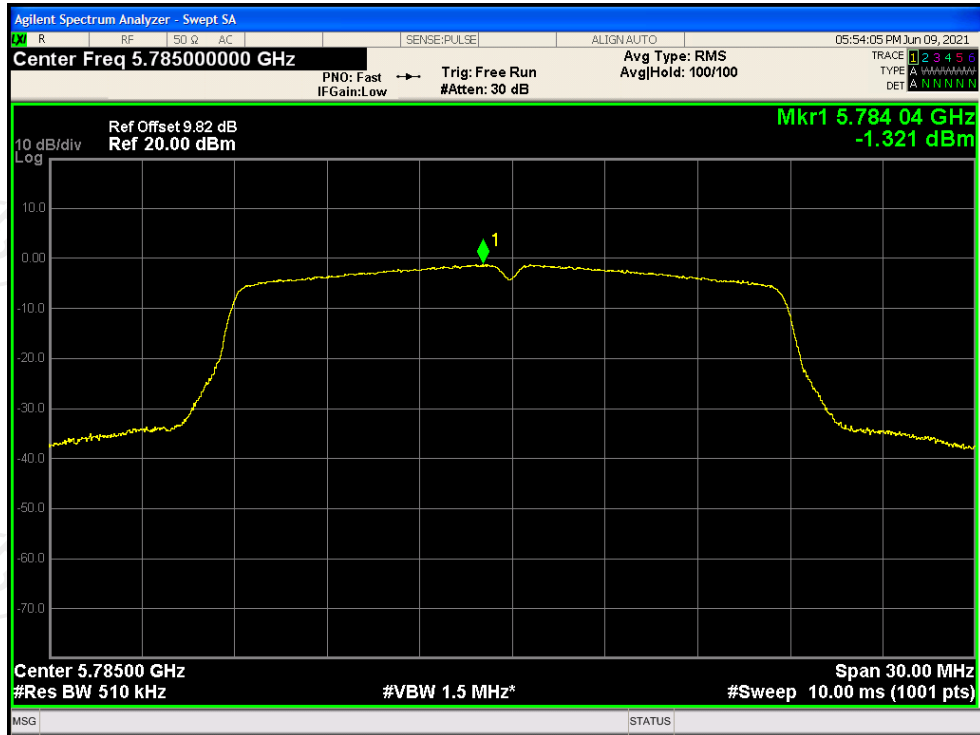


PSD NVNT ac20 5825MHz Ant0

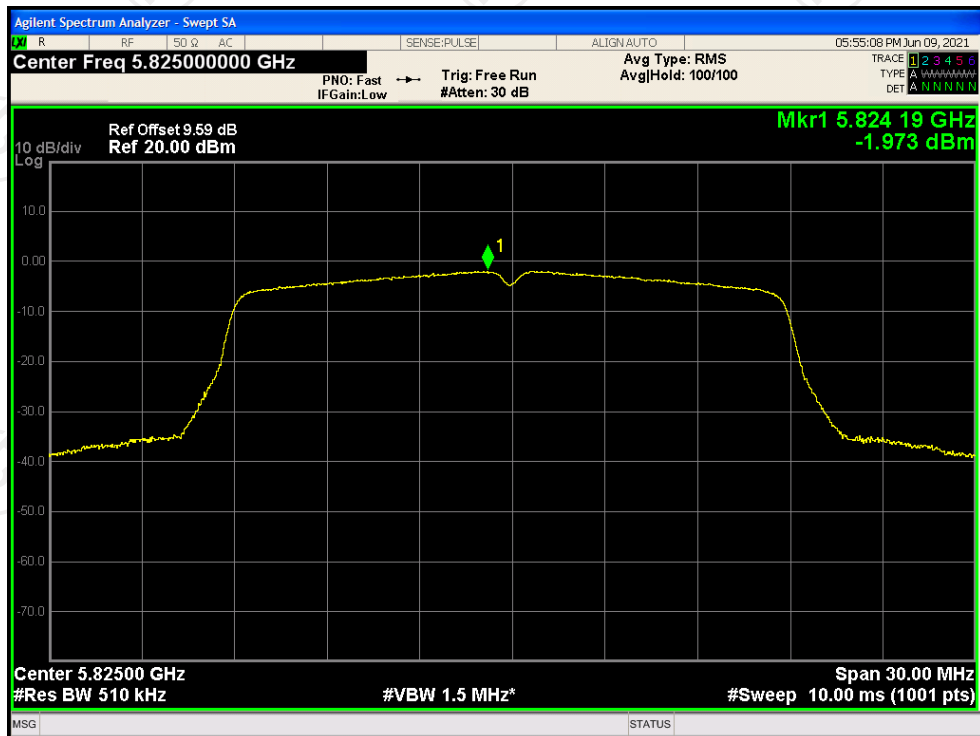


PSD NVNT ac40 5755MHz Ant0

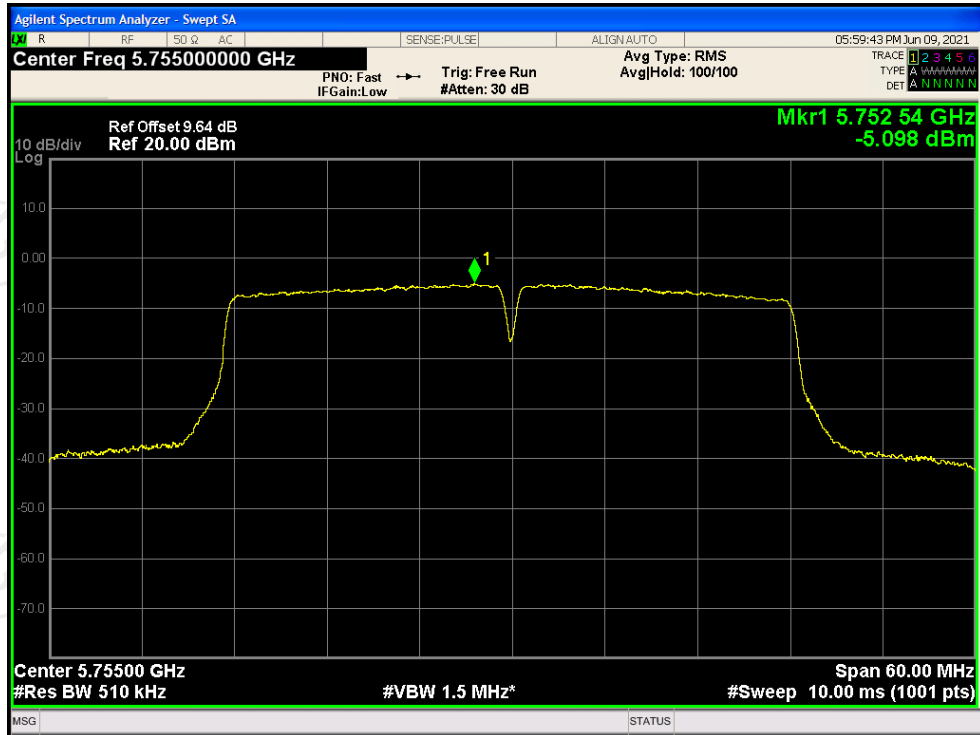


PSD NVNT ac40 5795MHz Ant0

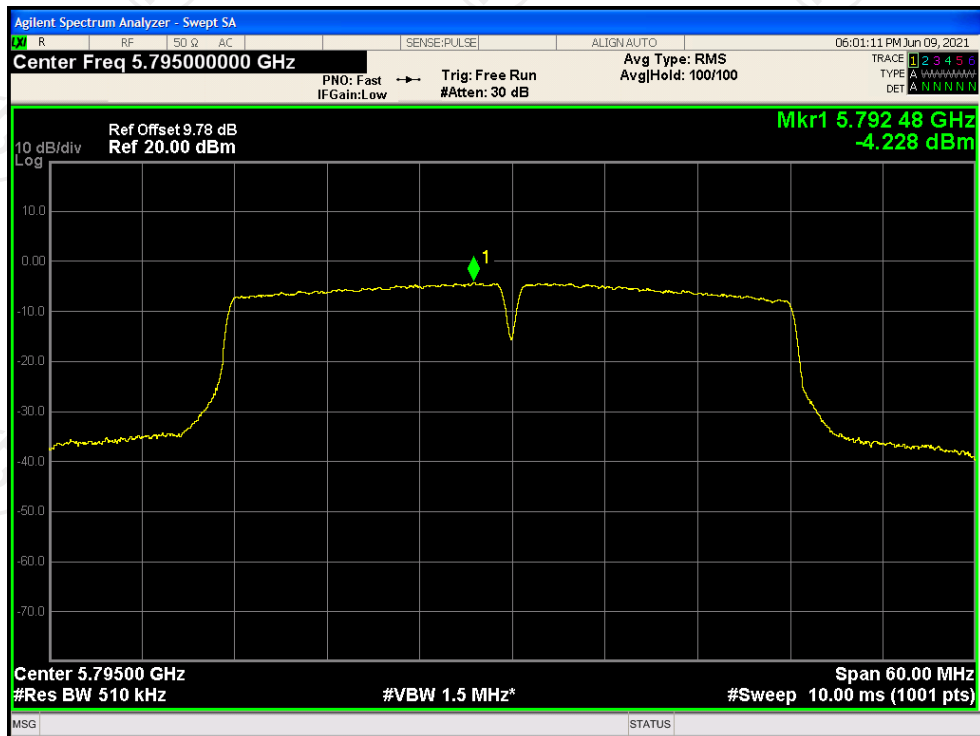


PSD NVNT ac80 5775MHz Ant0

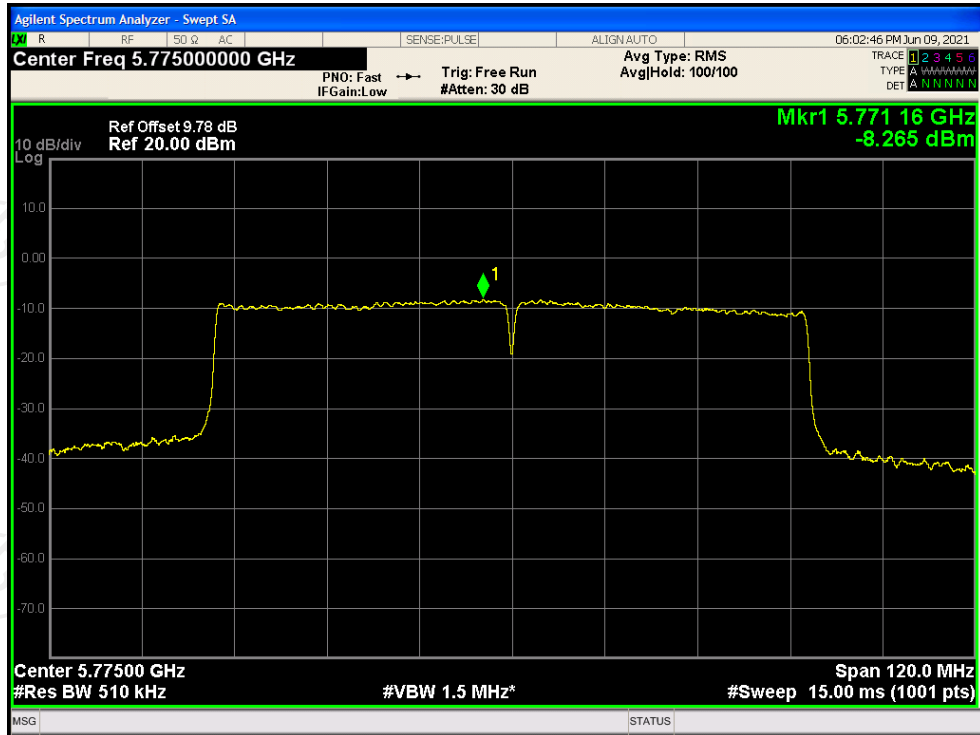


PSD NVNT n20 5745MHz Ant0

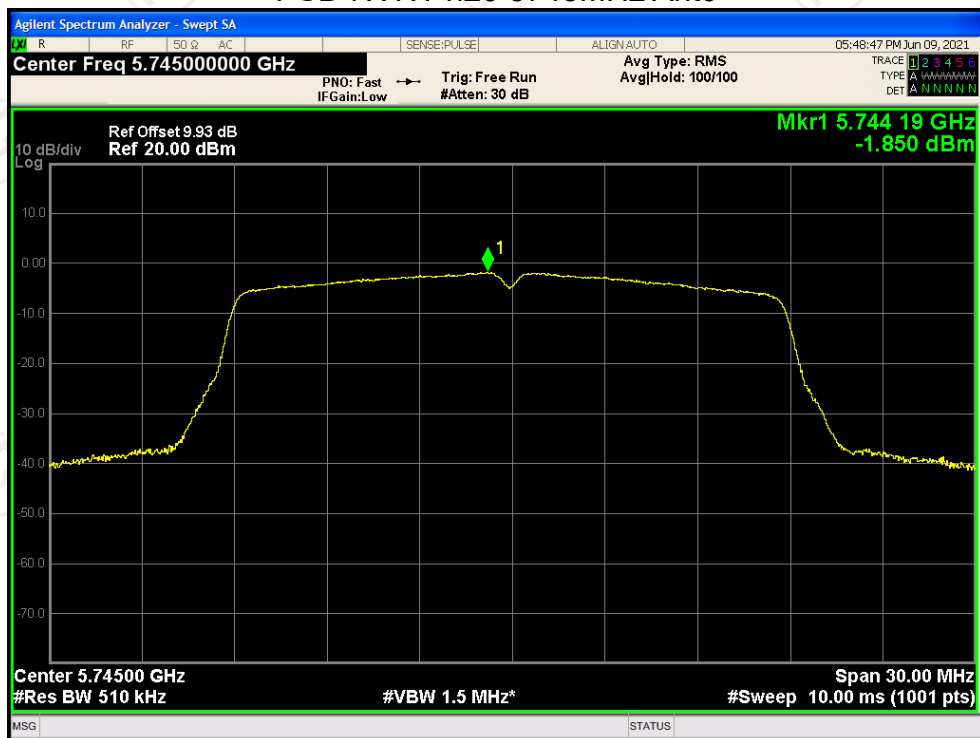


PSD NVNT n20 5785MHz Ant0

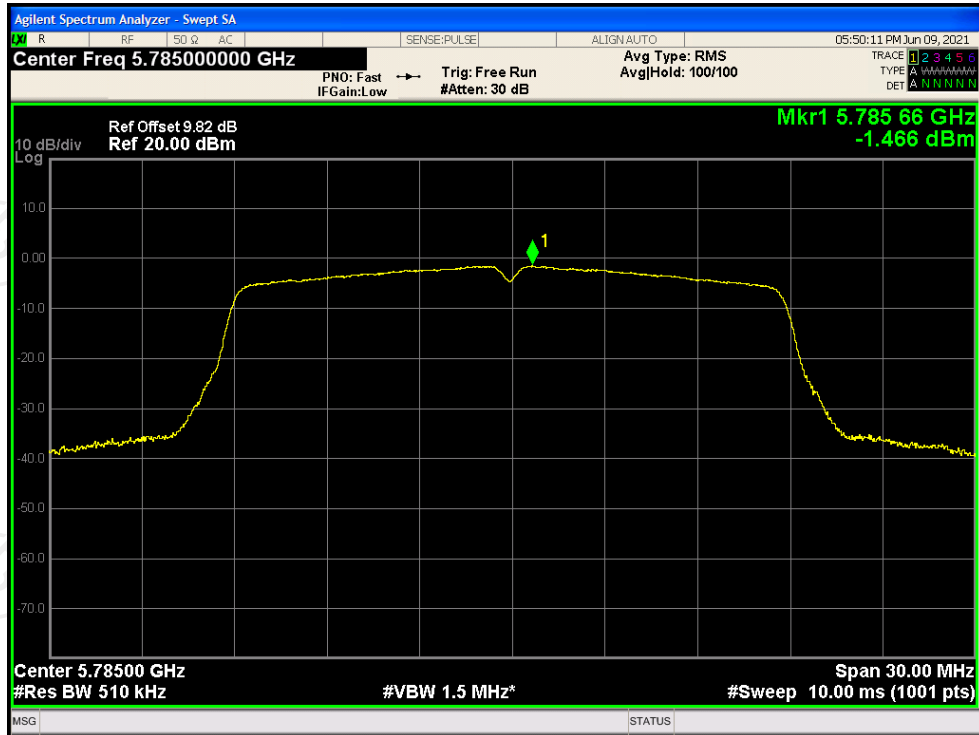


PSD NVNT n20 5825MHz Ant0

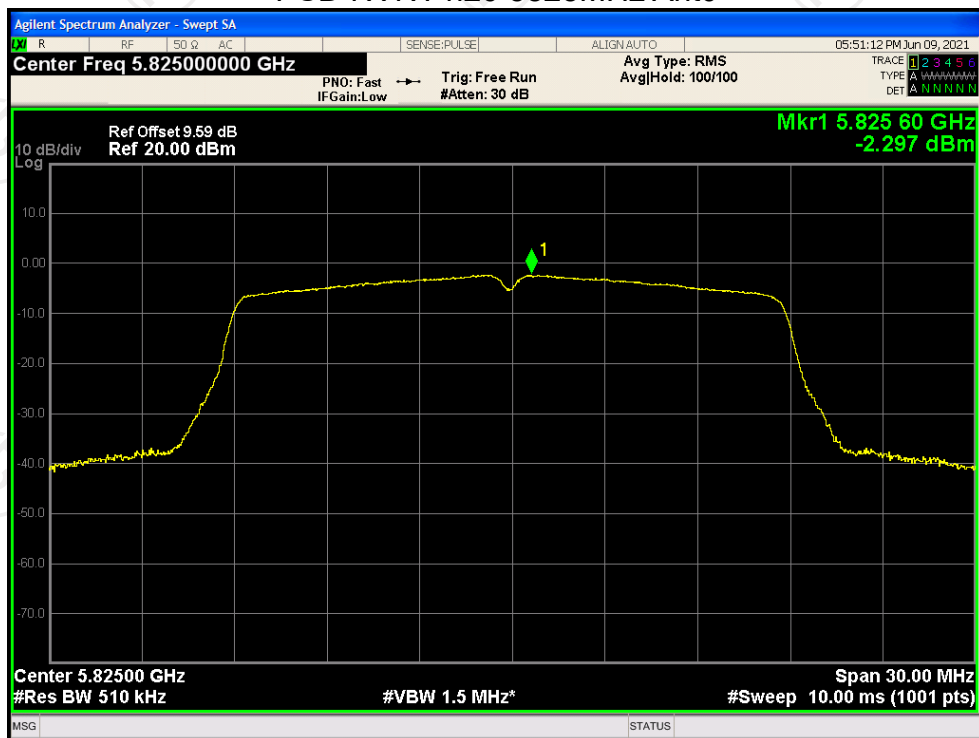

PSD NVNT n40 5755MHz Ant0

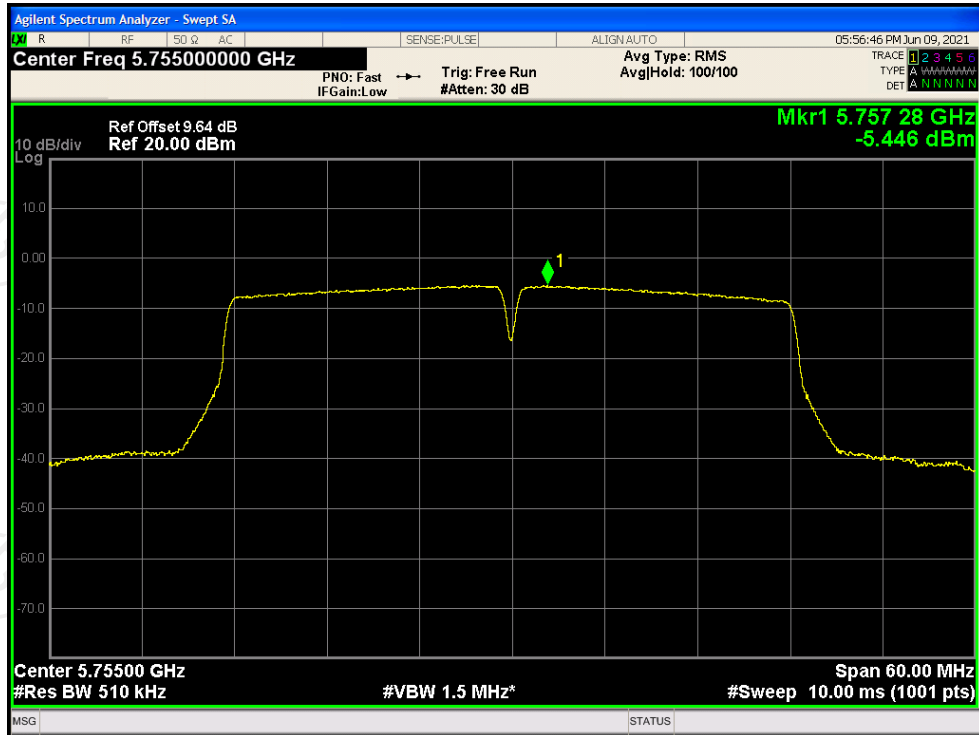

PSD NVNT n40 5795MHz Ant0

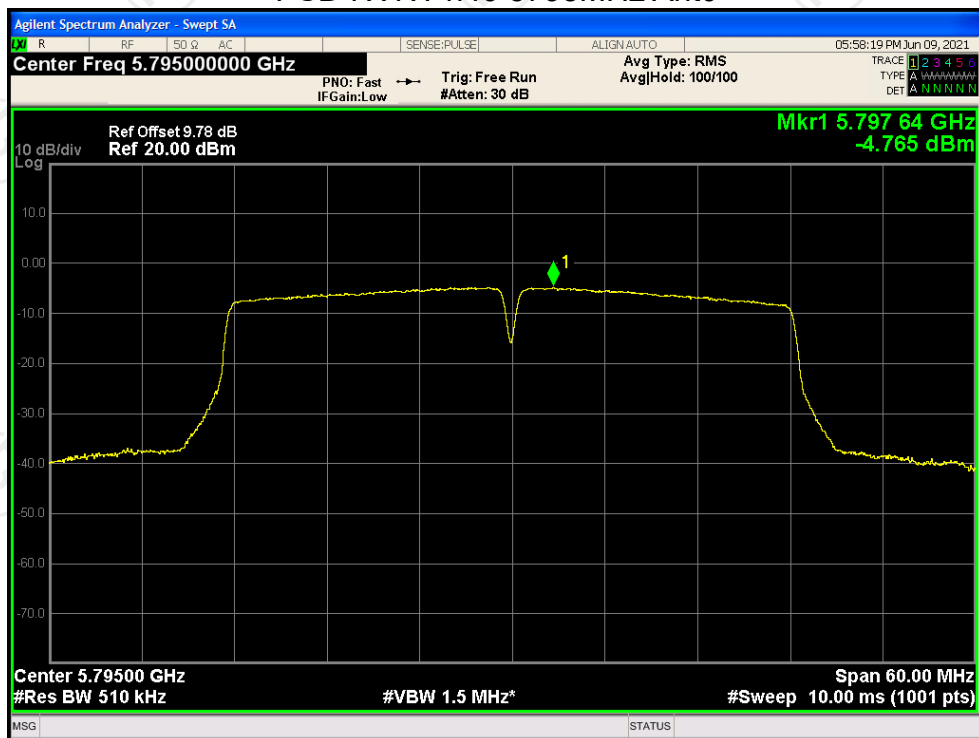


Antenna 1

Duty Cycle


Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)
NVNT	a	5180	Ant1	99.11	0
NVNT	a	5200	Ant1	99.12	0
NVNT	a	5240	Ant1	99.11	0
NVNT	ac20	5180	Ant1	98.13	0
NVNT	ac20	5200	Ant1	98.14	0
NVNT	ac20	5240	Ant1	98.15	0
NVNT	ac40	5190	Ant1	96.40	0.16
NVNT	ac40	5230	Ant1	96.41	0.16
NVNT	ac80	5210	Ant1	92.35	0.35
NVNT	n20	5180	Ant1	99.01	0
NVNT	n20	5200	Ant1	99.04	0
NVNT	n20	5240	Ant1	99.03	0
NVNT	n40	5190	Ant1	98.07	0
NVNT	n40	5230	Ant1	98.06	0
NVNT	a	5260	Ant1	99.12	0
NVNT	a	5280	Ant1	99.10	0
NVNT	a	5320	Ant1	99.12	0
NVNT	ac20	5260	Ant1	98.14	0
NVNT	ac20	5280	Ant1	98.14	0
NVNT	ac20	5320	Ant1	98.17	0
NVNT	ac40	5270	Ant1	95.81	0.19
NVNT	ac40	5310	Ant1	96.44	0.16
NVNT	ac80	5290	Ant1	91.90	0.37
NVNT	n20	5260	Ant1	99.01	0
NVNT	n20	5280	Ant1	99.06	0
NVNT	n20	5320	Ant1	99.03	0
NVNT	n40	5270	Ant1	98.10	0
NVNT	n40	5310	Ant1	98.08	0
NVNT	a	5500	Ant1	99.11	0
NVNT	a	5600	Ant1	99.13	0
NVNT	a	5700	Ant1	99.12	0
NVNT	ac20	5500	Ant1	98.12	0
NVNT	ac20	5600	Ant1	98.14	0
NVNT	ac20	5700	Ant1	98.14	0
NVNT	ac40	5510	Ant1	96.41	0.16
NVNT	ac40	5590	Ant1	96.44	0.16
NVNT	ac40	5670	Ant1	96.43	0.16
NVNT	ac80	5530	Ant1	92.15	0.36
NVNT	ac80	5610	Ant1	92.22	0.35
NVNT	n20	5500	Ant1	99.06	0
NVNT	n20	5600	Ant1	99.03	0
NVNT	n20	5700	Ant1	99.07	0
NVNT	n40	5510	Ant1	98.07	0
NVNT	n40	5590	Ant1	98.07	0

NVNT	n40	5670	Ant1	98.06	0
NVNT	a	5745	Ant1	99.12	0
NVNT	a	5785	Ant1	99.13	0
NVNT	a	5825	Ant1	99.10	0
NVNT	ac20	5745	Ant1	98.14	0
NVNT	ac20	5785	Ant1	98.15	0
NVNT	ac20	5825	Ant1	98.18	0
NVNT	ac40	5755	Ant1	96.44	0.16
NVNT	ac40	5795	Ant1	95.90	0.18
NVNT	ac80	5775	Ant1	92.11	0.36
NVNT	n20	5745	Ant1	99.01	0
NVNT	n20	5785	Ant1	99.06	0
NVNT	n20	5825	Ant1	99.04	0
NVNT	n40	5755	Ant1	98.08	0
NVNT	n40	5795	Ant1	98.07	0


Duty Cycle NVNT a 5180MHz Ant1

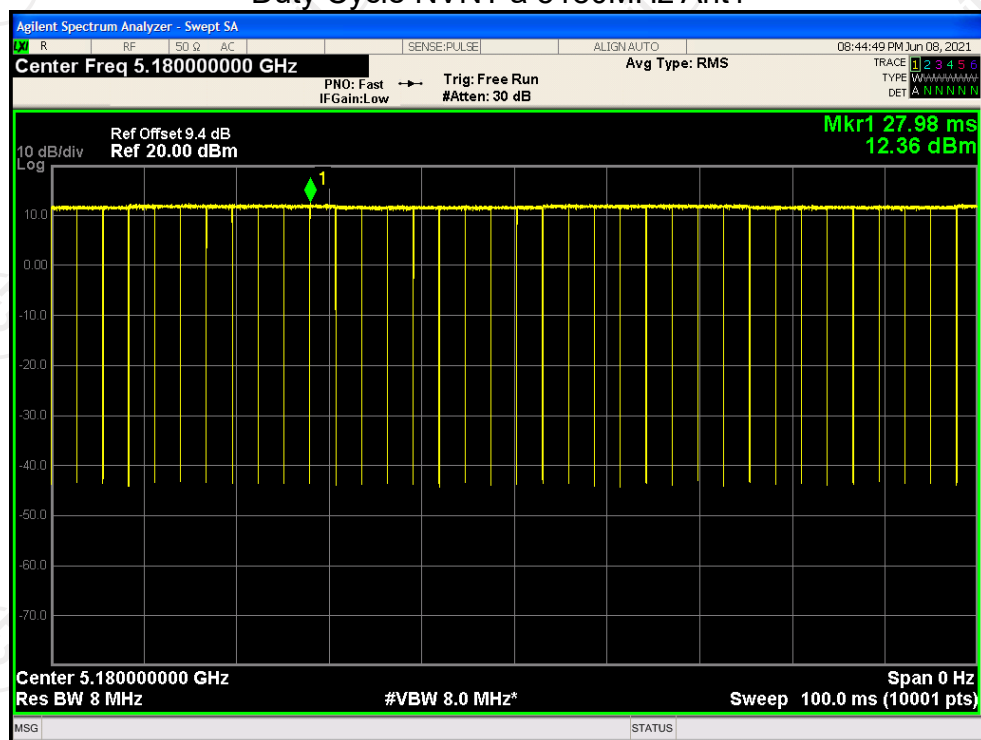


Duty Cycle NVNT a 5200MHz Ant1

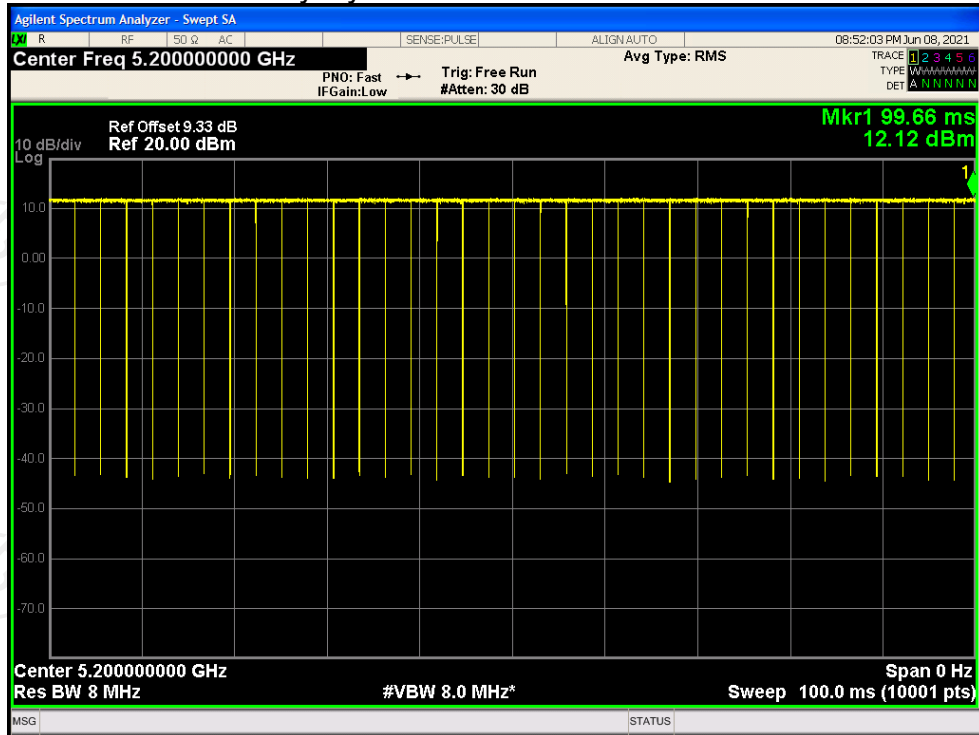


Duty Cycle NVNT a 5240MHz Ant1

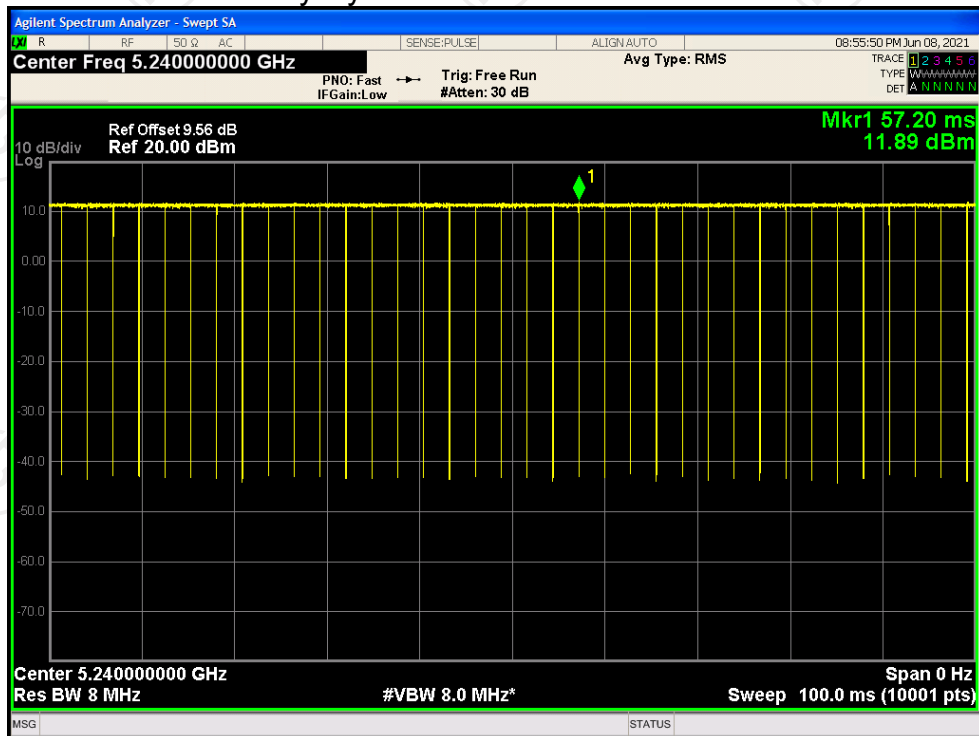


Duty Cycle NVNT ac20 5180MHz Ant1

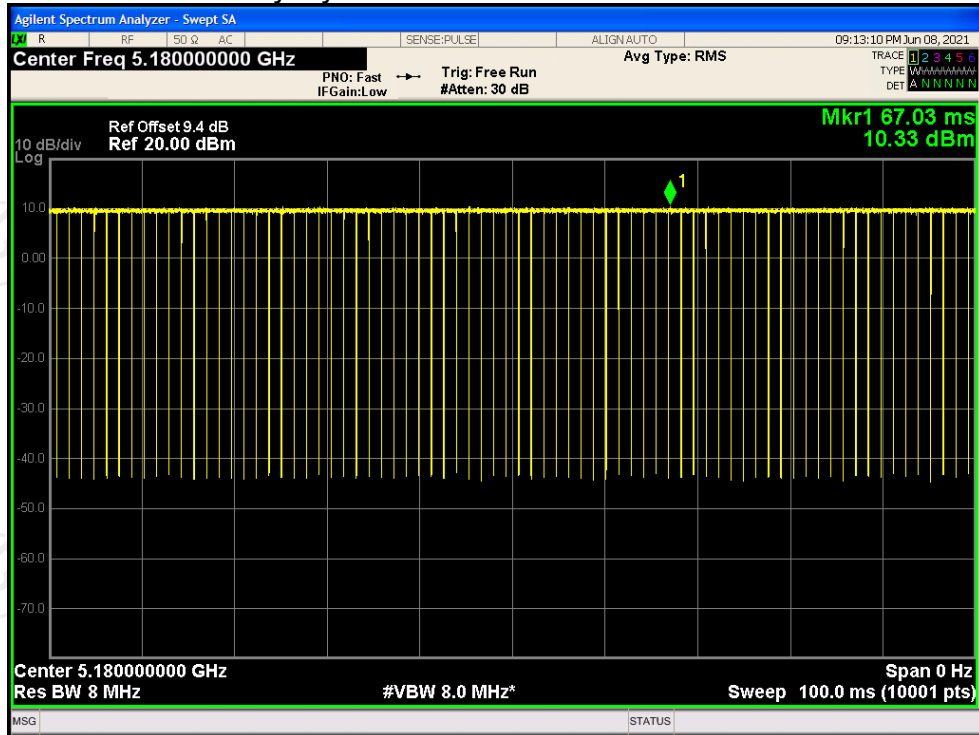


Duty Cycle NVNT ac20 5200MHz Ant1

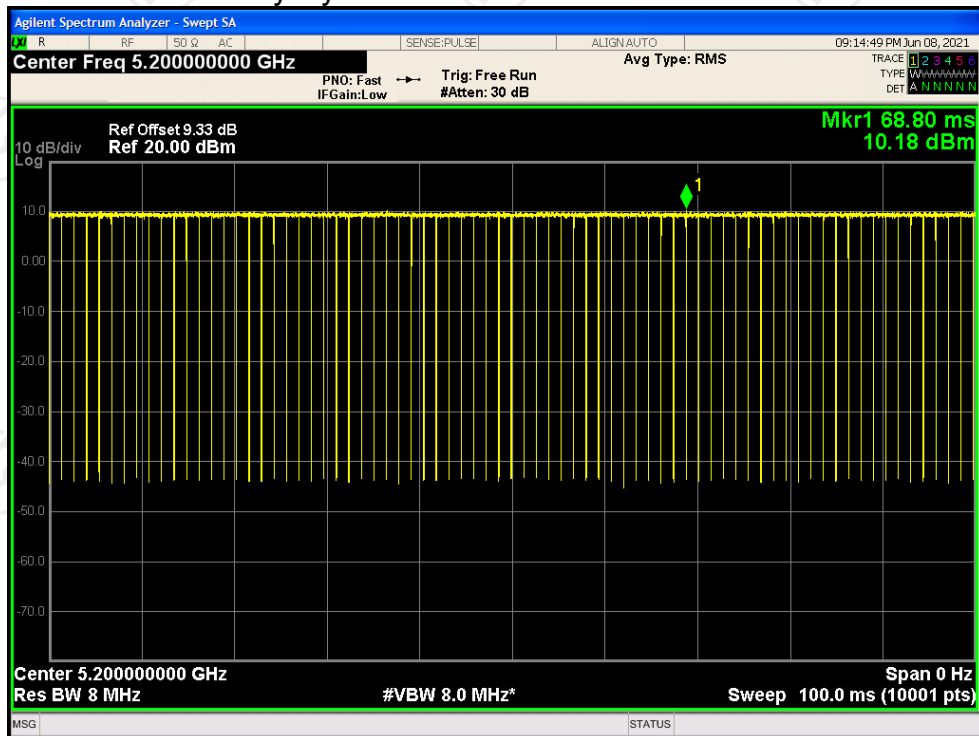


Duty Cycle NVNT ac20 5240MHz Ant1

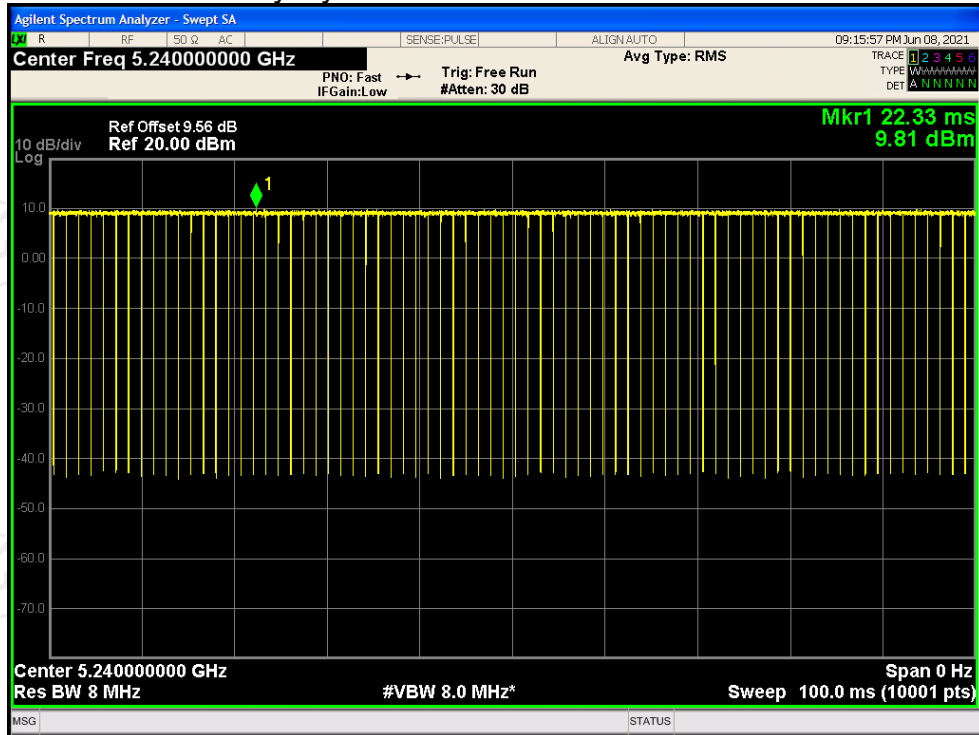


Duty Cycle NVNT ac40 5190MHz Ant1

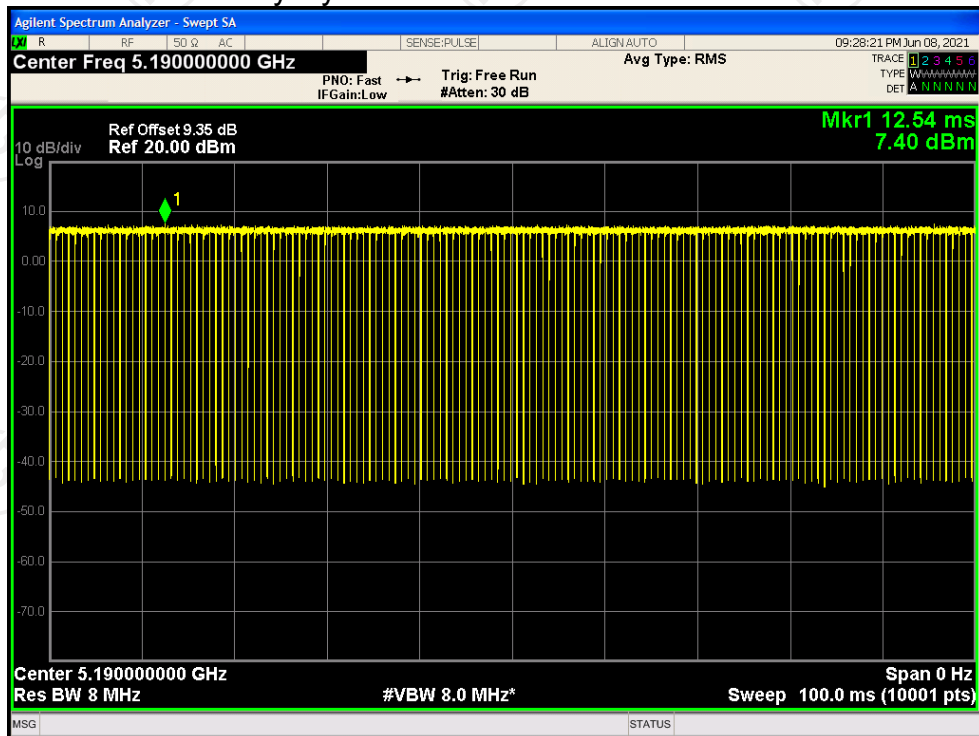


Duty Cycle NVNT ac40 5230MHz Ant1

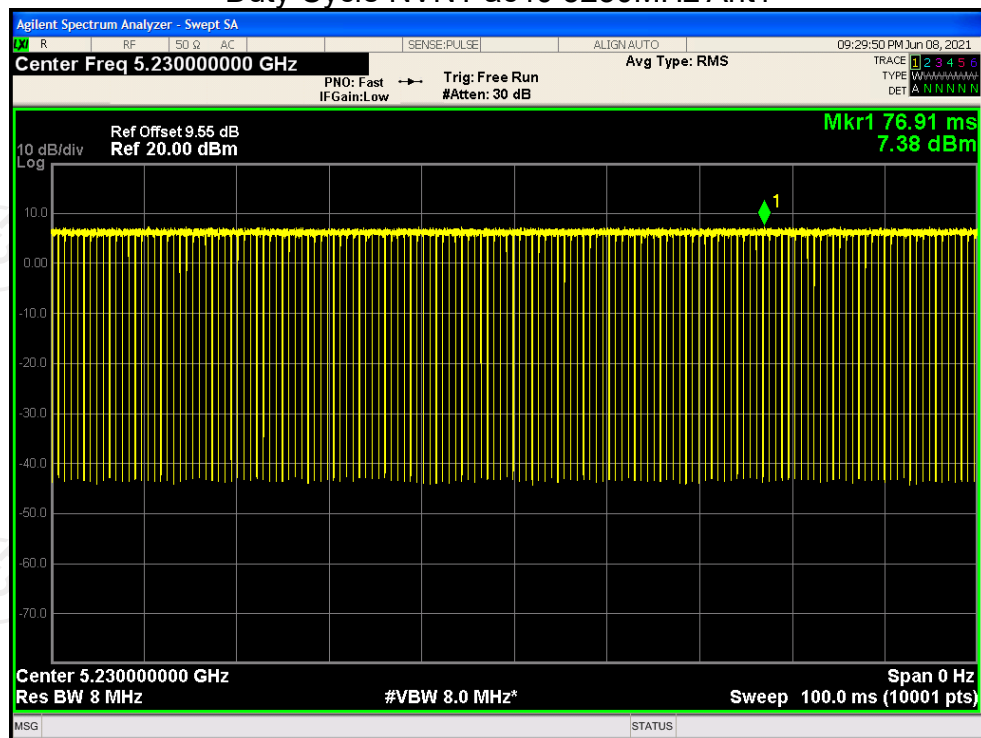


Duty Cycle NVNT ac80 5210MHz Ant1

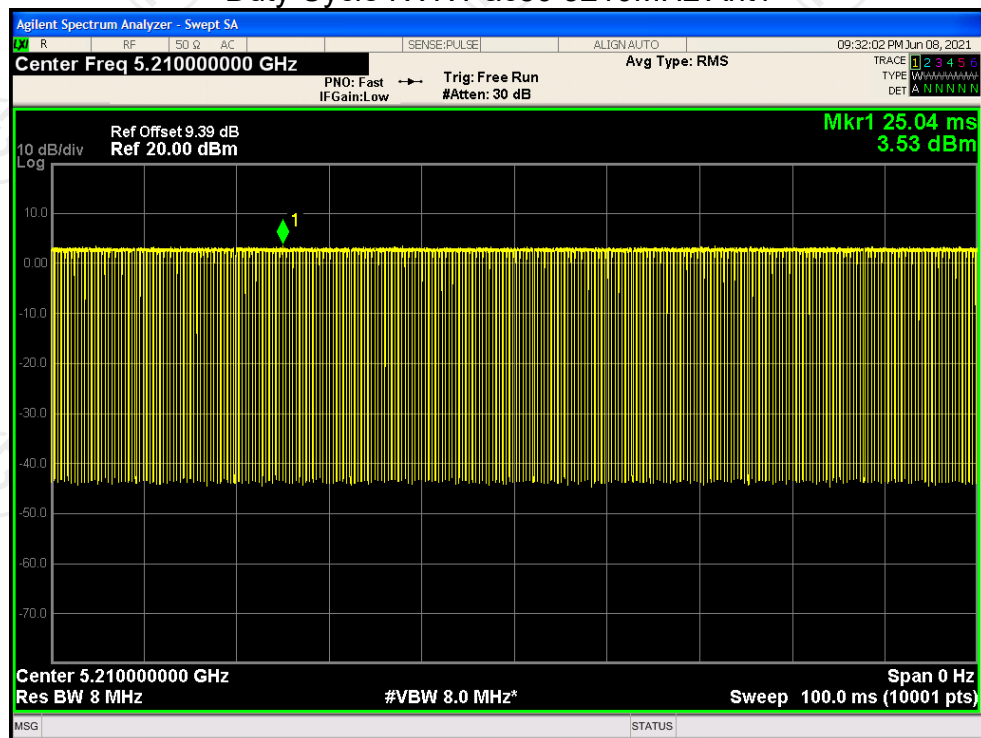


Duty Cycle NVNT n20 5180MHz Ant1

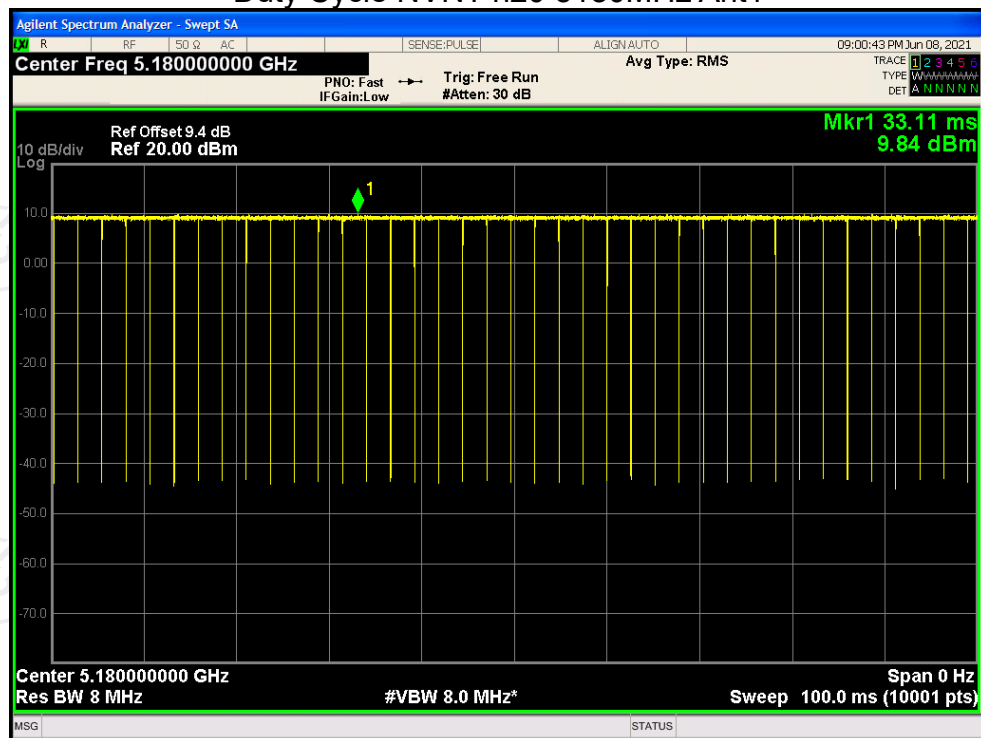


Duty Cycle NVNT n20 5200MHz Ant1

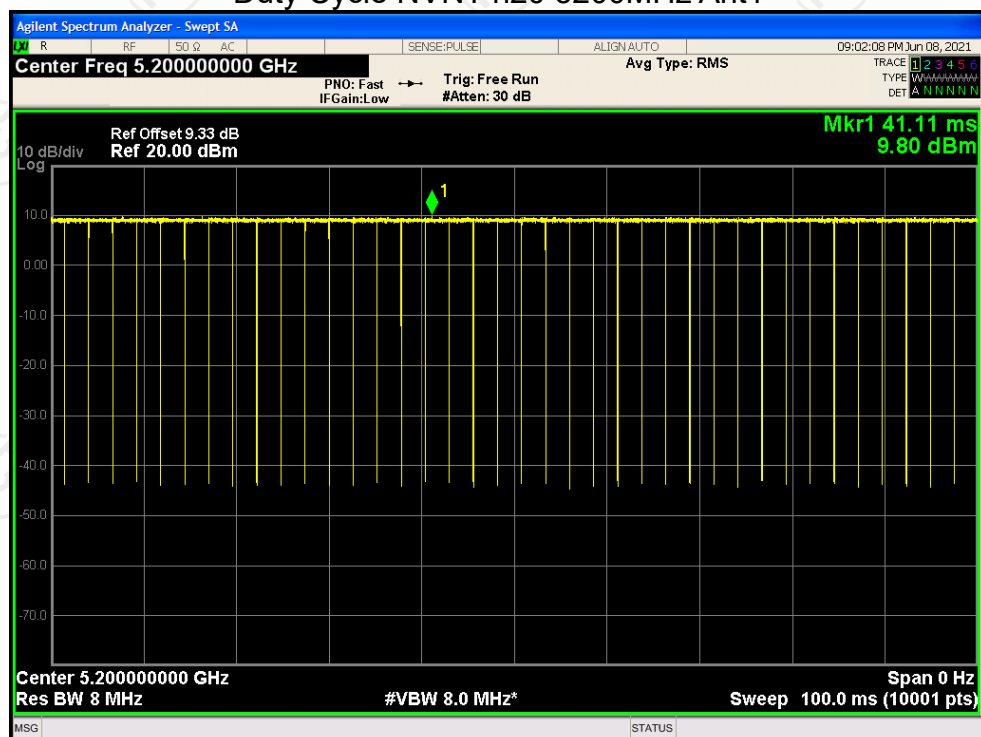


Duty Cycle NVNT n20 5240MHz Ant1

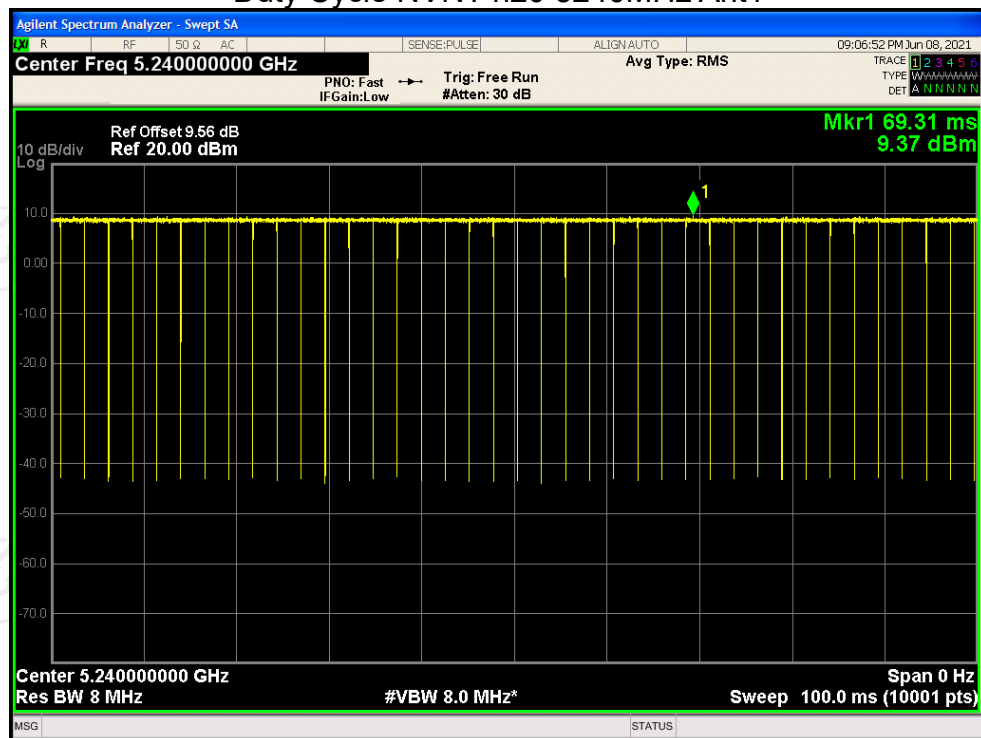


Duty Cycle NVNT n40 5190MHz Ant1

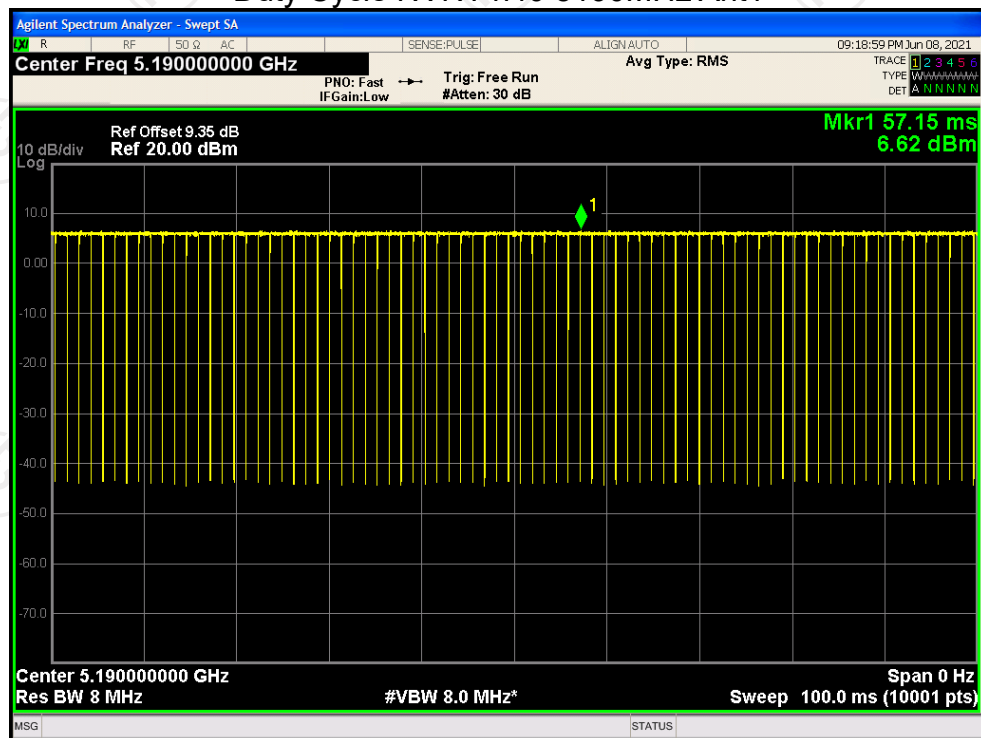


Duty Cycle NVNT n40 5230MHz Ant1

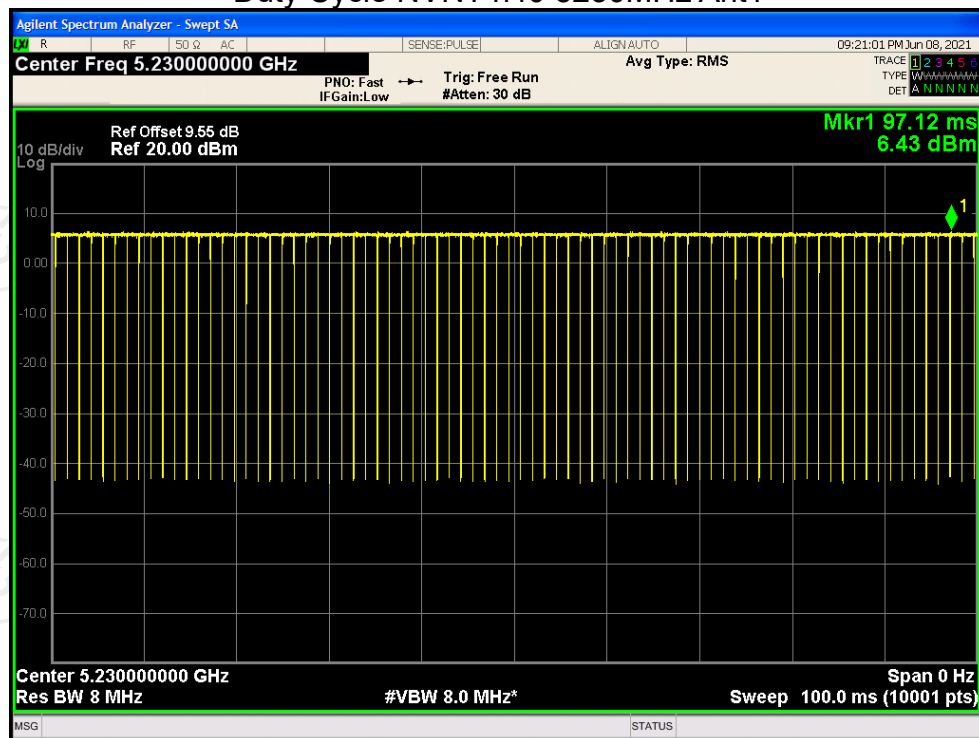


Duty Cycle NVNT a 5260MHz Ant1

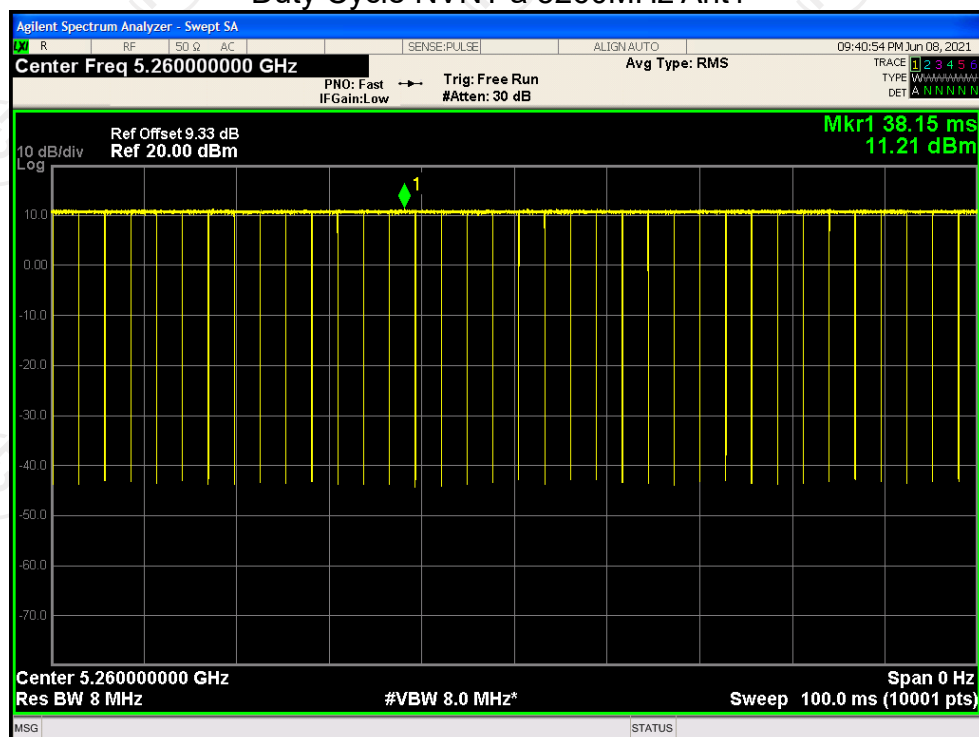


Duty Cycle NVNT a 5280MHz Ant1

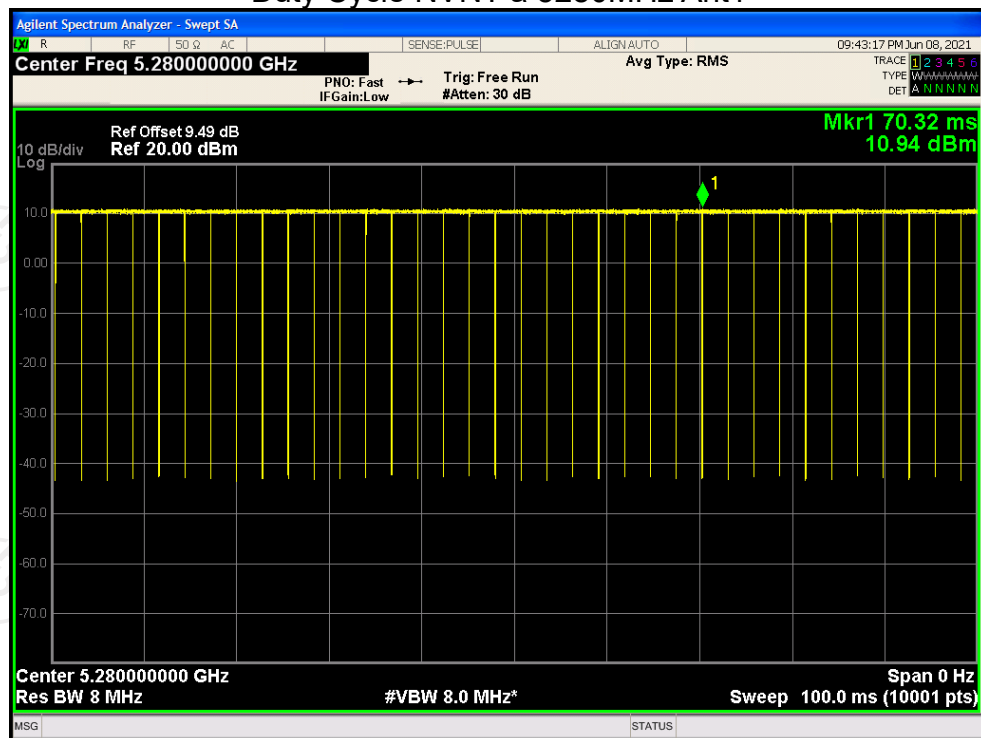


Duty Cycle NVNT a 5320MHz Ant1

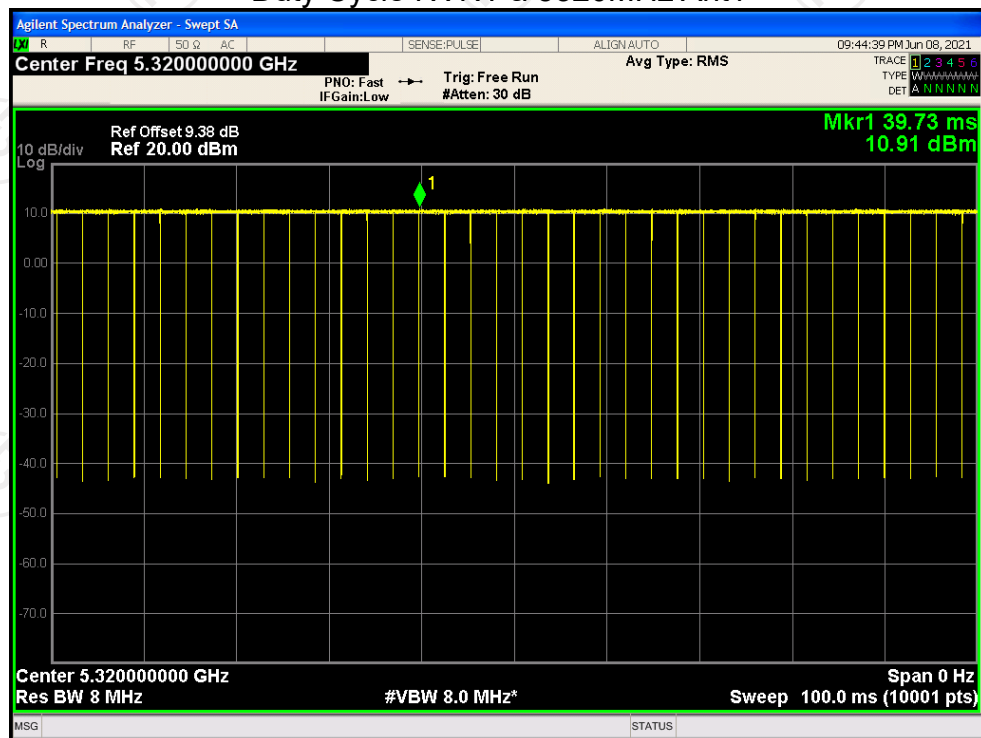


Duty Cycle NVNT ac20 5260MHz Ant1

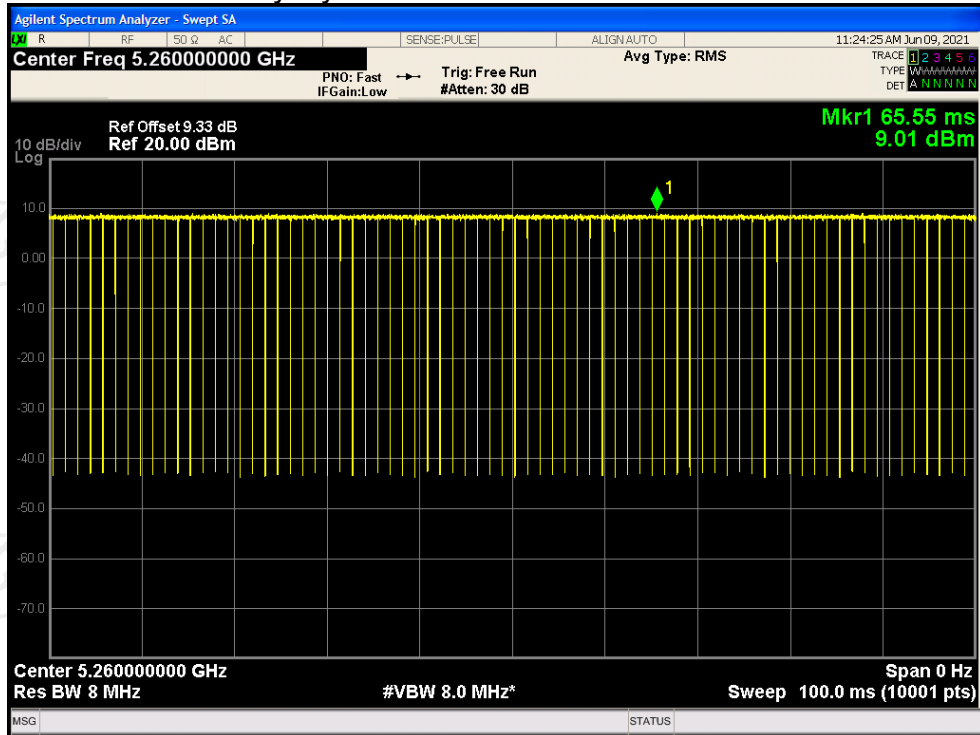

Duty Cycle NVNT ac20 5280MHz Ant1

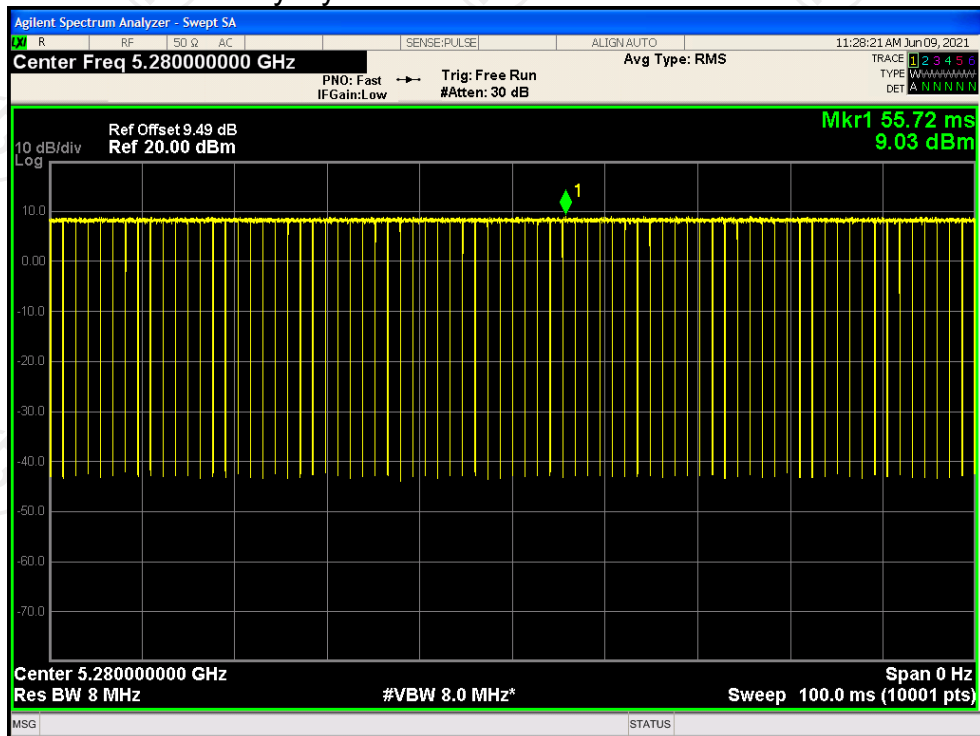

Duty Cycle NVNT ac20 5320MHz Ant1

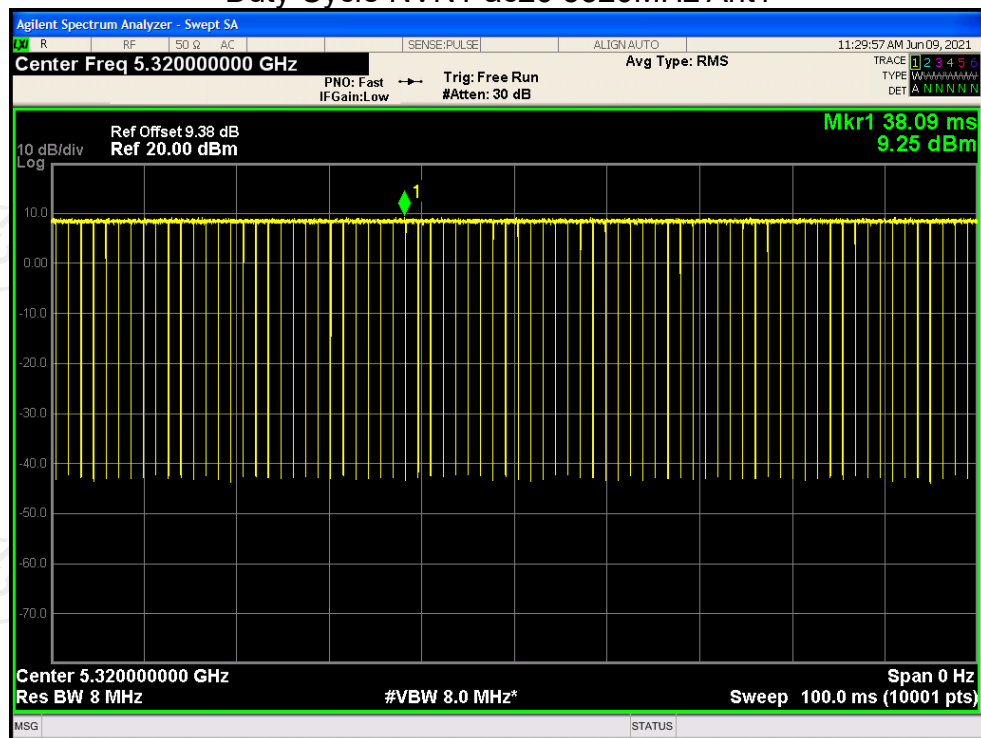

Duty Cycle NVNT ac40 5270MHz Ant1

