



Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com


Appendix G: Bandedge

Condition	Antenna	Modulation	TX Mode	Ref_level(dBm)	Bandedge MAX.Value	Limit	Result
NVNT	ANT1	1-DH5	2402.00	-0.974	-50.132	-20.974	Pass
NVNT	ANT1	1-DH5	Hopping_LCH	0.402	-62.342	-19.598	Pass
NVNT	ANT1	1-DH5	2480.00	1.905	-55.604	-18.095	Pass
NVNT	ANT1	1-DH5	Hopping_HCH	1.910	-55.617	-18.090	Pass
NVNT	ANT1	2-DH5	2402.00	0.874	-42.848	-19.126	Pass
NVNT	ANT1	2-DH5	Hopping_LCH	1.585	-49.681	-18.415	Pass
NVNT	ANT1	2-DH5	2480.00	2.134	-54.442	-17.866	Pass
NVNT	ANT1	2-DH5	Hopping_HCH	1.673	-55.495	-18.327	Pass
NVNT	ANT1	3-DH5	2402.00	0.872	-43.187	-19.128	Pass
NVNT	ANT1	3-DH5	Hopping_LCH	-0.871	-65.685	-20.871	Pass
NVNT	ANT1	3-DH5	2480.00	2.335	-52.747	-17.665	Pass
NVNT	ANT1	3-DH5	Hopping_HCH	2.159	-54.173	-17.841	Pass


1_Reference_Level_NVNT_ANT1_1-DH5_2402_00




2_Bandedge_NVNT_ANT1_1-DH5_2402_00

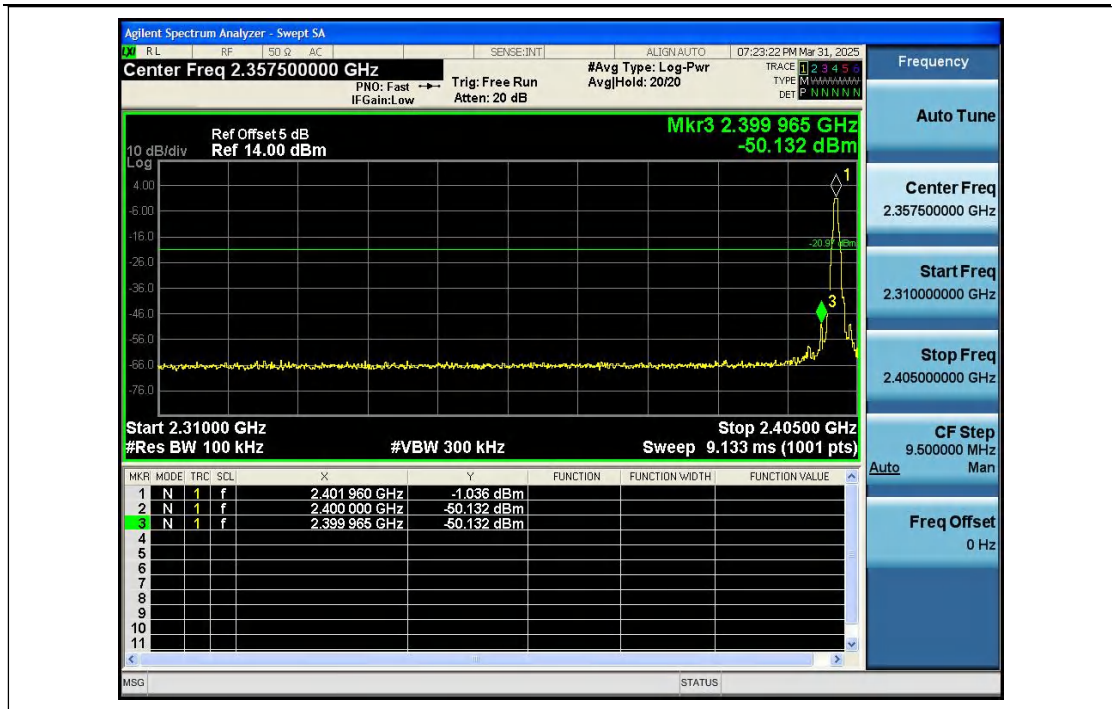


1_Reference_Level_Hopping_NVNT_ANT1_1-DH5_Hopping

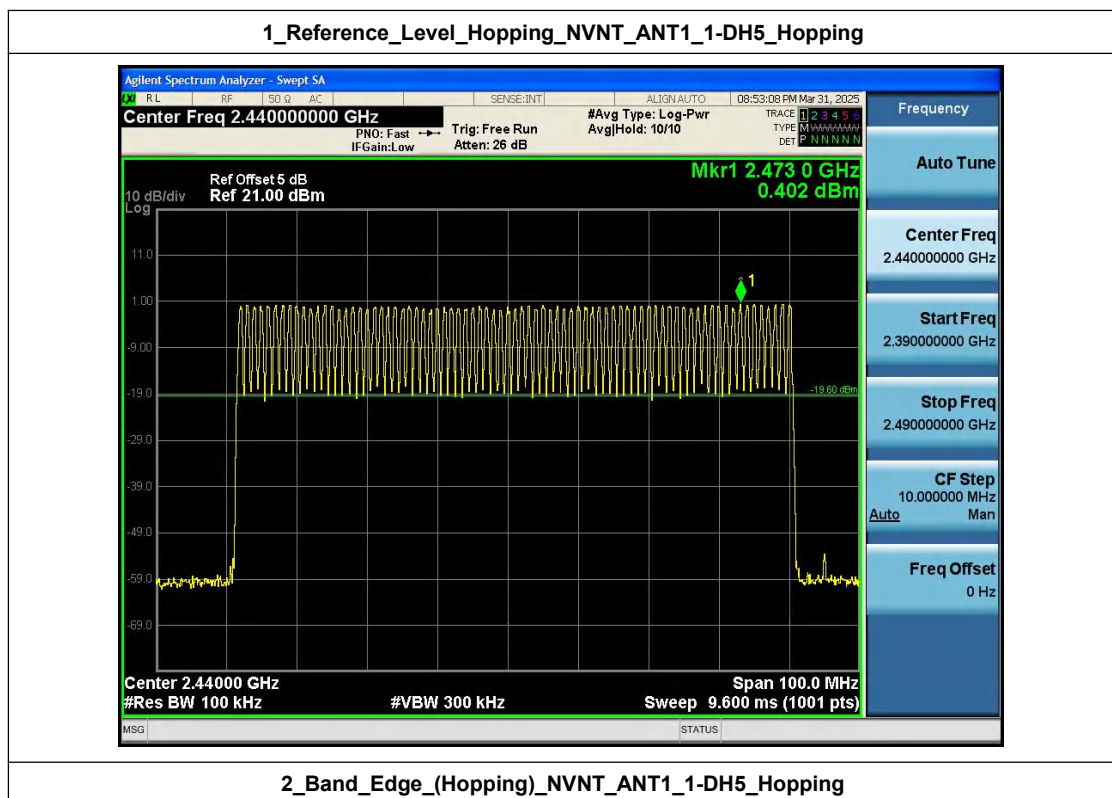


2_Band_Edge_(Hopping)_NVNT_ANT1_1-DH5_Hopping

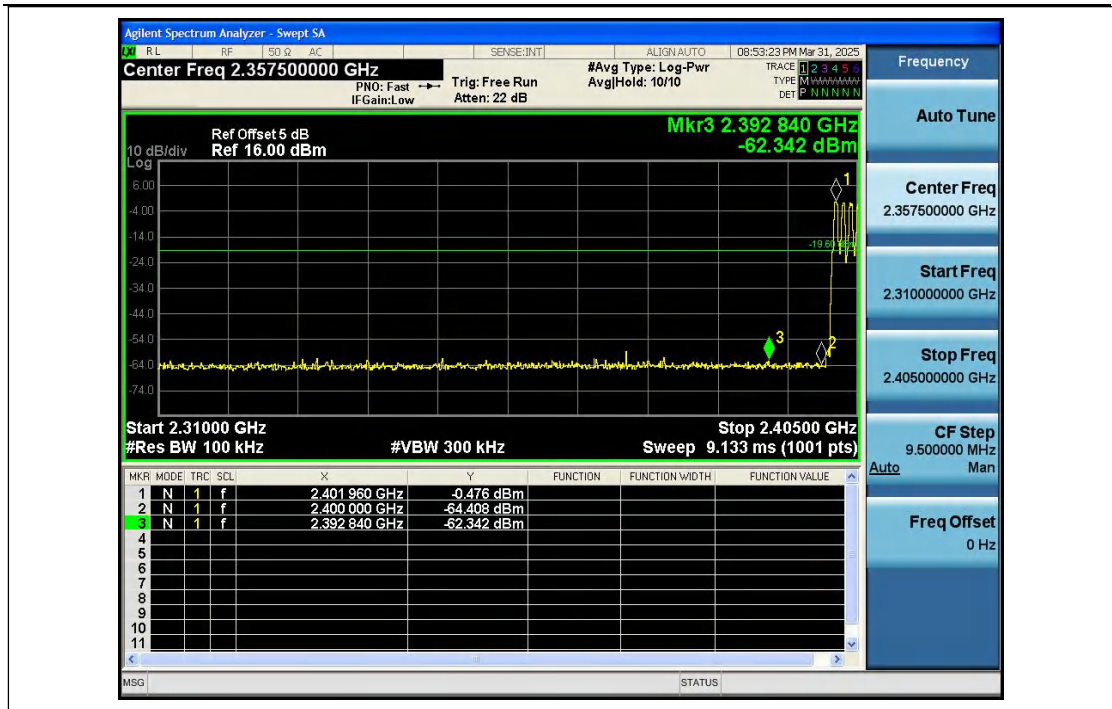


1_Reference_Level_NVNT_ANT1_1-DH5_2480_00

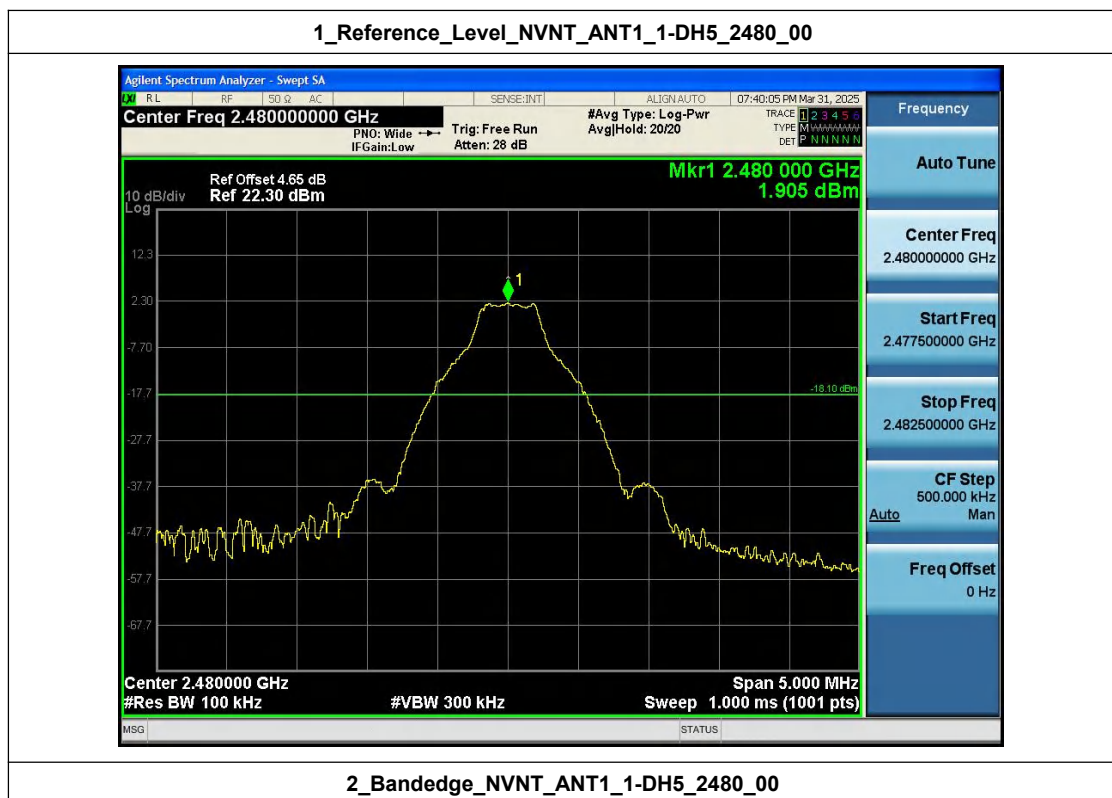


2_Bandedge_NVNT_ANT1_1-DH5_2480_00

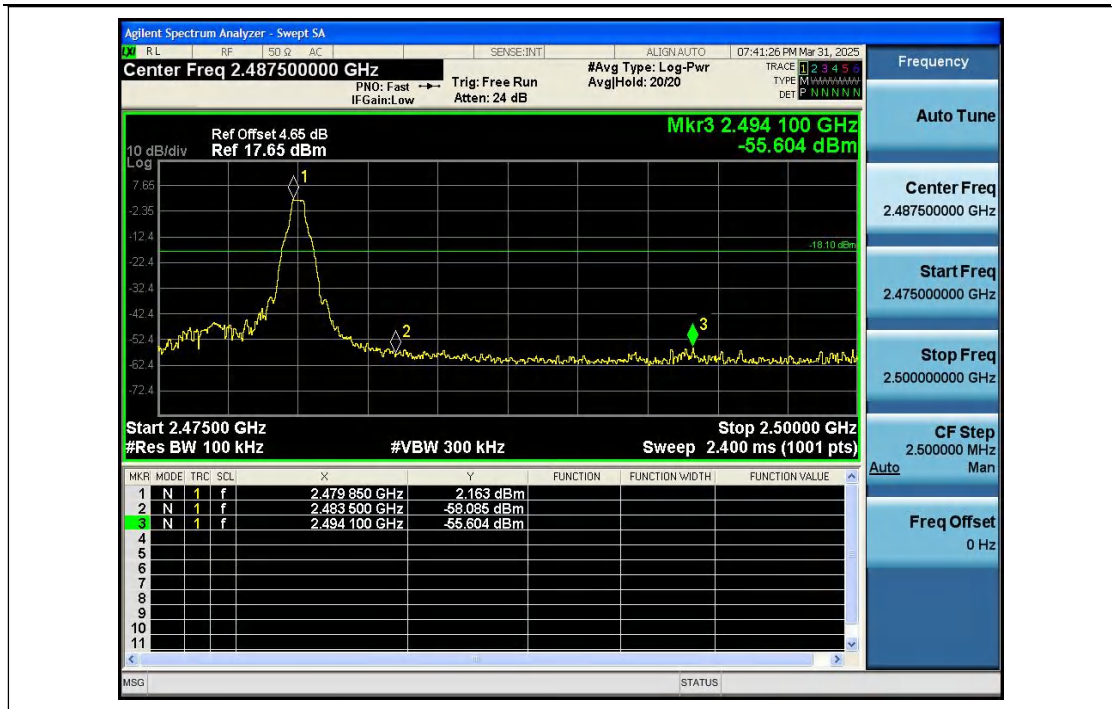


1_Reference_Level_Hopping_NVNT_ANT1_1-DH5_Hopping

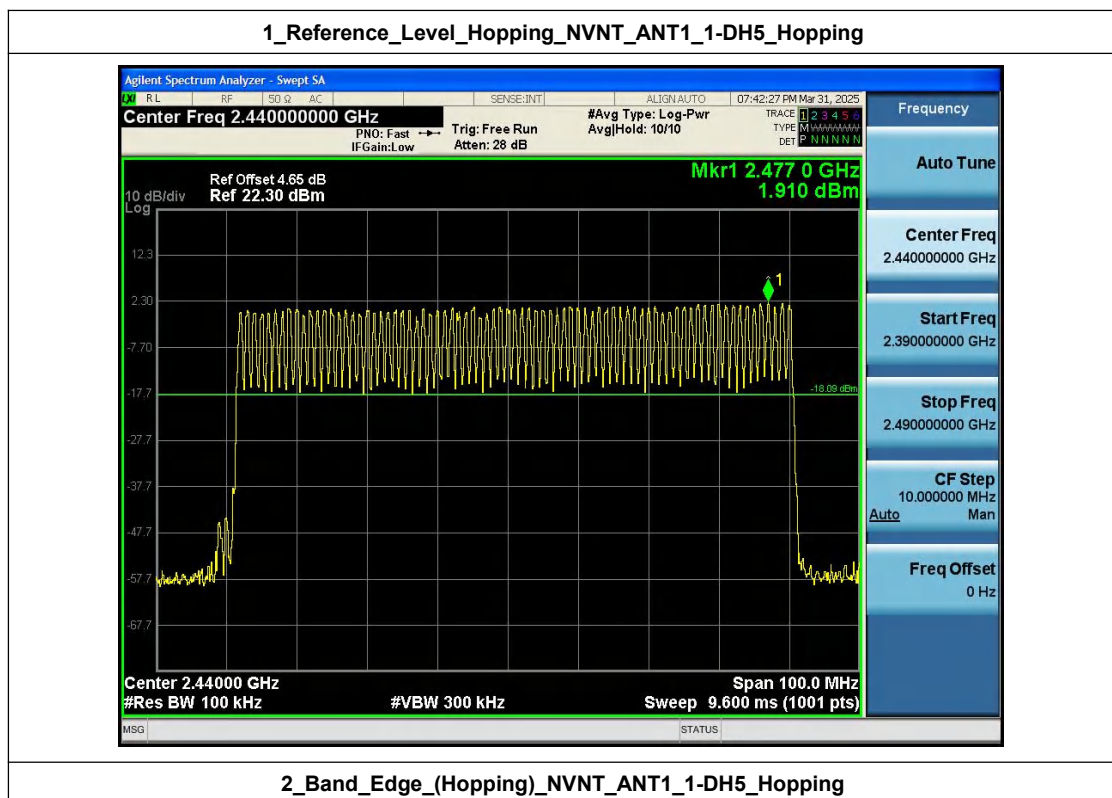

2_Band_Edge_(Hopping)_NVNT_ANT1_1-DH5_Hopping

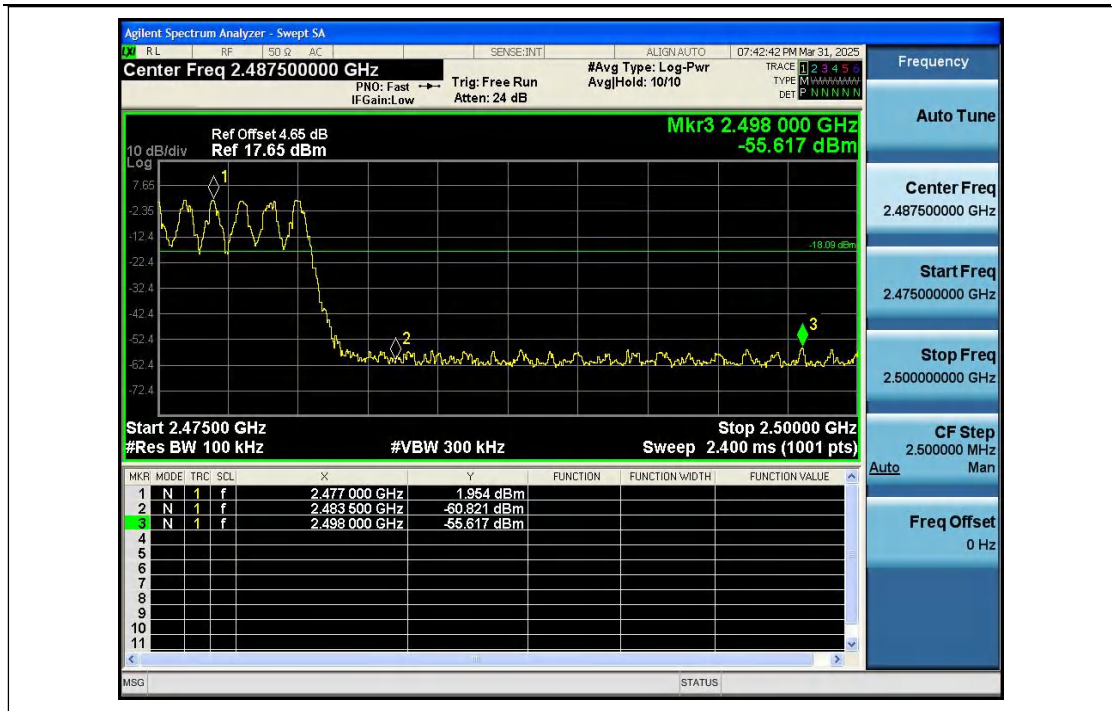

1_Reference_Level_NVNT_ANT1_2-DH5_2402_00

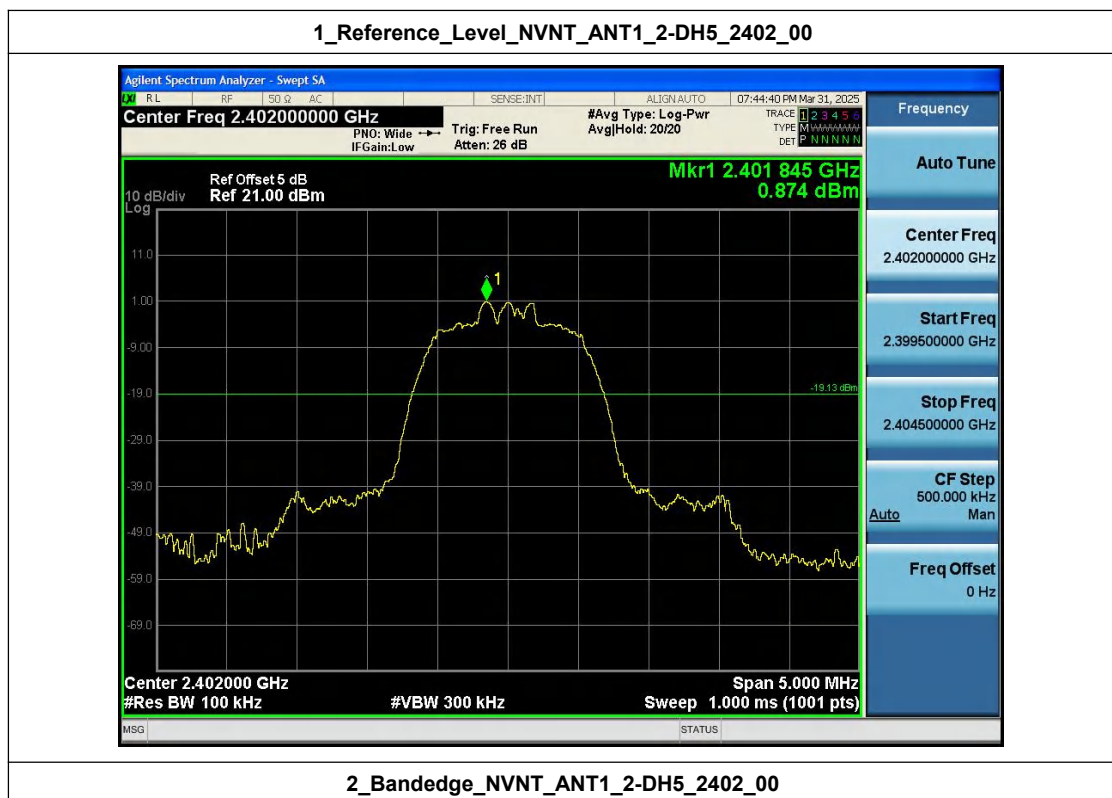


2_Bandedge_NVNT_ANT1_2-DH5_2402_00

Shenzhen Anbotek Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com




Hotline
400-003-0500
www.anbotek.com

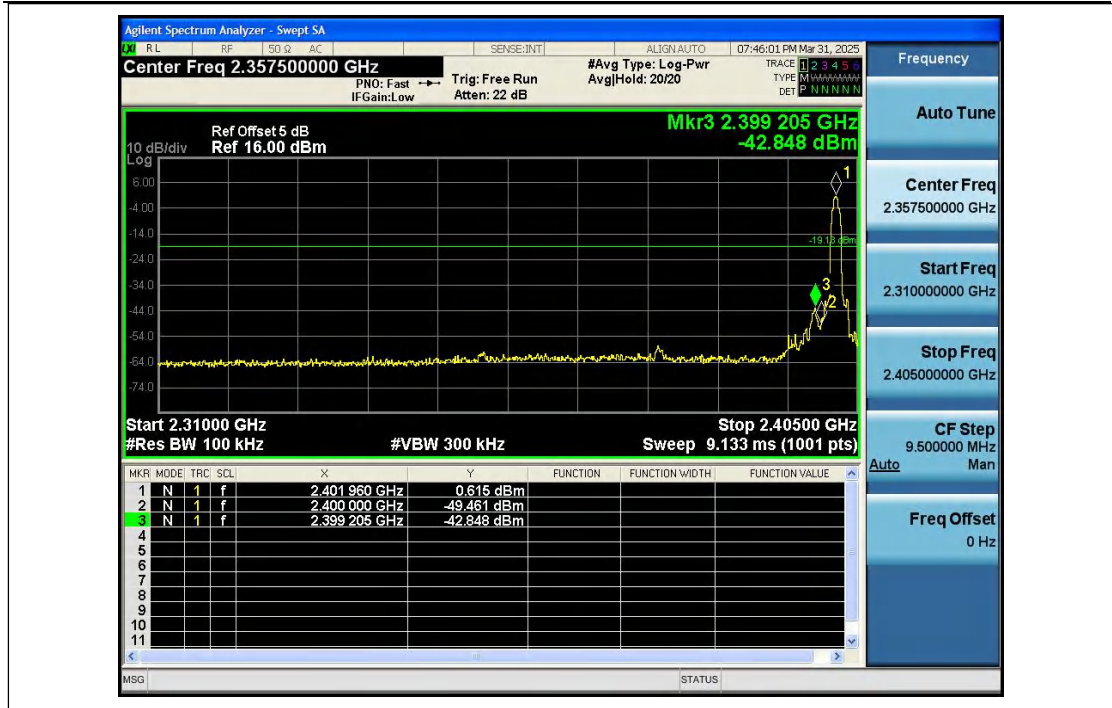


1_Reference_Level_Hopping_NVNT_ANT1_2-DH5_Hopping

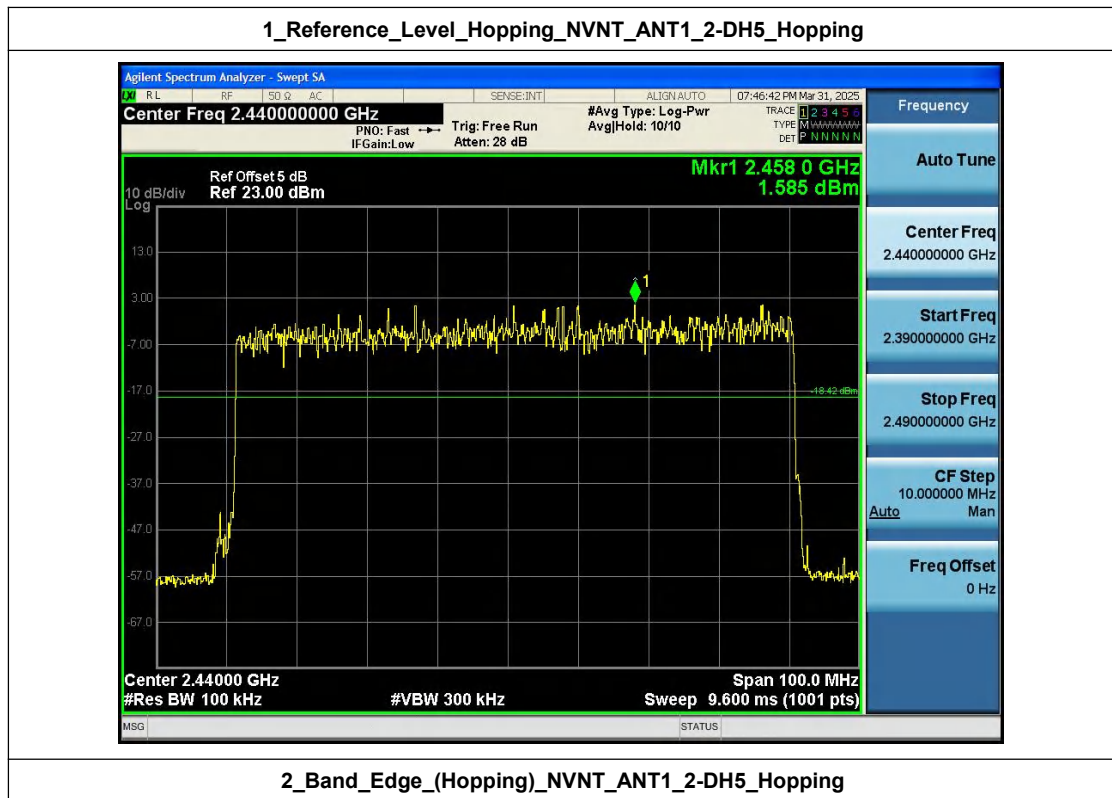

2_Band_Edge_(Hopping)_NVNT_ANT1_2-DH5_Hopping

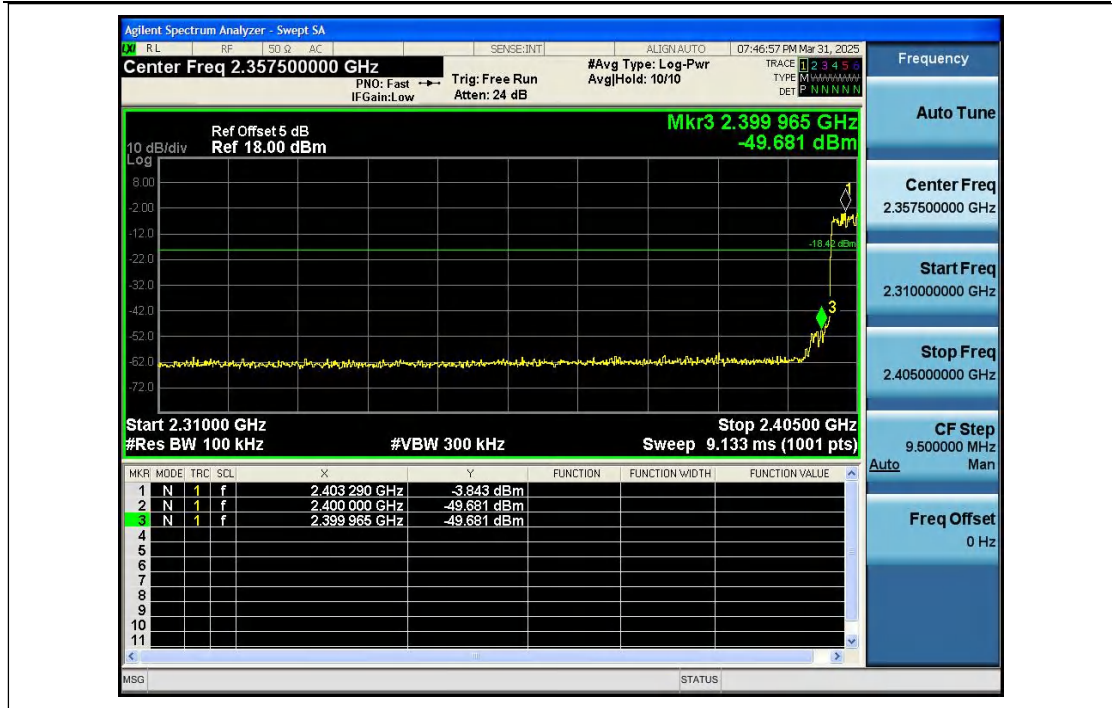


1_Reference_Level_NVNT_ANT1_2-DH5_2480_00

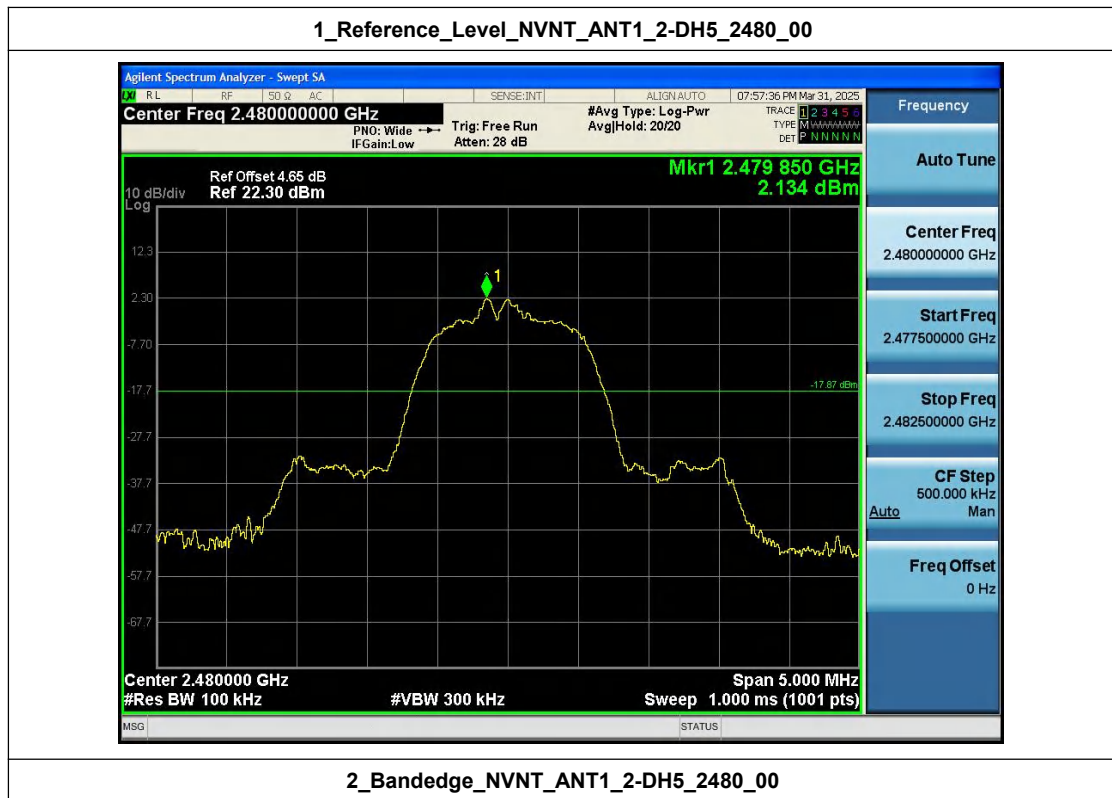


2_Bandedge_NVNT_ANT1_2-DH5_2480_00




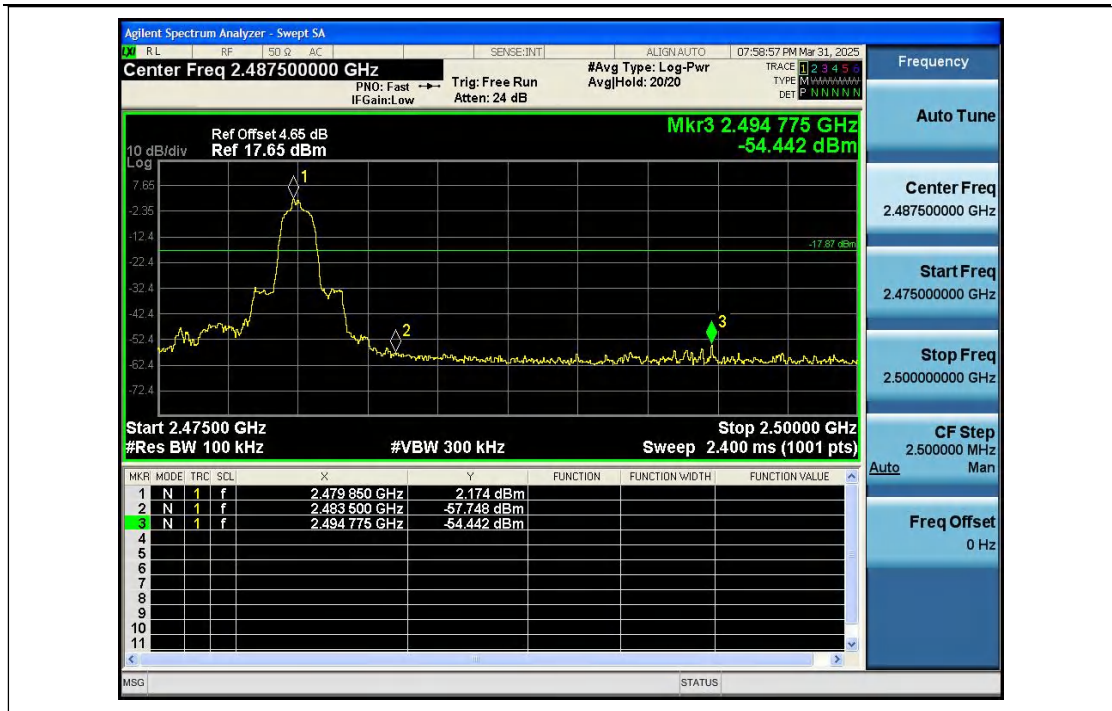


1_Reference_Level_Hopping_NVNT_ANT1_2-DH5_Hopping

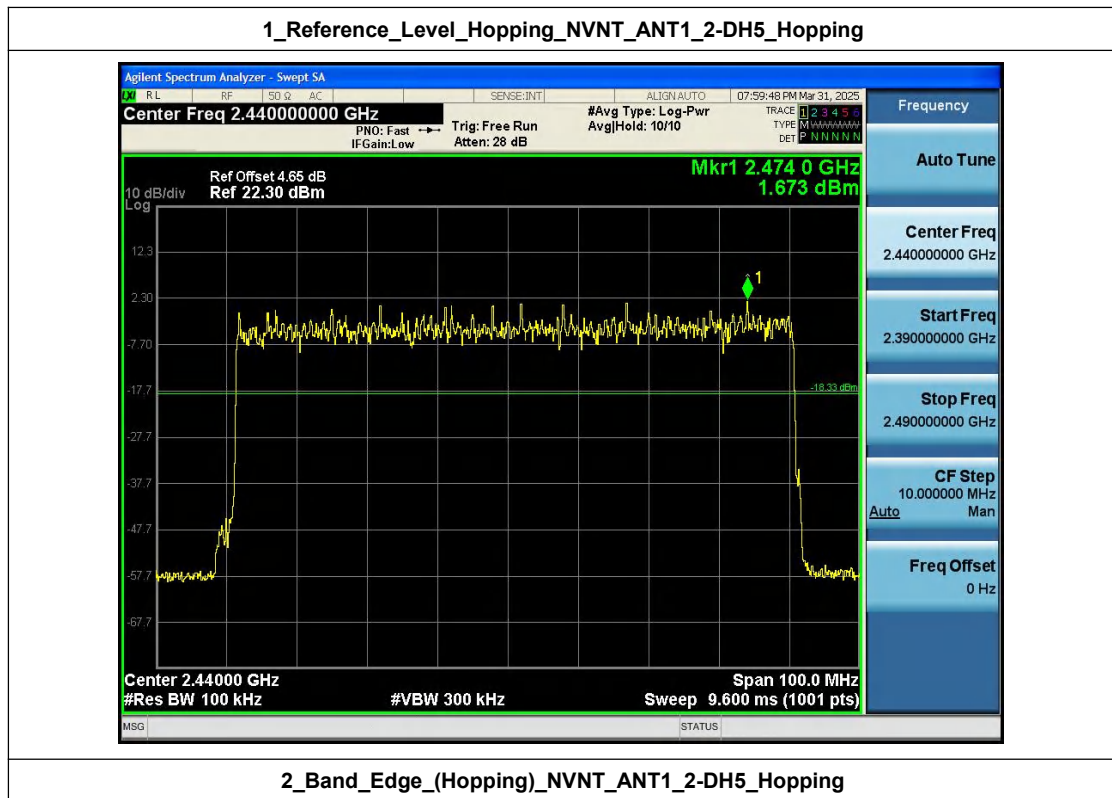

2_Band_Edge_(Hopping)_NVNT_ANT1_2-DH5_Hopping

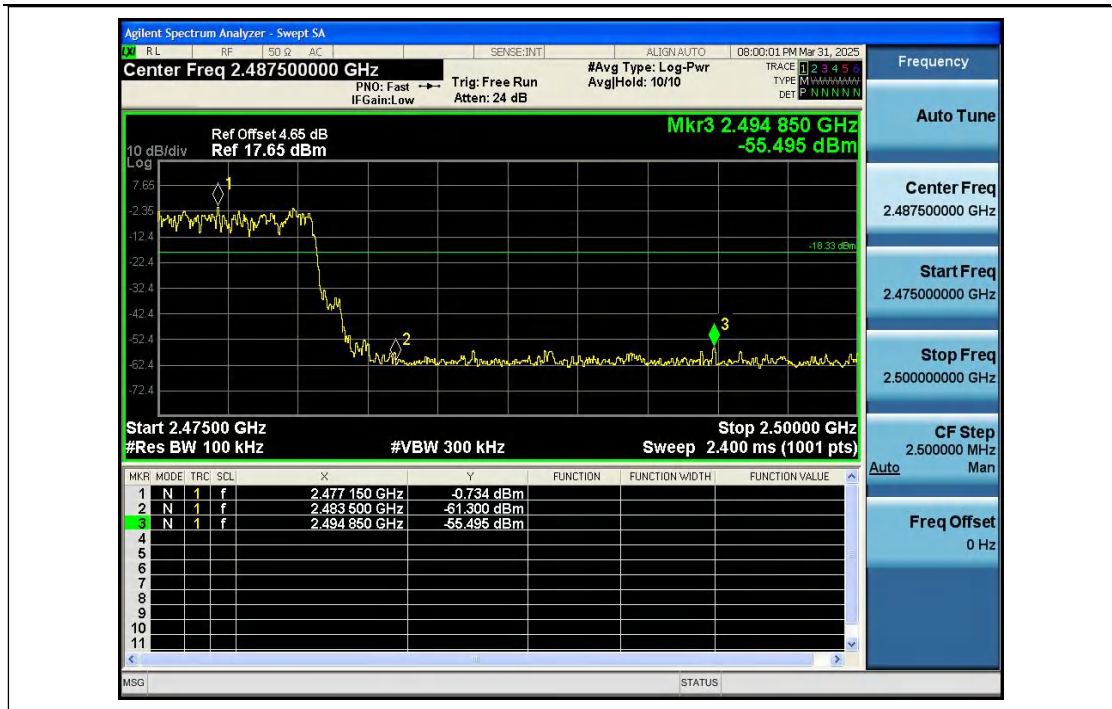


1_Reference_Level_NVNT_ANT1_3-DH5_2402_00

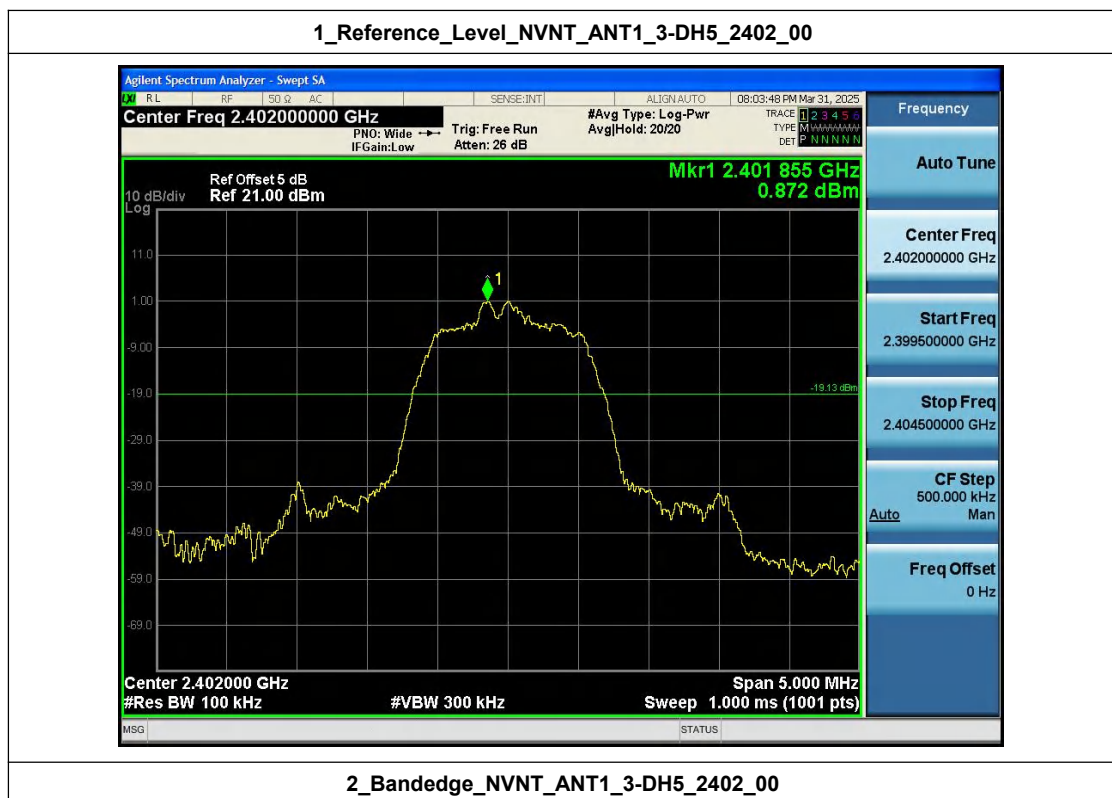


2_Bandedge_NVNT_ANT1_3-DH5_2402_00




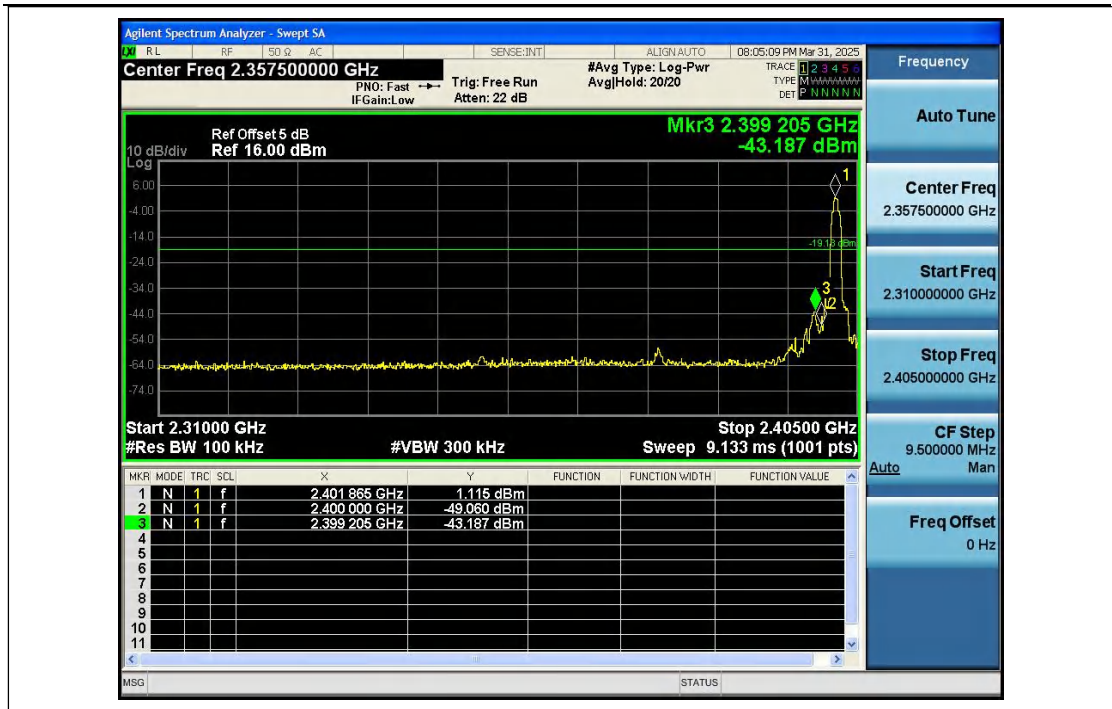


1_Reference_Level_Hopping_NVNT_ANT1_3-DH5_Hopping

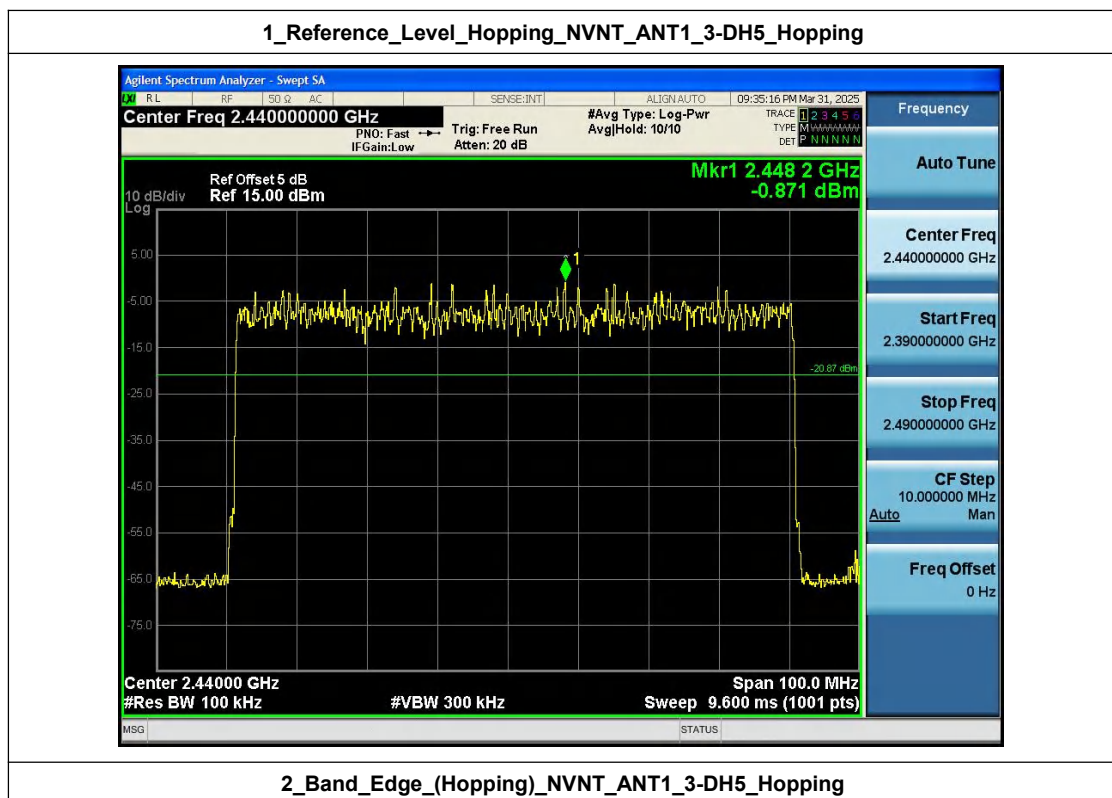


2_Band_Edge_(Hopping)_NVNT_ANT1_3-DH5_Hopping

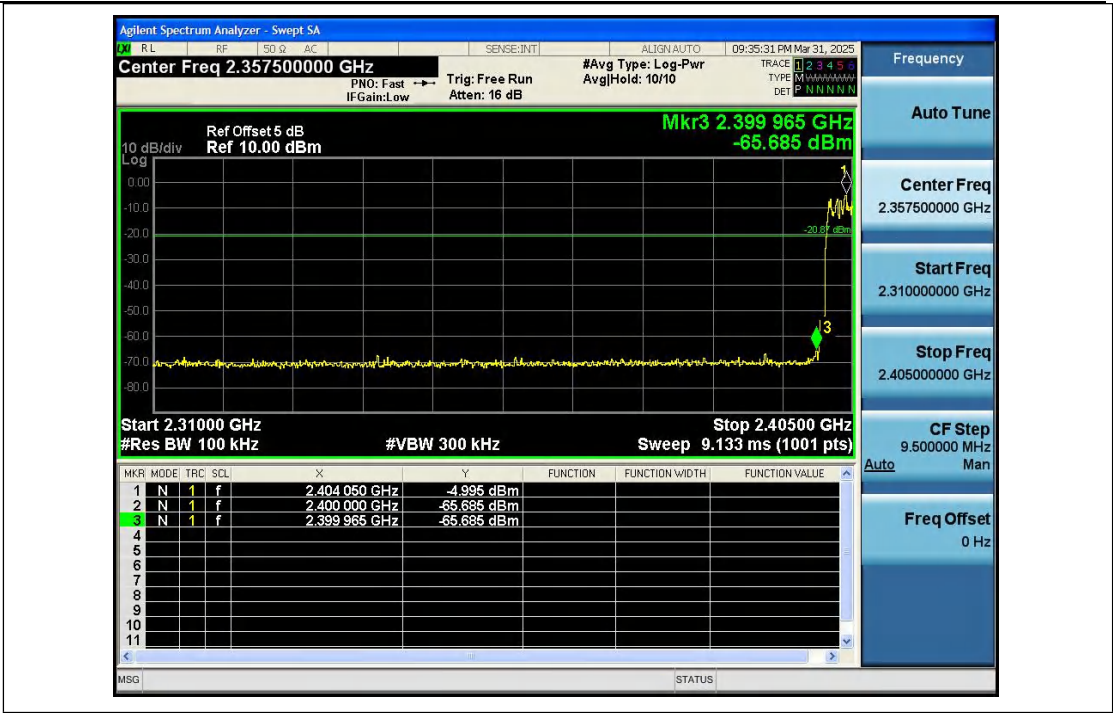


1_Reference_Level_NVNT_ANT1_3-DH5_2480_00

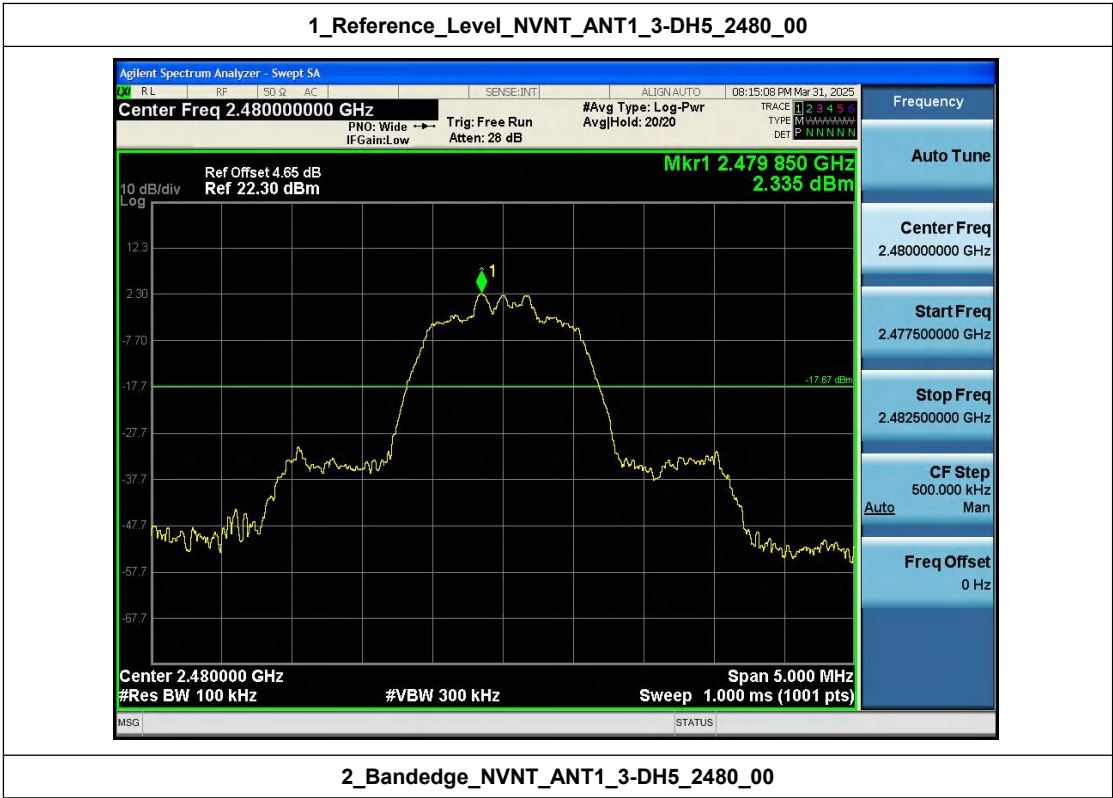

2_Bandedge_NVNT_ANT1_3-DH5_2480_00

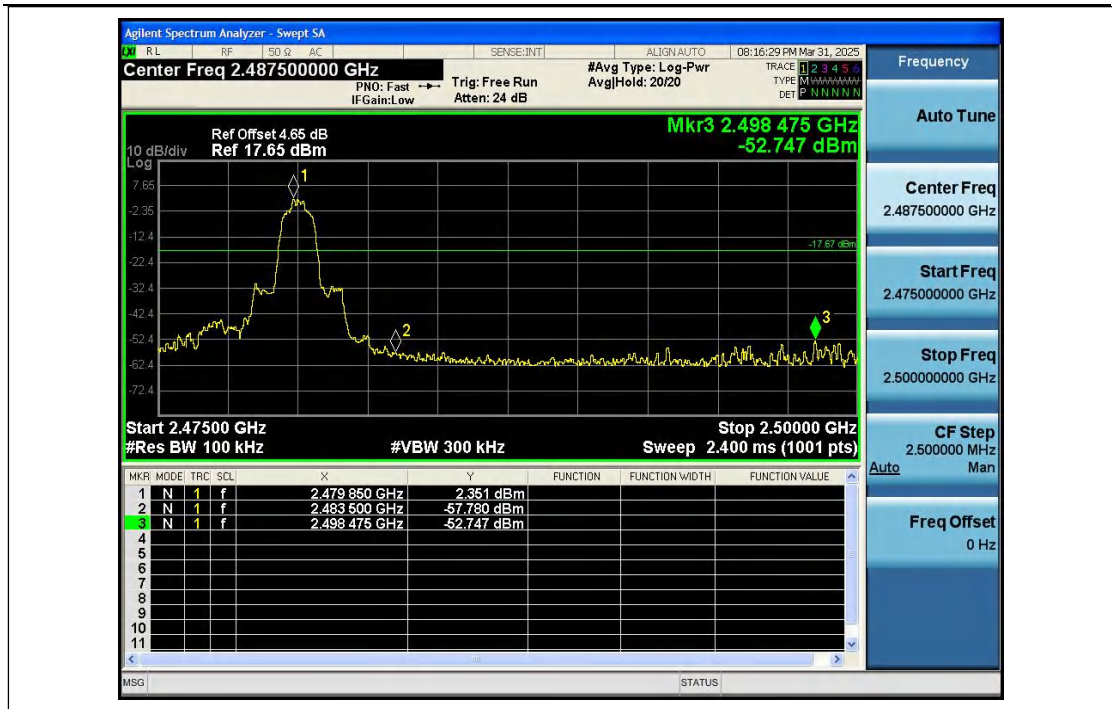

1_Reference_Level_Hopping_NVNT_ANT1_3-DH5_Hopping

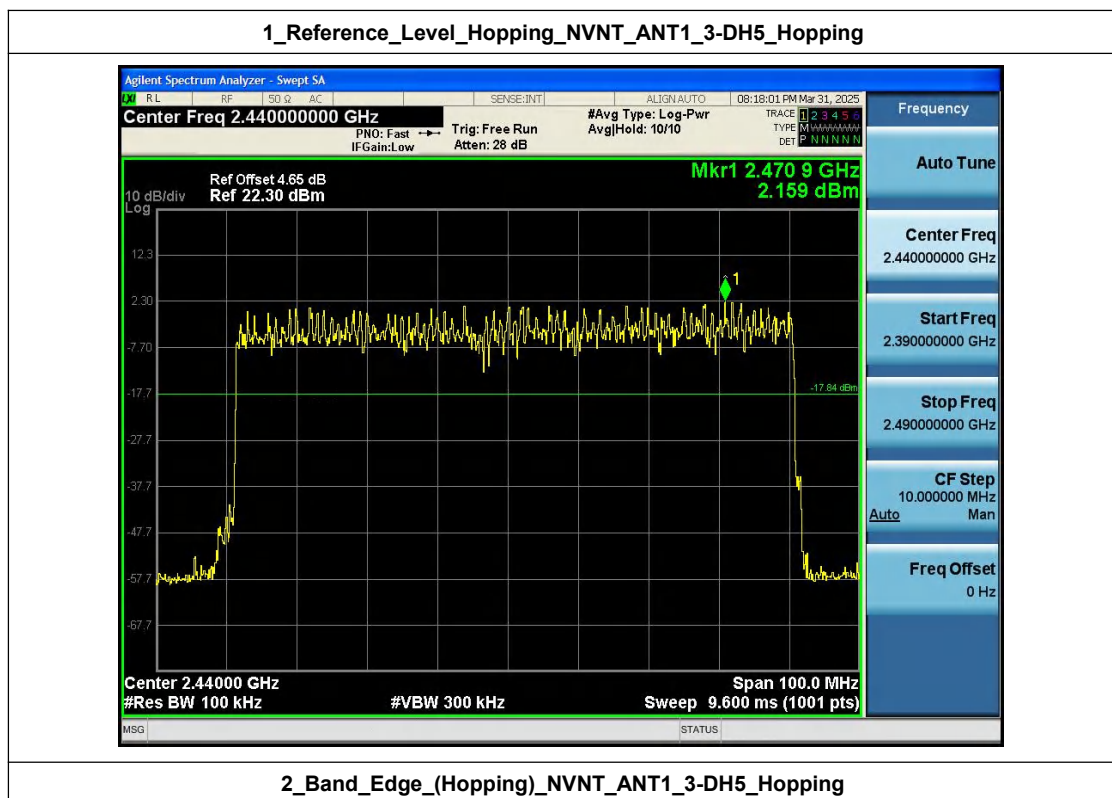

2_Band_Edge_(Hopping)_NVNT_ANT1_3-DH5_Hopping



Shenzhen Anbotek Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel:(86)0755-26066440 Email:service@anbotek.com

Hotline 400-003-0500
www.anbotek.com

Appendix H: Carrier Frequencies Separation (Hopping)

Condition	Antenna	Modulation	Frequency(MHz)	Hopping NO.0 (MHz)	Hopping NO.1 (MHz)	Carrier Frequencies Separation(MHz)	Limit(MHz)	Result
NVNT	ANT1	1-DH5	2441.00	2440.849	2441.860	1.01	0.634	Pass
NVNT	ANT1	2-DH5	2441.00	2440.846	2441.869	1.02	0.872	Pass
NVNT	ANT1	3-DH5	2441.00	2440.849	2441.830	0.98	0.854	Pass

Carrier_Frequencies_Separation_(Hopping)_NVNT_ANT1_1-DH5_Hopping

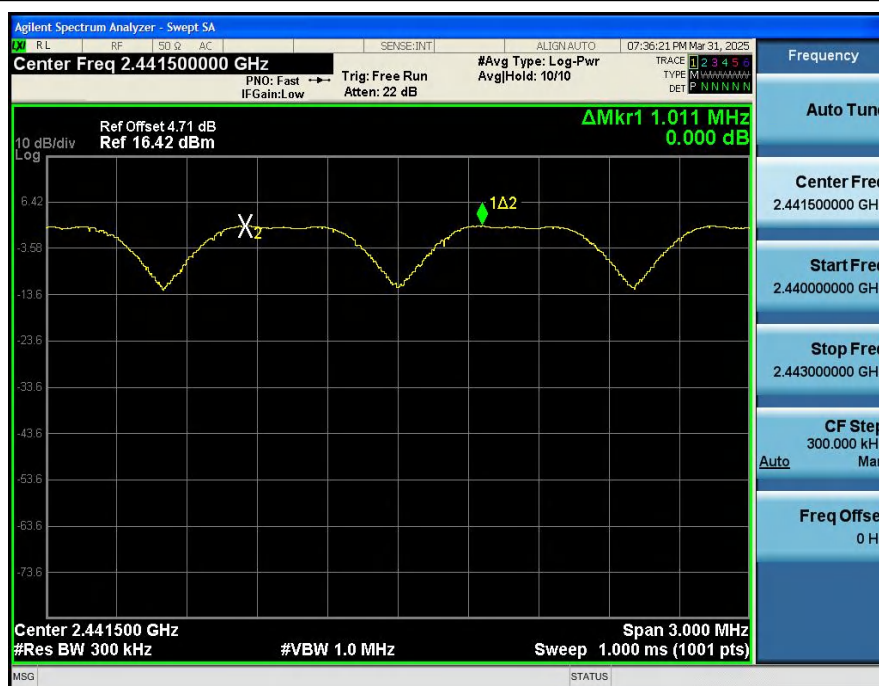

Carrier_Frequencies_Separation_(Hopping)_NVNT_ANT1_2-DH5_Hopping




Carrier_Frequencies_Separation_(Hopping)_NVNT_ANT1_3-DH5_Hopping



Appendix I: Number of Hopping Channel (Hopping)


Condition	Antenna	Modulation	Hopping Num	Limit	Result
NVNT	ANT1	1-DH5	79	15	Pass
NVNT	ANT1	2-DH5	79	15	Pass
NVNT	ANT1	3-DH5	79	15	Pass

Number_of_Hopping_Channel_(Hopping)_NVNT_ANT1_1-DH5_Hopping

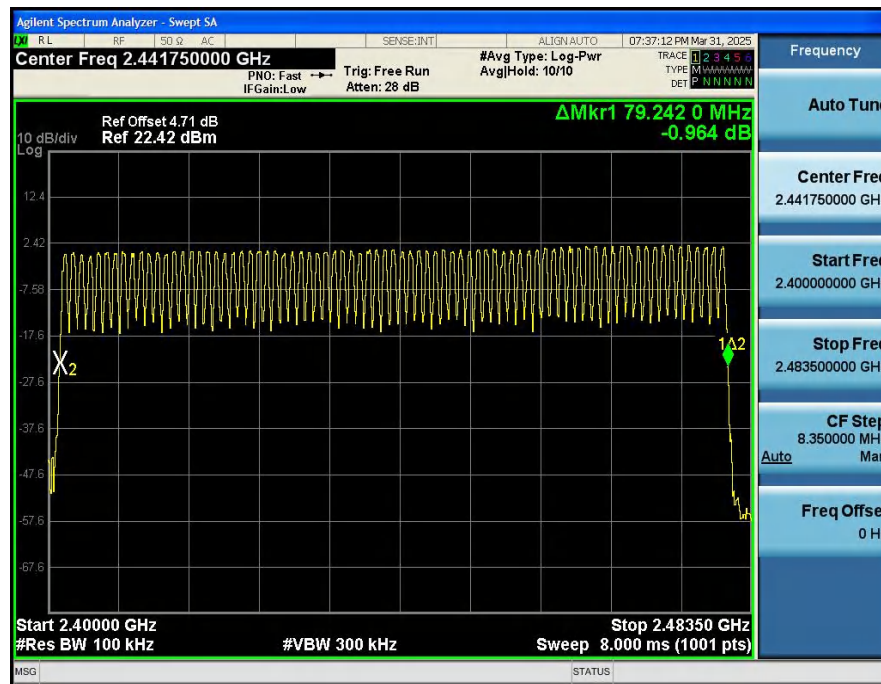

Number_of_Hopping_Channel_(Hopping)_NVNT_ANT1_2-DH5_Hopping



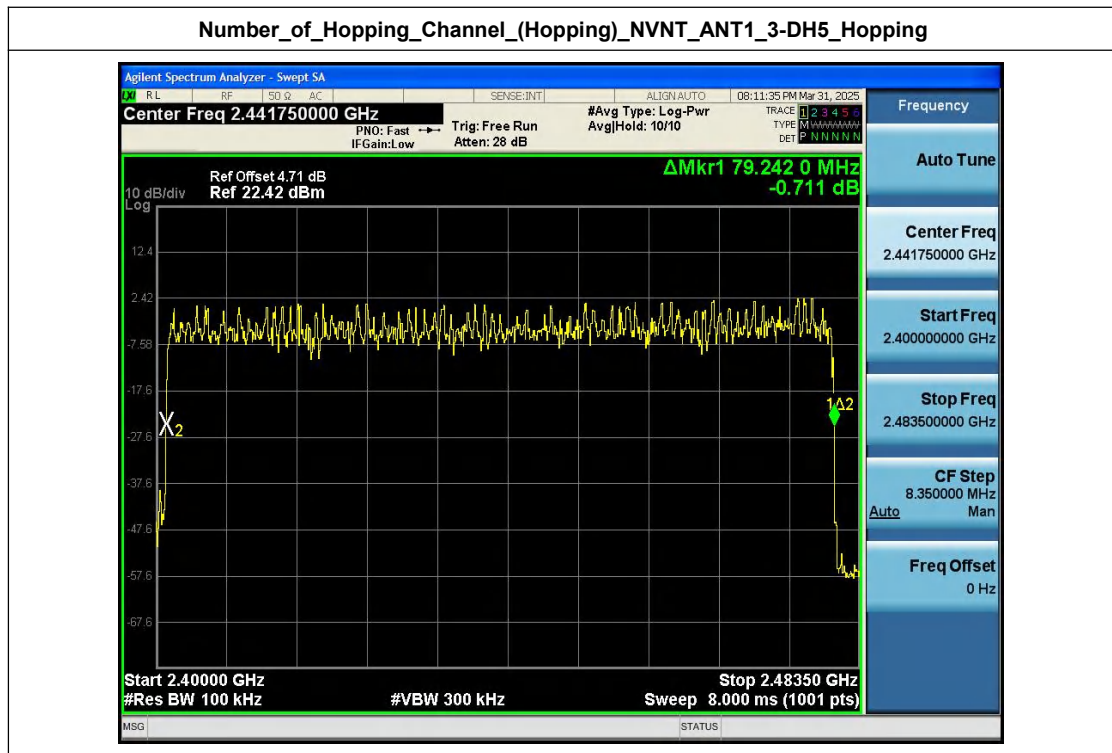


Shenzhen Anbotek Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com


Appendix J: Dwell Time (Hopping)

Condition	Antenna	Packet Type	Pulse Time(ms)	Hops	Dwell Time(ms)	Limit(s)	Result
NVNT	ANT1	1-DH5	2.900	102.00	295.800	0.40	Pass
NVNT	ANT1	2-DH5	2.900	110.00	319.000	0.40	Pass
NVNT	ANT1	3-DH5	2.890	105.00	303.450	0.40	Pass
NVNT	ANT1	1-DH1	0.400	319.00	127.600	0.40	Pass
NVNT	ANT1	1-DH3	1.650	162.00	267.300	0.40	Pass
NVNT	ANT1	2-DH1	0.400	319.00	127.600	0.40	Pass
NVNT	ANT1	2-DH3	1.650	164.00	270.600	0.40	Pass
NVNT	ANT1	3-DH1	0.400	320.00	128.000	0.40	Pass
NVNT	ANT1	3-DH3	1.650	155.00	255.750	0.40	Pass

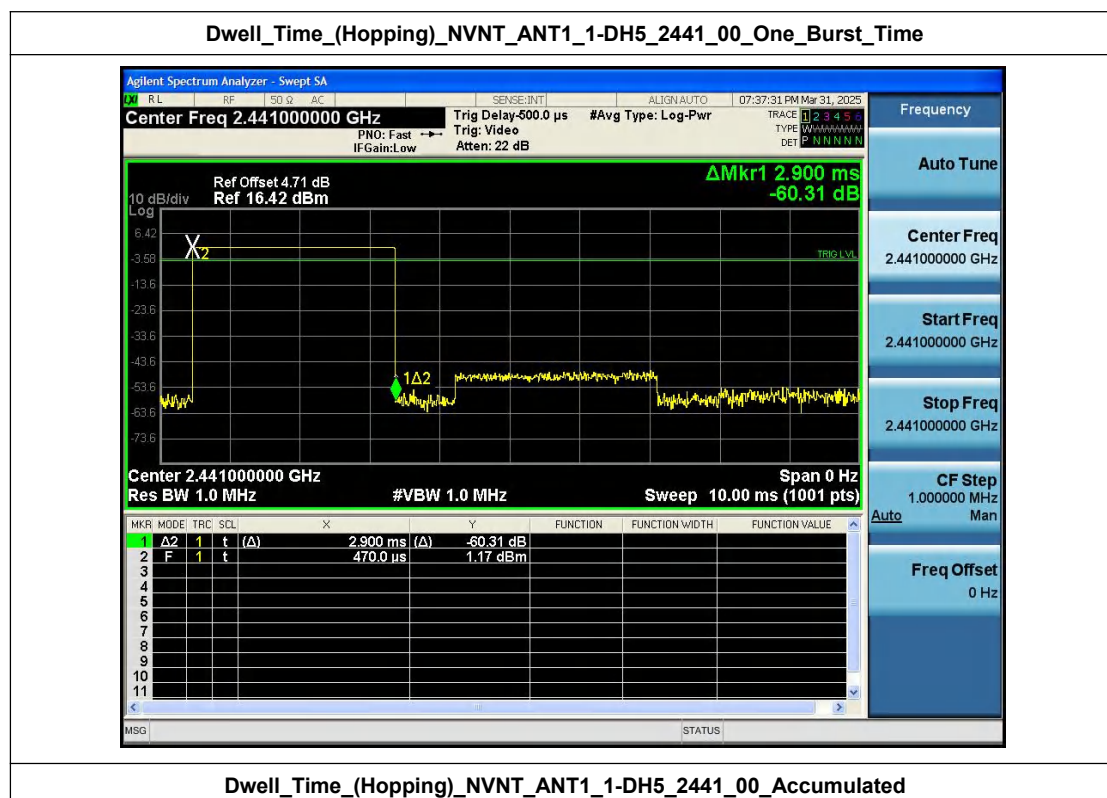


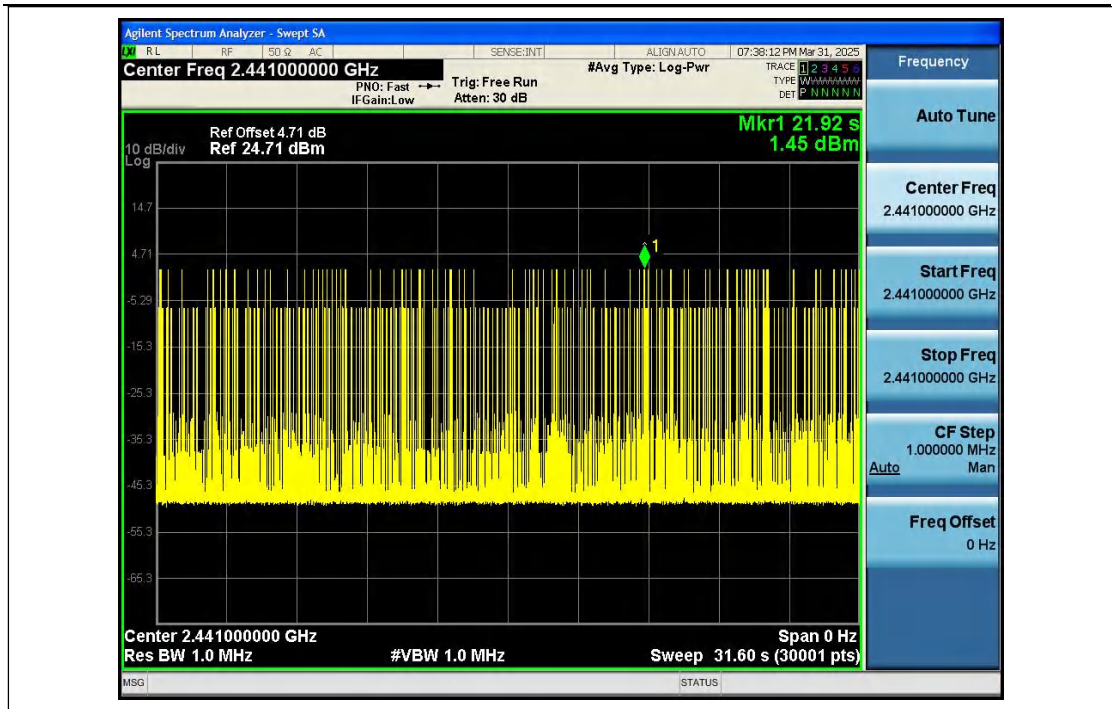


Dwell_Time_(Hopping)_NVNT_ANT1_2-DH5_2441_00_One_Burst_Time

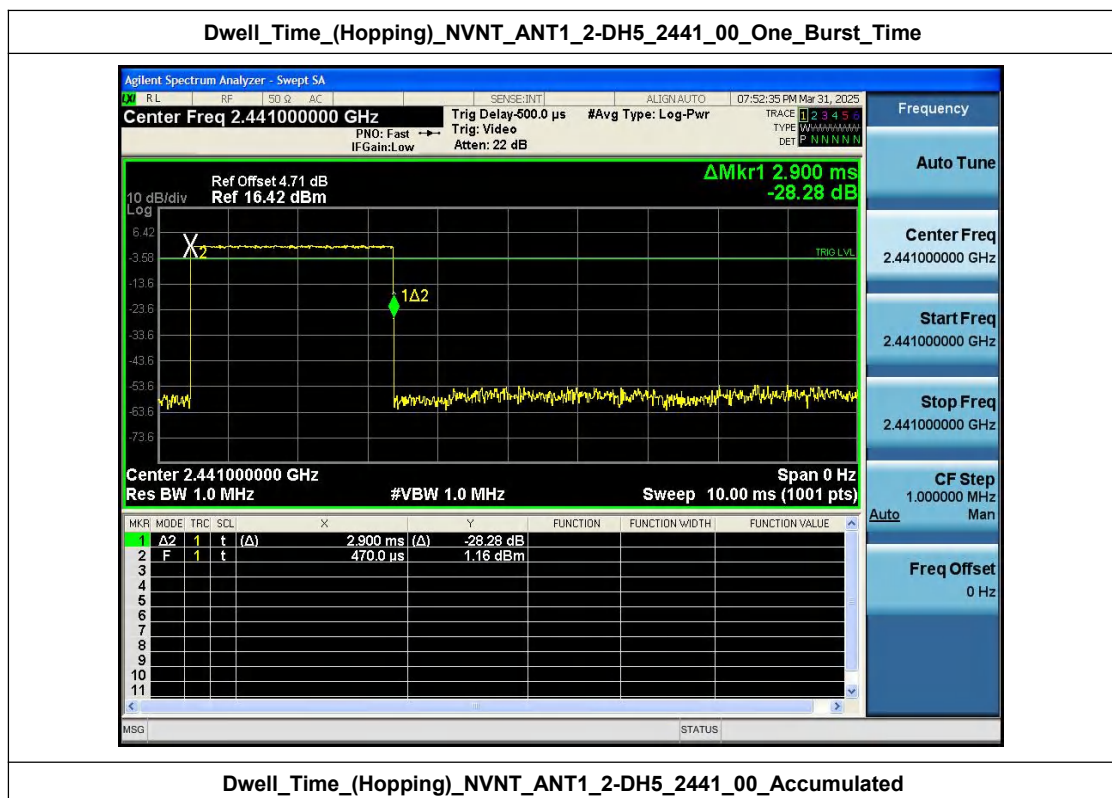


Dwell_Time_(Hopping)_NVNT_ANT1_2-DH5_2441_00_Accumulated

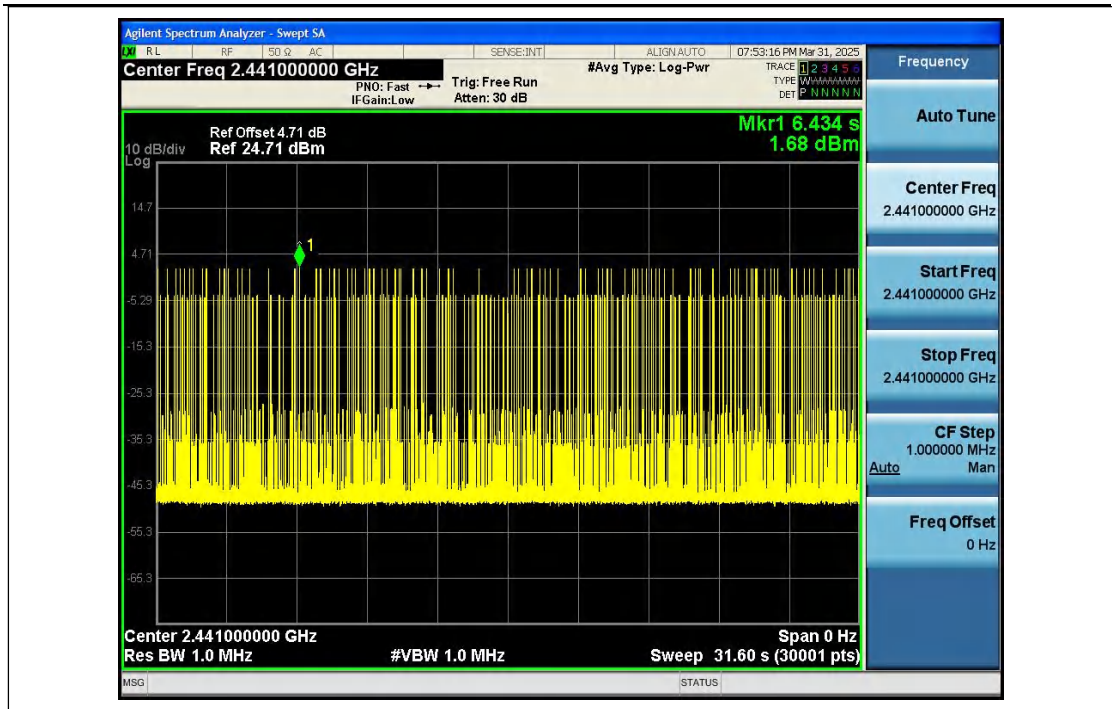


Dwell_Time_(Hopping)_NVNT_ANT1_3-DH5_2441_00_One_Burst_Time

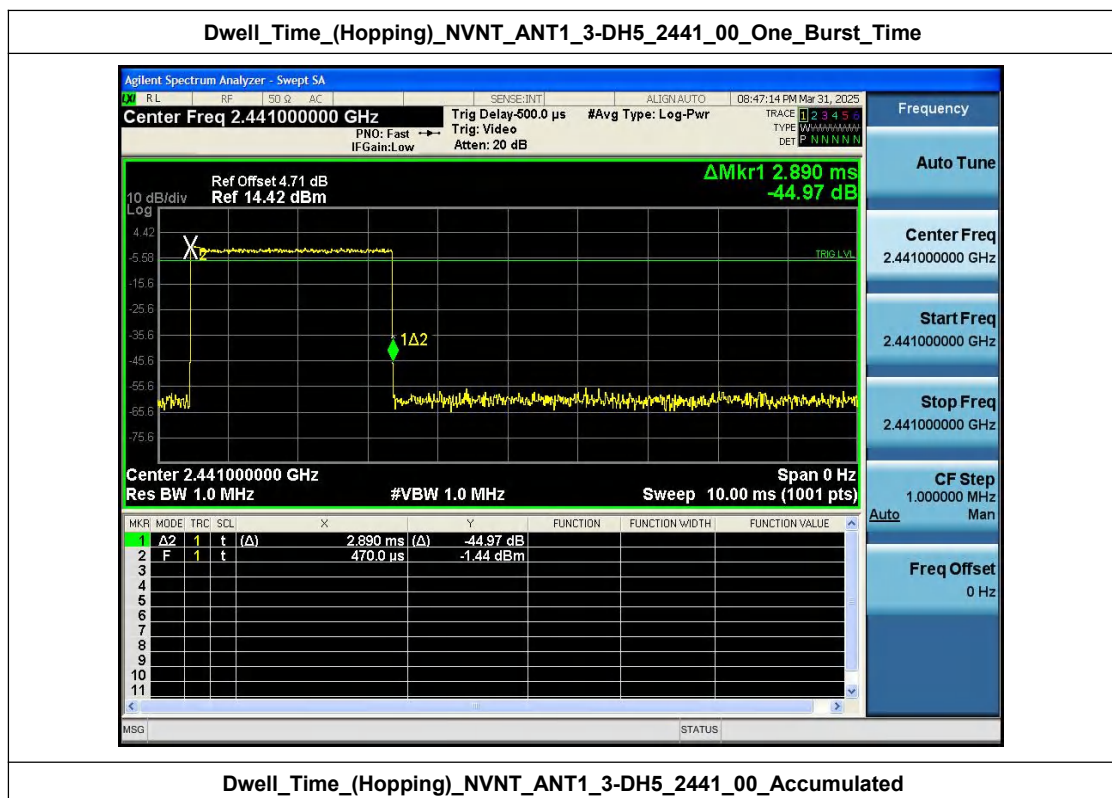


Dwell_Time_(Hopping)_NVNT_ANT1_3-DH5_2441_00_Accumulated

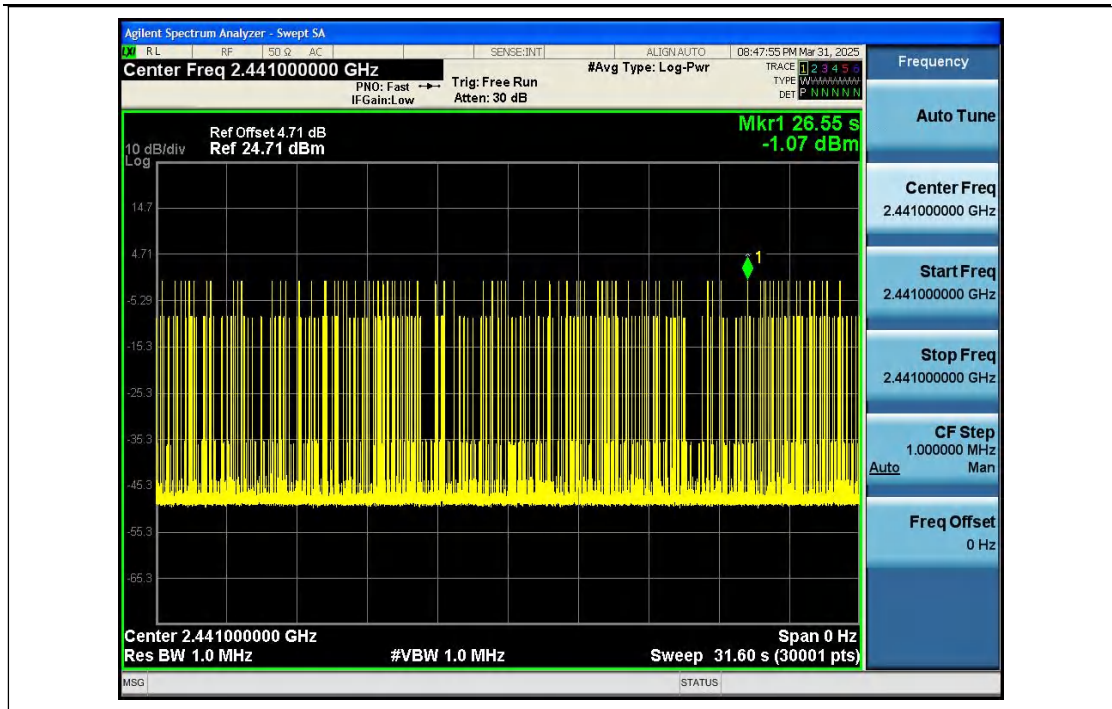


Dwell_Time_(Hopping)_NVNT_ANT1_1-DH1_2441_00_One_Burst_Time

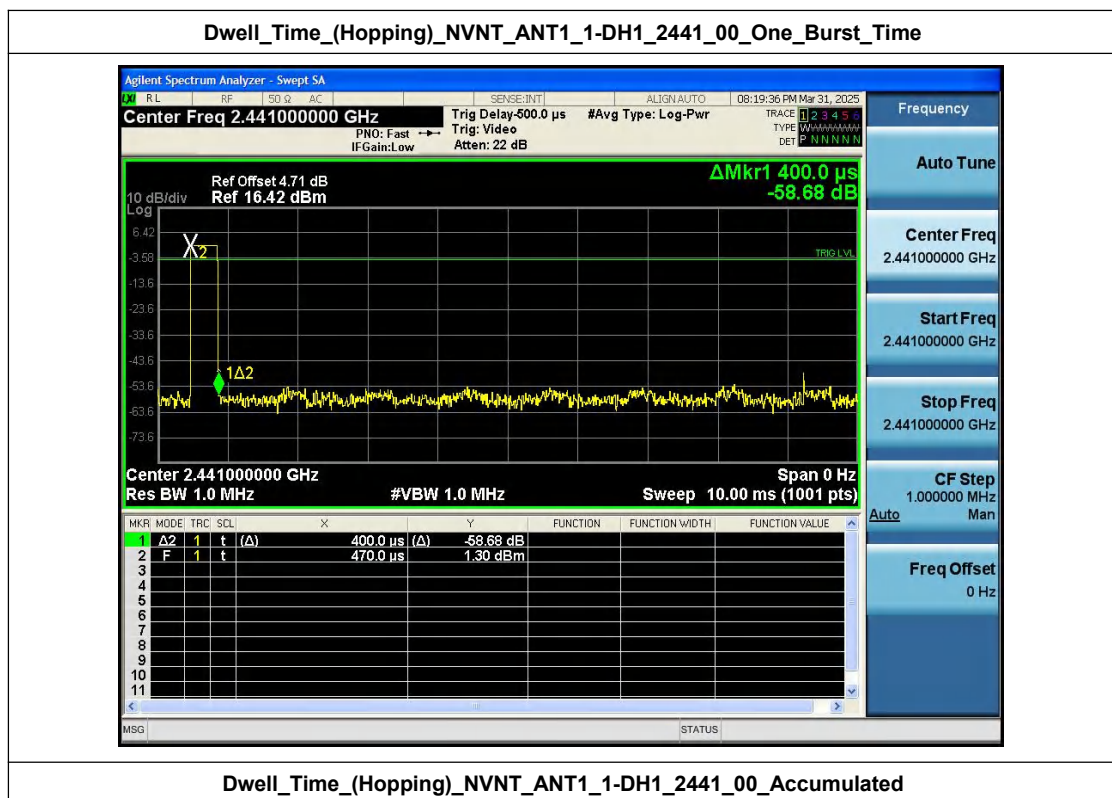


Dwell_Time_(Hopping)_NVNT_ANT1_1-DH1_2441_00_Accumulated

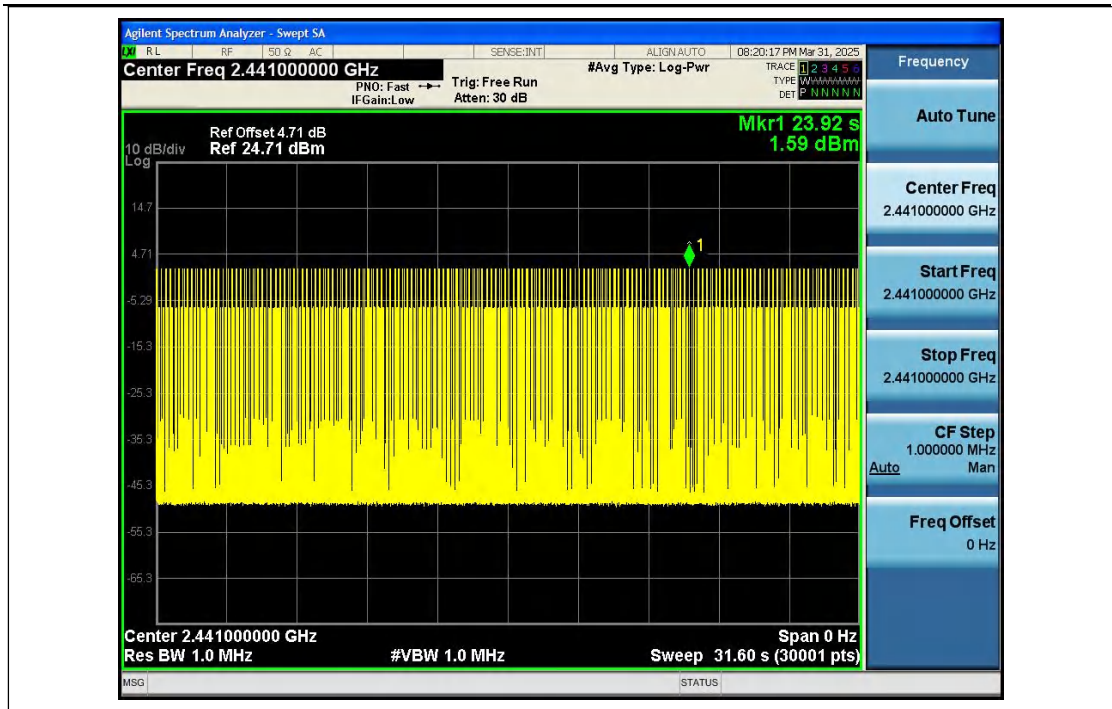


Dwell_Time_(Hopping)_NVNT_ANT1_1-DH3_2441_00_One_Burst_Time

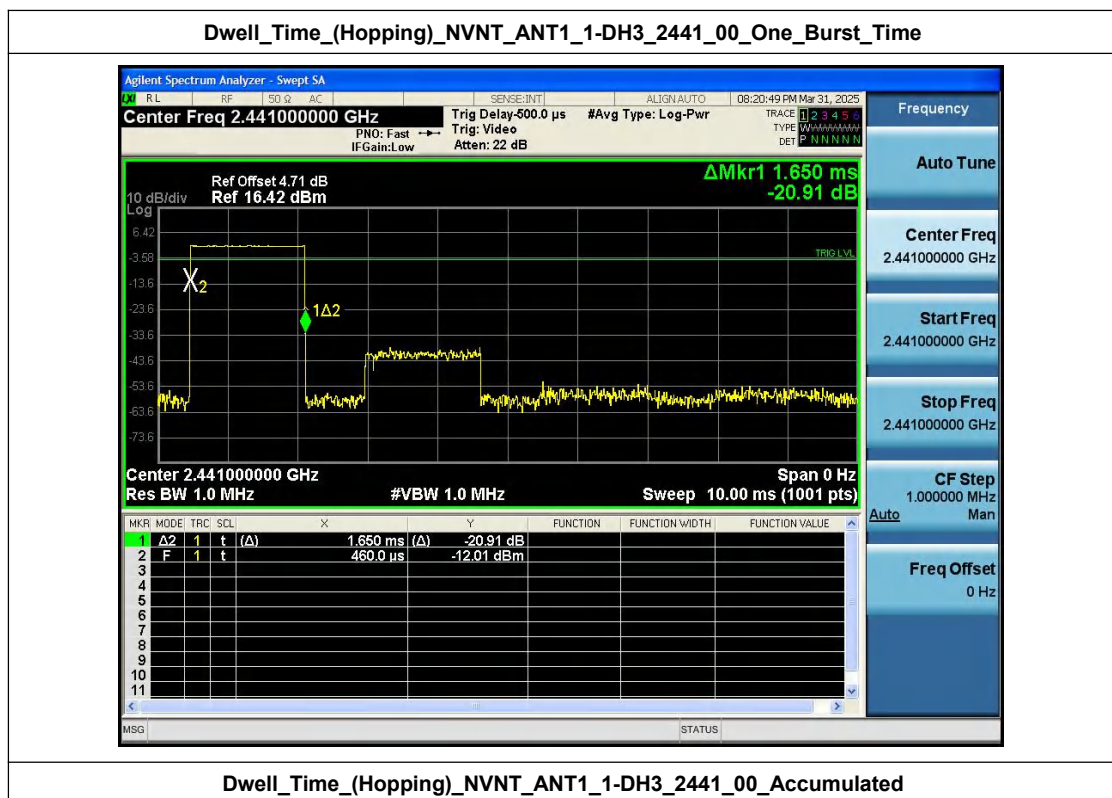


Dwell_Time_(Hopping)_NVNT_ANT1_1-DH3_2441_00_Accumulated

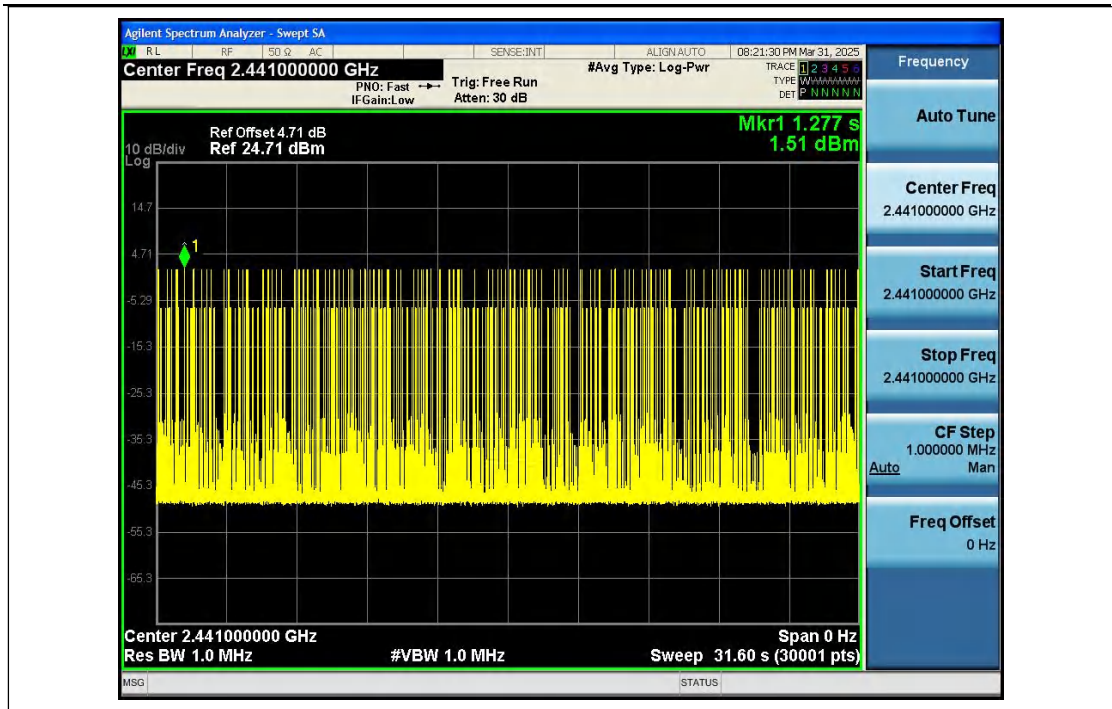


Dwell_Time_(Hopping)_NVNT_ANT1_2-DH1_2441_00_One_Burst_Time

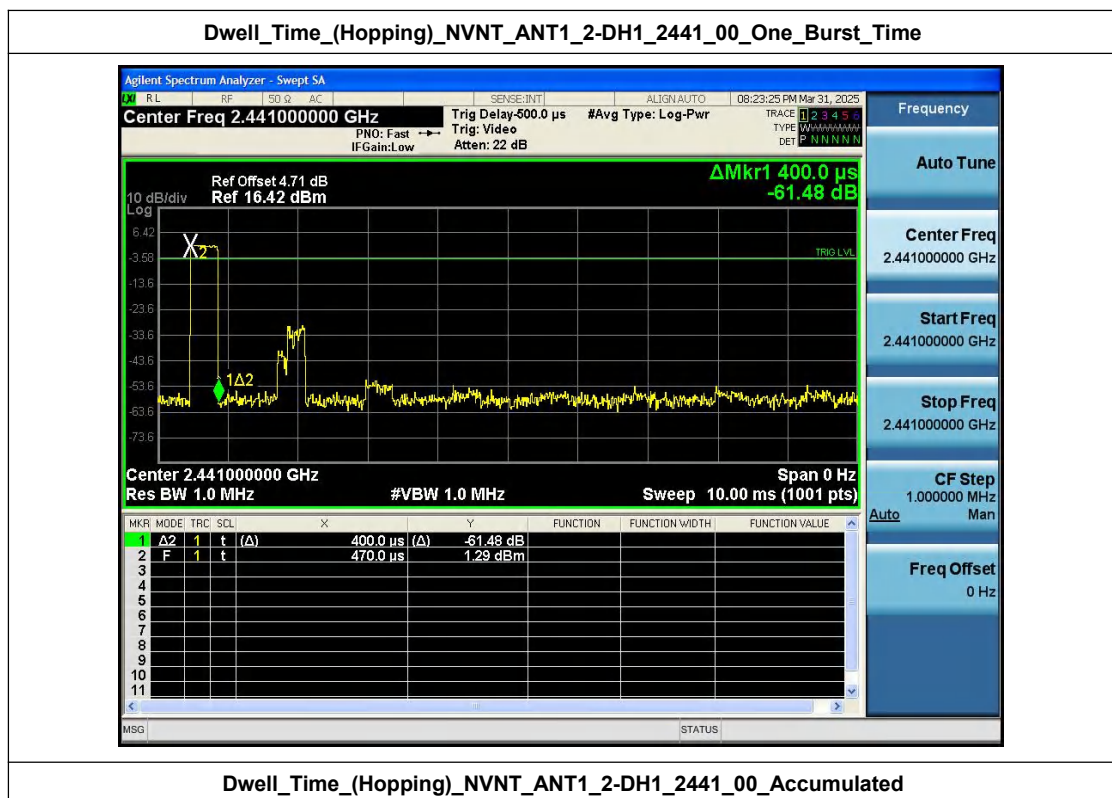


Dwell_Time_(Hopping)_NVNT_ANT1_2-DH1_2441_00_Accumulated

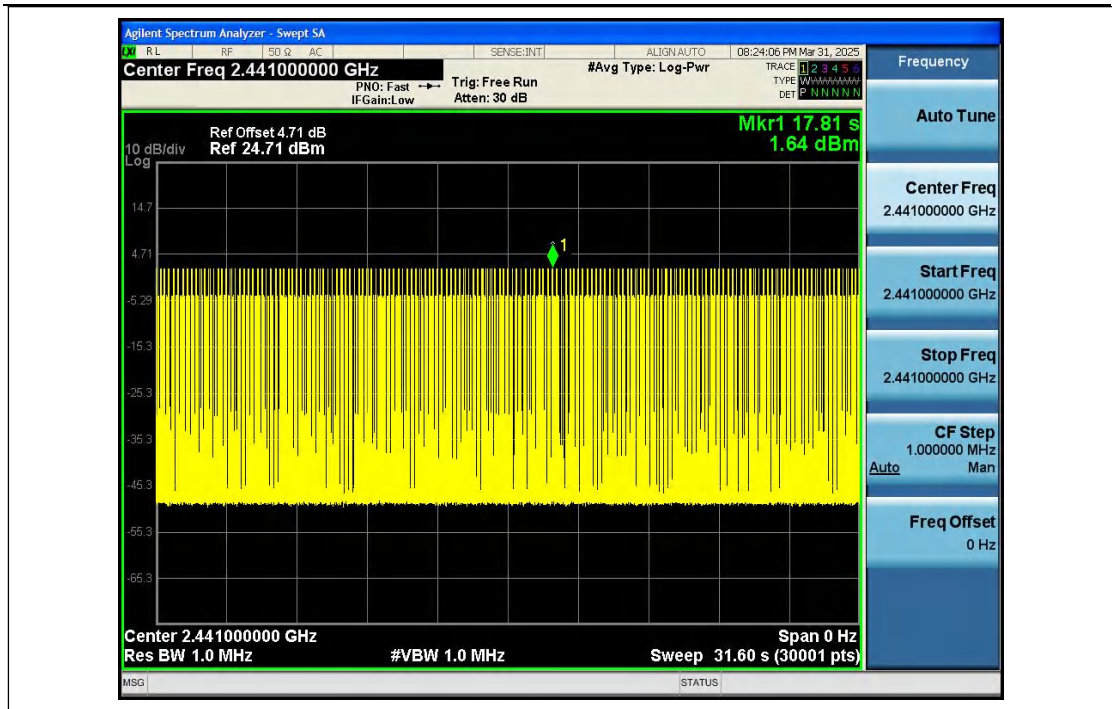


Dwell_Time_(Hopping)_NVNT_ANT1_2-DH3_2441_00_One_Burst_Time

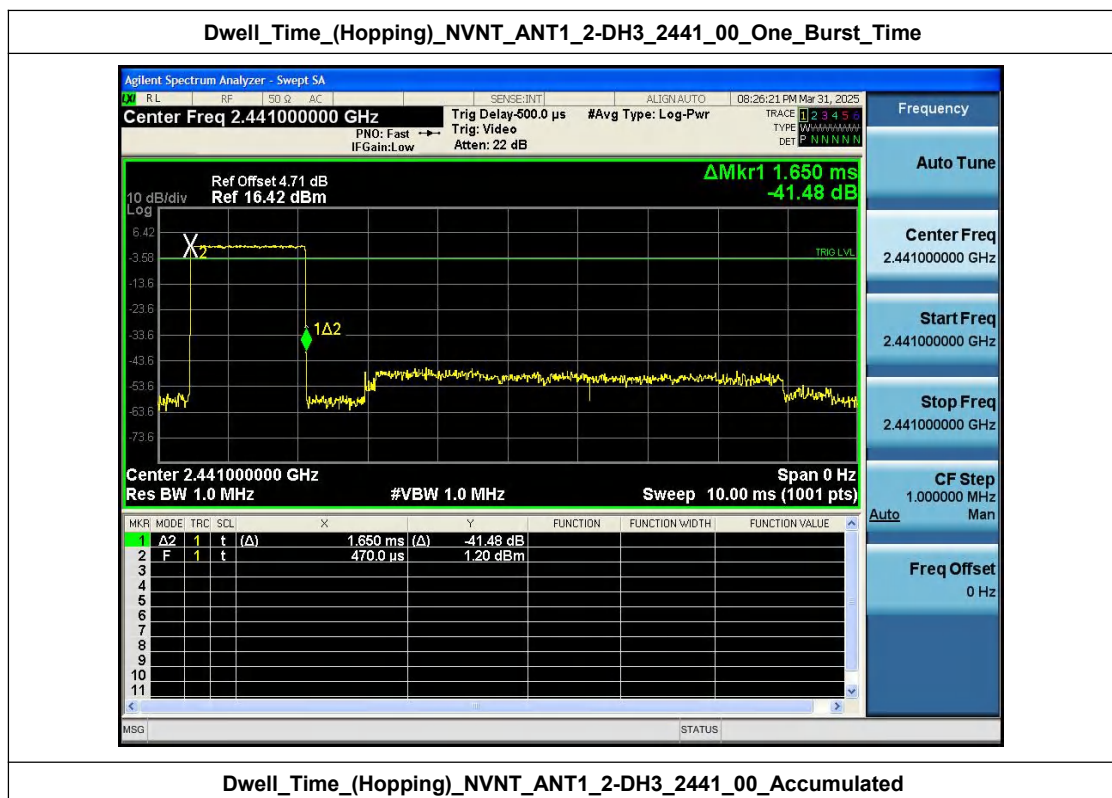


Dwell_Time_(Hopping)_NVNT_ANT1_2-DH3_2441_00_Accumulated

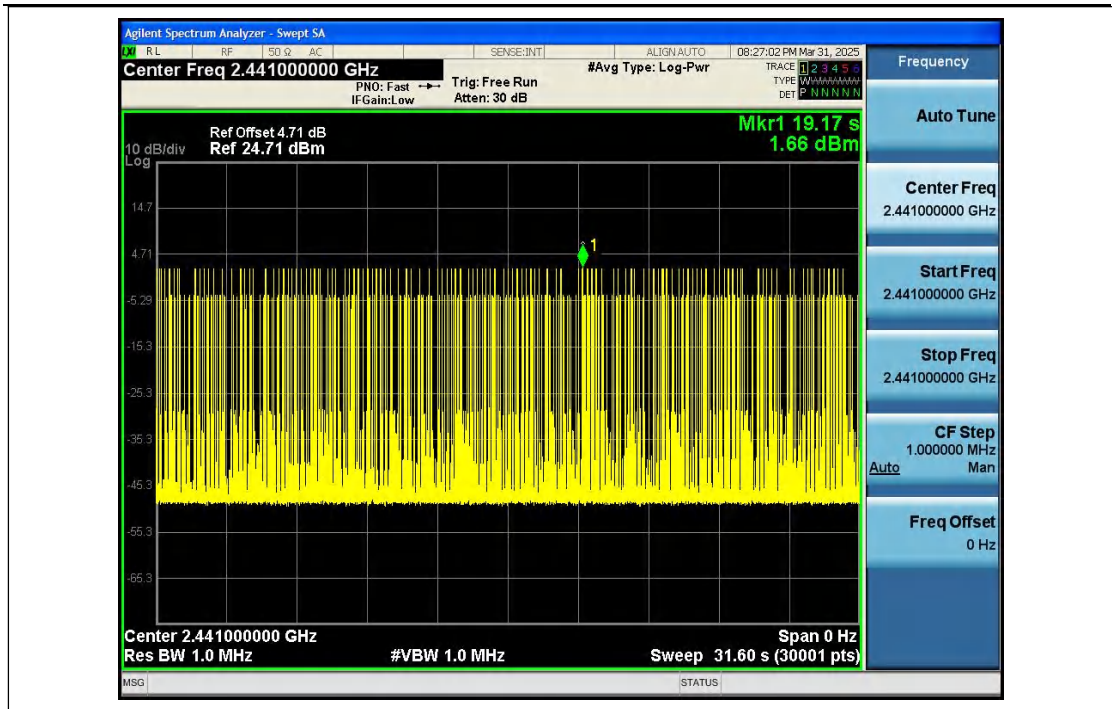


Dwell_Time_(Hopping)_NVNT_ANT1_3-DH1_2441_00_One_Burst_Time

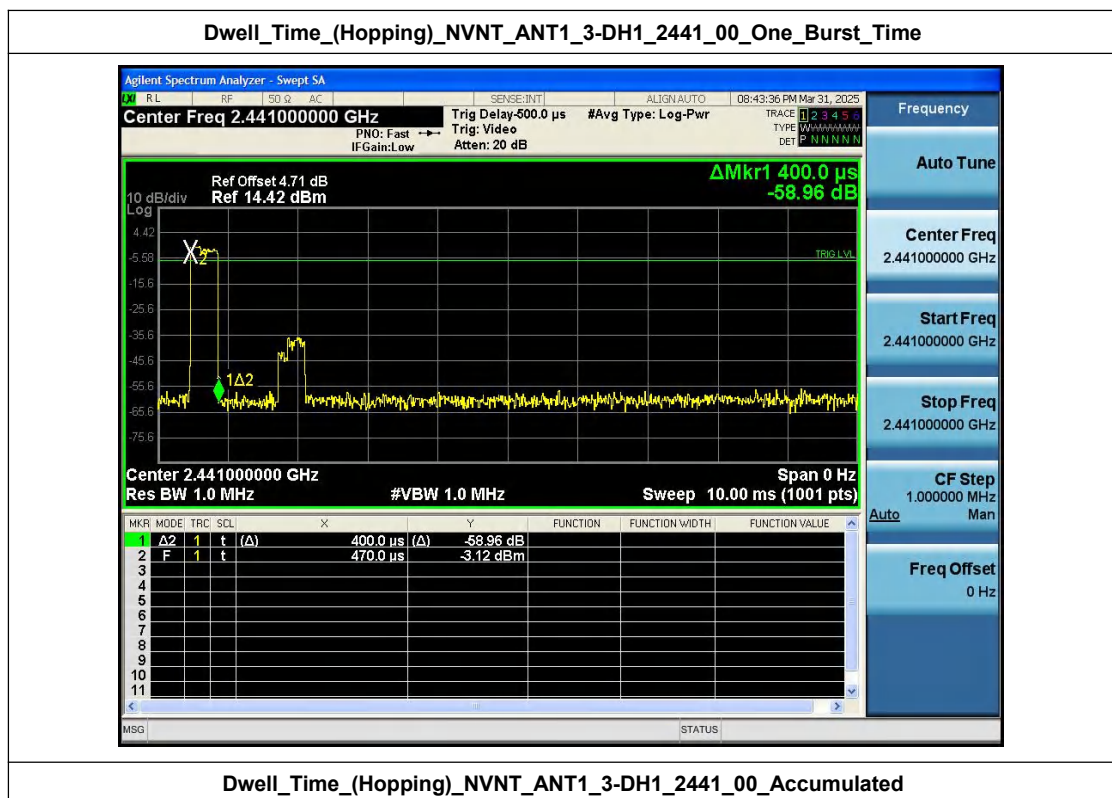


Dwell_Time_(Hopping)_NVNT_ANT1_3-DH1_2441_00_Accumulated

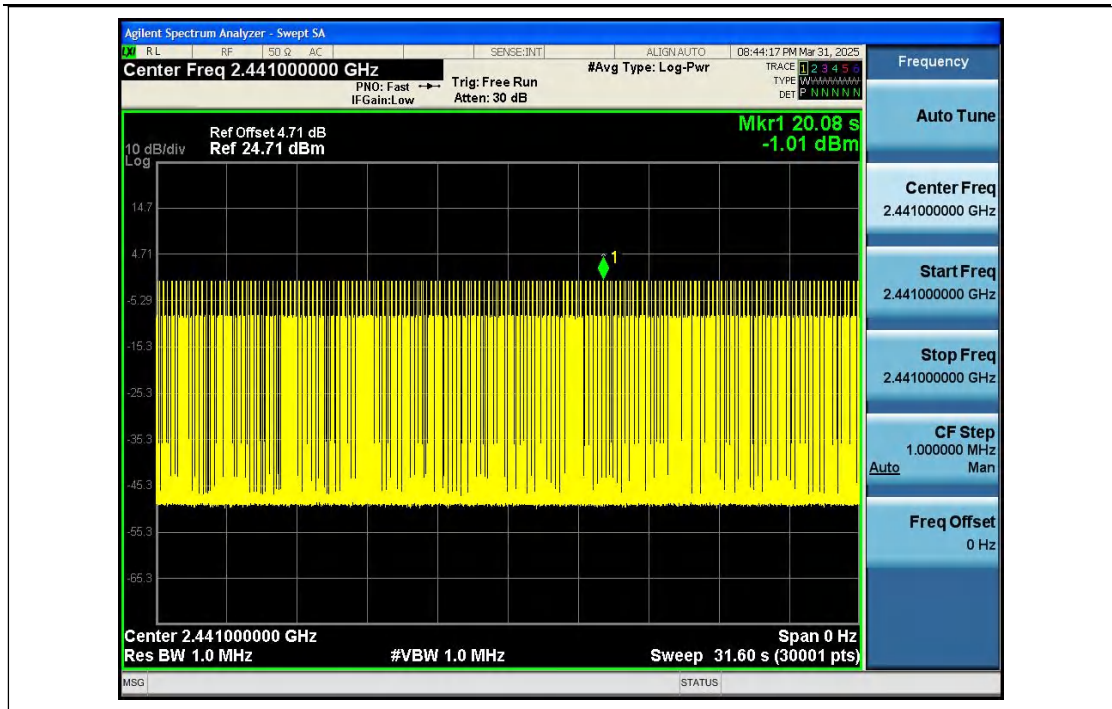

Dwell_Time_(Hopping)_NVNT_ANT1_3-DH3_2441_00_One_Burst_Time

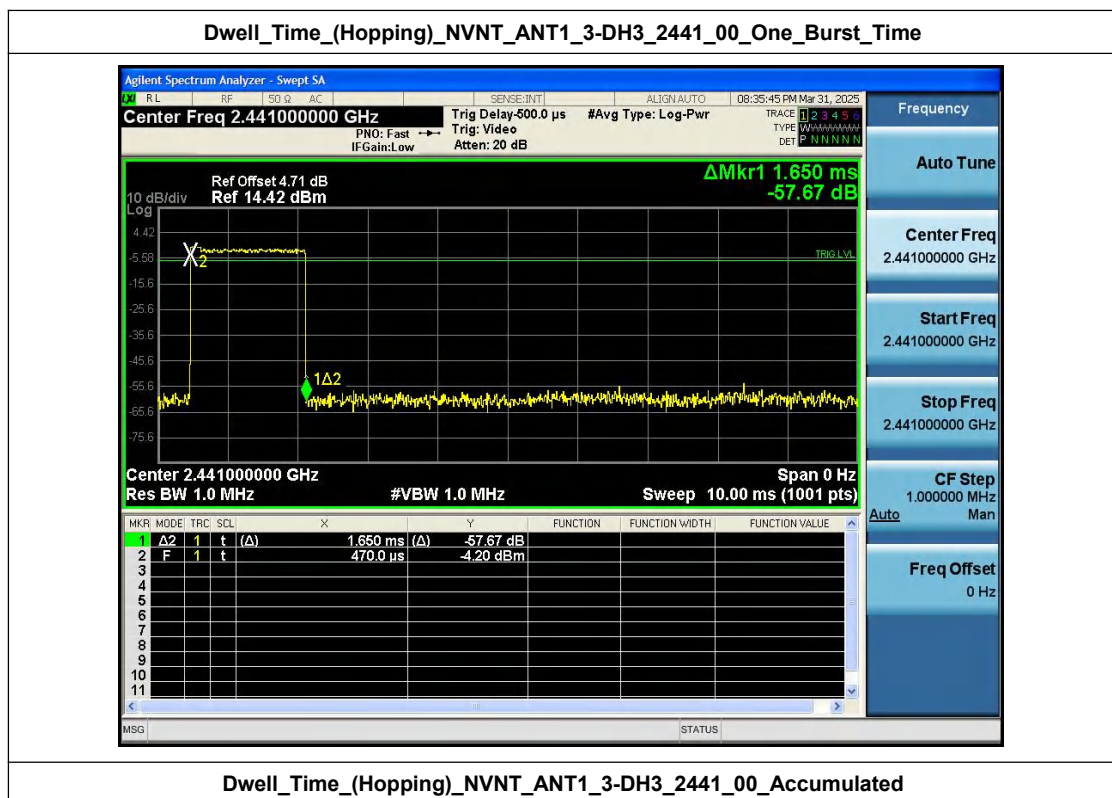

Dwell_Time_(Hopping)_NVNT_ANT1_3-DH3_2441_00_Accumulated

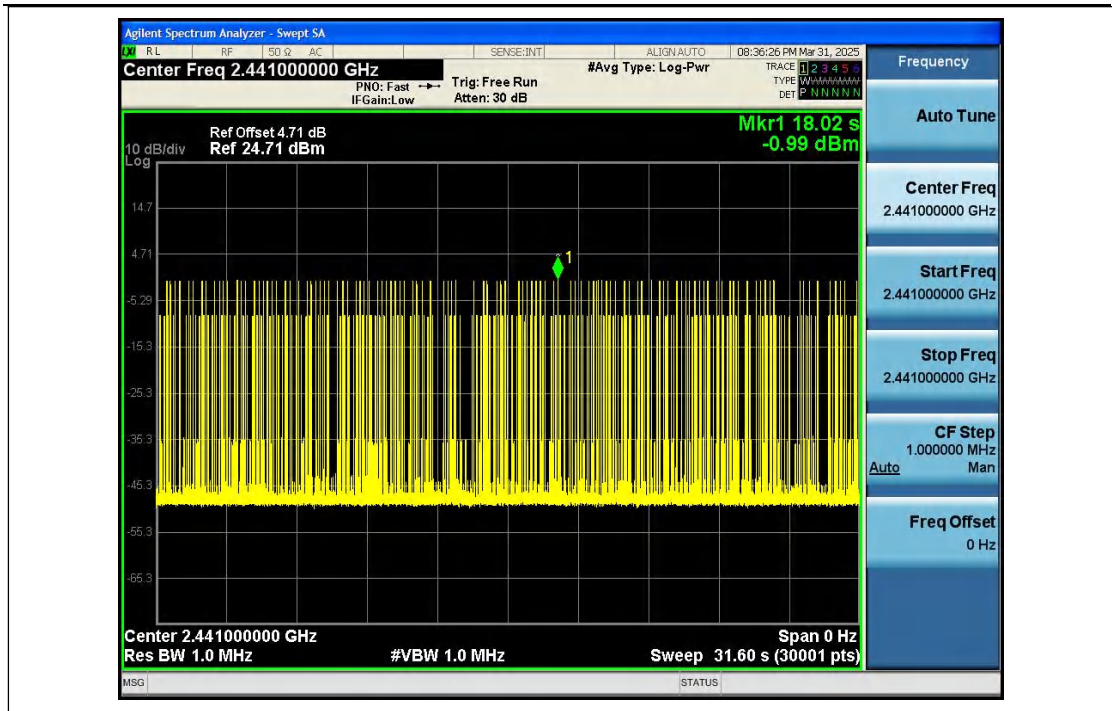

---END---

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com