








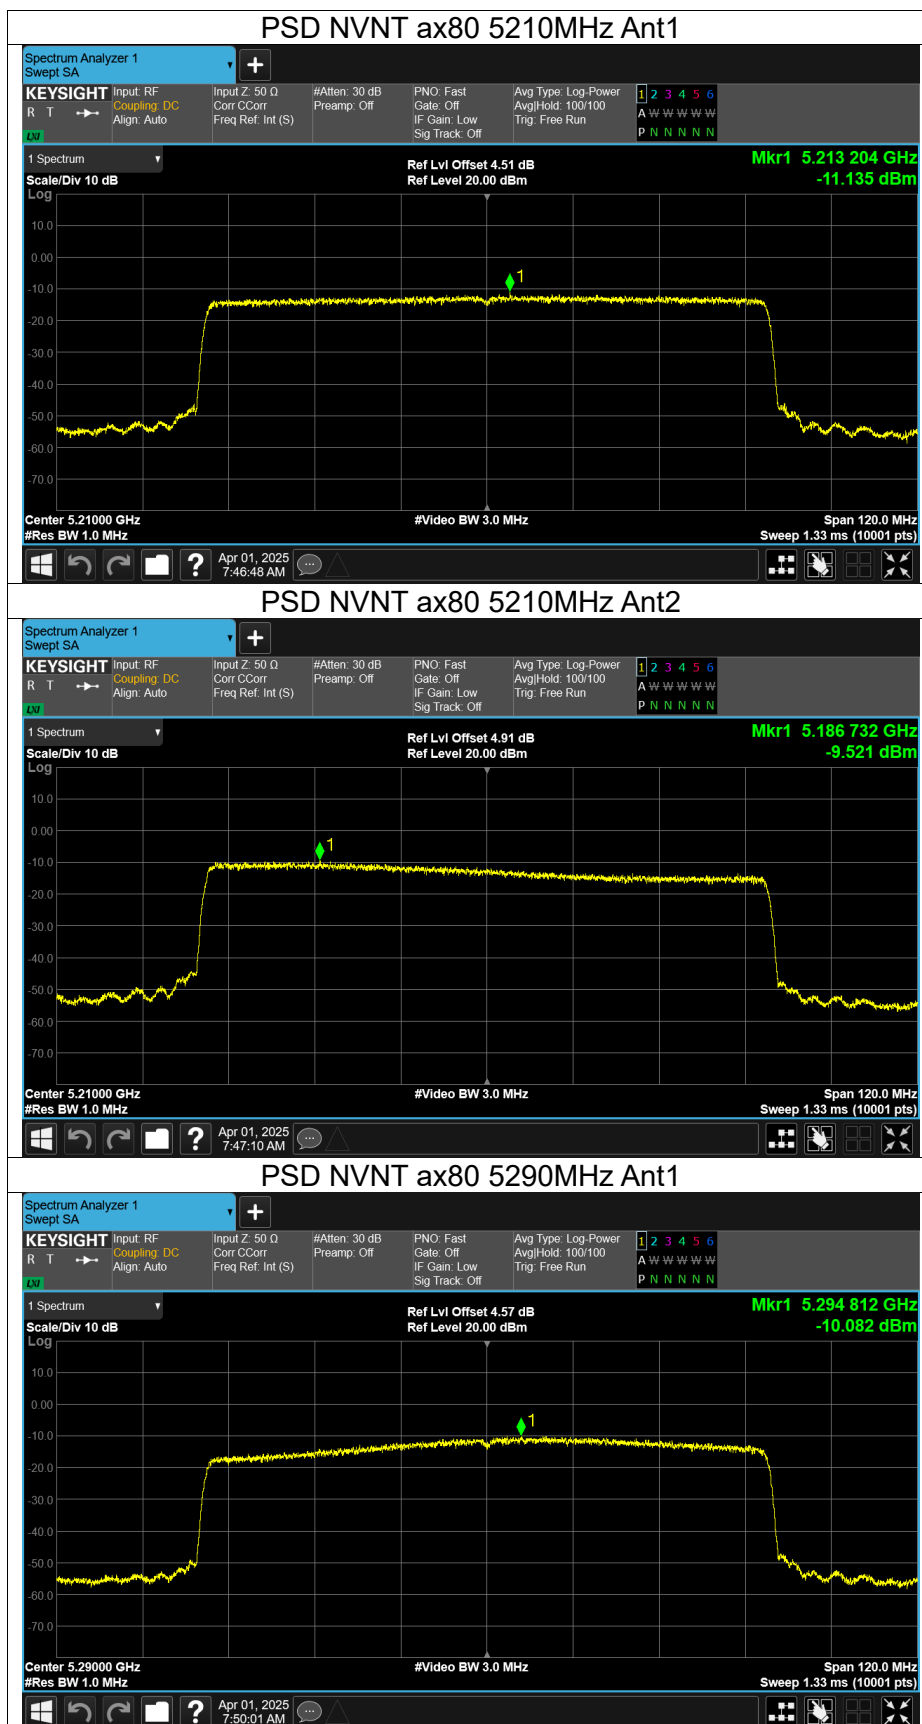

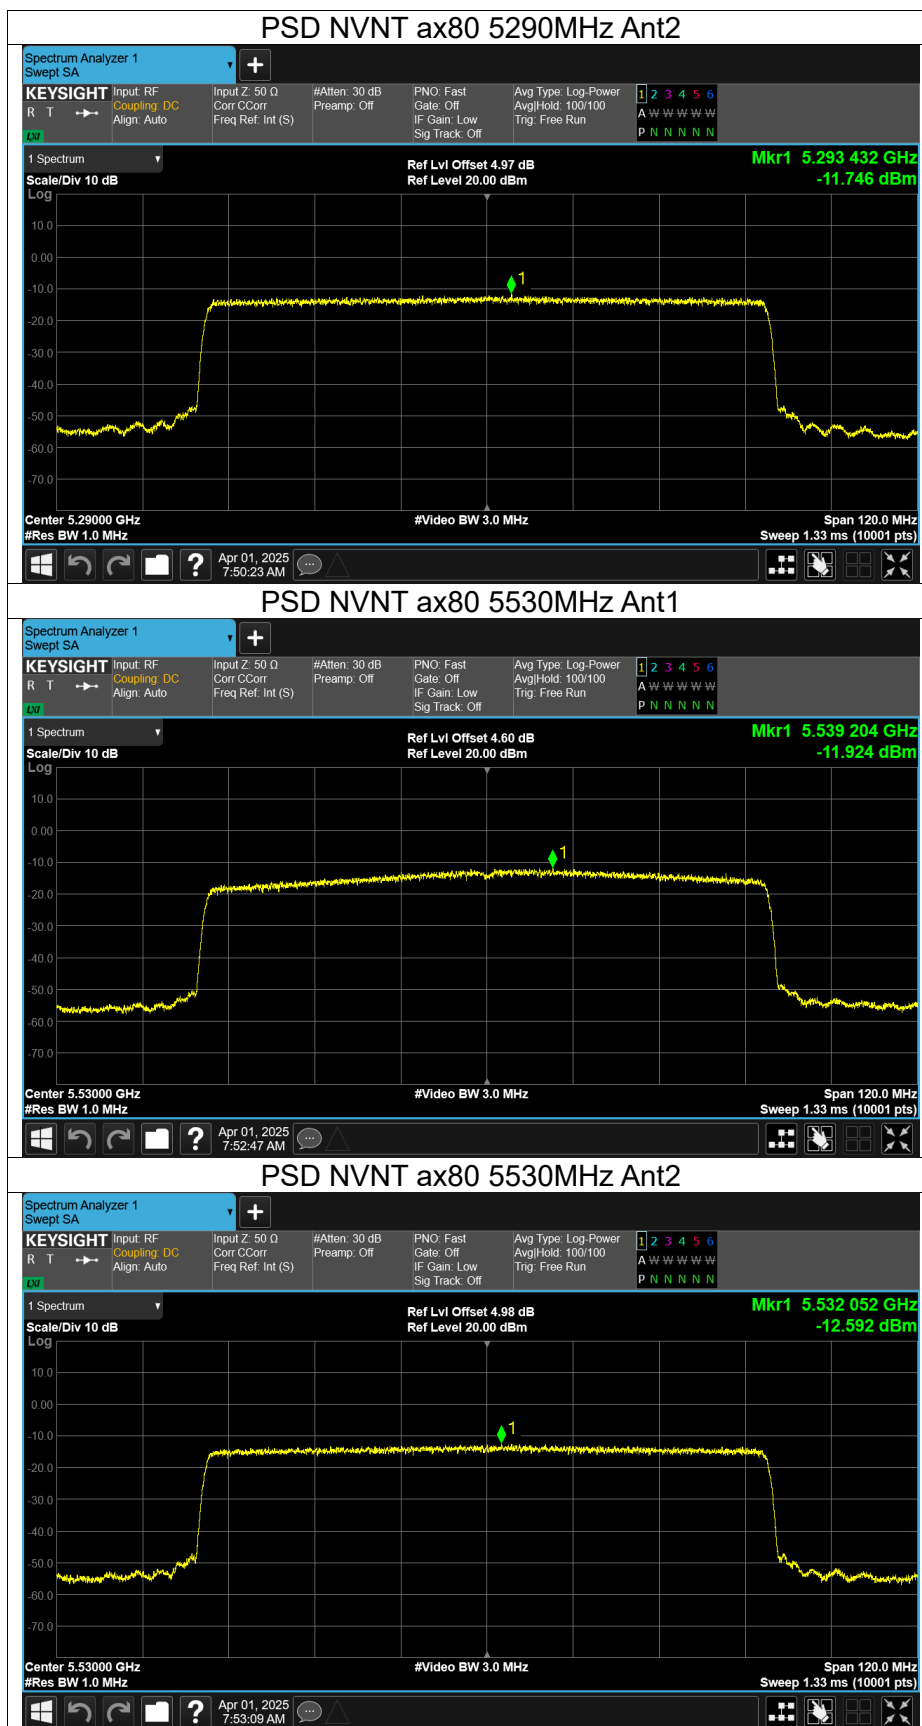


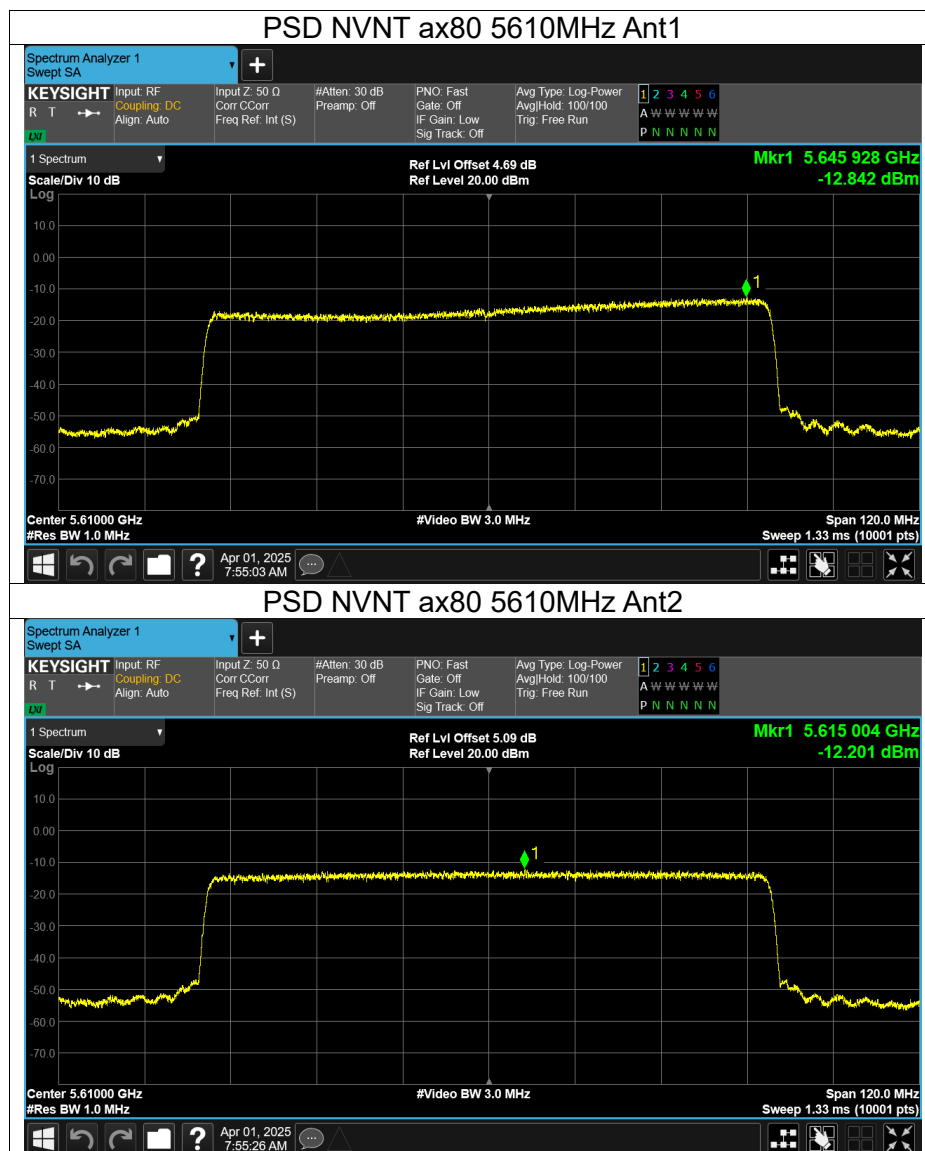


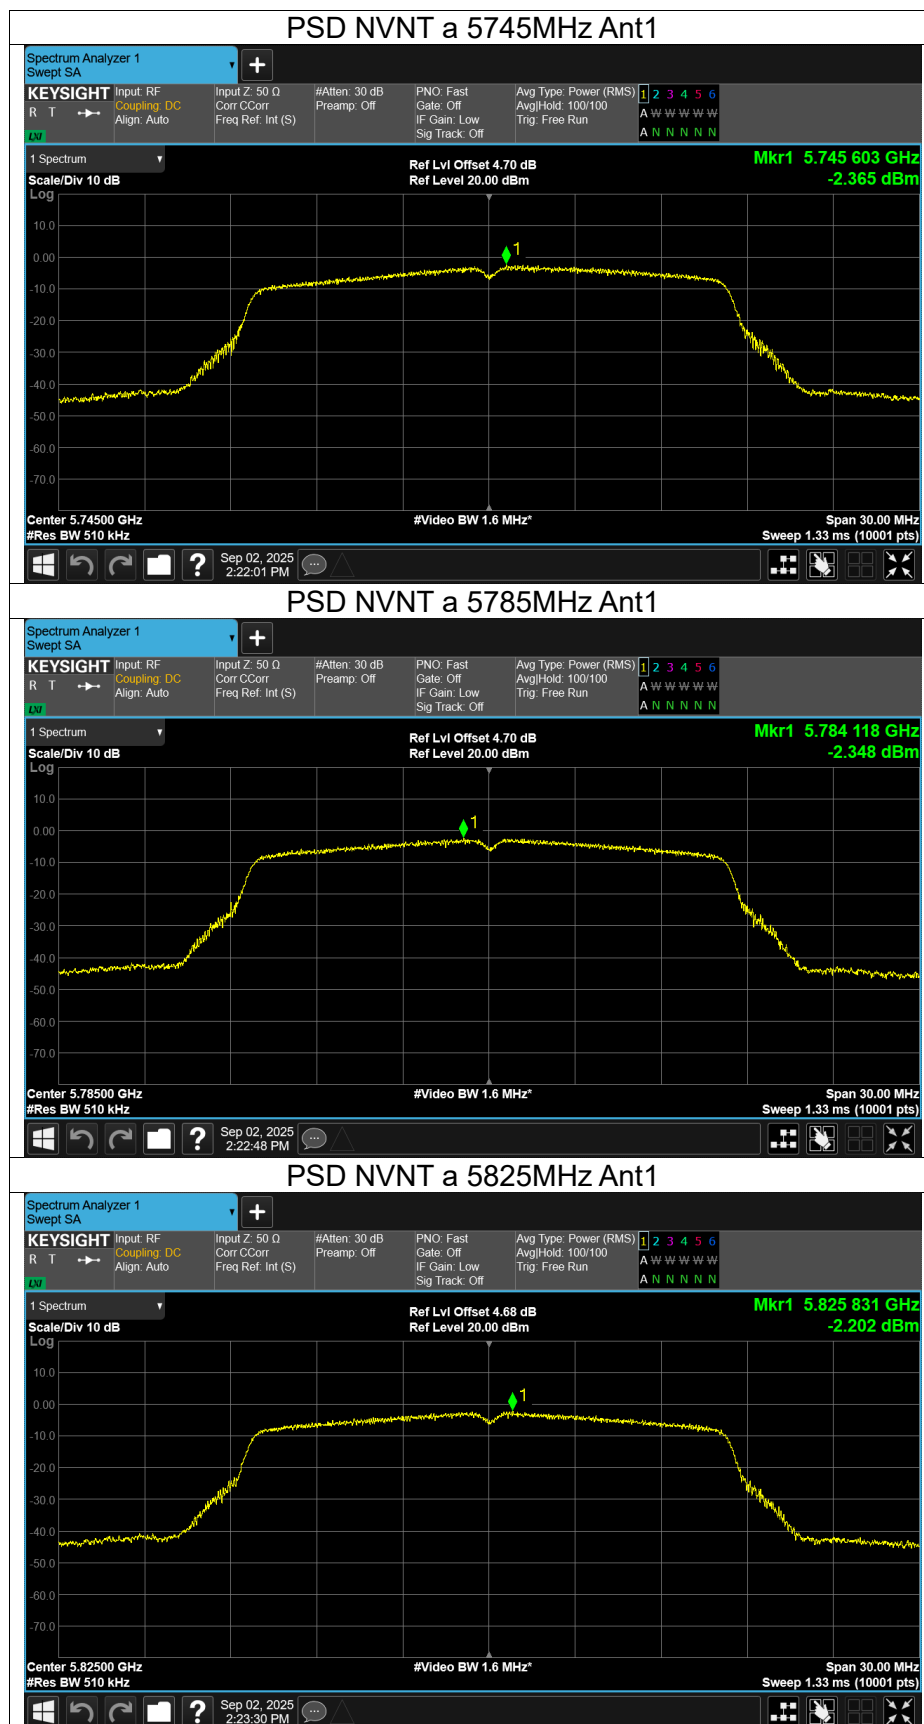


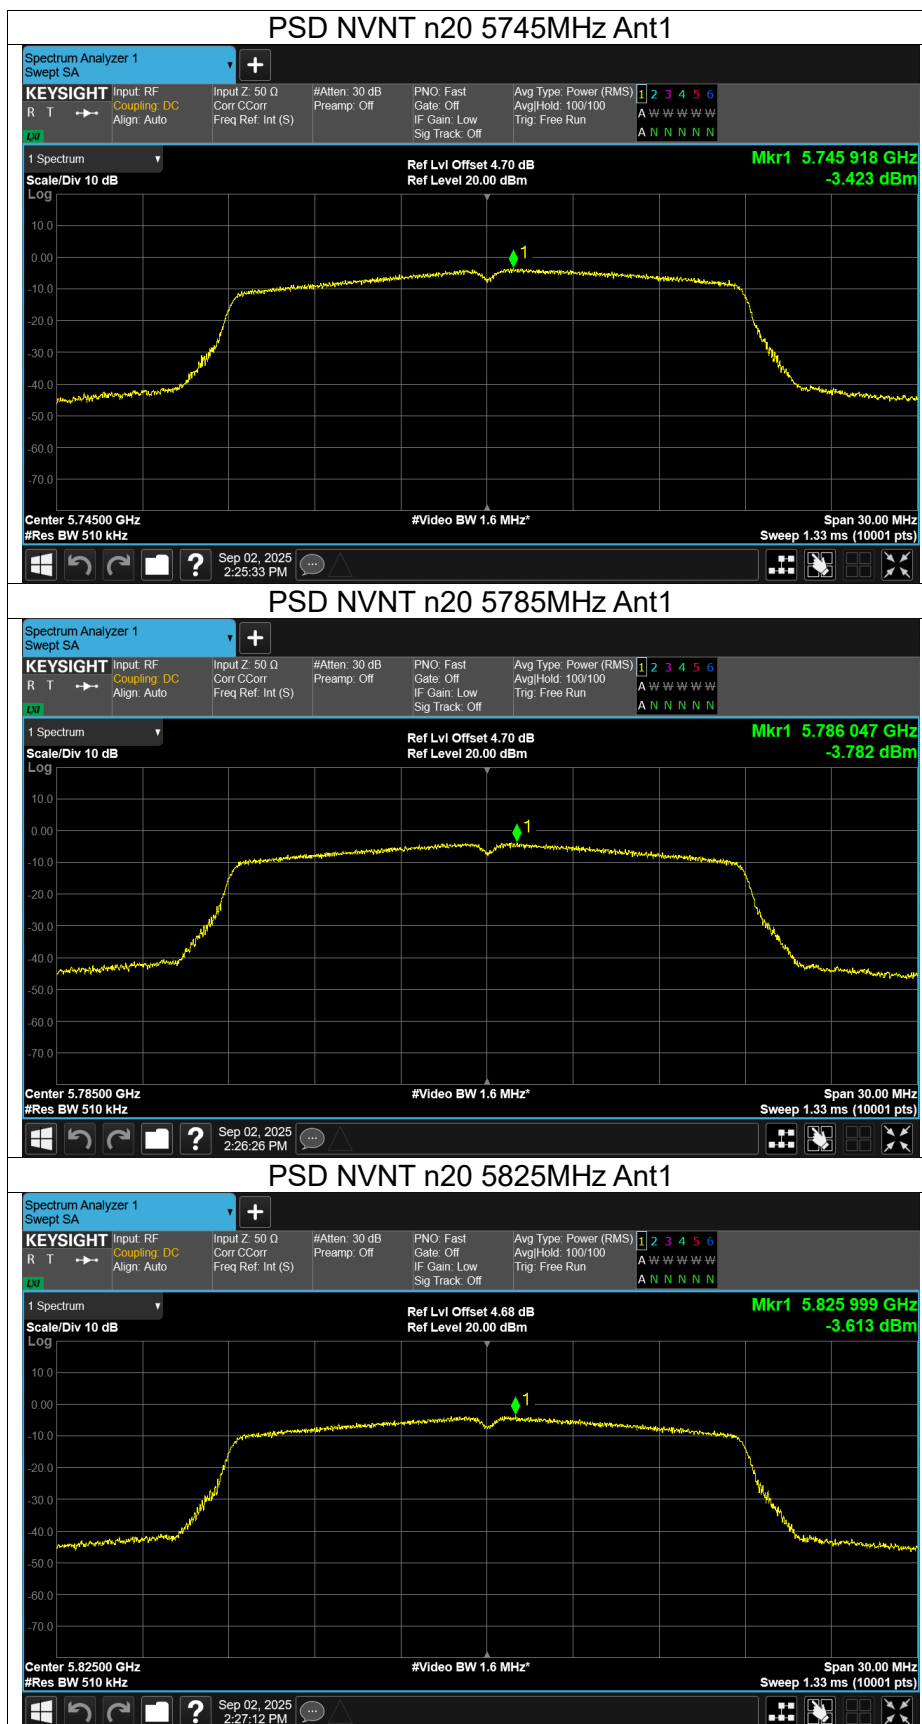





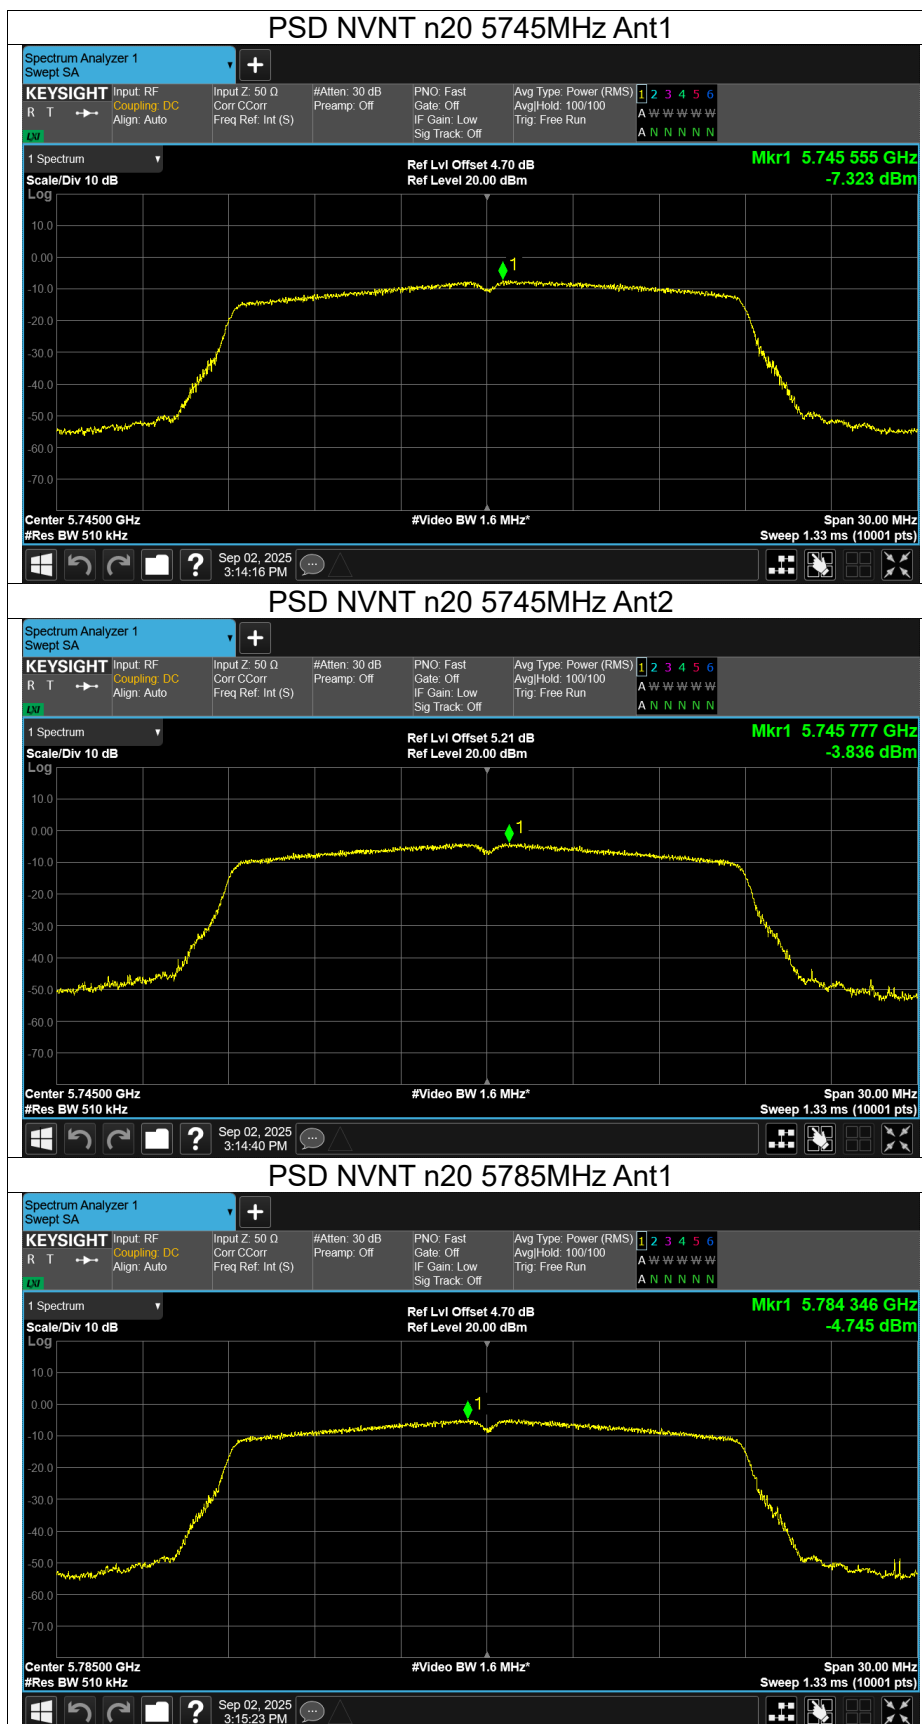


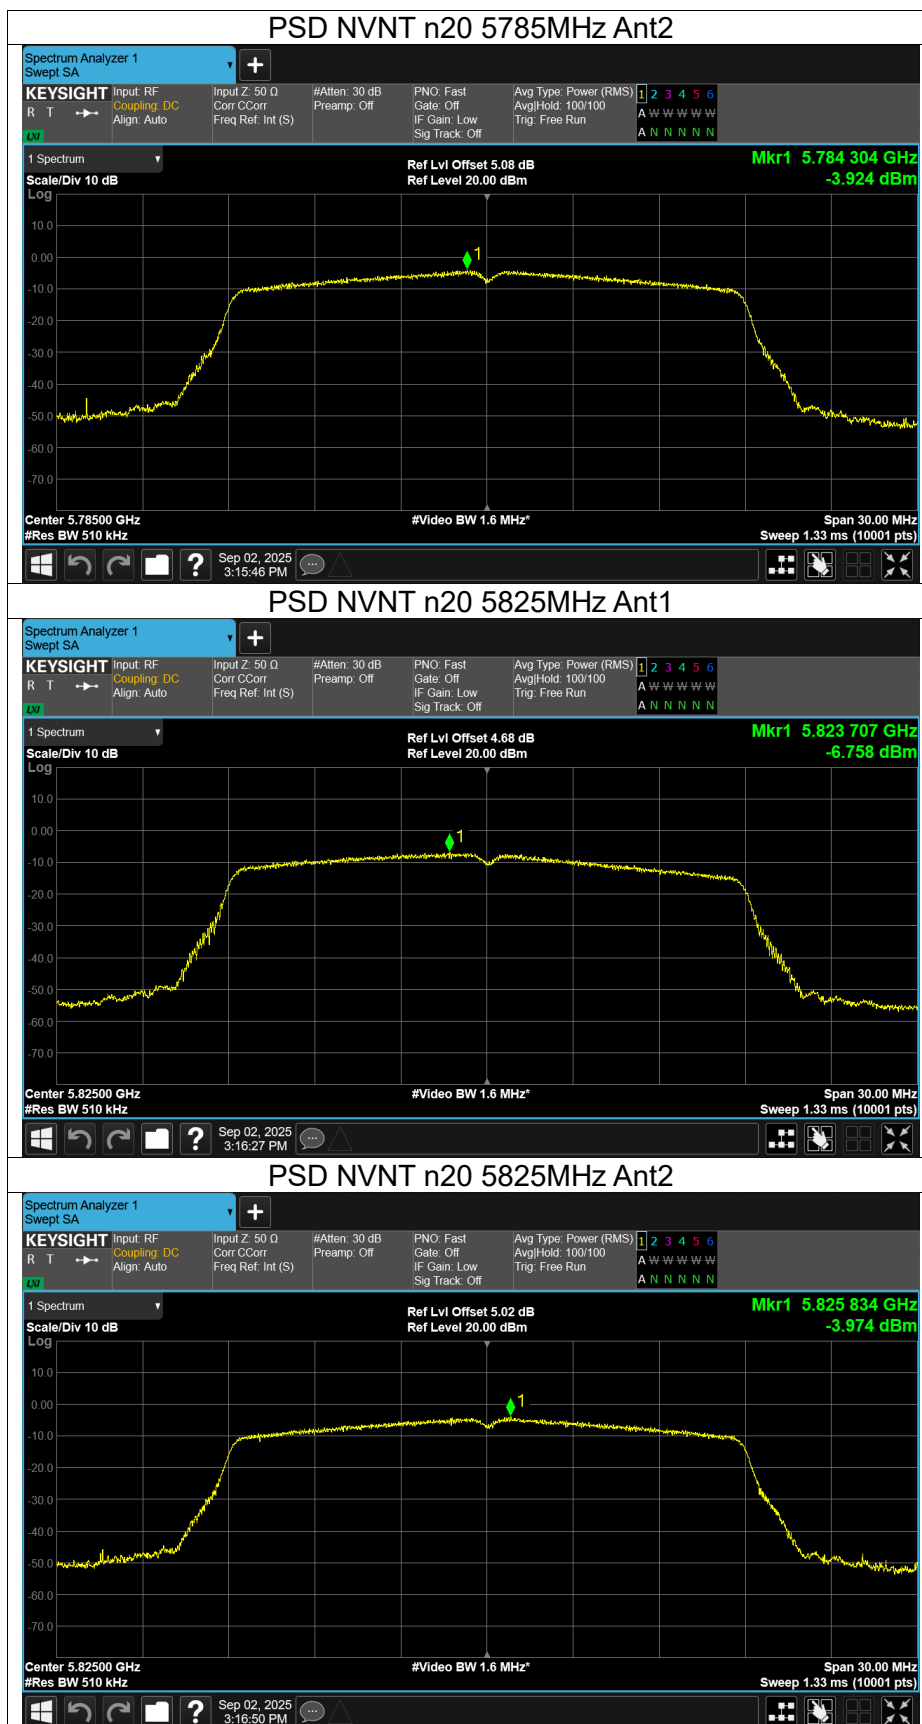


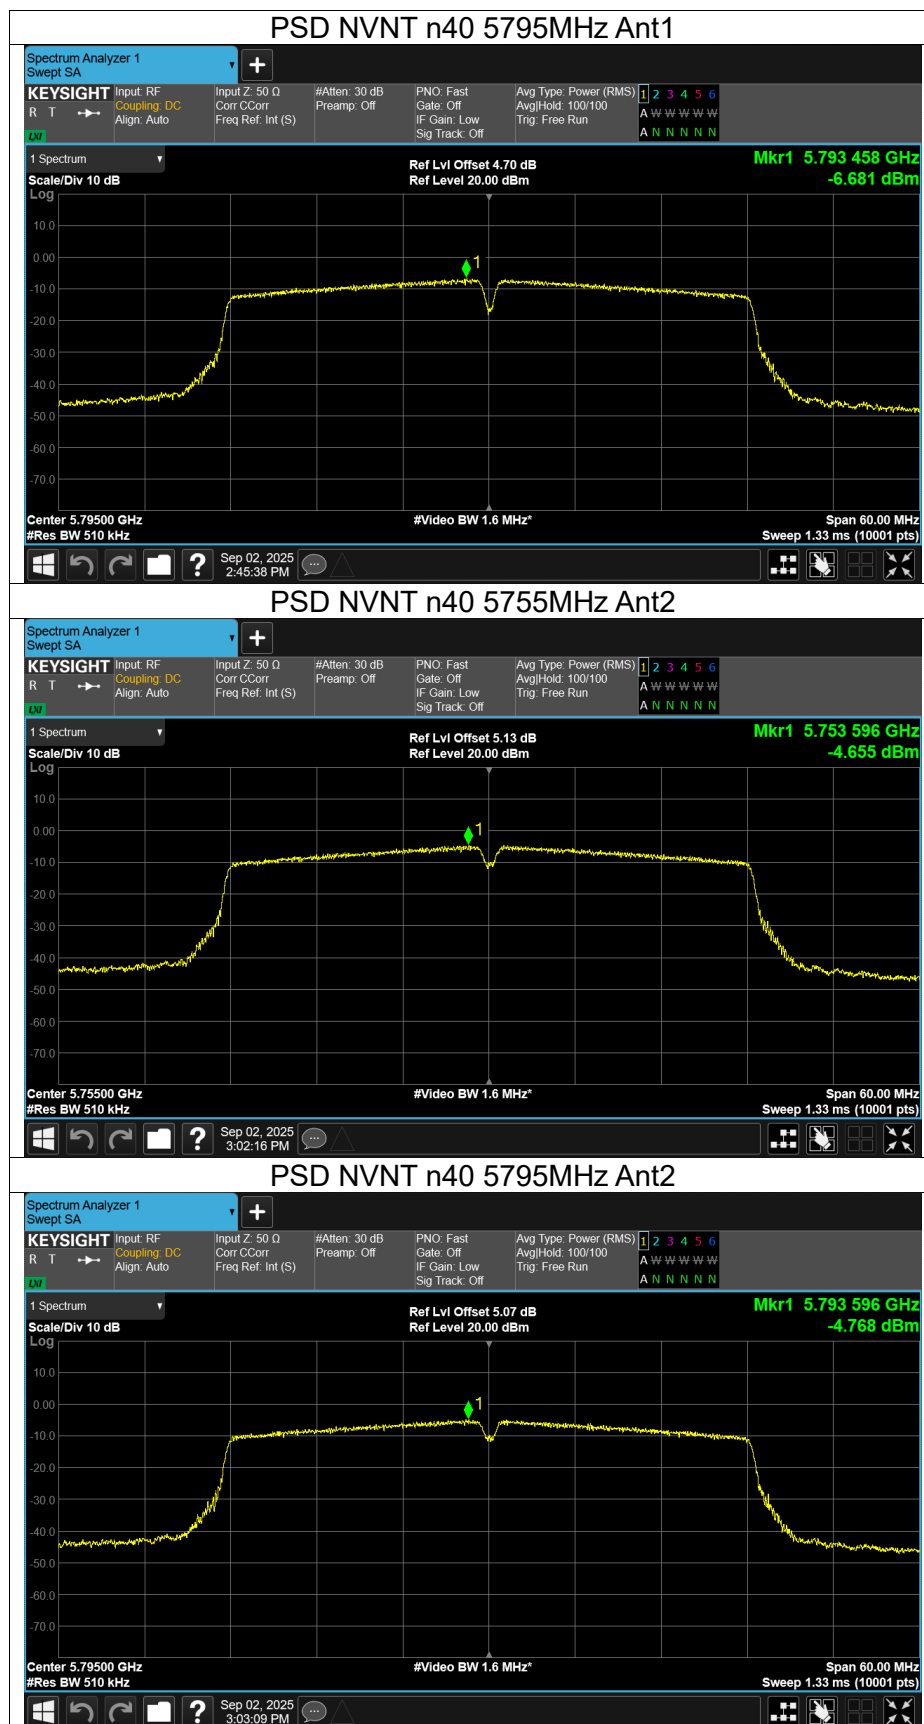


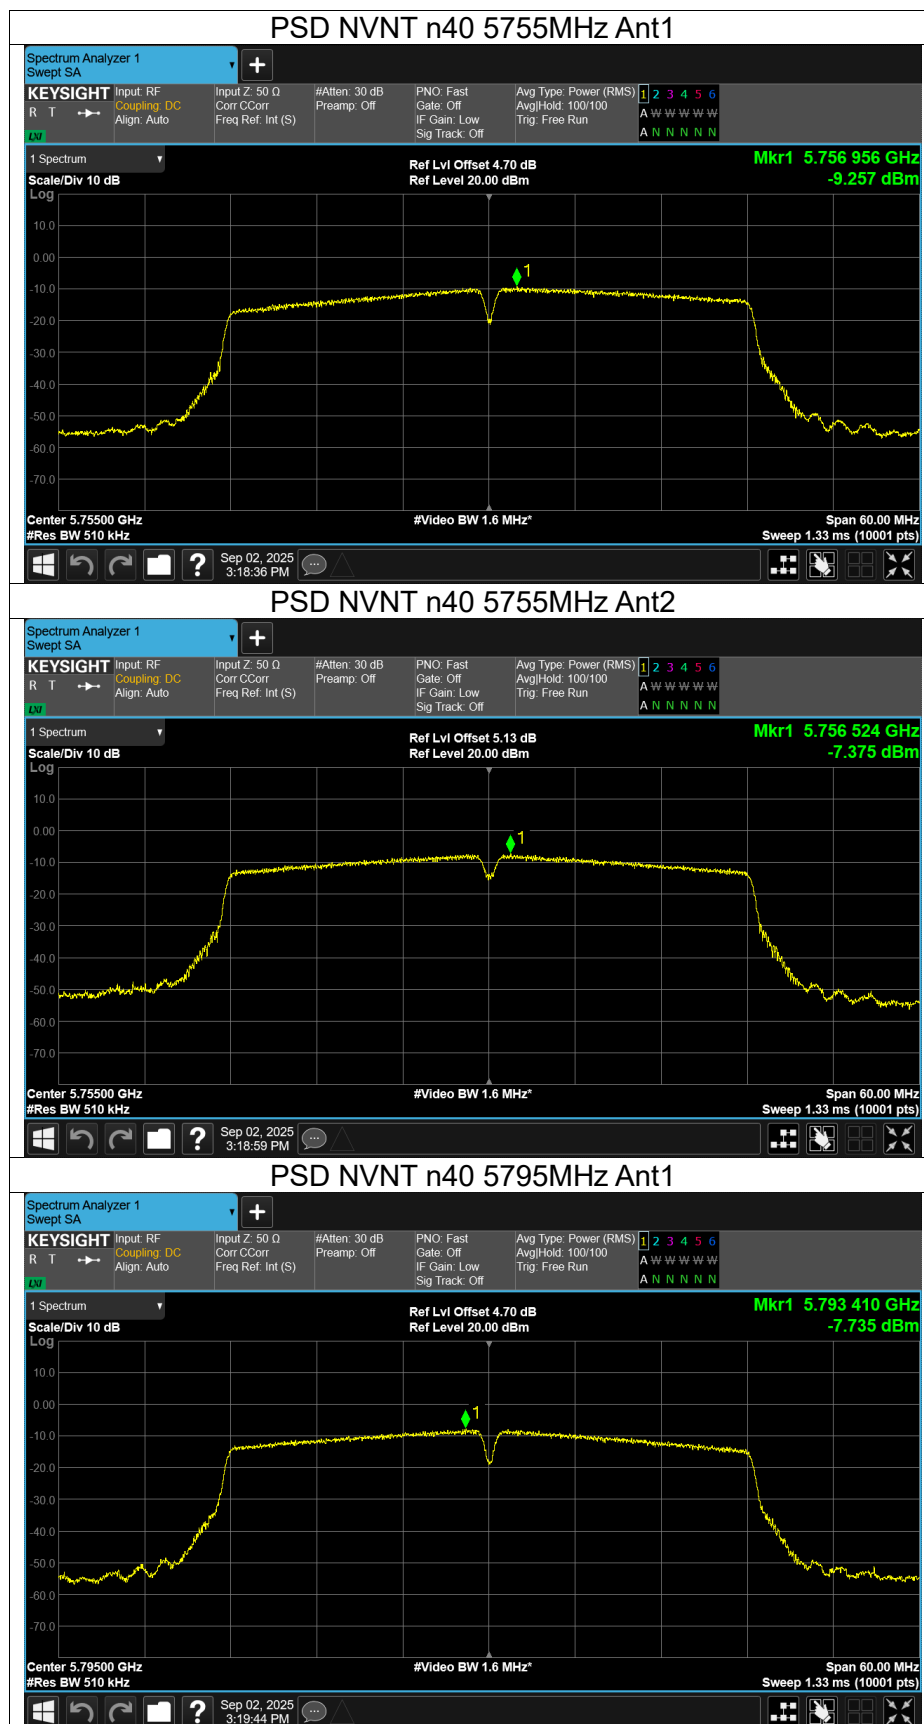


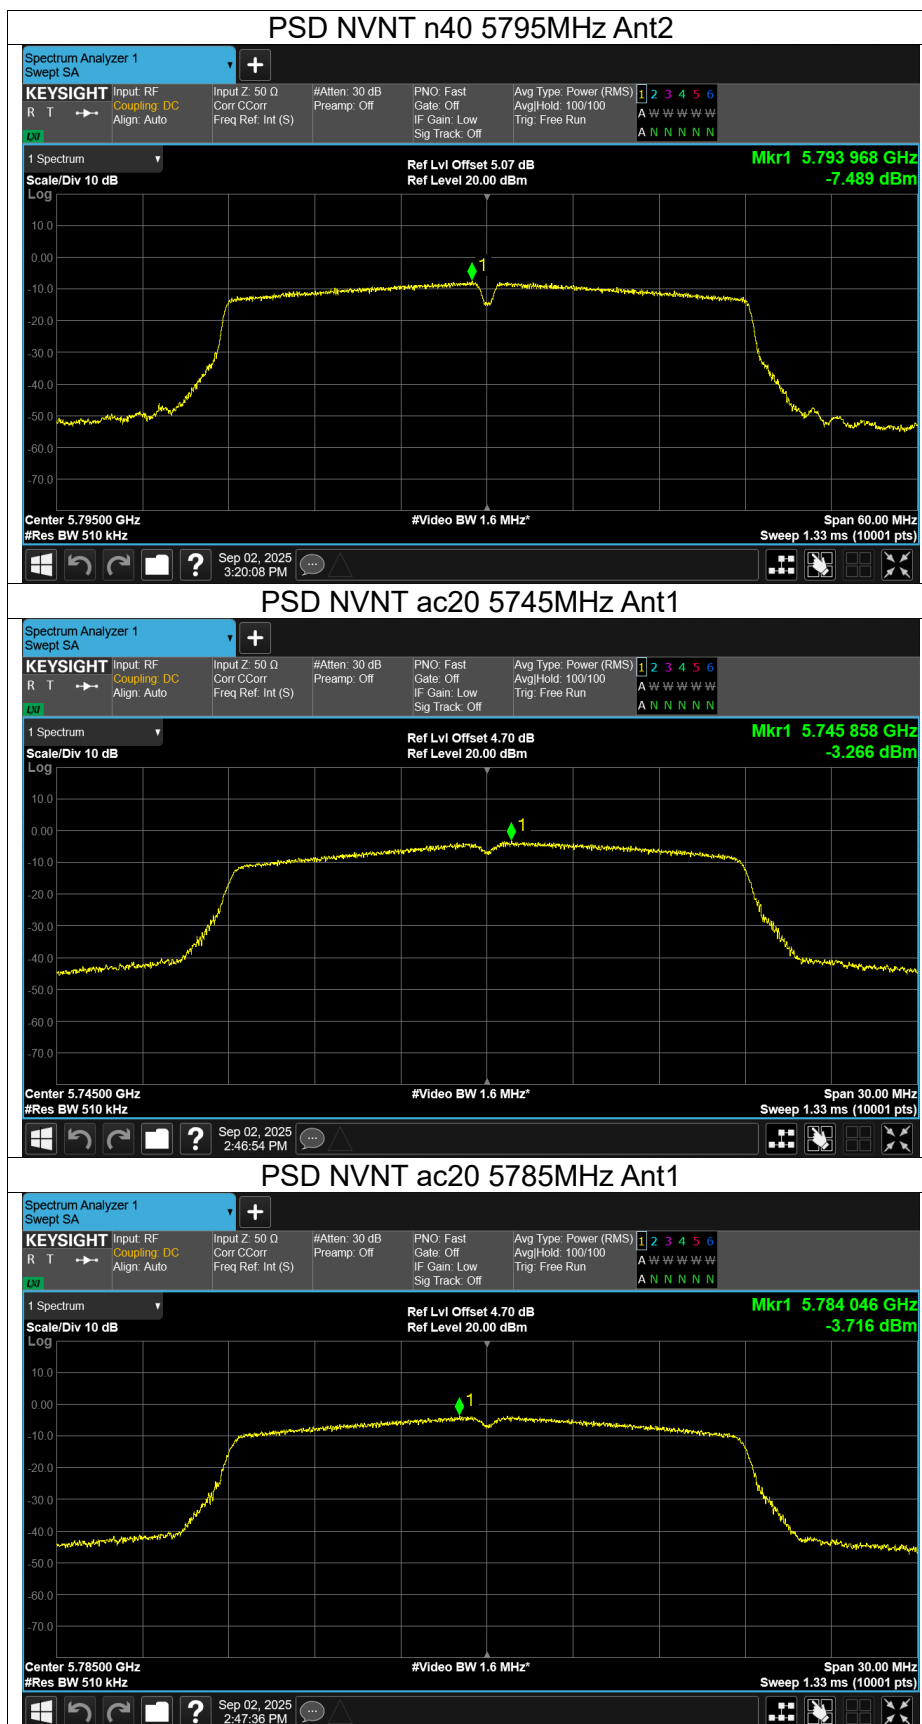


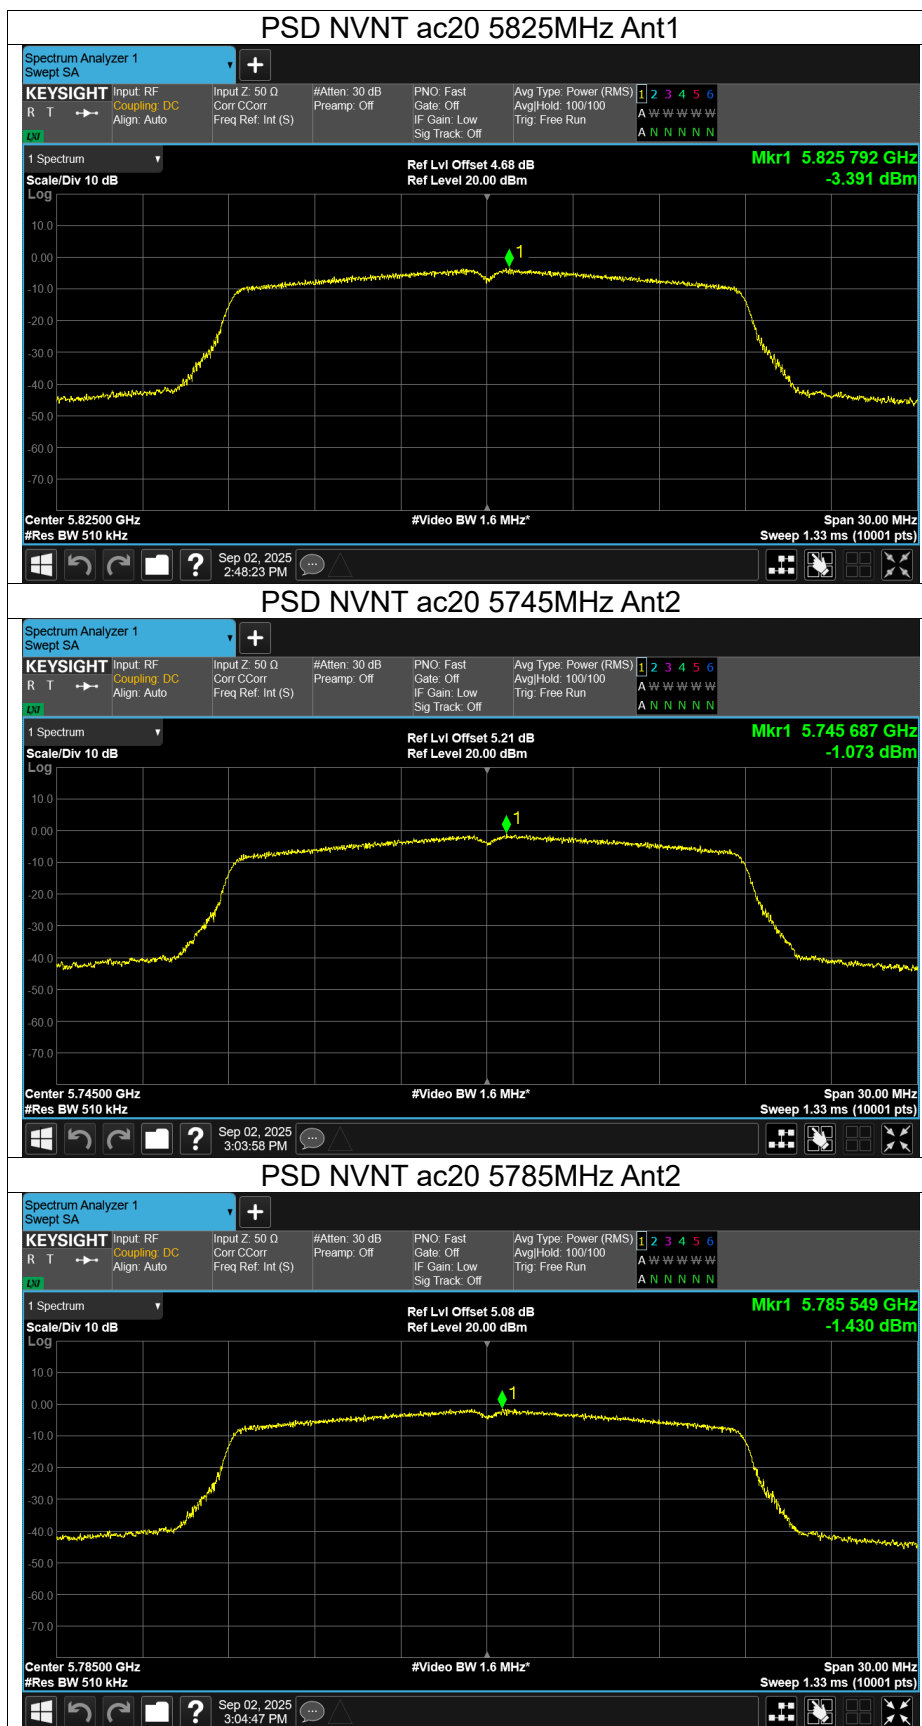


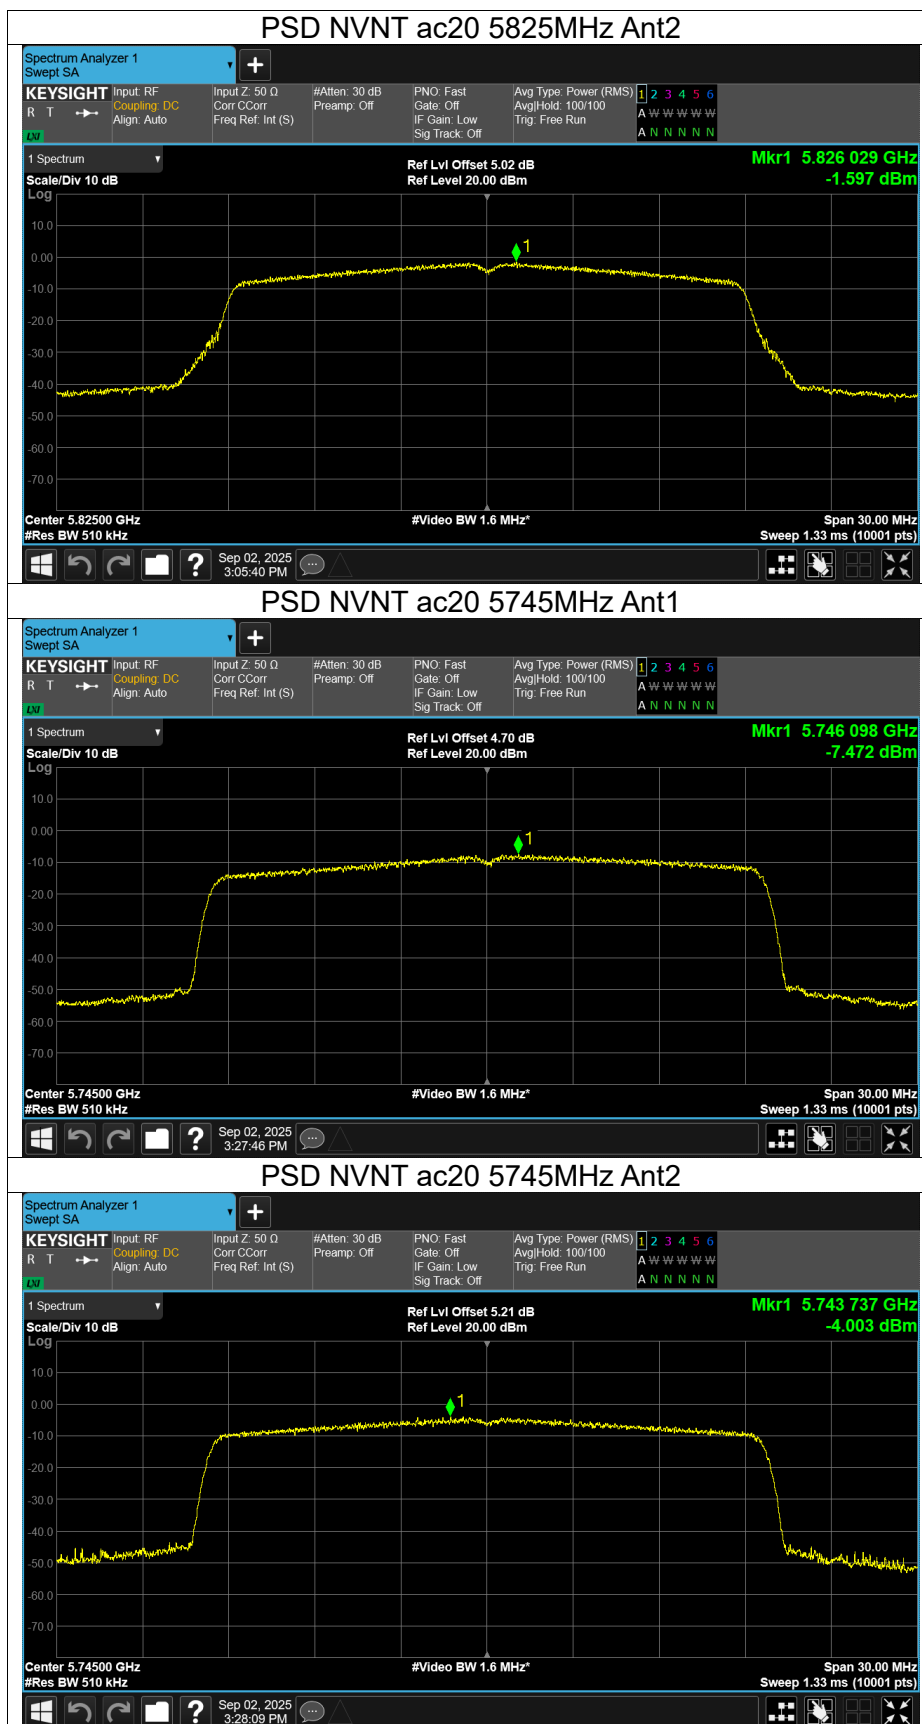


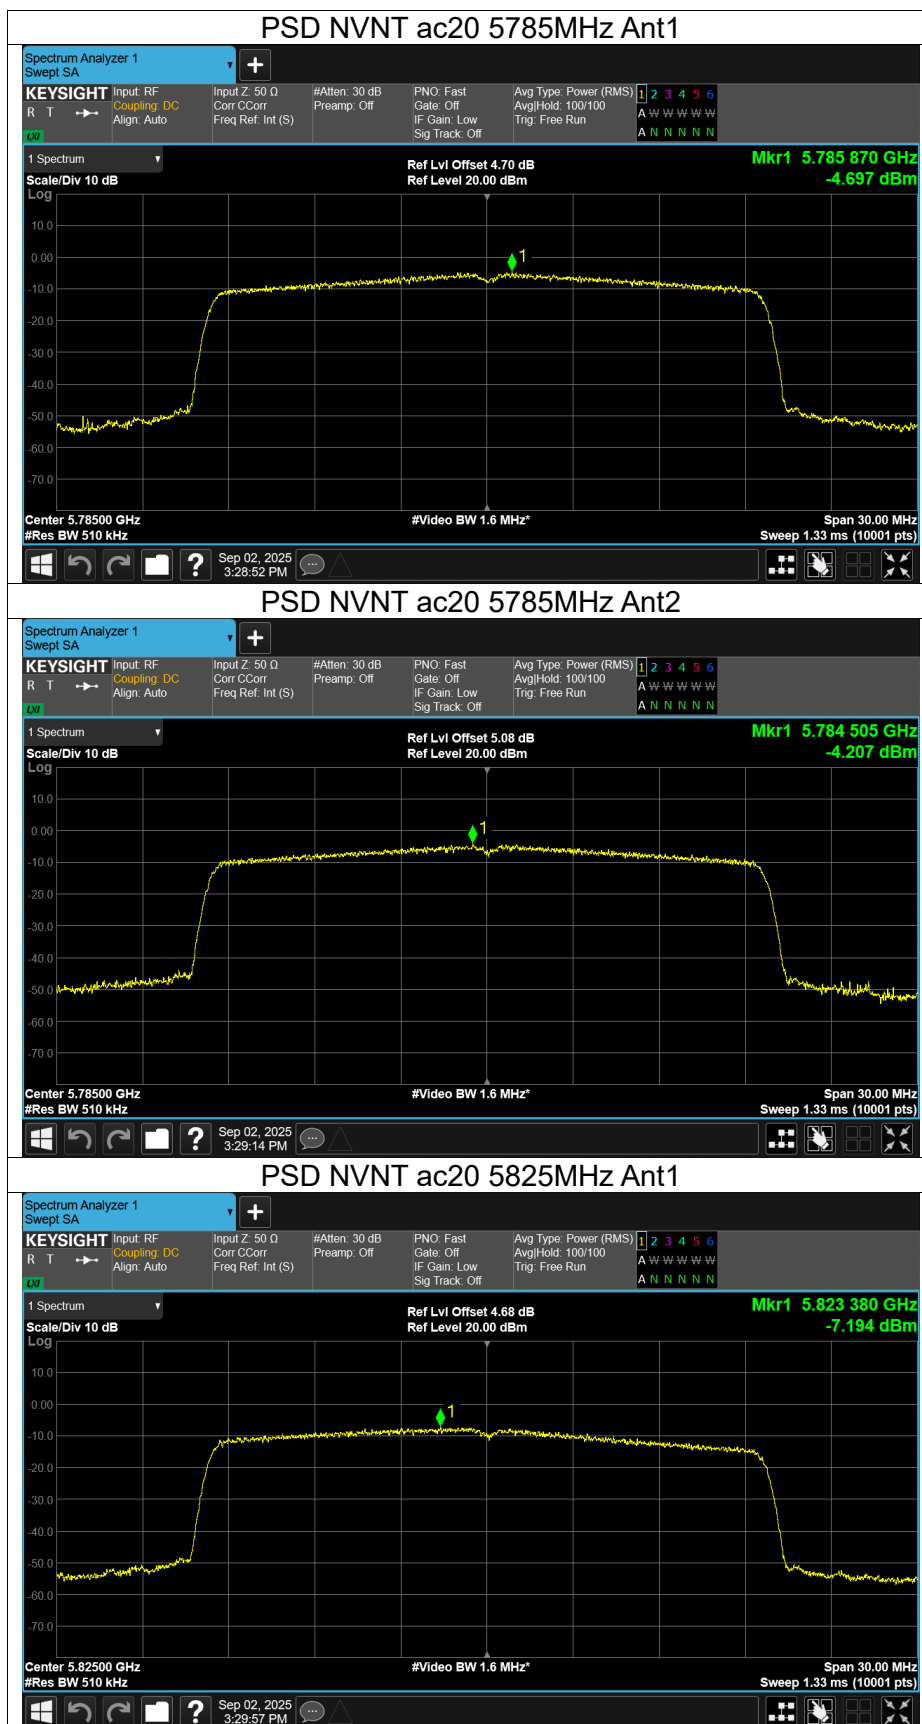


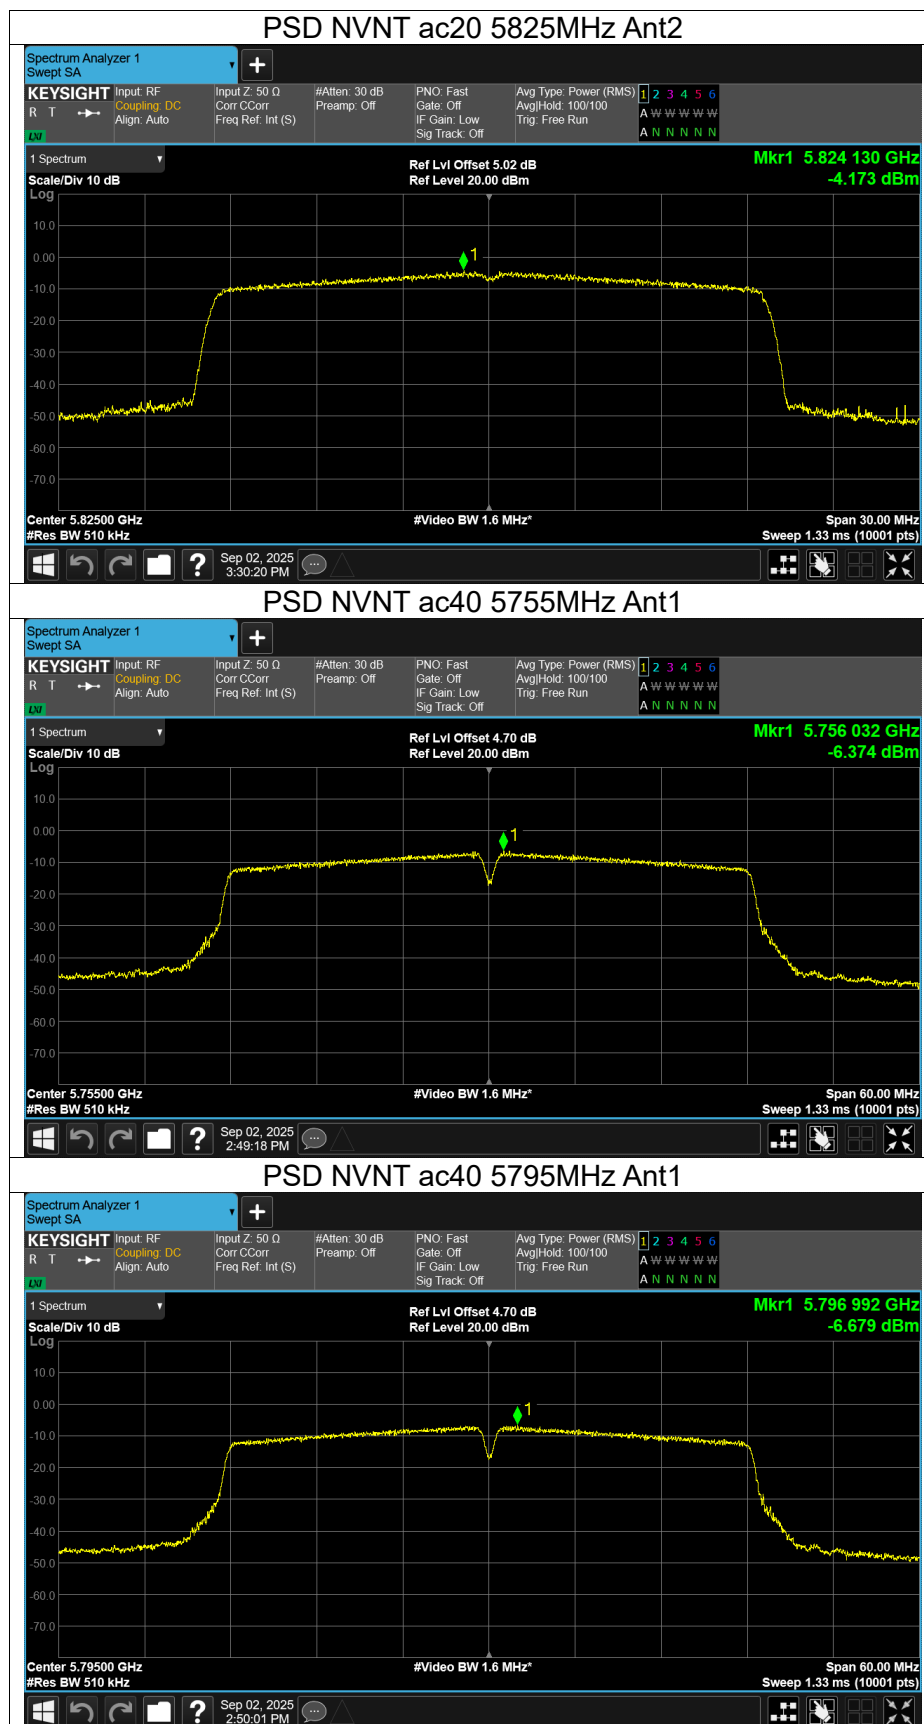


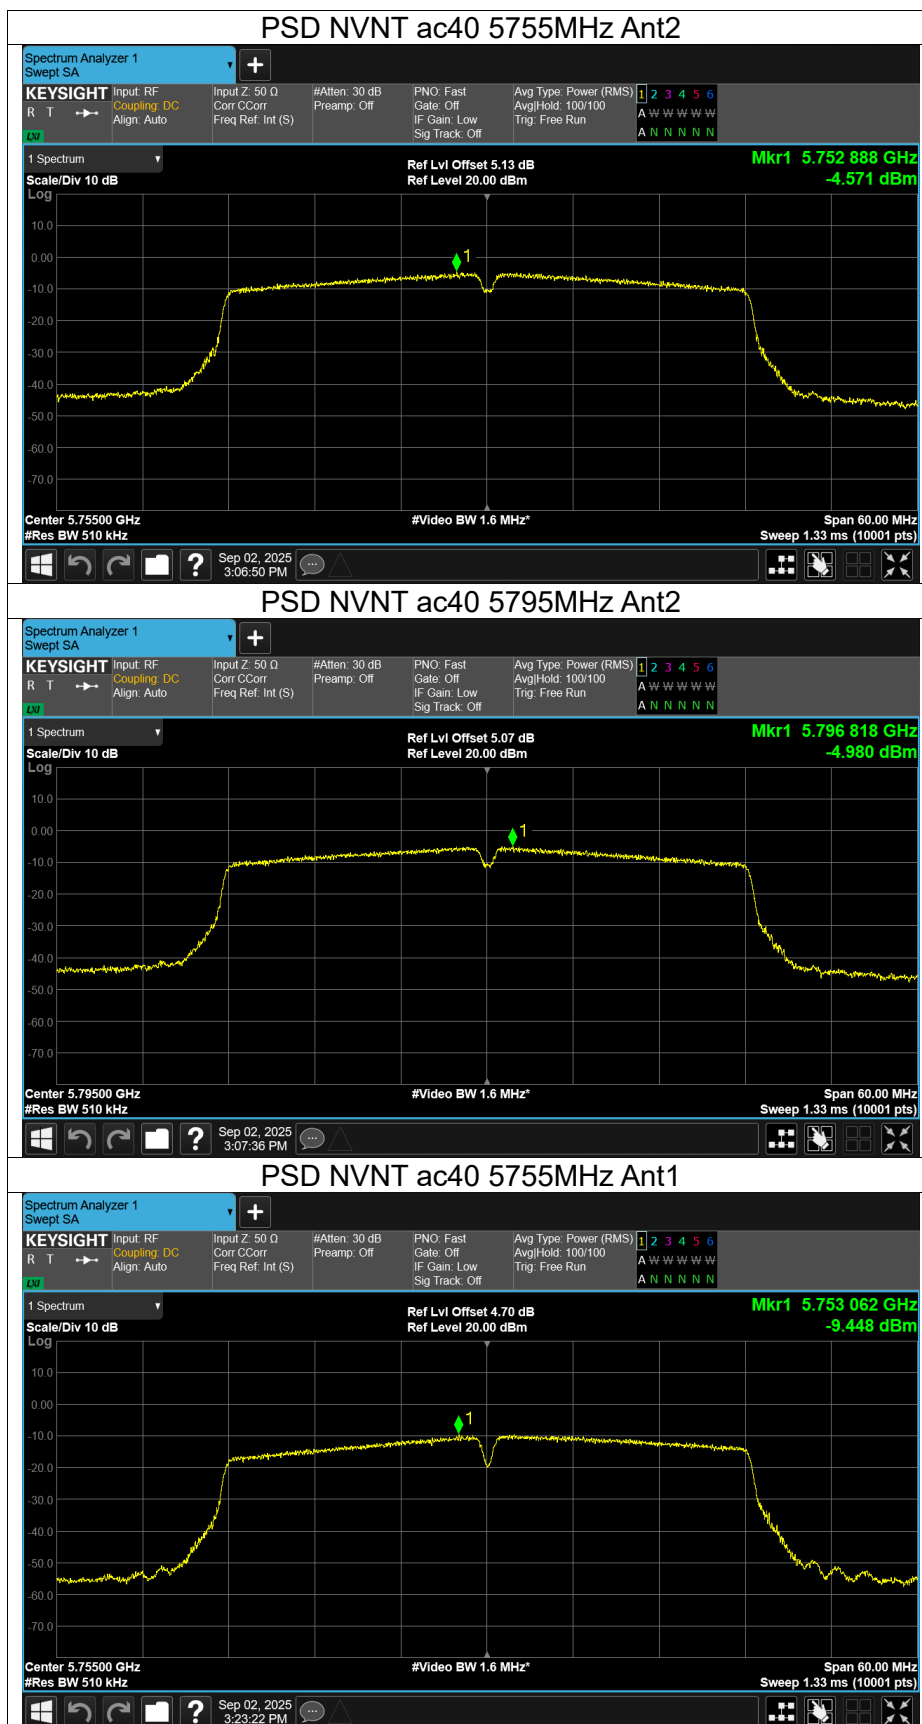


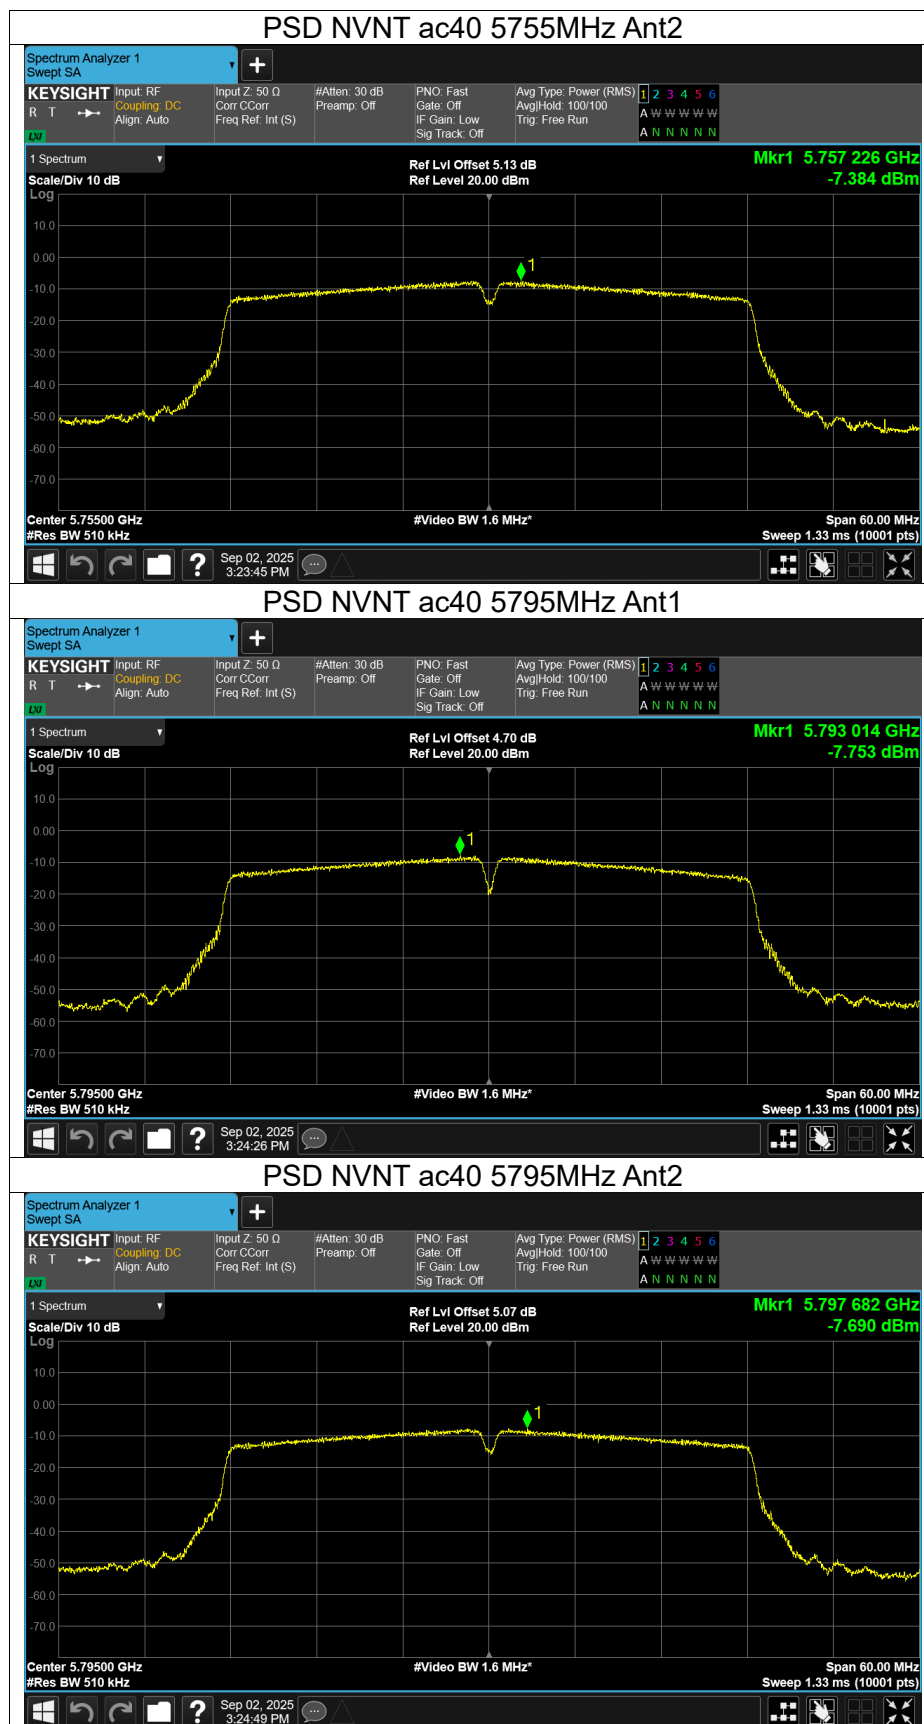


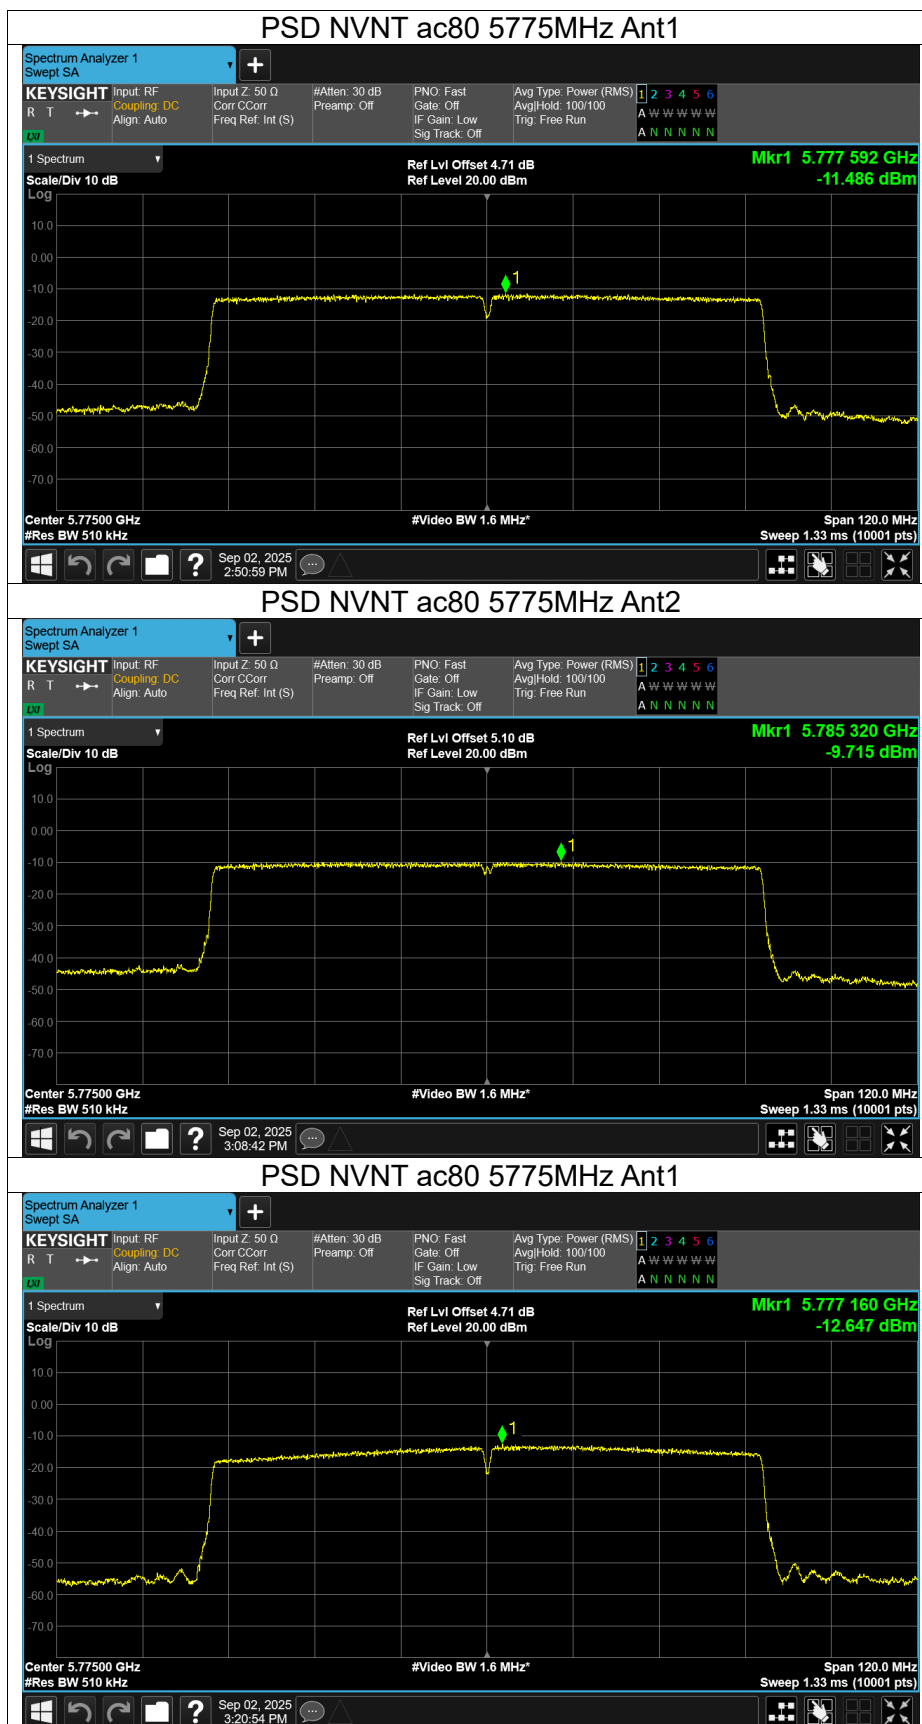


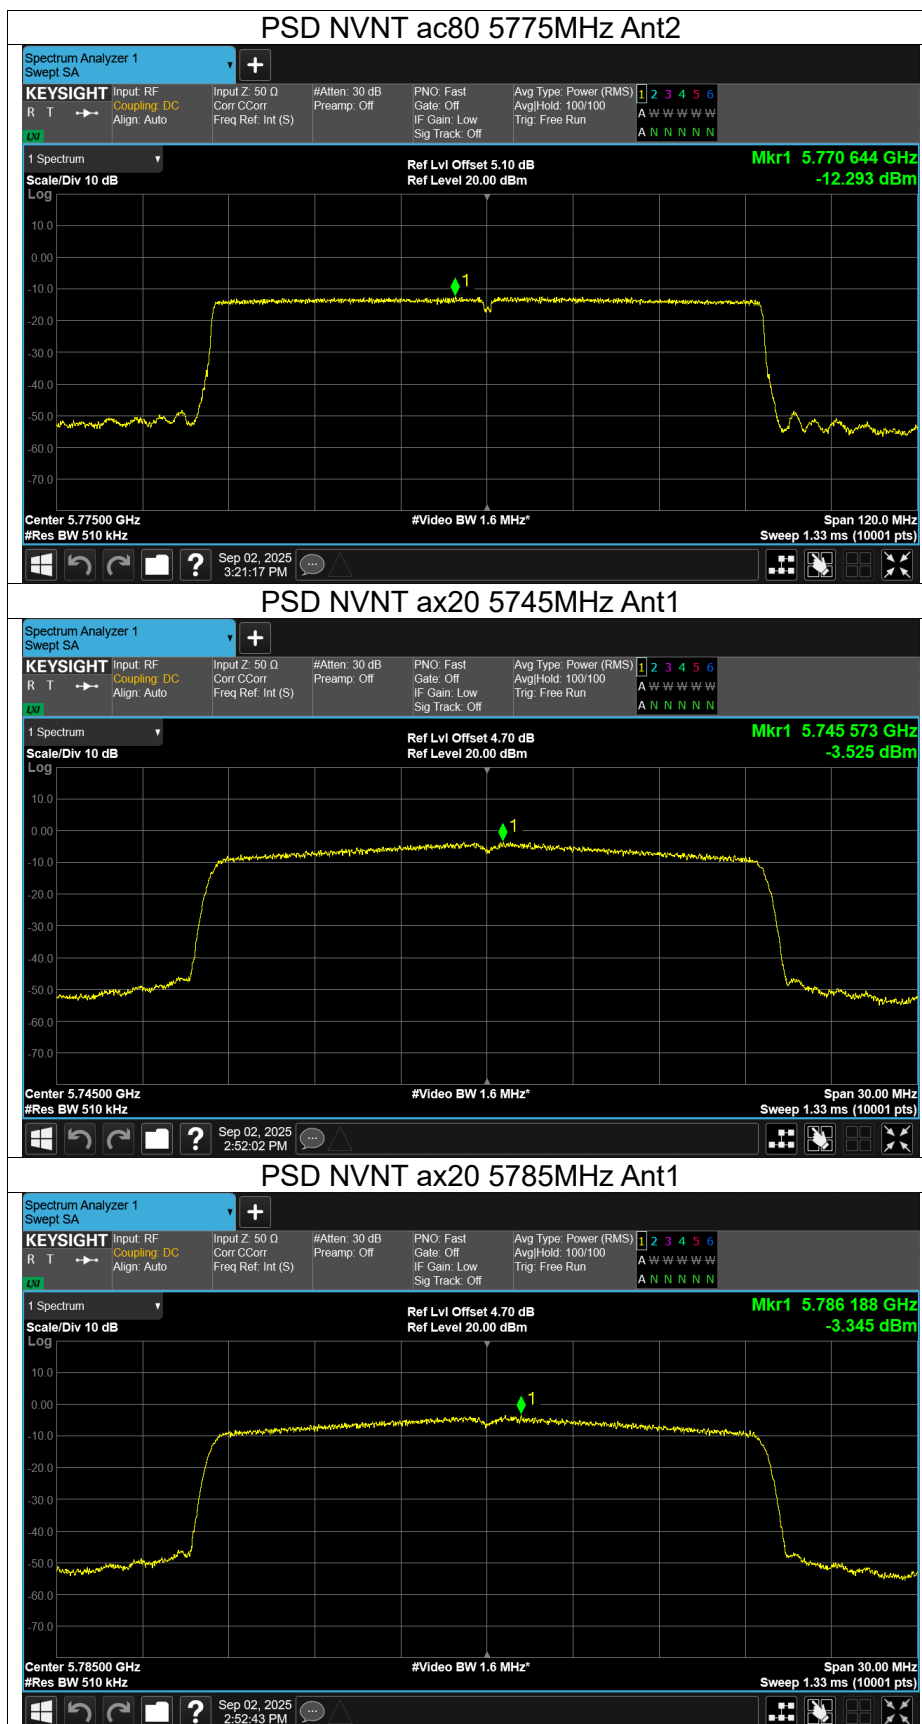

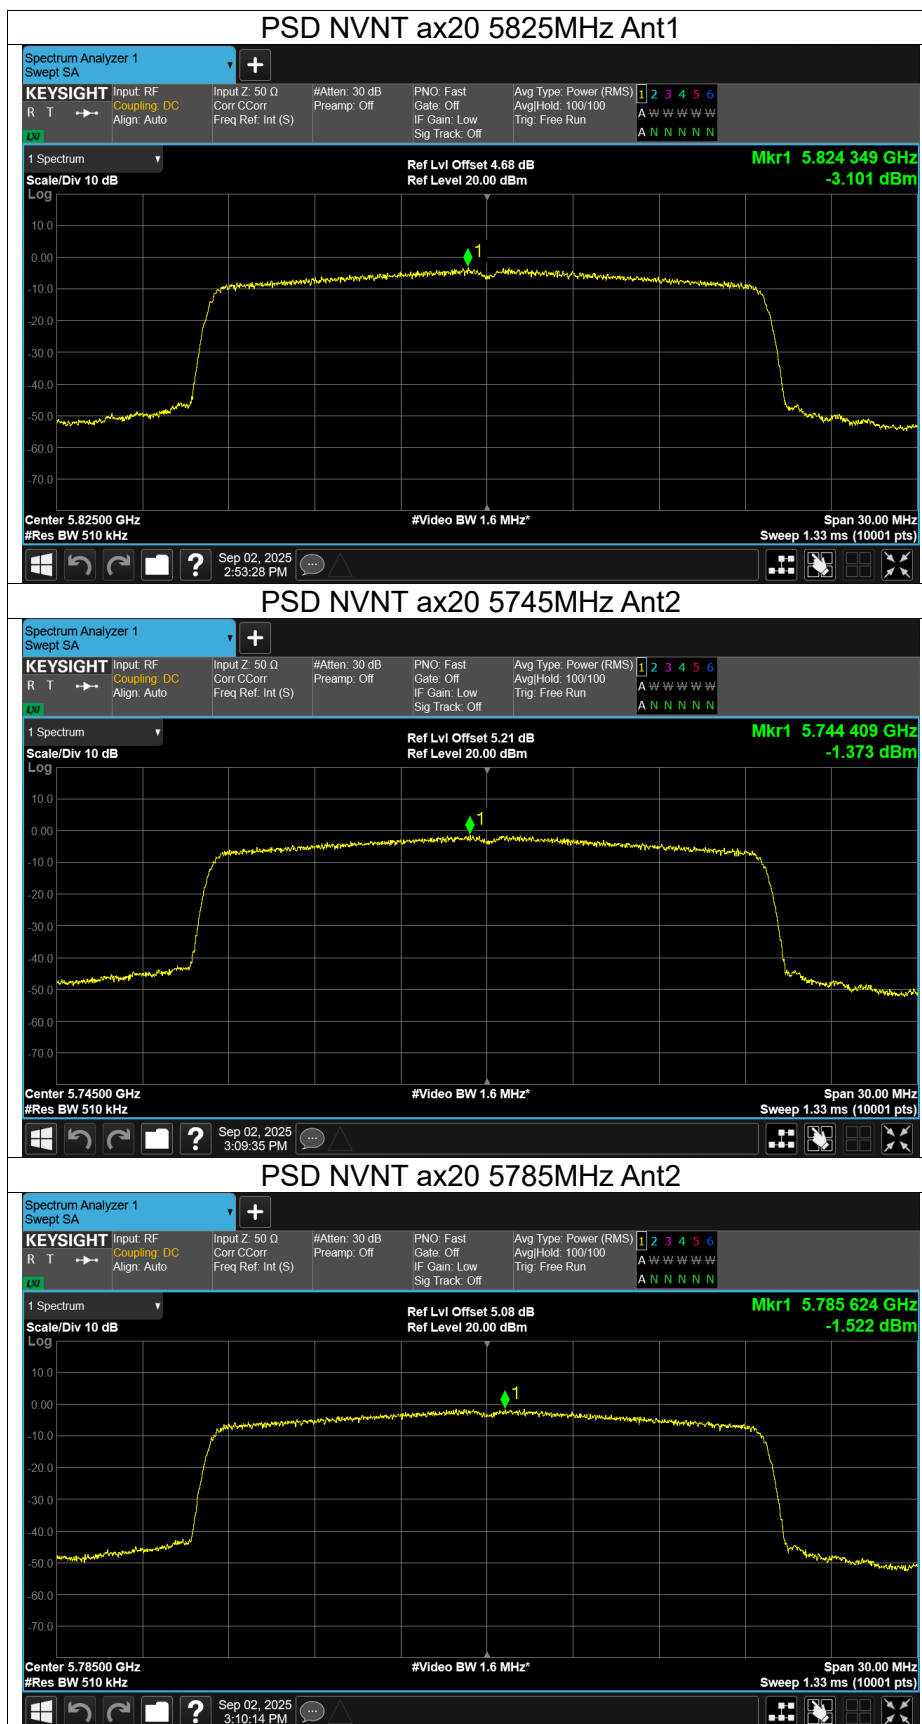


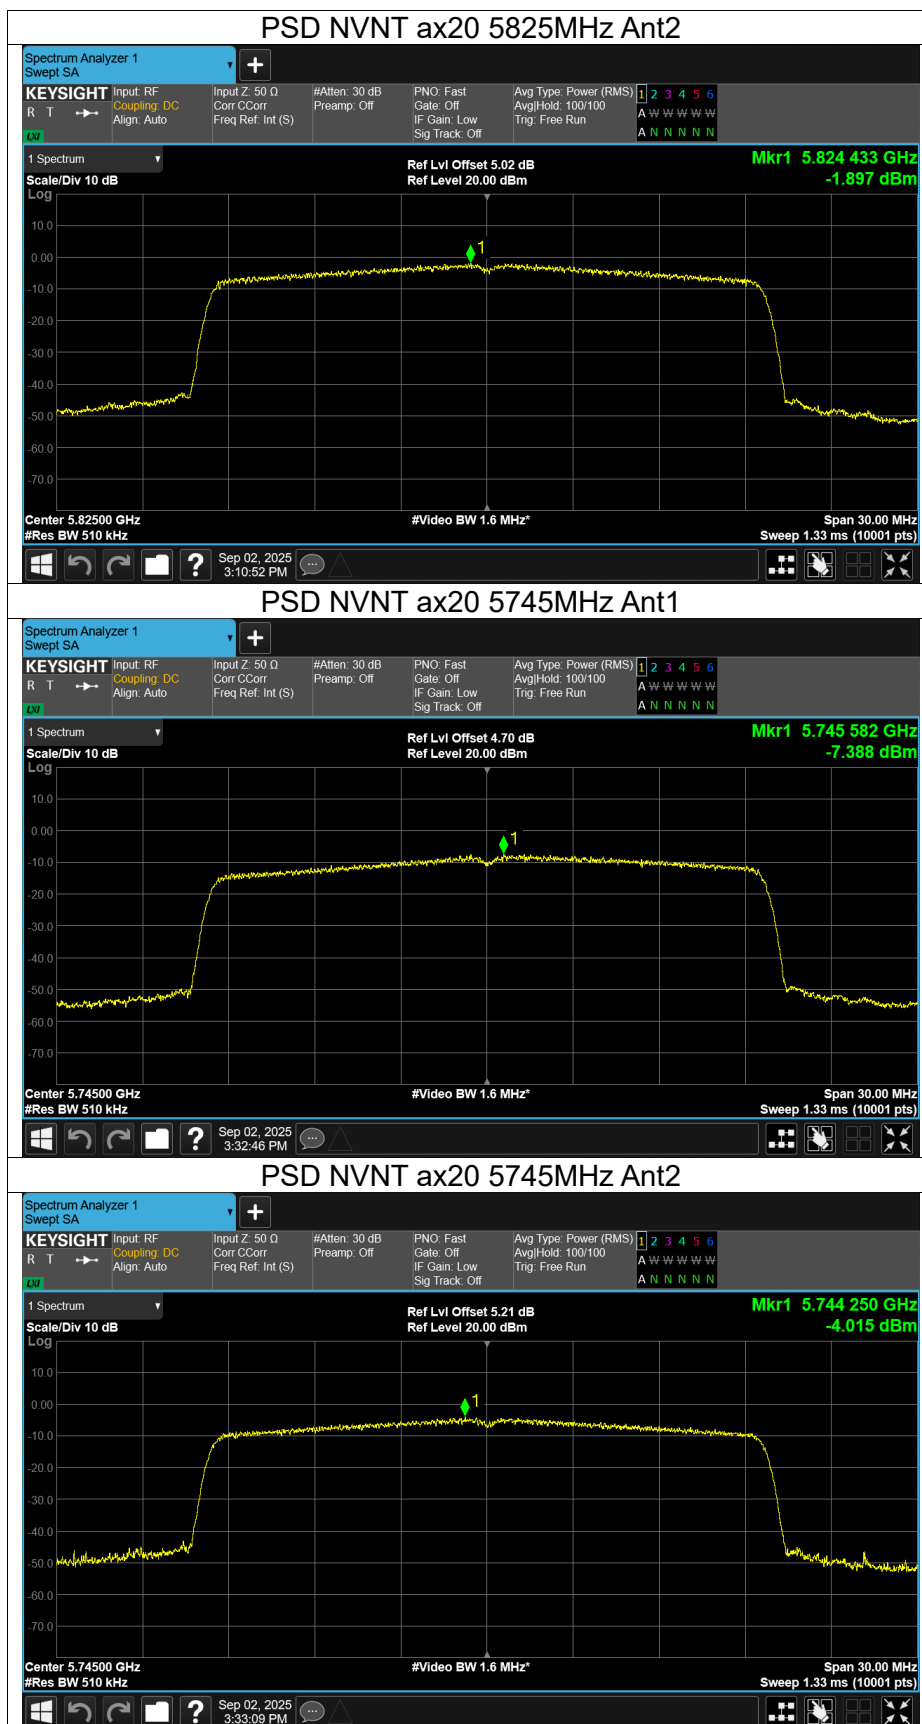


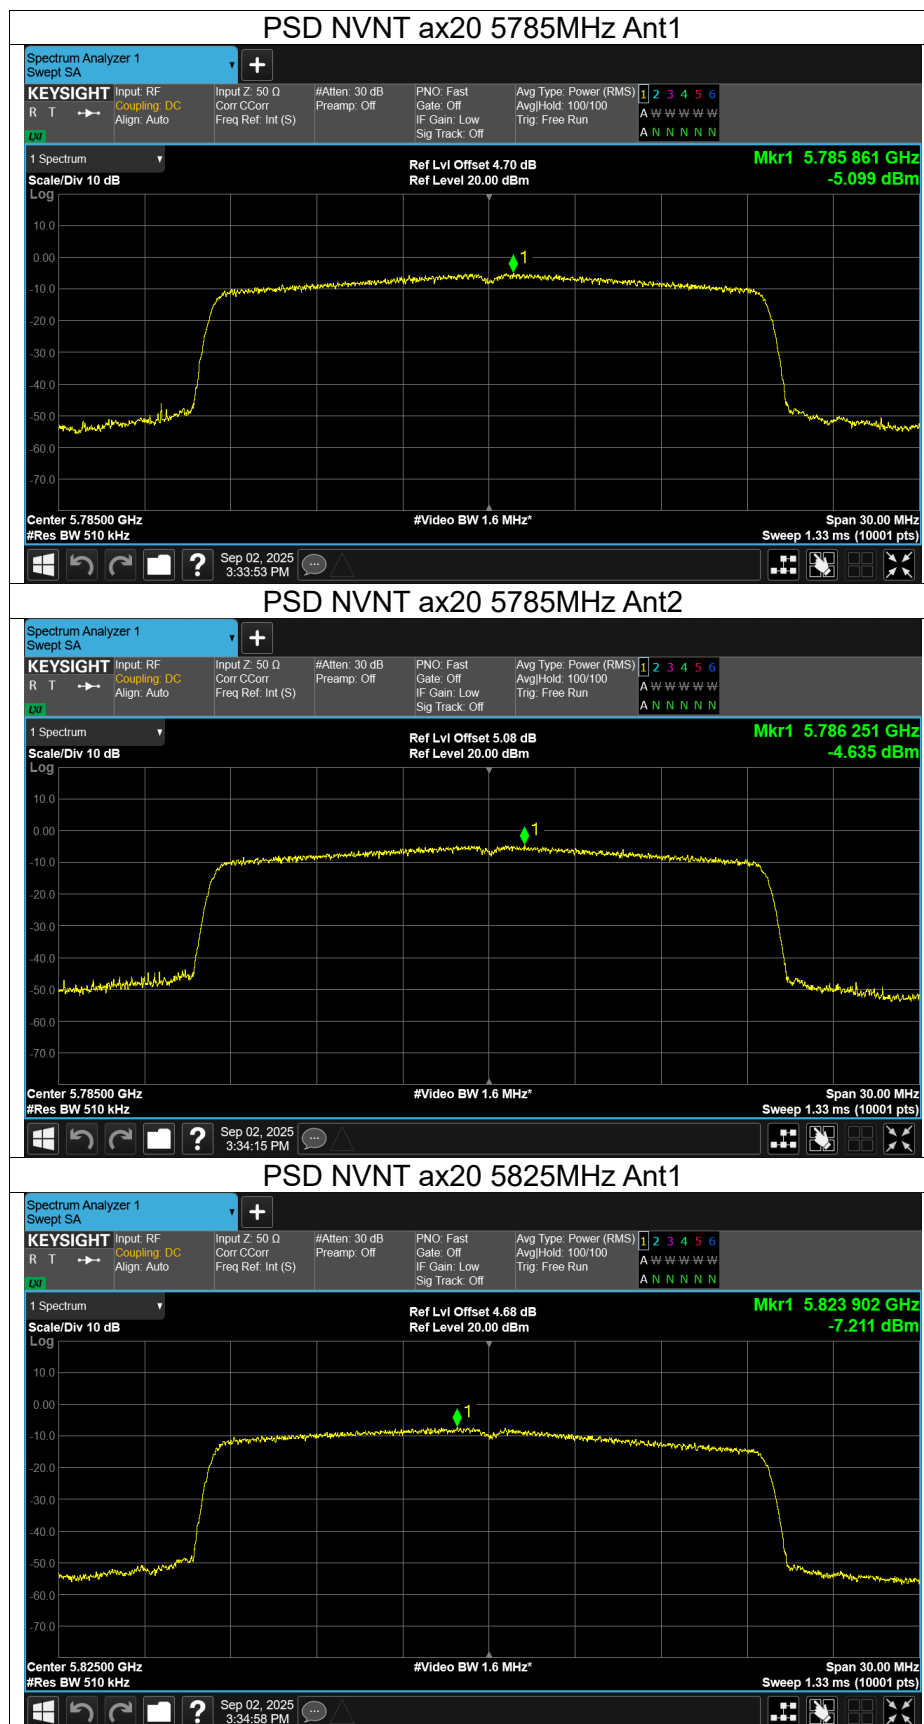


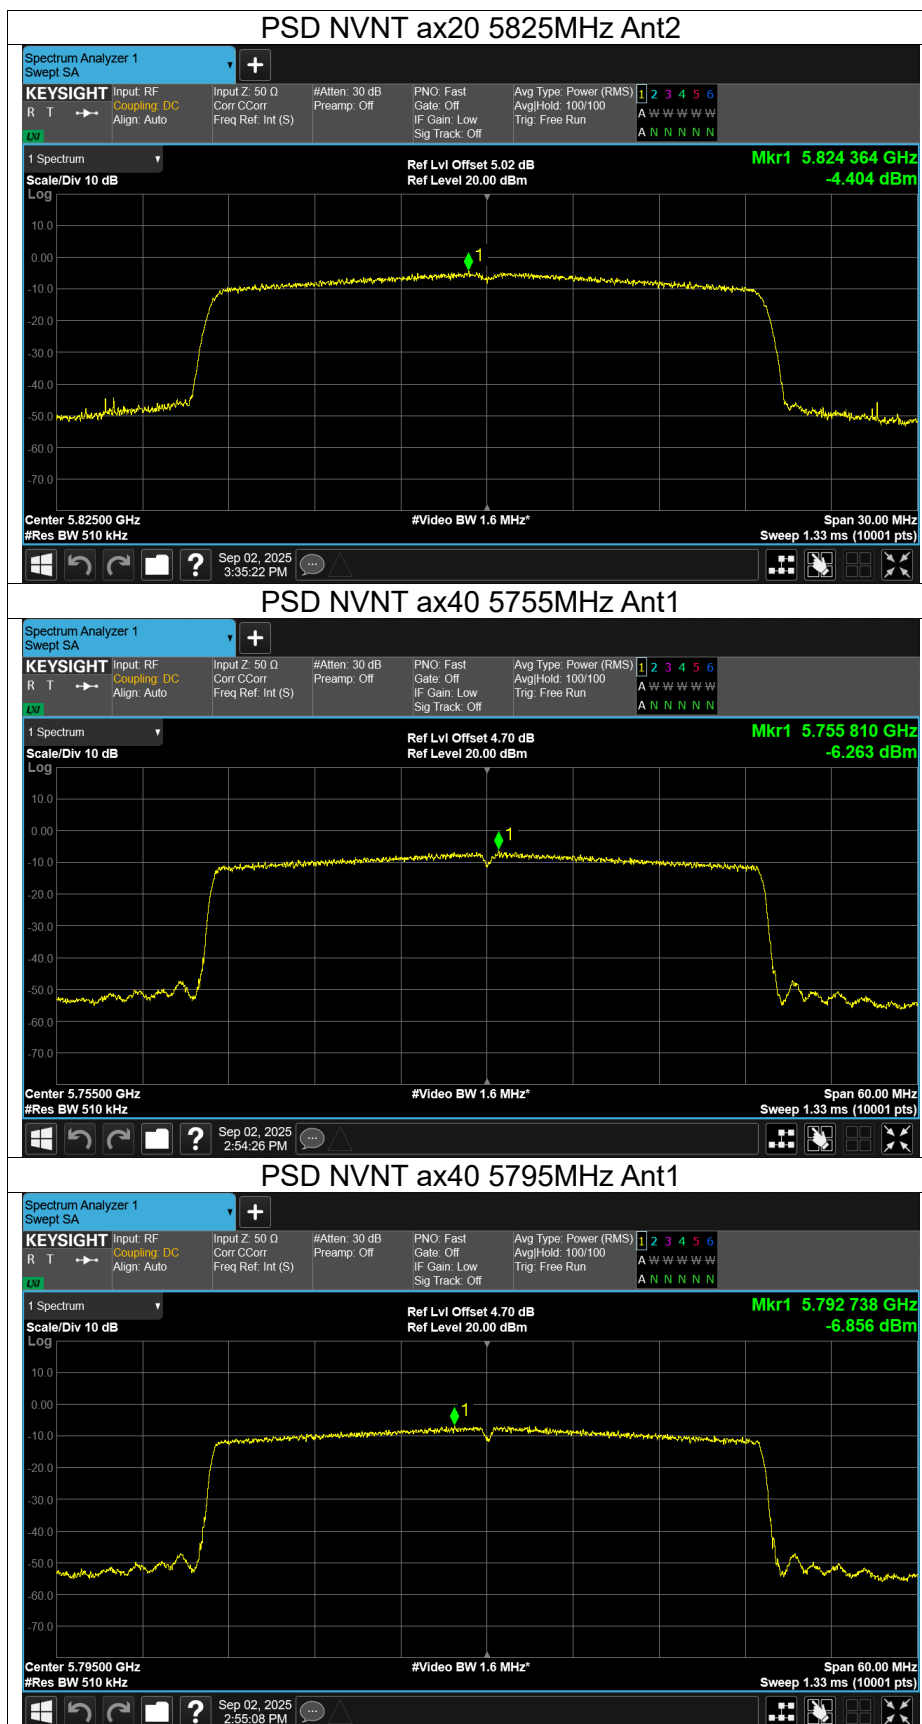



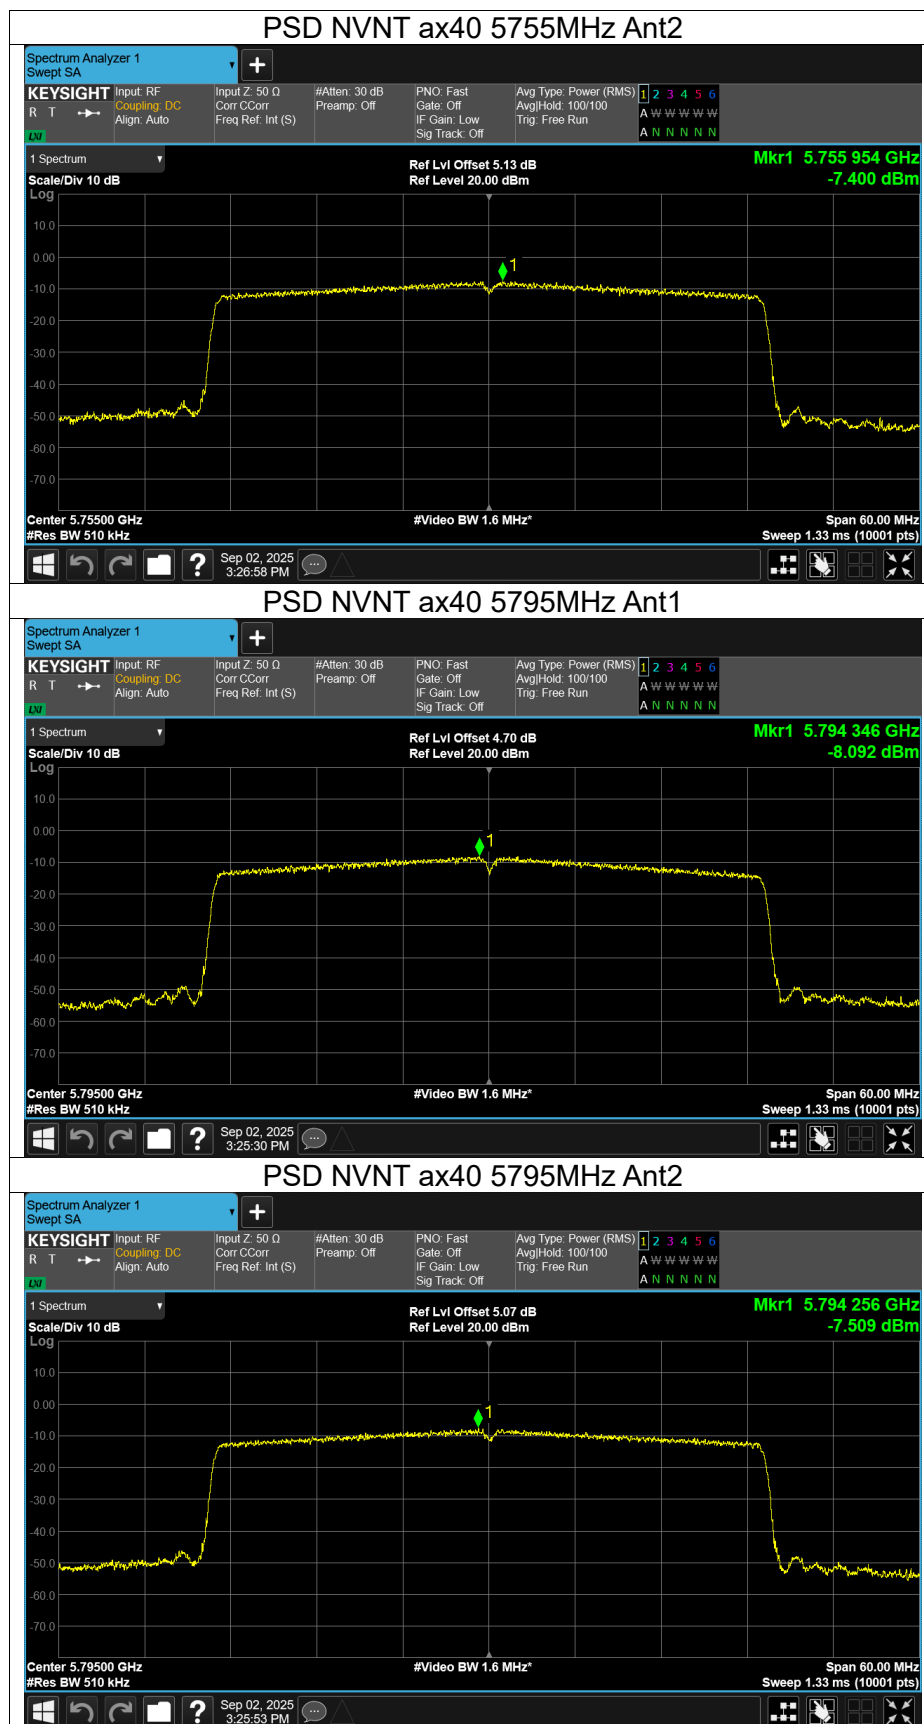

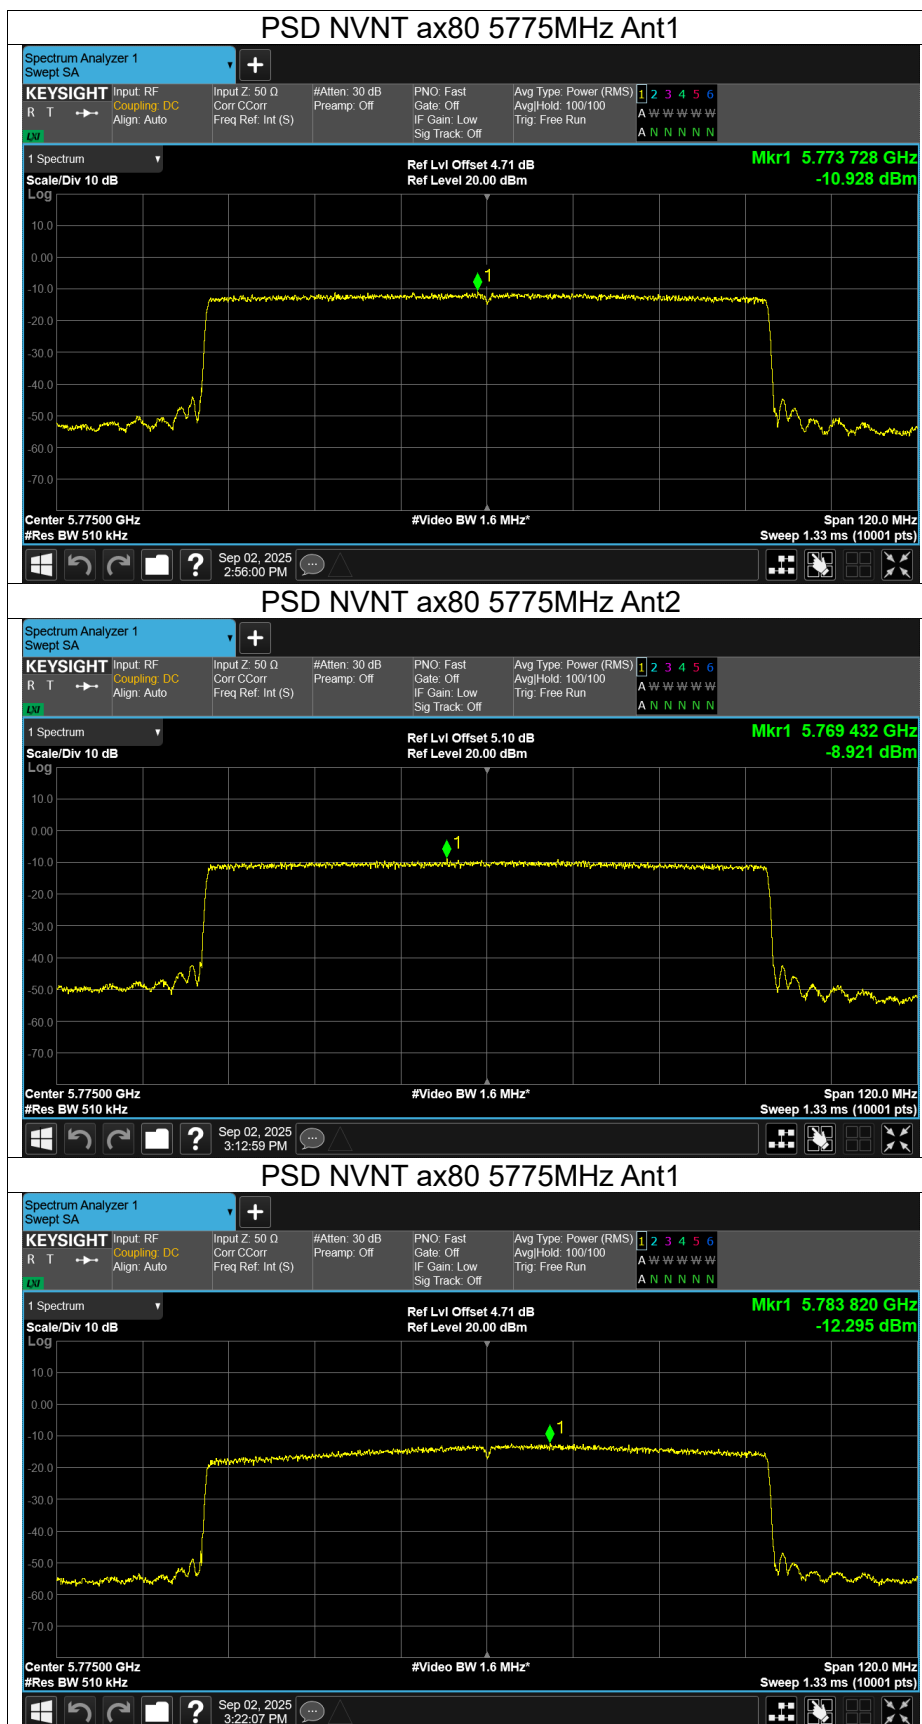

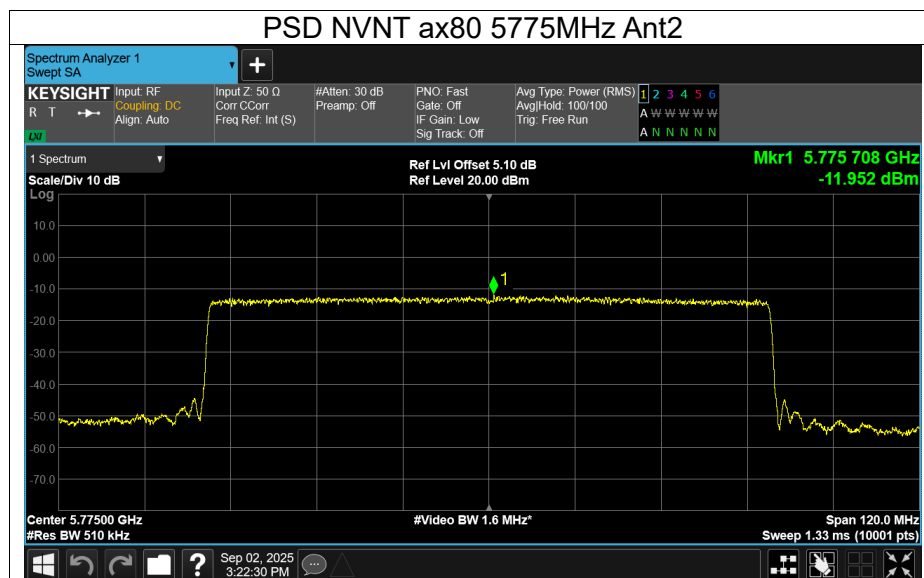



Band Edge

Condition	Mode	Frequency (MHz)	Antenna	Max Value (dBc)	Limit (dBc)	Verdict
NVNT	a	5180	Ant1	-37.65	-27	Pass
NVNT	a	5240	Ant1	-41.14	-27	Pass
NVNT	a	5260	Ant1	-38.11	-27	Pass
NVNT	a	5320	Ant1	-38.9	-27	Pass
NVNT	a	5500	Ant1	-38.11	-27	Pass
NVNT	a	5700	Ant1	-35.94	-27	Pass
NVNT	a	5180	Ant2	-38.09	-27	Pass
NVNT	a	5240	Ant2	-42.35	-27	Pass
NVNT	a	5260	Ant2	-40.9	-27	Pass
NVNT	a	5320	Ant2	-38.25	-27	Pass
NVNT	a	5500	Ant2	-38.45	-27	Pass
NVNT	a	5700	Ant2	-34.5	-27	Pass
NVNT	n20	5180	Ant1	-37.34	-27	Pass
NVNT	n20	5240	Ant1	-41.05	-27	Pass
NVNT	n20	5260	Ant1	-38.15	-27	Pass
NVNT	n20	5320	Ant1	-39.64	-27	Pass
NVNT	n20	5500	Ant1	-39.72	-27	Pass
NVNT	n20	5700	Ant1	-36.94	-27	Pass
NVNT	n20	5180	Ant2	-38.65	-27	Pass
NVNT	n20	5240	Ant2	-42.43	-27	Pass
NVNT	n20	5260	Ant2	-40.45	-27	Pass
NVNT	n20	5320	Ant2	-40	-27	Pass
NVNT	n20	5500	Ant2	-39.75	-27	Pass
NVNT	n20	5700	Ant2	-33.82	-27	Pass
NVNT	n40	5190	Ant1	-33.48	-27	Pass
NVNT	n40	5230	Ant1	-40.85	-27	Pass
NVNT	n40	5270	Ant1	-38.78	-27	Pass
NVNT	n40	5310	Ant1	-36.85	-27	Pass
NVNT	n40	5510	Ant1	-35.92	-27	Pass
NVNT	n40	5670	Ant1	-39.06	-27	Pass
NVNT	n40	5190	Ant2	-35.72	-27	Pass
NVNT	n40	5230	Ant2	-42.25	-27	Pass
NVNT	n40	5270	Ant2	-40.84	-27	Pass
NVNT	n40	5310	Ant2	-35.56	-27	Pass
NVNT	n40	5510	Ant2	-34.64	-27	Pass
NVNT	n40	5670	Ant2	-37.78	-27	Pass
NVNT	ac20	5180	Ant1	-37.78	-27	Pass
NVNT	ac20	5240	Ant1	-40.61	-27	Pass
NVNT	ac20	5260	Ant1	-38.3	-27	Pass
NVNT	ac20	5320	Ant1	-39.54	-27	Pass
NVNT	ac20	5500	Ant1	-39.11	-27	Pass
NVNT	ac20	5700	Ant1	-36.69	-27	Pass
NVNT	ac20	5180	Ant2	-40.25	-27	Pass
NVNT	ac20	5240	Ant2	-42.22	-27	Pass
NVNT	ac20	5260	Ant2	-39.26	-27	Pass
NVNT	ac20	5320	Ant2	-38.07	-27	Pass
NVNT	ac20	5500	Ant2	-39.25	-27	Pass
NVNT	ac20	5700	Ant2	-36.21	-27	Pass
NVNT	ac40	5190	Ant1	-33.51	-27	Pass
NVNT	ac40	5230	Ant1	-40.55	-27	Pass
NVNT	ac40	5270	Ant1	-38.9	-27	Pass
NVNT	ac40	5310	Ant1	-35.48	-27	Pass
NVNT	ac40	5510	Ant1	-36.06	-27	Pass



NVNT	ac40	5670	Ant1	-38.36	-27	Pass
NVNT	ac40	5190	Ant2	-34.33	-27	Pass
NVNT	ac40	5230	Ant2	-42.39	-27	Pass
NVNT	ac40	5270	Ant2	-40.72	-27	Pass
NVNT	ac40	5310	Ant2	-37.9	-27	Pass
NVNT	ac40	5510	Ant2	-30.84	-27	Pass
NVNT	ac40	5670	Ant2	-40.03	-27	Pass
NVNT	ac80	5210	Ant1	-31.52	-27	Pass
NVNT	ac80	5290	Ant1	-35.78	-27	Pass
NVNT	ac80	5530	Ant1	-32.79	-27	Pass
NVNT	ac80	5210	Ant2	-30.99	-27	Pass
NVNT	ac80	5290	Ant2	-35.28	-27	Pass
NVNT	ac80	5530	Ant2	-31.56	-27	Pass
NVNT	ax20	5180	Ant1	-38.79	-27	Pass
NVNT	ax20	5240	Ant1	-41.63	-27	Pass
NVNT	ax20	5260	Ant1	-38.96	-27	Pass
NVNT	ax20	5320	Ant1	-39.78	-27	Pass
NVNT	ax20	5500	Ant1	-40.67	-27	Pass
NVNT	ax20	5700	Ant1	-39.15	-27	Pass
NVNT	ax20	5180	Ant2	-39.6	-27	Pass
NVNT	ax20	5240	Ant2	-42.45	-27	Pass
NVNT	ax20	5260	Ant2	-41.02	-27	Pass
NVNT	ax20	5320	Ant2	-41.36	-27	Pass
NVNT	ax20	5500	Ant2	-41.54	-27	Pass
NVNT	ax20	5700	Ant2	-41.02	-27	Pass
NVNT	ax40	5190	Ant1	-37.91	-27	Pass
NVNT	ax40	5230	Ant1	-41.03	-27	Pass
NVNT	ax40	5270	Ant1	-38.13	-27	Pass
NVNT	ax40	5310	Ant1	-39.22	-27	Pass
NVNT	ax40	5510	Ant1	-40.63	-27	Pass
NVNT	ax40	5670	Ant1	-40.83	-27	Pass
NVNT	ax40	5190	Ant2	-38.37	-27	Pass
NVNT	ax40	5230	Ant2	-42.78	-27	Pass
NVNT	ax40	5270	Ant2	-40.76	-27	Pass
NVNT	ax40	5310	Ant2	-41.44	-27	Pass
NVNT	ax40	5510	Ant2	-38.99	-27	Pass
NVNT	ax40	5670	Ant2	-40.71	-27	Pass
NVNT	ax80	5210	Ant1	-36.97	-27	Pass
NVNT	ax80	5290	Ant1	-39.35	-27	Pass
NVNT	ax80	5530	Ant1	-37.55	-27	Pass
NVNT	ax80	5210	Ant2	-36.36	-27	Pass
NVNT	ax80	5290	Ant2	-38.82	-27	Pass
NVNT	ax80	5530	Ant2	-37.15	-27	Pass
Condition	Mode	Frequency (MHz)	Antenna	Max Value (dBm)	Limit (dBm)	Verdict
NVNT	a	5745	Ant1	-32.1	15.6	Pass
NVNT	a	5825	Ant1	-33.62	15.6	Pass
NVNT	a	5745	Ant2	-30.87	15.6	Pass
NVNT	a	5825	Ant2	-33.81	15.6	Pass
NVNT	n20	5745	Ant1	-30.62	15.6	Pass
NVNT	n20	5825	Ant1	-36.57	15.6	Pass
NVNT	n20	5745	Ant2	-30.49	15.6	Pass
NVNT	n20	5825	Ant2	-35.84	15.6	Pass
NVNT	n40	5755	Ant1	-30.32	15.6	Pass
NVNT	n40	5795	Ant1	-37.96	15.6	Pass
NVNT	n40	5755	Ant2	-30.72	15.6	Pass
NVNT	n40	5795	Ant2	-40.41	15.6	Pass



NVNT	ac20	5745	Ant1	-30.1	15.6	Pass
NVNT	ac20	5825	Ant1	-36.02	15.6	Pass
NVNT	ac20	5745	Ant2	-29.75	15.6	Pass
NVNT	ac20	5825	Ant2	-35.17	15.6	Pass
NVNT	ac40	5755	Ant1	-30.95	15.6	Pass
NVNT	ac40	5795	Ant1	-37.64	15.6	Pass
NVNT	ac40	5755	Ant2	-30.08	15.6	Pass
NVNT	ac40	5795	Ant2	-38.77	15.6	Pass
NVNT	ac80	5775	Ant1	-32.78	15.6	Pass
NVNT	ac80	5775	Ant2	-29.49	15.6	Pass
NVNT	ax20	5745	Ant1	-39.14	15.6	Pass
NVNT	ax20	5825	Ant1	-39.41	15.6	Pass
NVNT	ax20	5745	Ant2	-37.86	15.6	Pass
NVNT	ax20	5825	Ant2	-40.87	15.6	Pass
NVNT	ax40	5755	Ant1	-38.39	15.6	Pass
NVNT	ax40	5795	Ant1	-40.38	15.6	Pass
NVNT	ax40	5755	Ant2	-33.87	15.6	Pass
NVNT	ax40	5795	Ant2	-41.45	15.6	Pass
NVNT	ax80	5775	Ant1	-36.75	15.6	Pass
NVNT	ax80	5775	Ant2	-35.37	15.6	Pass

