









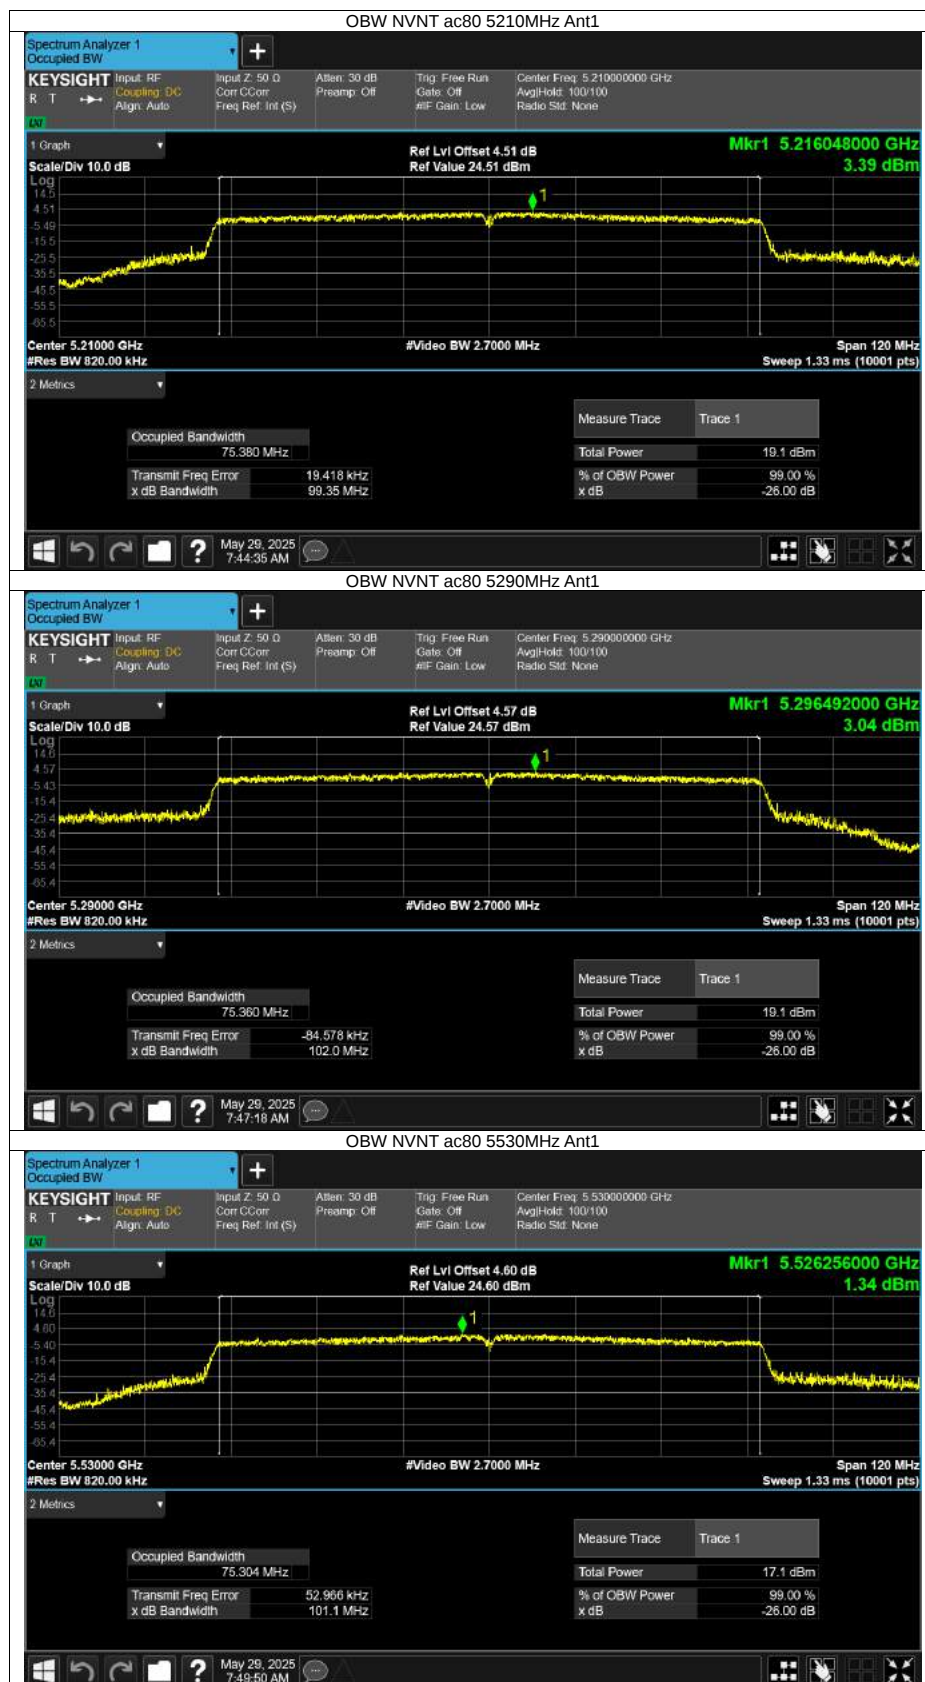


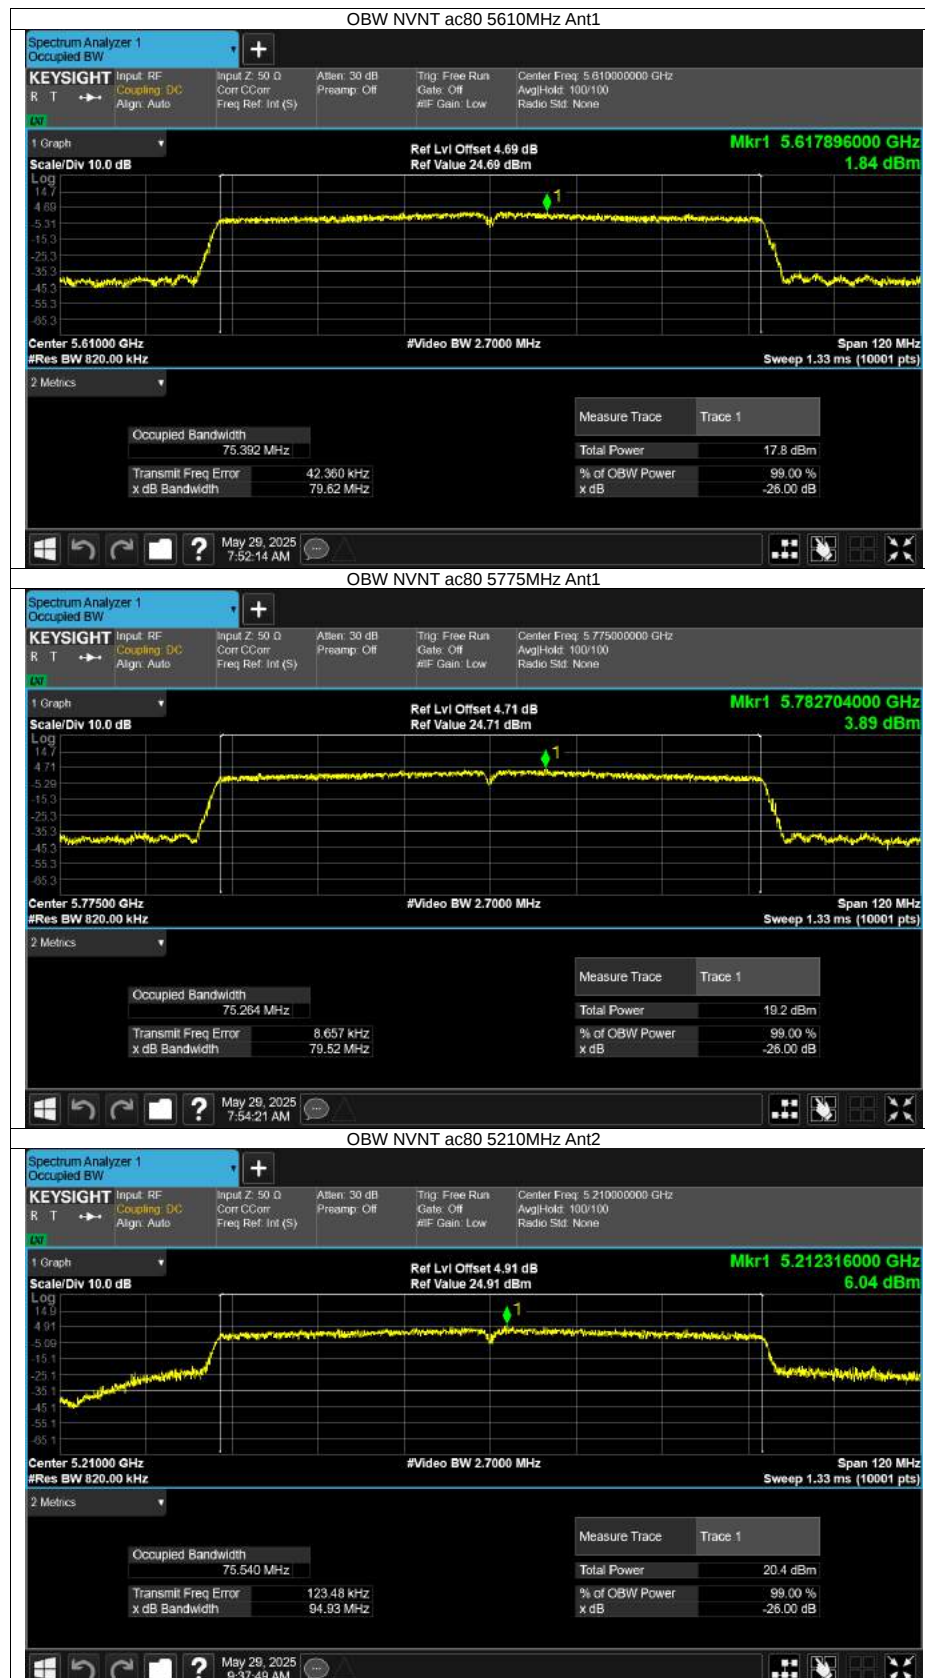







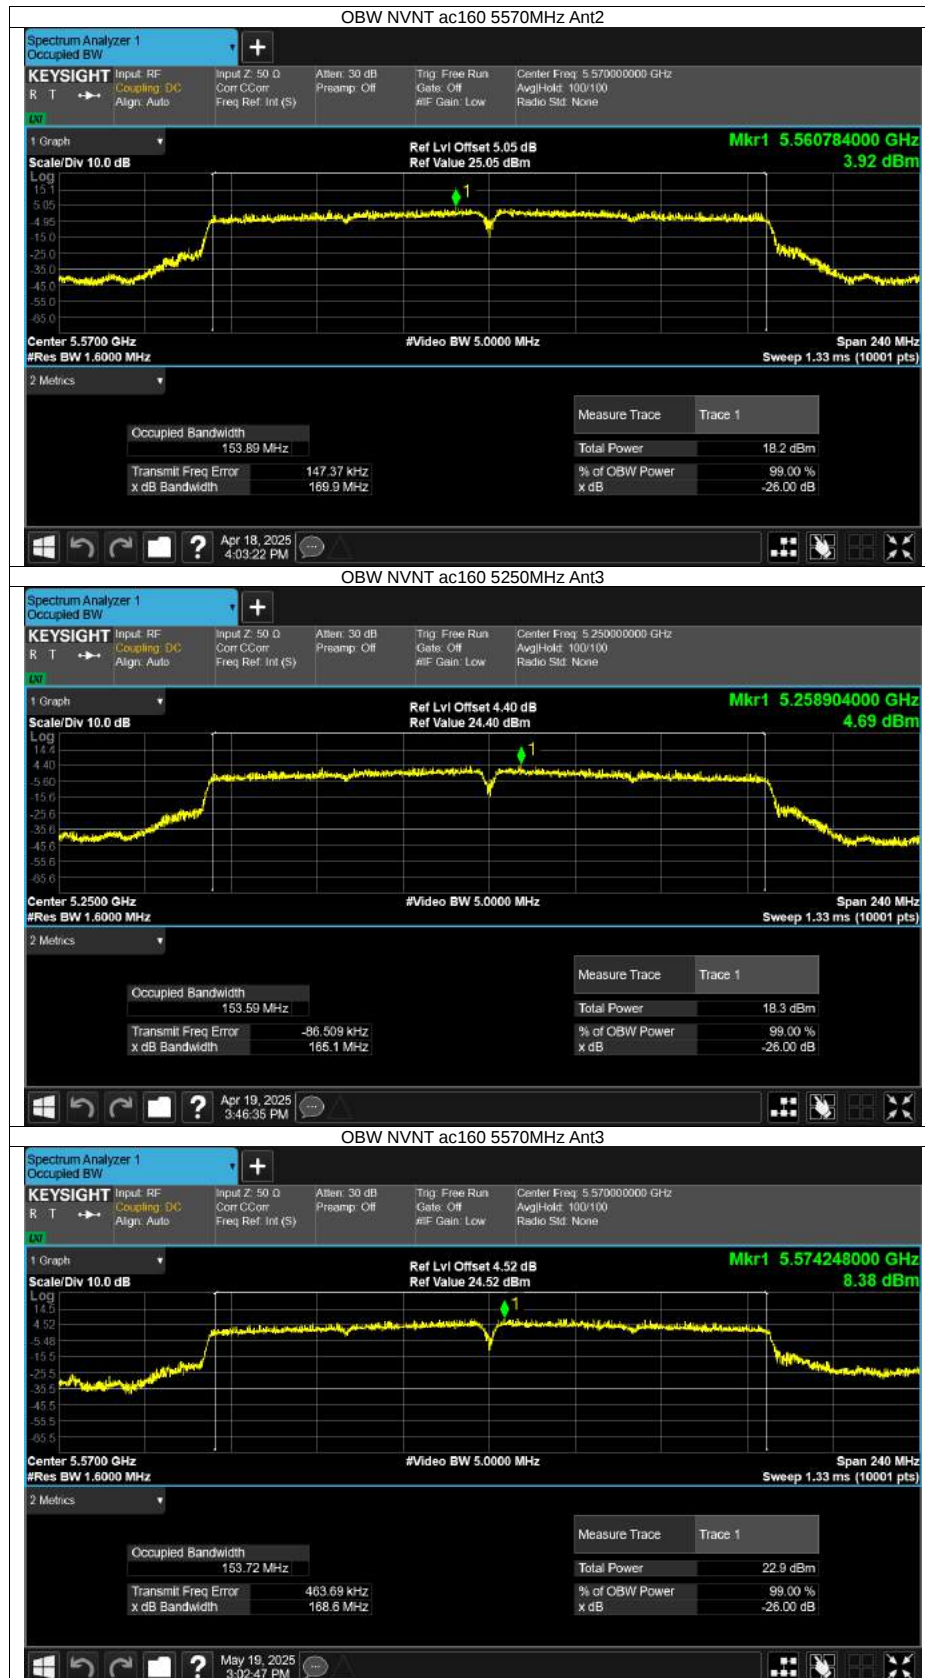





























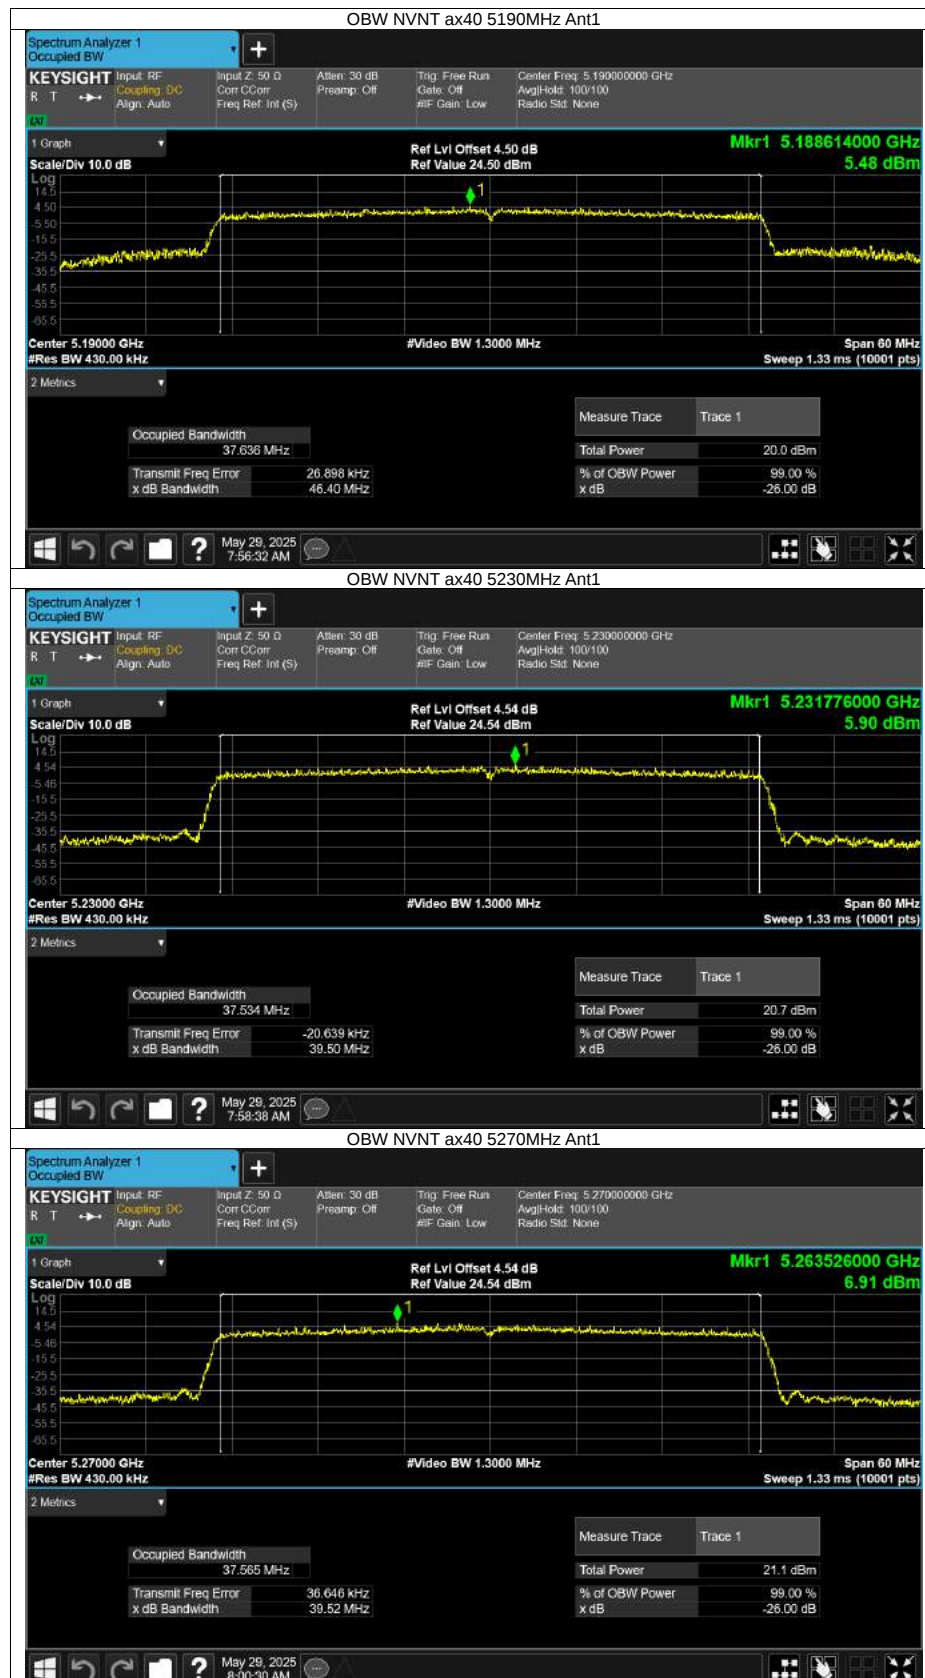

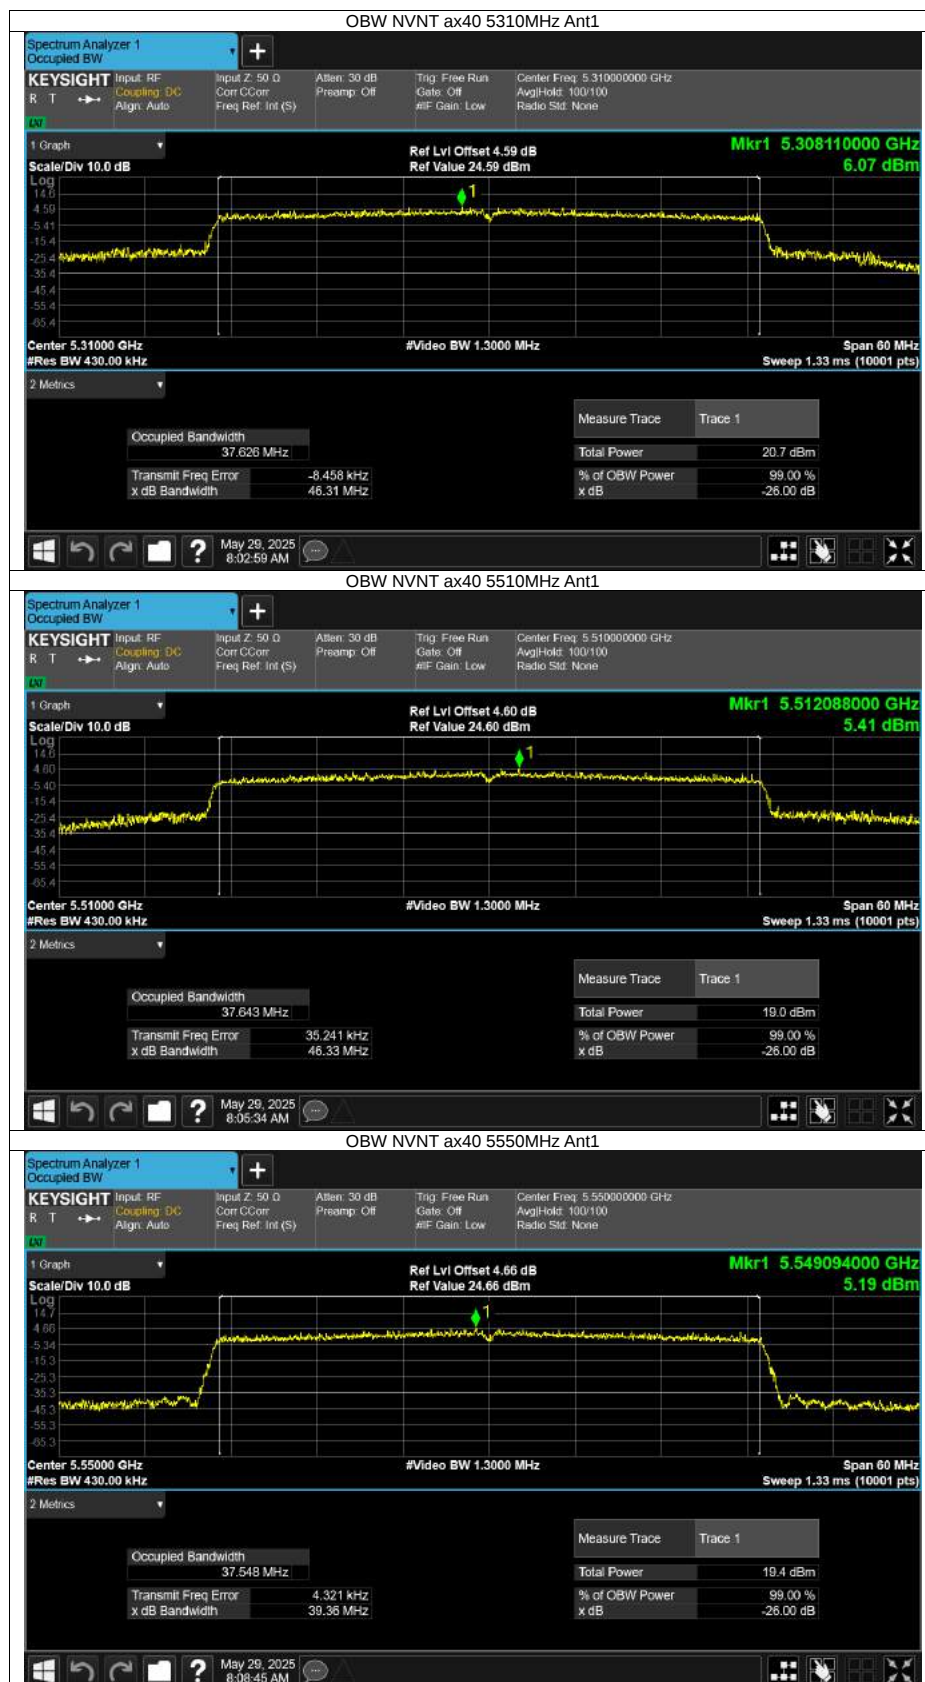


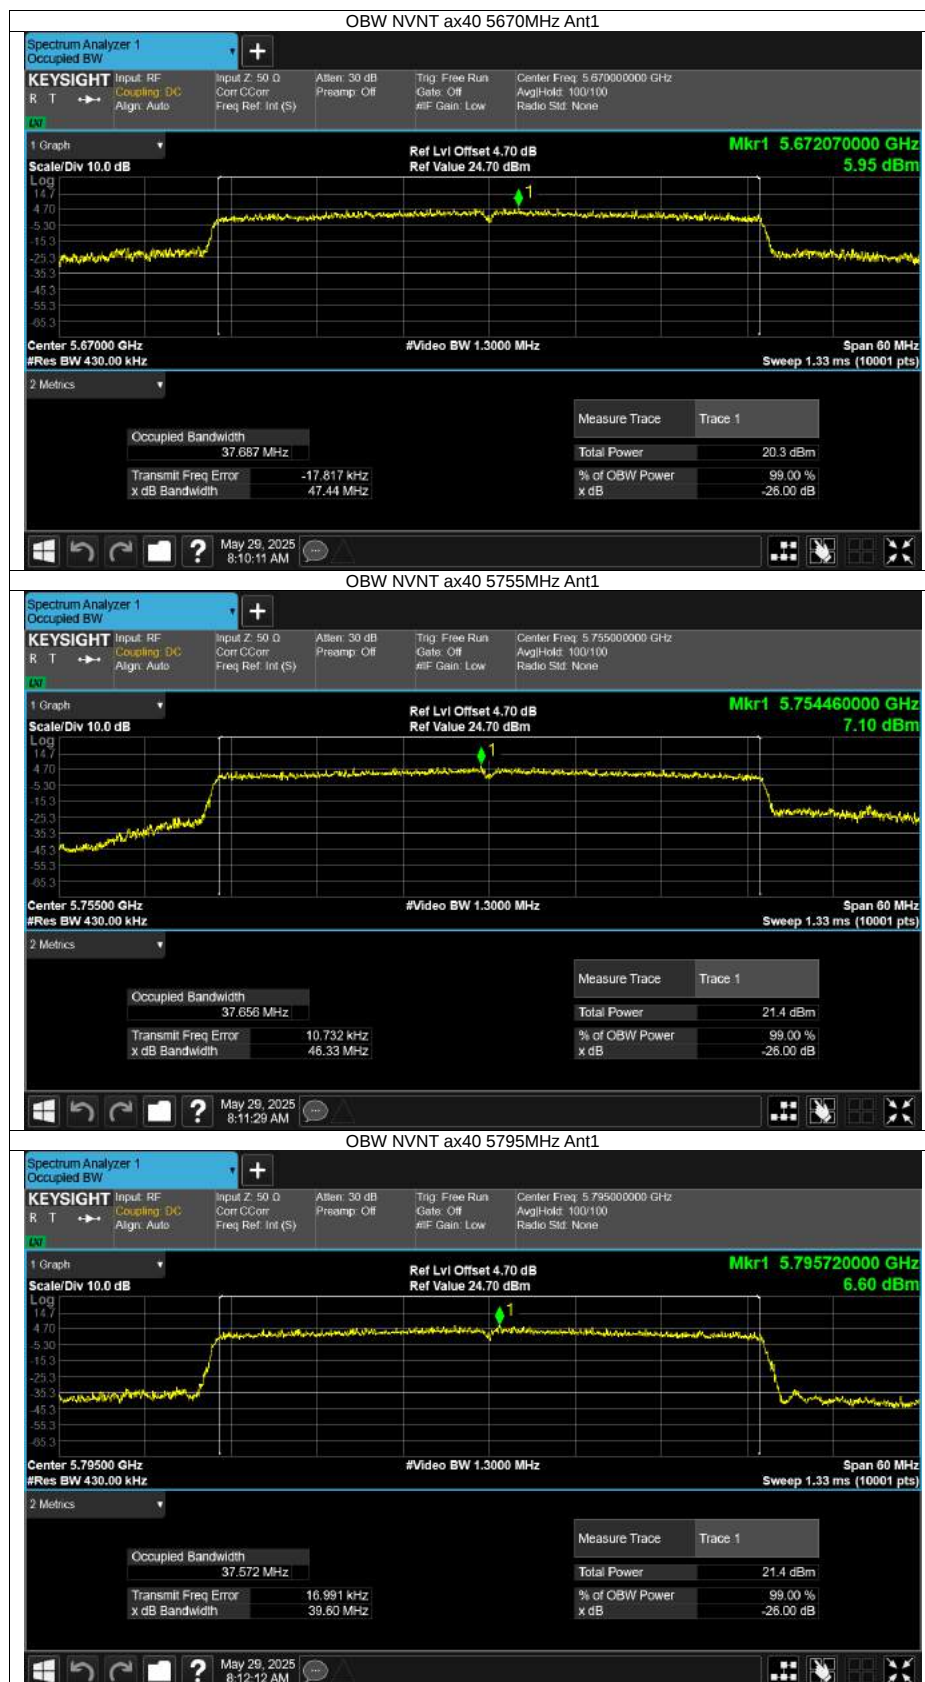

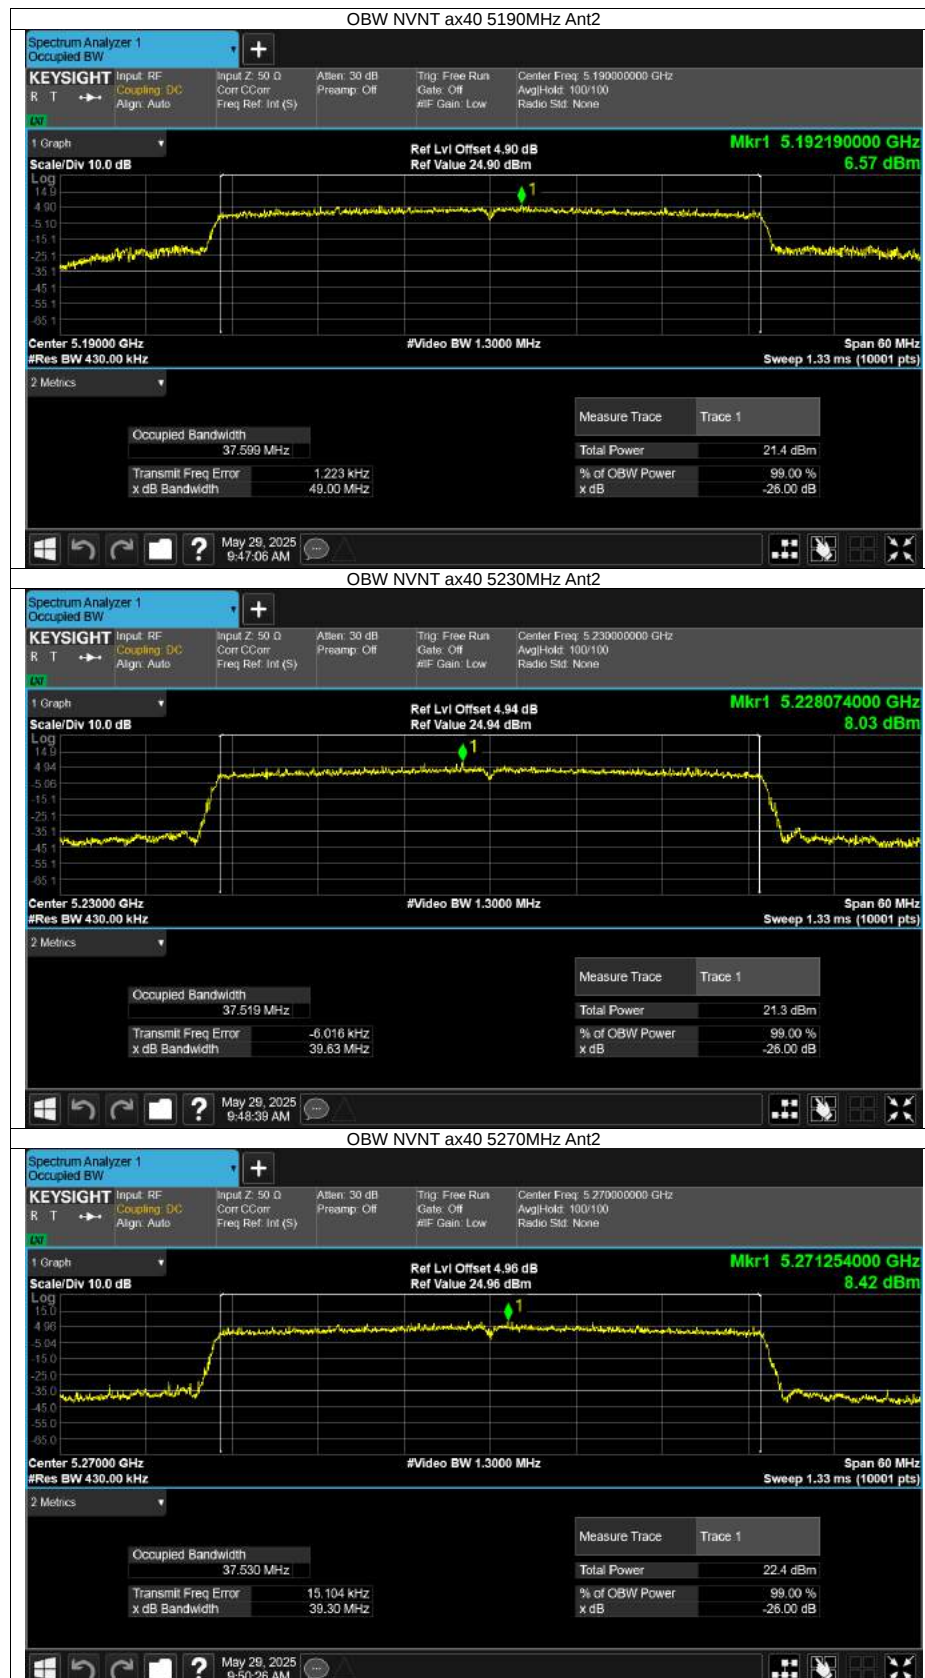






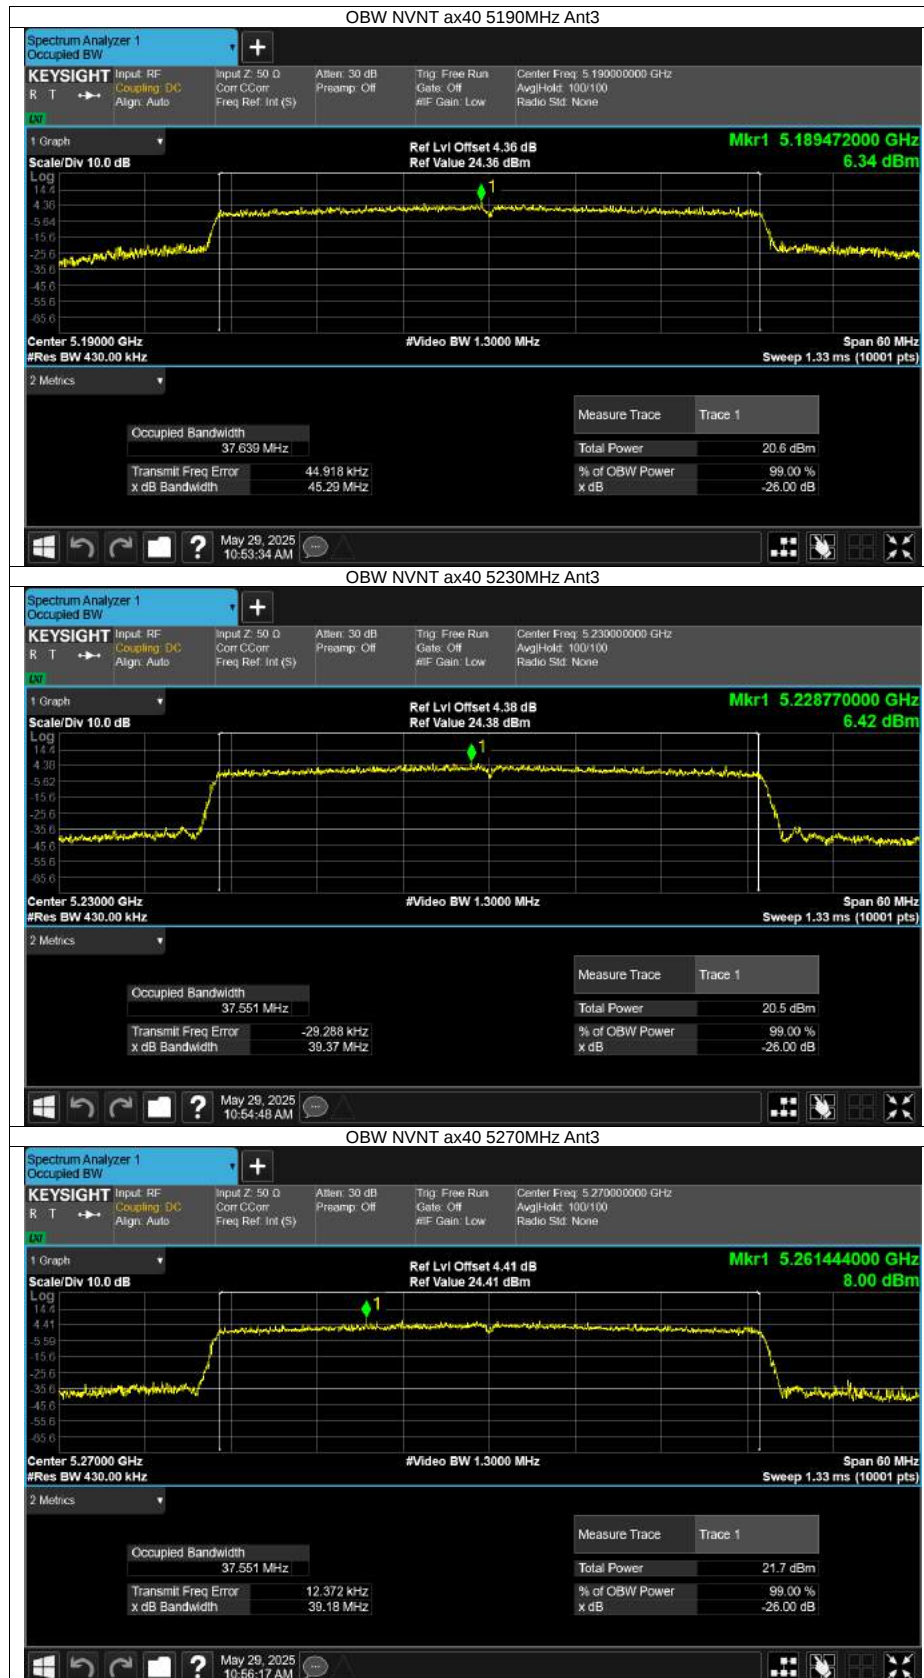








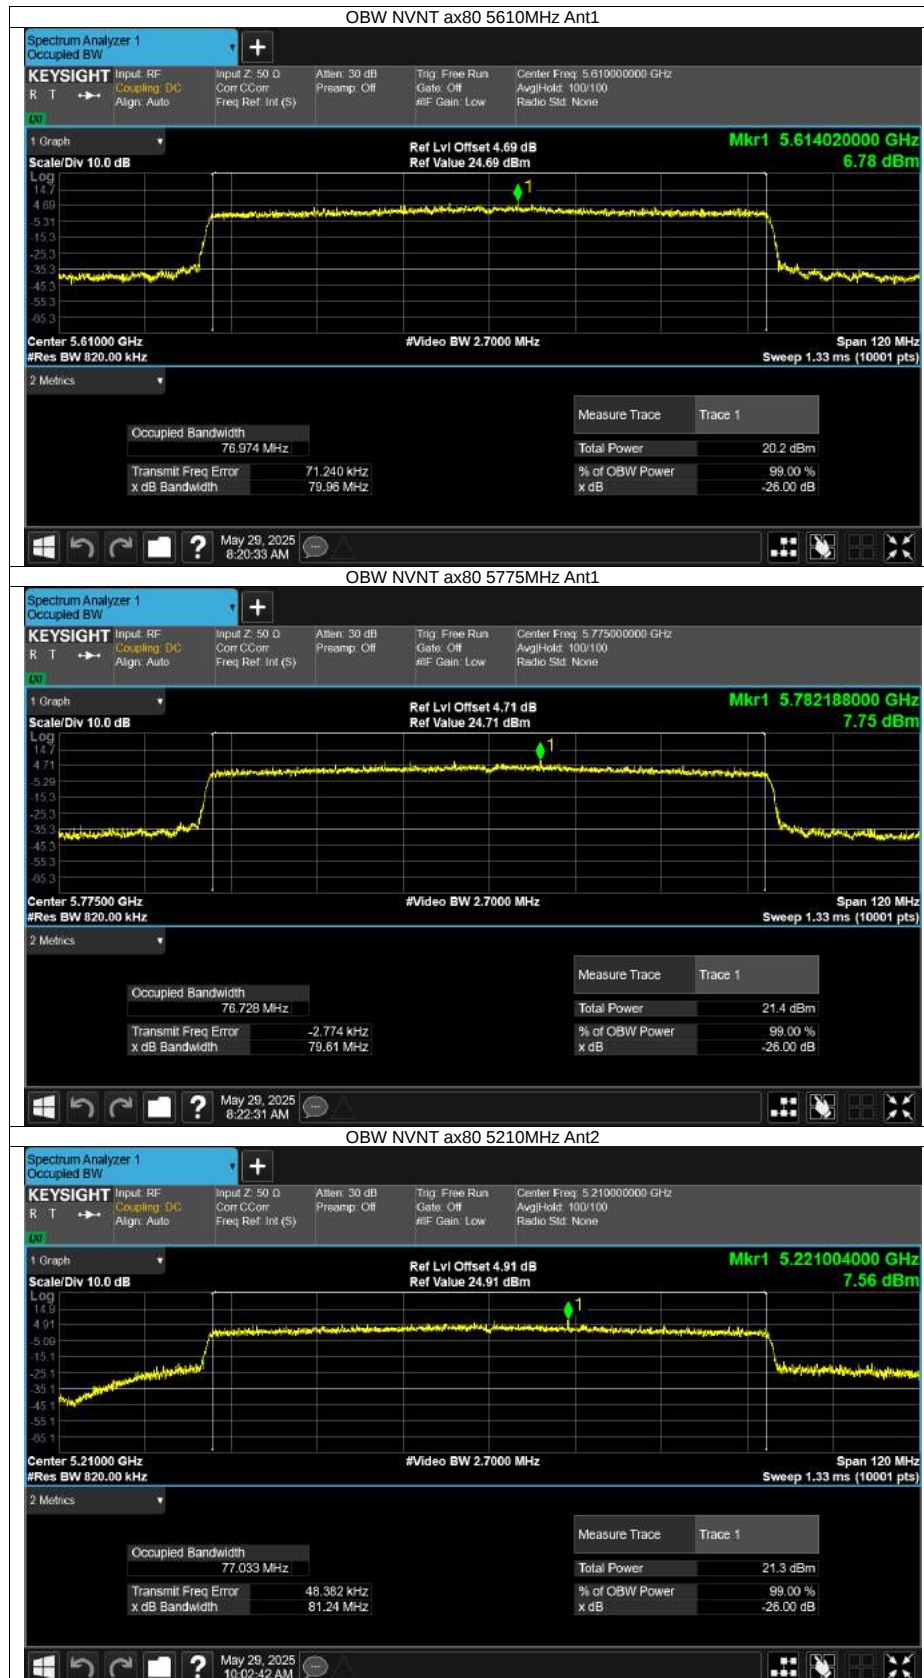






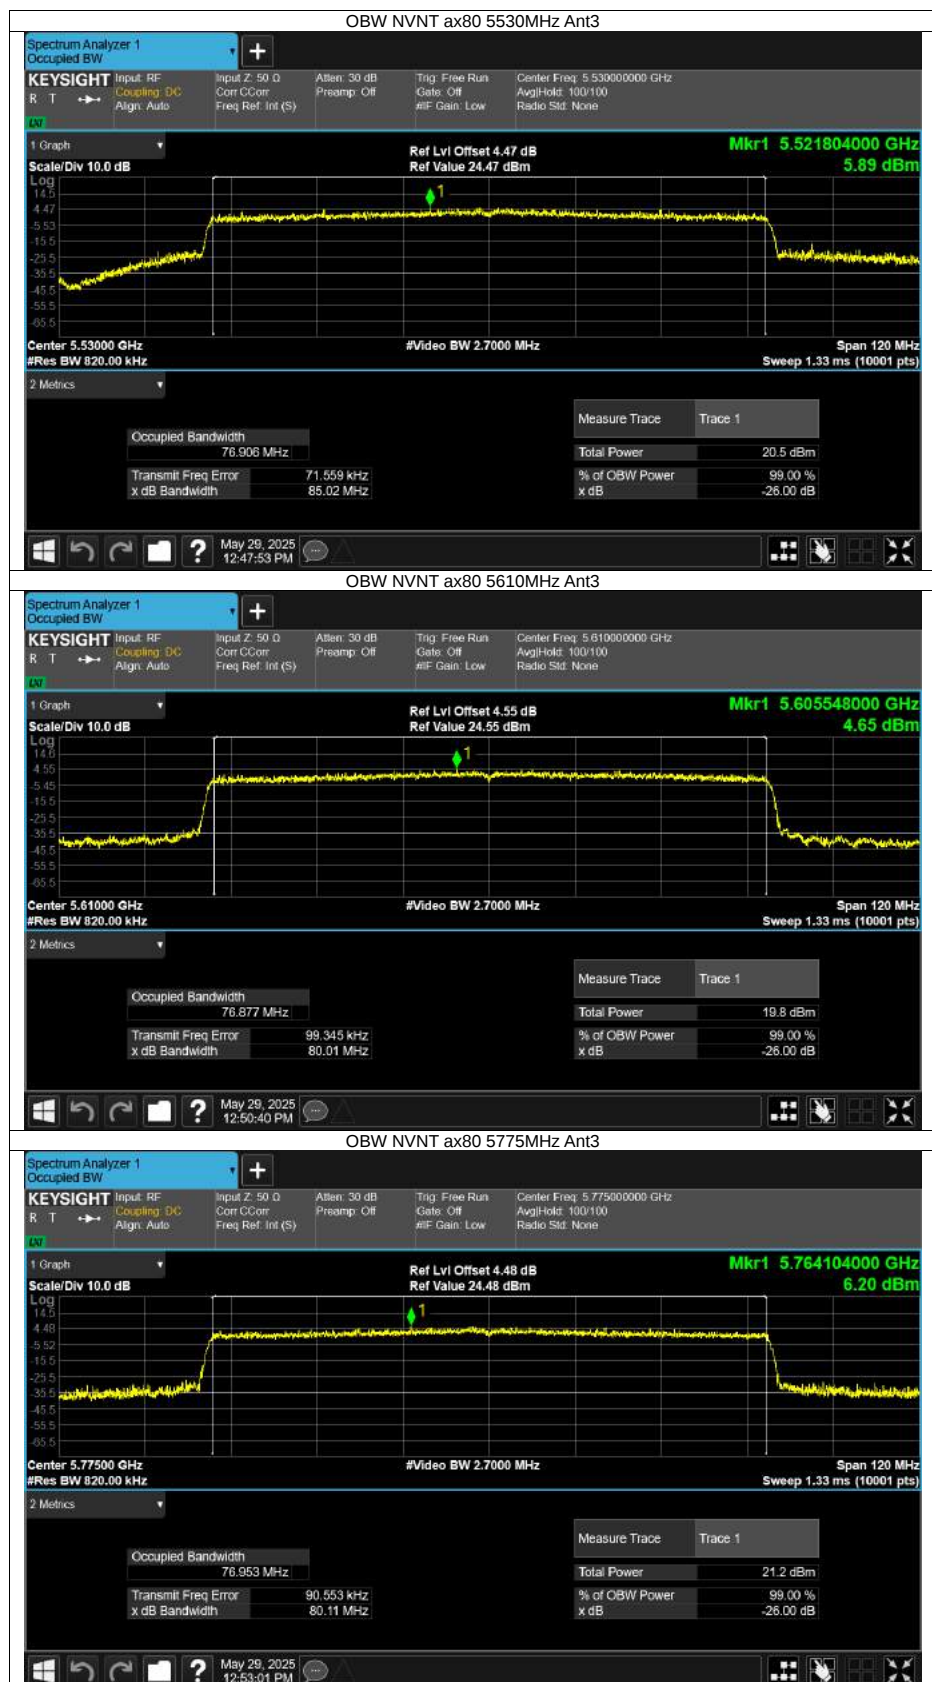



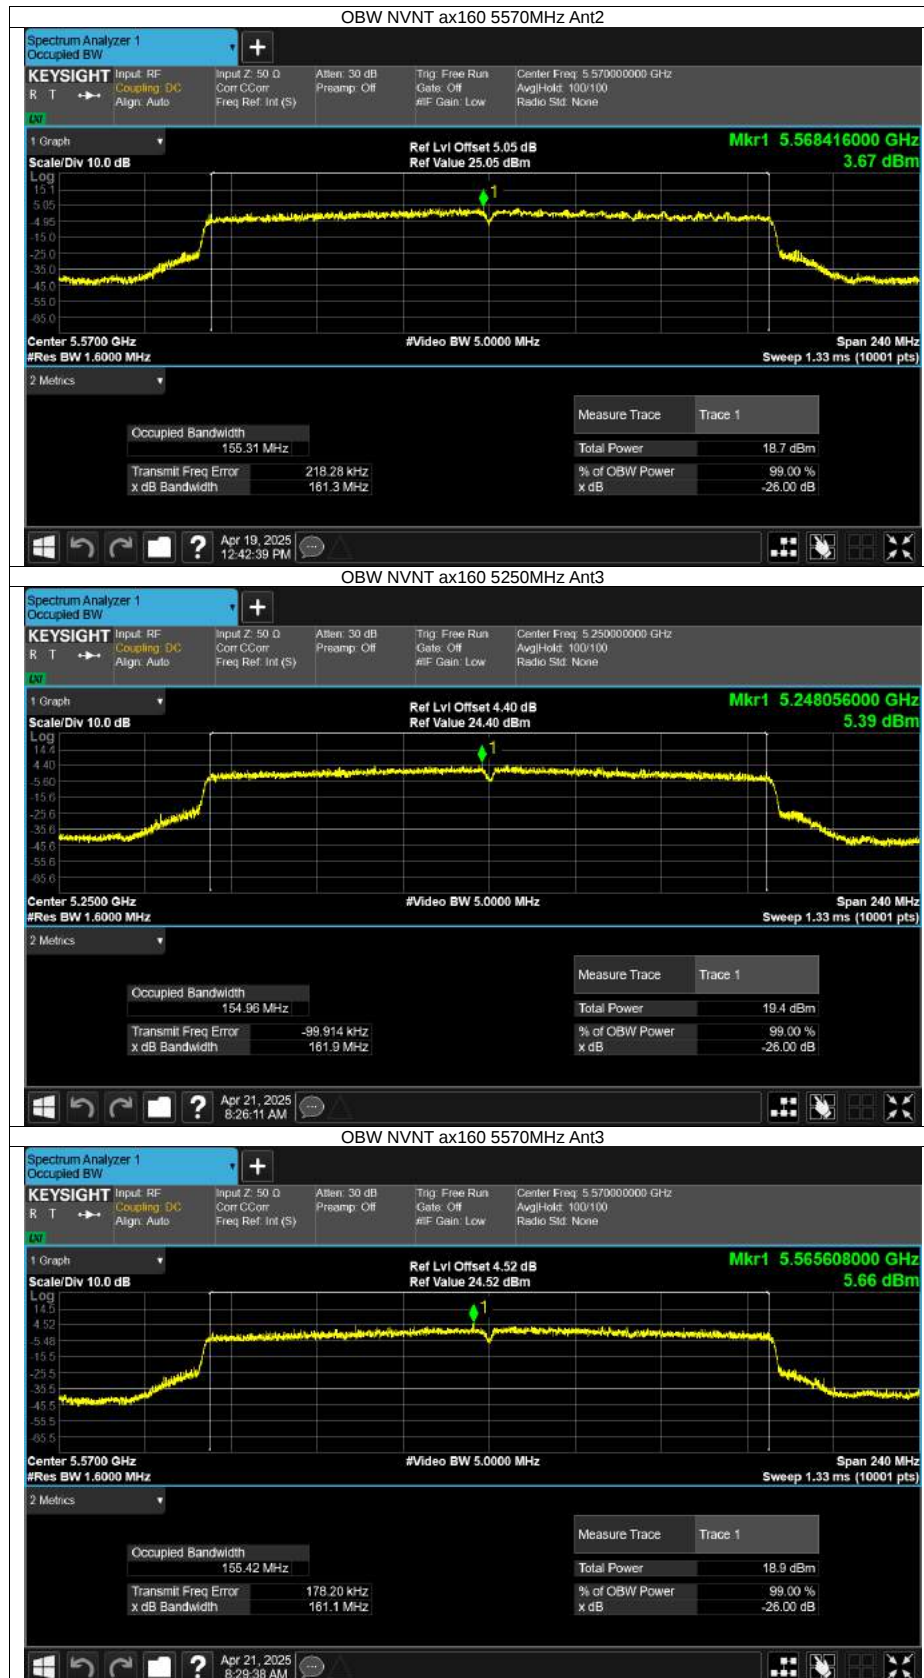



Band Edge

Condition	Mode	Frequency (MHz)	Antenna	Max Value (dBc)	Limit (dBc)	Verdict
NVNT	a	5180	Ant1	-36.72	-27	Pass
NVNT	a	5240	Ant1	-38.13	-27	Pass
NVNT	a	5260	Ant1	-35.96	-27	Pass
NVNT	a	5320	Ant1	-37.1	-27	Pass
NVNT	a	5500	Ant1	-37.22	-27	Pass
NVNT	a	5700	Ant1	-37.87	-27	Pass
NVNT	a	5180	Ant2	-34.59	-27	Pass
NVNT	a	5240	Ant2	-38.55	-27	Pass
NVNT	a	5260	Ant2	-35.52	-27	Pass
NVNT	a	5320	Ant2	-36.7	-27	Pass
NVNT	a	5500	Ant2	-37.74	-27	Pass
NVNT	a	5700	Ant2	-36.08	-27	Pass
NVNT	a	5180	Ant3	-35.83	-27	Pass
NVNT	a	5240	Ant3	-39.65	-27	Pass
NVNT	a	5260	Ant3	-36.31	-27	Pass
NVNT	a	5320	Ant3	-37.93	-27	Pass
NVNT	a	5500	Ant3	-37.37	-27	Pass
NVNT	a	5700	Ant3	-35.98	-27	Pass
NVNT	n20	5180	Ant1	-36.21	-27	Pass
NVNT	n20	5240	Ant1	-38.99	-27	Pass
NVNT	n20	5260	Ant1	-37.5	-27	Pass
NVNT	n20	5320	Ant1	-37.21	-27	Pass
NVNT	n20	5500	Ant1	-37.93	-27	Pass
NVNT	n20	5700	Ant1	-37.72	-27	Pass
NVNT	n20	5180	Ant2	-35.13	-27	Pass
NVNT	n20	5240	Ant2	-38.31	-27	Pass
NVNT	n20	5260	Ant2	-35.85	-27	Pass
NVNT	n20	5320	Ant2	-36.25	-27	Pass
NVNT	n20	5500	Ant2	-37.69	-27	Pass
NVNT	n20	5700	Ant2	-35.73	-27	Pass
NVNT	n20	5180	Ant3	-36.43	-27	Pass
NVNT	n20	5240	Ant3	-39.8	-27	Pass
NVNT	n20	5260	Ant3	-35.56	-27	Pass
NVNT	n20	5320	Ant3	-38.27	-27	Pass
NVNT	n20	5500	Ant3	-38.4	-27	Pass
NVNT	n20	5700	Ant3	-37.51	-27	Pass
NVNT	n40	5190	Ant1	-35.9	-27	Pass
NVNT	n40	5230	Ant1	-38.77	-27	Pass
NVNT	n40	5270	Ant1	-36.78	-27	Pass
NVNT	n40	5310	Ant1	-37.4	-27	Pass
NVNT	n40	5510	Ant1	-37.05	-27	Pass
NVNT	n40	5670	Ant1	-37.46	-27	Pass
NVNT	n40	5190	Ant2	-35.56	-27	Pass
NVNT	n40	5230	Ant2	-39.1	-27	Pass
NVNT	n40	5270	Ant2	-36.9	-27	Pass
NVNT	n40	5310	Ant2	-37.16	-27	Pass
NVNT	n40	5510	Ant2	-37.78	-27	Pass
NVNT	n40	5670	Ant2	-36.98	-27	Pass
NVNT	n40	5190	Ant3	-36.51	-27	Pass
NVNT	n40	5230	Ant3	-39.66	-27	Pass
NVNT	n40	5270	Ant3	-36.52	-27	Pass
NVNT	n40	5310	Ant3	-37.4	-27	Pass
NVNT	n40	5510	Ant3	-36.99	-27	Pass
NVNT	n40	5670	Ant3	-37.58	-27	Pass
NVNT	ac20	5180	Ant1	-37.6	-27	Pass
NVNT	ac20	5240	Ant1	-38.64	-27	Pass
NVNT	ac20	5260	Ant1	-36.73	-27	Pass
NVNT	ac20	5320	Ant1	-37.84	-27	Pass
NVNT	ac20	5500	Ant1	-38.62	-27	Pass
NVNT	ac20	5700	Ant1	-37.63	-27	Pass
NVNT	ac20	5180	Ant2	-35.12	-27	Pass
NVNT	ac20	5240	Ant2	-38.21	-27	Pass
NVNT	ac20	5260	Ant2	-36.16	-27	Pass
NVNT	ac20	5320	Ant2	-36.36	-27	Pass
NVNT	ac20	5500	Ant2	-36.44	-27	Pass
NVNT	ac20	5700	Ant2	-36.43	-27	Pass
NVNT	ac20	5180	Ant3	-36.26	-27	Pass
NVNT	ac20	5240	Ant3	-39.06	-27	Pass
NVNT	ac20	5260	Ant3	-37.06	-27	Pass
NVNT	ac20	5320	Ant3	-37.74	-27	Pass
NVNT	ac20	5500	Ant3	-37.4	-27	Pass
NVNT	ac20	5700	Ant3	-37.12	-27	Pass
NVNT	ac40	5190	Ant1	-35.38	-27	Pass
NVNT	ac40	5230	Ant1	-38.68	-27	Pass
NVNT	ac40	5270	Ant1	-36.41	-27	Pass
NVNT	ac40	5310	Ant1	-37.63	-27	Pass
NVNT	ac40	5510	Ant1	-37.68	-27	Pass
NVNT	ac40	5670	Ant1	-38.13	-27	Pass
NVNT	ac40	5190	Ant2	-34.91	-27	Pass
NVNT	ac40	5230	Ant2	-38.62	-27	Pass
NVNT	ac40	5270	Ant2	-35.59	-27	Pass
NVNT	ac40	5310	Ant2	-36.66	-27	Pass
NVNT	ac40	5510	Ant2	-36.24	-27	Pass
NVNT	ac40	5670	Ant2	-37.38	-27	Pass
NVNT	ac40	5190	Ant3	-36.82	-27	Pass
NVNT	ac40	5230	Ant3	-38.85	-27	Pass
NVNT	ac40	5270	Ant3	-36.38	-27	Pass
NVNT	ac40	5310	Ant3	-37.51	-27	Pass
NVNT	ac40	5510	Ant3	-36.89	-27	Pass
NVNT	ac40	5670	Ant3	-37.44	-27	Pass
NVNT	ac80	5210	Ant1	-32.34	-27	Pass



NVNT	ac80	5290	Ant1	-33.39	-27	Pass
NVNT	ac80	5530	Ant1	-33.12	-27	Pass
NVNT	ac80	5610	Ant1	-38.46	-27	Pass
NVNT	ac80	5210	Ant2	-32.44	-27	Pass
NVNT	ac80	5290	Ant2	-32.06	-27	Pass
NVNT	ac80	5530	Ant2	-34.17	-27	Pass
NVNT	ac80	5610	Ant2	-37.26	-27	Pass
NVNT	ac80	5210	Ant3	-33.92	-27	Pass
NVNT	ac80	5290	Ant3	-32.06	-27	Pass
NVNT	ac80	5530	Ant3	-34.05	-27	Pass
NVNT	ac80	5610	Ant3	-38.12	-27	Pass
NVNT	ac160	5250	Ant1	-35.45	-27	Pass
NVNT	ac160	5570	Ant1	-38.3	-27	Pass
NVNT	ac160	5250	Ant2	-34.35	-27	Pass
NVNT	ac160	5570	Ant2	-37.78	-27	Pass
NVNT	ac160	5250	Ant3	-33.12	-27	Pass
NVNT	ac160	5570	Ant3	-32.29	-27	Pass
NVNT	ax20	5180	Ant1	-36.27	-27	Pass
NVNT	ax20	5240	Ant1	-39.34	-27	Pass
NVNT	ax20	5260	Ant1	-35.39	-27	Pass
NVNT	ax20	5320	Ant1	-37.68	-27	Pass
NVNT	ax20	5500	Ant1	-37.53	-27	Pass
NVNT	ax20	5700	Ant1	-36.91	-27	Pass
NVNT	ax20	5180	Ant2	-34.75	-27	Pass
NVNT	ax20	5240	Ant2	-38.44	-27	Pass
NVNT	ax20	5260	Ant2	-35.21	-27	Pass
NVNT	ax20	5320	Ant2	-36.32	-27	Pass
NVNT	ax20	5500	Ant2	-37.21	-27	Pass
NVNT	ax20	5700	Ant2	-36.32	-27	Pass
NVNT	ax20	5180	Ant3	-36	-27	Pass
NVNT	ax20	5240	Ant3	-39.37	-27	Pass
NVNT	ax20	5260	Ant3	-35.77	-27	Pass
NVNT	ax20	5320	Ant3	-38.7	-27	Pass
NVNT	ax20	5500	Ant3	-38.08	-27	Pass
NVNT	ax20	5700	Ant3	-35.34	-27	Pass
NVNT	ax40	5190	Ant1	-35.98	-27	Pass
NVNT	ax40	5230	Ant1	-38.63	-27	Pass
NVNT	ax40	5270	Ant1	-36.77	-27	Pass
NVNT	ax40	5310	Ant1	-37.67	-27	Pass
NVNT	ax40	5510	Ant1	-36.27	-27	Pass
NVNT	ax40	5670	Ant1	-37.06	-27	Pass
NVNT	ax40	5190	Ant2	-35.04	-27	Pass
NVNT	ax40	5230	Ant2	-38.23	-27	Pass
NVNT	ax40	5270	Ant2	-35.2	-27	Pass
NVNT	ax40	5310	Ant2	-35.4	-27	Pass
NVNT	ax40	5510	Ant2	-36.7	-27	Pass
NVNT	ax40	5670	Ant2	-36.84	-27	Pass
NVNT	ax40	5190	Ant3	-35.99	-27	Pass
NVNT	ax40	5230	Ant3	-38.5	-27	Pass
NVNT	ax40	5270	Ant3	-36.54	-27	Pass
NVNT	ax40	5310	Ant3	-37.91	-27	Pass
NVNT	ax40	5510	Ant3	-37.93	-27	Pass
NVNT	ax40	5670	Ant3	-37.14	-27	Pass
NVNT	ax80	5210	Ant1	-31.38	-27	Pass
NVNT	ax80	5290	Ant1	-32.64	-27	Pass
NVNT	ax80	5530	Ant1	-33.8	-27	Pass
NVNT	ax80	5610	Ant1	-38.23	-27	Pass
NVNT	ax80	5210	Ant2	-30.22	-27	Pass
NVNT	ax80	5290	Ant2	-32.92	-27	Pass
NVNT	ax80	5530	Ant2	-33.47	-27	Pass
NVNT	ax80	5610	Ant2	-37.39	-27	Pass
NVNT	ax80	5210	Ant3	-32.66	-27	Pass
NVNT	ax80	5290	Ant3	-31.69	-27	Pass
NVNT	ax80	5530	Ant3	-33.44	-27	Pass
NVNT	ax80	5610	Ant3	-36.34	-27	Pass
NVNT	ax160	5250	Ant1	-35.14	-27	Pass
NVNT	ax160	5570	Ant1	-36.58	-27	Pass
NVNT	ax160	5250	Ant2	-34.86	-27	Pass
NVNT	ax160	5570	Ant2	-37.62	-27	Pass
NVNT	ax160	5250	Ant3	-34.87	-27	Pass
NVNT	ax160	5570	Ant3	-33.21	-27	Pass
Condition	Mode	Frequency (MHz)	Antenna	Max Value (dBm)	Limit (dBm)	Verdict
NVNT	a	5745	Ant1	-34.97	15.6	Pass
NVNT	a	5825	Ant1	-36.15	15.6	Pass
NVNT	a	5745	Ant2	-32.89	15.6	Pass
NVNT	a	5825	Ant2	-35.91	15.6	Pass
NVNT	a	5745	Ant3	-33.43	15.6	Pass
NVNT	a	5825	Ant3	-35.16	15.6	Pass
NVNT	n20	5745	Ant1	-35.57	15.6	Pass
NVNT	n20	5825	Ant1	-36.54	15.6	Pass
NVNT	n20	5745	Ant2	-35.24	15.6	Pass
NVNT	n20	5825	Ant2	-35.77	15.6	Pass
NVNT	n20	5745	Ant3	-35	15.6	Pass
NVNT	n20	5825	Ant3	-36.61	15.6	Pass
NVNT	n40	5755	Ant1	-32.51	15.6	Pass
NVNT	n40	5795	Ant1	-36.21	15.6	Pass
NVNT	n40	5755	Ant2	-31.53	15.6	Pass
NVNT	n40	5795	Ant2	-35.01	15.6	Pass
NVNT	n40	5755	Ant3	-32.62	15.6	Pass
NVNT	n40	5795	Ant3	-35.1	15.6	Pass
NVNT	ac20	5745	Ant1	-35.83	15.6	Pass
NVNT	ac20	5825	Ant1	-36.58	15.6	Pass
NVNT	ac20	5745	Ant2	-34.59	15.6	Pass
NVNT	ac20	5825	Ant2	-36.05	15.6	Pass



NVNT	ac20	5745	Ant3	-34.1	15.6	Pass
NVNT	ac20	5825	Ant3	-37.02	15.6	Pass
NVNT	ac40	5755	Ant1	-31.53	15.6	Pass
NVNT	ac40	5795	Ant1	-36.27	15.6	Pass
NVNT	ac40	5755	Ant2	-31.95	15.6	Pass
NVNT	ac40	5795	Ant2	-33.16	15.6	Pass
NVNT	ac40	5755	Ant3	-30.13	15.6	Pass
NVNT	ac40	5795	Ant3	-33.03	15.6	Pass
NVNT	ac80	5775	Ant1	-31.93	15.6	Pass
NVNT	ac80	5775	Ant2	-28.26	15.6	Pass
NVNT	ac80	5775	Ant3	-24.93	15.6	Pass
NVNT	ax20	5745	Ant1	-33.57	15.6	Pass
NVNT	ax20	5825	Ant1	-36.86	15.6	Pass
NVNT	ax20	5745	Ant2	-33.03	15.6	Pass
NVNT	ax20	5825	Ant2	-36.15	15.6	Pass
NVNT	ax20	5745	Ant3	-33.04	15.6	Pass
NVNT	ax20	5825	Ant3	-33.99	15.6	Pass
NVNT	ax40	5755	Ant1	-31.61	15.6	Pass
NVNT	ax40	5795	Ant1	-34.61	15.6	Pass
NVNT	ax40	5755	Ant2	-32.95	15.6	Pass
NVNT	ax40	5795	Ant2	-31.53	15.6	Pass
NVNT	ax40	5755	Ant3	-27.21	15.6	Pass
NVNT	ax40	5795	Ant3	-32.68	15.6	Pass
NVNT	ax80	5775	Ant1	-30.06	15.6	Pass
NVNT	ax80	5775	Ant2	-26.34	15.6	Pass
NVNT	ax80	5775	Ant3	-22.03	15.6	Pass

Note: The antenna gain and cable loss have been offset in the test Value.

