






11N40MIMO-Ant0-5755-PASS

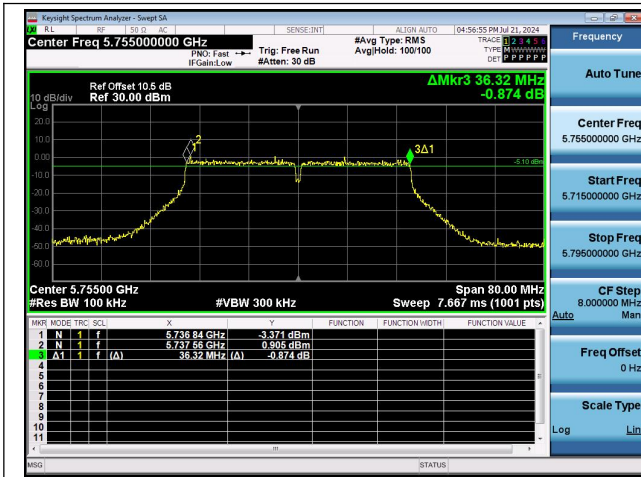


11N40MIMO-Ant1-5755-PASS

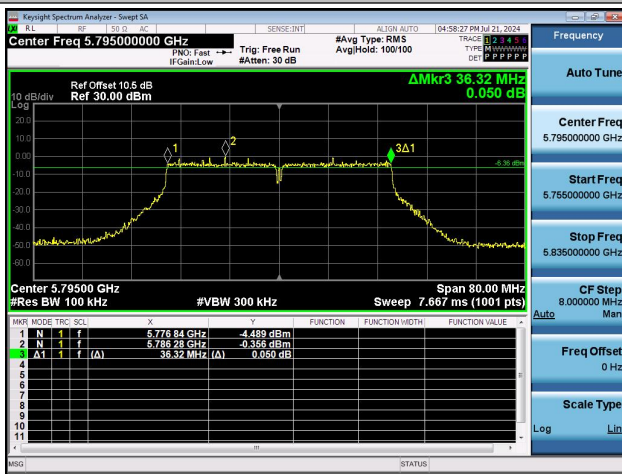


11N40MIMO-Ant0-5795-PASS

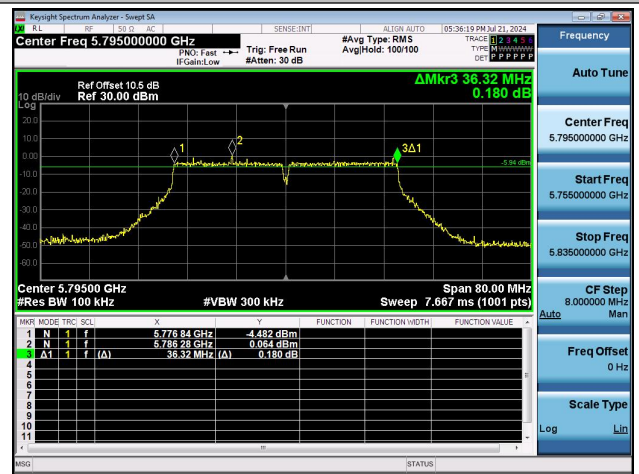

11N40MIMO-Ant1-5795-PASS

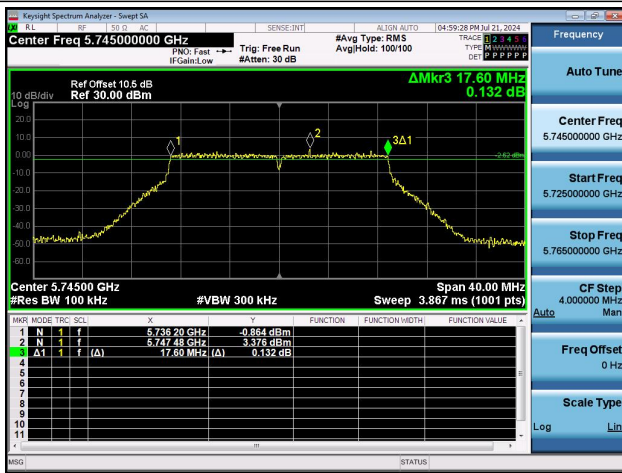

11A20MIMO-Ant0-5745-PASS

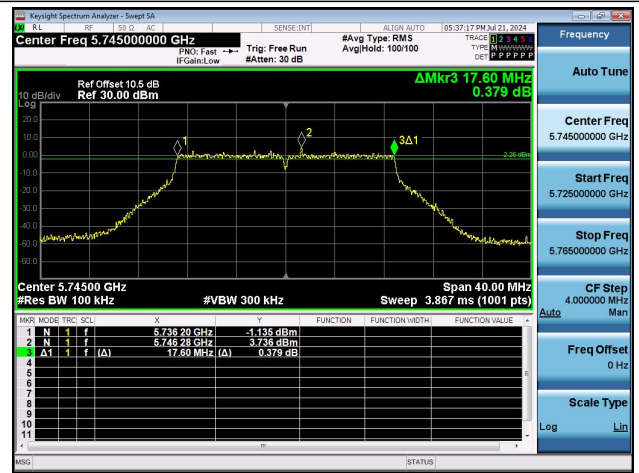


11A20MIMO-Ant1-5745-PASS




11AC20MIMO-Ant0-5785-PASS




11AC20MIMO-Ant1-5785-PASS

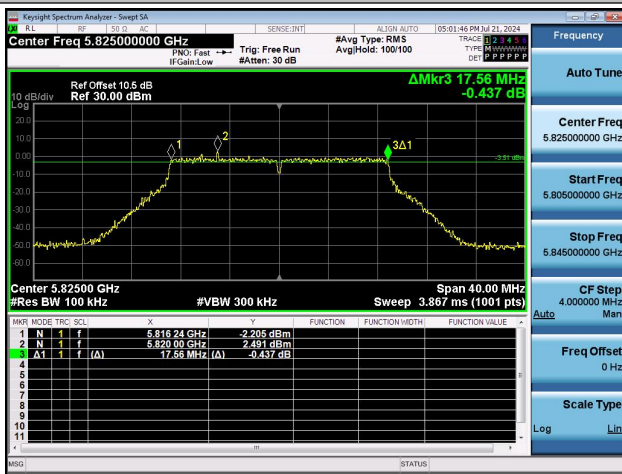

11AC20MIMO-Ant0-5825-PASS

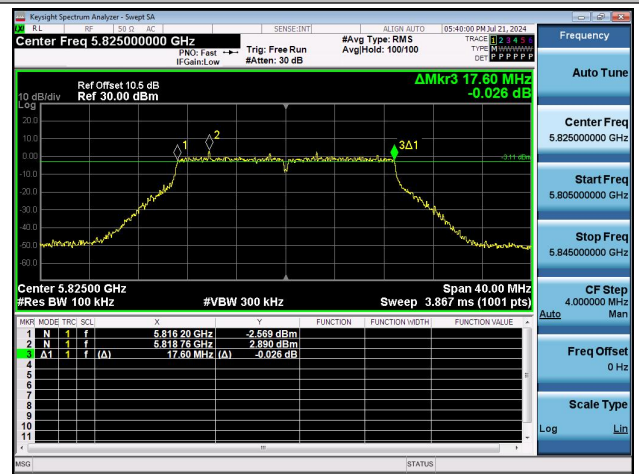

11AC20MIMO-Ant1-5825-PASS

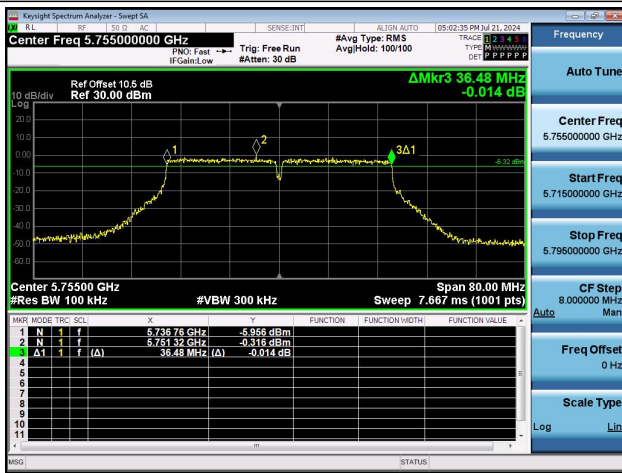

11AC40MIMO-Ant0-5755-PASS




11AC40MIMO-Ant1-5755-PASS



11AC40MIMO-Ant0-5795-PASS




11AC40MIMO-Ant1-5795-PASS

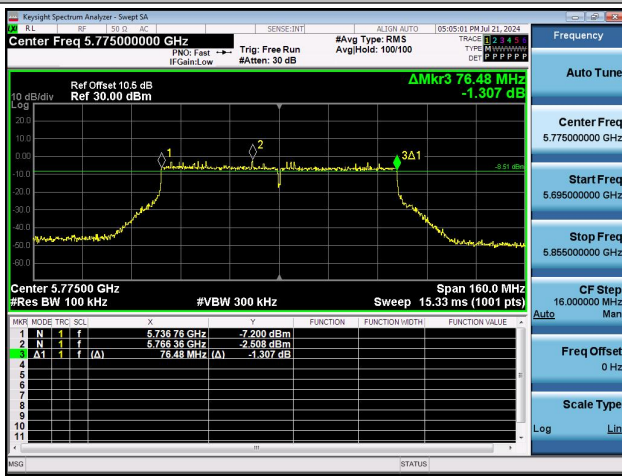


11AC80MIMO-Ant0-5775-PASS




11AC80MIMO-Ant1-5775-PASS

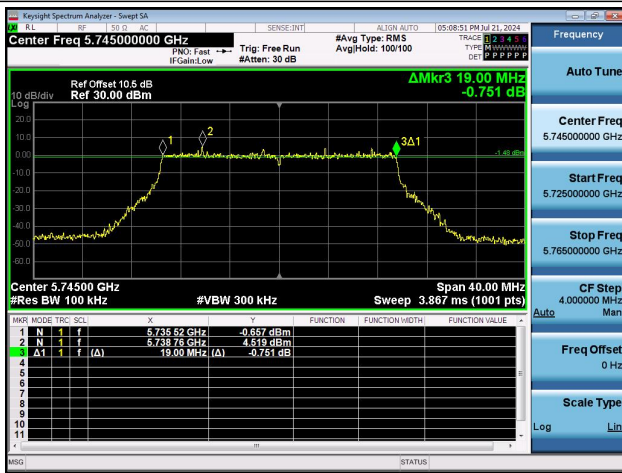


11AX20MIMO-Ant0-5745-PASS

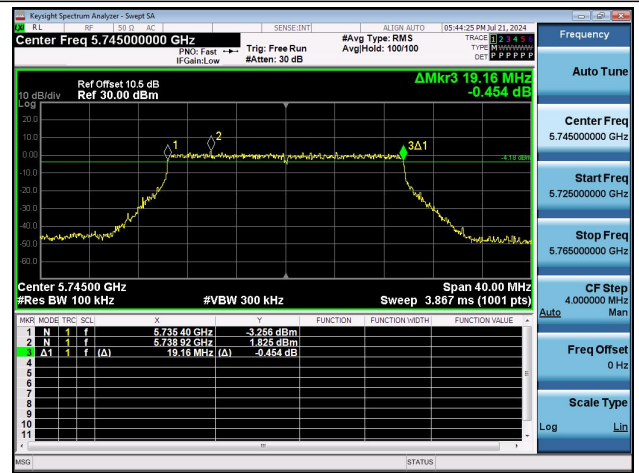


11AX20MIMO-Ant1-5745-PASS

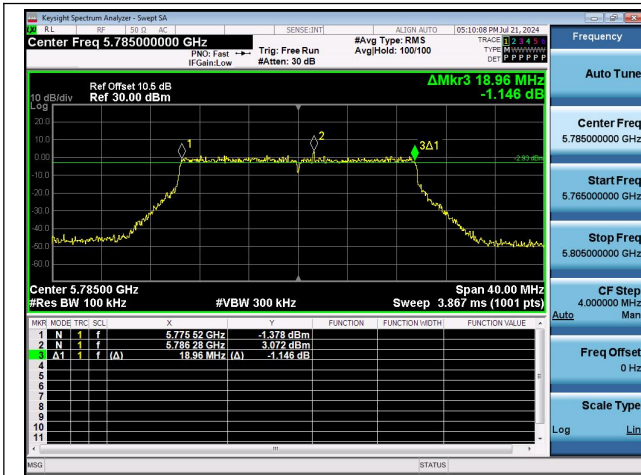


11AX20MIMO-Ant0-5785-PASS

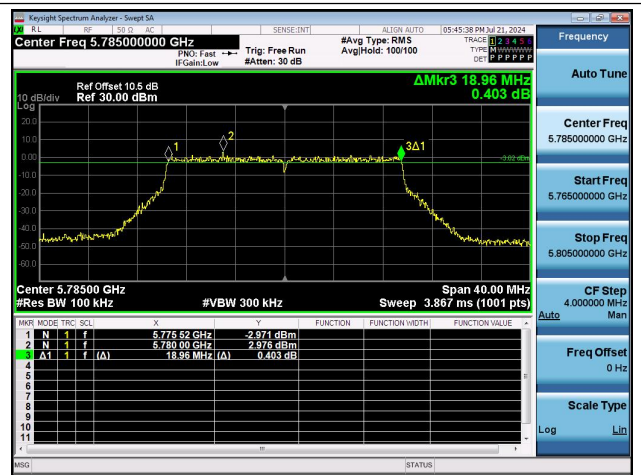


11AX20MIMO-Ant1-5785-PASS

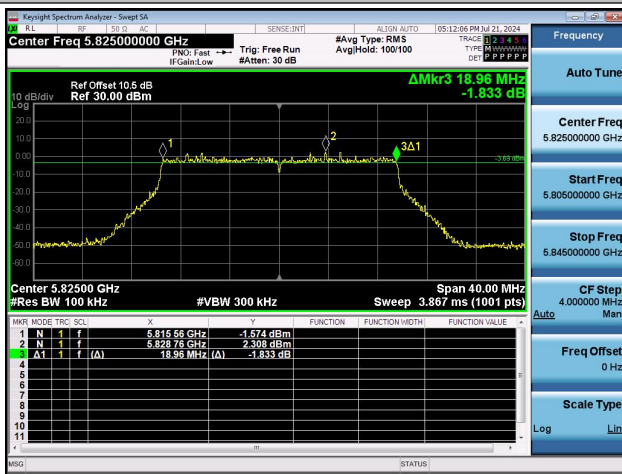


11AX20MIMO-Ant0-5825-PASS

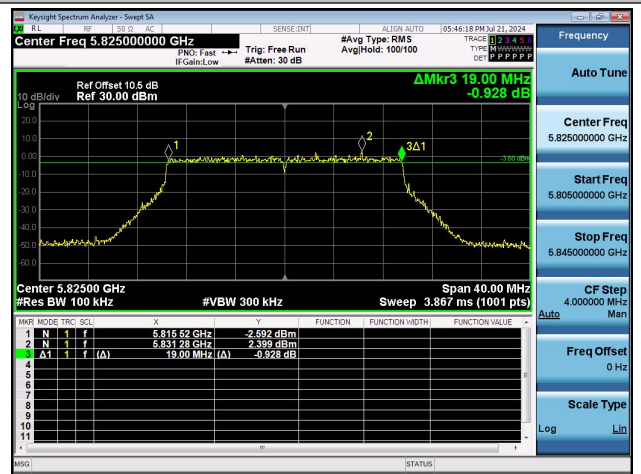

11AX20MIMO-Ant1-5825-PASS

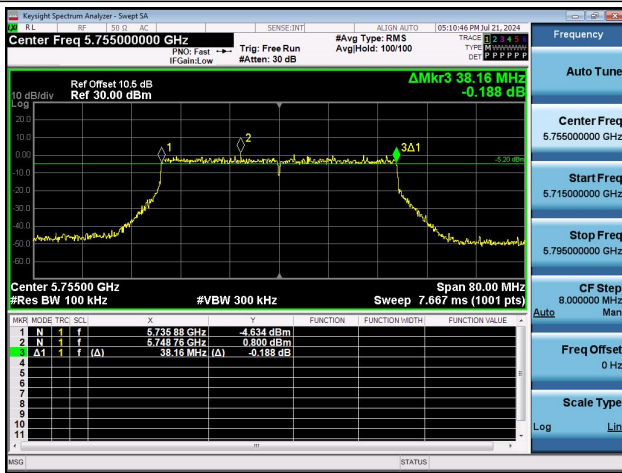


11AX40MIMO-Ant0-5755-PASS

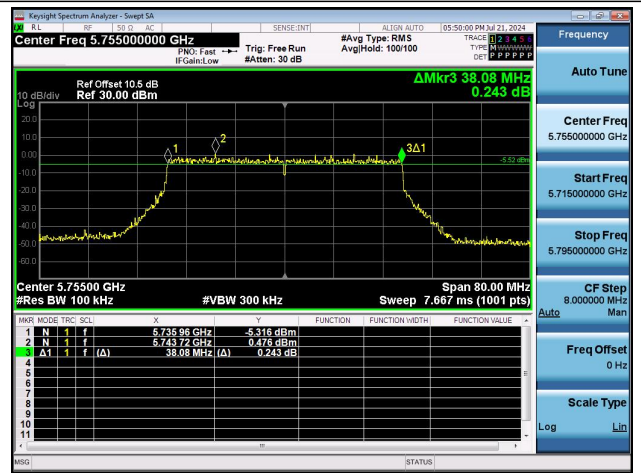


11AX40MIMO-Ant1-5755-PASS




11AX40MIMO-Ant0-5795-PASS

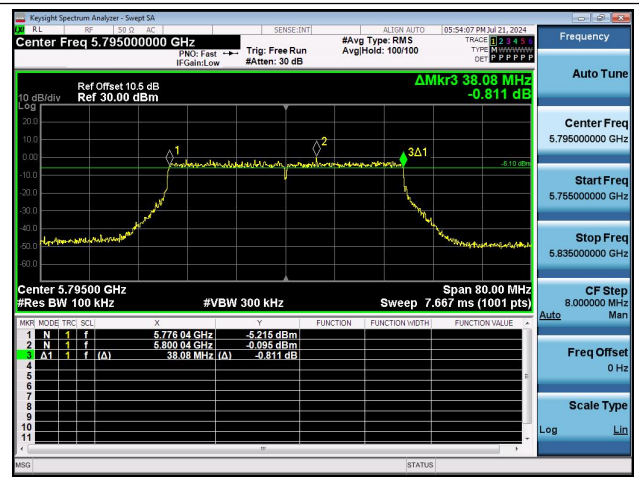

11AX40MIMO-Ant1-5795-PASS

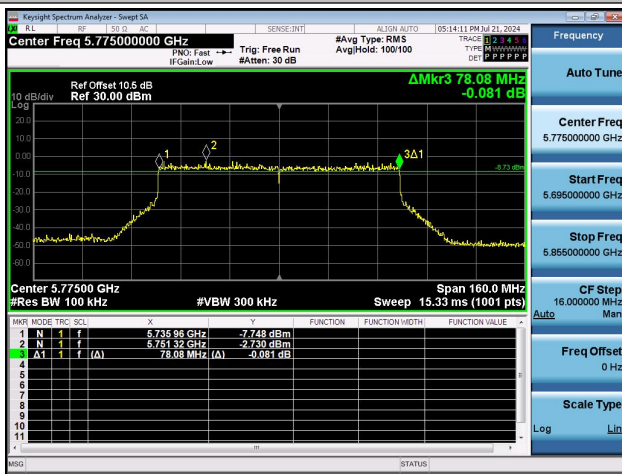

11AX80MIMO-Ant0-5775-PASS

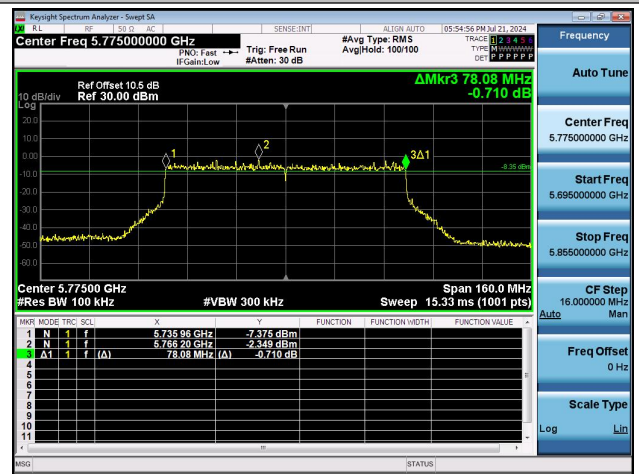

11AX80MIMO-Ant1-5775-PASS



Frequency Stability Test Result and Data

TestMode	Antenna	Frequency[MHz]	Voltage[Vdc]	Temperature(°C)	Deviation(Hz)	Deviation(ppm)	Limit(ppm)	Verdict
11A	Ant0	5180	NV	NT	0.00	0.000000	20	PASS
11A	Ant0	5180	LV	NT	0.00	0.000000	20	PASS
11A	Ant0	5180	HV	NT	20000.00	3.861004	20	PASS
11A	Ant1	5180	NV	NT	0.00	0.000000	20	PASS
11A	Ant1	5180	LV	NT	0.00	0.000000	20	PASS
11A	Ant1	5180	HV	NT	0.00	0.000000	20	PASS

TestMode	Antenna	Frequency[MHz]	Voltage[Vdc]	Temperature(°C)	Deviation(Hz)	Deviation(ppm)	Limit(ppm)	Verdict
11A	Ant0	5180	NV	-30	0.00	0.000000	20	PASS
11A	Ant0	5180	NV	-20	0.00	0.000000	20	PASS
11A	Ant0	5180	NV	-10	20000.00	3.861004	20	PASS
11A	Ant0	5180	NV	0	0.00	0.000000	20	PASS
11A	Ant0	5180	NV	10	-20000.00	-3.861004	20	PASS
11A	Ant0	5180	NV	20	0.00	0.000000	20	PASS
11A	Ant0	5180	NV	30	0.00	0.000000	20	PASS
11A	Ant0	5180	NV	40	0.00	0.000000	20	PASS
11A	Ant0	5180	NV	50	0.00	0.000000	20	PASS
11A	Ant1	5180	NV	-30	0.00	0.000000	20	PASS
11A	Ant1	5180	NV	-20	0.00	0.000000	20	PASS
11A	Ant1	5180	NV	-10	0.00	0.000000	20	PASS
11A	Ant1	5180	NV	0	0.00	0.000000	20	PASS
11A	Ant1	5180	NV	10	0.00	0.000000	20	PASS
11A	Ant1	5180	NV	20	0.00	0.000000	20	PASS
11A	Ant1	5180	NV	30	0.00	0.000000	20	PASS
11A	Ant1	5180	NV	40	0.00	0.000000	20	PASS
11A	Ant1	5180	NV	50	0.00	0.000000	20	PASS

Note 1: All of the EUT Configure Mode were tested, the worst case is recorded in this report.



TestMode	Antenna	Frequency[MHz]	Voltage[Vdc]	Temperature(°C)	Deviation(Hz)	Deviation(ppm)	Limit(ppm)	Verdict
11A	Ant0	5260	NV	NT	0.00	0.000000	20	PASS
11A	Ant0	5260	LV	NT	20000.00	3.802281	20	PASS
11A	Ant0	5260	HV	NT	0.00	0.000000	20	PASS
11A	Ant1	5260	NV	NT	0.00	0.000000	20	PASS
11A	Ant1	5260	LV	NT	0.00	0.000000	20	PASS
11A	Ant1	5260	HV	NT	0.00	0.000000	20	PASS

TestMode	Antenna	Frequency[MHz]	Voltage[Vdc]	Temperature(°C)	Deviation(Hz)	Deviation(ppm)	Limit(ppm)	Verdict
11A	Ant0	5260	NV	-30	0.00	0.000000	20	PASS
11A	Ant0	5260	NV	-20	20000.00	3.802281	20	PASS
11A	Ant0	5260	NV	-10	20000.00	3.802281	20	PASS
11A	Ant0	5260	NV	0	0.00	0.000000	20	PASS
11A	Ant0	5260	NV	10	0.00	0.000000	20	PASS
11A	Ant0	5260	NV	20	-20000.00	-3.802281	20	PASS
11A	Ant0	5260	NV	30	0.00	0.000000	20	PASS
11A	Ant0	5260	NV	40	0.00	0.000000	20	PASS
11A	Ant0	5260	NV	50	0.00	0.000000	20	PASS
11A	Ant1	5260	NV	-30	0.00	0.000000	20	PASS
11A	Ant1	5260	NV	-20	0.00	0.000000	20	PASS
11A	Ant1	5260	NV	-10	0.00	0.000000	20	PASS
11A	Ant1	5260	NV	0	0.00	0.000000	20	PASS
11A	Ant1	5260	NV	10	0.00	0.000000	20	PASS
11A	Ant1	5260	NV	20	0.00	0.000000	20	PASS
11A	Ant1	5260	NV	30	0.00	0.000000	20	PASS
11A	Ant1	5260	NV	40	0.00	0.000000	20	PASS
11A	Ant1	5260	NV	50	0.00	0.000000	20	PASS

Note 1: All of the EUT Configure Mode were tested, the worst case is recorded in this report.



TestMode	Antenna	Frequency[MHz]	Voltage[Vdc]	Temperature(°C)	Deviation(Hz)	Deviation(ppm)	Limit(ppm)	Verdict
11A	Ant0	5500	NV	NT	0.00	0.000000	20	PASS
11A	Ant0	5500	LV	NT	0.00	0.000000	20	PASS
11A	Ant0	5500	HV	NT	0.00	0.000000	20	PASS
11A	Ant1	5500	NV	NT	0.00	0.000000	20	PASS
11A	Ant1	5500	LV	NT	0.00	0.000000	20	PASS
11A	Ant1	5500	HV	NT	0.00	0.000000	20	PASS

TestMode	Antenna	Frequency[MHz]	Voltage[Vdc]	Temperature(°C)	Deviation(Hz)	Deviation(ppm)	Limit(ppm)	Verdict
11A	Ant0	5500	NV	-30	20000.00	3.636364	20	PASS
11A	Ant0	5500	NV	-20	20000.00	3.636364	20	PASS
11A	Ant0	5500	NV	-10	0.00	0.000000	20	PASS
11A	Ant0	5500	NV	0	20000.00	3.636364	20	PASS
11A	Ant0	5500	NV	10	0.00	0.000000	20	PASS
11A	Ant0	5500	NV	20	0.00	0.000000	20	PASS
11A	Ant0	5500	NV	30	0.00	0.000000	20	PASS
11A	Ant0	5500	NV	40	0.00	0.000000	20	PASS
11A	Ant0	5500	NV	50	-20000.00	-3.636364	20	PASS
11A	Ant1	5500	NV	-30	0.00	0.000000	20	PASS
11A	Ant1	5500	NV	-20	0.00	0.000000	20	PASS
11A	Ant1	5500	NV	-10	0.00	0.000000	20	PASS
11A	Ant1	5500	NV	0	20000.00	3.636364	20	PASS
11A	Ant1	5500	NV	10	0.00	0.000000	20	PASS
11A	Ant1	5500	NV	20	20000.00	3.636364	20	PASS
11A	Ant1	5500	NV	30	0.00	0.000000	20	PASS
11A	Ant1	5500	NV	40	0.00	0.000000	20	PASS
11A	Ant1	5500	NV	50	20000.00	3.636364	20	PASS

Note 1: All of the EUT Configure Mode were tested, the worst case is recorded in this report.




TestMode	Antenna	Frequency[MHz]	Voltage[Vdc]	Temperature(°C)	Deviation(Hz)	Deviation(ppm)	Limit(ppm)	Verdict
11A	Ant0	5745	NV	NT	0.00	0.000000	20	PASS
11A	Ant0	5745	LV	NT	0.00	0.000000	20	PASS
11A	Ant0	5745	HV	NT	0.00	0.000000	20	PASS
11A	Ant1	5745	NV	NT	0.00	0.000000	20	PASS
11A	Ant1	5745	LV	NT	0.00	0.000000	20	PASS
11A	Ant1	5745	HV	NT	0.00	0.000000	20	PASS

TestMode	Antenna	Frequency[MHz]	Voltage[Vdc]	Temperature(°C)	Deviation(Hz)	Deviation(ppm)	Limit(ppm)	Verdict
11A	Ant0	5745	NV	-30	20000.00	3.481288	20	PASS
11A	Ant0	5745	NV	-20	0.00	0.000000	20	PASS
11A	Ant0	5745	NV	-10	-20000.00	-3.481288	20	PASS
11A	Ant0	5745	NV	0	0.00	0.000000	20	PASS
11A	Ant0	5745	NV	10	-20000.00	-3.481288	20	PASS
11A	Ant0	5745	NV	20	0.00	0.000000	20	PASS
11A	Ant0	5745	NV	30	0.00	0.000000	20	PASS
11A	Ant0	5745	NV	40	0.00	0.000000	20	PASS
11A	Ant0	5745	NV	50	0.00	0.000000	20	PASS
11A	Ant1	5745	NV	-30	0.00	0.000000	20	PASS
11A	Ant1	5745	NV	-20	0.00	0.000000	20	PASS
11A	Ant1	5745	NV	-10	0.00	0.000000	20	PASS
11A	Ant1	5745	NV	0	0.00	0.000000	20	PASS
11A	Ant1	5745	NV	10	0.00	0.000000	20	PASS
11A	Ant1	5745	NV	20	0.00	0.000000	20	PASS
11A	Ant1	5745	NV	30	-20000.00	-3.481288	20	PASS
11A	Ant1	5745	NV	40	0.00	0.000000	20	PASS
11A	Ant1	5745	NV	50	0.00	0.000000	20	PASS


Note 1: All of the EUT Configure Mode were tested, the worst case is recorded in this report.

Conducted Band Edges

Test Result and Data

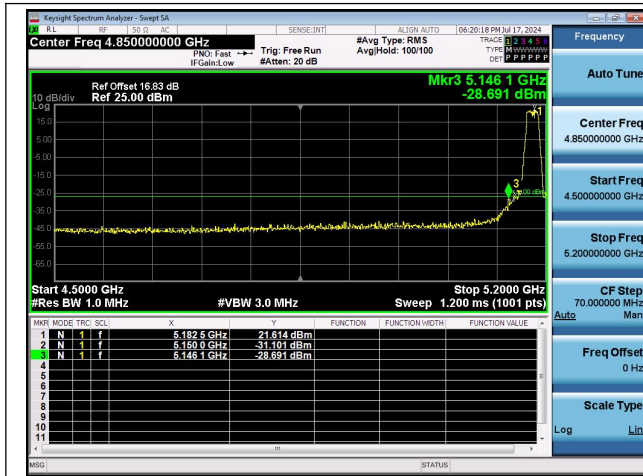


11A-Ant0-5180-PASS

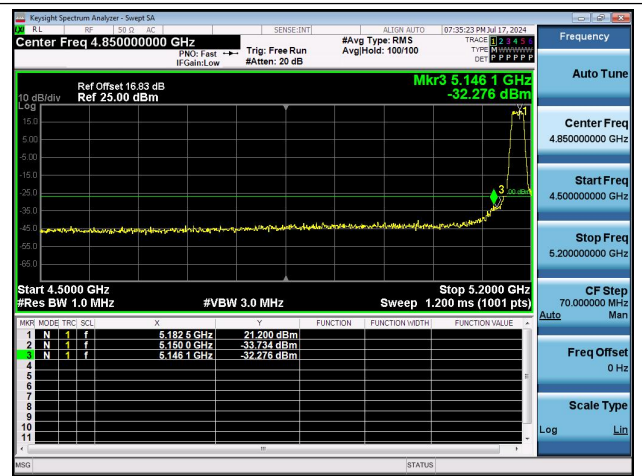


11A-Ant1-5180-PASS




11A-Ant0-5240-PASS

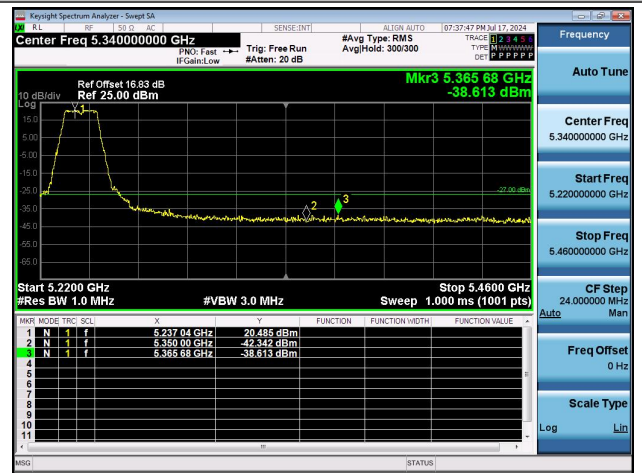

11A-Ant1-5240-PASS

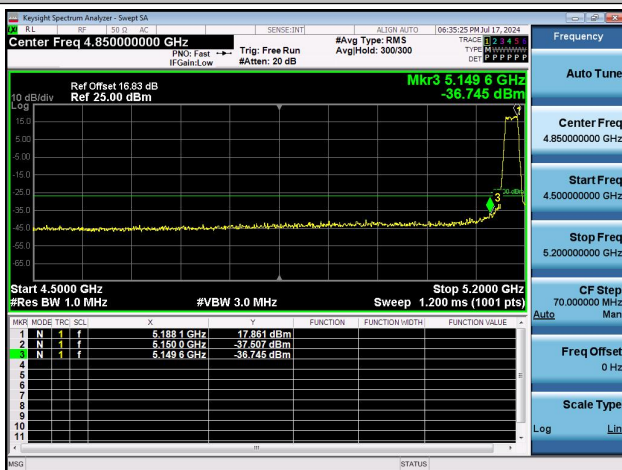

11N20MIMO-Ant0-5180-PASS

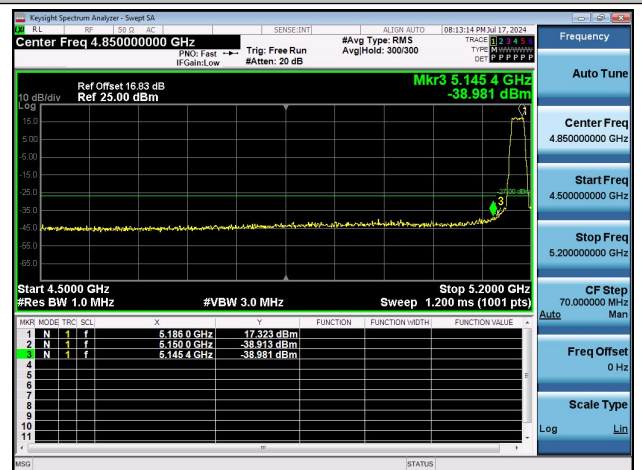

11N20MIMO-Ant1-5180-PASS