


Test Data

Frequency Stability


Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Deviation (ppm)	Limit (ppm)	Verdict
HVNT	a	5180	Ant1	5179.9844	-3.01	Within authorized band	Pass
LVNT	a	5180	Ant1	5179.9844	-3.01		Pass
NVHT	a	5180	Ant1	5179.9846	-2.97		Pass
NVLT	a	5180	Ant1	5179.9844	-3.01		Pass
NVNT	a	5180	Ant1	5179.9844	-3.01		Pass
HVNT	ac80	5210	Ant1	5209.9838	-3.11		Pass
LVNT	ac80	5210	Ant1	5209.984	-3.07		Pass
NVHT	ac80	5210	Ant1	5209.984	-3.07		Pass
NVLT	ac80	5210	Ant1	5209.984	-3.07		Pass
NVNT	ac80	5210	Ant1	5209.9842	-3.03		Pass
HVNT	n40	5190	Ant1	5189.9842	-3.04		Pass
LVNT	n40	5190	Ant1	5189.9842	-3.04		Pass
NVHT	n40	5190	Ant1	5189.9842	-3.04		Pass
NVLT	n40	5190	Ant1	5189.9842	-3.04		Pass
NVNT	n40	5190	Ant1	5189.984	-3.08		Pass
Remark: “NTNV” means Normal Temperature Normal Voltage, “NVHT” means Normal Voltage High Temperature, “NVLT” means Normal Voltage Low Temperature, “LVNT” means Low Voltage Normal Temperature, “HVNT” means High Voltage Normal Temperature.							

Test Graphs


Freq. Stability HVNT a 5180MHz Ant1

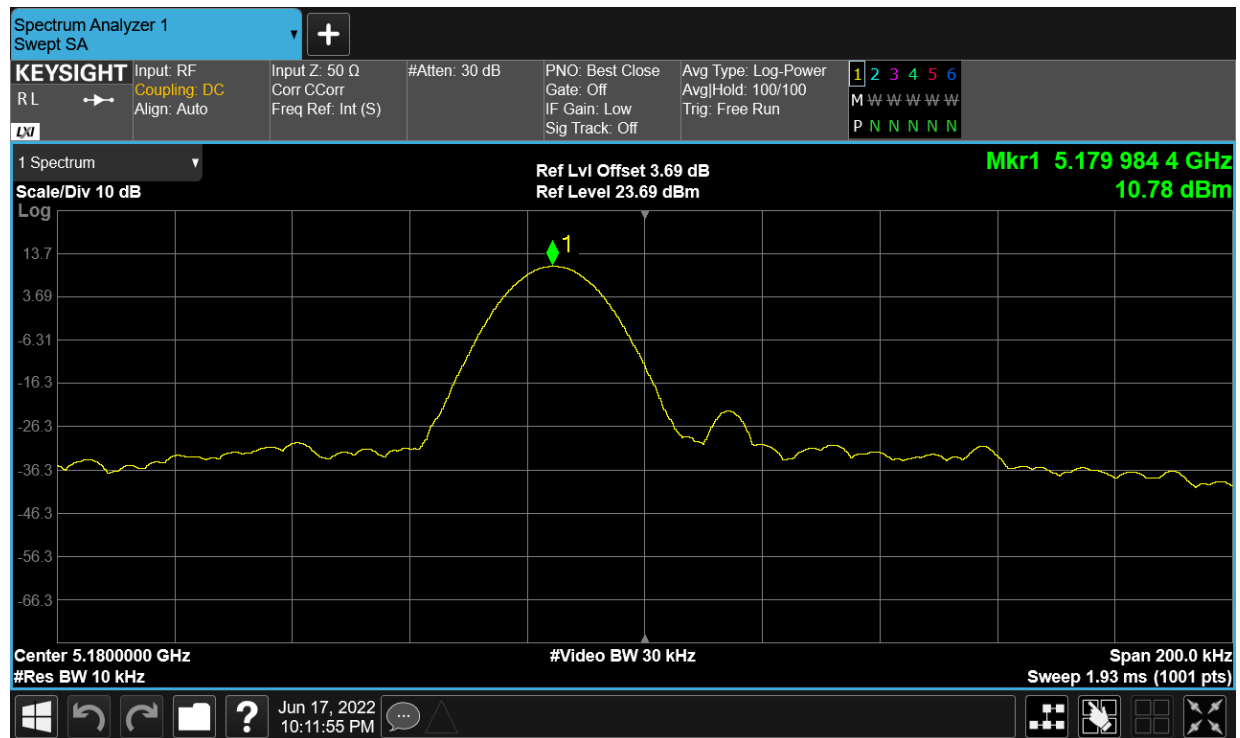


Freq. Stability LVNT a 5180MHz Ant1

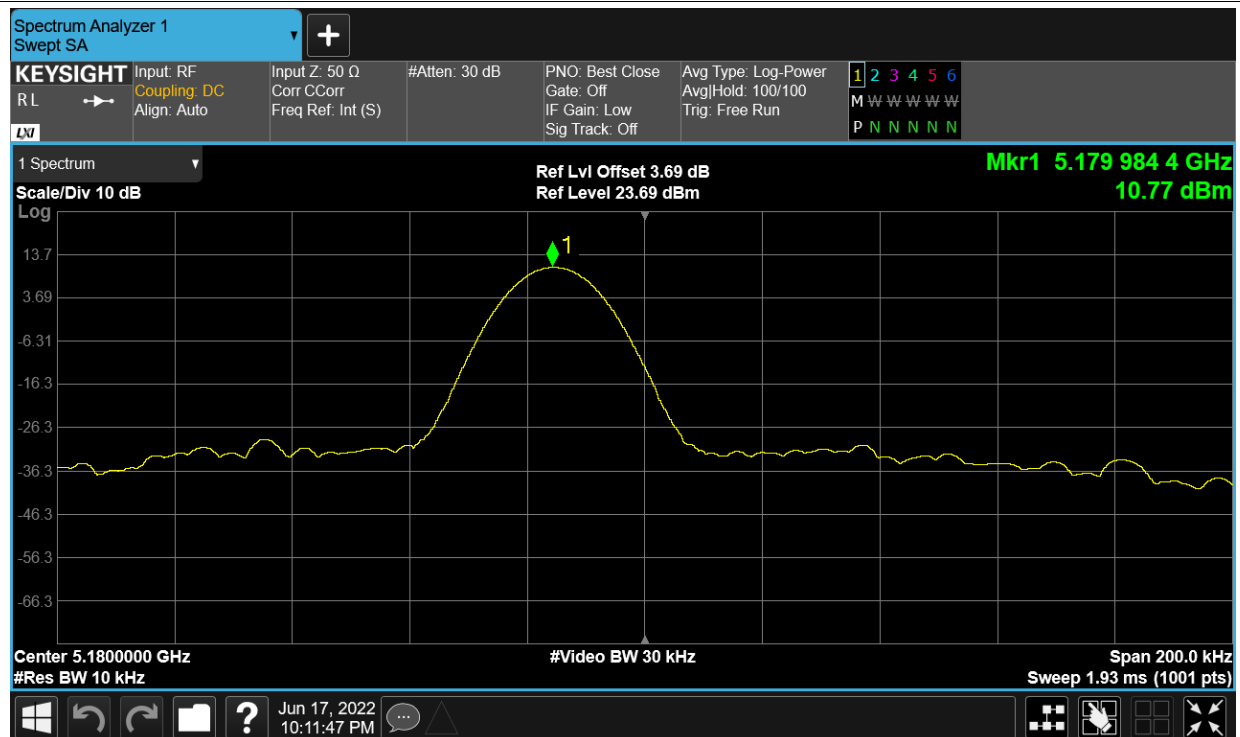


Freq. Stability NVHT a 5180MHz Ant1

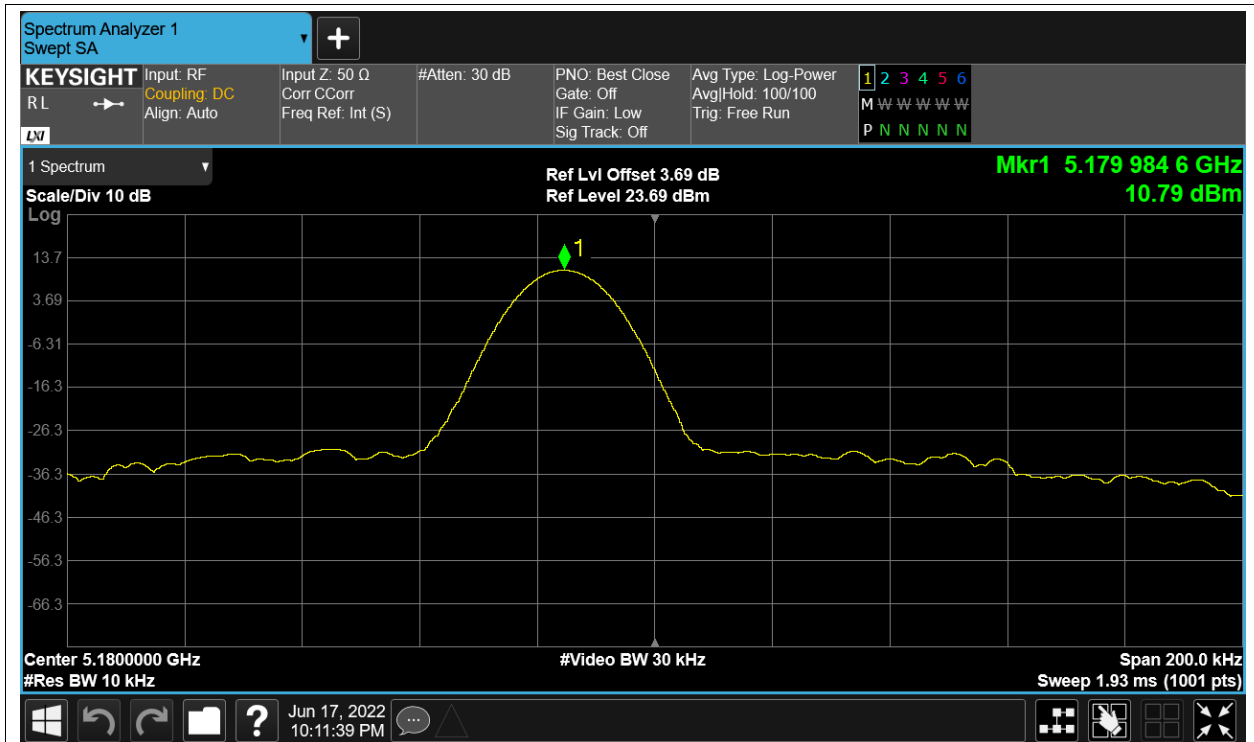


Freq. Stability NVLT a 5180MHz Ant1

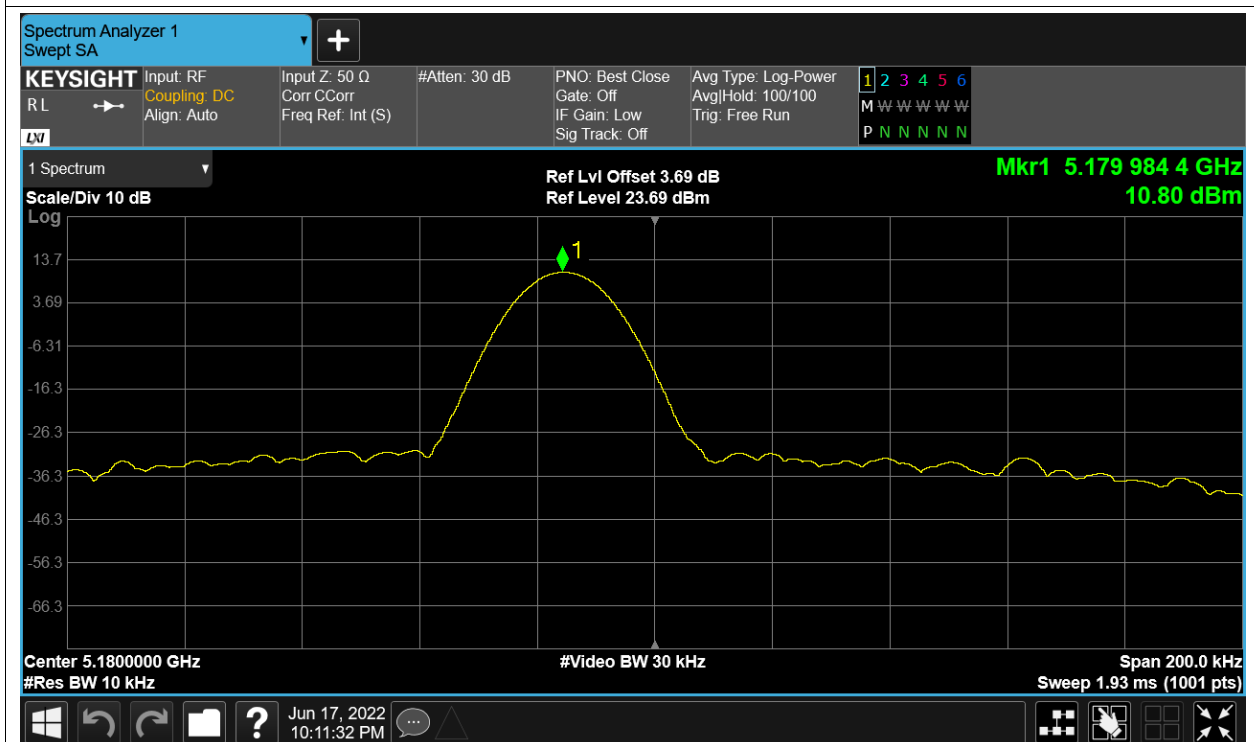


Freq. Stability NVNT a 5180MHz Ant1

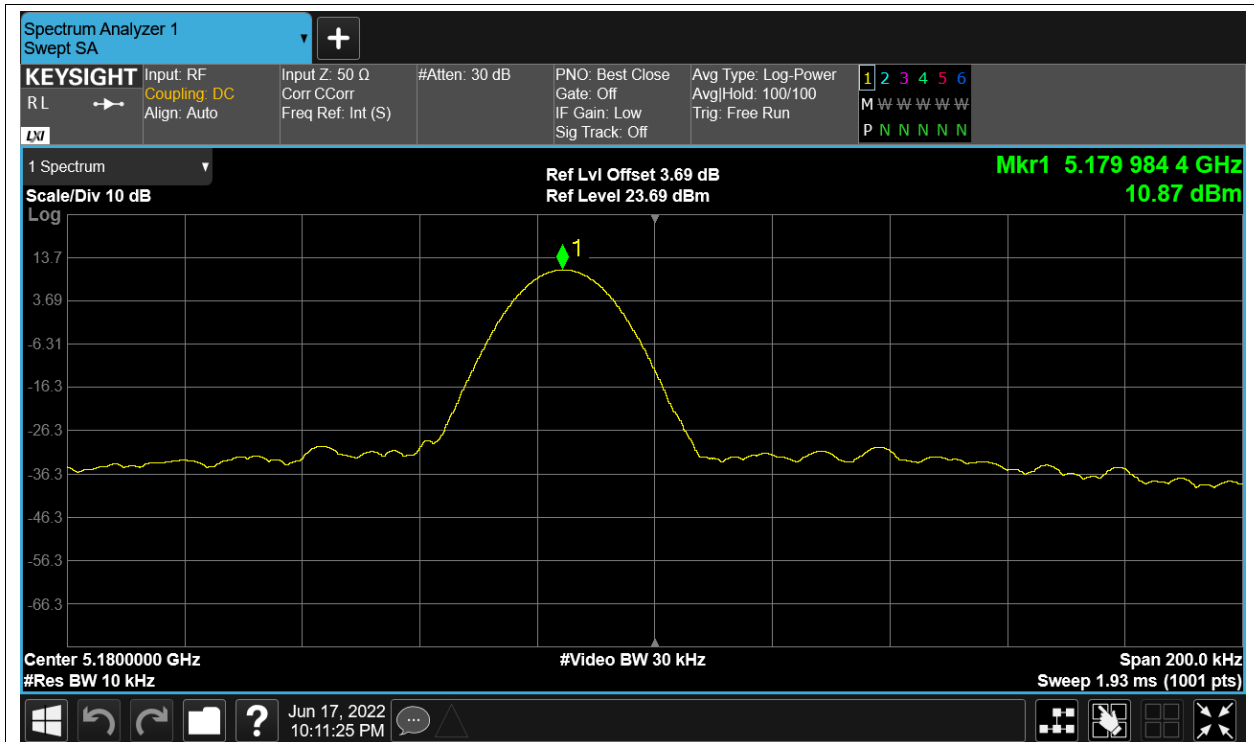


Freq. Stability HVNT ac80 5210MHz Ant1

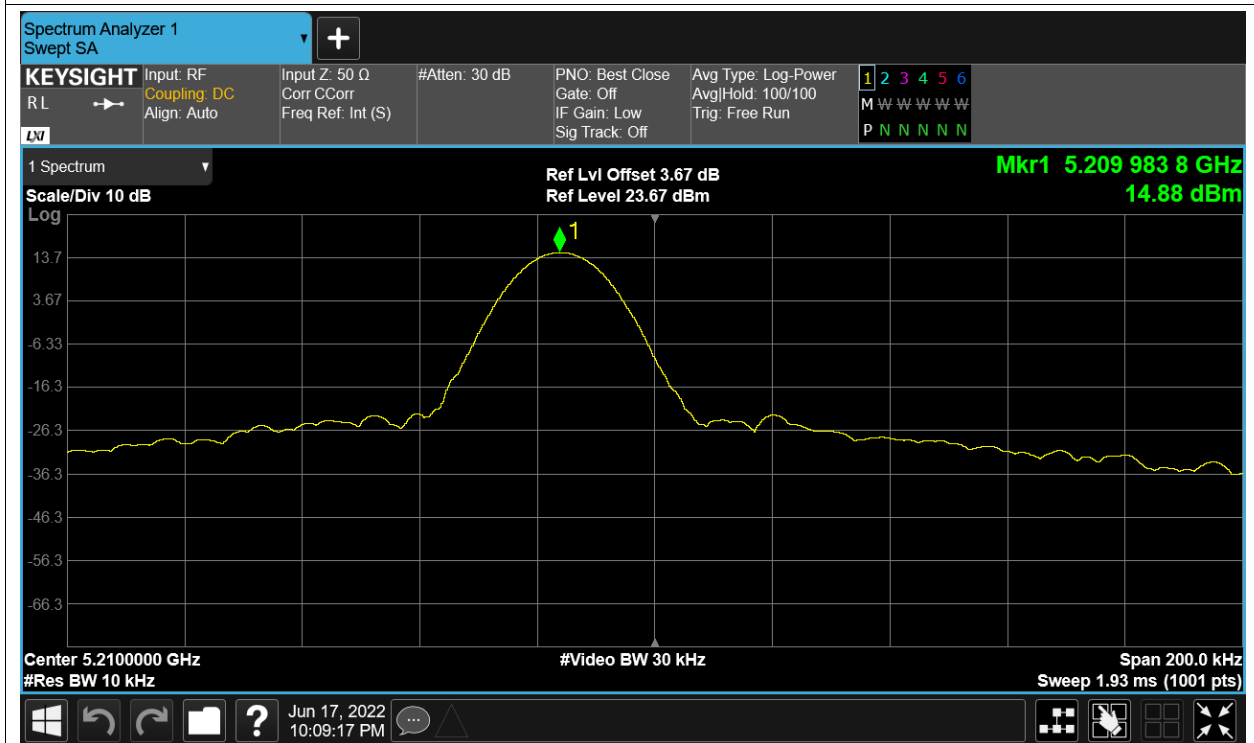


Freq. Stability LVNT ac80 5210MHz Ant1

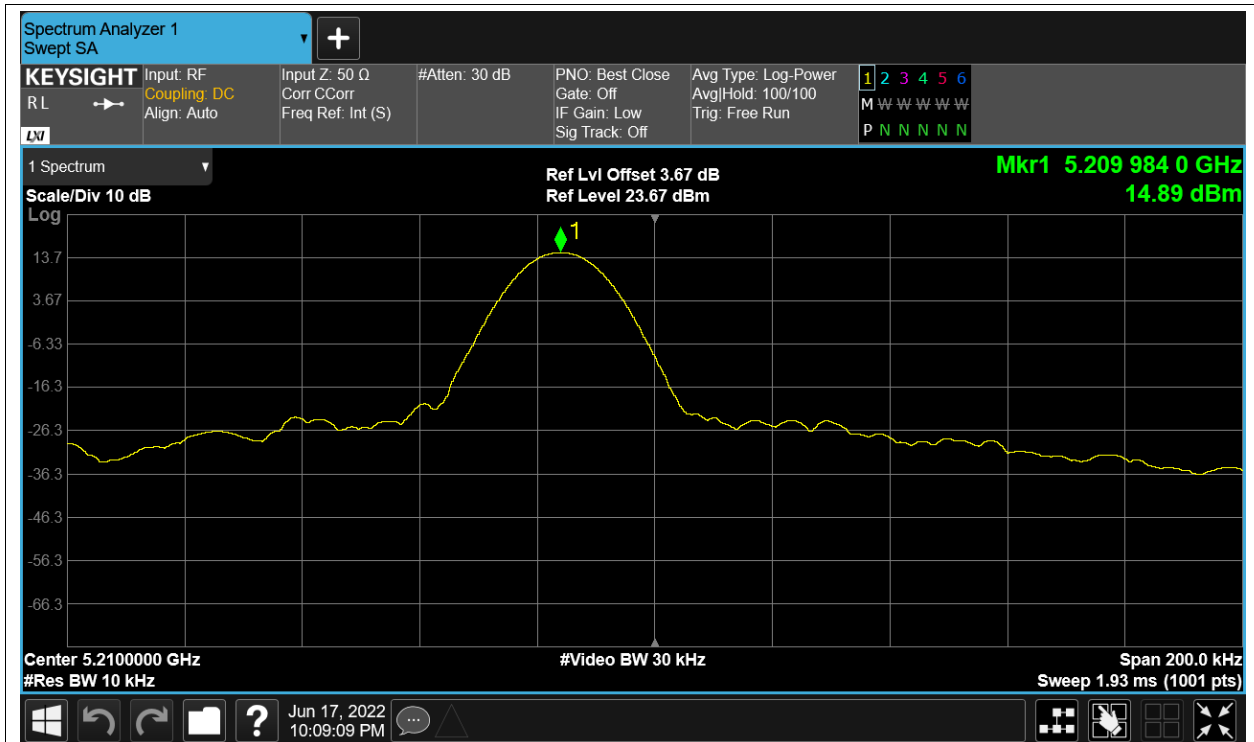


Freq. Stability NVHT ac80 5210MHz Ant1

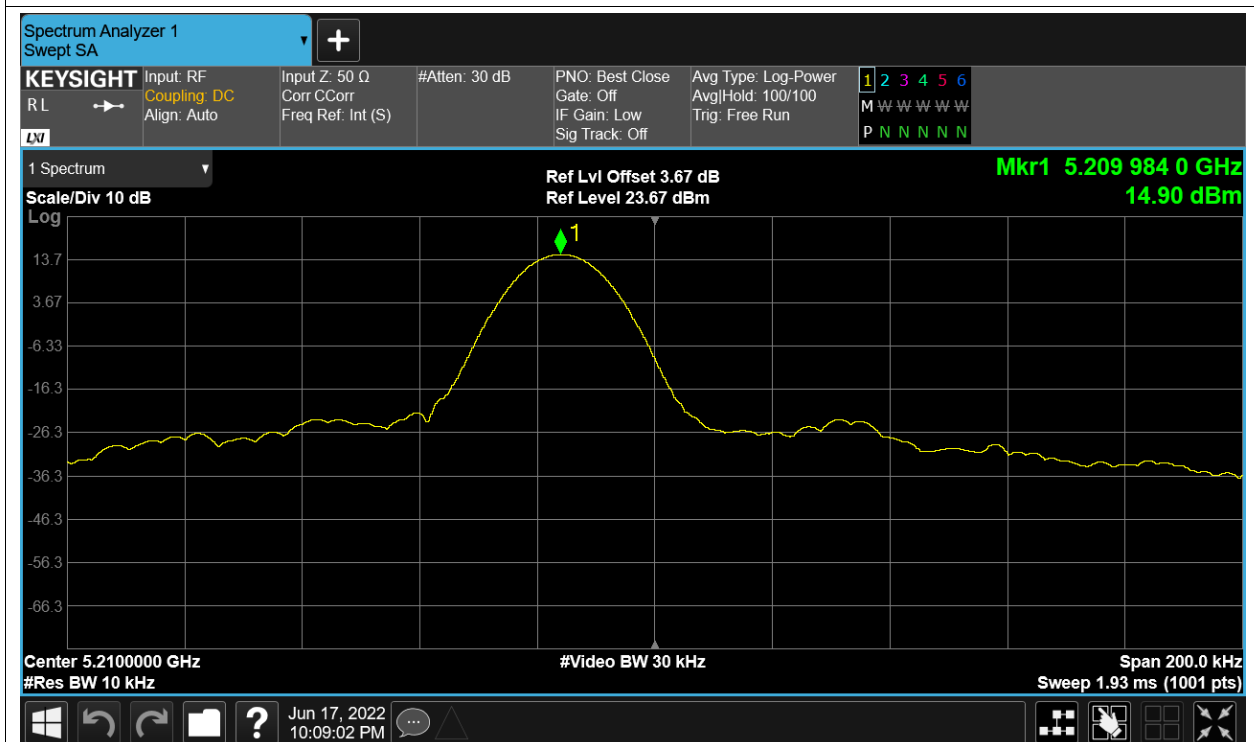


Freq. Stability NVLT ac80 5210MHz Ant1

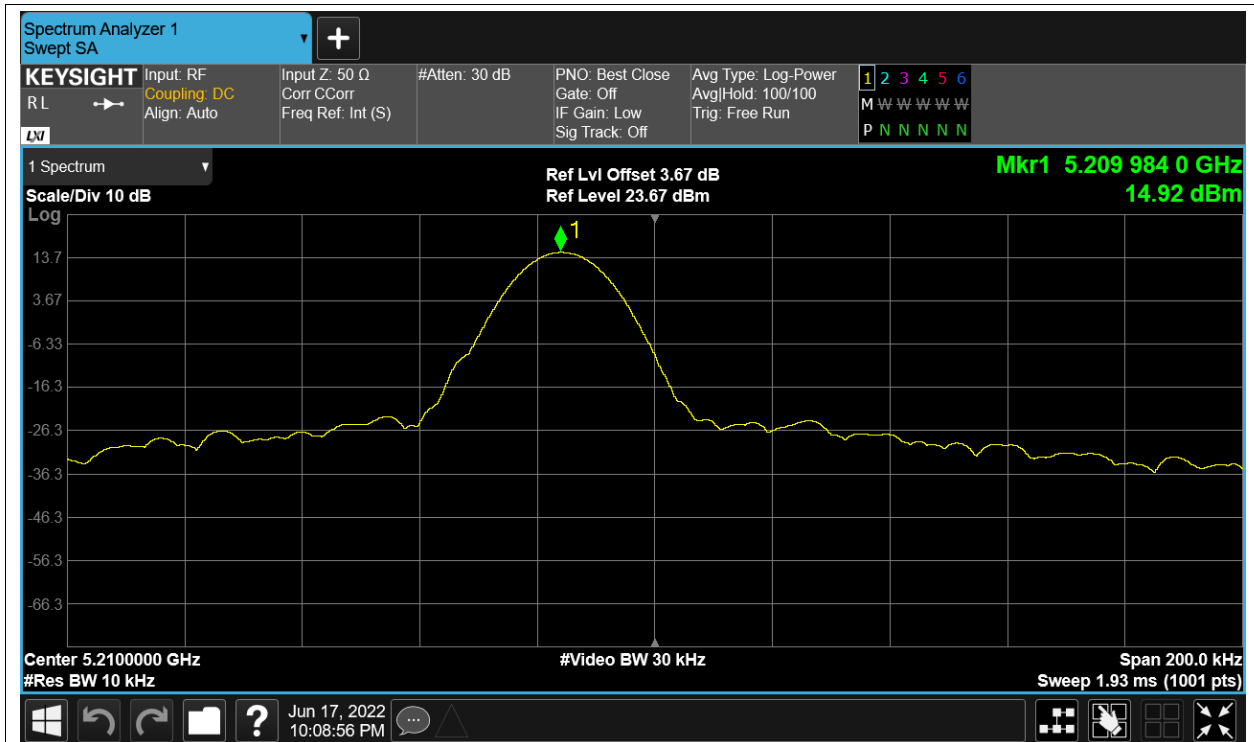


Freq. Stability NVNT ac80 5210MHz Ant1

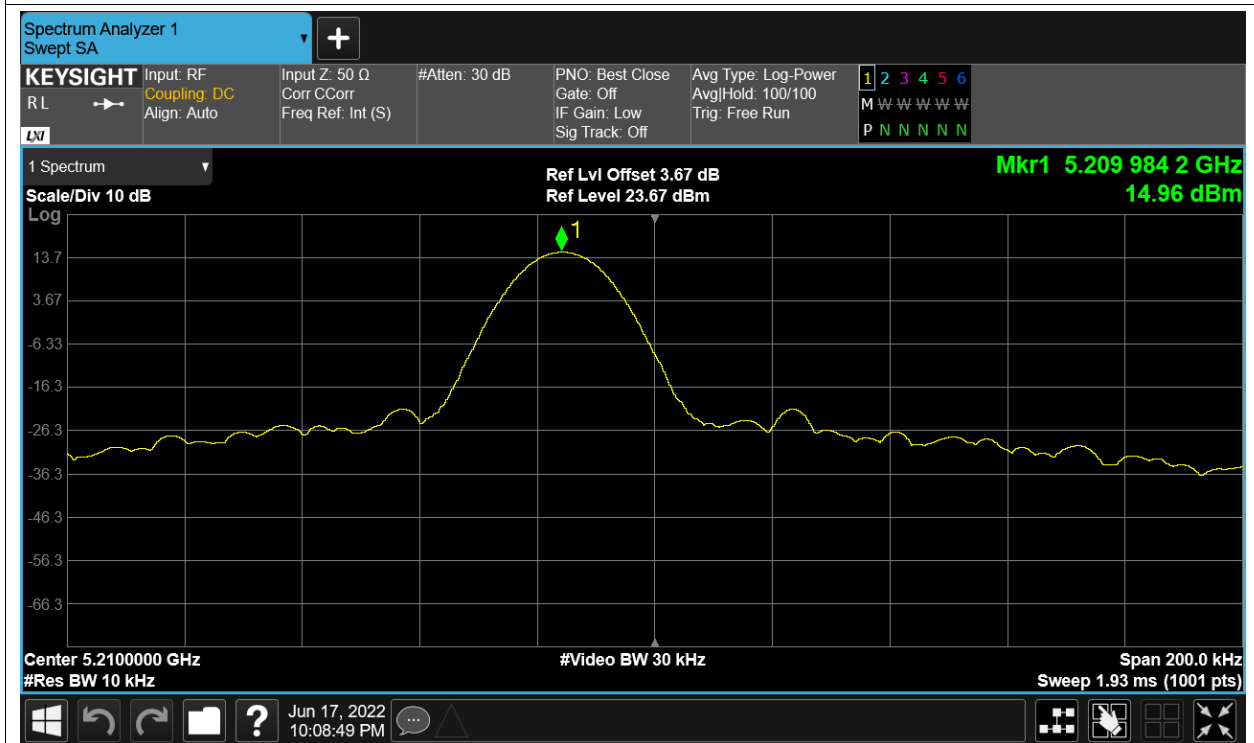


Freq. Stability HVNT n40 5190MHz Ant1

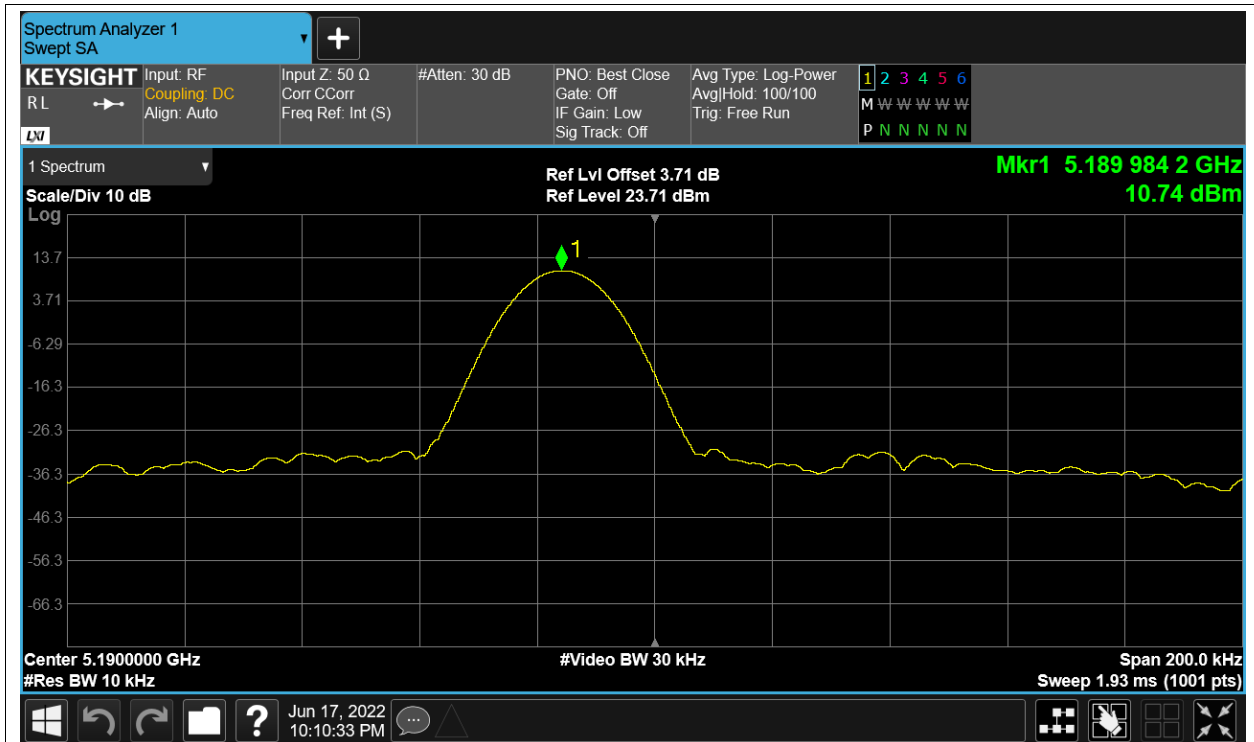


Freq. Stability LVNT n40 5190MHz Ant1

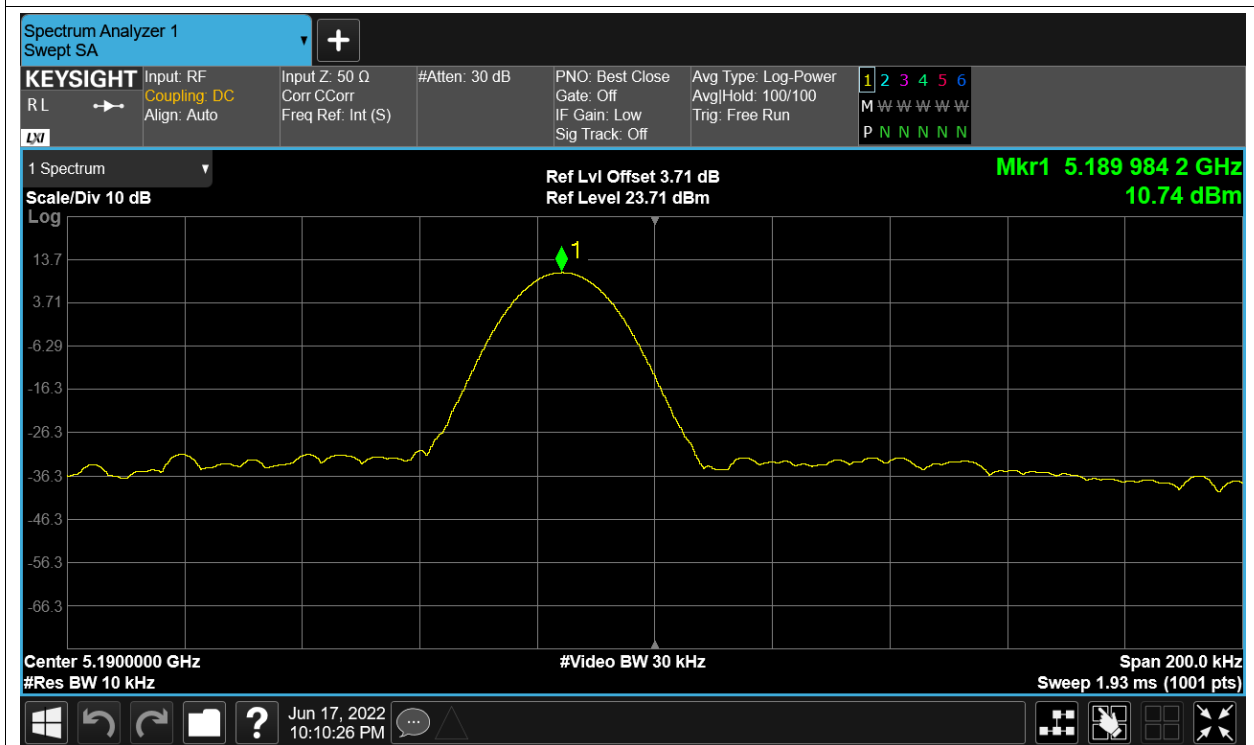


Freq. Stability NVHT n40 5190MHz Ant1

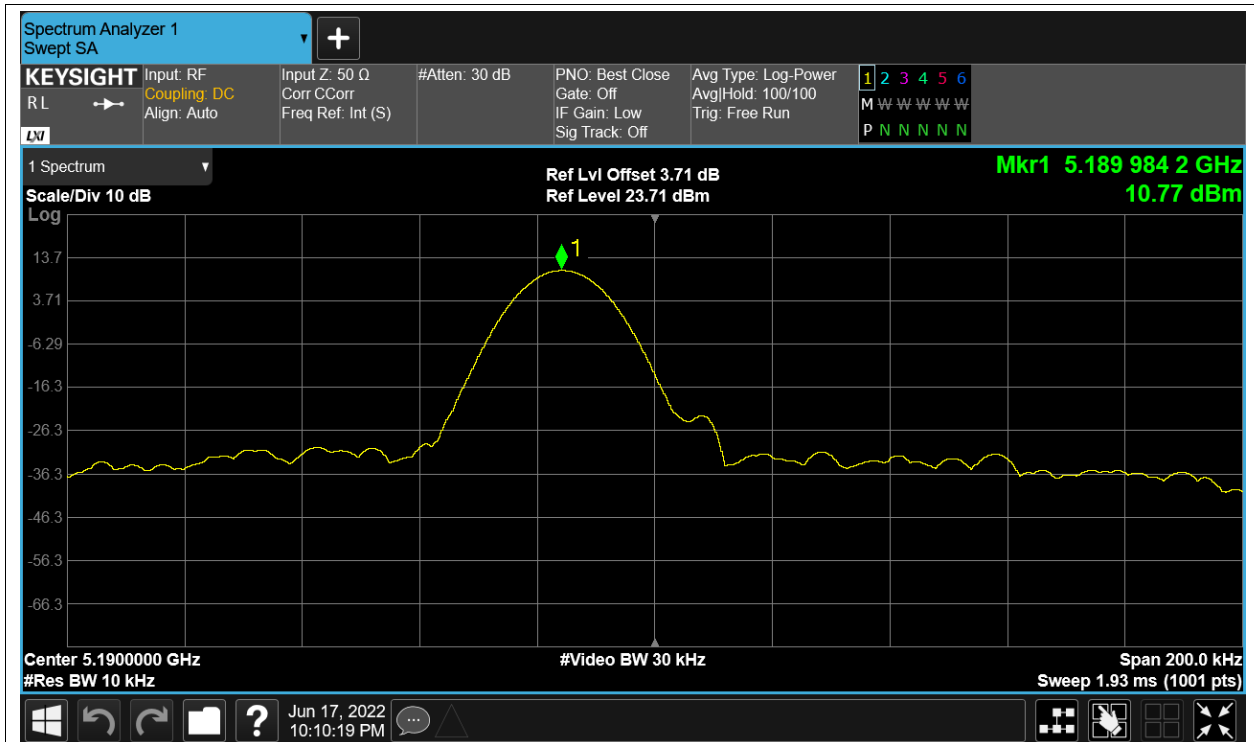

Freq. Stability NVLT n40 5190MHz Ant1

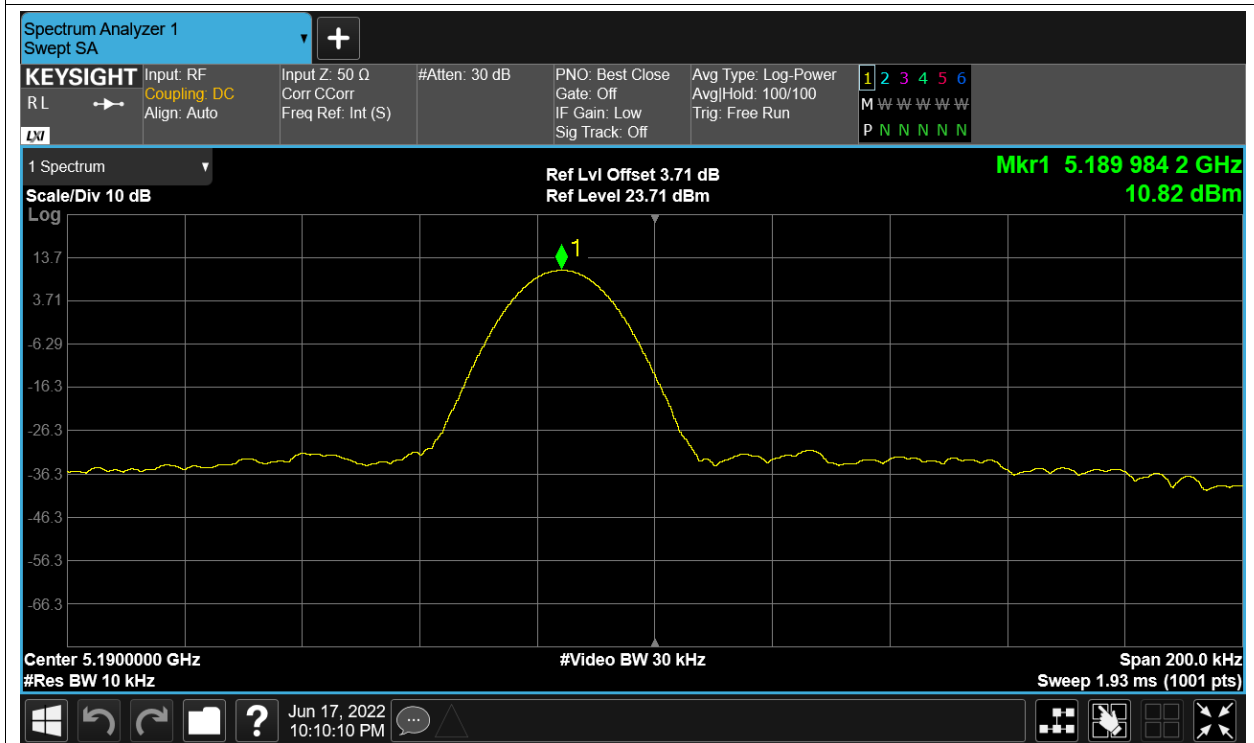

Freq. Stability NVNT n40 5190MHz Ant1

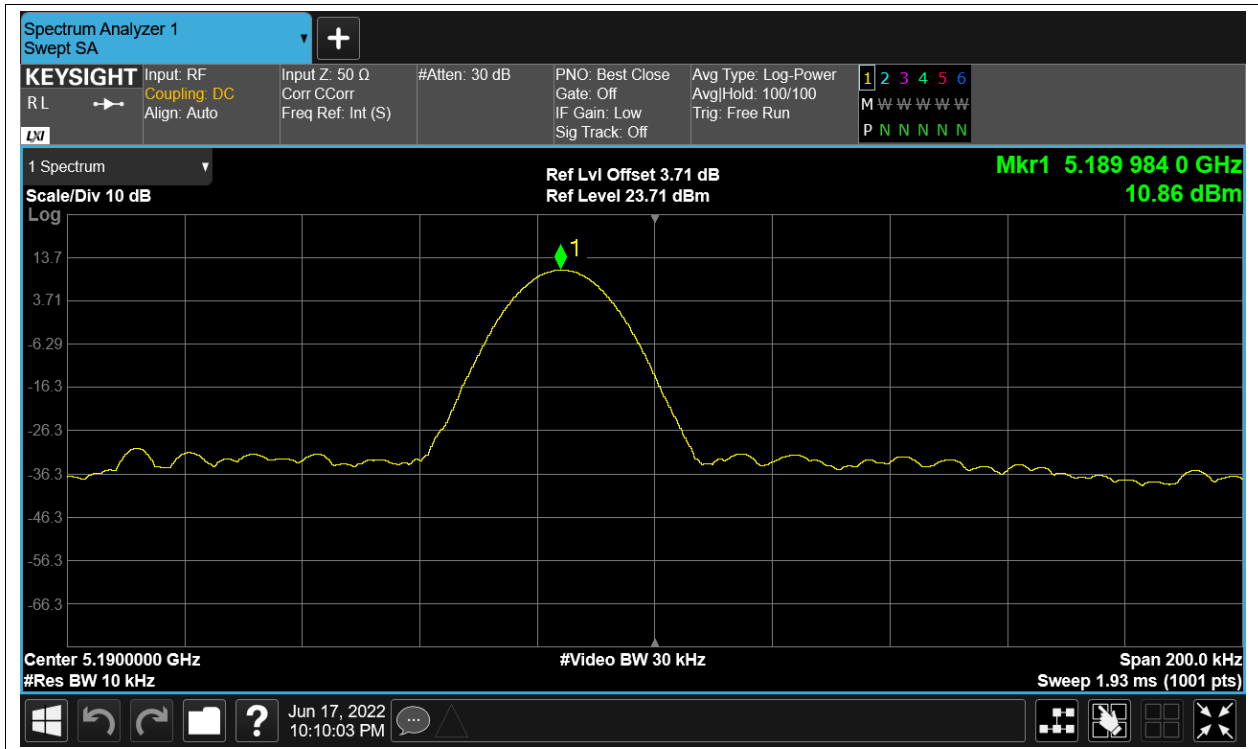


Duty Cycle


Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)
NVNT	a	5180	Ant1	100	0
NVNT	a	5200	Ant1	100	0
NVNT	a	5240	Ant1	100	0
NVNT	ac20	5180	Ant1	100	0
NVNT	ac20	5200	Ant1	100	0
NVNT	ac20	5240	Ant1	100	0
NVNT	ac40	5190	Ant1	100	0
NVNT	ac40	5230	Ant1	100	0
NVNT	ac80	5210	Ant1	100	0
NVNT	n20	5180	Ant1	100	0
NVNT	n20	5200	Ant1	100	0
NVNT	n20	5240	Ant1	100	0
NVNT	n40	5190	Ant1	100	0
NVNT	n40	5230	Ant1	100	0

Test Graphs


Duty Cycle NVNT a 5180MHz Ant1

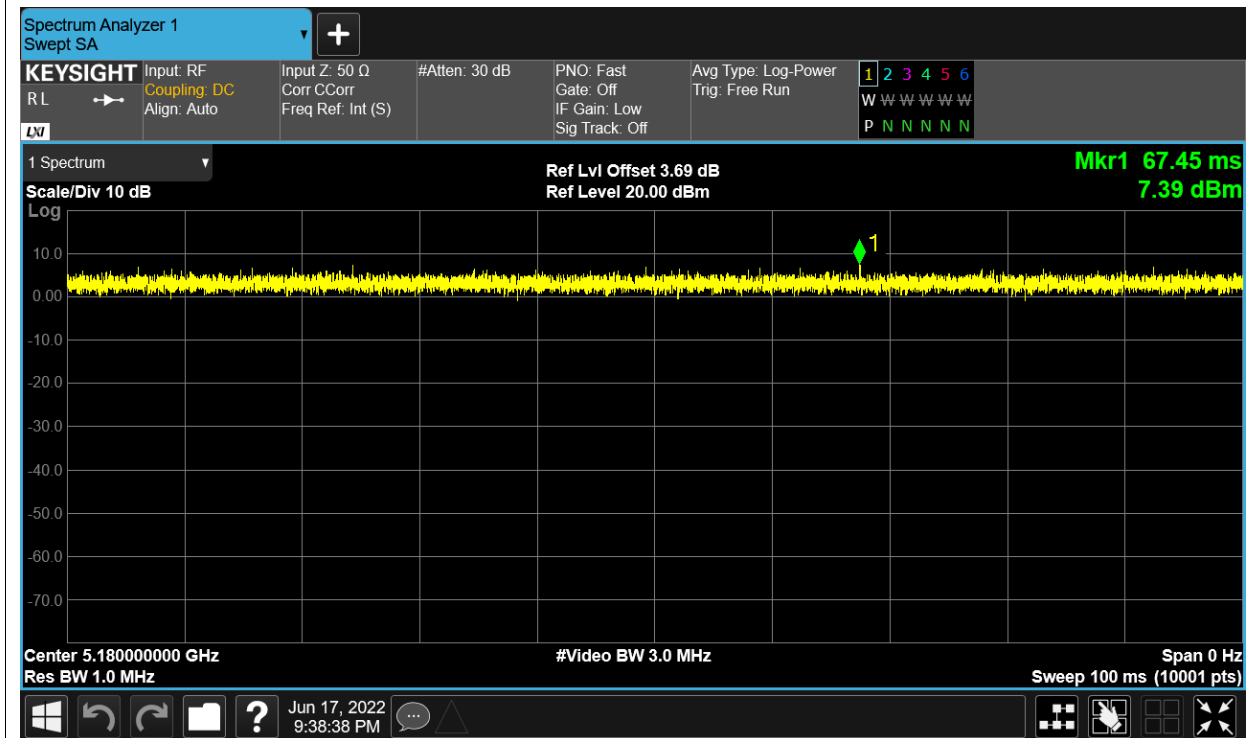


Duty Cycle NVNT a 5200MHz Ant1

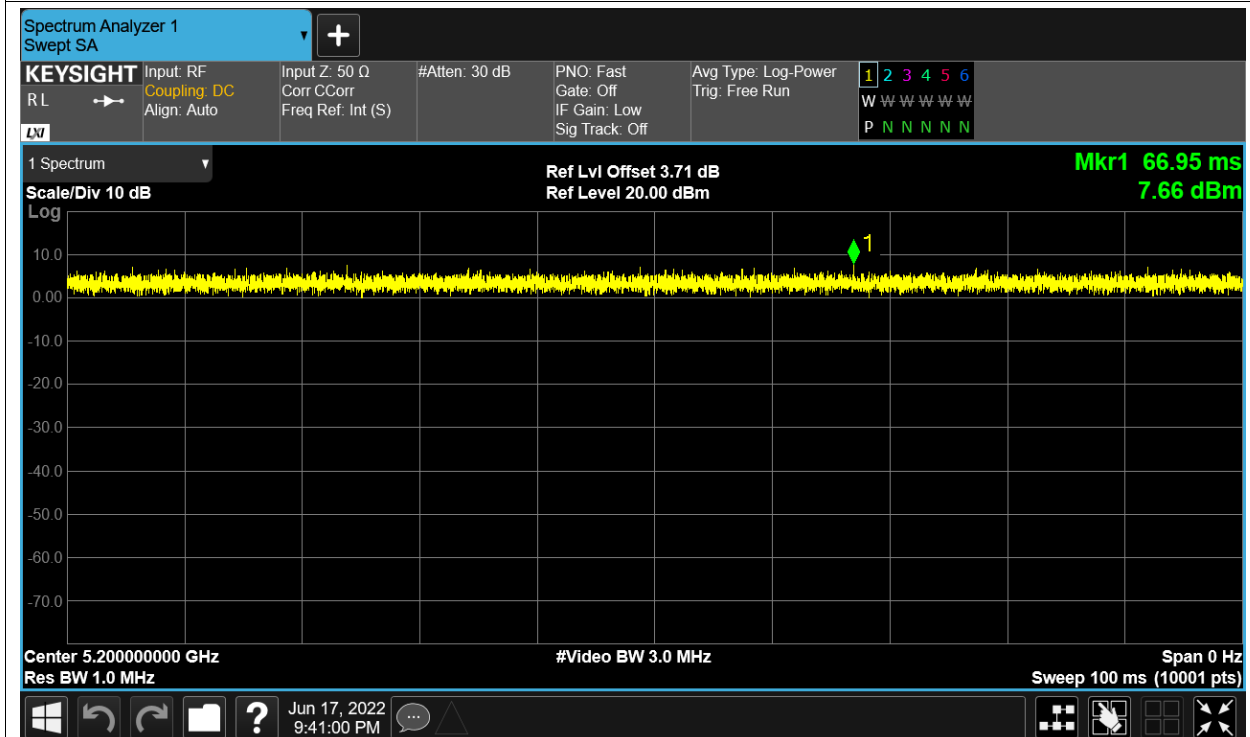


Duty Cycle NVNT a 5240MHz Ant1

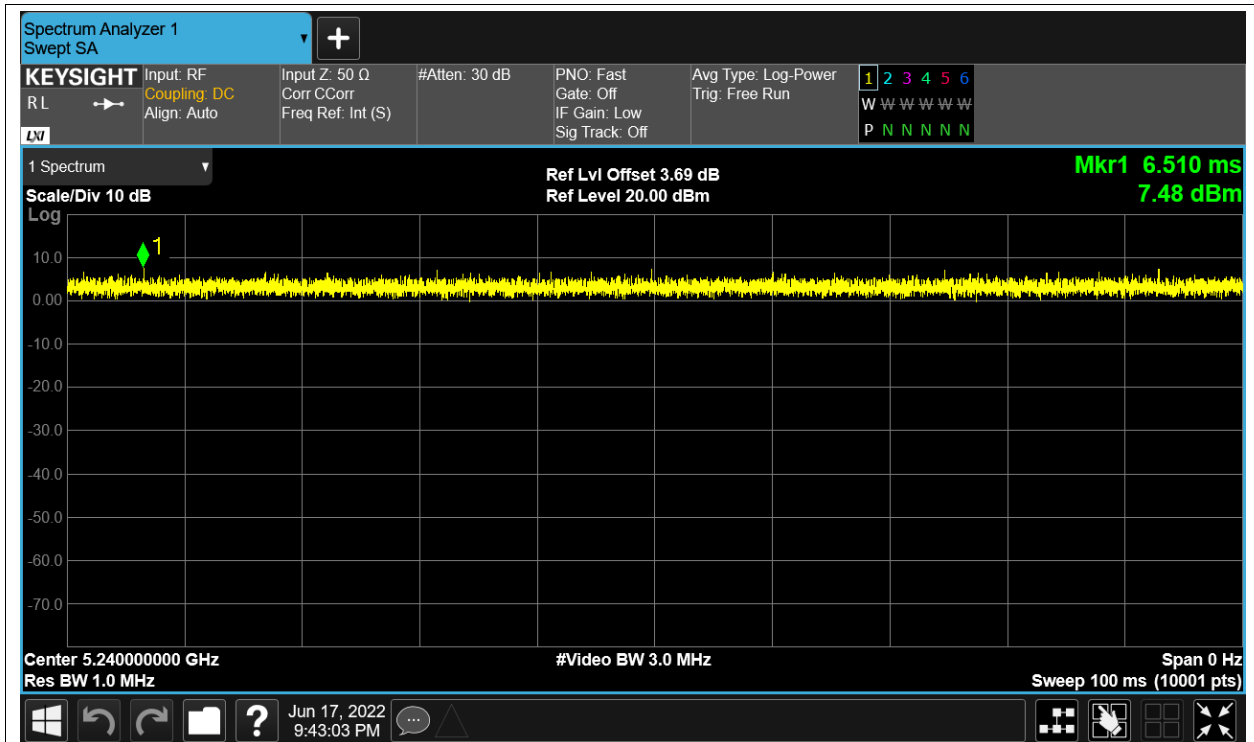


Duty Cycle NVNT ac20 5180MHz Ant1

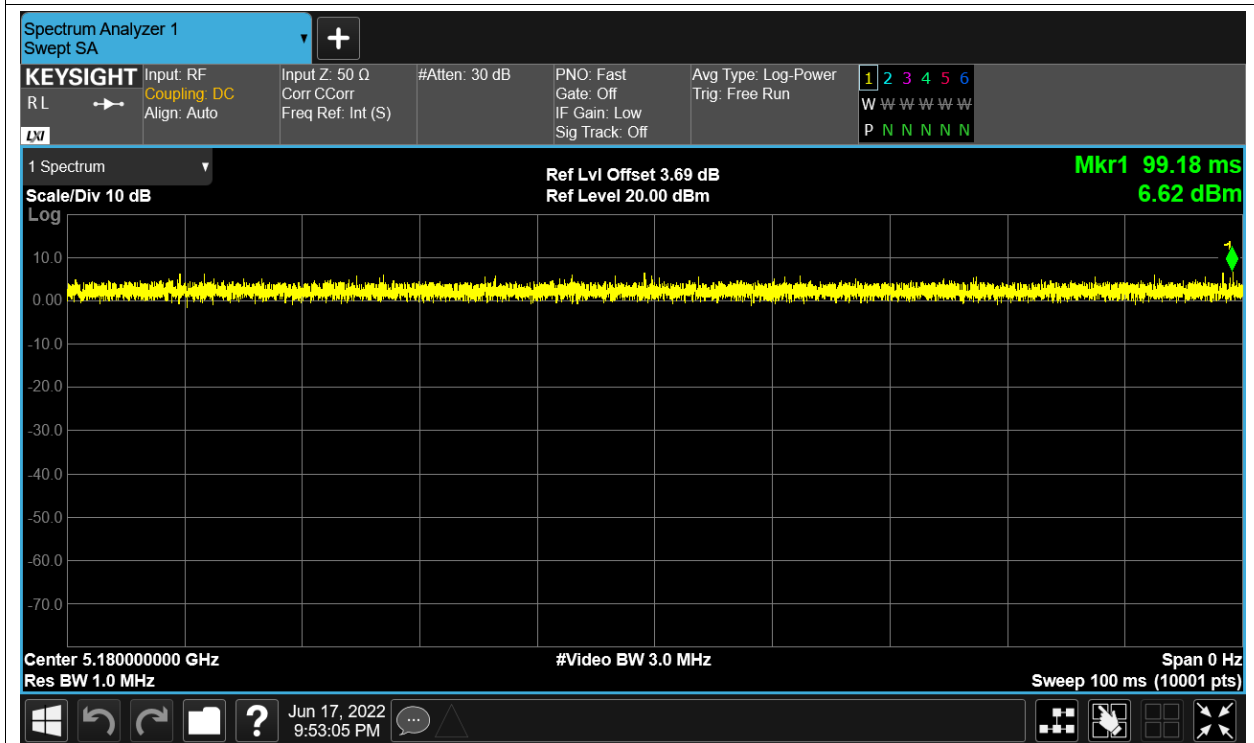


Duty Cycle NVNT ac20 5200MHz Ant1

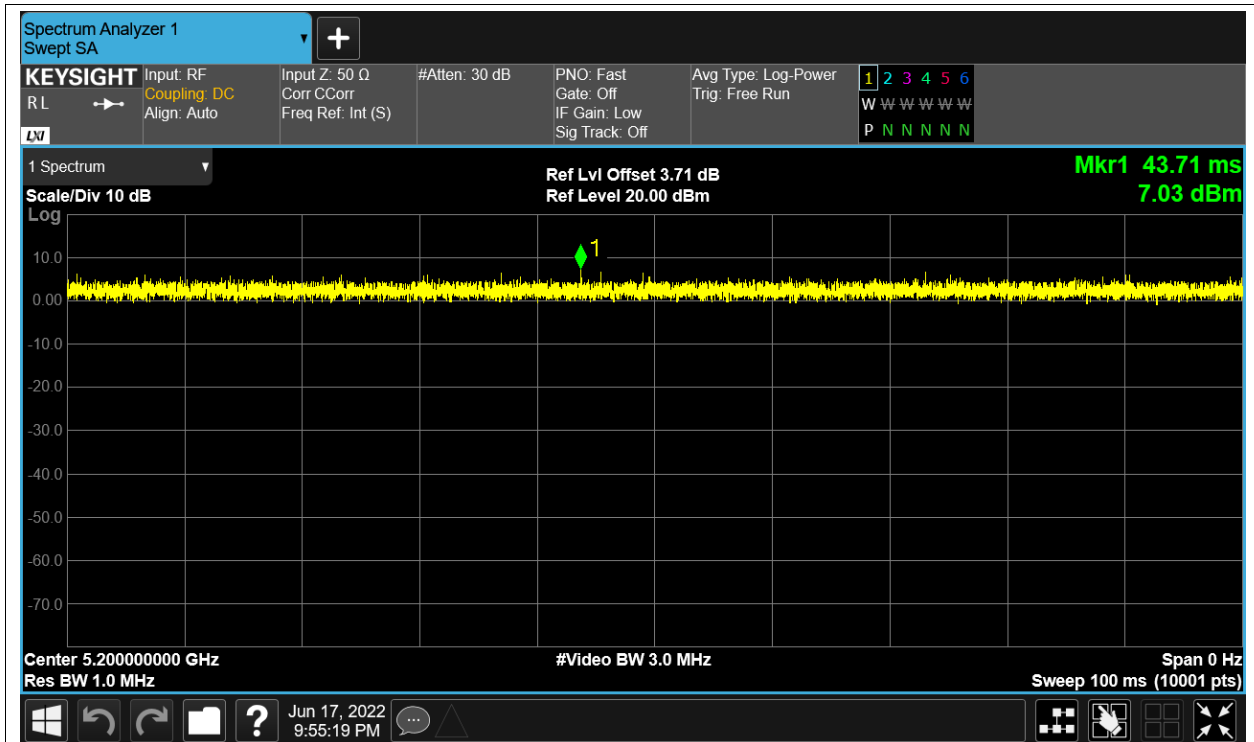


Duty Cycle NVNT ac20 5240MHz Ant1

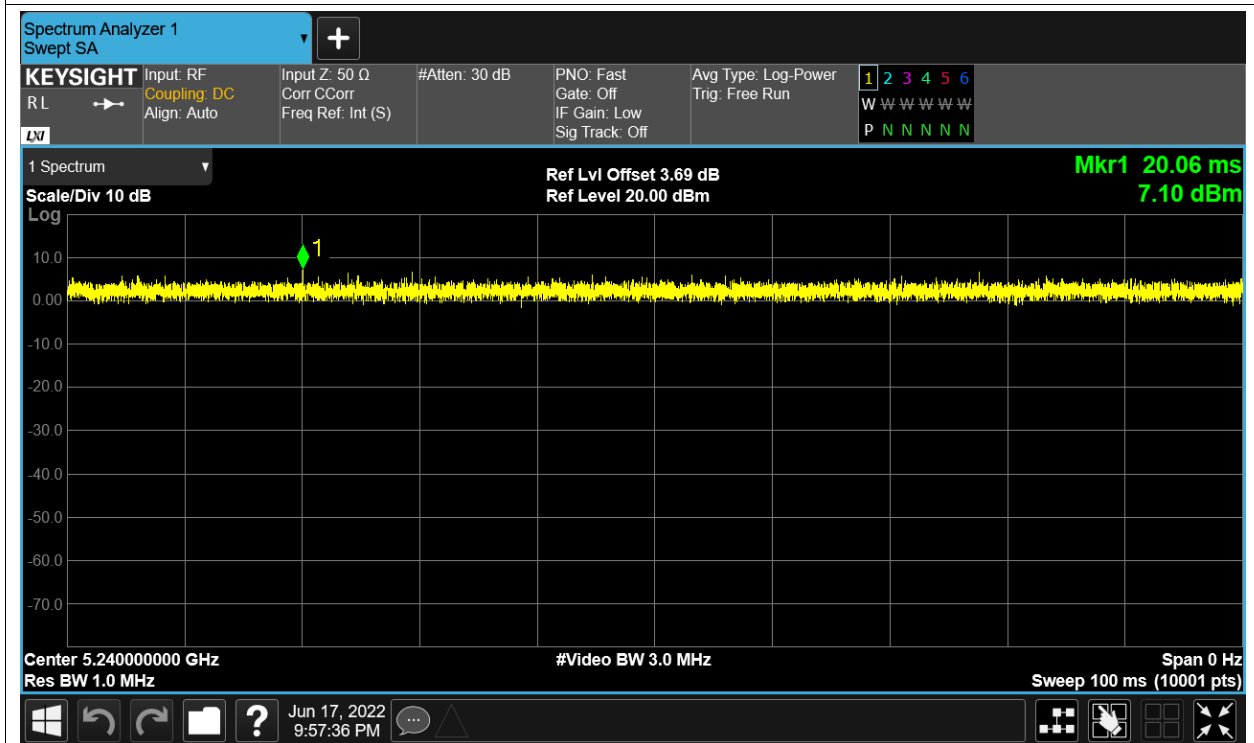


Duty Cycle NVNT ac40 5190MHz Ant1

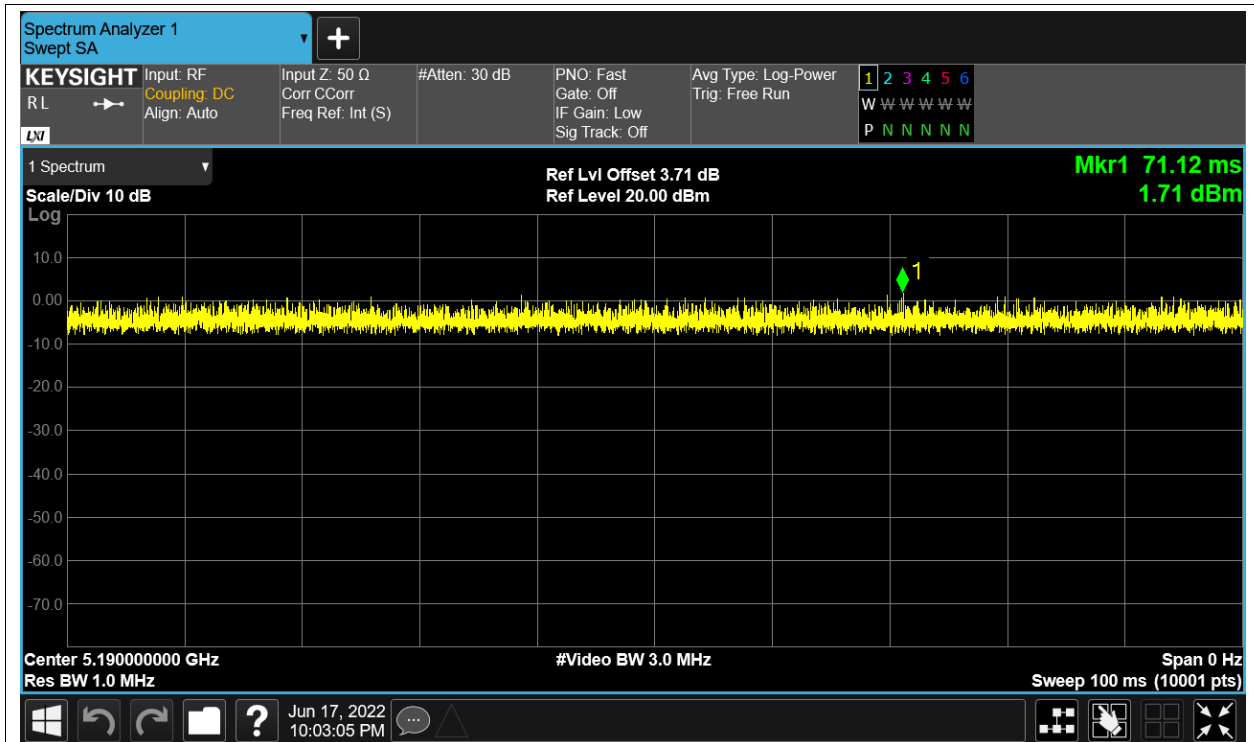


Duty Cycle NVNT ac40 5230MHz Ant1

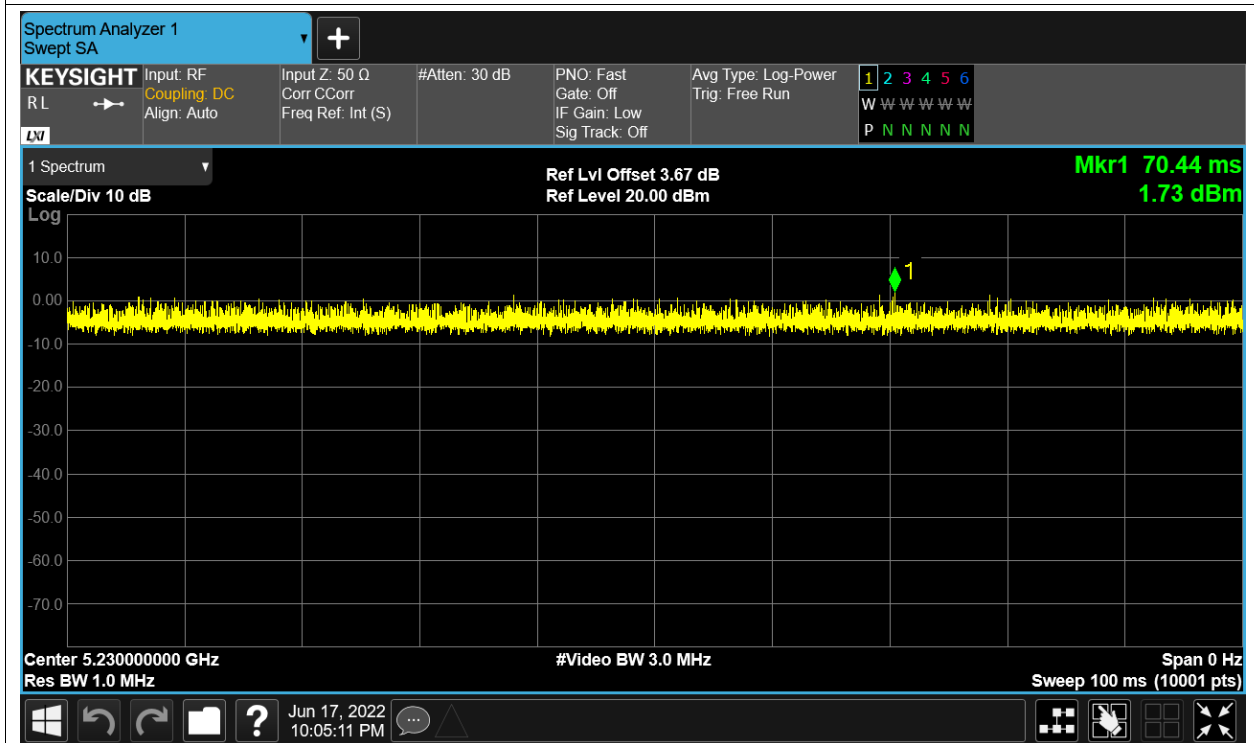


Duty Cycle NVNT ac80 5210MHz Ant1

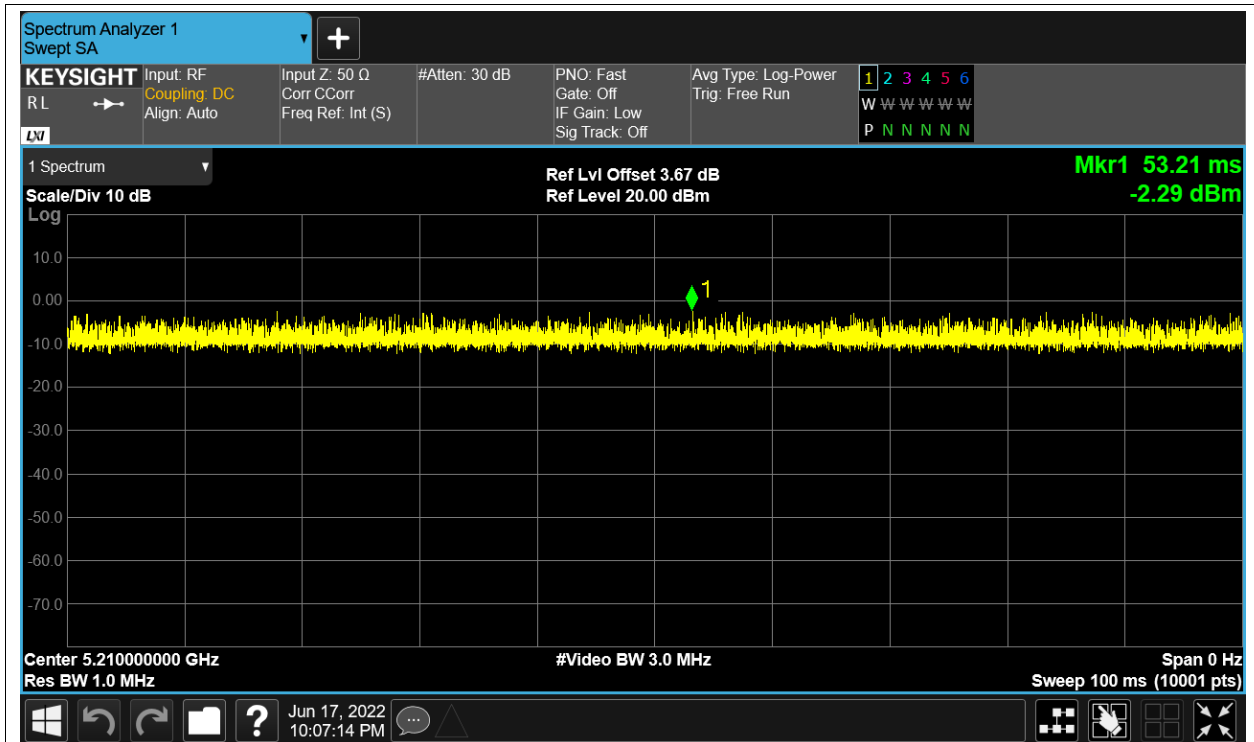


Duty Cycle NVNT n20 5180MHz Ant1

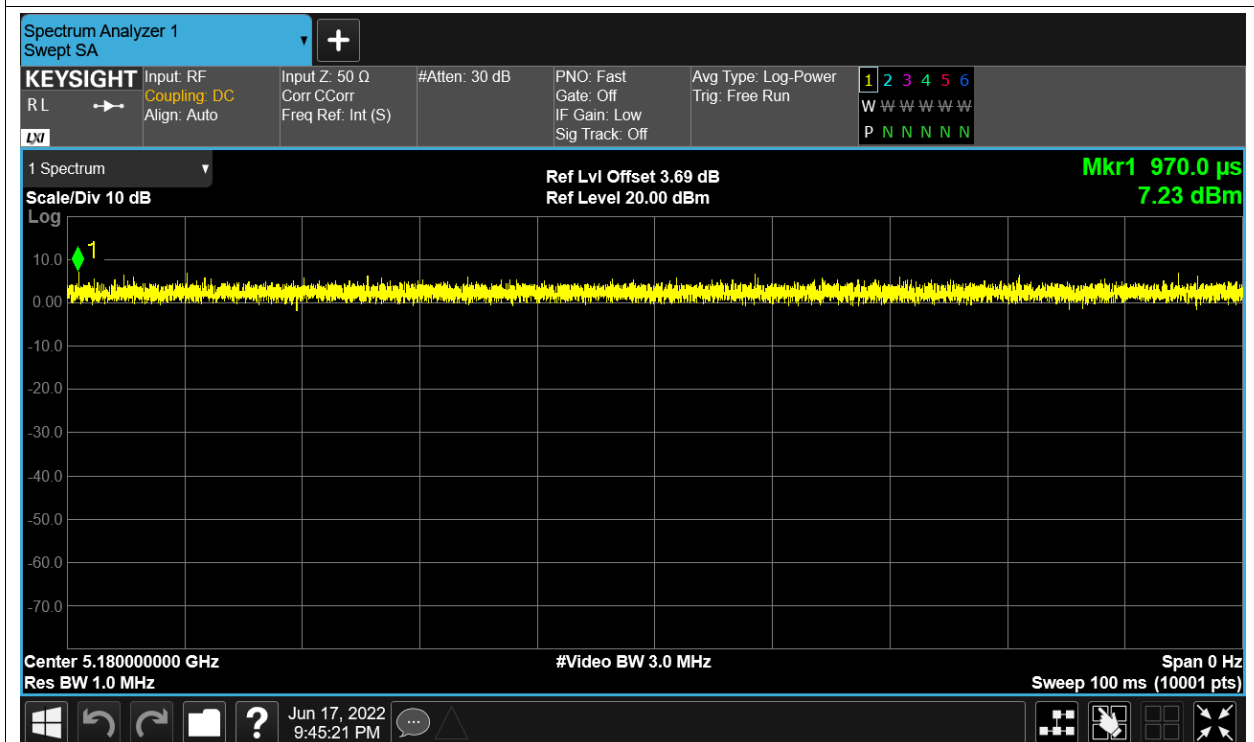


Duty Cycle NVNT n20 5200MHz Ant1

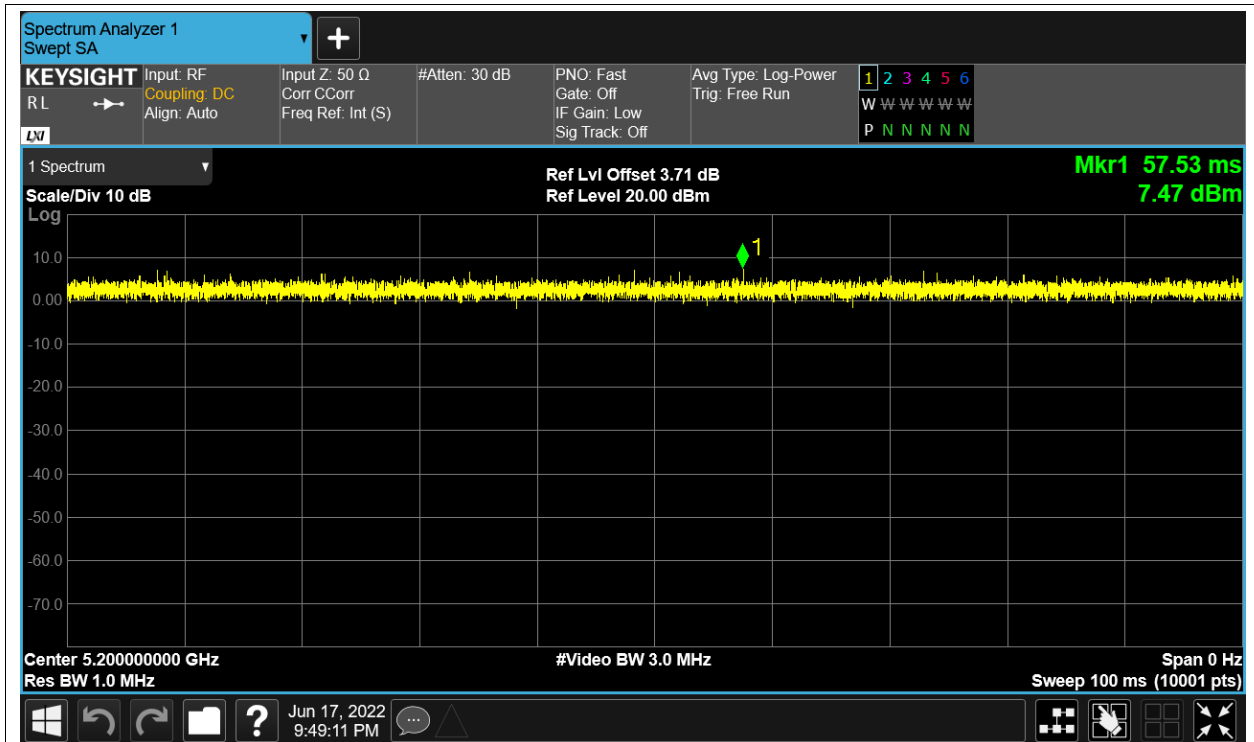


Duty Cycle NVNT n20 5240MHz Ant1

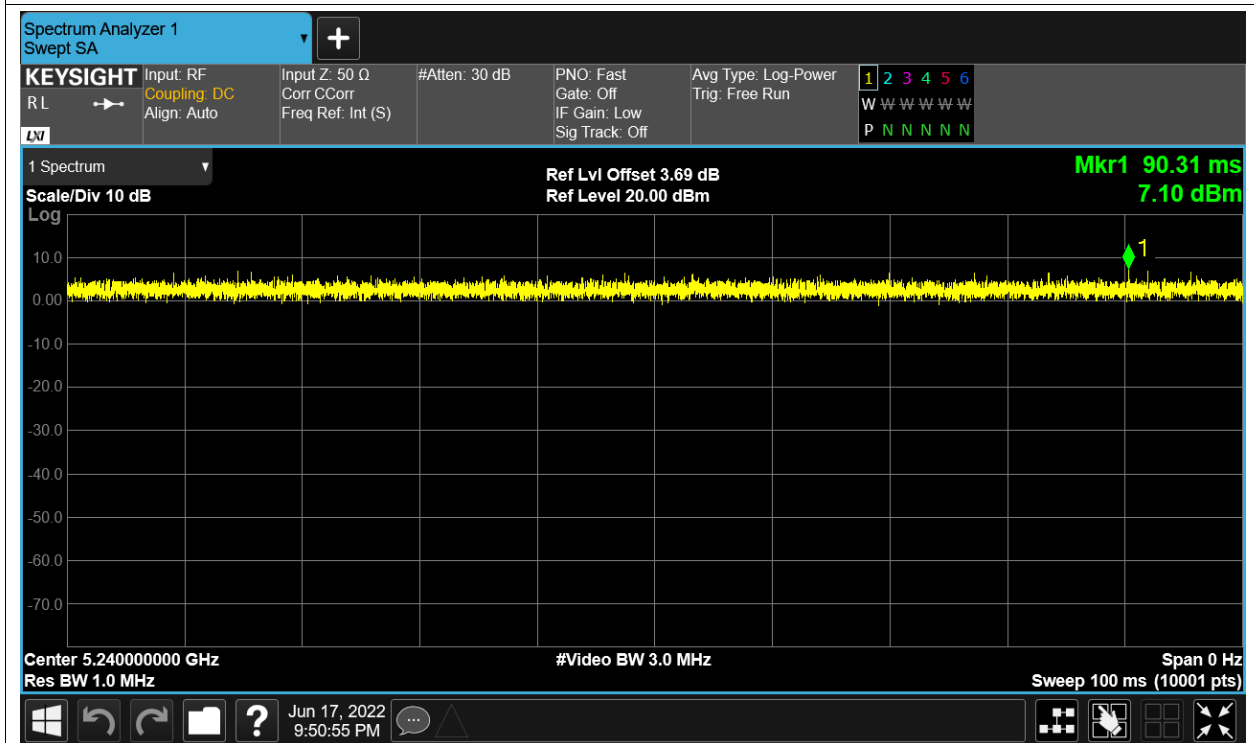

Duty Cycle NVNT n40 5190MHz Ant1

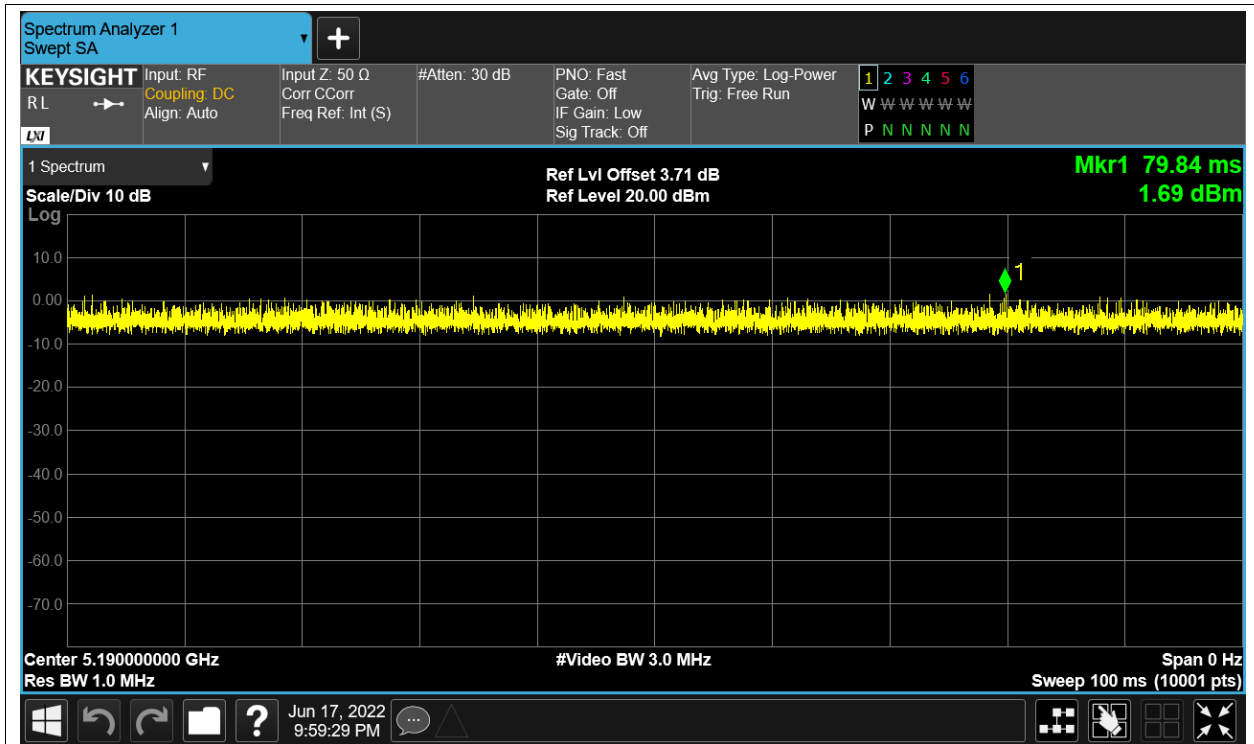

Duty Cycle NVNT n40 5230MHz Ant1

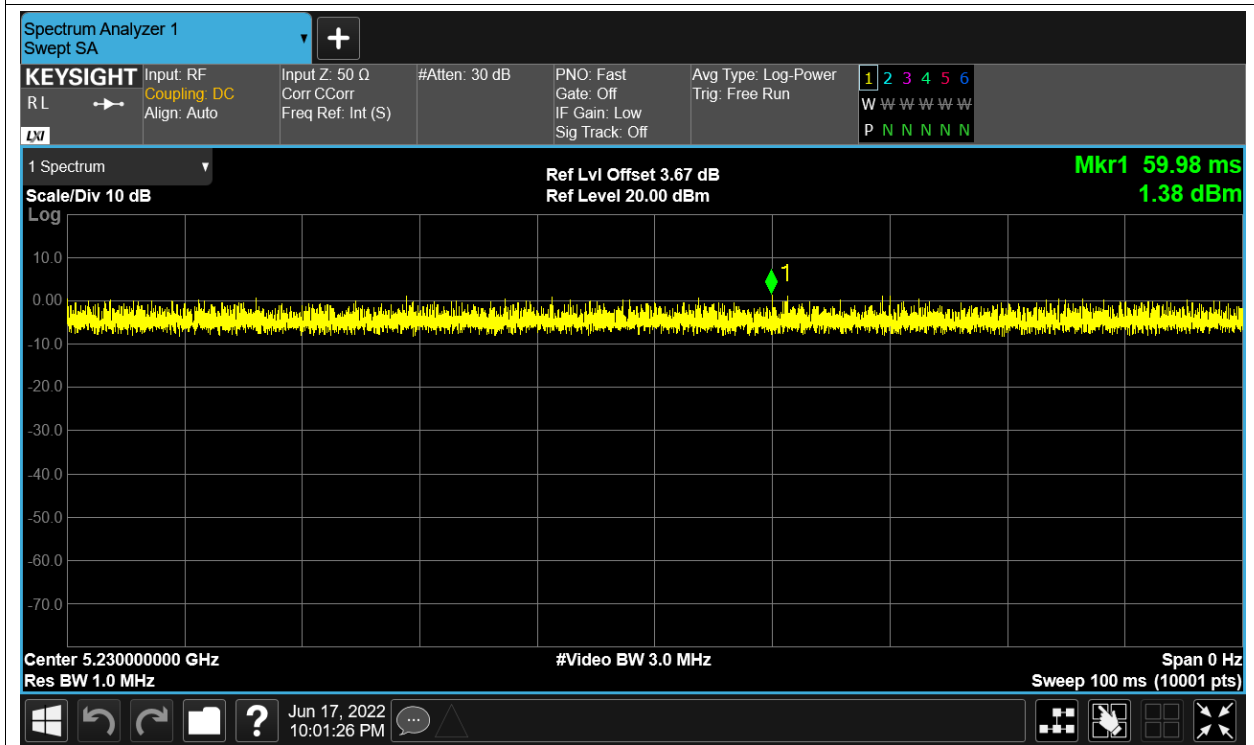

Maximum Conducted Output Power


Condition	Mode	Frequency (MHz)	Antenna	Conducted Power (dBm)	Duty Factor (dB)	Total Power (dBm)	Limit (dBm)	Verdict
NVNT	a	5180	Ant1	13.39	0	13.39	24	Pass
NVNT	a	5200	Ant1	13.65	0	13.65	24	Pass
NVNT	a	5240	Ant1	14.58	0	14.58	24	Pass
NVNT	ac20	5180	Ant1	12.75	0	12.75	24	Pass
NVNT	ac20	5200	Ant1	13.07	0	13.07	24	Pass
NVNT	ac20	5240	Ant1	13.93	0	13.93	24	Pass
NVNT	ac40	5190	Ant1	12.63	0	12.63	24	Pass
NVNT	ac40	5230	Ant1	13.25	0	13.25	24	Pass
NVNT	ac80	5210	Ant1	12.24	0	12.24	24	Pass
NVNT	n20	5180	Ant1	13.27	0	13.27	24	Pass
NVNT	n20	5200	Ant1	12.56	0	12.56	24	Pass
NVNT	n20	5240	Ant1	13.88	0	13.88	24	Pass
NVNT	n40	5190	Ant1	12.63	0	12.63	24	Pass
NVNT	n40	5230	Ant1	13.3	0	13.3	24	Pass

Occupied Channel Bandwidth


Condition	Mode	Frequency (MHz)	Antenna	99% OBW (MHz)
NVNT	a	5180	Ant1	16.43514465
NVNT	a	5200	Ant1	16.48575005
NVNT	a	5240	Ant1	16.47626504
NVNT	ac20	5180	Ant1	17.58198722
NVNT	ac20	5200	Ant1	17.57617877
NVNT	ac20	5240	Ant1	17.56984313
NVNT	ac40	5190	Ant1	36.01654181
NVNT	ac40	5230	Ant1	35.99266413
NVNT	ac80	5210	Ant1	75.20041064
NVNT	n20	5180	Ant1	17.56573338
NVNT	n20	5200	Ant1	17.56443387
NVNT	n20	5240	Ant1	17.59202158
NVNT	n40	5190	Ant1	36.04740806
NVNT	n40	5230	Ant1	35.98842262

Test Graphs


OBW NVNT a 5180MHz Ant1

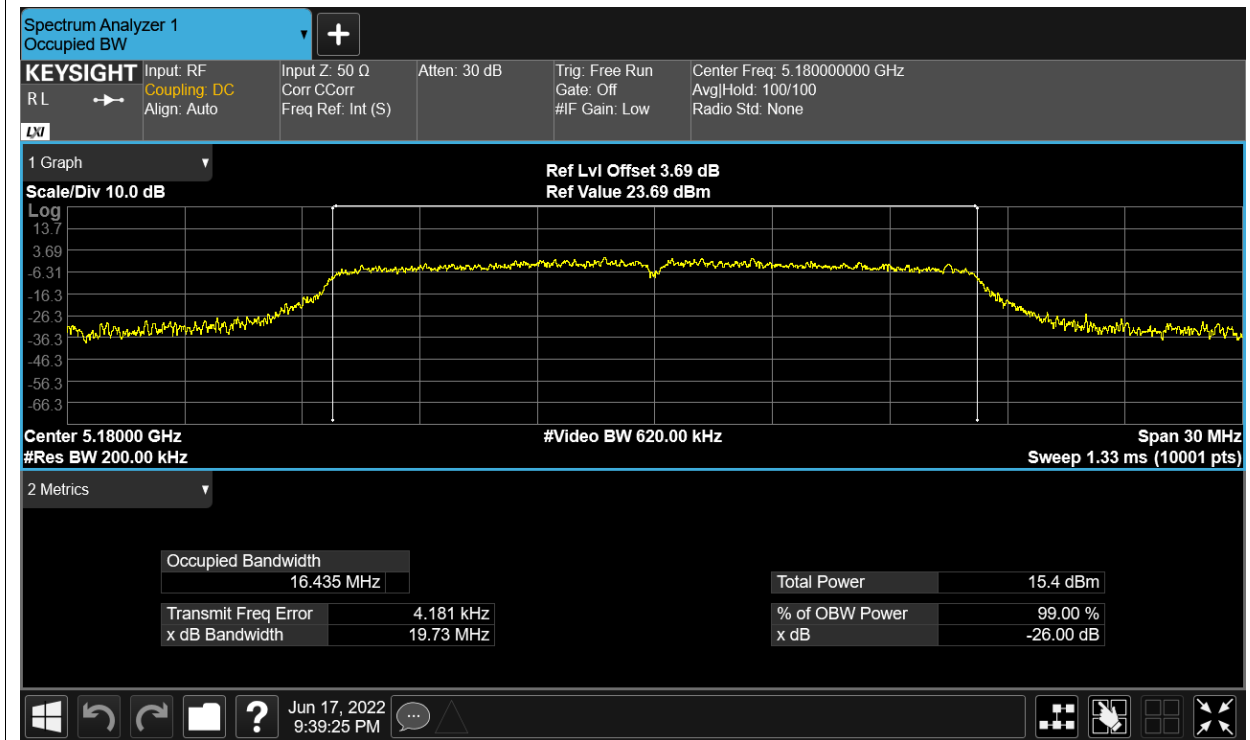


OBW NVNT a 5200MHz Ant1

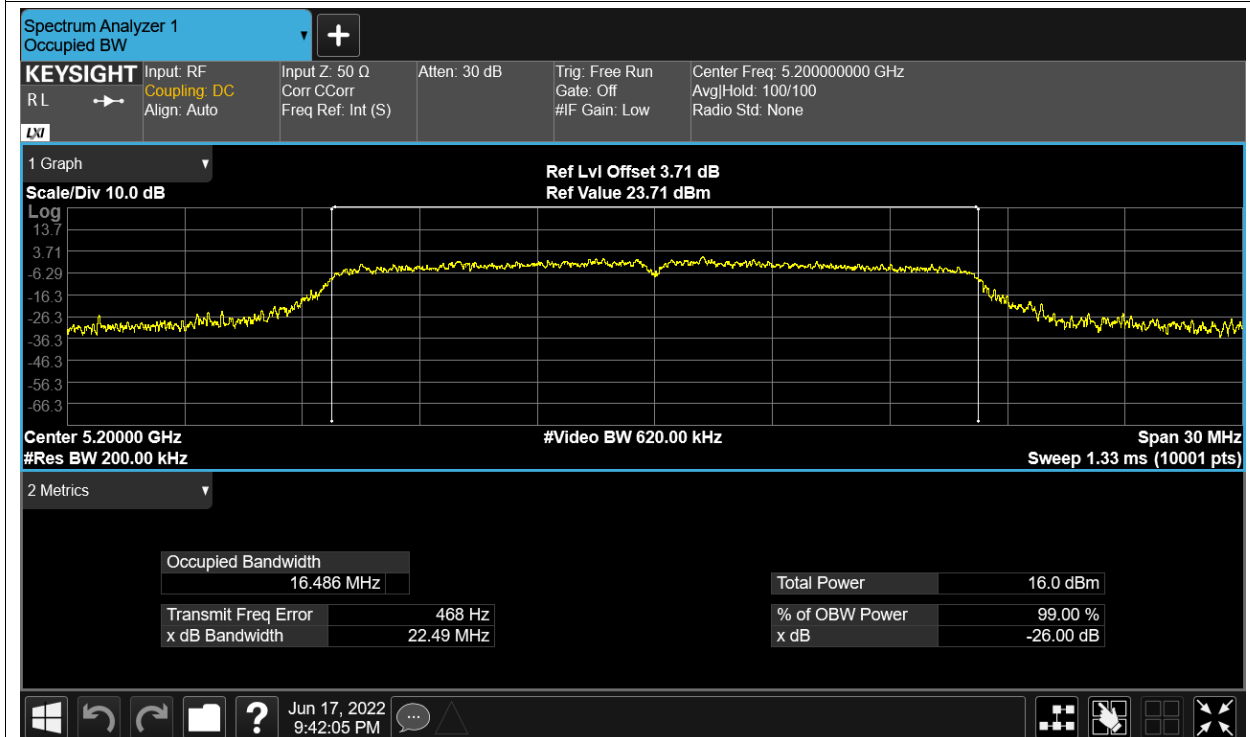


OBW NVNT a 5240MHz Ant1

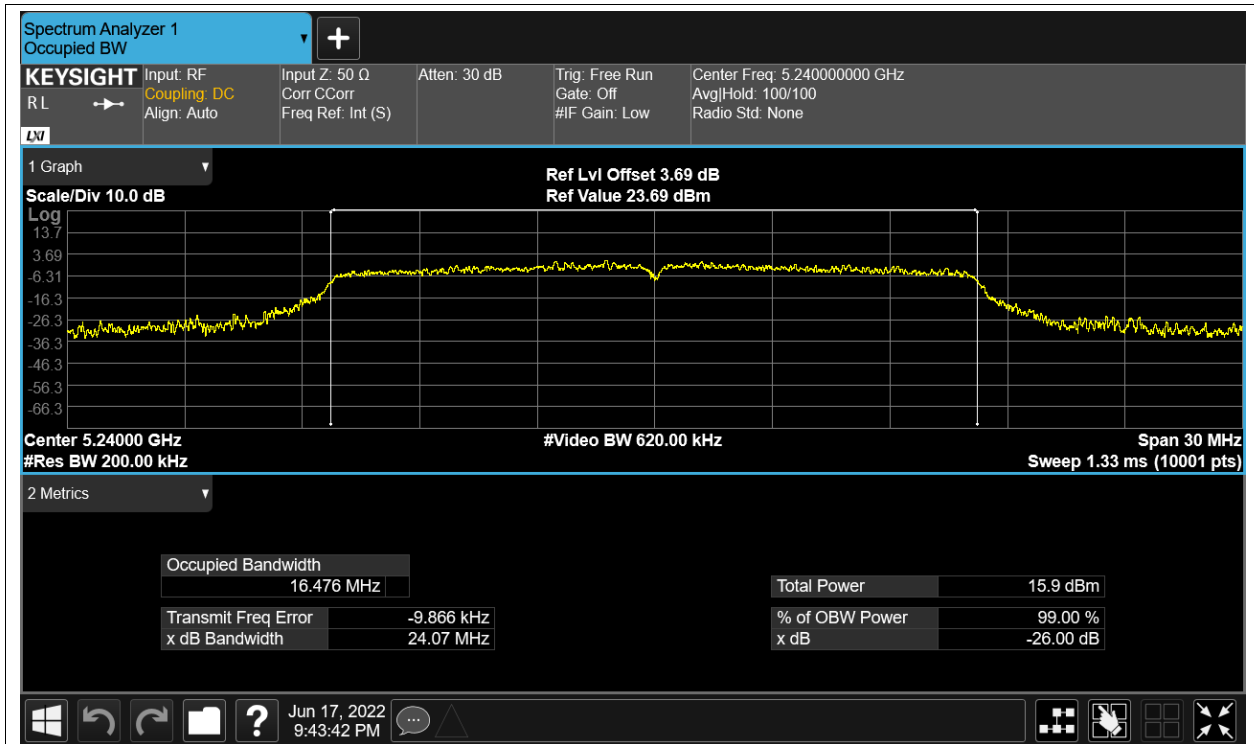


OBW NVNT ac20 5180MHz Ant1

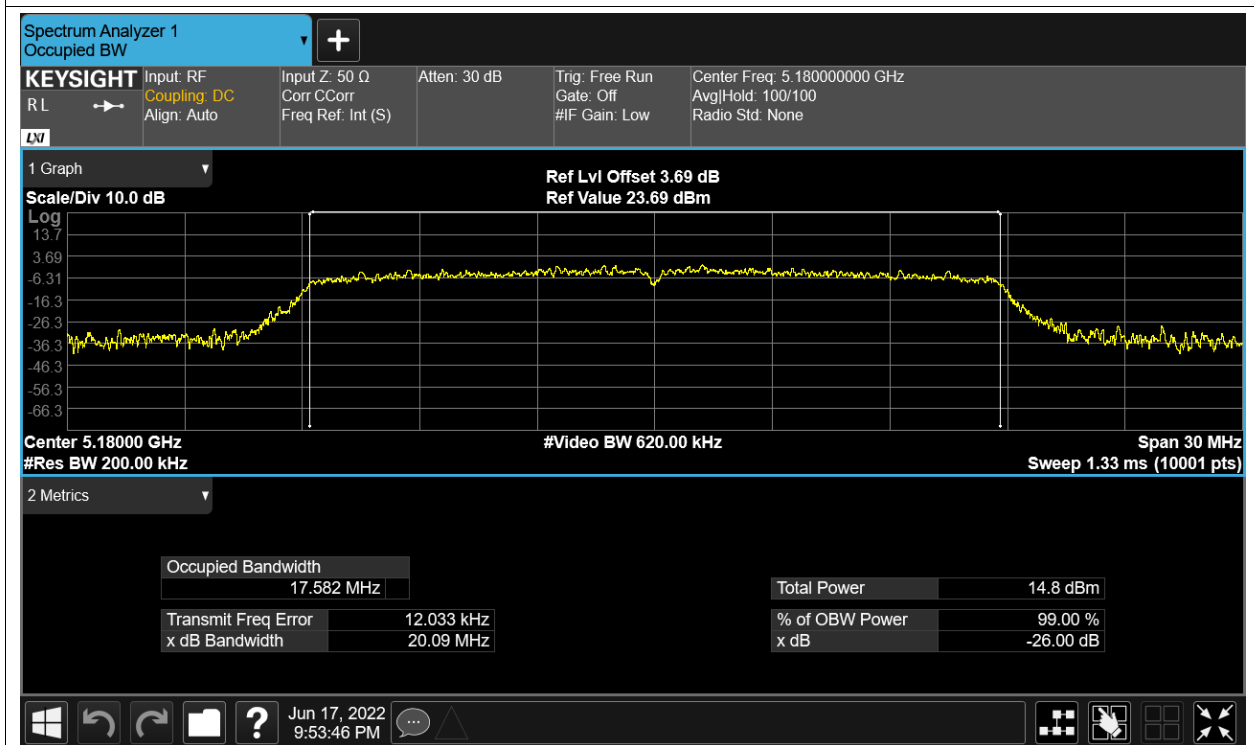


OBW NVNT ac20 5200MHz Ant1

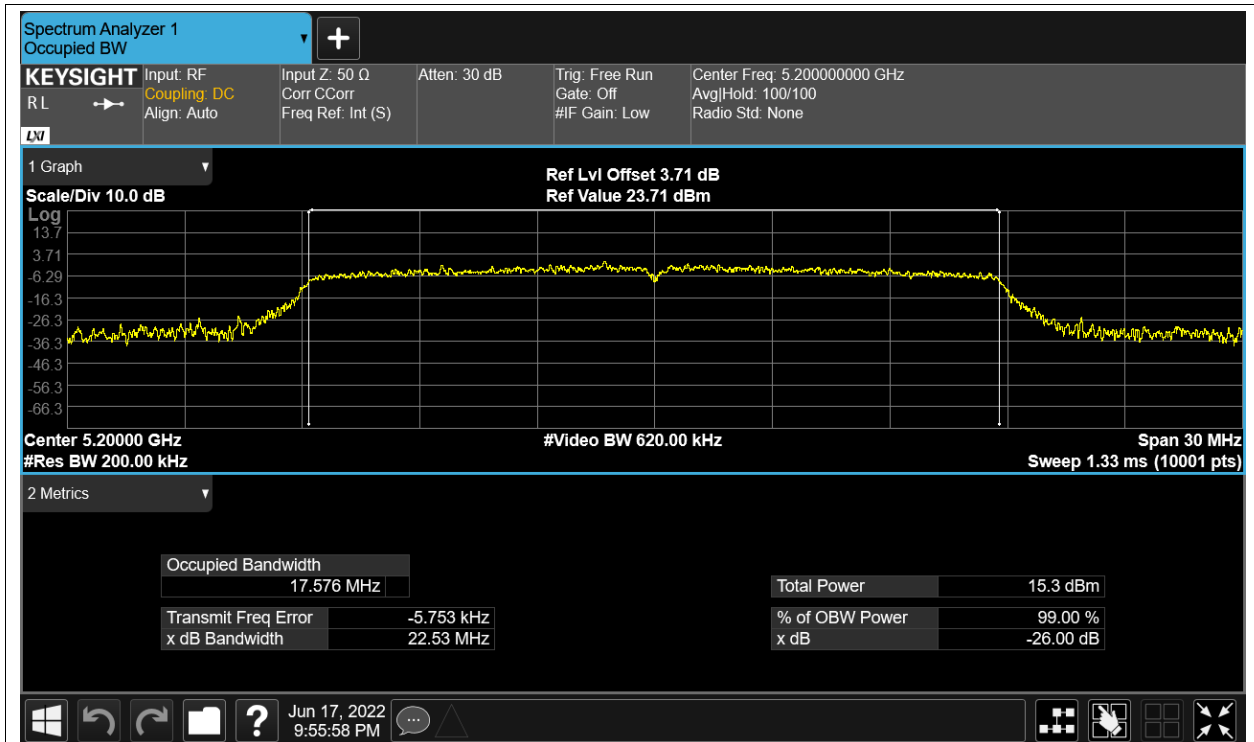


OBW NVNT ac20 5240MHz Ant1

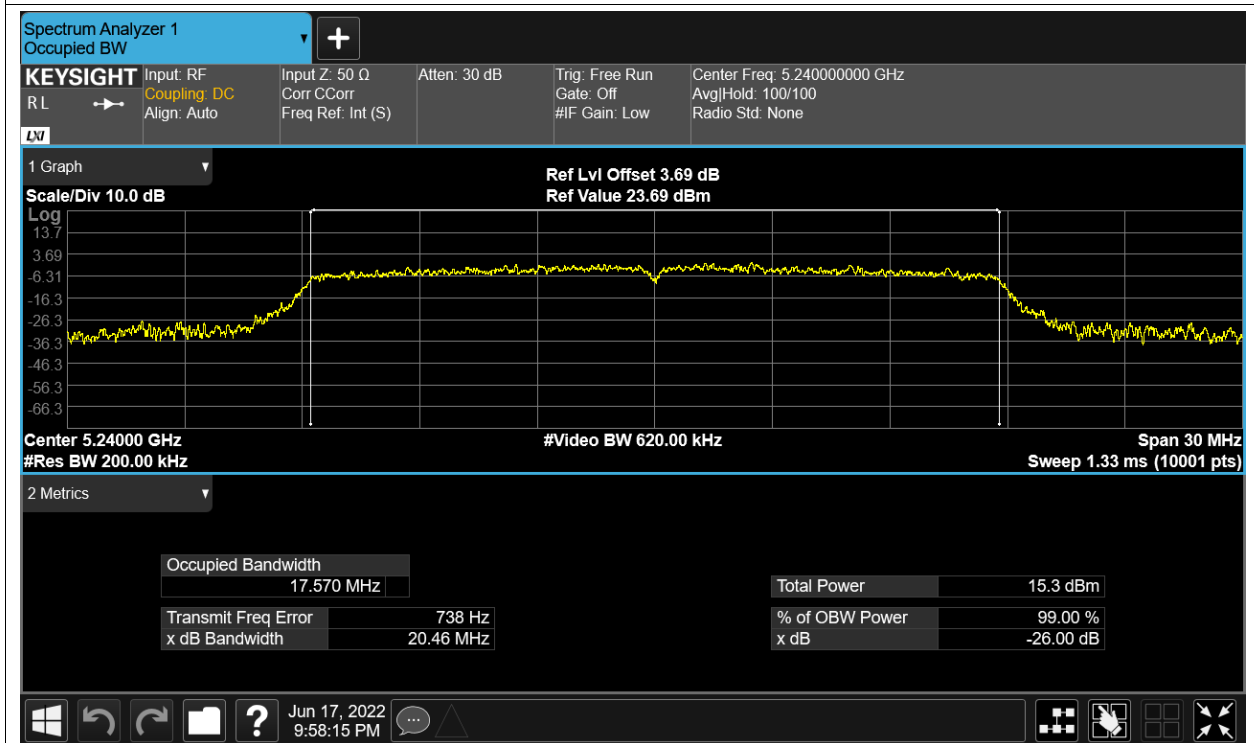


OBW NVNT ac40 5190MHz Ant1

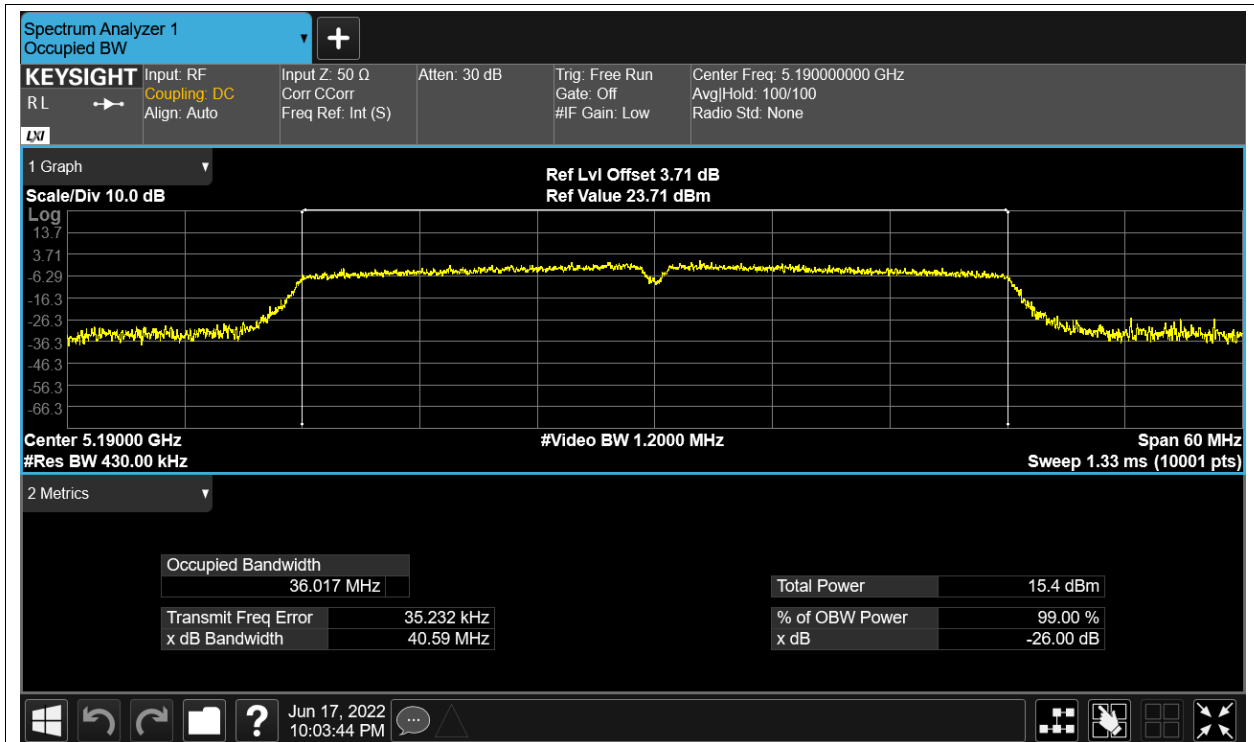


OBW NVNT ac40 5230MHz Ant1

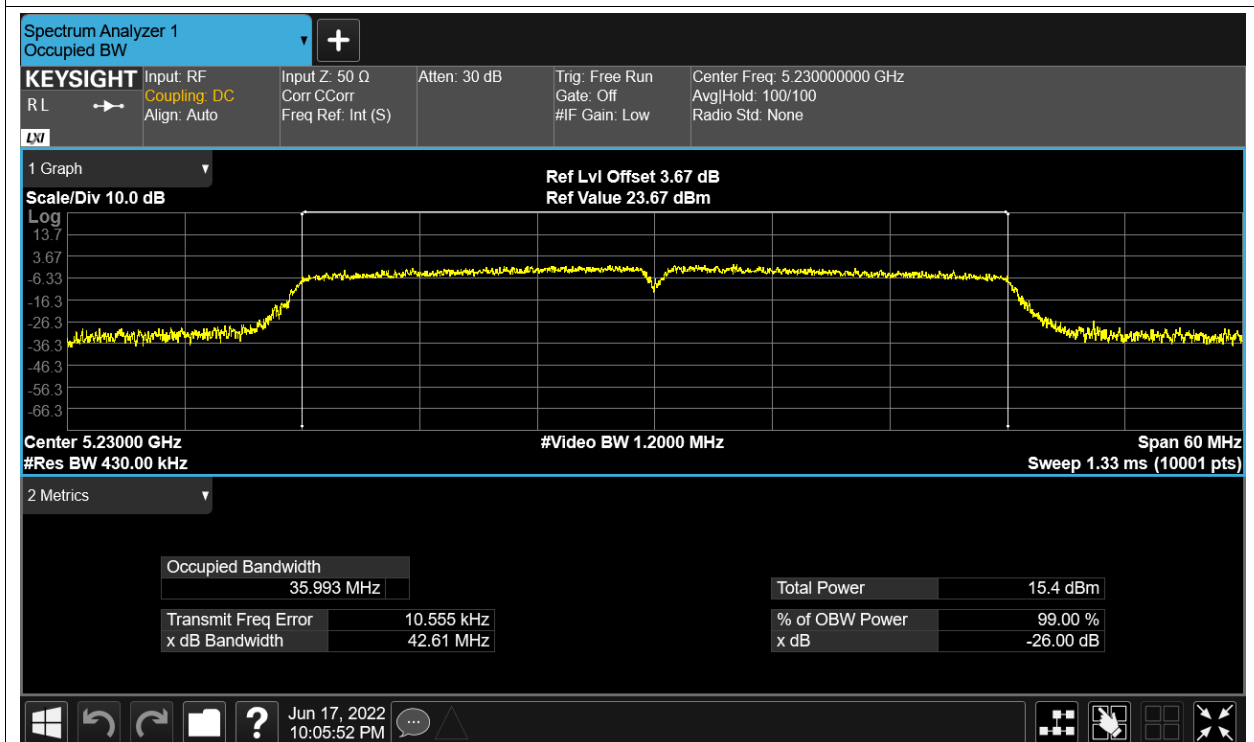


OBW NVNT ac80 5210MHz Ant1

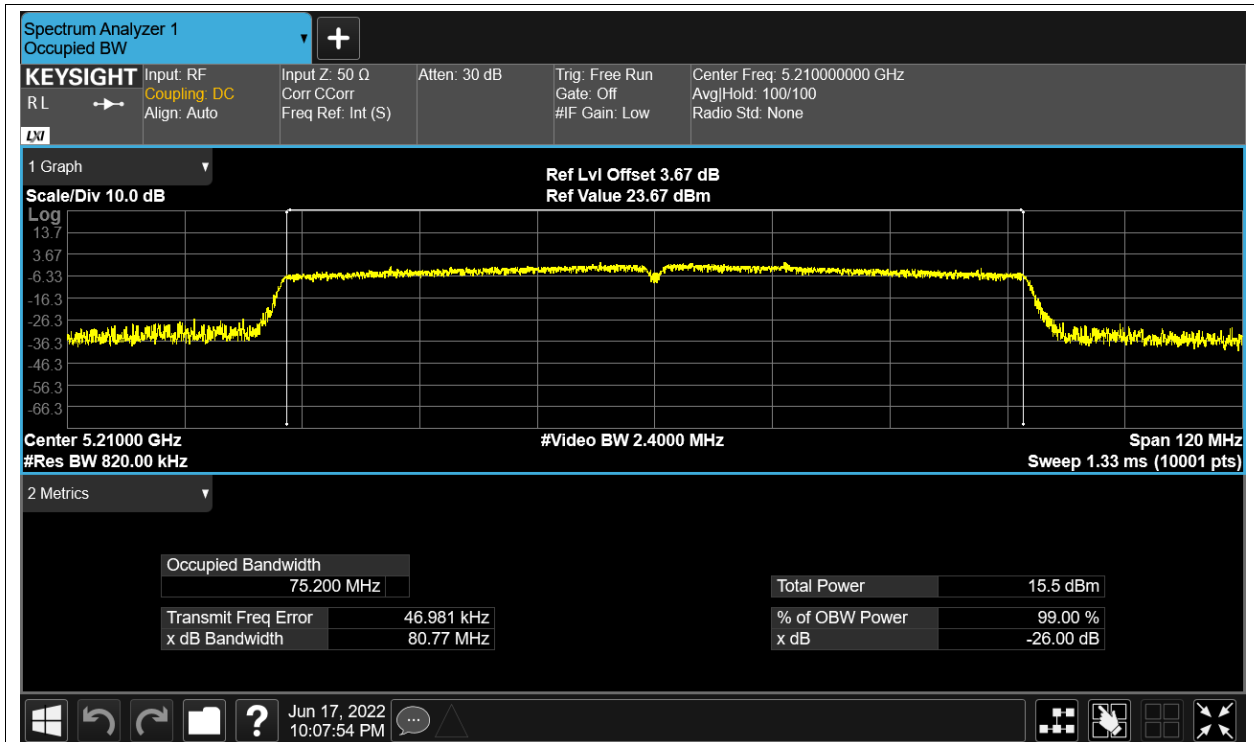

OBW NVNT n20 5180MHz Ant1

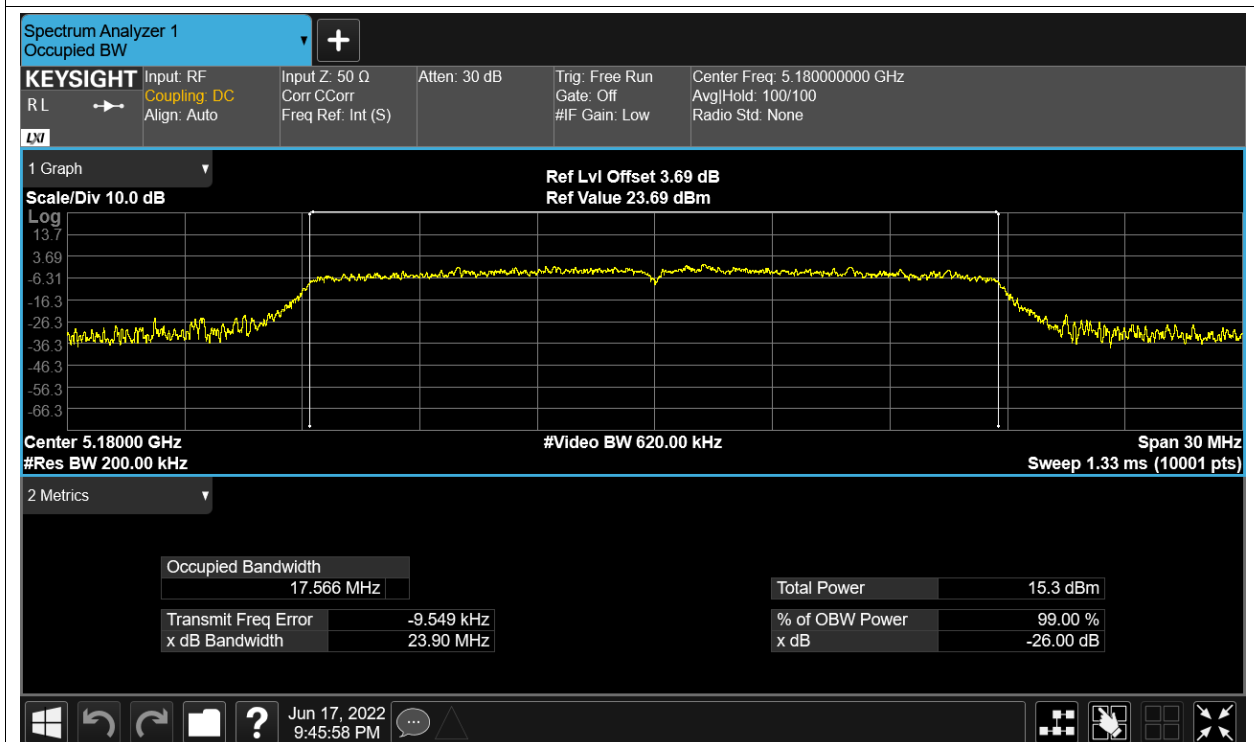

OBW NVNT n20 5200MHz Ant1

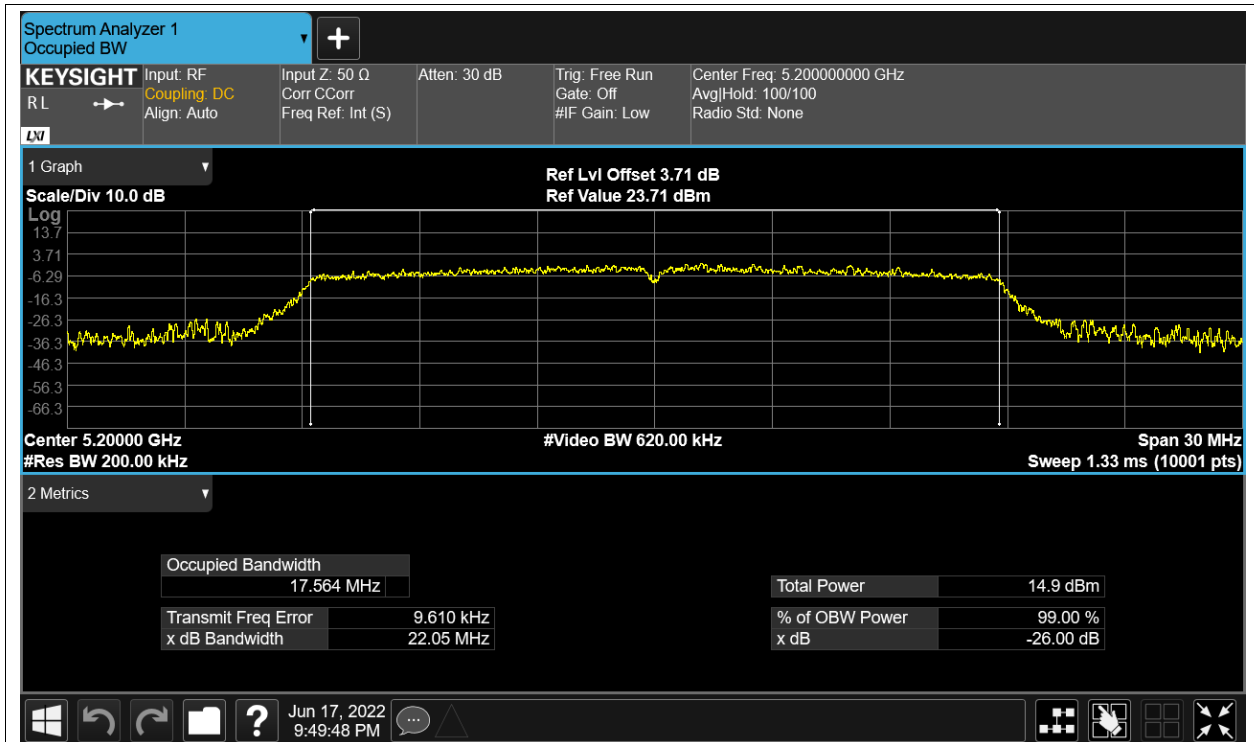

OBW NVNT n20 5240MHz Ant1



OBW NVNT n40 5190MHz Ant1



OBW NVNT n40 5230MHz Ant1



Maximum Power Spectral Density Level

Condition	Mode	Frequency (MHz)	Antenna	Max PSD (dBm)	Limit (dBm)	Verdict
NVNT	a	5180	Ant1	0.015	11	Pass
NVNT	a	5200	Ant1	0.567	11	Pass
NVNT	a	5240	Ant1	0.589	11	Pass
NVNT	ac20	5180	Ant1	-0.626	11	Pass
NVNT	ac20	5200	Ant1	0.052	11	Pass
NVNT	ac20	5240	Ant1	-0.043	11	Pass
NVNT	ac40	5190	Ant1	-3.147	11	Pass
NVNT	ac40	5230	Ant1	-3.127	11	Pass
NVNT	ac80	5210	Ant1	-6.816	11	Pass
NVNT	n20	5180	Ant1	-0.146	11	Pass
NVNT	n20	5200	Ant1	-0.604	11	Pass
NVNT	n20	5240	Ant1	-0.049	11	Pass
NVNT	n40	5190	Ant1	-3.373	11	Pass
NVNT	n40	5230	Ant1	-3.101	11	Pass

Test Graphs


PSD NVNT a 5180MHz Ant1




PSD NVNT a 5200MHz Ant1




PSD NVNT a 5240MHz Ant1

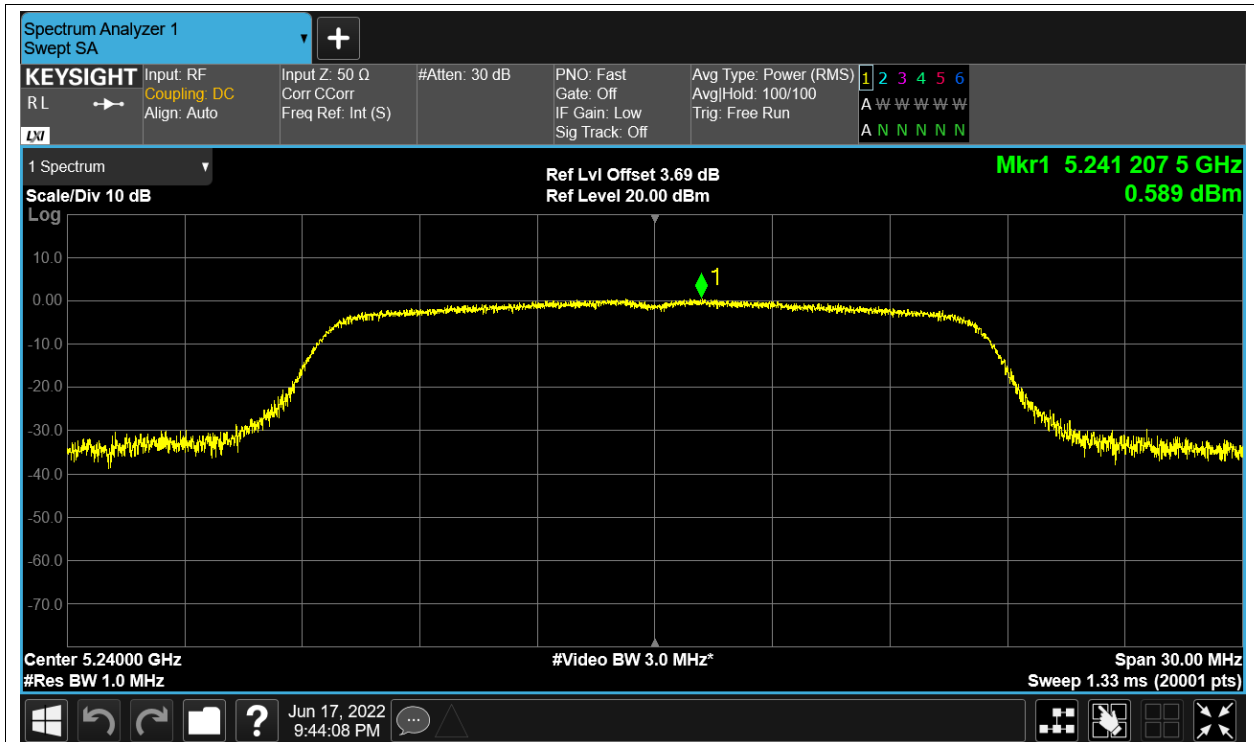


PSD NVNT ac20 5180MHz Ant1

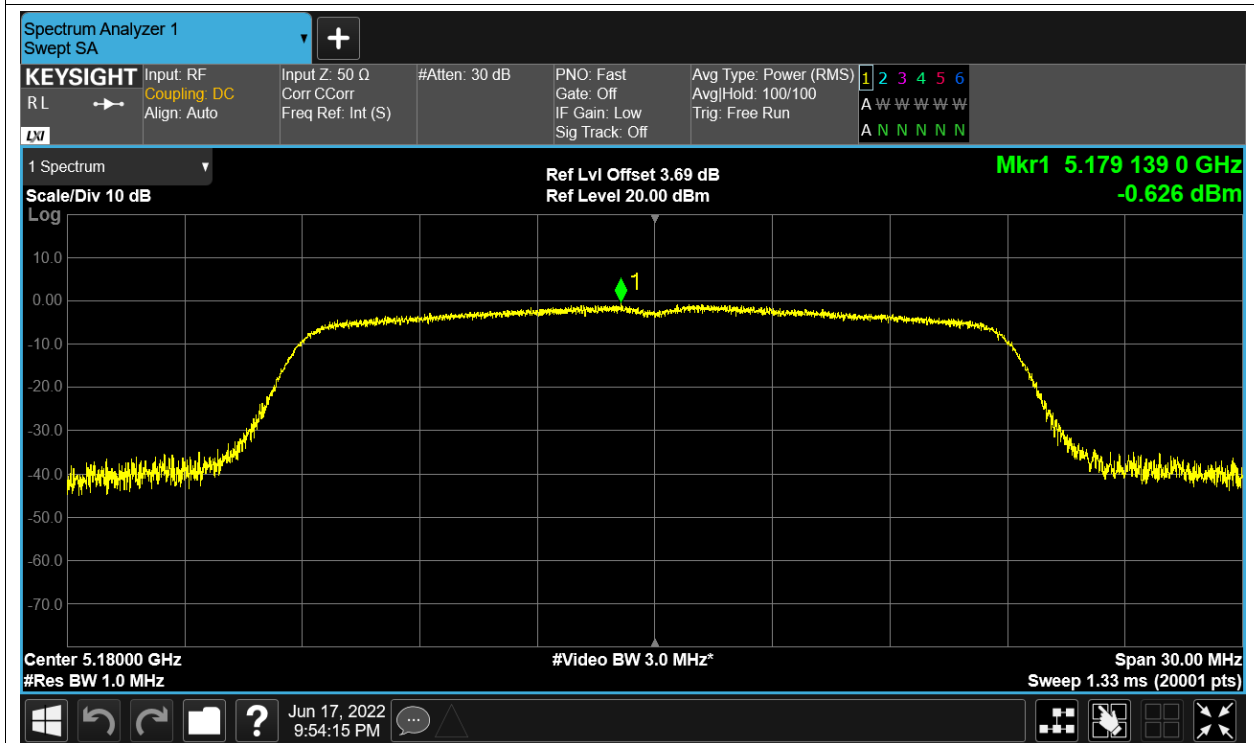


PSD NVNT ac20 5200MHz Ant1

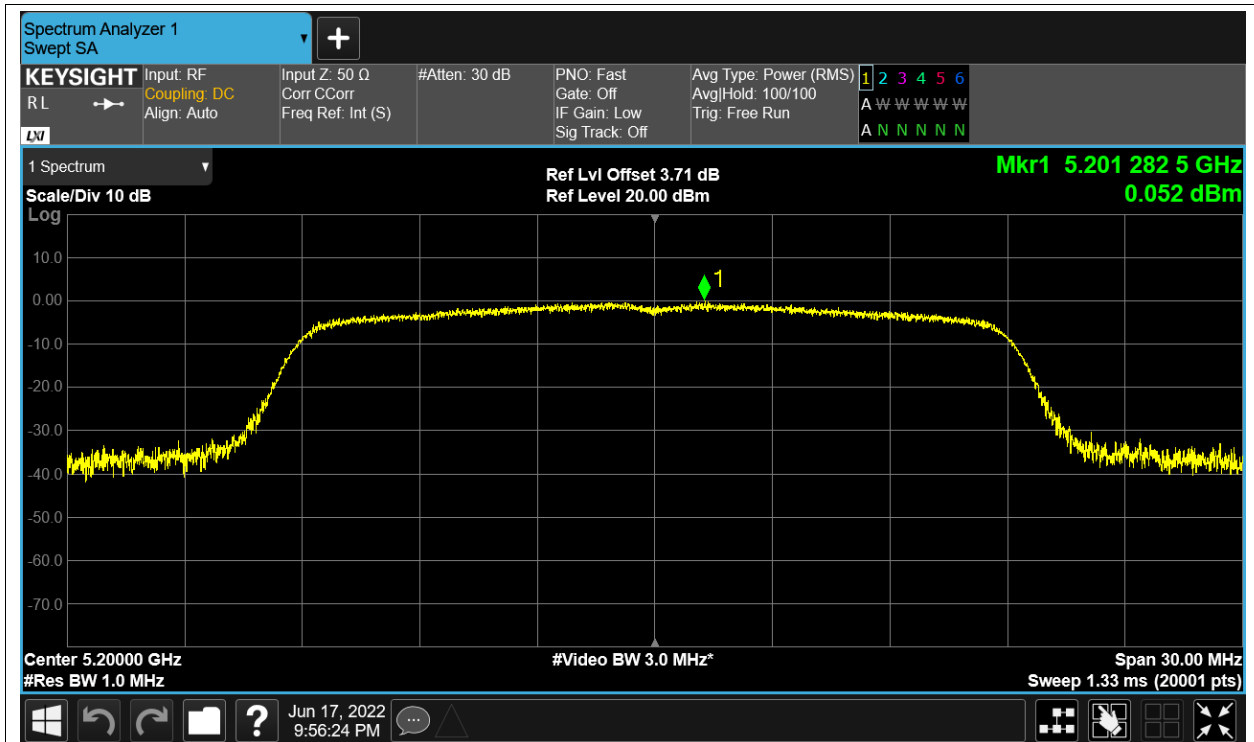


PSD NVNT ac20 5240MHz Ant1

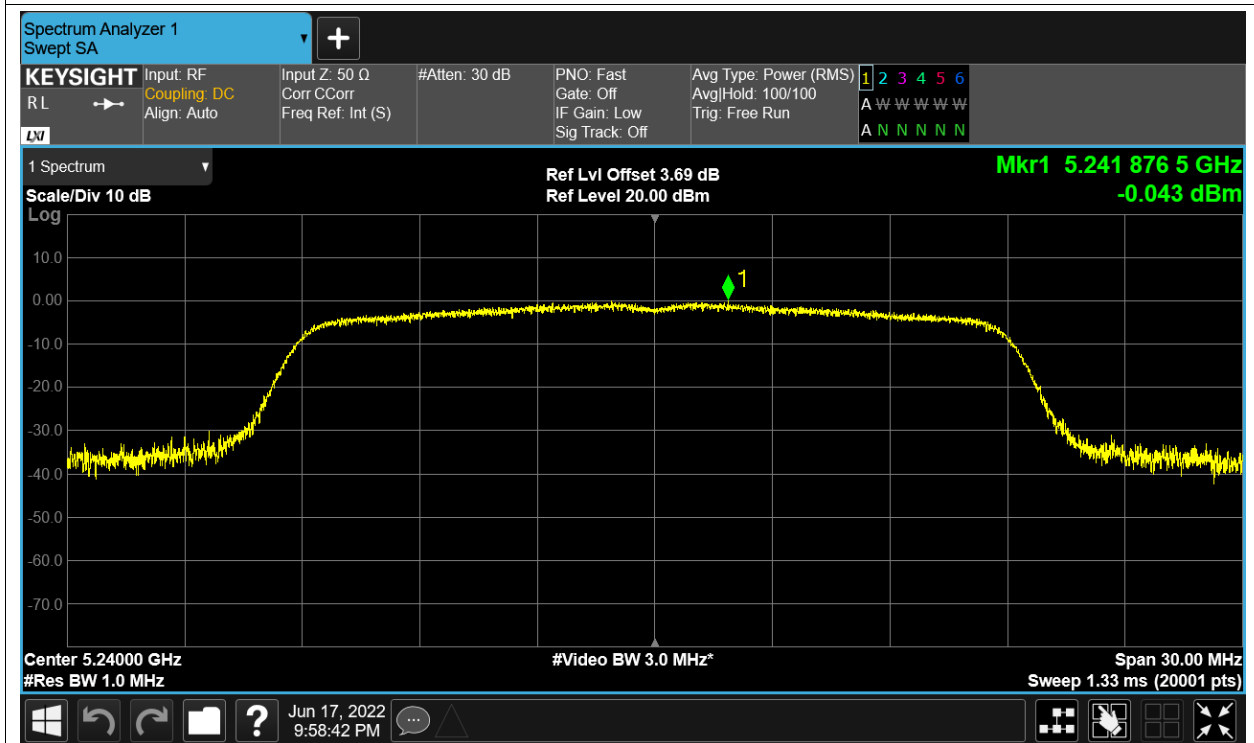


PSD NVNT ac40 5190MHz Ant1

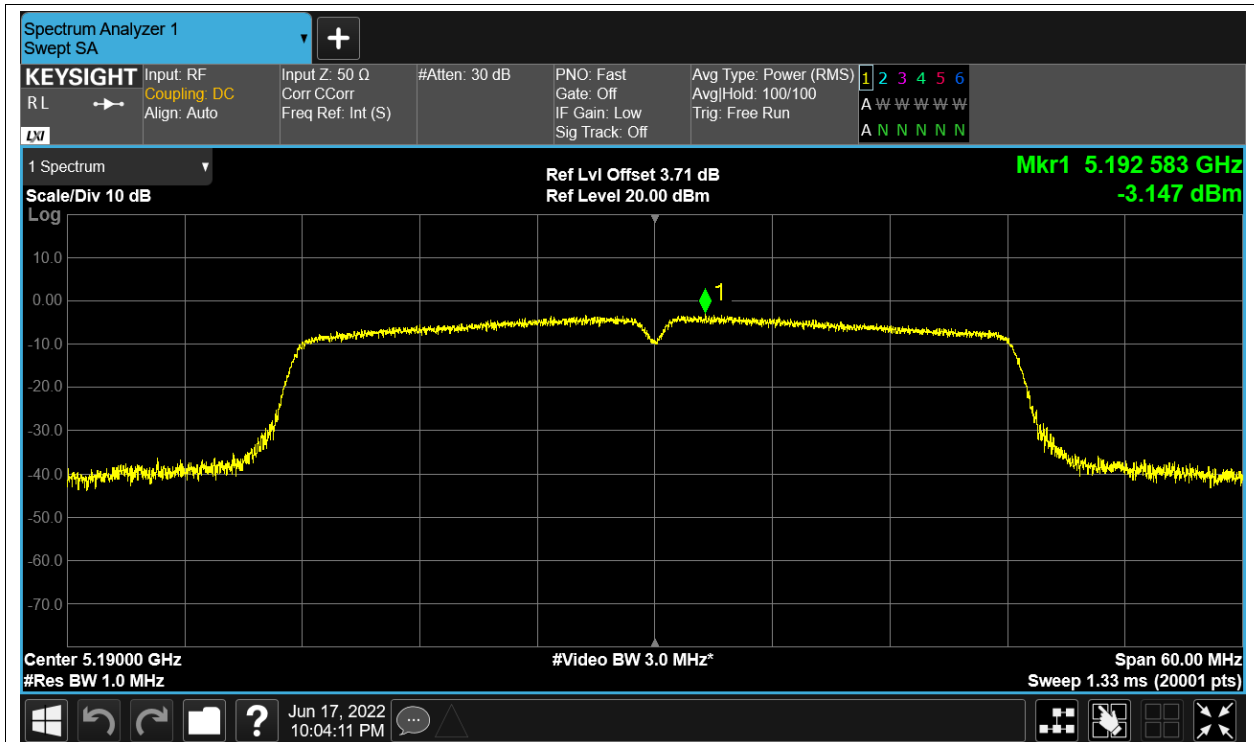


PSD NVNT ac40 5230MHz Ant1

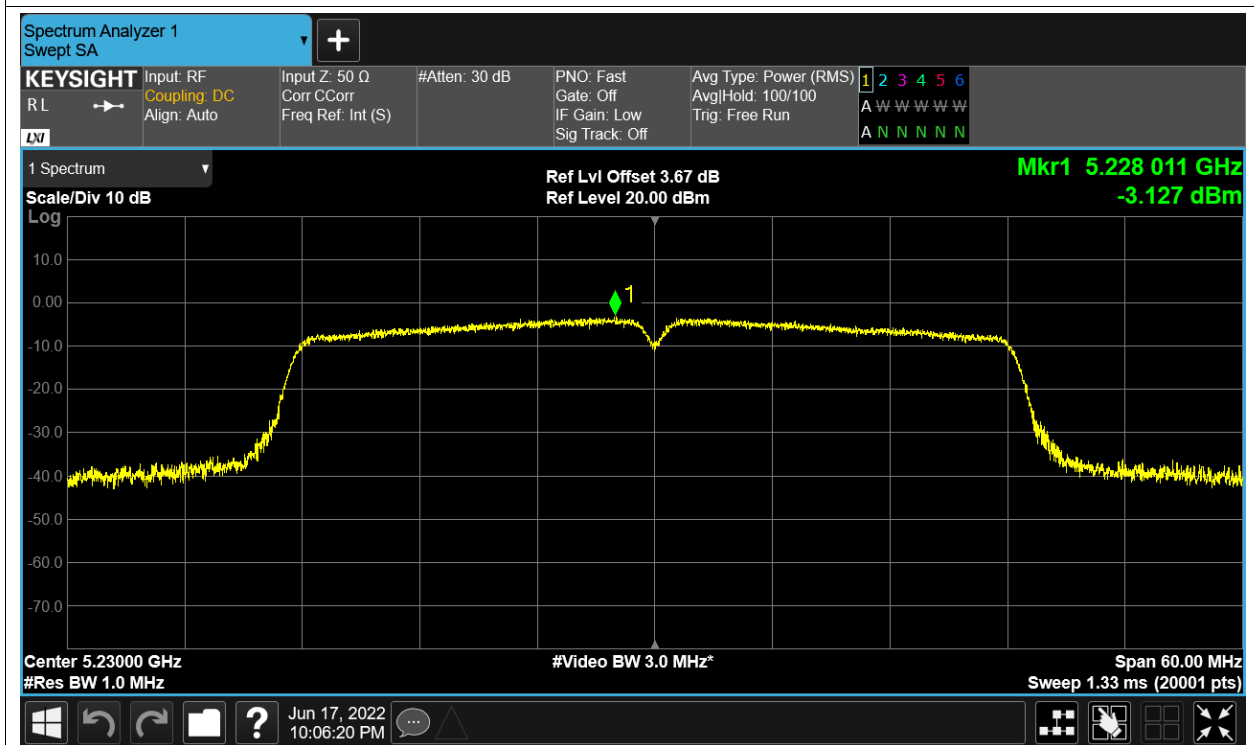


PSD NVNT ac80 5210MHz Ant1

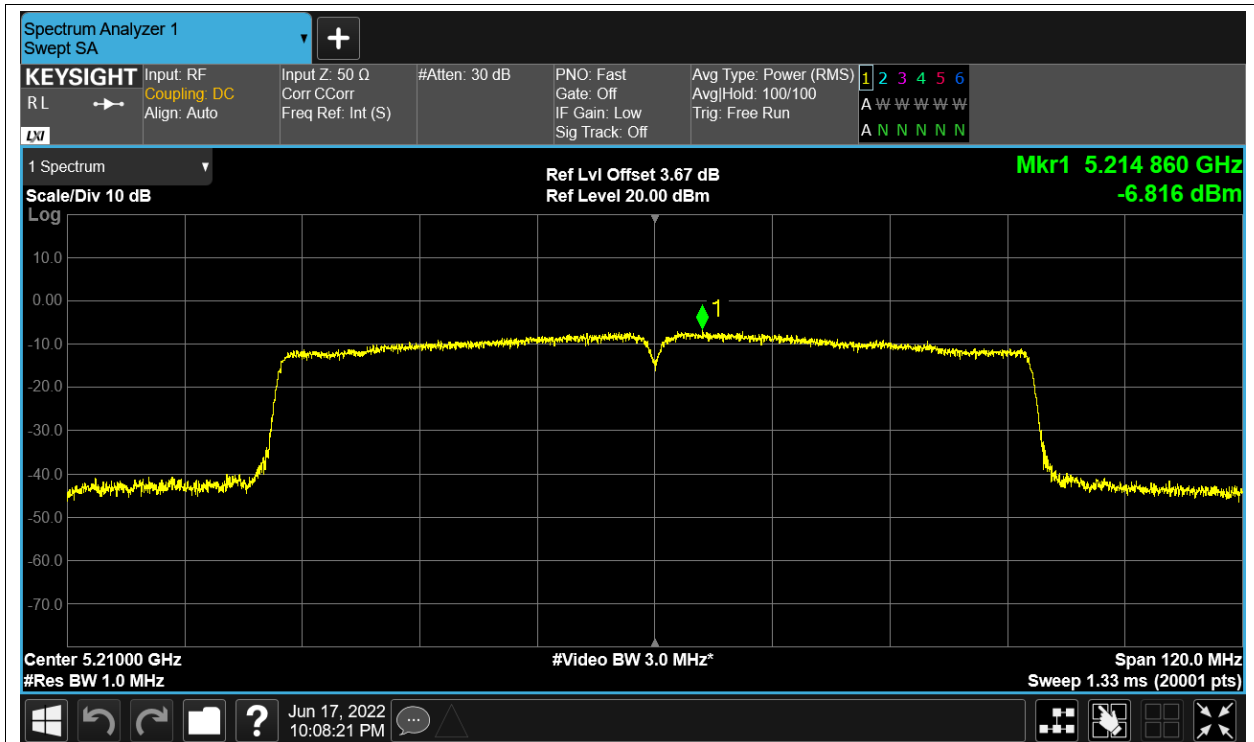


PSD NVNT n20 5180MHz Ant1

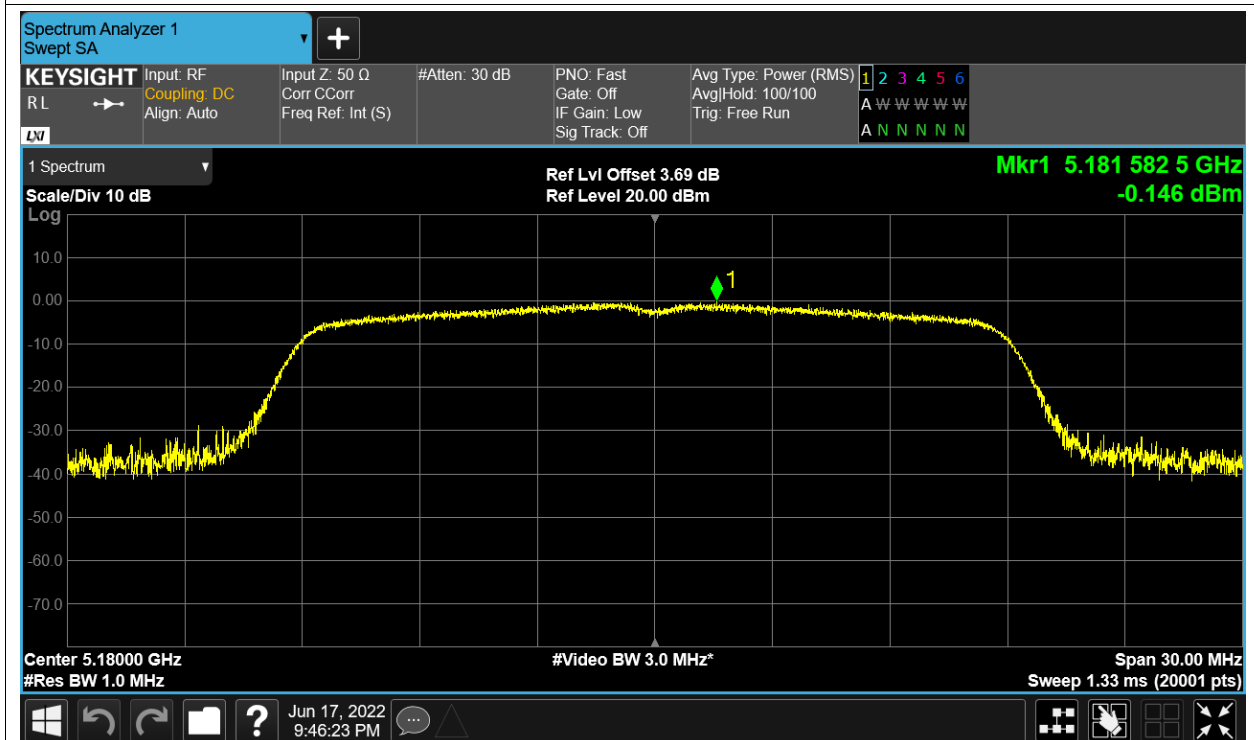


PSD NVNT n20 5200MHz Ant1

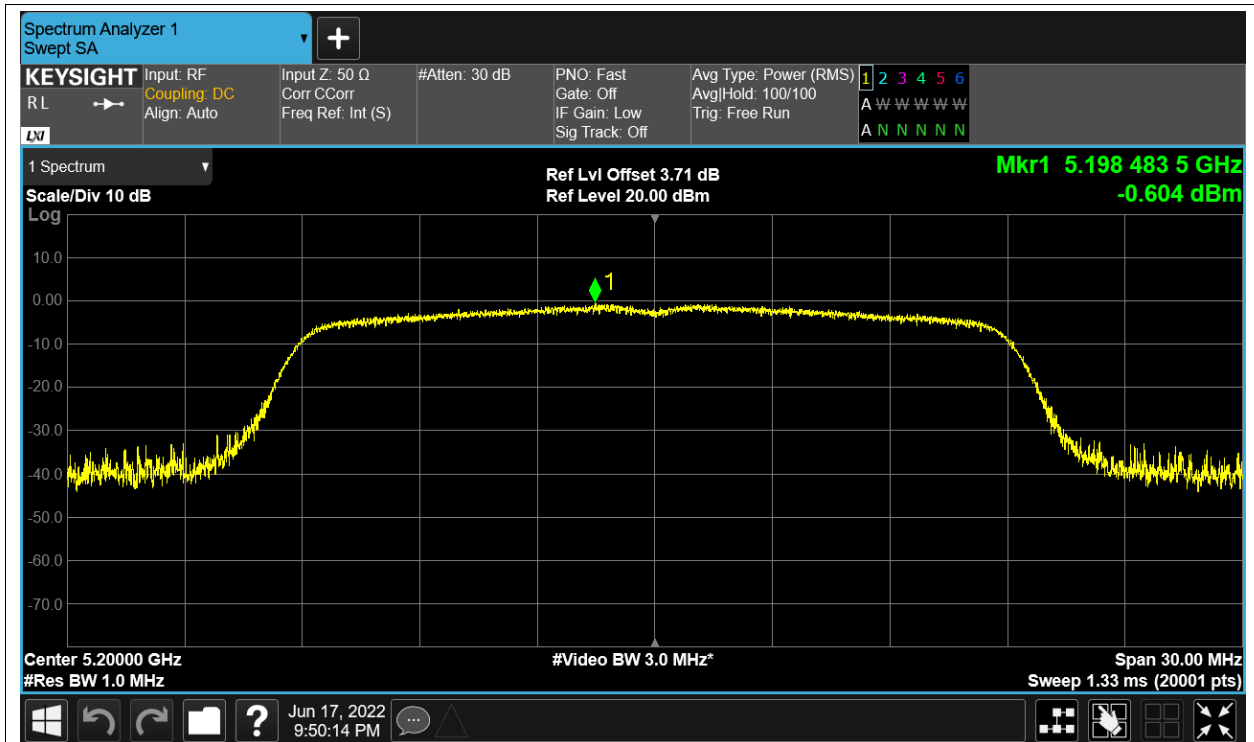

PSD NVNT n20 5240MHz Ant1

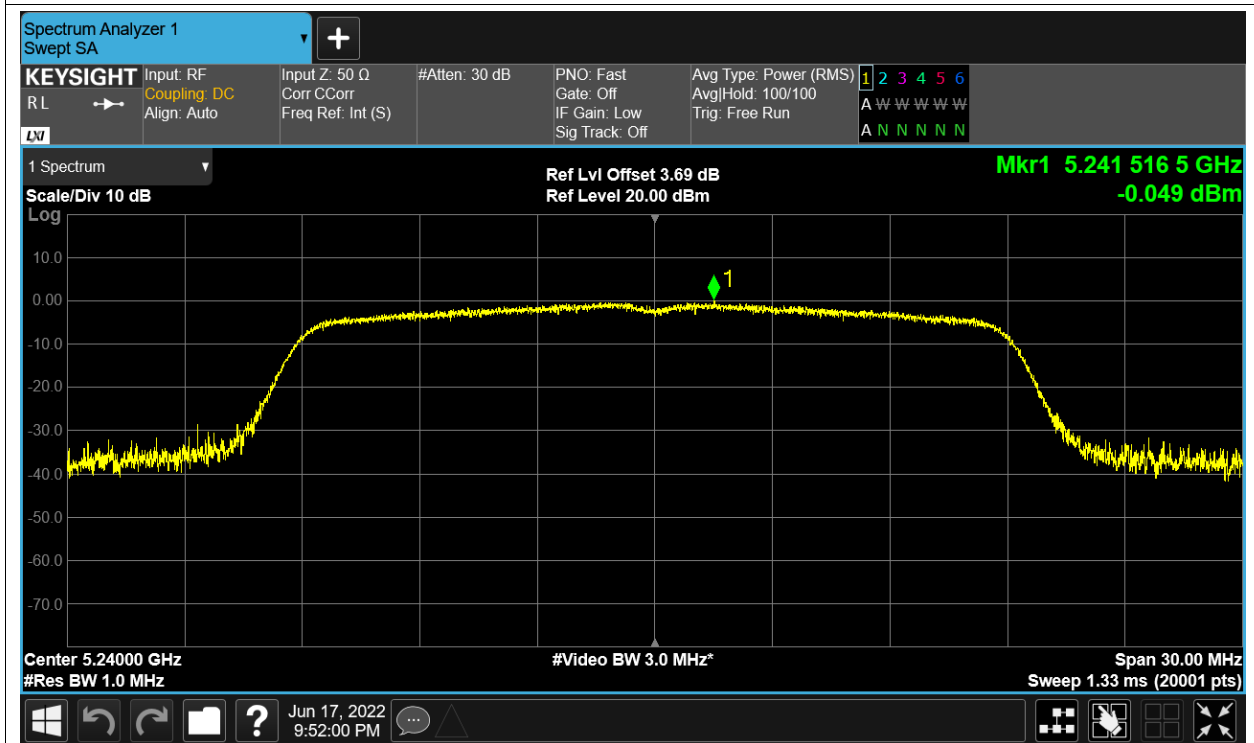

PSD NVNT n40 5190MHz Ant1

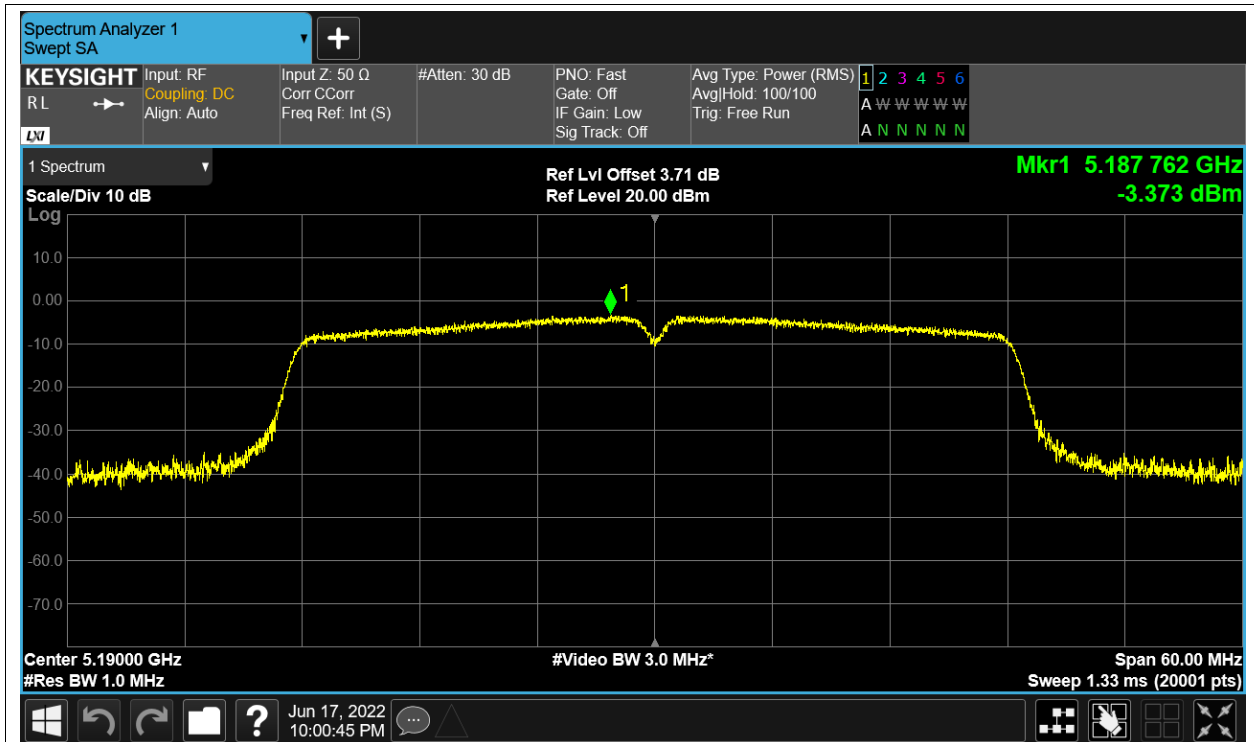

PSD NVNT n40 5230MHz Ant1

