
	Issue Department: Bedding Division	Date:	2022-02-11
	System Instruction	Author:	
User Manual		Edition:	1.0
		Page 1 of 5	

## User Manual of RF506A

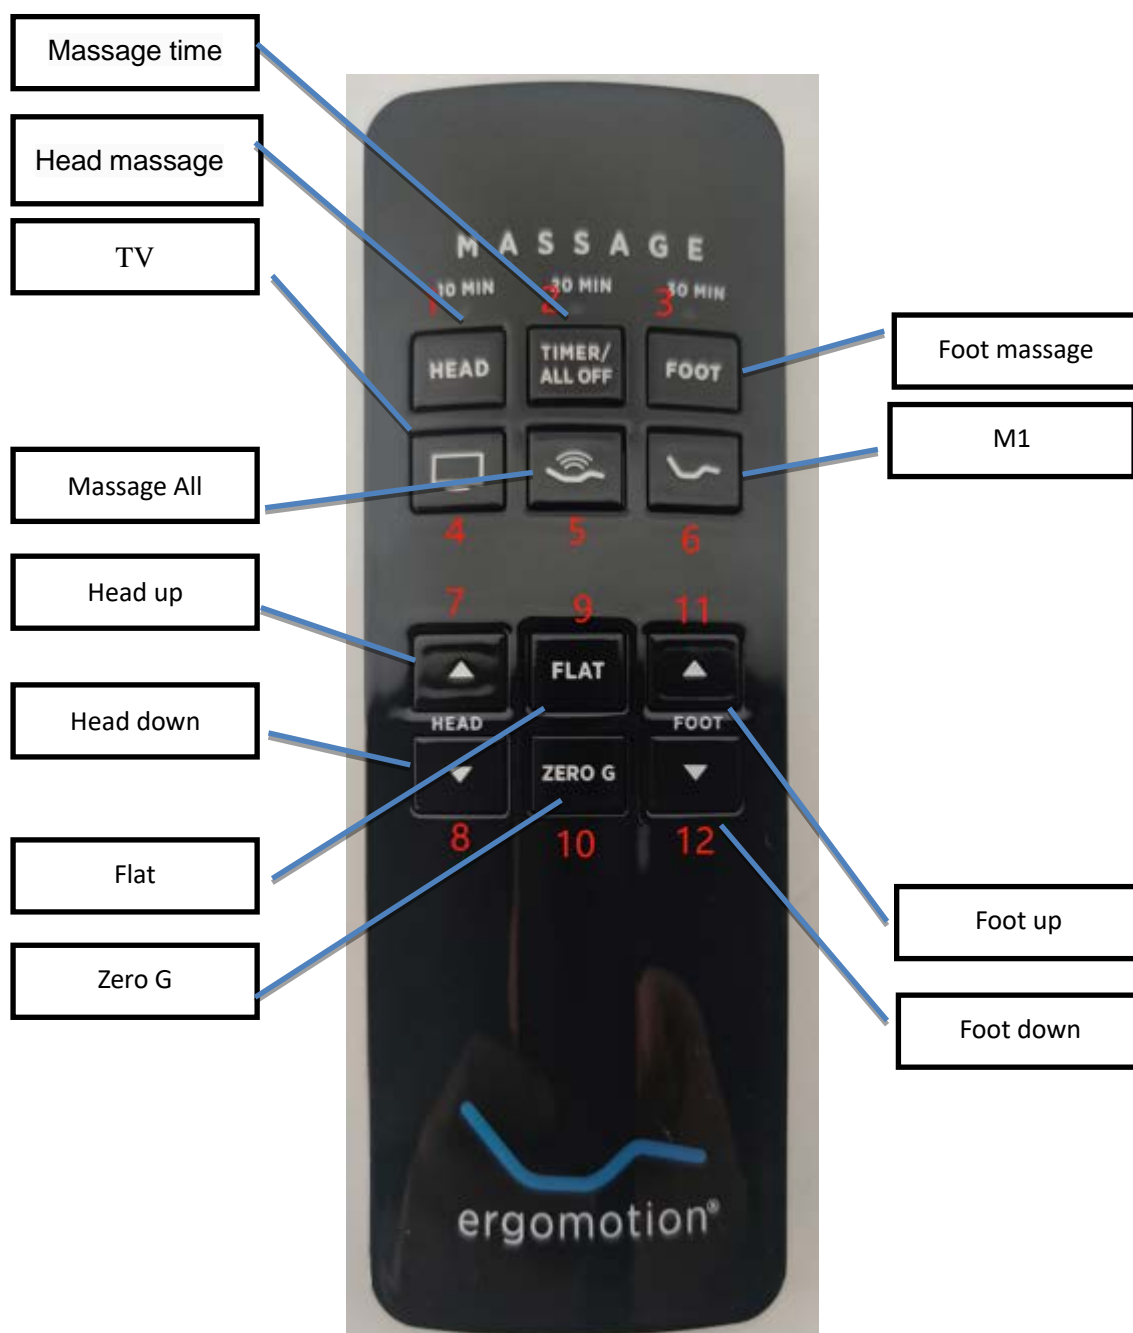


	Issue Department: Bedding Division	Date:	2022-02-11
	System Instruction	Author:	
User Manual		Edition:	1.0
		Page 2 of 5	

Figure 1 button of remote

## Item

### 1.1 HEAD MESSAGE 1

Click the HEAD MESSAGE button, head message motor switches message intensity, message intensity switches among 0-1-2-3;

### 1.2 MESSAGE TIME SET 2

Click the message time button to set the message time among 10min-20min-30min-off.

### 1.3 FOOT MESSAGE 3


Click the FOOT MESSAGE button, foot message motor switches message intensity, message intensity switches among 0-1-2-3

### 1.4 TV 4

Click the TV button, the bed moves to TV position, press and hold TV button for 5s, until backlight flashes, the control set the current position as TV position.

### 1.5 MESSAGE 5

Press Message button to open and shut the head and foot massage.

	Issue Department: Bedding Division	Date:	2022-02-11
	System Instruction	Author:	
User Manual		Edition:	1.0
		Page 3 of 5	

## 1.6M1 6

Click the M1 button, the bed moves to M1 position, press and hold M1 button for 5s until backlight flashes, the control set the current position as M1 position

## 1.7HEAD UP 7

Press and hold HEAD UP button, head actuator moves out, stop when released.

## 1.8 HEAD DOWN 8

Press and hold HEAD DOWN button, head actuator moves in, stop when released.

## 1.9FLAT 9

Click the FLAT button, the bed goes flat.

## 1.10 ZG 10


Click the ZG button, the bed moves to zeroG position, press and hold zeroG button for 5s, until backlight flashes, the control set the current position as zeroG position

## 1.11 FOOT UP 11

Press and hold FOOT UP button, foot actuator moves out, stop when released.

## 1.12 FOOT DOWN 12

Press and hold FOOT DOWN button, foot actuator moves in, stop when released.

	Issue Department: Bedding Division	Date:	2022-02-11
	System Instruction	Author:	
User Manual		Edition:	1.0
		Page 4 of 5	

### 1.13 Pair Key 13

Press and Pair key (under the remote in the battery room) button for 3 seconds when supply the power to control box, and the blue light twinkle, if pair successfully, the blue light is on.

#### Federal Communications Commission (FCC) Statement


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation of the device.

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

	Issue Department: Bedding Division	Date:	2022-02-11
	System Instruction	Author:	
User Manual		Edition:	1.0
		Page 5 of 5	

#### Canada, Industry Canada (IC) Statement

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.