




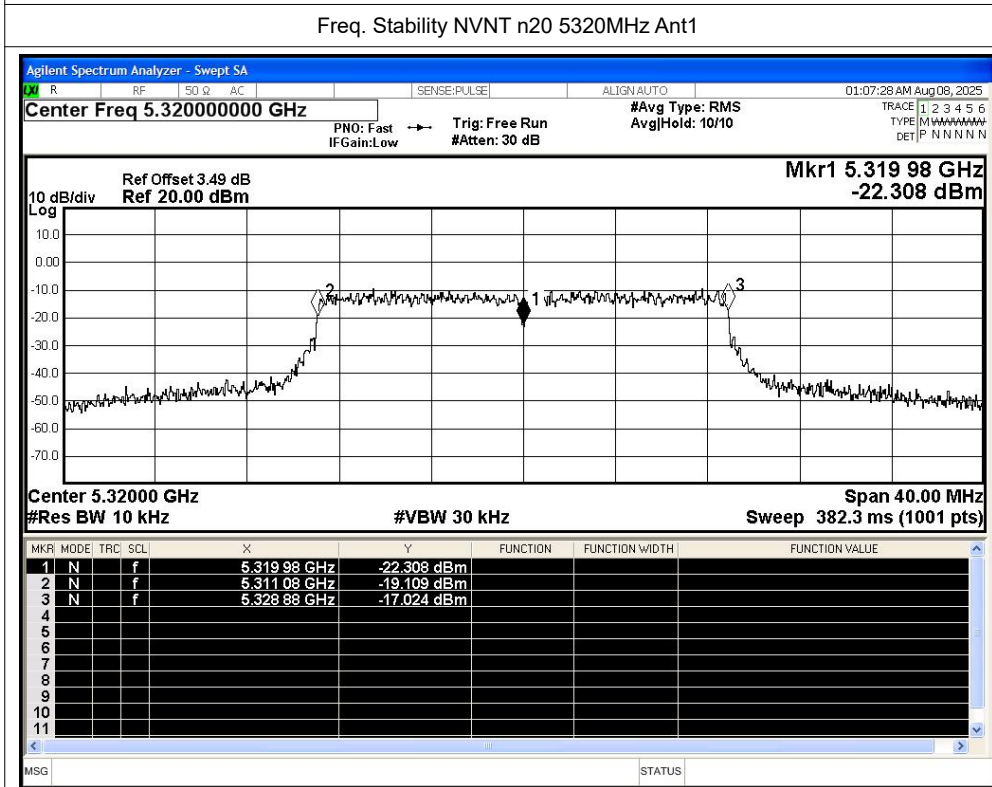
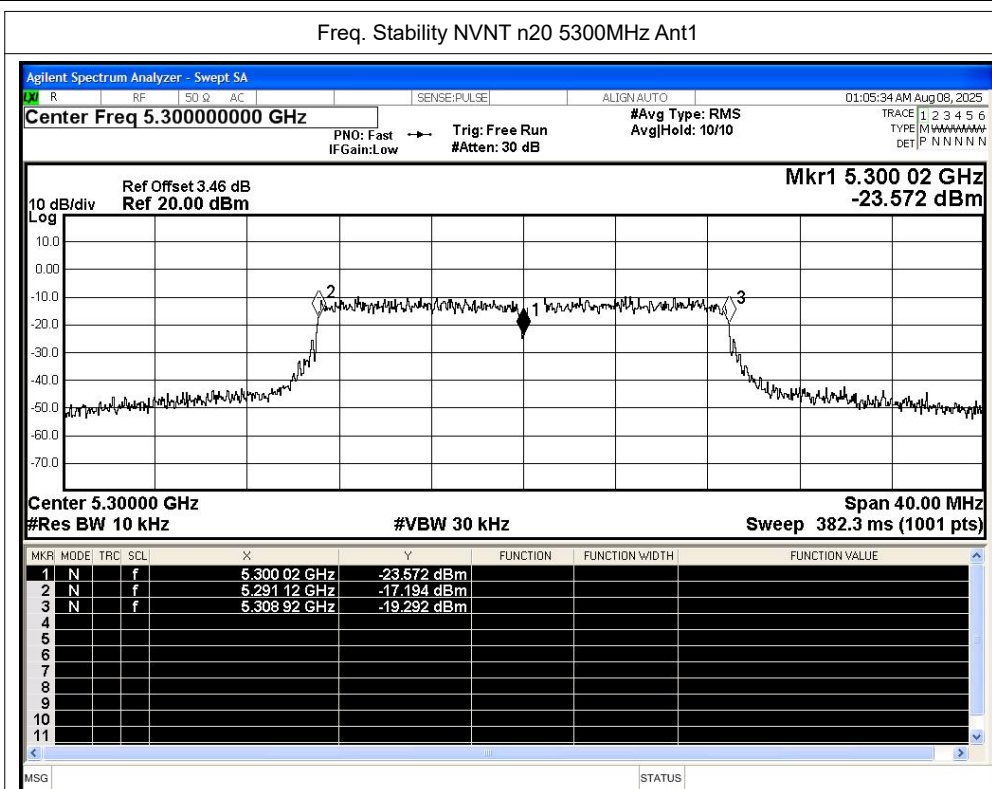
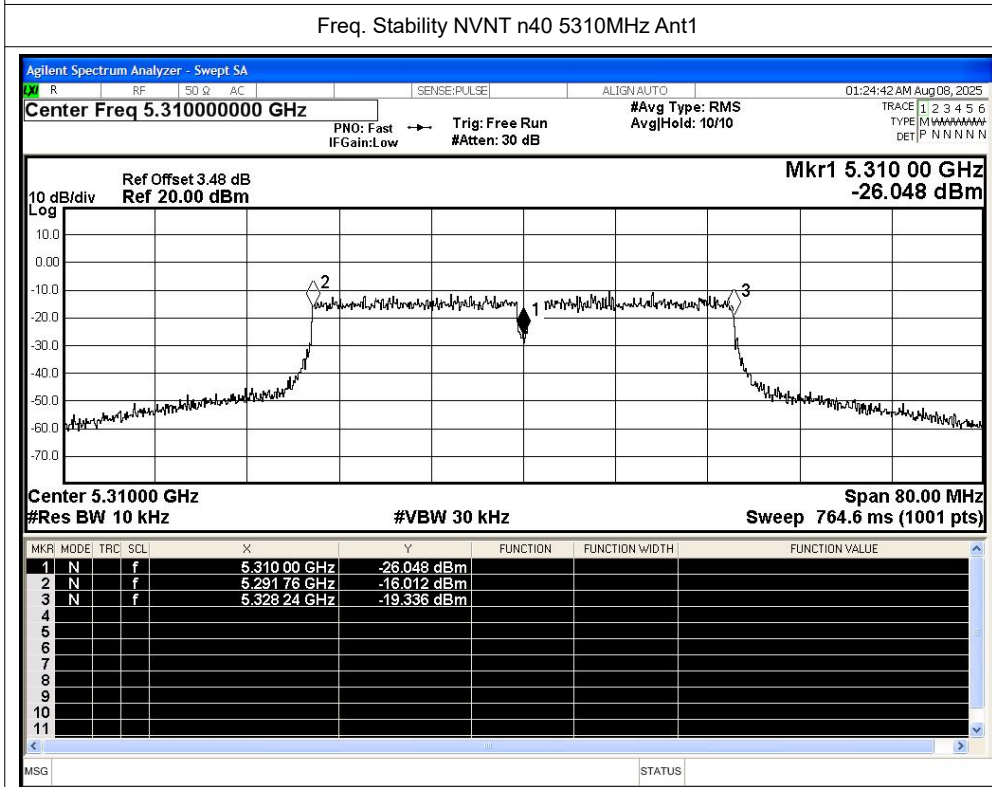
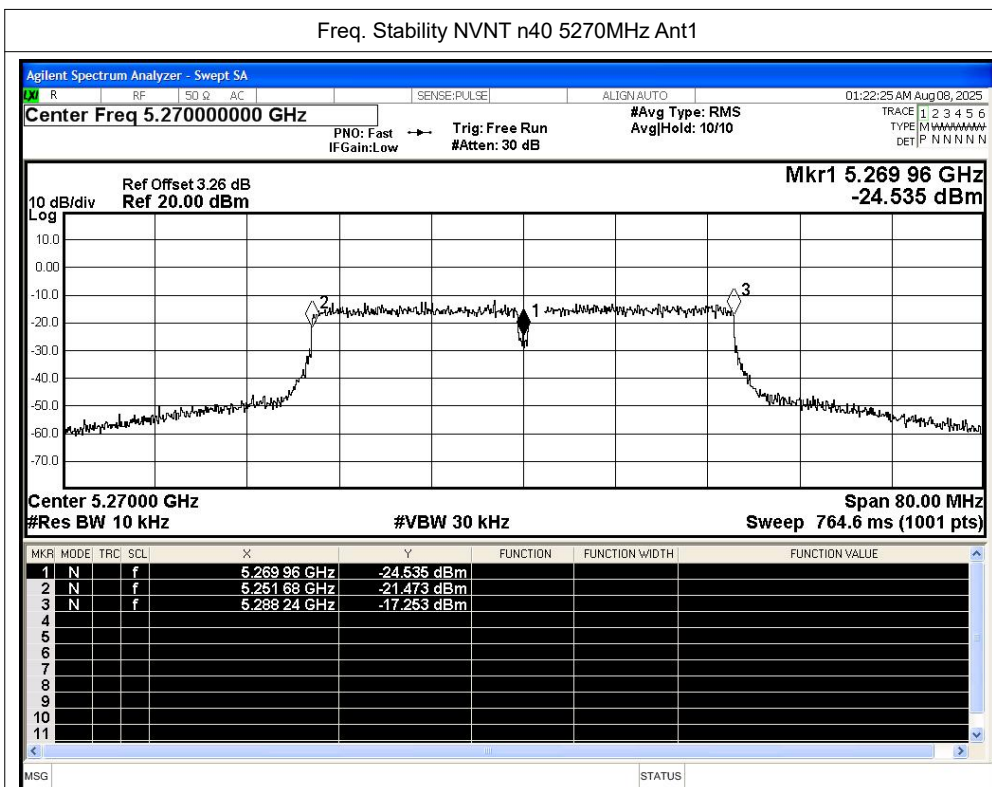
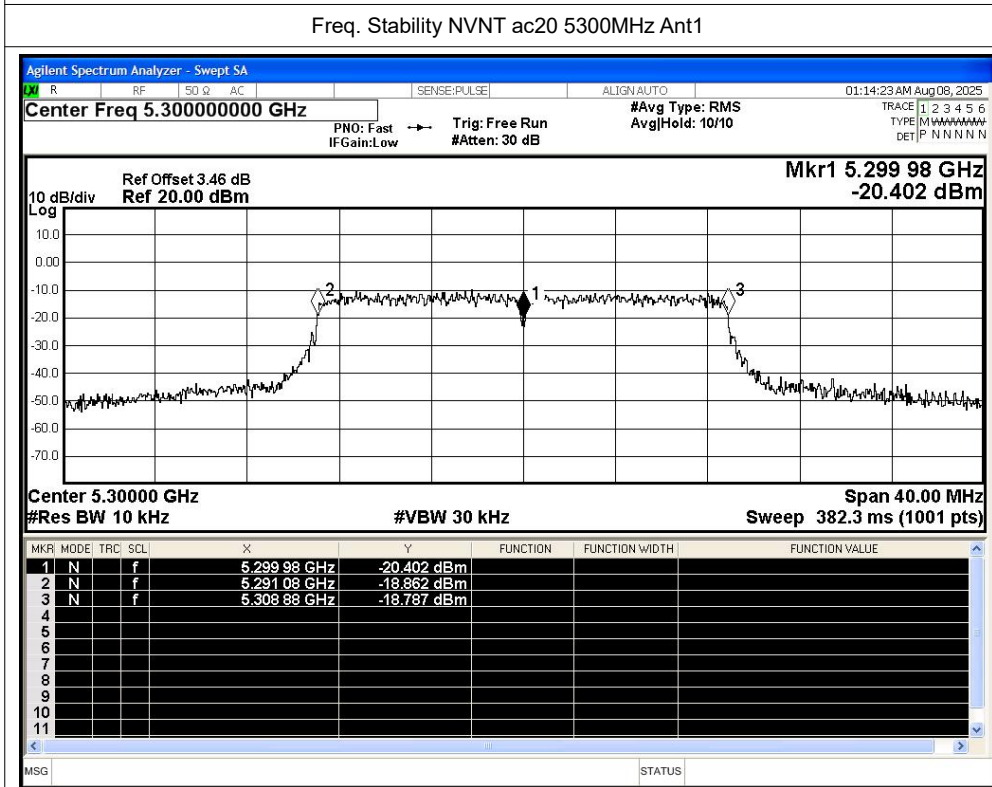



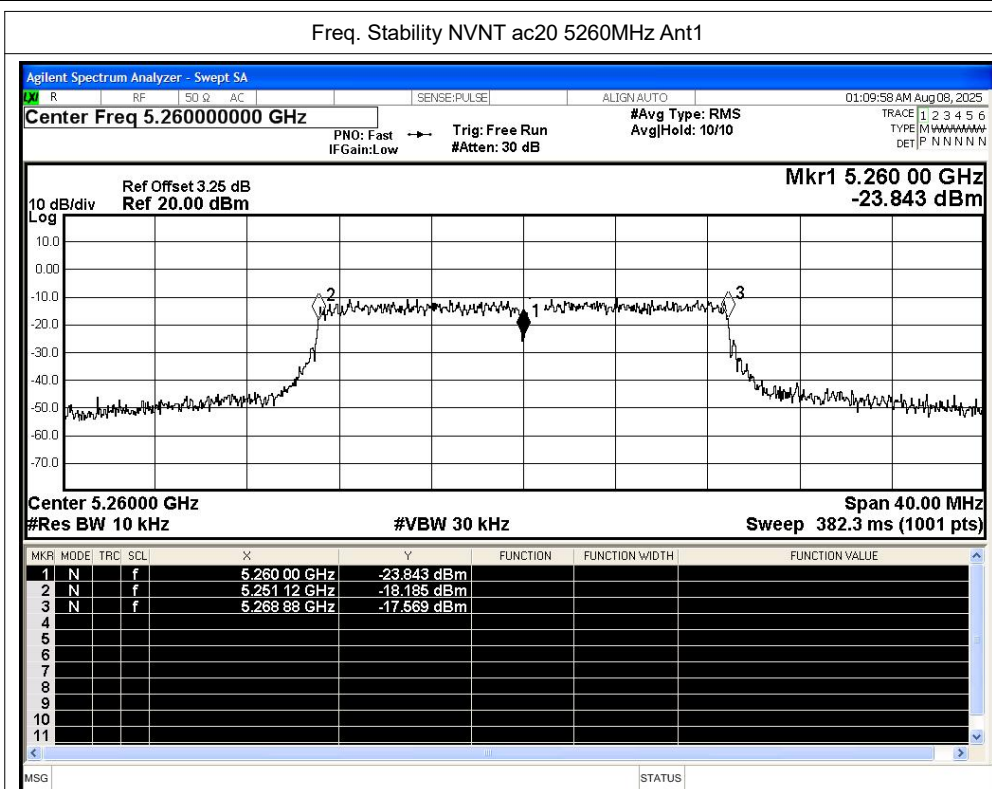



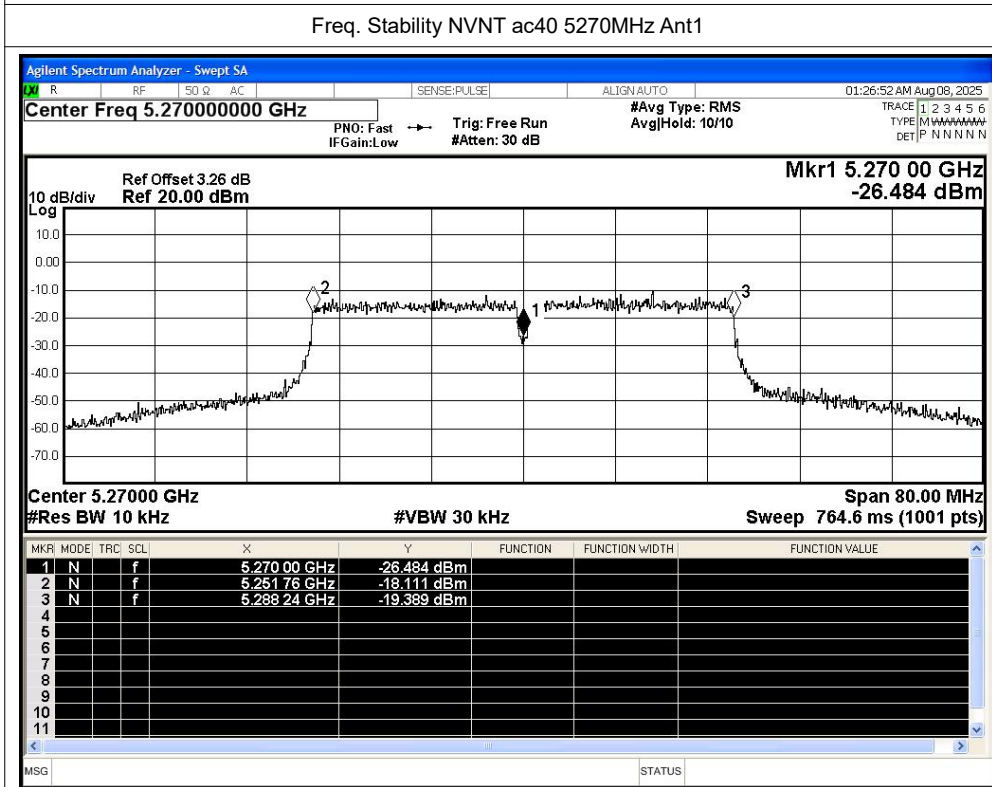


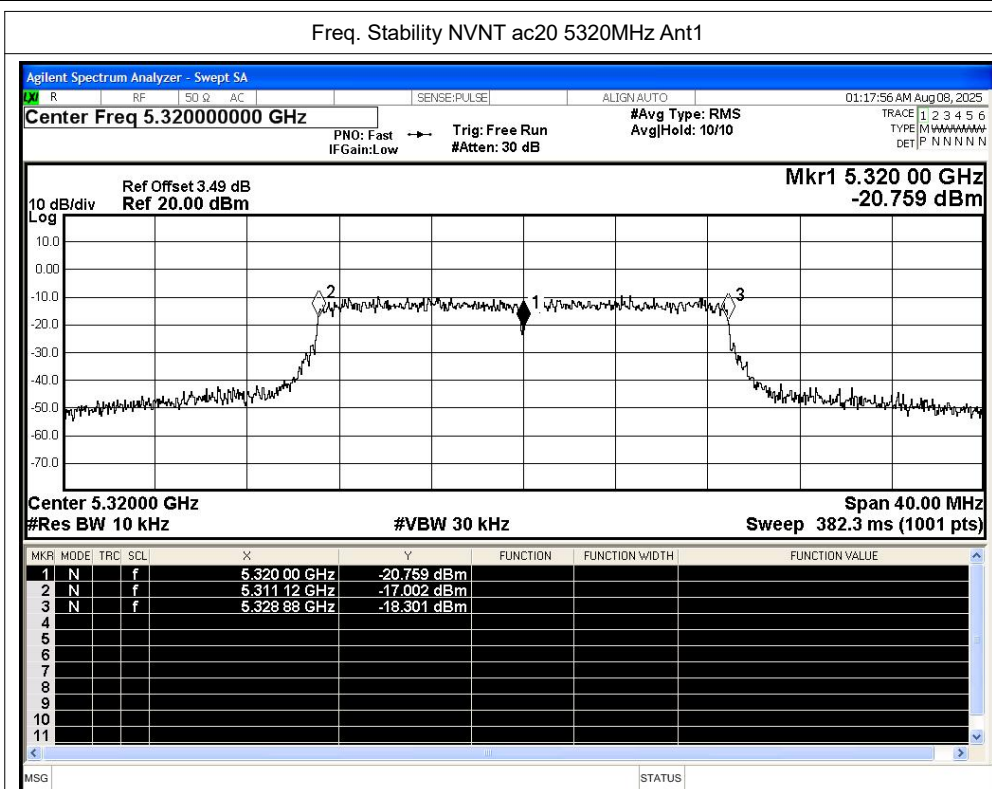

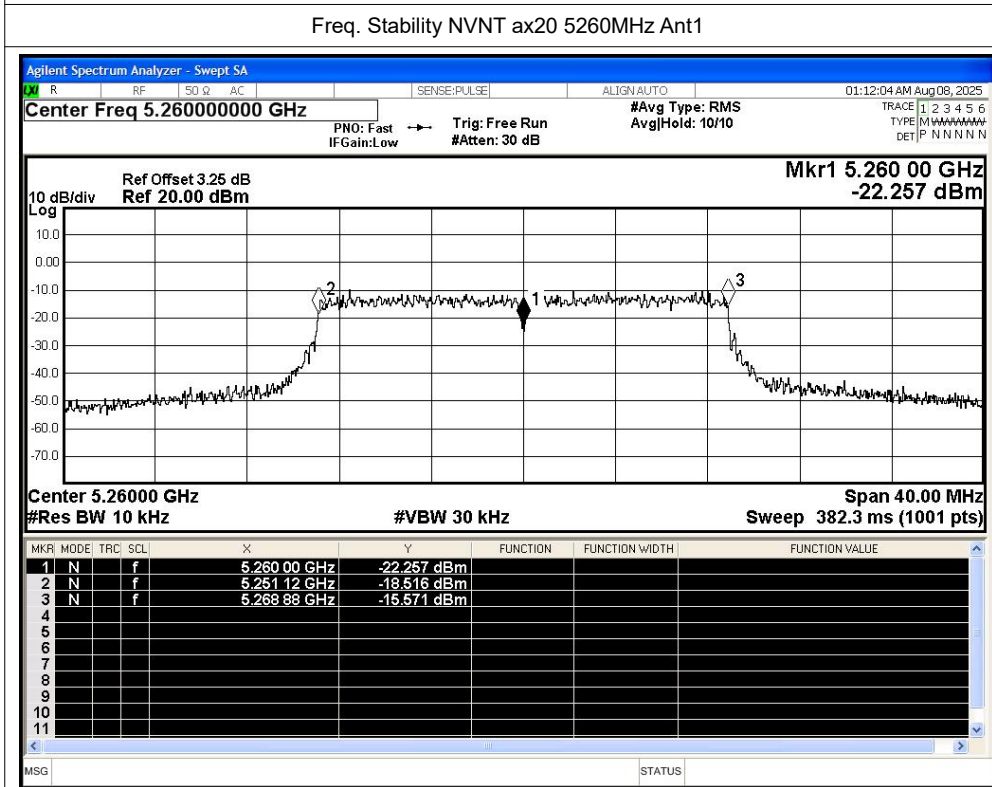

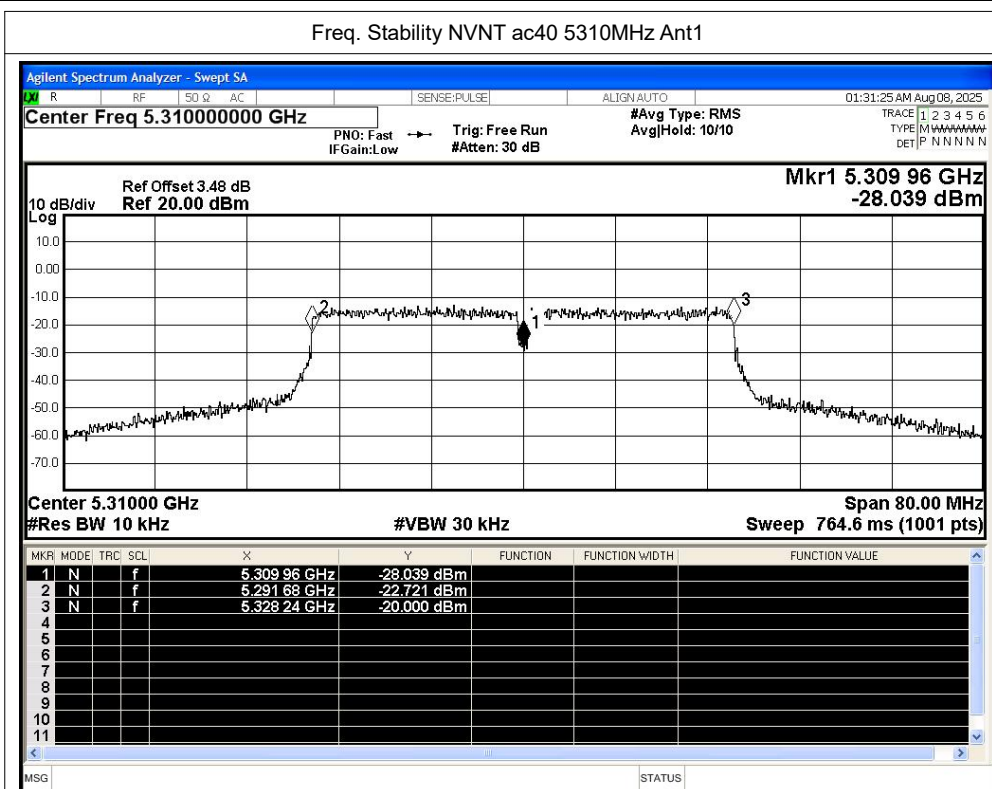

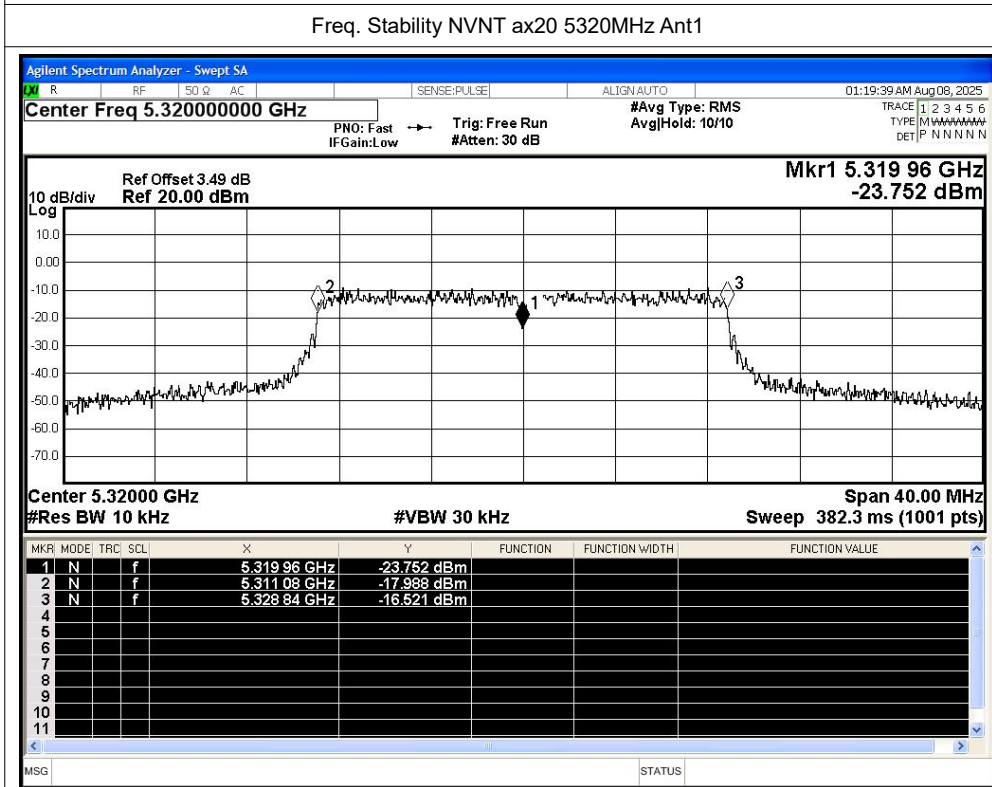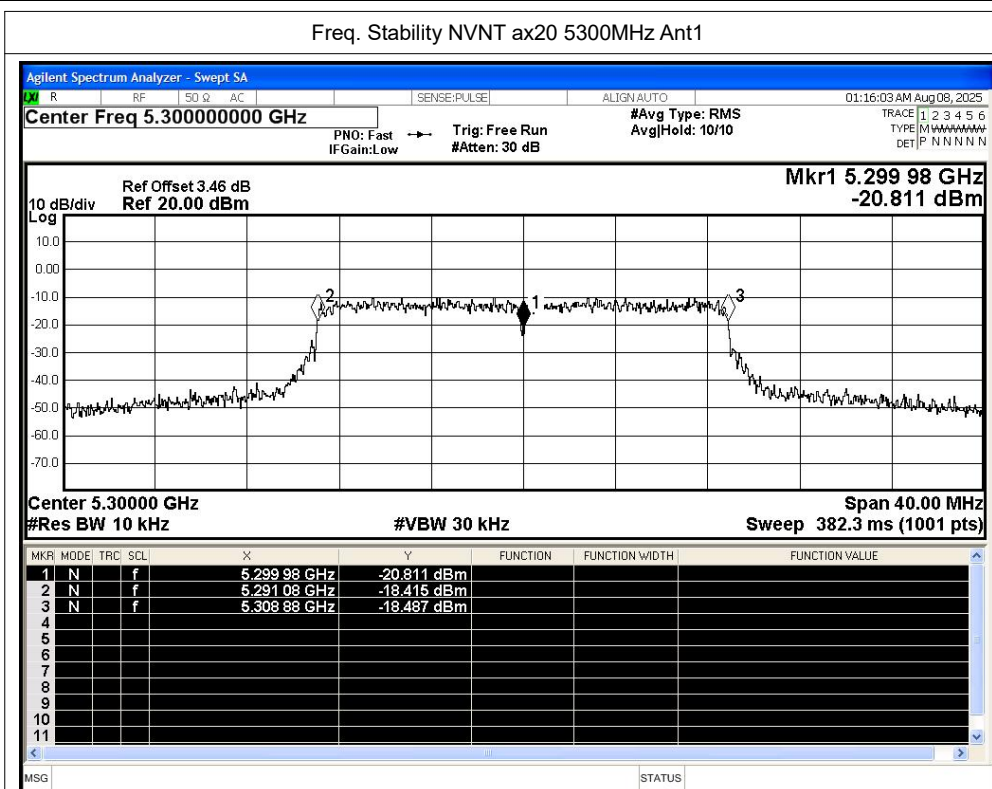

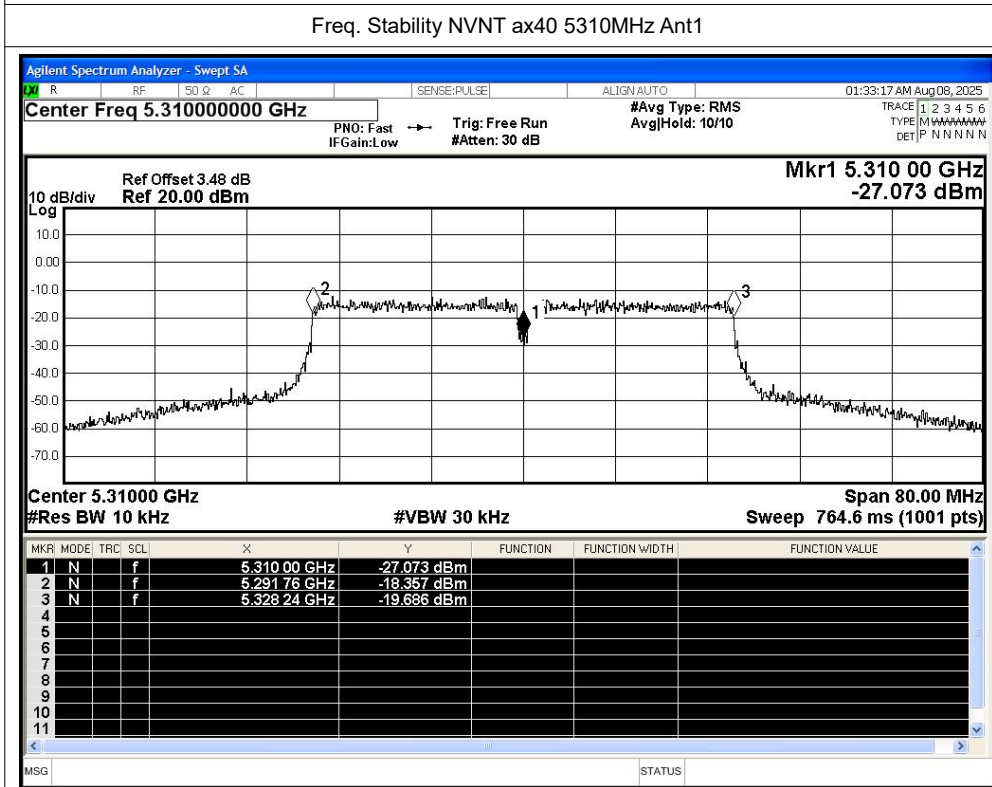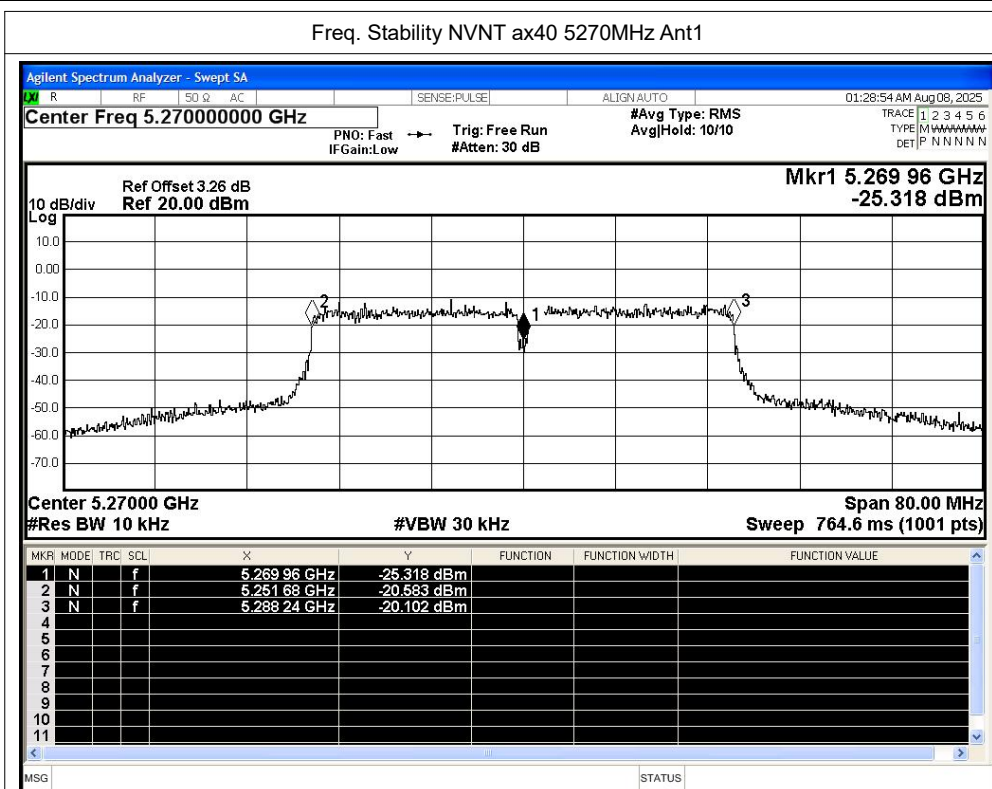


Duty Cycle

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5260	Ant1	94.65	0.24	0.91
NVNT	a	5300	Ant1	94.56	0.24	0.91
NVNT	a	5320	Ant1	94.57	0.24	0.91
NVNT	n20	5260	Ant1	97.29	0.12	0.44
NVNT	n20	5300	Ant1	97.33	0.12	0.44
NVNT	n20	5320	Ant1	97.33	0.12	0.44
NVNT	n40	5270	Ant1	94.71	0.24	0.9
NVNT	n40	5310	Ant1	94.71	0.24	0.9
NVNT	ac20	5260	Ant1	97.34	0.12	0.44
NVNT	ac20	5300	Ant1	97.34	0.12	0.44
NVNT	ac20	5320	Ant1	97.34	0.12	0.44
NVNT	ac40	5270	Ant1	94.72	0.24	0.9
NVNT	ac40	5310	Ant1	94.72	0.24	0.9
NVNT	ax20	5260	Ant1	97.34	0.12	0.44
NVNT	ax20	5300	Ant1	97.34	0.12	0.44
NVNT	ax20	5320	Ant1	97.34	0.12	0.44
NVNT	ax40	5270	Ant1	94.72	0.24	0.9
NVNT	ax40	5310	Ant1	94.72	0.24	0.9

Test Graphs

Duty Cycle NVNT a 5260MHz Ant1

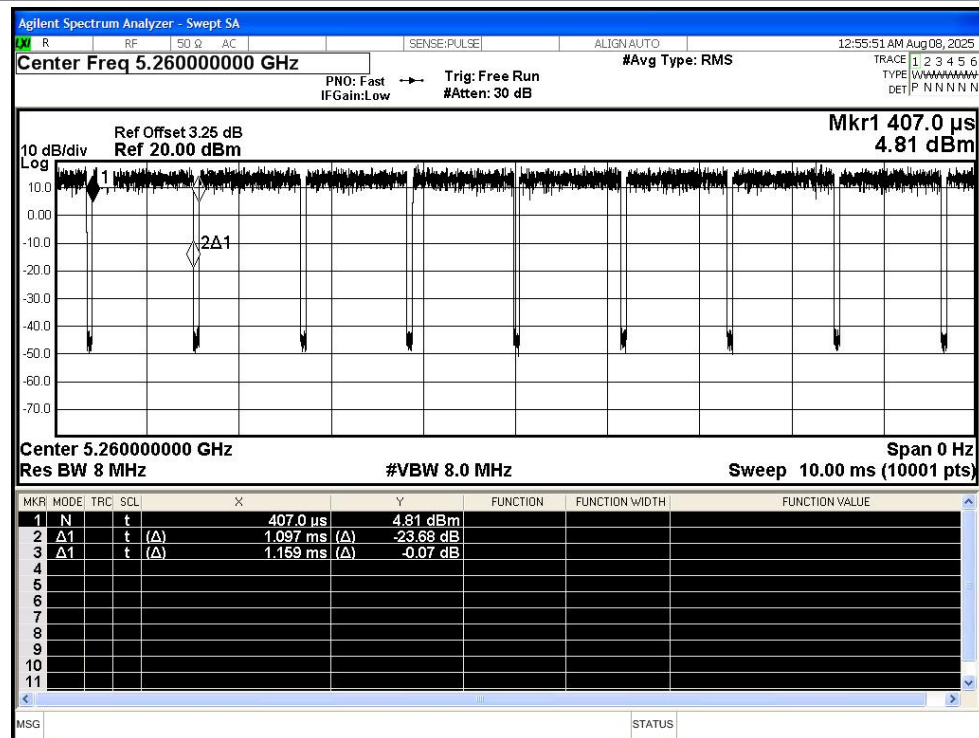

Duty Cycle NVNT a 5300MHz Ant1

