



User Manual

The instructions in the picture for reference only, in kind prevail

Please read the instructions first

- Please refer to this manual before using VR to ensure safe and proper use.
- Some languages or content may not be available for certain areas or networks.
- Read and follow all of the VR settings and operating instructions. Before starting the virtual reality experience, Should be adjusted according to the individual circumstances of each user, and use the configuration software (if available) to calibrate the non-compliance of this directive may increase the risk of discomfort.

Please read the instructions first

- Do not drop the charger or device, or cause a collision
- Do not disassemble, refit or repair the device, any changes or modifications to the device, the manufacturer will not warranty.
- Do not allow the conductor connector contact device, such as liquid, dust, metal filings and pencil.
- Do not bite or suck devices, children or animals will choke due to swallowing small parts.
- Please use the manufacturer approved batteries, chargers, accessories and supplies, will not be responsible for the safety of the user's use of non – original parts or accessories.
- A contact conductor may cause short circuit or corrosion at the connector and cause an explosion, fire, or damage to the device.
- If the device is broken or damaged, do not continue to use, broken glass may hurt your hands and face.

When cleaning device, please note the following items

- Please use a clean soft cloth or cotton wipe brush device and its lens.
- Do not use chemicals or cleaning agents. Otherwise, it may cause the casing to fade or corrode.

Please read the instructions first



Special population

If you are pregnant, elderly or suffer from binocular vision abnormalities, mental illness, poor heart condition or other serious diseases, we recommend that you consult a doctor before using VR . Children under 13 should not use VR. Children (at least 13 years old) using VR should be supervised by adults. Pay attention to the following symptoms, limit the time of children using VR and make sure that children take rests during using. Please avoid prolonged use.

Getting Started

Packing/package

Check the following items in the packing box:

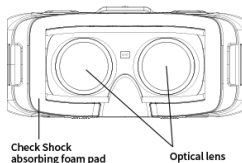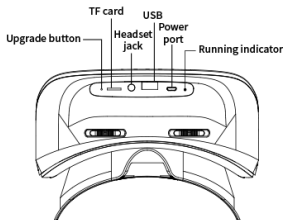




Getting Started




- VR, USB adapter, micro USB cable, headphone, headband, main strap and User's Manual.
- The provided items and available accessories may vary depending on your region or service provider.
- The provided items are designed for this device only, and may be incompatible with other devices.
- The appearance and specifications are subject to change without notice.
- Use only factory approved accessories; use of unapproved accessories may cause performance problems and failures, which are not covered by the warranty.
- Whether the accessories are available depend on the manufacturer.

Structure Diagram

Function buttons

Button	Function
 Power button	<ul style="list-style-type: none">• Press and hold for three seconds to turn on the device• In display interface, press it to enter sleeping state, and press it again to wake up• Press and hold for three seconds to turn off the device
 Back	<ul style="list-style-type: none">• Press to return to previous page
 Volume control	<ul style="list-style-type: none">• Volume Up, Down Button

Getting Started

	Menu button	<ul style="list-style-type: none">• Move to Menu
	Home button	<ul style="list-style-type: none">• Go to home screen
	Move/ OK key	<ul style="list-style-type: none">• Move up/ down/ left/ right in menu• Go to the desired menu and select, left click on mouse


Getting Started

Wearing VR

- When you are wearing glasses, do not wear VR. Doing so may lead to facial injuries. If you need vision correction lenses, it is recommended that you wear contact lenses when using VR.
- Keep the lens clean and prevent scratches. If the lens is dirty or fogged, clean with lens cleaning cloth.
- If your face sweats when you are wearing VR, foam pad may become dirty or degrade. When wearing VR, please make sure that your face is clean and dry.


Getting Started

1. Place the main strap properly with the ring at the top. Then, pass both end of the main strap through the ring in VR and fix with Velcro firmly.

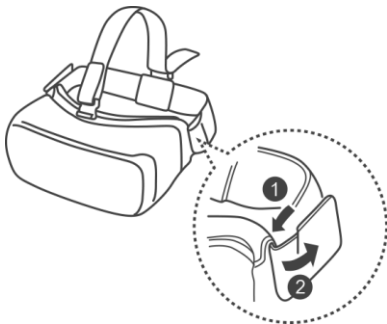


Getting Started

2. Buckle the hook to the top of front frame of VR, and pull up until it is firmly locked.

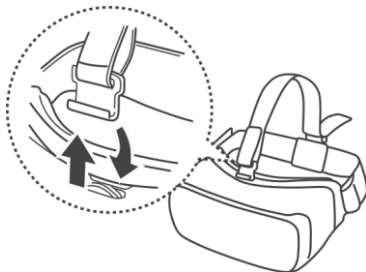


Getting Started

3. Slide the end of the headband through the ring in the main strap, and fix with Velcro firmly.

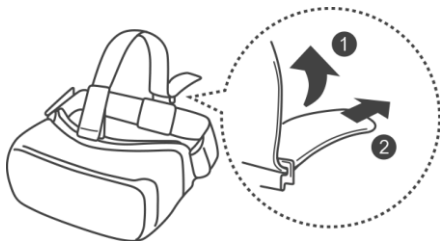

Getting Started

4. Fix VR to your head with strap, and wear it on the face comfortably.
5. Adjust the length of the top headband and the main strap.

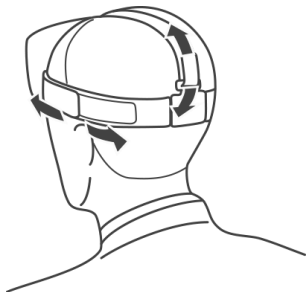


Operating instruction



To operate the device, use the function button at the top of the device.

OK Button:


Aim the menu on the display and click the OK button on the picture

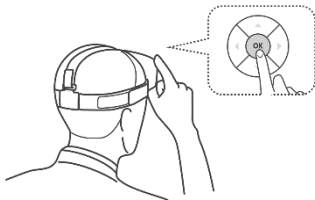


Direction Key:

Operation instructions


To move to next item, click ► at the top of the device as shown below

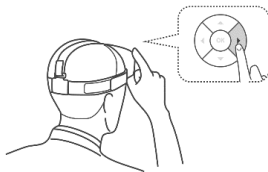


To move to the previous item, click ◀ at the top of the device as shown below

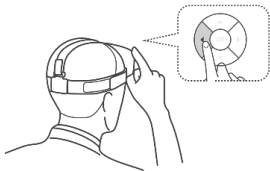

To move to the previous item, click ▼ at the top of the device as shown below

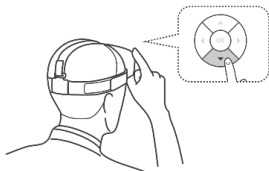

To move to next item, click ▲ at the top of the device as shown below

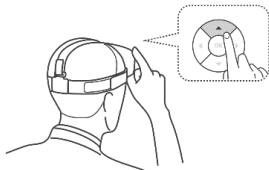

Some applications may not support upward or downward swiping.

Direction Key and Back button can be used for various functions

1. Press the Back button on Home page to exit the application; in the secondary page, press the Back button to return to previous page.
2. Some applications and pages may not support page adjustment operation with touch-pad of the Mobile All-in-one.

Playback page and menu page operation mode

1. In Playback page, turn head perspective downwards to show the playback progress bar;

2. The playback page has seven features.


Stop and Play mode,

Switch loop mode, Brightness & Volume adjustment,

2D / 3D / 360 ° / Panorama selection,

Menu page move, previous function button.

3. In Playback page, press the Back button of Mobile All-in-one to return to previous page.

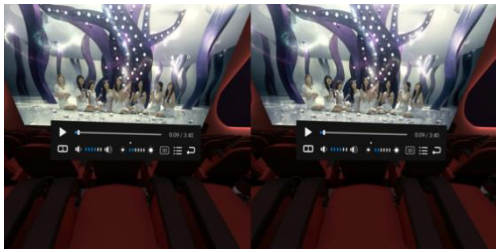

Set the language:

If you want to change language, please touch setting→common→language, then select the language you want to set.

Simple troubleshooting

1. The image on the screen are moving randomly

Make the machine restart, put the all-in-one lens placed in a flat on the table until entering the system calibration, then it can be picked up.

2. Unable to boot

Please check whether it has run out of power or not.

Product Warranty

Warranty period is 1year

Product Name	TiTAN VR			
Model	CWV-100			
Purchase date	20	Year	Month	date
Customer Name				

For product repair, you must present warranty card with the date of purchase to get full service.

- If there is no warranty, the warranty period will be based on dispute resolution standards based on the month or date of production.
 - Please note that the warranty will not be reissued so keep it safe.
1. This product is manufactured through strict quality control and inspection process .
 - 2.If any defects or natural defects occur during the warranty period, we will repair the product free of charge.
 3. Warranty period is 1 year.

4. Be sure to present this product warranty when applying for repair.

5. You will be asked to pay expense for following cases.

- ① If the warranty has expired
- ② Even during the warranty period if the malfunction occurs due to user's carelessness
- ③ If you do not provide a warranty or can not verify your product due to missing key details
- ④ If the product malfunctions due to natural disaster
- ⑤ If the warranty period is specified for each part
- ⑥ If the product malfunctions as a result of modifying the product
- ⑦ If consumable parts run out

6. This warranty is only valid in US.

If you have any questions or concerns,
please feel free to contact us through
the number below.

Tel : +1-424-330-0062

Hours Weekdays 10am~ 6pm

Lunch 12am ~1pm

Closed on weekends/holidays

Thank you for using TiTAN VR HMD.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause

harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

HQ Address 225 Santa Monica Blvd 6F, Santa Monica, CA 90401,
United States of America

Website [www.titanplatform .com](http://www.titanplatform.com)