

stemoscope **PRO LITE**

Smart Wireless Stethoscope  
(Model: STEMO500)



Instruction Manual  
(DRAFT)

## **SAFETY WARNINGS AND PRECAUTIONS**

- ⚠ Consult your physician before using the device if you are not a medical professional.
- ⚠ Keep Stemoscope PRO LITE at least 1 meter away from all radio frequency (RF) emitters, including WIFI routers and radios. DO NOT use Stemoscope PRO LITE near strong RF signals or portable and/or mobile RF devices. If sudden or unexpected sounds are heard, move away from any radio transmitting antennas.
- ⚠ Bluetooth Class 2 is used for data transmission. Its maximum radio frequency field strength is considered safe to use with other medical devices. However, audio, video, and other similar equipment may cause electromagnetic interference. If such devices are encountered, and cause interference, immediately move Stemoscope PRO LITE away from that device and/or switch OFF Stemoscope PRO LITE.
- ⚠ Store Stemoscope PRO LITE and components in a clean and safe place out of the reach of infants and children.

- ⚠ DO NOT move, slide or push the switch button when Stemoscope PRO LITE is wet. If you do so, liquid droplets may go into the device and damage the internal electrical circuitry.
- ⚠ Recharge the battery using only the provided charging cable with a UL-certified charger (not provided). DO NOT use Stemoscope PRO LITE when it is being charged.
- ⚠ DO NOT subject the device to extreme temperatures, humidity, or direct sunlight.
- ⚠ DO NOT subject the device to strong shocks, such as dropping the unit on the floor.
- ⚠ The working distance will be reduced when objects (walls, furniture, people, etc.) are between Stemoscope PRO LITE and the connected phone or earphones. To improve Bluetooth connection, reduce the distance and/or allow a line of sight between Stemoscope PRO LITE and the connected phone or earphones.
- ⚠ No modification of this equipment is allowed.
- ⚠ Switch off Stemoscope PRO LITE to save the battery power when not in use.

## **CONTENT**

<b>SAFETY WARNINGS AND PRECAUTIONS .....</b>	<b>2</b>
1. Introduction .....	5
1.1. Indications for use .....	5
1.2. Specifications and technical data.....	6
1.3. Signs and symbols.....	7
1.4. Package contents .....	8
2. Hardware identification.....	8
3. Basic steps to listen to the sounds.....	10
4. Record a video composed of the auscultatory sounds and the camera view .....	16
5. Record the sounds on a predefined body spot	
16	
6. More features for medical professionals .....	18
7. Live stream the auscultatory sounds .....	21
8. Share (send) a recording .....	27
9. Care, cleaning, and disinfection.....	28
10. Data security .....	28
11. Trouble shooting .....	29
12. Electrical Safety .....	31
13. FCC Statement .....	36
14. Disposal.....	36
15. Warranty.....	37
16. Contact information .....	37

## 1. Introduction

Stemoscope PRO LITE (Model: STEM0500) is a smart wireless noise-cancelling stethoscope. It transmits audio to the “DrStemo” app installed on a smartphone. The “DrStemo” app provides rich functions such as amplification, visualization, filtering, recording, sharing, etc. The app also allows a user to access premium cloud services, including video call service and cloud data storage. Before your first use, please read the manual carefully and follow all the instructions. Please contact us if you encountered any problems.

### 1.1. Indications for use

The Stemoscope PRO LITE is designed for medical professionals or lay users to auscultate, record, and transmit sounds from the heart, lungs, abdomen, arteries, veins, and other internal organs. The device is intended for medical diagnostics purposes but not for self-diagnosis.

## 1.2. Specifications and technical data

Item	Description
Supported phones	iOS: 9.0 or above Android: 7.0 or above
Frequency range	20 – 2000 Hz
Working distance	< 2 meters typically
Transportation And storage	-10 °C to +60 °C / 15 %RH to 85 %RH / 800 hPa to 1060 hPa
Operating conditions	+10 °C to +40 °C / 15 %RH to 85 %RH / 800 hPa to 1060 hPa
	The time required for Stemoscope PRO LITE to warm from the minimum storage temperature (-25°C) between uses until it is ready for intended use when the ambient temperature is 20°C: 1 hour.
	The time required for Stemoscope PRO LITE to cool from the maximum storage temperature (70°C) between uses until it is ready for intended use when the ambient temperature is 20°C: 1 hour.


### 1.3. Signs and symbols

	Follow operating instructions
	Indicates the manufacturer of the unit, including manufacturer's name and address
	The device must be disposed of properly when it will no longer be used. Dispose medical waste based on local regulations and comply with applicable laws.
	Indicates the Batch Code
	Attention, see instructions for use
	MR Unsafe
	Bluetooth

## 1.4. Package contents



Stemoscope PRO  
LITE  
x1

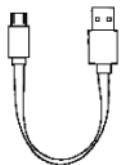

Charging cable  
x1



Quick start guide  
x1

## 2. Hardware identification



The **switch** in the left position is the OFF state. Slide the switch to the right to start Stemoscope PRO LITE.

The **diaphragm** makes contact with the human body to pick up body sounds.

To charge Stethoscope PRO LITE, plug one end of the **charging cable** into the **charge port** and another end to a UL-certified USB charger (not provided in the package).

The device status can be identified by the **notification light**.

Notification light	Device status
Pulsing (smoothly fading in and out)	Waiting for Bluetooth connection.
Blinking	Connected but not transmitting sound.
Consistently on	Connected and transmitting sounds.
Off	The battery is fully charged if the device is turned off and being charged.
	Out of battery power if the device is turned on.

### 3. Basic steps to listen to the sounds

Here are the basic steps for you to use Stemoscope PRO LITE.

**Step 1.** Open the “DrStemo” app. If you haven’t installed the “DrStemo” app, please search and install it from Apple’s App Store or Google’s Play Store.



The “DrStemo” App

The app user interface is customized for medical professionals and lay users. **The first time you use the app, you will be asked to set your role. Please choose the right one, because a wrong choice can prevent you from using the device correctly.** If you want to change later, you need to re-install the app.


The app needs to read the QR code on the diaphragm of your Stemoscope PRO LITE as shown in the picture below. Just follow the simple

steps to register.



Find the QR code on your Stemoscope PRO LITE

After registration, you will see the home user interface as shown below. This user interface shows that there is no Stemoscope PRO LITE connected yet. Before Stemoscope PRO LITE is connected, the “listen” button is not active.

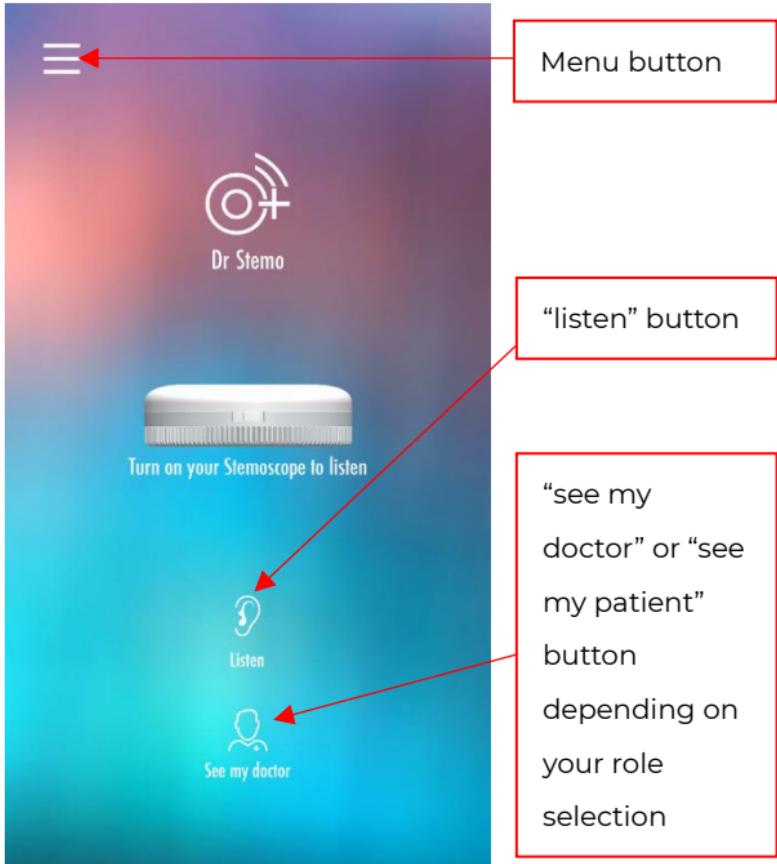

## Home user interface before Stethoscope PRO LITE is connected


**Step 2.** Slide the switch button of Stethoscope PRO LITE to the right. The notification light will start to smoothly fade in and out and the app will start to search for and connect to the Stethoscope

PRO LITE. When the Stemoscope PRO LITE is connected, the notification light of the Stemoscope PRO LITE will blink. **Bluetooth pairing in the phone settings is NOT needed.**

The home user interface will be updated once connected. The “listen” button will start to animate. The battery power level of the Stemoscope PRO LITE is displayed. When the power is low, please charge it timely. You can press the doctor/patient button to make a video call to your doctor/patient if you have access to the cloud service.

**Step 3.** Press the “listen” button in the app to start listening. The “listen” user interface is customized for non-medical professionals and medical professionals respectively. The “listen” user interface has three themes: “video,” “heart,” and “lung”. You can listen to the sounds in any of these three themes. **Internal phone speakers are not good at playing body sounds that have many low-pitched components. Therefore, please use high quality earphones (either wired or Bluetooth) to listen.** Even if you just want to record the sounds,


you may use earphones to monitor the sounds (for example, holding Stethoscope PRO LITE stable can give better quality). Please consult your doctor on where to listen and record.

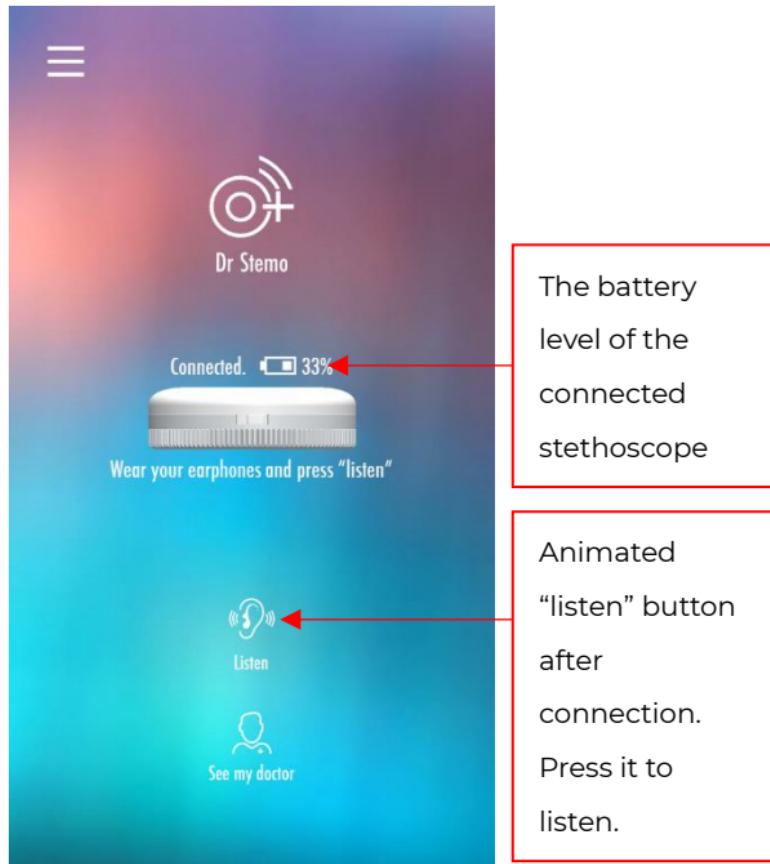

Home user interface (after Stethoscope PRO LITE is connected)

Battery power level

Bluetooth signal strength

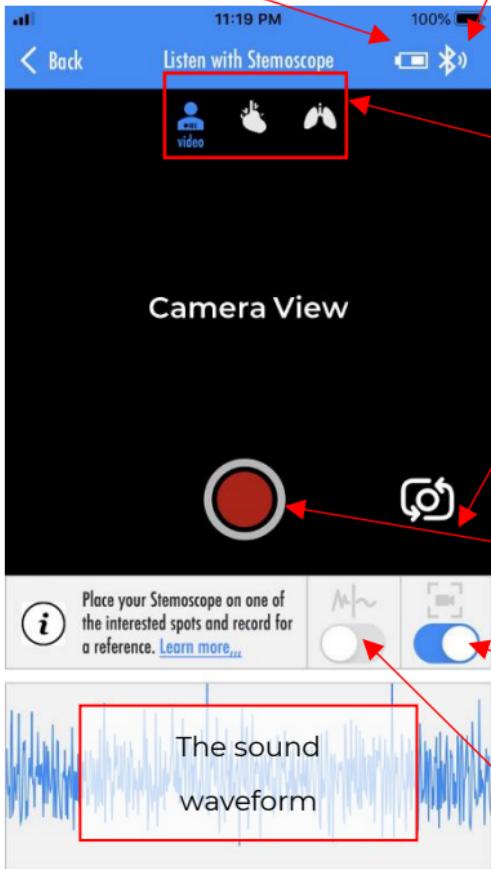

The “video” theme of the “listen” user interface


4. Record a video composed of the auscultatory sounds and the camera view

You can use the “video” theme of the “listen” user interface to record a video composed of the video showing where Stemoscope PRO LITE is placed and the sounds transmitted from this Stemoscope PRO LITE. Sounds from different body spots may have different characteristics, so it is critical to know what part of the body emitted those sounds. A video can record the sounds and associated location of the Stemoscope PRO LITE. When you do the recording, please make sure the location of the Stemoscope PRO LITE can be determined in the camera view. For example, a doctor may determine the spot based on its relative location to the neck. Using the “video” theme for recording is the preferred recording option if you are not sure about the correct spots for listening.

5. Record the sounds on a predefined body spot

Besides the “video” theme in the “listen” user interface, there are another two themes: “heart”

and “lung,” providing some predefined spots to save heart sounds and lung sounds respectively. The following picture shows the “heart” theme. You can place Stemoscope PRO LITE on one of the body spots shown in this user interface and press the corresponding “red dot” recording button to record the corresponding sounds. You may choose to screen record so that the sounds and the waveform displayed on the screen can be composed into a single video file. To do so, toggle on the screen recording option button before you press the “red dot” recording button. **When you look at the picture that shows the interested body spots (red dots), pay attention to the orientation of the human body marked with right-hand side and left-hand side.** Make sure you do not mix the left and the right of the human body where the Stemoscope PRO LITE is placed.

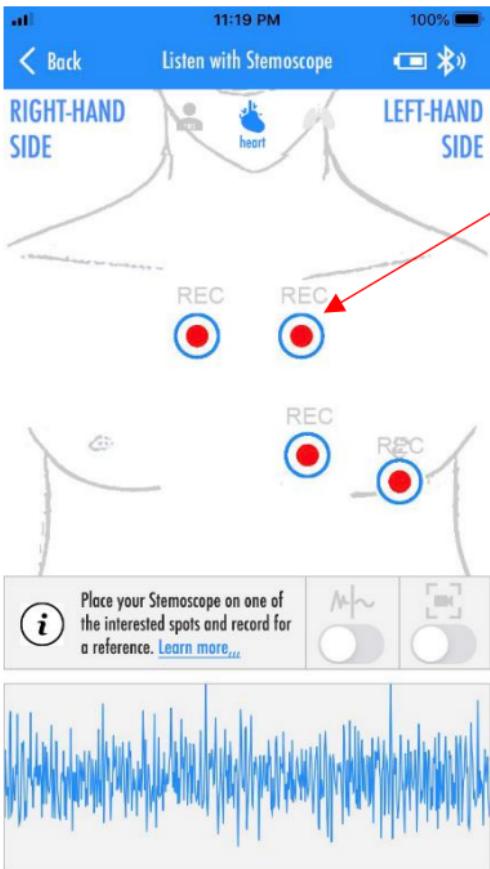

Record button.

Place your device on one of the heart listening spots and press this button to record the sound associated with this location.

The “heart” theme of the “listen” user interface

## 6. More features for medical professionals


Two extra features were provided in the “listen” user interface for medical professionals. Medical professionals sometimes need to filter the sounds

for better interpretation or record the sounds from some body spots that are not commonly used.

- Choose Stethoscope PRO LITE frequency modes

The auscultatory sounds can be filtered in three different frequency modes: bell mode, diaphragm mode, and extended range mode respectively. The following table shows the frequency ranges of these modes.

The **Bell mode** emphasizes the low frequency sound, which makes the major part of normal heart sounds, while the **Diaphragm mode** weakens the low frequency sounds, which may reduce the interference of heartbeat when you listen to the lung sounds. The **Extended range mode** covers the whole frequency range from 20-2000 Hz. You may switch among these modes based on your preference. We don't make recommendations on what frequency mode should be used.

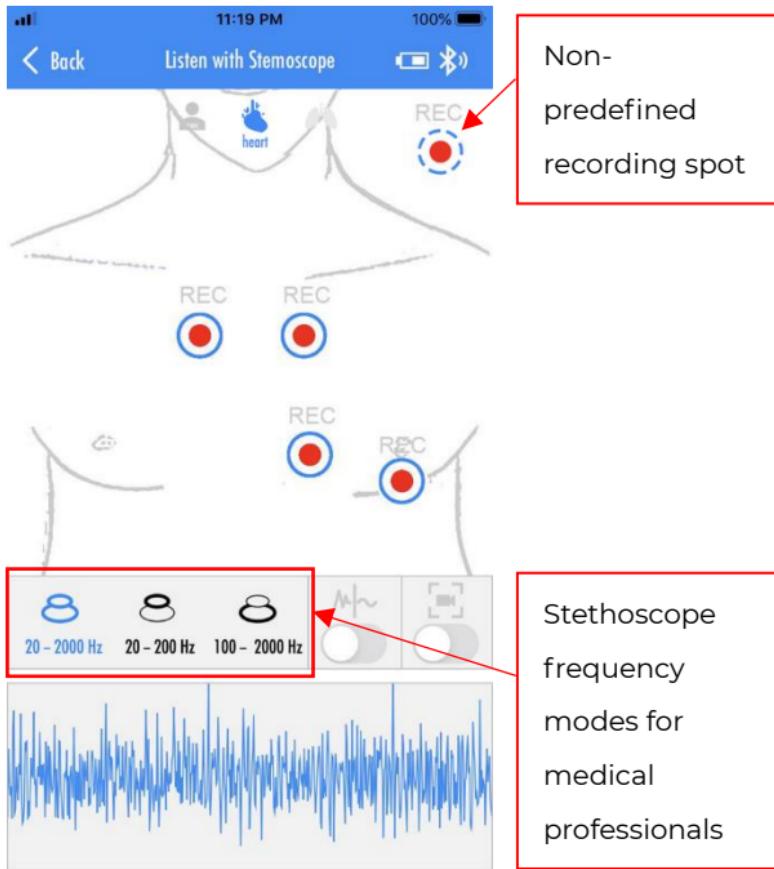

## Extra features for medical professionals in the “listen” user interface

- Record on non-predefined auscultation spots

If you want to record the sounds emitted from the body spots other than those predefined red dots, you can use the non-predefined recording spot button. After you record, you can add some notes to describe the spot when you save the audio.

## 7. Live stream the auscultatory sounds

As a part of premium cloud services, the app lets a patient make a video call with a doctor, and in the video call the patient can livestream the sounds of the Stemoscope PRO LITE to the doctor. During the video call, the doctor can instruct the patient on where and how to place Stemoscope PRO LITE so that the doctor can listen to the desired spots of the patient's body remotely. Here is the process flow.

Step	Doctor	Patient
1		Both the doctor and the patient install the app and the patient has a Stemoscope PRO LITE.
2		The doctor adds the patient as a contact or vice versa. The one who receives the invitation email needs to accept the invitation.
3		The doctor and the patient schedule the call

	offline.	
4	On the scheduled call time, the doctor opens the app, enters the “livestream” user interface, finds the patient’s name in “my patients,” and presses the patient’s name to call.	Before the scheduled call starts, the patient switches on Stemoscope PRO LITE and connects it to the app. Enter “livestream” and then the “waiting room” page in the app to wait for the call.
5	The doctor talks with the patient in the video call. The doctor can ask the patient to start or stop Stemoscope PRO LITE sound transmission.	The patient talks with the doctor in the video call. The patient follows the doctor’s instructions on the use of Stemoscope PRO LITE.
6	Hang up the call when the session is completed.	

The doctor can ask the patient to register an account for the video call function if the patient

has not done that. To add a contact, the doctor needs to press “livestream” in the home user interface, and then on the “livestream” page, press the button on the top left to enter the invitation page. Type the email address that your patient used for the video call account registration and an invitation email will be sent to this email address. Please remind your patient to accept the invitation by clicking the link in the invitation email.


Several minutes before the scheduled time and date, the patient needs to open the app and enter the “waiting room” page after pressing the “livestream” button in the home user interface as shown below. The patient needs to make sure the status is ONLINE. If it is OFFLINE, a “log on” button will show up and the patient can press it to go ONLINE.

	ONLINE. You can make and receive a call.
	OFFLINE. You might not make or receive a call.

The doctor needs to enter the “my patients” page after pressing the “livestream” button in the home

user interface as shown below. On the “my patients” page, the doctor needs to make sure the status is ONLINE. If it is OFFLINE, a “log on” button will show up and the patient can press it to go ONLINE. The doctor can see if a patient is online. If the patient to call is OFFLINE, the doctor may fail to call the patient. In case this happens, contact the patient to check if the patient is in the “waiting room” of the app. The doctor needs to call the patient to initiate the video call. The patient does not have the option to call the doctor.

Once the doctor calls the patient and the patient successfully accepts the call, the video call user interface will show up. The doctor and the patient can speak to as well as see each other.

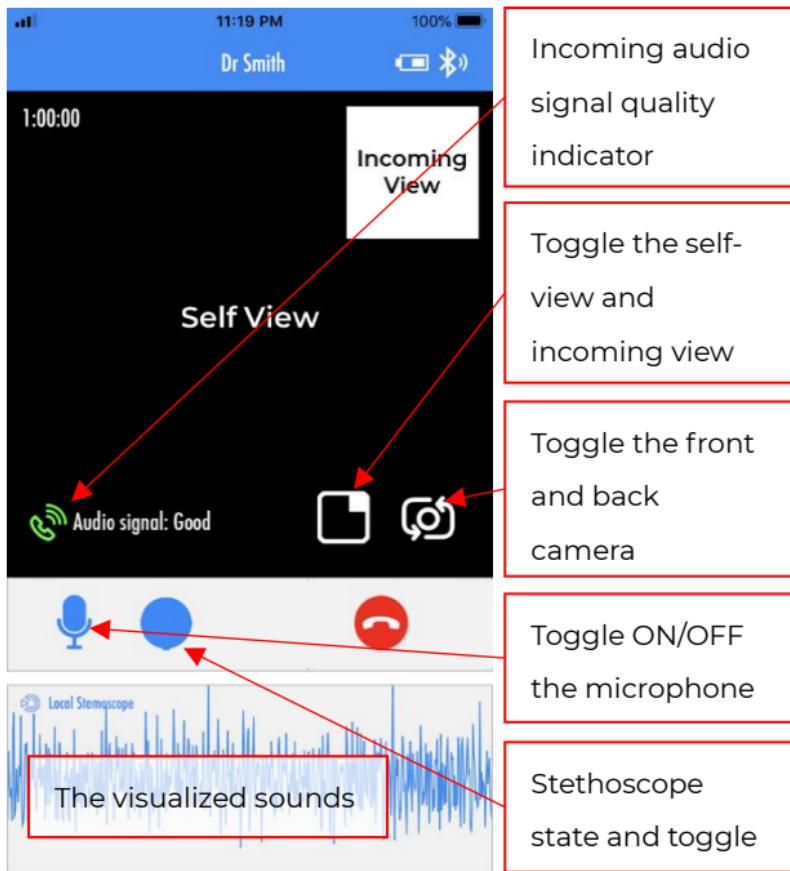

### The video call user interface

If the video call is disconnected for some reason, to reconnect, the doctor needs to call the patient because the patient cannot call the doctor.

If you feel the audio quality is not good, please do not livestream the sounds of the Stethoscope PRO

LITE because the sounds of the Stemoscope PRO LITE can be damaged. You can learn the audio signal quality by looking at the audio signal quality indicator and the associated texts. Here is the list of signal quality indicators and their meaning.

	Audio signal receiving quality is good.
	Audio signal receiving quality is bad.
	Audio signal receiving quality is very bad.

By default, the sounds of the Stemoscope PRO LITE are not transmitted even if the Stemoscope PRO LITE is connected. You need to press the button to start or stop transmission if a Stemoscope PRO LITE is connected. Here is the list of the statuses of the Stemoscope PRO LITE.

	No Stemoscope PRO LITE is connected.
	Stemoscope PRO LITE is connected but not transmitting audio. Press it to start transmission.
	Stemoscope PRO LITE is transmitting audio. Press it to stop transmission.

When the sound of the Stemoscope PRO LITE is being transmitted, the doctor may ask the patient to mute the microphone. The patient can toggle the microphone button.

	Microphone is toggled on. Press to toggle off.
	Microphone is toggled off. Press to toggle on.

**It is recommended that both sides wear earphones for the video call.**

## 8. Share (send) a recording

A recording can be shared or sent in two ways: share the audio or video files or share through the cloud service.

After you record an audio or a video, you can choose to share/send an audio file or a video file or both. To do so, in the “recorded sounds” user interface after the recording was finished, press the “share” button  at the top right corner. All the recordings can also be found: “Home user interface” -> “menu button on the top left” ->

“history”.

If you use the “DrStemo” app as a non-medical professional user and use the premium cloud service, you can save the data online and share the data with your doctors.

## **9. Care, cleaning, and disinfection**

The stethoscope should be wiped clean and disinfected with 70% isopropyl alcohol wipes. DO NOT immerse the device in any liquid or subject it to any high-pressure/autoclave sterilization processes.

## **10. Data security**

When using the “DrStemo” App, enable device and networking security features to protect your data or patient data that is created and stored using this software, in addition to security features embedded in the system. Update to the latest version of the “DrStemo” App.

## 11. Trouble shooting

Symptom	Possible cause	Solution
The notification light is consistently OFF when the device is switched ON.	Out of battery power. Hardware malfunction.	Charge Stemoscope PRO LITE before use. Contact customer service.
Can't connect to a smartphone.	Permissions are not given to the mobile app. Smartphone compatibility issue. Other issue.	Open the app → Settings → Search for STEMO-700, check if right permissions have been allowed. If not, please allow and try again. Find another phone or tablet to try again. Contact customer service.
The sounds	Earphones	Internal speaker is

are not sufficiently loud.	are not used.	not good at playing body sounds. Please use earphones to listen.
	The phone volume is set low.	Please increase the phone volume. Body sounds are mainly composed of low-pitched sounds that are less audible. Higher volume is needed than that for other sounds such as music.
	Earphones compatibility with the smartphone.	Please check if your earphones are loud in listening to other sounds on this phone. Try another set of earphones or another smartphone to confirm.

## 12. Electrical Safety

Guidelines and manufacturer's declaration - electromagnetic emissions		
This STEMO500 stethoscope is expected to be used in the following electromagnetic environment. The purchaser or user should ensure that it is used in this electromagnetic environment:		
Emissions test	Compliance	Electromagnetic environment - guidance
RF emissions CISPR 11	Group 1	The STEMO500 stethoscope uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.
RF emissions CISPR 11	Class B	The STEMO500 stethoscope is suitable for use in all establishments other than domestic and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
Harmonic emissions IEC 61000-3-2	Not applicable	
Voltage fluctuations / flicker emissions IEC 61000-3-3	Not applicable	

Guidelines and manufacturer's declaration - electromagnetic immunity			
This STEMO500 stethoscope is expected to be used in the following electromagnetic environment. The purchaser or user should ensure that it is used in this electromagnetic environment:			
Immunity test	IEC 60601 test level	Coincidence level	Electromagnetic environment - guide
Electrostatic discharge (ESD) IEC 61000-4-2	± 8 kV contact ± 2 kV, ± 4 kV, ± 8 kV, ± 15 kV air	± 8 kV contact ± 2 kV, ± 4 kV, ± 8 kV, ± 15 kV air	Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30 %.

Electrostatic transient / burst IEC 61000-4-4	± 2 kV for power supply lines 100 kHz repetition frequency  ± 1 kV for input/output lines	Not applicable	
Surge IEC 61000-4-5	± 0.5 kV, ± 1 kV, Line-to-line  ± 0.5 kV, ± 1 kV, ± 2 kV Line-to-ground	Not applicable	
Voltage dips, short interruptions and voltage variations on power supply input lines IEC 61000-4-11	0 % UT; 0.5 cycle At 0°, 45°, 90°, 135°, 180°, 225°, 270° and 315° 0 % UT; 1 cycle And 70 % UT; 25/30 cycles Single phase: at 0°	Not applicable	
Power frequency (50/60 Hz) magnetic field IEC 61000-4-8	30 A/m	30 A/m	Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or hospital environment.

Note: UT refers to the AC network voltage before the test voltage is applied.

Guidelines and manufacturer's declaration-electromagnetic immunity			
This STEM0700 stethoscope is expected to be used in the following electromagnetic environment. The purchaser or user should ensure that it is used in this electromagnetic environment:			
Immunity test	IEC 60601 test level	Coincidence level	Electromagnetic environment - guide
Conducted	3 Vrms	Not	Portable and mobile RF

RF IEC 61000-4-6	150 kHz to 80 MHz	applicable	communications equipment should be used no closer to any part of the product, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter. Recommended separation distance $PVd]5.3$ [ $1 = PED]5.3$ [ $1 = 80$ MHz to 800 MHz $PED]7$ [ $1 = 800$ MHz to 2.5 GHz where $p$ is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer and $d$ is the recommended separation distance in metres (m).b Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey, a should be less than the compliance level in each frequency range. b Interference may occur in the vicinity of equipment marked with the following symbol: 
Radiated RF IEC 61000-4-3	3 V/m 80 MHz to 2.7 GHz	3 V/m 80 MHz to 2.7 GHz	

Note 1: At central frequency of 80 MHz and 800 MHz, the formula for higher frequency band shall be used.

Note 2: These guidelines may not be suitable for all situations. Electromagnetic propagation is affected by absorption and reflection from buildings, objects, and humans.

- a. Fixed transmitters, such as base stations for wireless (cellular/cordless) phones and terrestrial mobile radios, service radios, AM and FM radio broadcasts, and TV broadcasts, of which the field strength cannot be accurately predicted in theory. In order to assess the electromagnetic environment of fixed radio frequency transmitters, electromagnetic field surveys should be considered. If the measured field strength of the place where this product is located is higher than the above applicable RF compliance level, the product should be observed to verify that it can operate normally. If abnormal performance is observed, supplementary measures may be necessary, for example, reorienting or relocating the product.
- b. In the entire frequency range of 150 kHz ~ 80 MHz, the field strength should be lower than [3] V/m.

**Recommended isolation distance between portable or mobile RF communication equipment and this product**

This STEM0500 stethoscope is expected to be used in an electromagnetic environment where RF radiation disturbances are controlled. According to the maximum output power of the communication equipment, the purchaser or user can prevent electromagnetic interference by maintaining a minimum distance between the portable or mobile RF communication equipment (transmitter) and the product.

Maximum rated output power of transmitter W	Isolation distance corresponding to different transmitter frequencies / m		
	150 kHz~ 80 MHz $d = 1.2\sqrt{P}$	80 MHz~ 800MHz $d = 1.2\sqrt{P}$	800 MHz~ 2.5GHz $d = 2.3\sqrt{P}$
0.01	0.12	0.12	0.23
0.1	0.38	0.38	0.73
1	1.2	1.2	2.3
10	3.8	3.8	7.3
100	12	12	23

For the maximum rated output power of the transmitter not listed in the above table, the recommended isolation distance  $d$ , in meters (m), can be determined by the formula in the corresponding transmitter frequency column, where  $P$  is the maximum rated output power of the transmitter provided by manufacturer, in watts (W).

Note 1: At central frequencies of 80 MHz and 800 MHz, the formula for higher frequency band shall be used.

Note 2: These guidelines may not be suitable for all situations. Electromagnetic propagation is affected by absorption and reflection from buildings, objects, and human bodies.

Test specifications for ENCLOSURE PORT IMMUNITY to RF wireless communications equipment						
Test frequency (MHz)	Band (MHz)	Service	Modulation	Maximum power (W)	Distance (m)	IMMUNITY TEST LEVEL (V/m)
385	380 – 390	TETRA 400	Pulse modulation 18 Hz	1.8	0.3	27
450	430 – 470	GMRS 460, FRS 460	FM $\pm$ 5 kHz deviation 1 kHz sine	2	0.3	28
710	704 – 787	LTE Band 13, 17	Pulse modulation 217 Hz	0.2	0.3	9
745						
780						
810	800 – 960	GSM 800/900, TETRA 800, iDEN 820, CDMA 850, LTE Band 5	Pulse modulation 18 Hz	2	0.3	28
870						
930						
1720	1700 – 1990	GSM 1800; CDMA 1900; GSM 1900; DECT; LTE Band 1, 3, 4, 25; UMTS	Pulse modulation 217 Hz	2	0.3	28
1845						
1970						
2450	2400 – 2570	Bluetooth, WLAN, 802.11 b/g/n, RFID 2450, LTE Band 7	Pulse modulation 217 Hz	2	0.3	28
5240	5100 – 5800	WLAN 802.11 a/n	Pulse modulation 217 Hz	0.2	0.3	9
5500						
5785						

## 13. FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment should be installed and operated with a minimum distance of 0mm between the radiator and your body.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## 14. Disposal

The device must be disposed properly after they will no longer be used. Dispose medical waste based on local regulations and comply with applicable laws.

## **15. Warranty**

A limited warranty is provided for Stemoscope PRO LITE. Please visit [stemoscope.com/warranty](http://stemoscope.com/warranty) for a full description of the warranty.

## **16. Contact information**