

Prezlock® Pebble Plus

User Manual

www.prezlock.com

Email: cs@innovaideas.com

Product details

1 Shackle	4 Fingerprint Sensor	7 Key x 2*
2 Button	5 Cylinder	8 Type-C Cable
3 LED	6 Type-C Charging port	

* Please keep the code number on the key as record.

Unlock your Pebble+

If you are currently on factory settings, before Master fingerprint is registered, any fingerprint or skin can open the lock.

To unlock by fingerprint, place a finger on the Fingerprint Sensor. When you see a green LED light, simply pull out the shackle to unlock.

To unlock by App, please open the App and turn on Bluetooth and location as required, then press the lock button and LED flashes blue light, pull out the lock shackle to unlock when the LED light turns green.

To unlock by key, insert the key into the cylinder and turn it clockwise by 90 degrees, then pull out the shackle to unlock.

Use Limit

Device operates between -20C to 60C. Exposure to higher or lower temperatures may damage battery or even cause an explosion.

Response time may be slower in low temperatures.

The lock is designed and certified with IP65 weatherproof rating. Do not lay flat the lock allowing water to get into the charging port for a long period of time.

When flying, only put device on carry-on luggage, not on check-in luggage.

Sensor pad is to be cleaned before use if placed outdoor for a long period.

If you touch the fingerprint sensor and a red light blinks continuously for 5 seconds, it means the lock power is low, please recharge the battery.

In order to ensure the designed service life of the lithium battery, please fully charge the lock before first use, and recharge the battery every six months.

Please note that Apple chargers and cables do not work Type C charging on this lock.

Specification	
Lock Model	Pebble Plus
Ways to unlock	Fingerprint , Key or App
Lock release time	About 0.9 second
Weight	About 280 grams
Working temperature	-20C to 60C
Dimension	51 x 100 x 24 mm
Shackle clearance	23 x 27 mm
Shackle hole diameter	8 mm
Case and shackle material	Alloy metal / Steel
Locking Mechanism	Double Ball Bearing
Number of fingerprint storage capacity	Up to 100
Fingerprint detection	360° detection
Sensor lifespan	1 million fingerprint senses
Battery capacity	Rechargeable battery of 300mAh
Battery life	6 months per charge or about 3,000 unlocks
Charger	5 V / 1 A
USB Port	Type-C
Full charging time	About two hours

Specification				
Portable battery pack charging compatibility	Compatible with portable battery pack charging			
Compassing Fingerprint sensor specification	Size	14mm diameter		
	Sensor array	160 x160 Pixels		
	Spatial resolution	508 DPI		
	FRR	<1%		
	FAR	< 0.001%		
	ESD	+/- 15KV air +/- 8KV contact		
Bluetooth version	Bluetooth4.0			
Operating system	iOS 11 or above Android 6.0 or above			
Functions of App				
<p>The app is compatible with iOS, Android OS operating systems and connects to the lock via Bluetooth. Users can unlock the lock through the app, add fingerprints, delete fingerprints, share access with other users to unlock with the App, rename the lock, OTA update firmware, and view unlock history.</p> <p>Each lock can add up to 100 fingerprints.</p> <p>The APP is not used for a period of time, the memory of the lock will record only the latest switching lock records at most. If you use the APP to unlock, the unlock records will be transmitted to the APP and uploaded to the server for updates and storage.</p>				

1. Download and install App

id users, search for "Prezlock" through Google Play. For Apple users, search for through the APP Store. Or scan the following QR code to download app.

1. Click the app

Account

ime user, please
ate Account"
er an account.

2.2 Follow instructions to fill in information.

2.3 Log in to the account after successful registration.

2.4 Press button, flashes

ELOCK

Log in

Create Account

Forgot Password?

Continue

Log In

Forgot Password?



Remember Password

Continue

PREZLOCK

2. Add locks

“+” sign in **2. Select the “Pebble Plus” lock picture.** **3. Enter Lock Name, then click “Add”**

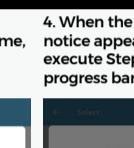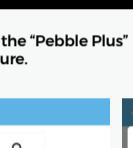

4. When the following notice appears, please execute Step 5 before progress bar timeout.




the lock and the LED blue light.

6. If the app fails to connect the lock, press the lock button again to reconnect.



7. The following prompt indicates that the lock has been successfully added. Click “Cancel” to exit or click “Continue” to add fingerprints.

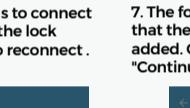

3. Add fingerprints

1. Click the “+” sign and input the Master User's name to add the fingerprint.

2. Select the finger, click “Continue” to record the fingerprint.

3. When the following notice appears, please execute Step 5 before progress bar timeout.

4. Press the lock button, and the LED flashes blue light.

5. If the app fails to connect the lock, press the lockbutton again to reconnect.

6. When the LED blue light turns into fast blinking, place your finger on the sensor at once with 6 touches in total, the LED turns green showing a successful input.

PS. To add fingerprints for ADDITIONAL users, click the “+” sign in the upper right corner of the app, create a new user name, then repeat above steps 1 to 6.

4. Unlock By key ang fingerprint

1a

Correct
Error

2

To unlock by fingerprint, place your finger on the Fingerprint Sensor, until you see a green LED light.

1b

Pull out the shackle to unlock.

To unlock by key, insert the key into the cylinder and turn it clockwise by 90 degrees.

5. Unlock By App

1. Open the APP.



2. Press the lock button, and the LED flashes blue light.




3. If Auto Unlock is off, tap the green unlock icon of the APP (as shown below). If Auto Unlock is on, go to step 4.




4. When the green unlock icon of the APP turns blue, it means to be unlocked. Press step 5 to unlock.




5. Pull out the shackle to unlock.

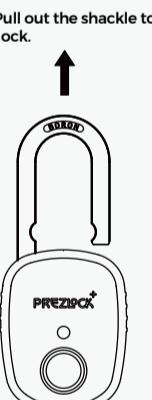

Description of function interface

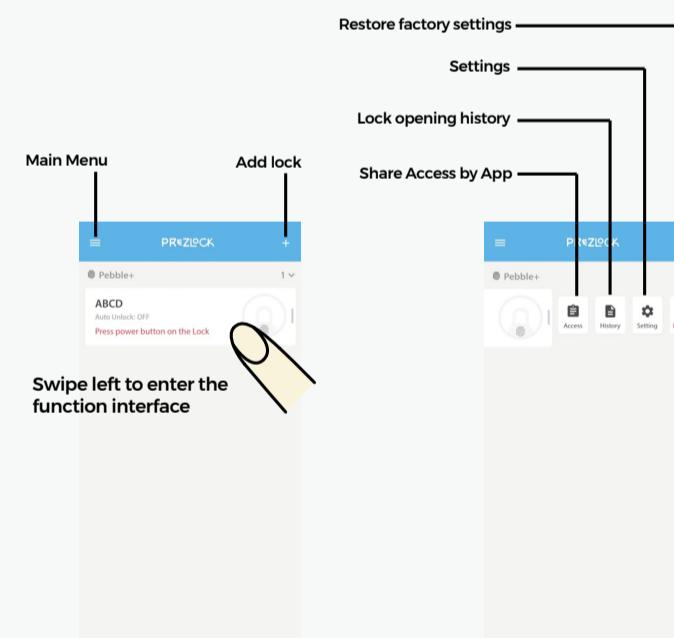

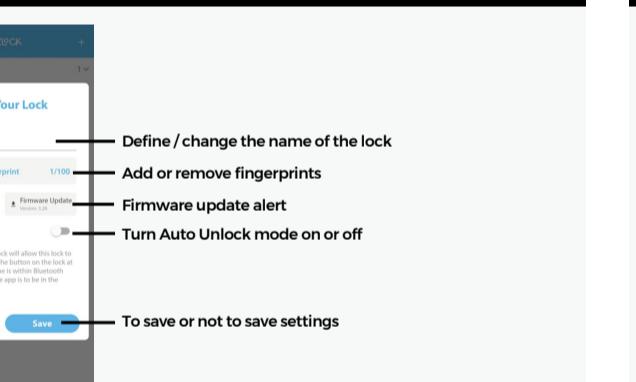

Setting

1. Click the **Set Up Your Lock** in the App

Define / change the name of the lock


Add or remove fingerprints

Firmware update alert

Turn Auto Unlock mode on or off

To save or not to save settings

Main of APP

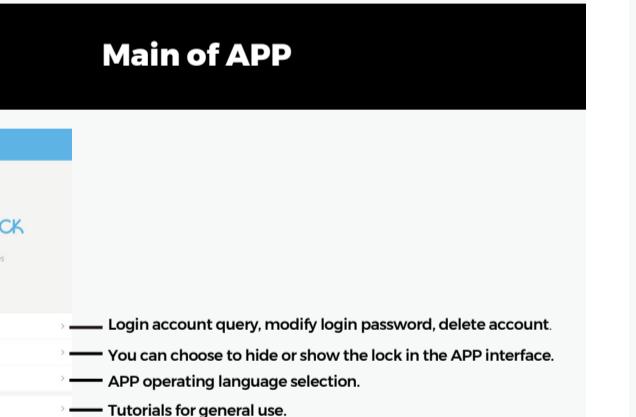

4. Click "Logout". When the lock will be factory settings. Note: All will be deleted.

- Account Setting
- Display Locks
- Language
- Tutorial
- Logout

>Login account query, modify login password, delete account.

You can choose to hide or show the lock in the APP interface.

APP operating language selection.

Tutorials for general use.

Exit the current login.

Restore factory settings

remove icon

2. Prompt, please execute step 3 before the progress bar timeout.

3. Press the lock button, and the LED flashes blue light.

Lock is not found
Press power button on lock

PRIZLOCK

PRIZLOCK

Remove
Do you want to remove the padlock from your account?
Cancel Continue

A diagram of the Prezlock Fingerprint Lock. The lock is a rectangular device with a circular fingerprint sensor in the center. Above the sensor, the word 'PREZLOCK' is printed. To the right of the sensor is a small circular button. Below the sensor is a vertical strip of vertical lines. A USB cable is connected to the bottom of the lock. To the right of the lock is a legend: a red square labeled 'Charging' and a green square labeled 'Fully Charged'.

IC and FCC Caution