


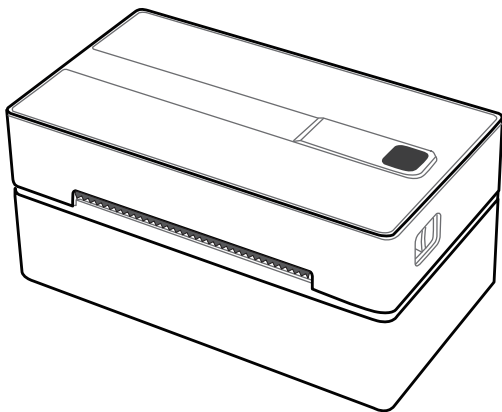


PeriPage Shipping Label Printer

INSTRUCTION MANUAL

Model: ALD-PB400

Product Sketch

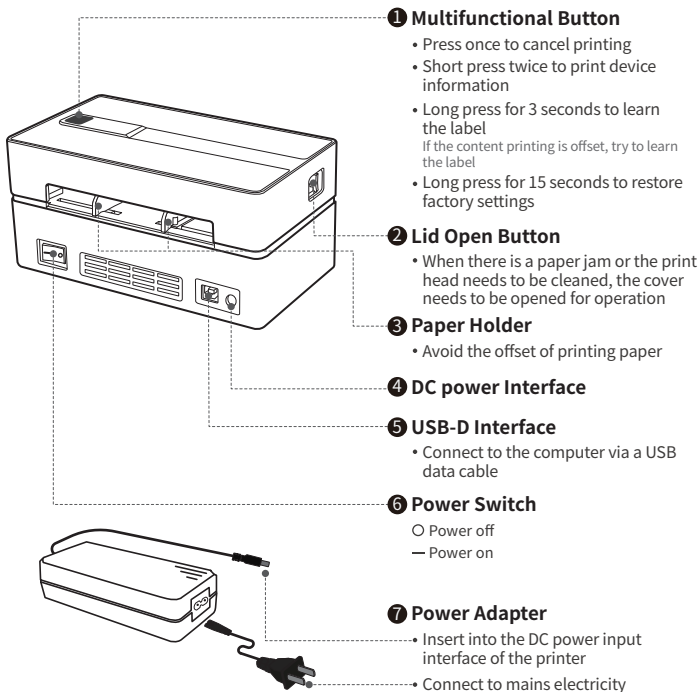


Indicator Light Status Introduction

- White light stays on: Normal startup
- Blue light stays on: Bluetooth is connected
- Green light stays on: USB is connected
- Red light stays on: Cover is open / Overheating
- Red light flashing quickly: Print cancelled, data is being destroyed

Computer Printing

- 1 Turn on the power of the printer and start it. Connect the printer and the computer with the original USB data cable.
- 2 Insert the randomly gifted USB drive into your computer, and install the appropriate printer driver according to your computer's operating system. Alternatively, visit the official website at <https://www.ileadtek.com/en/download.html> to download and install the corresponding driver for your system.
- 3 After the driver installation is completed, when printing a document on the computer, select this printer to print.

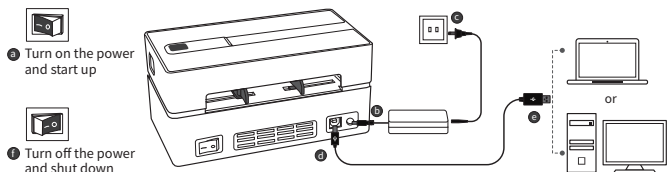

App Printing

Step 1: App Download

Please search for [PeriPage] on Google Play or App Store, or scan the following QR code to download the App.




App Download




Video Guide

Step 2: App Connection for Printing


- 1 Turn on the power of the printer and start it.
- 2 Open the [PeriPage] App, enter the device connection interface, and click to connect the printer that is searched. Or press the power button twice shortly to print the QR code and connect the printer by scanning the code.
(Note: Please do not search for and connect the printer's Bluetooth in the Bluetooth settings of your mobile phone.)
- 3 After the printer is connected, open the functional modules provided by the App to operate Bluetooth printing.

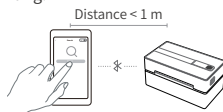


Installation of Label Paper

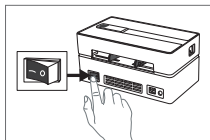

① Turn on the printer

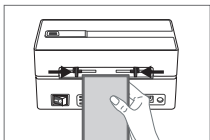


② Adjust the paper holder

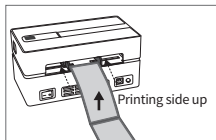


③ Insert the paper until it is automatically pulled in

Learning of Label Paper


If the printed content is misaligned, please try re-calibrating the label paper.

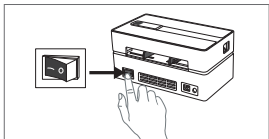


① Turn on the printer

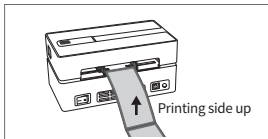

② Load the paper

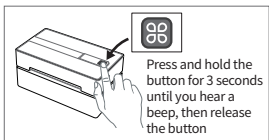


③ Learn the label

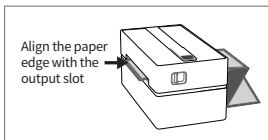


④ Learning complete

Paper Holder

Please adjust the position of the paper holder according to the width of the label paper to prevent it from shifting and ensure proper alignment of the printed content.

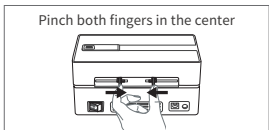


① Shrink the Paper Bin

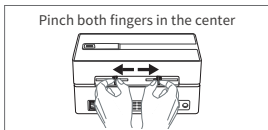

② Enlarge Paper Bin

Clean the Printer Head

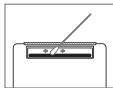

- ① Please turn off the printer and open the printer cover and take out the paper.
- ② Dip a cotton cloth or cotton swab with medical alcohol, and wipe gently along the center to the periphery of the printer head.
- ③ After cleaning the printer head, do not use the printer immediately. Please wait for 1 to 2 minutes, use the printer after the alcohol has completely evaporated.

Attention



Attention! The paper tearing blade has sharp edges, please be careful not to touch it to prevent cutting.



Attention! Hot parts! After printing, do not print the head directly to prevent overheating and scalding. Turn off the power and wait for half an hour to print the head.



This product must be used under adult supervision.

Information to User

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important

Change or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



Xiamen iLead Tek Co., Ltd.
Unit 2101, No.50 Chengyi North Street,
Software Park Phase III, Xiamen, Fujian, P.R.C

☎ www.ileadtek.com

✉ service@ileadtek.com

☎ (+86)400-8550-520

V1.0