





## Test Graphs

## Freq. Stability NVNT a 5500MHz Ant1

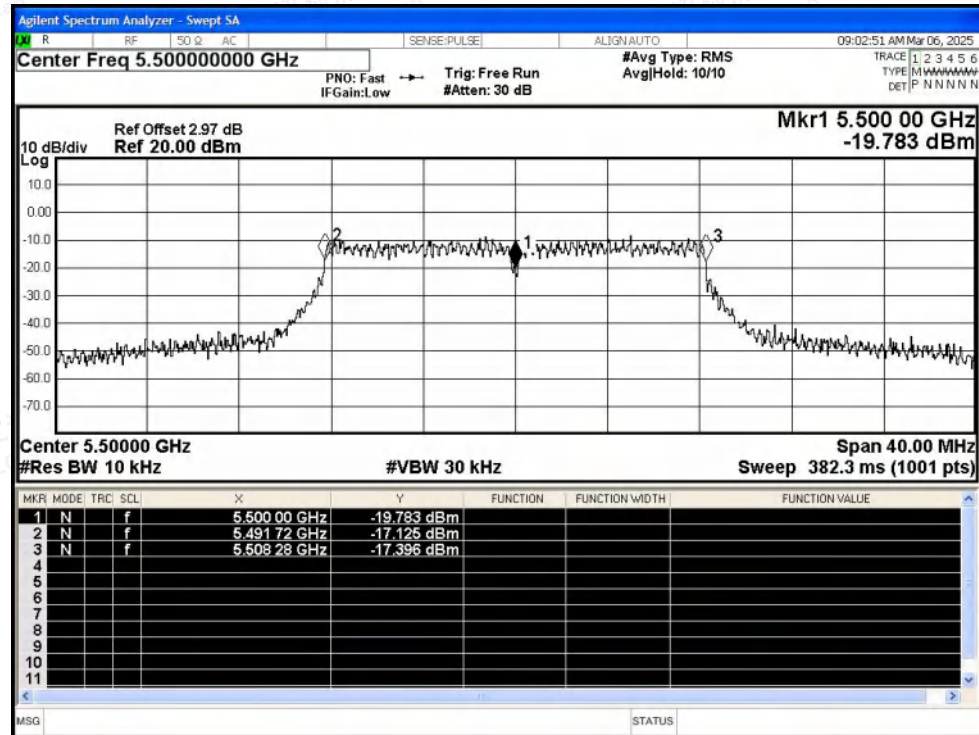


## Freq. Stability NVNT a 5580MHz Ant1

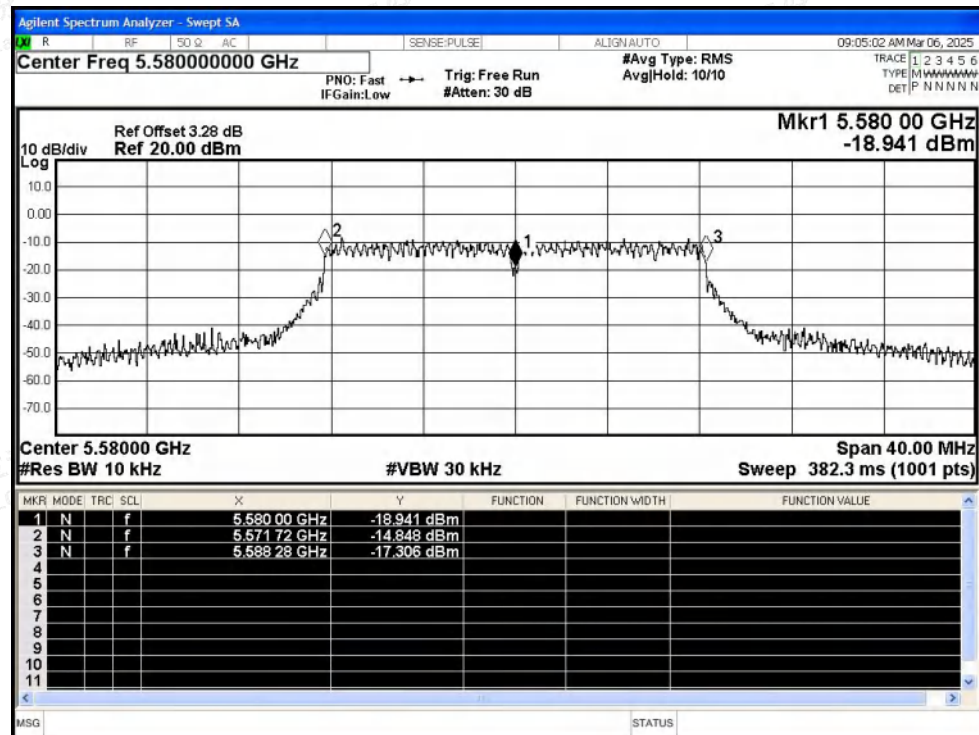




## Freq. Stability NVNT a 5700MHz Ant1

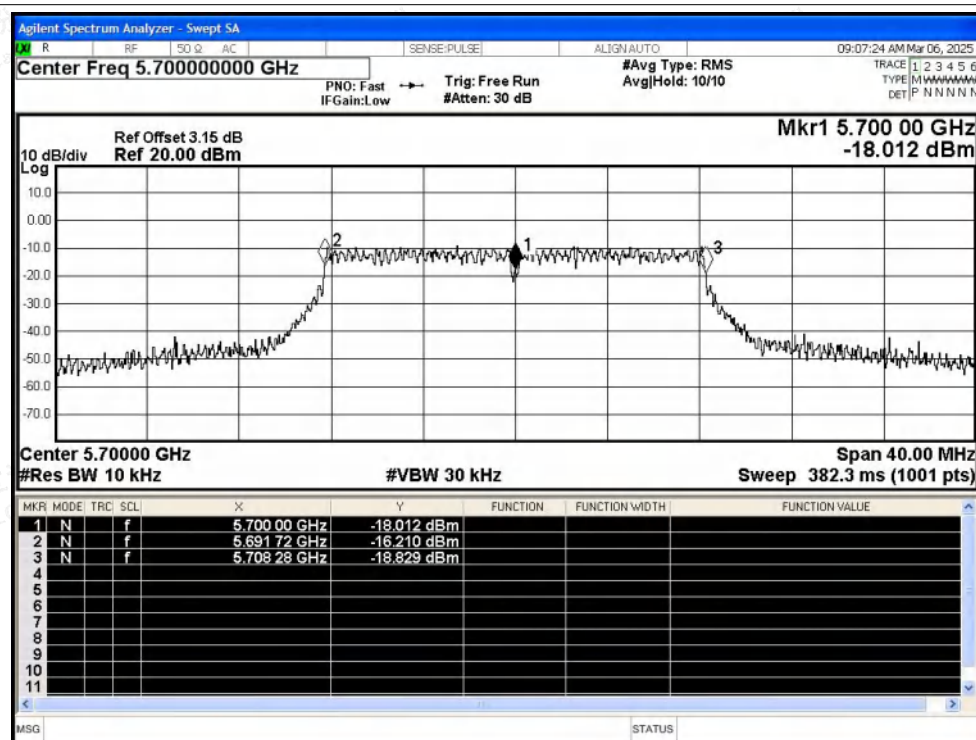

## Freq. Stability NVNT n20 5500MHz Ant1

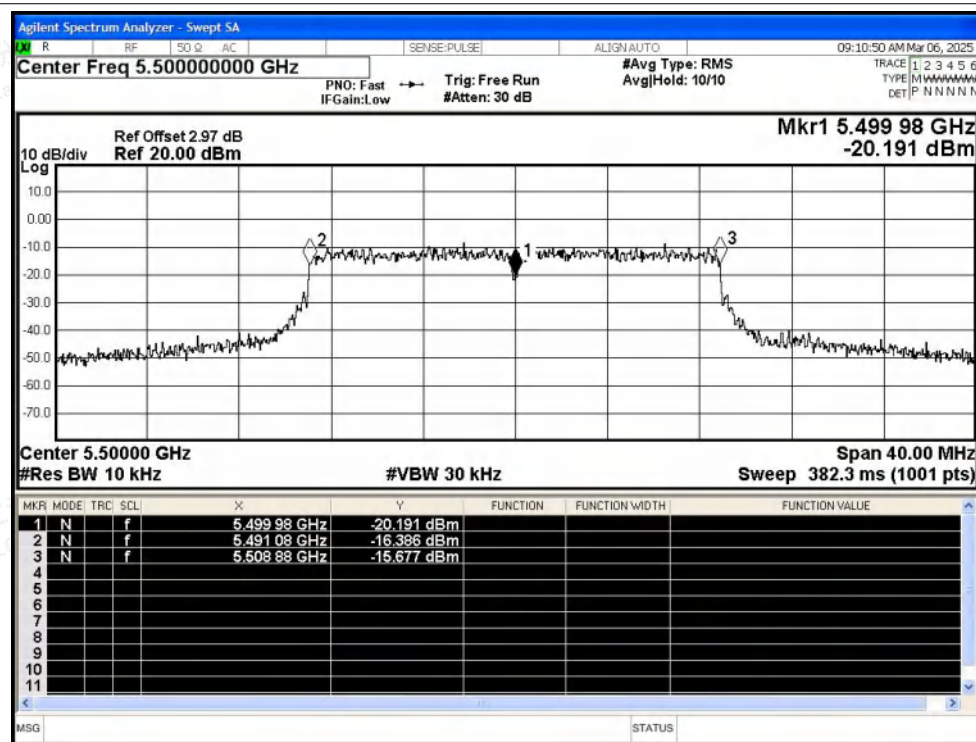

Shenzhen LCS Compliance Testing Laboratory Ltd.


Add: 101, 201 Bldg A &amp; 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China

Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com


Scan code to check authenticity



## Freq. Stability NVNT n20 5580MHz Ant1

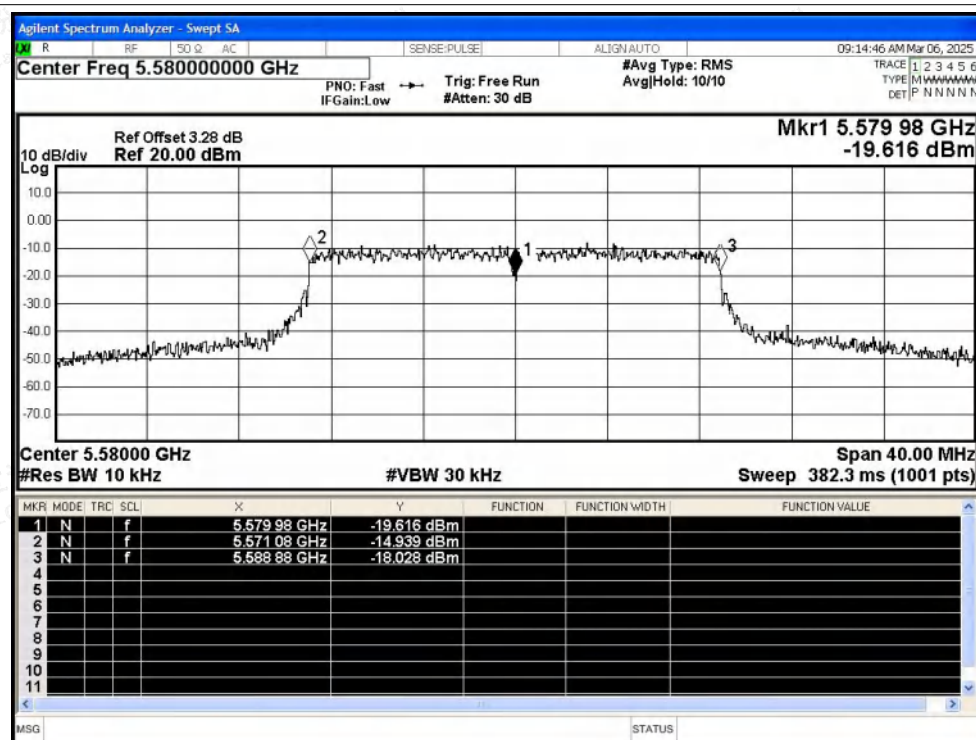


## Freq. Stability NVNT n20 5700MHz Ant1

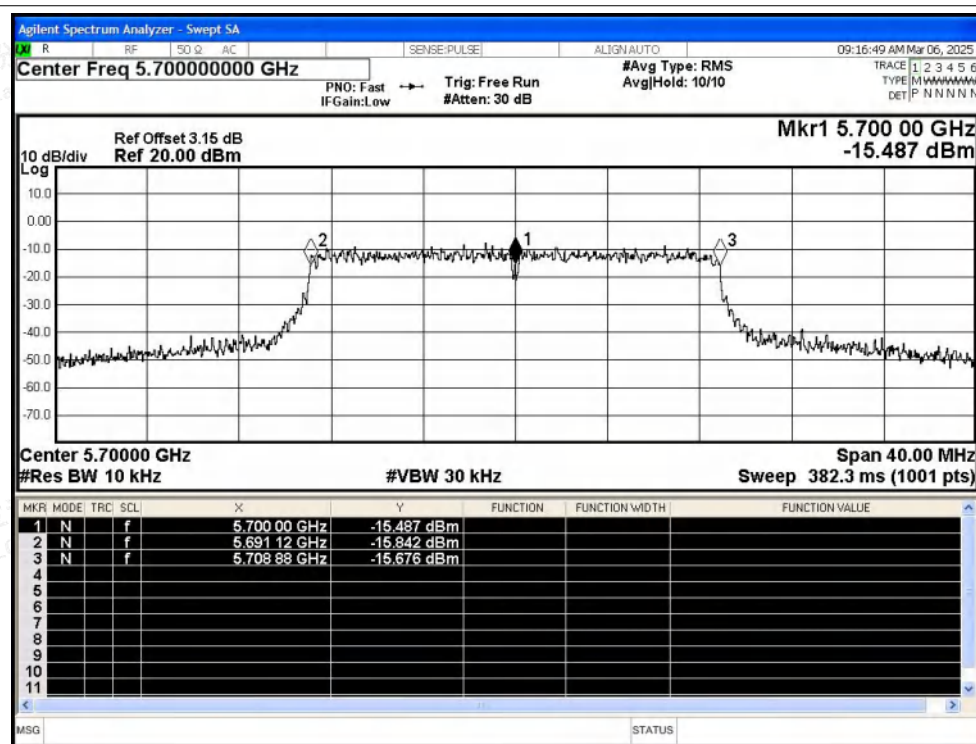




## Freq. Stability NVNT n40 5510MHz Ant1

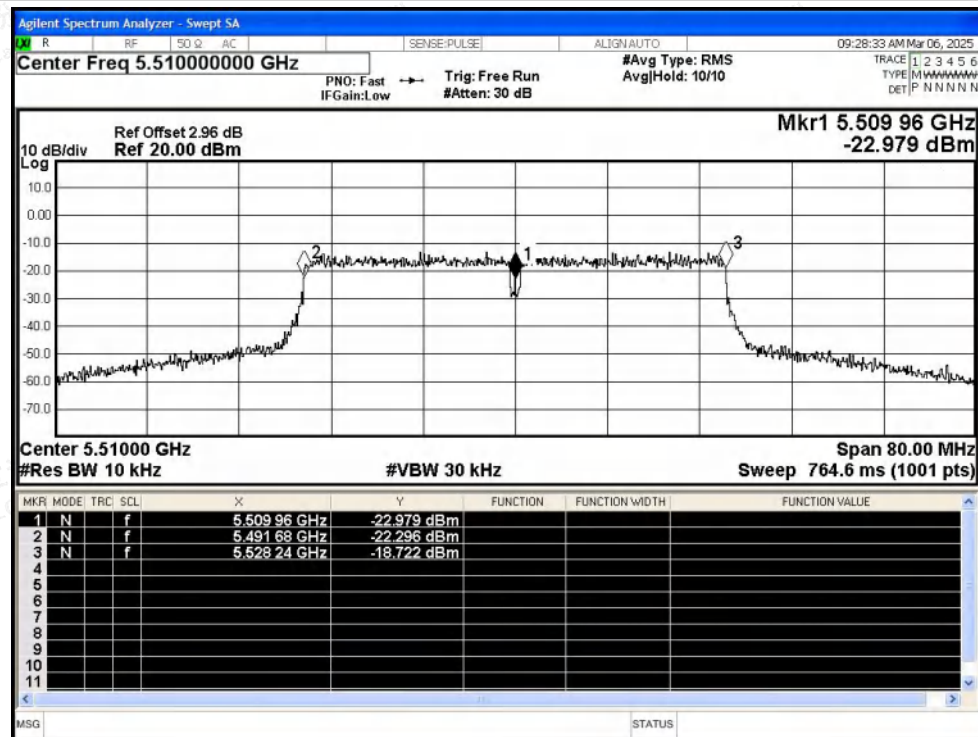


## Freq. Stability NVNT n40 5550MHz Ant1

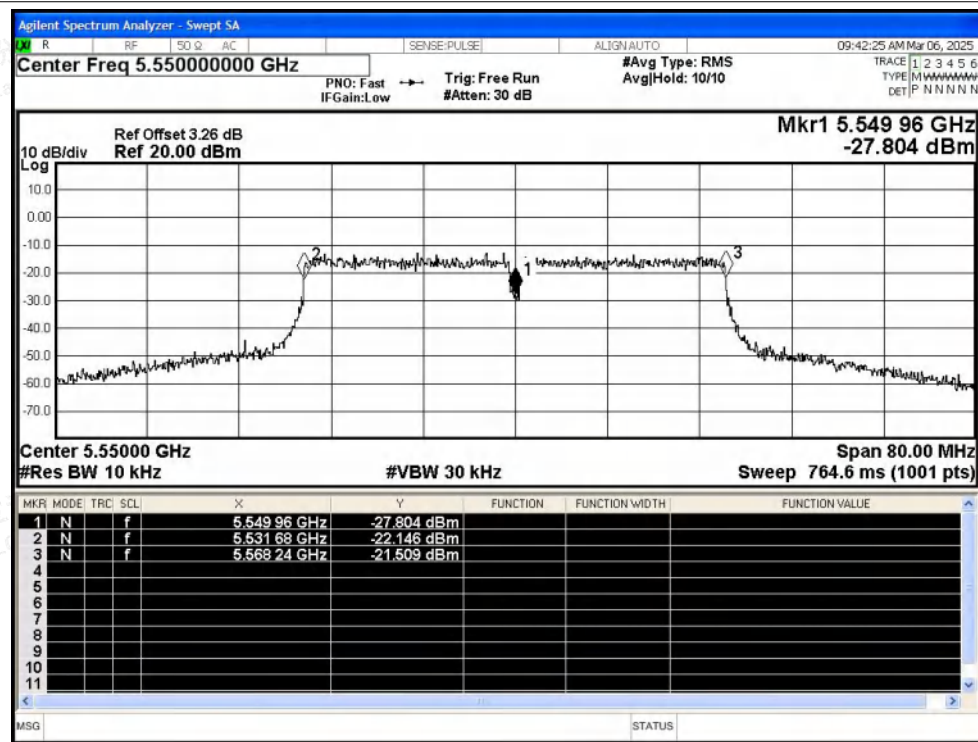




## Freq. Stability NVNT n40 5670MHz Ant1

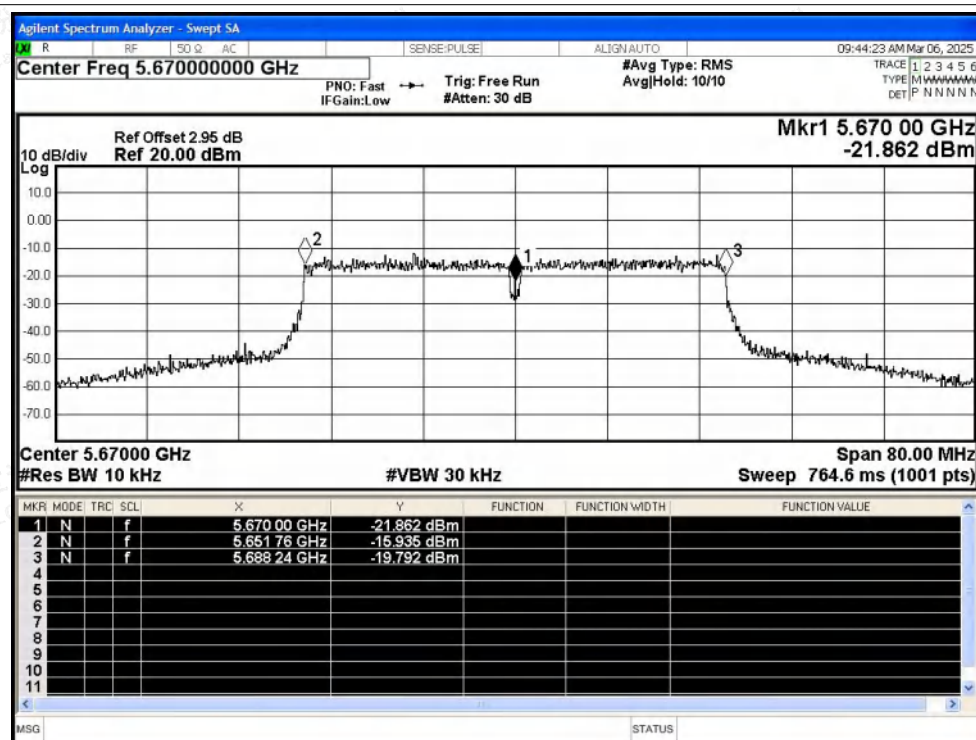

## Freq. Stability NVNT ac20 5500MHz Ant1

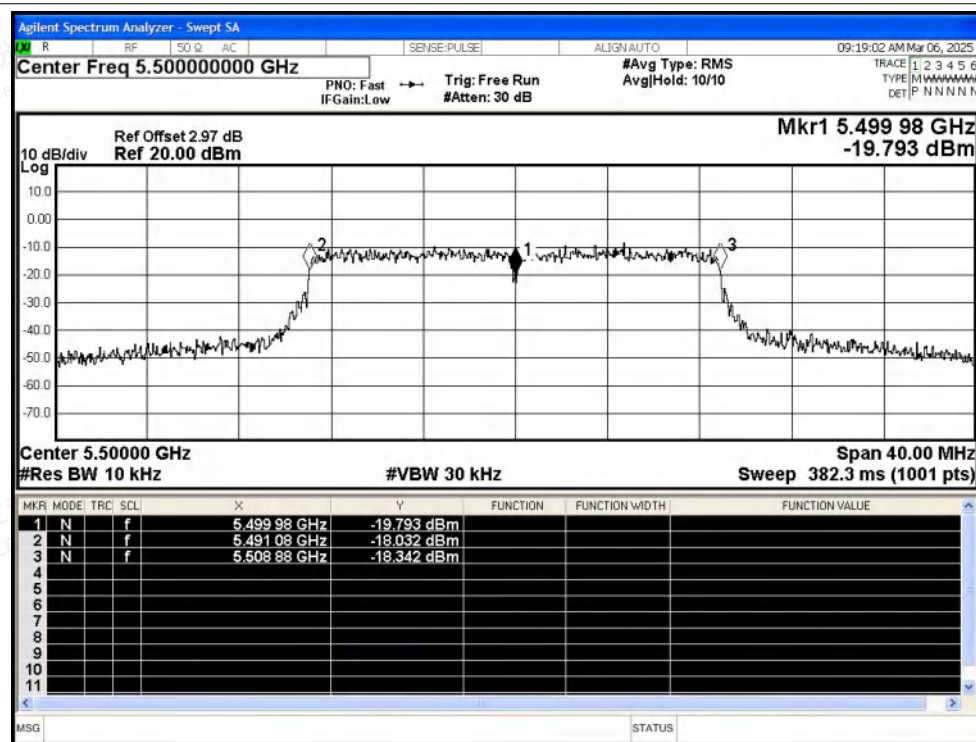

Shenzhen LCS Compliance Testing Laboratory Ltd.


Add: 101, 201 Bldg A &amp; 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China

Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com


Scan code to check authenticity



## Freq. Stability NVNT ac20 5580MHz Ant1

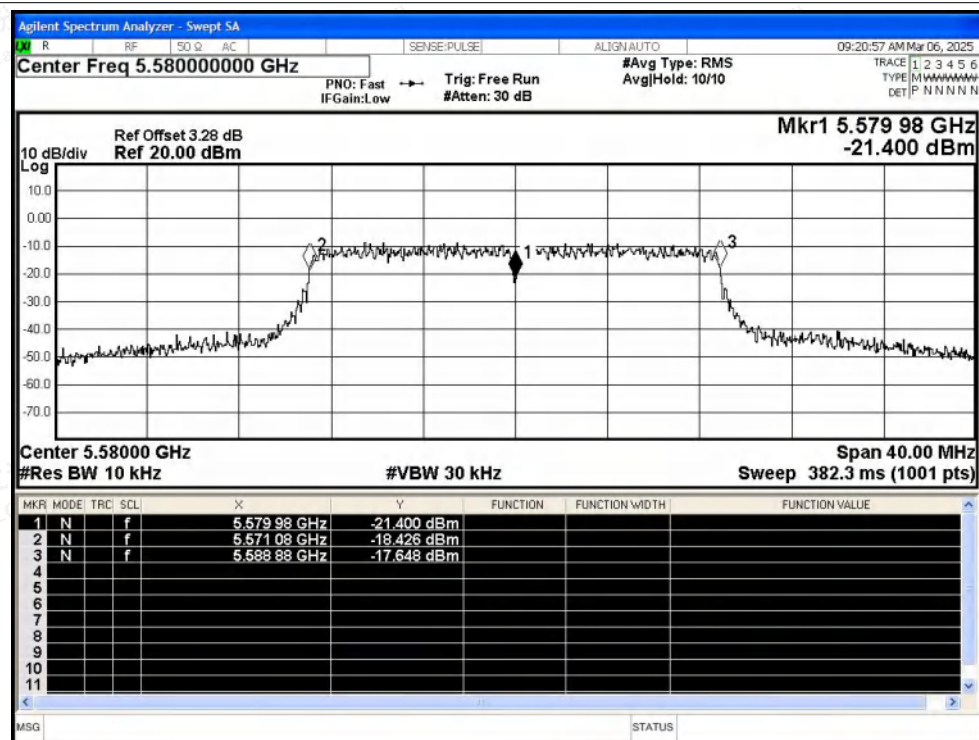


## Freq. Stability NVNT ac20 5700MHz Ant1

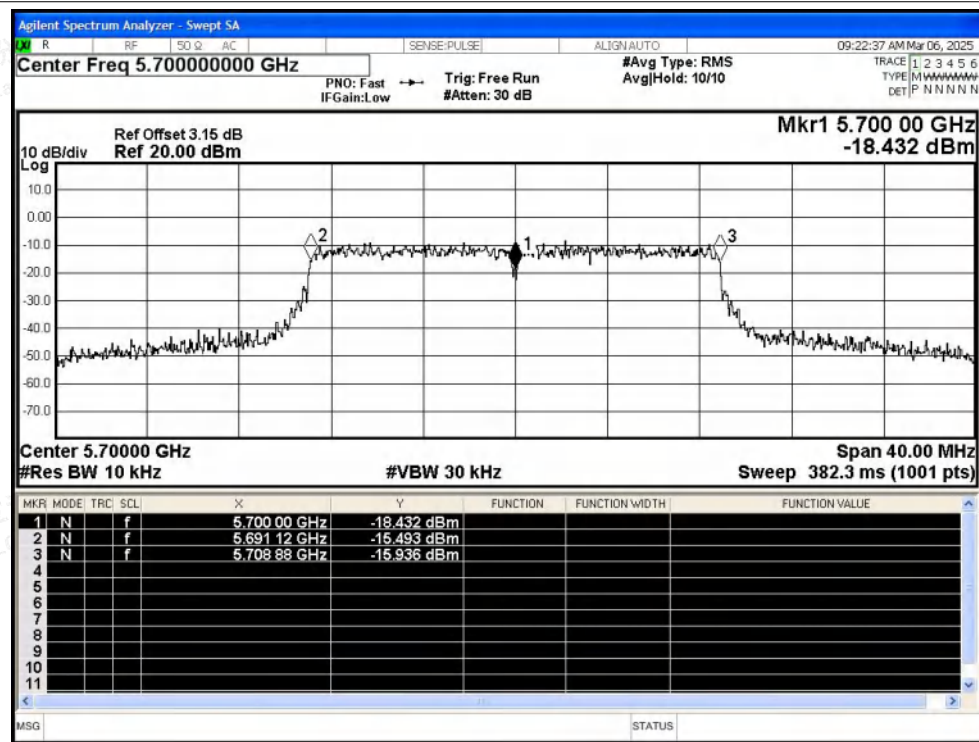




## Freq. Stability NVNT ac40 5510MHz Ant1

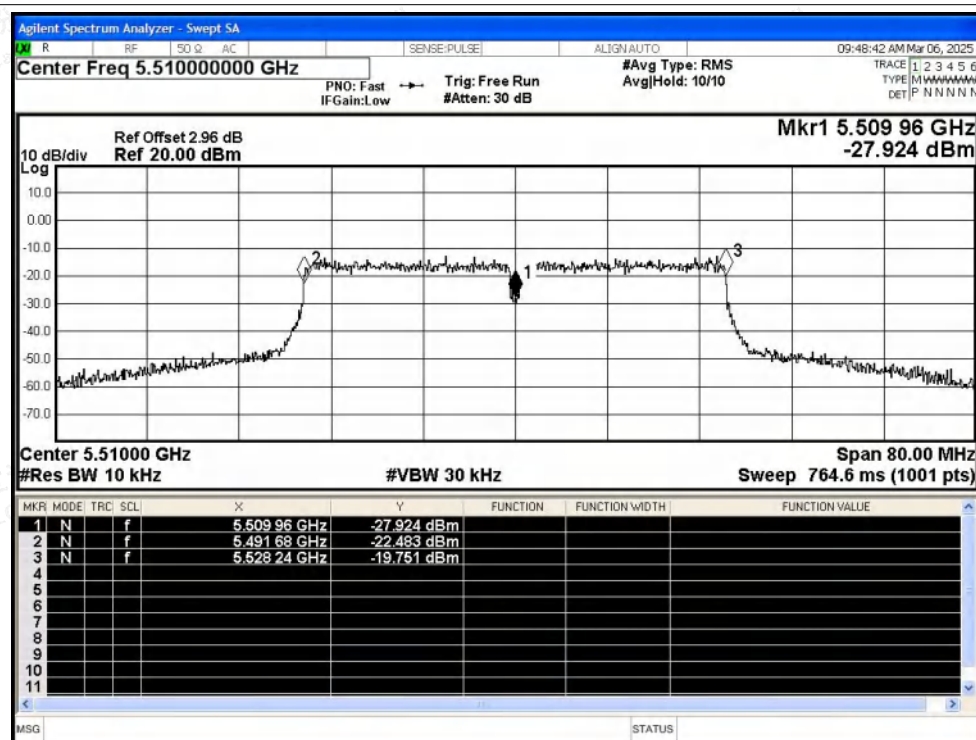


## Freq. Stability NVNT ac40 5550MHz Ant1

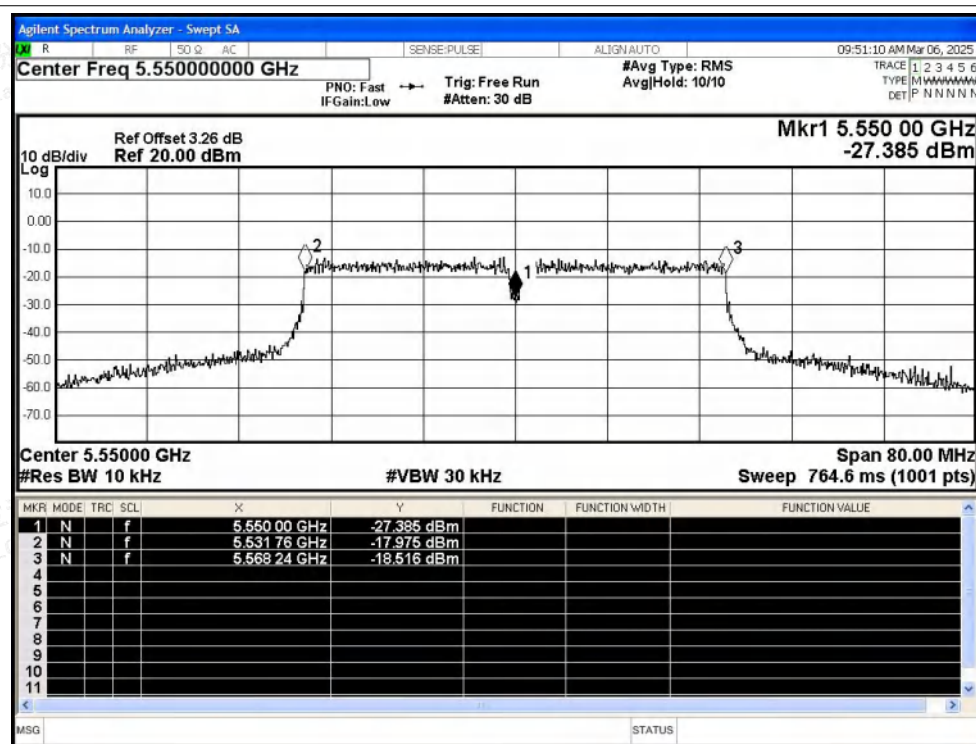




## Freq. Stability NVNT ac40 5670MHz Ant1

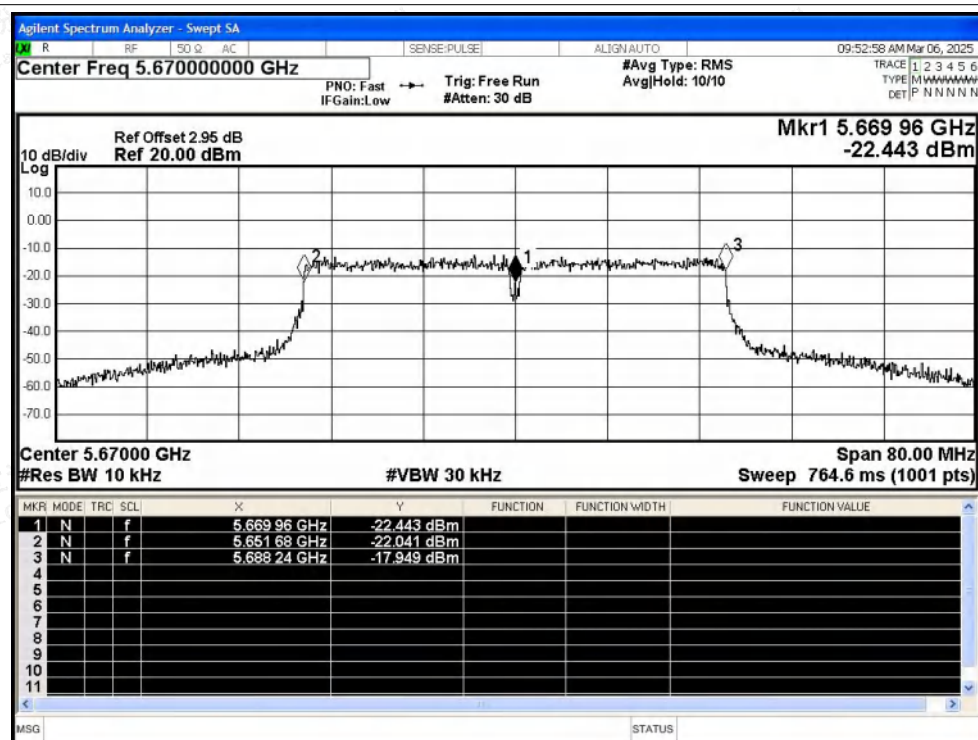


## Freq. Stability NVNT ax20 5500MHz Ant1

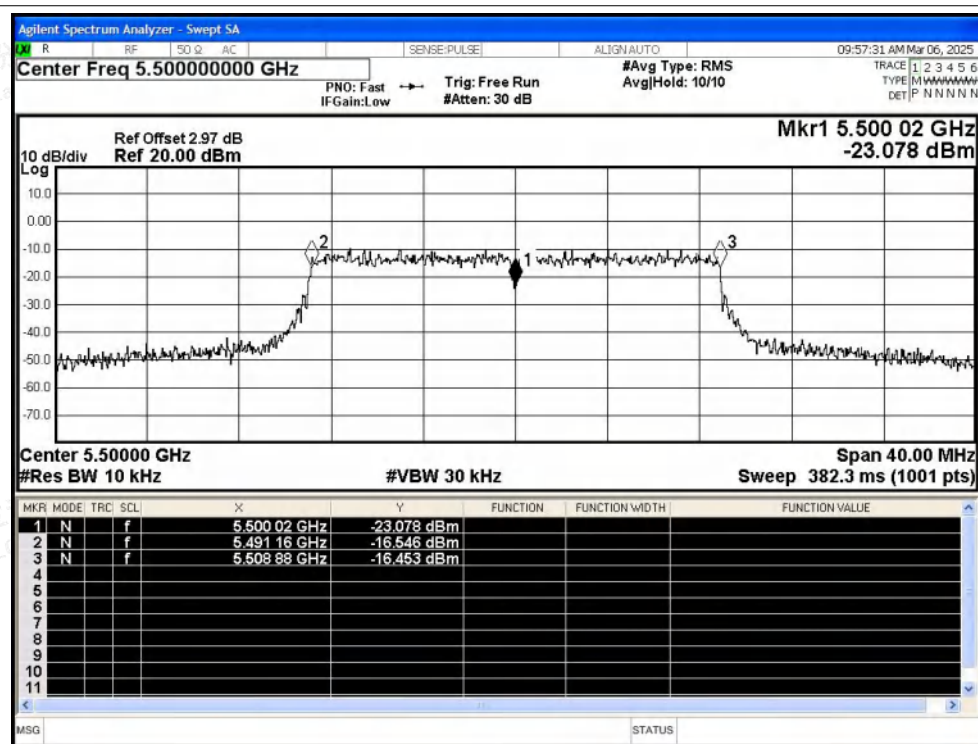




## Freq. Stability NVNT ax20 5580MHz Ant1

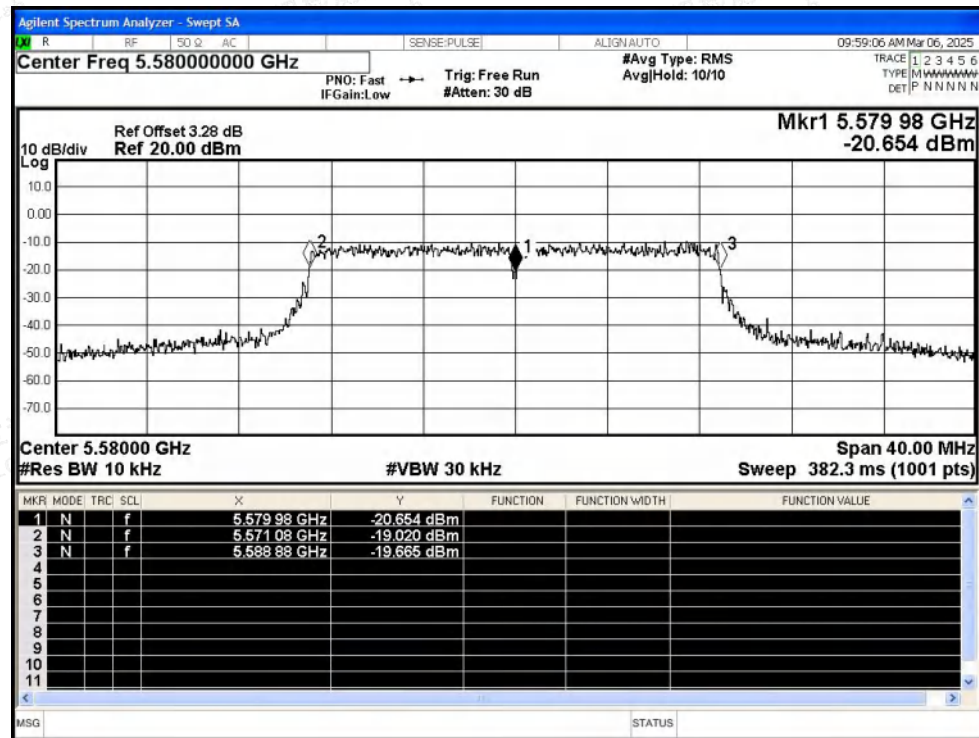


## Freq. Stability NVNT ax20 5700MHz Ant1

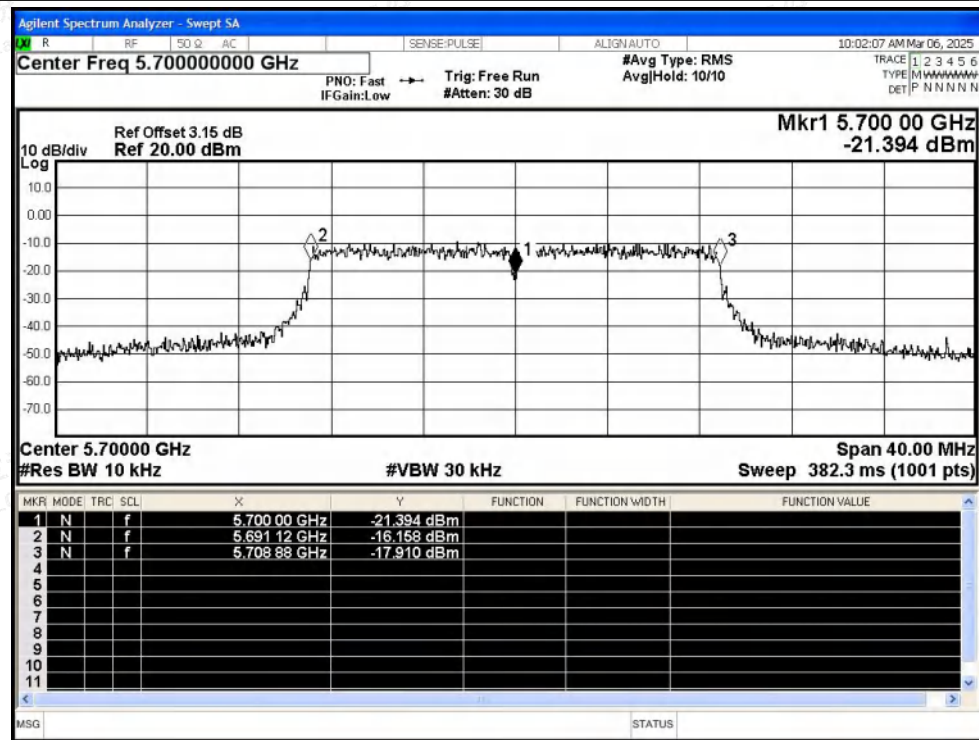





## Freq. Stability NVNT ax40 5510MHz Ant1

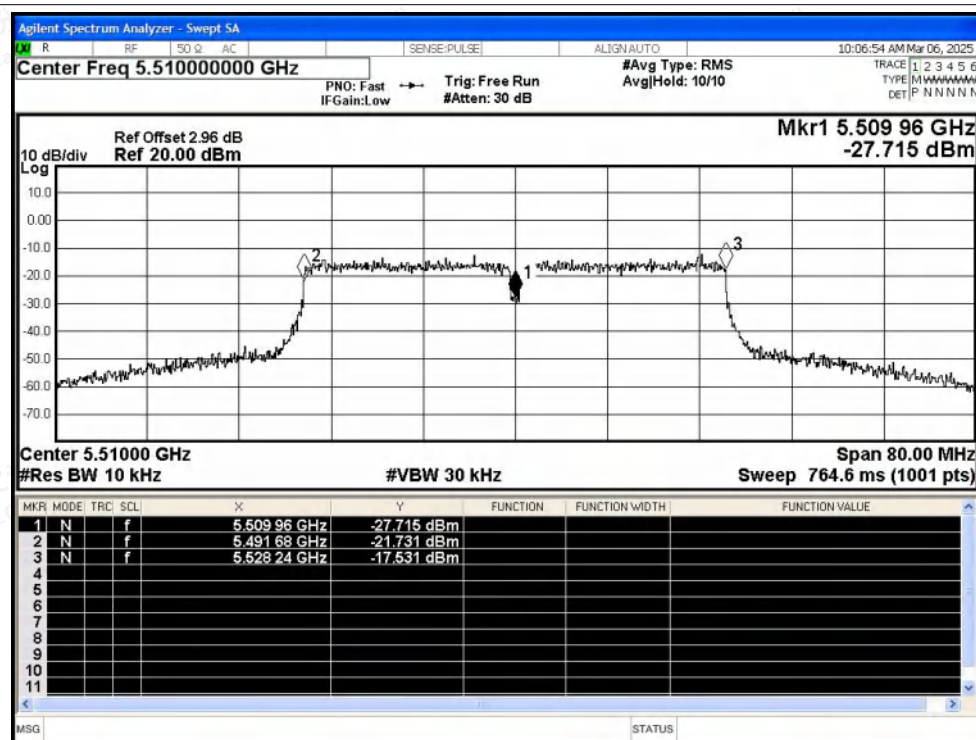

## Freq. Stability NVNT ax40 5550MHz Ant1

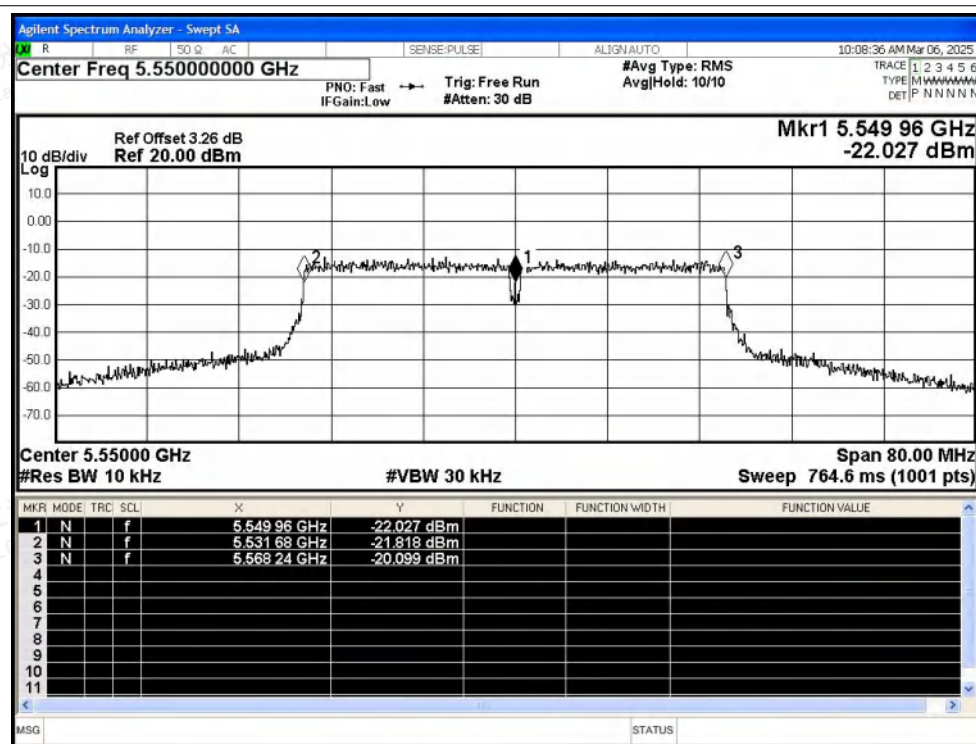

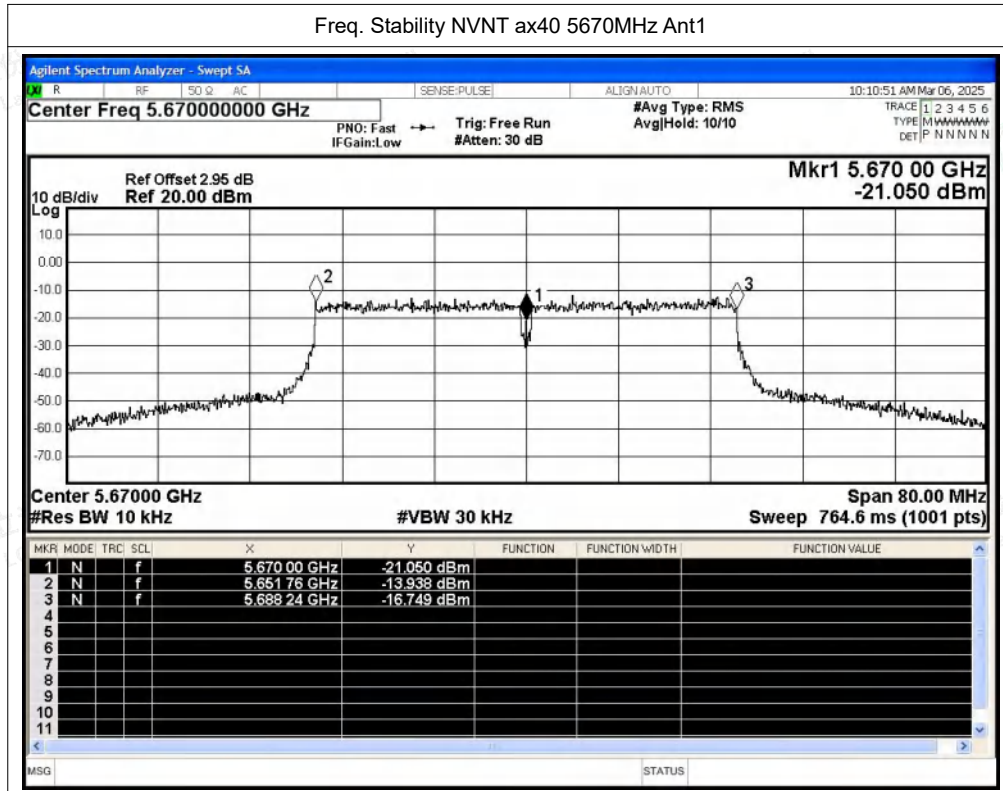



## F.6 Duty Cycle


| Condition | Mode | Frequency (MHz) | Antenna | Duty Cycle (%) | Correction Factor (dB) | 1/T (kHz) |
|-----------|------|-----------------|---------|----------------|------------------------|-----------|
| NVNT      | a    | 5500            | Ant1    | 94.56          | 0.24                   | 0.91      |
| NVNT      | a    | 5580            | Ant1    | 94.65          | 0.24                   | 0.91      |
| NVNT      | a    | 5700            | Ant1    | 94.56          | 0.24                   | 0.91      |
| NVNT      | n20  | 5500            | Ant1    | 93.77          | 0.28                   | 1.07      |
| NVNT      | n20  | 5580            | Ant1    | 93.77          | 0.28                   | 1.07      |
| NVNT      | n20  | 5700            | Ant1    | 93.77          | 0.28                   | 1.07      |
| NVNT      | n40  | 5510            | Ant1    | 88.32          | 0.54                   | 2.13      |
| NVNT      | n40  | 5550            | Ant1    | 94.71          | 0.24                   | 0.9       |
| NVNT      | n40  | 5670            | Ant1    | 94.71          | 0.24                   | 0.9       |
| NVNT      | ac20 | 5500            | Ant1    | 93.72          | 0.28                   | 1.06      |
| NVNT      | ac20 | 5580            | Ant1    | 93.72          | 0.28                   | 1.06      |
| NVNT      | ac20 | 5700            | Ant1    | 93.72          | 0.28                   | 1.06      |
| NVNT      | ac40 | 5510            | Ant1    | 94.72          | 0.24                   | 0.9       |
| NVNT      | ac40 | 5550            | Ant1    | 94.72          | 0.24                   | 0.9       |
| NVNT      | ac40 | 5670            | Ant1    | 94.72          | 0.24                   | 0.9       |
| NVNT      | ax20 | 5500            | Ant1    | 97.34          | 0.12                   | 0.44      |
| NVNT      | ax20 | 5580            | Ant1    | 97.34          | 0.12                   | 0.44      |
| NVNT      | ax20 | 5700            | Ant1    | 97.34          | 0.12                   | 0.44      |
| NVNT      | ax40 | 5510            | Ant1    | 94.72          | 0.24                   | 0.9       |
| NVNT      | ax40 | 5550            | Ant1    | 94.81          | 0.23                   | 0.9       |
| NVNT      | ax40 | 5670            | Ant1    | 94.72          | 0.24                   | 0.9       |






## Test Graphs

Duty Cycle NVNT a 5500MHz Ant1

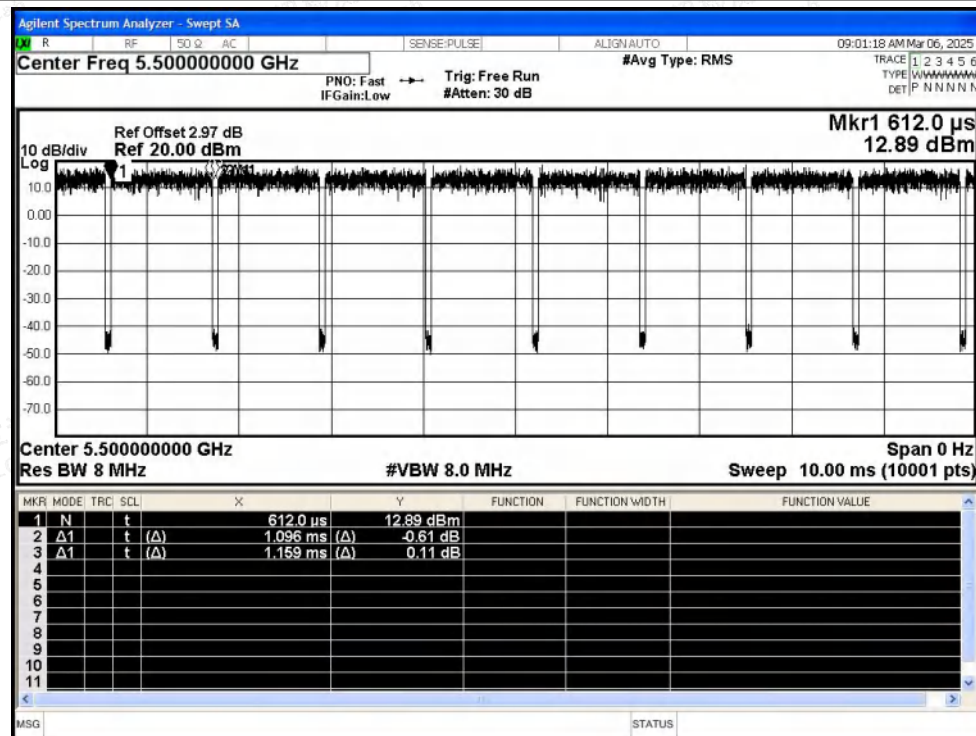


Duty Cycle NVNT a 5580MHz Ant1

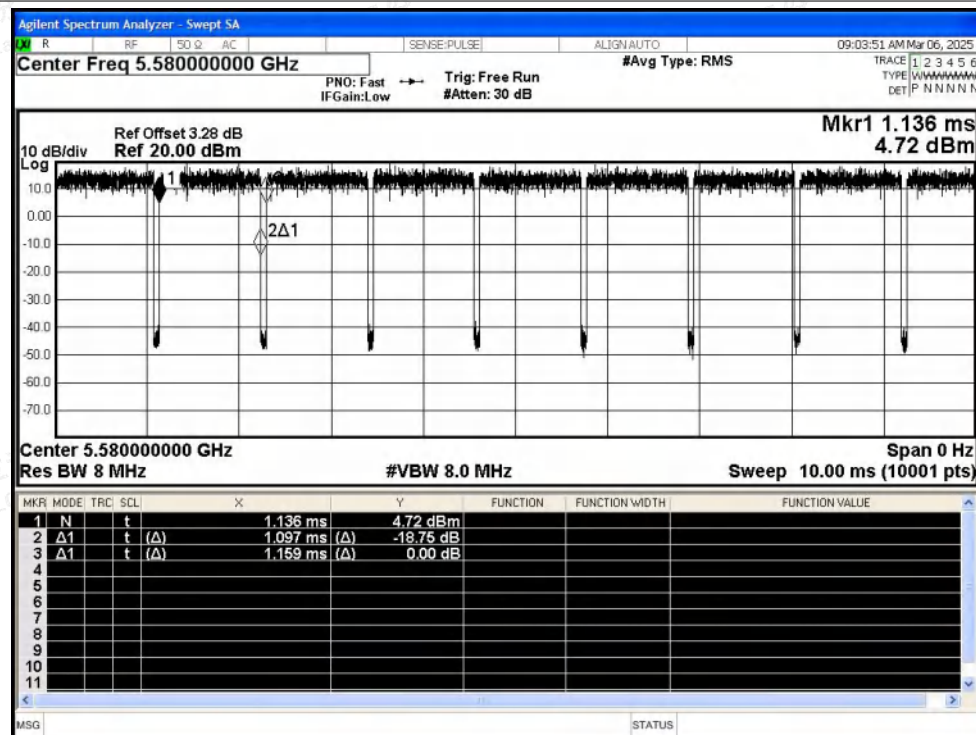




## Duty Cycle NVNT a 5700MHz Ant1

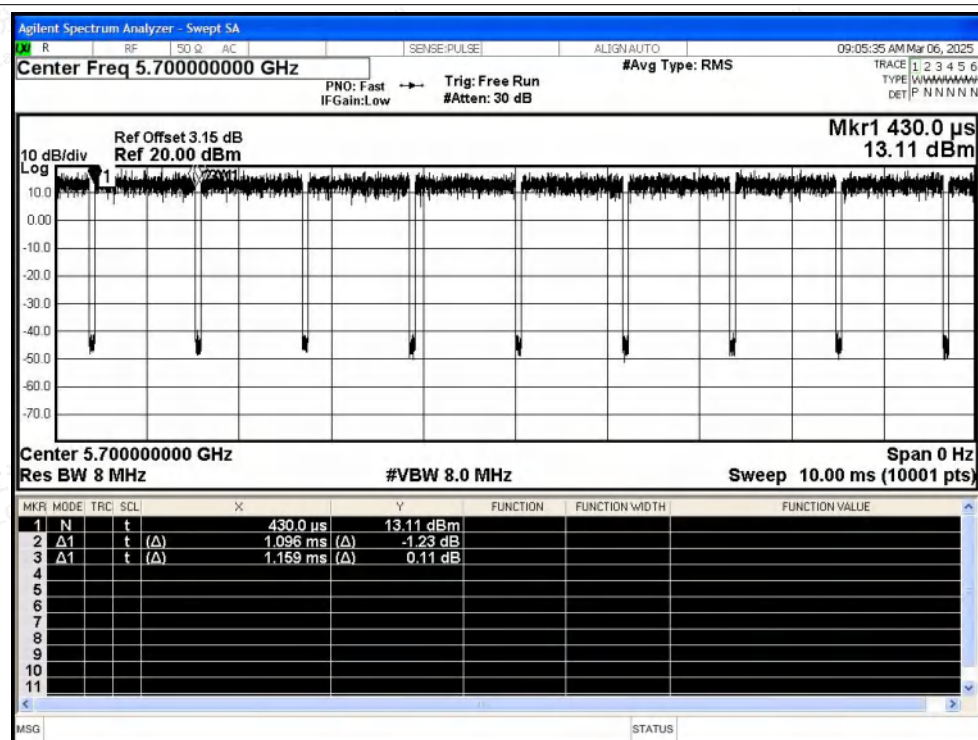


## Duty Cycle NVNT n20 5500MHz Ant1

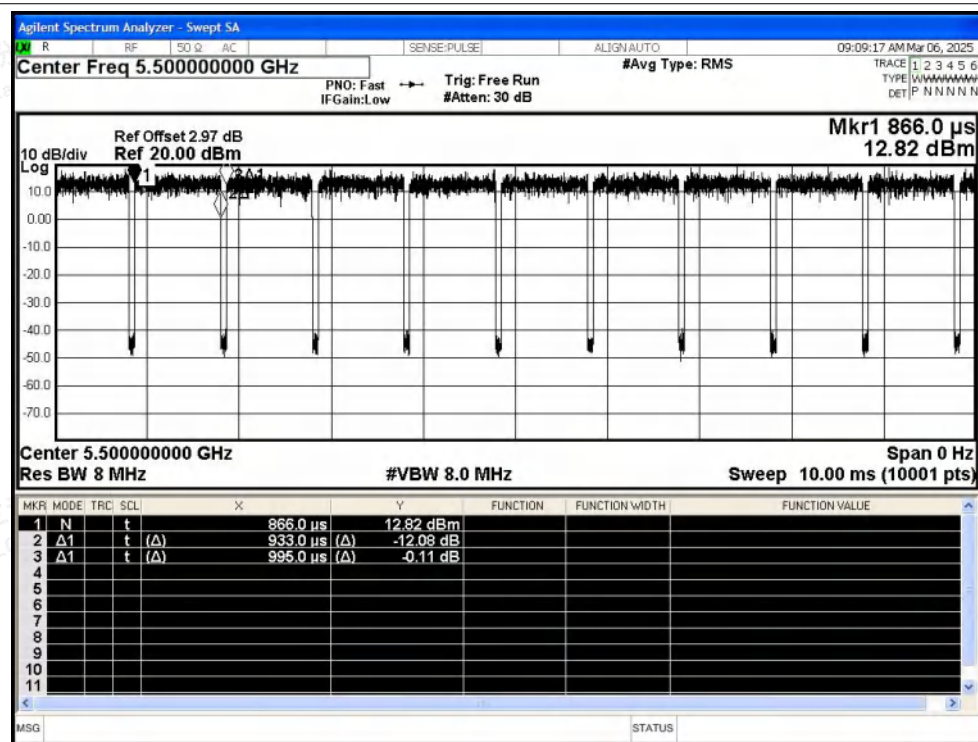




## Duty Cycle NVNT n20 5580MHz Ant1

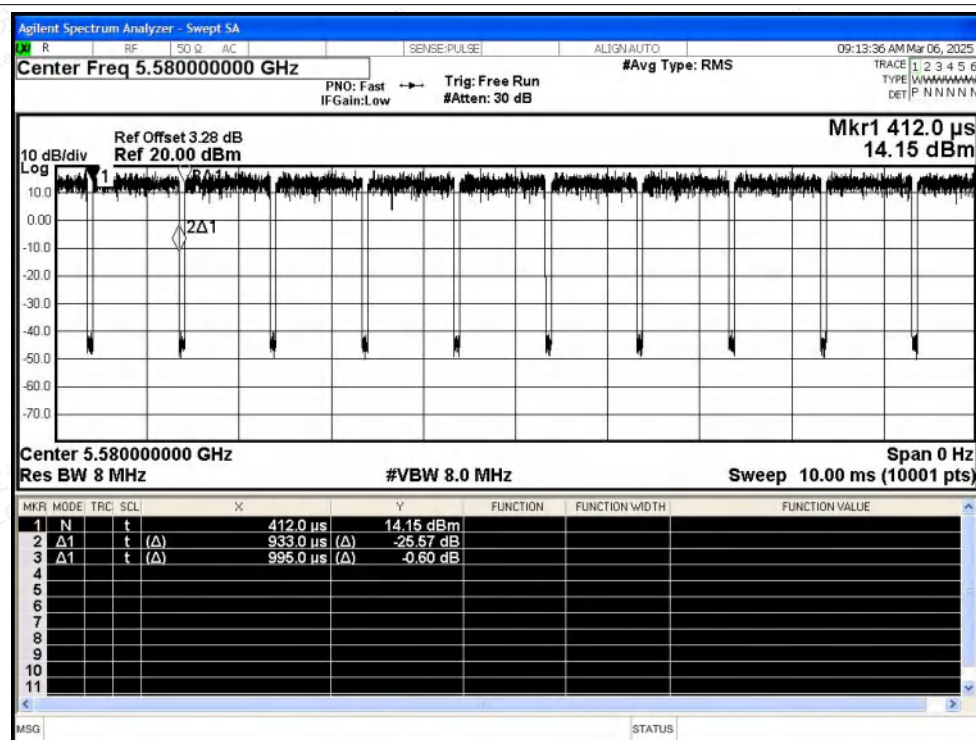


## Duty Cycle NVNT n20 5700MHz Ant1

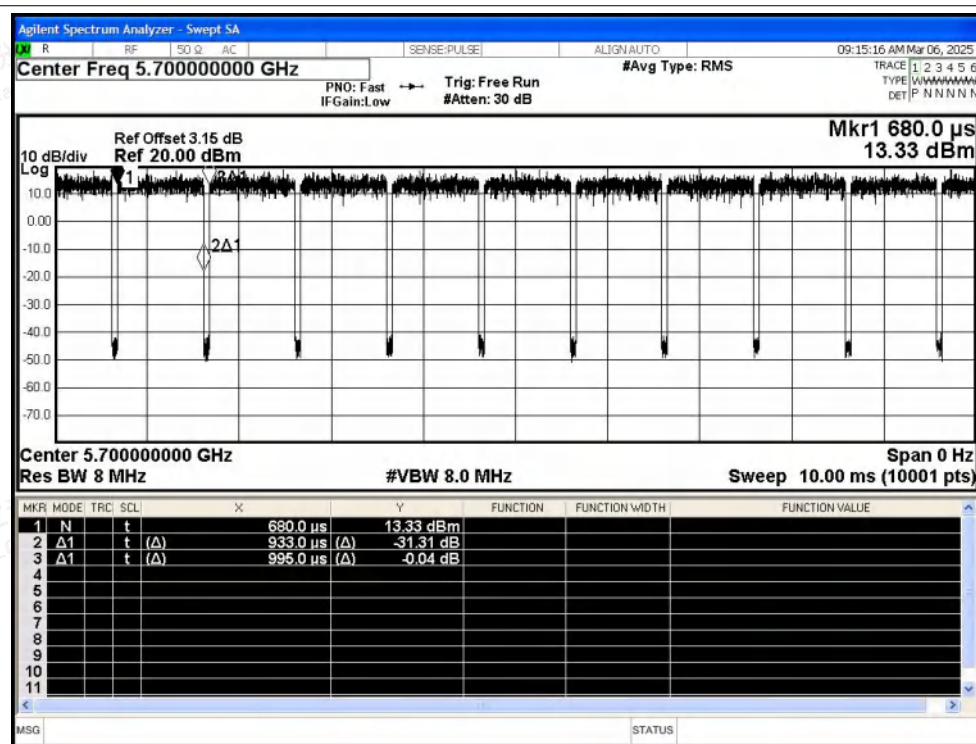




## Duty Cycle NVNT n40 5510MHz Ant1

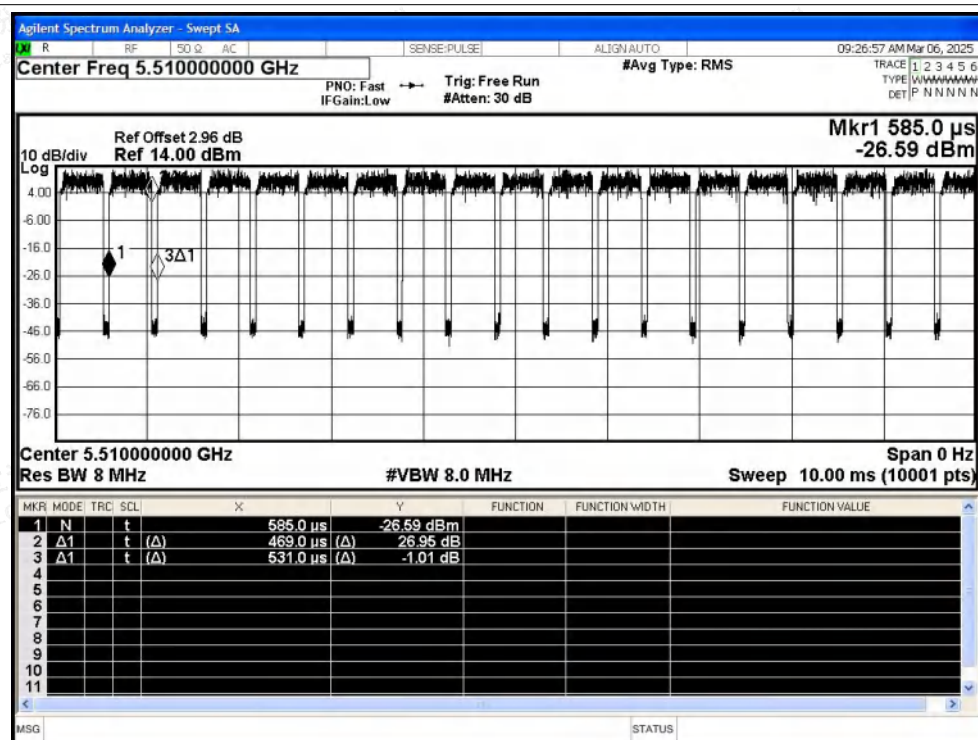


## Duty Cycle NVNT n40 5550MHz Ant1

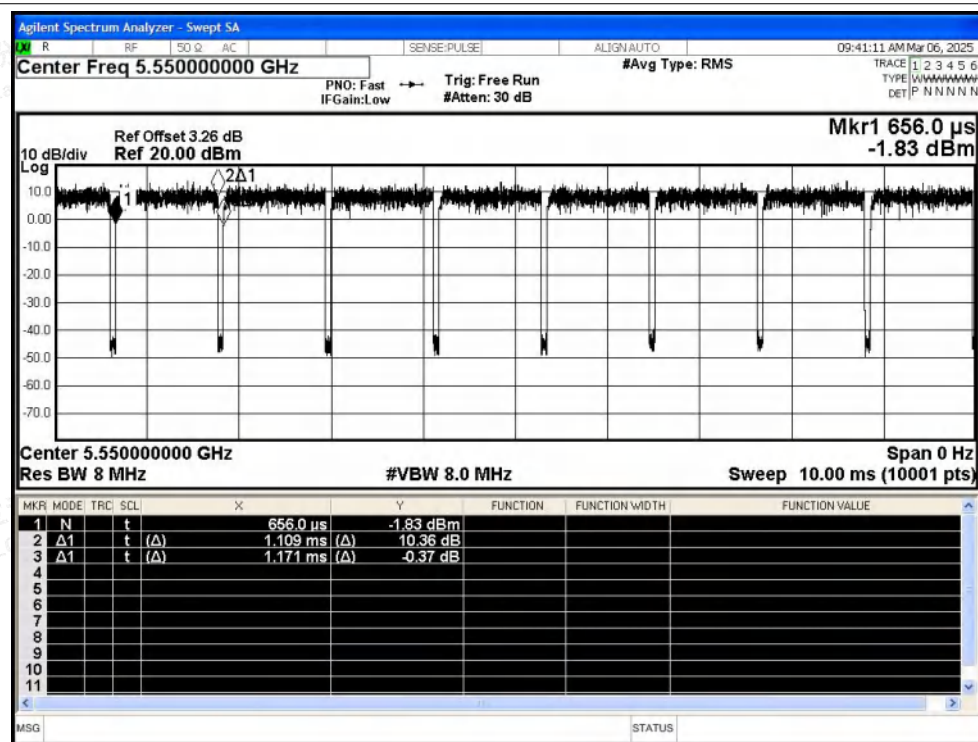




## Duty Cycle NVNT n40 5670MHz Ant1

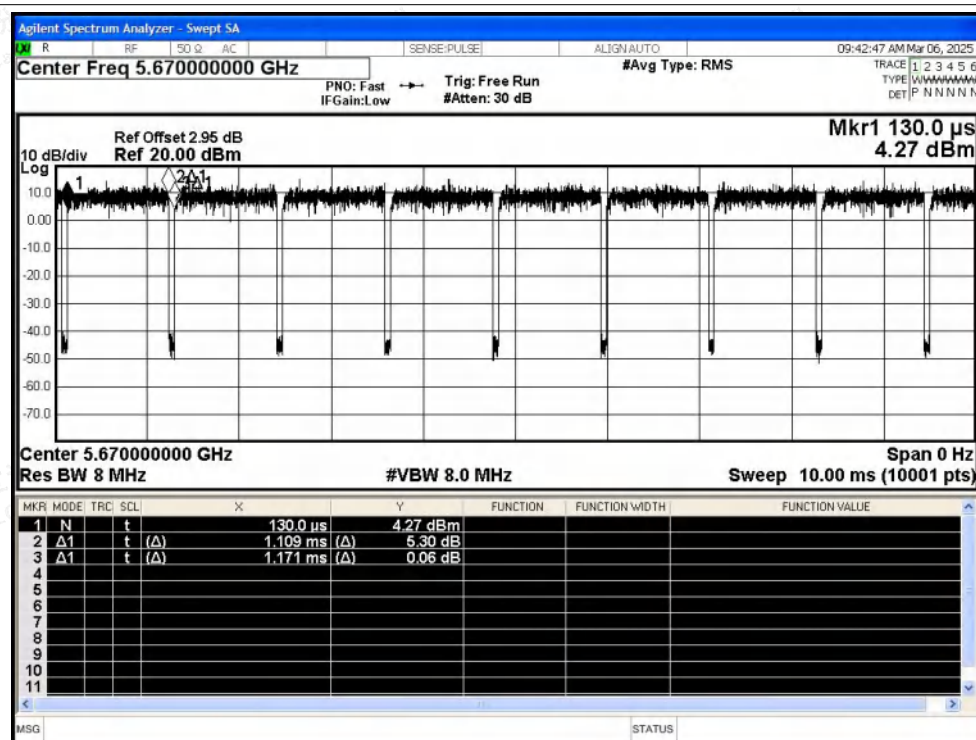


## Duty Cycle NVNT ac20 5500MHz Ant1

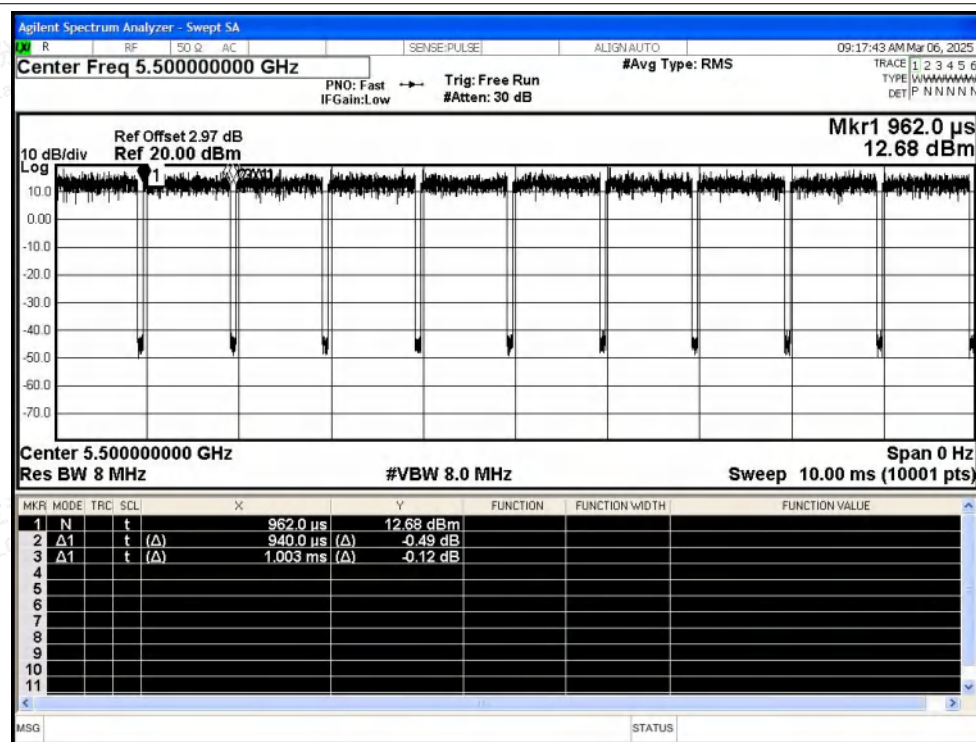




## Duty Cycle NVNT ac20 5580MHz Ant1

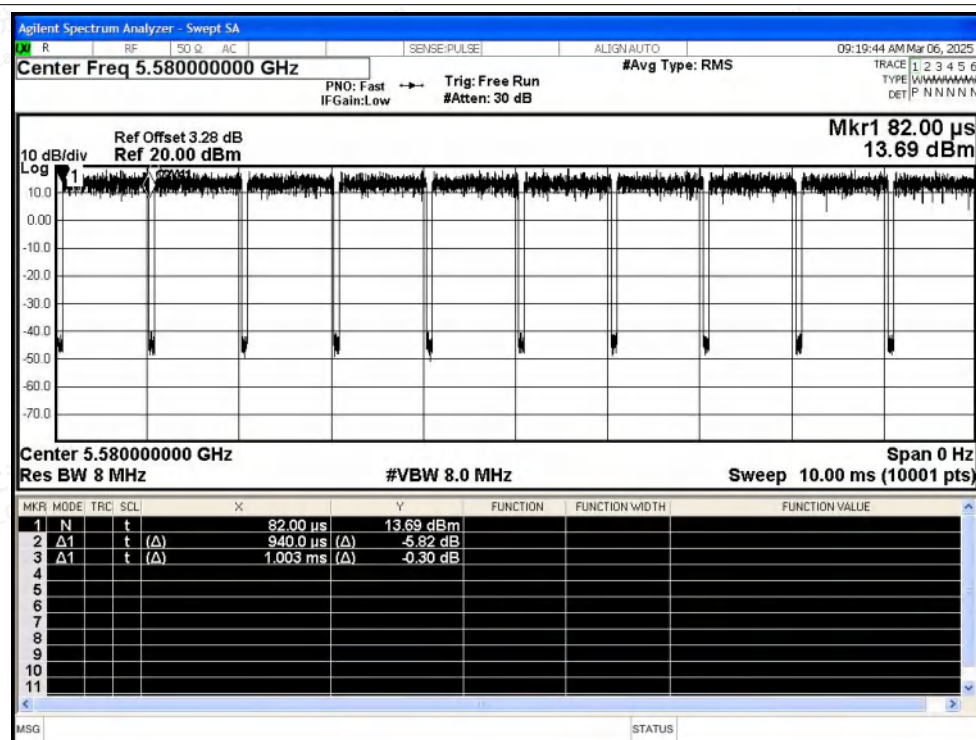


## Duty Cycle NVNT ac20 5700MHz Ant1

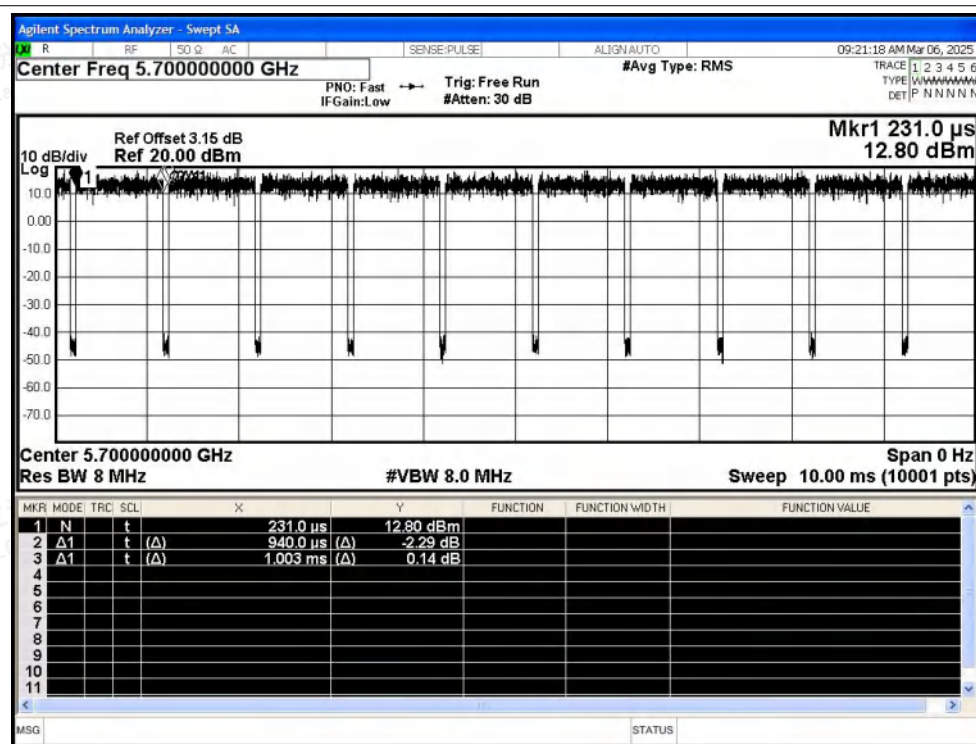




## Duty Cycle NVNT ac40 5510MHz Ant1

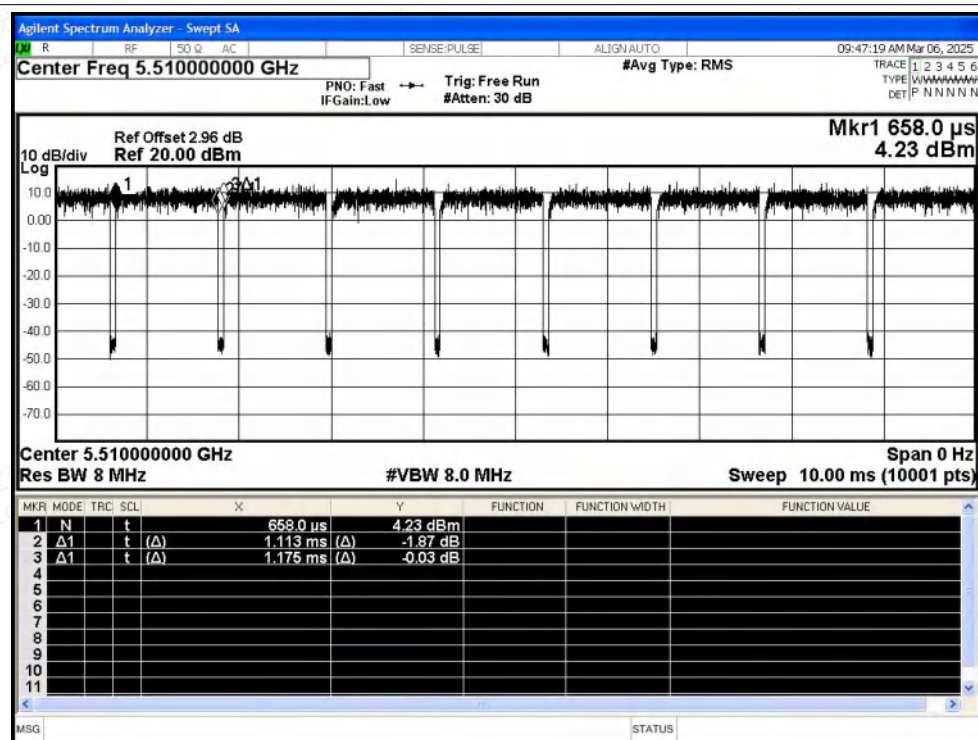


## Duty Cycle NVNT ac40 5550MHz Ant1

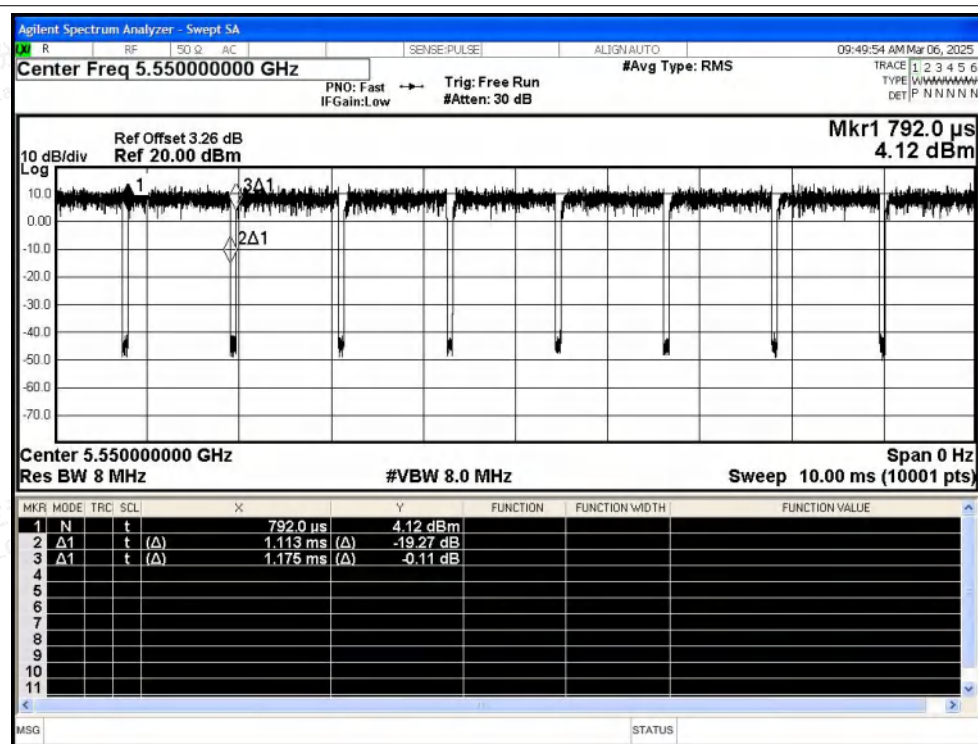




## Duty Cycle NVNT ac40 5670MHz Ant1

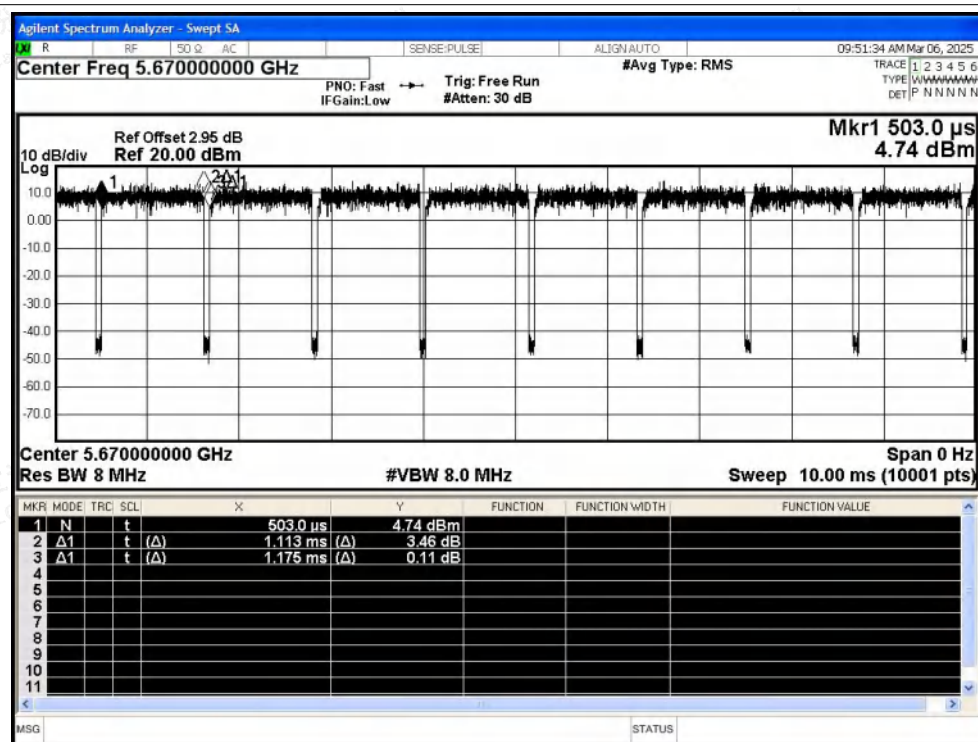


## Duty Cycle NVNT ax20 5500MHz Ant1

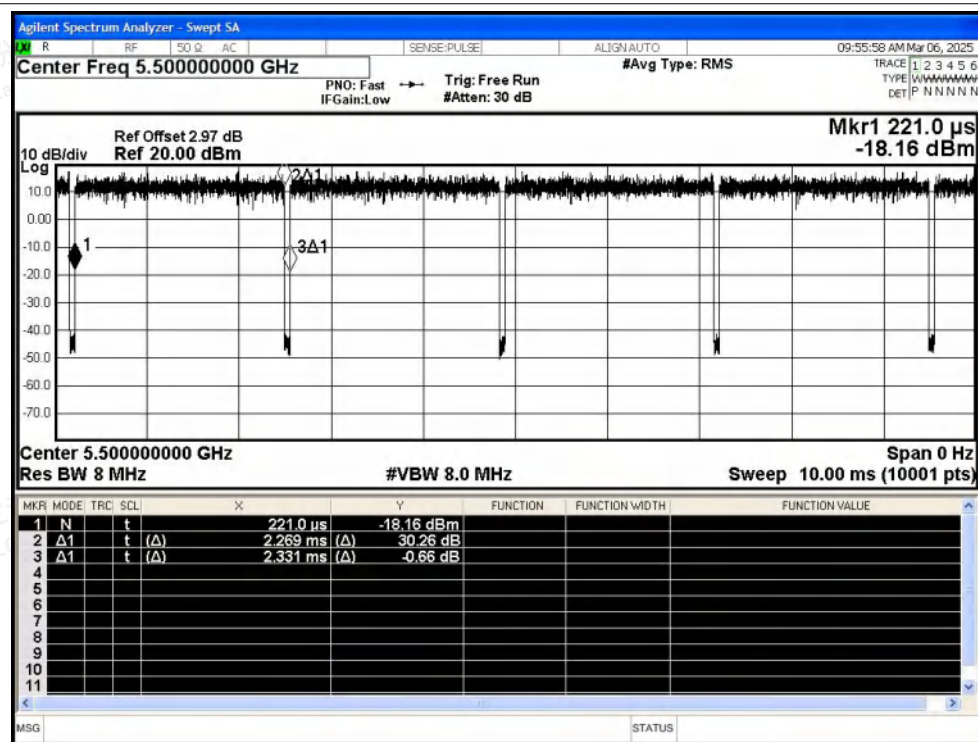




## Duty Cycle NVNT ax20 5580MHz Ant1

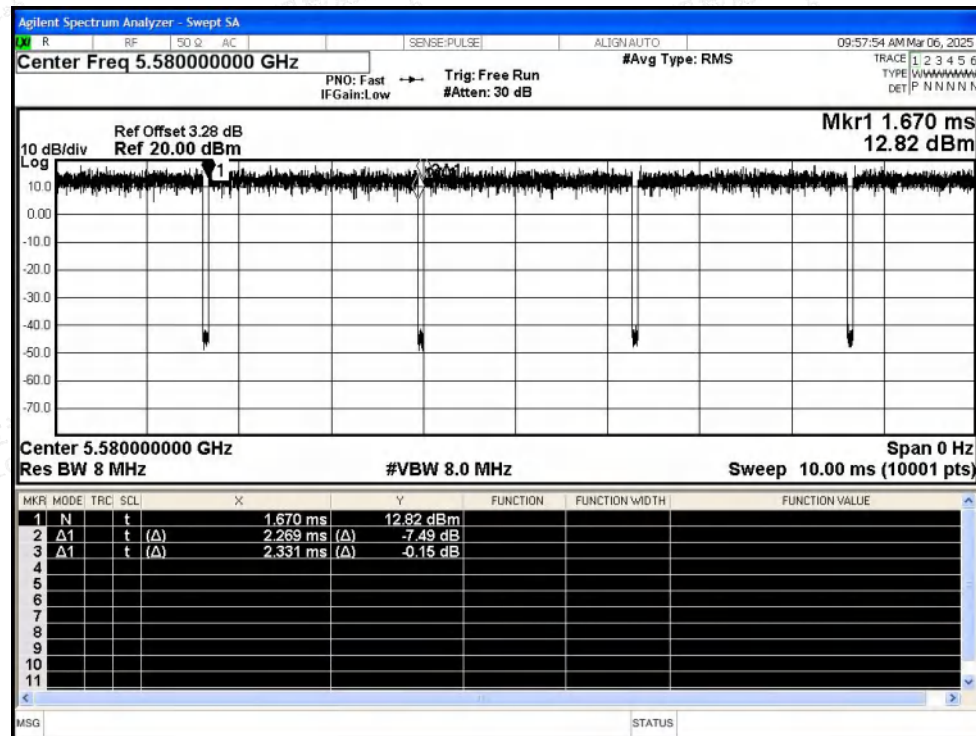


## Duty Cycle NVNT ax20 5700MHz Ant1

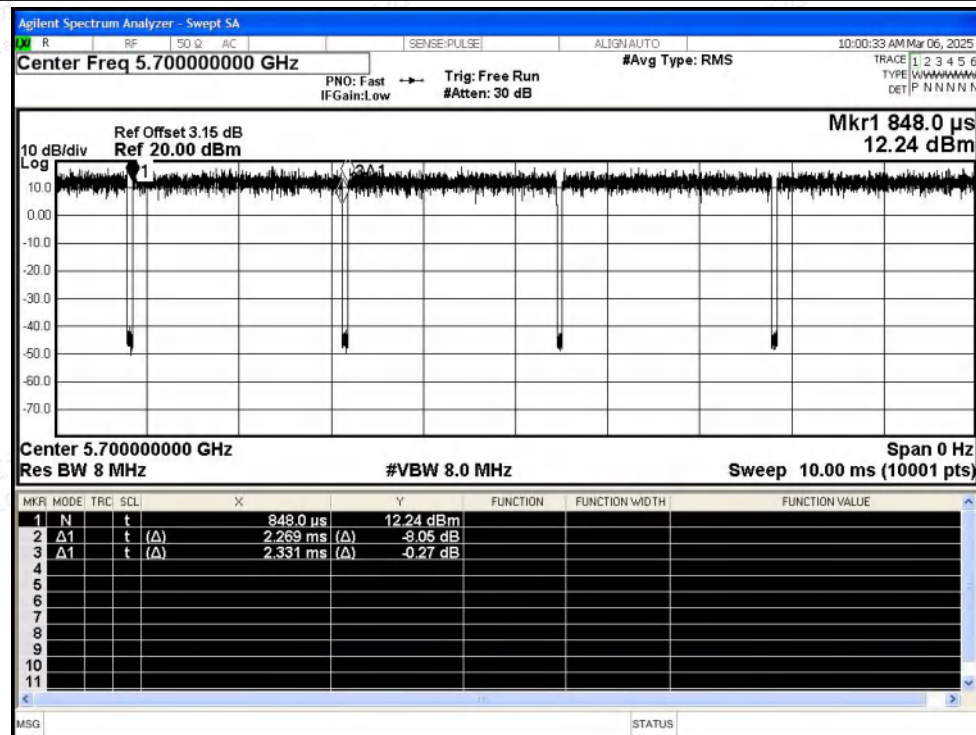



## Duty Cycle NVNT ax40 5510MHz Ant1

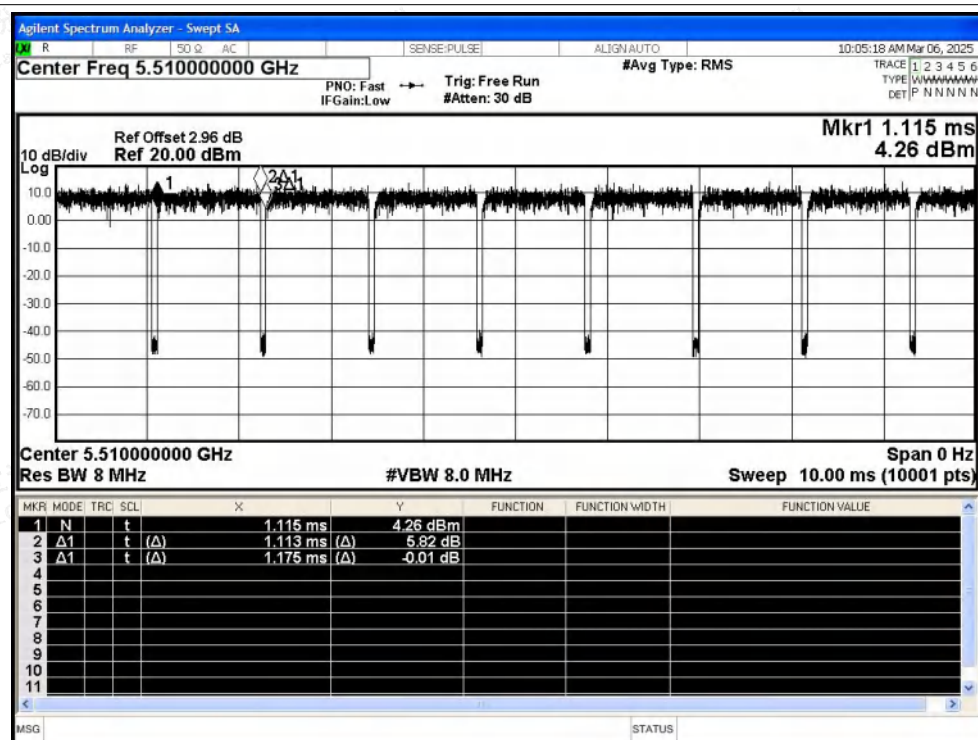

## Duty Cycle NVNT ax40 5550MHz Ant1

