


Appendix E: Bandedge



Condition	Antenna	Modulation	TX Mode	Bandedge MAX.Value	Limit	Result
NVNT	ANT1	1-DH5	2402.00	-64.531	-20.751	Pass
NVNT	ANT1	1-DH5	Hopping_LCH	-67.134	-19.960	Pass
NVNT	ANT1	1-DH5	2480.00	-67.649	-21.167	Pass
NVNT	ANT1	1-DH5	Hopping_HCH	-67.571	-20.727	Pass
NVNT	ANT1	2-DH5	2402.00	-62.261	-21.543	Pass
NVNT	ANT1	2-DH5	Hopping_LCH	-68.602	-20.884	Pass
NVNT	ANT1	2-DH5	2480.00	-63.323	-22.070	Pass
NVNT	ANT1	2-DH5	Hopping_HCH	-68.466	-21.728	Pass
NVNT	ANT1	3-DH5	2402.00	-62.029	-21.626	Pass
NVNT	ANT1	3-DH5	Hopping_LCH	-64.538	-21.195	Pass
NVNT	ANT1	3-DH5	2480.00	-61.940	-22.076	Pass
NVNT	ANT1	3-DH5	Hopping_HCH	-68.353	-21.532	Pass



1_Reference_Level_NVNT_ANT1_1-DH5_2402_00


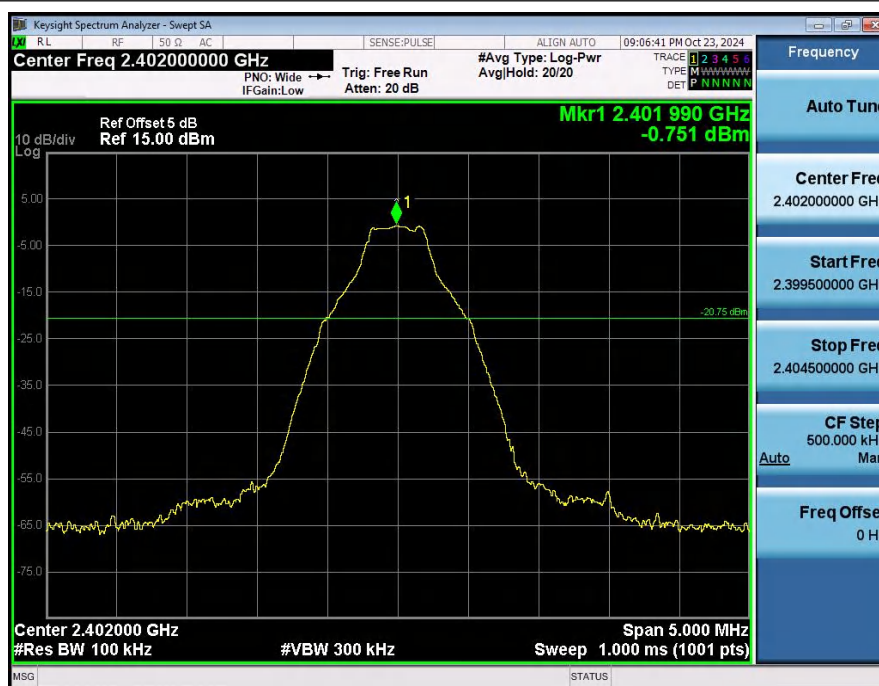



2_Bandedge_NVNT_ANT1_1-DH5_2402_00



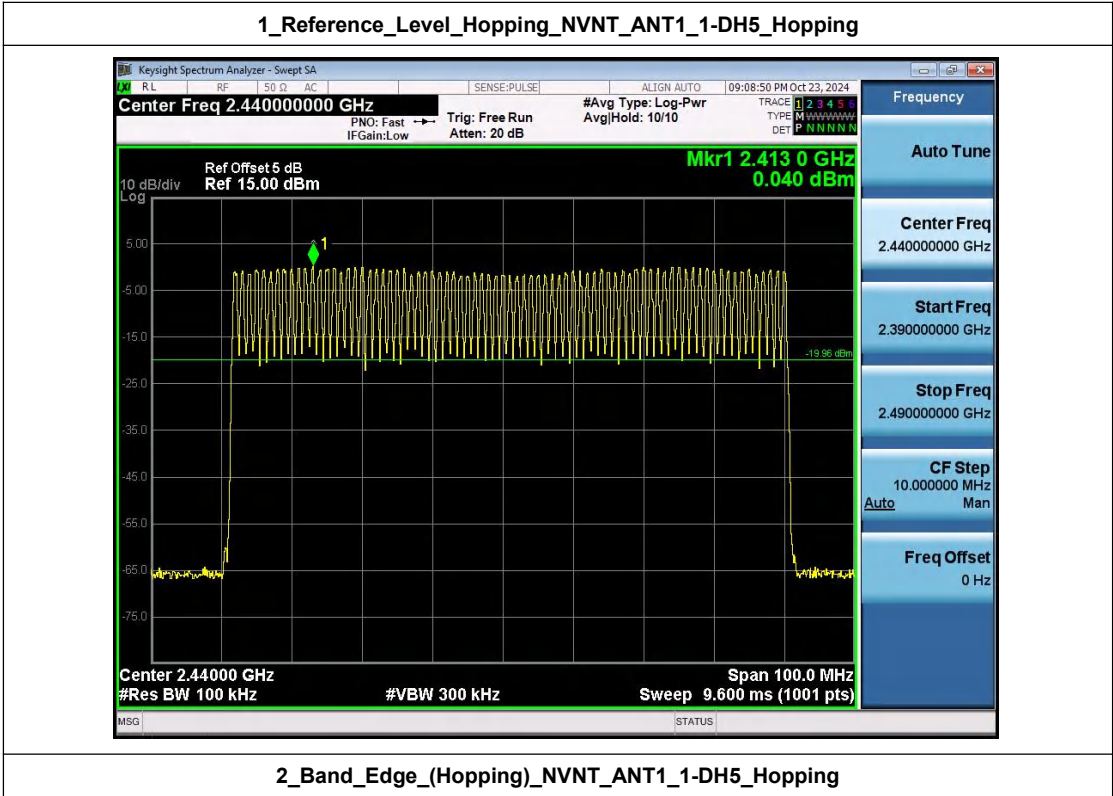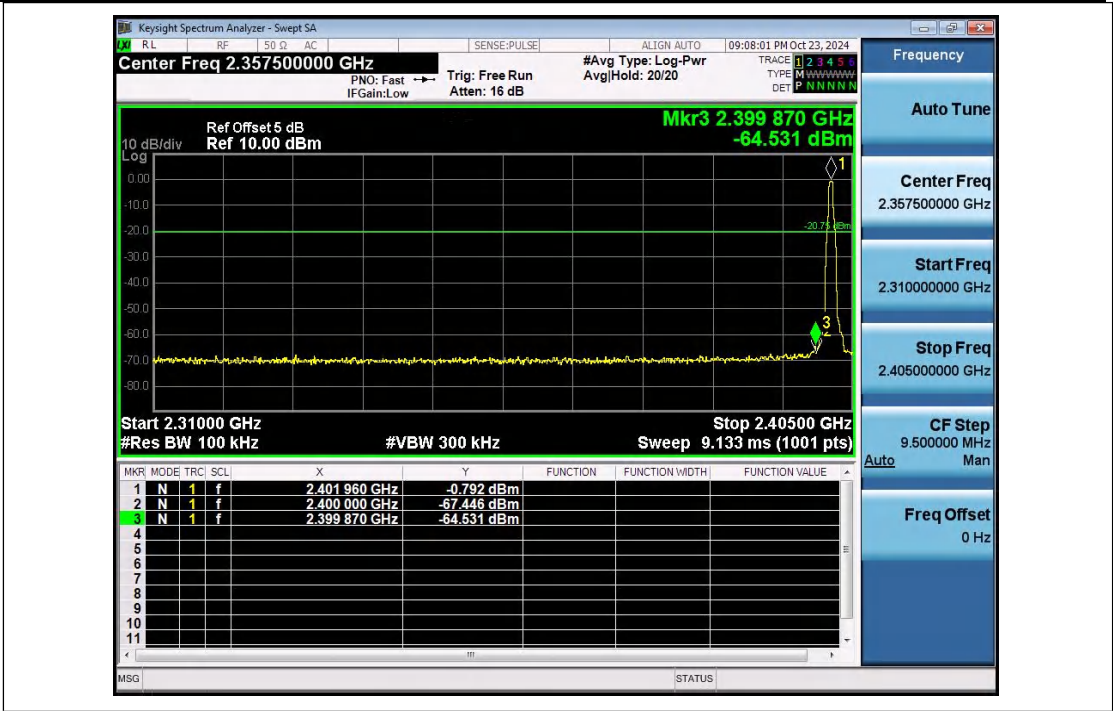


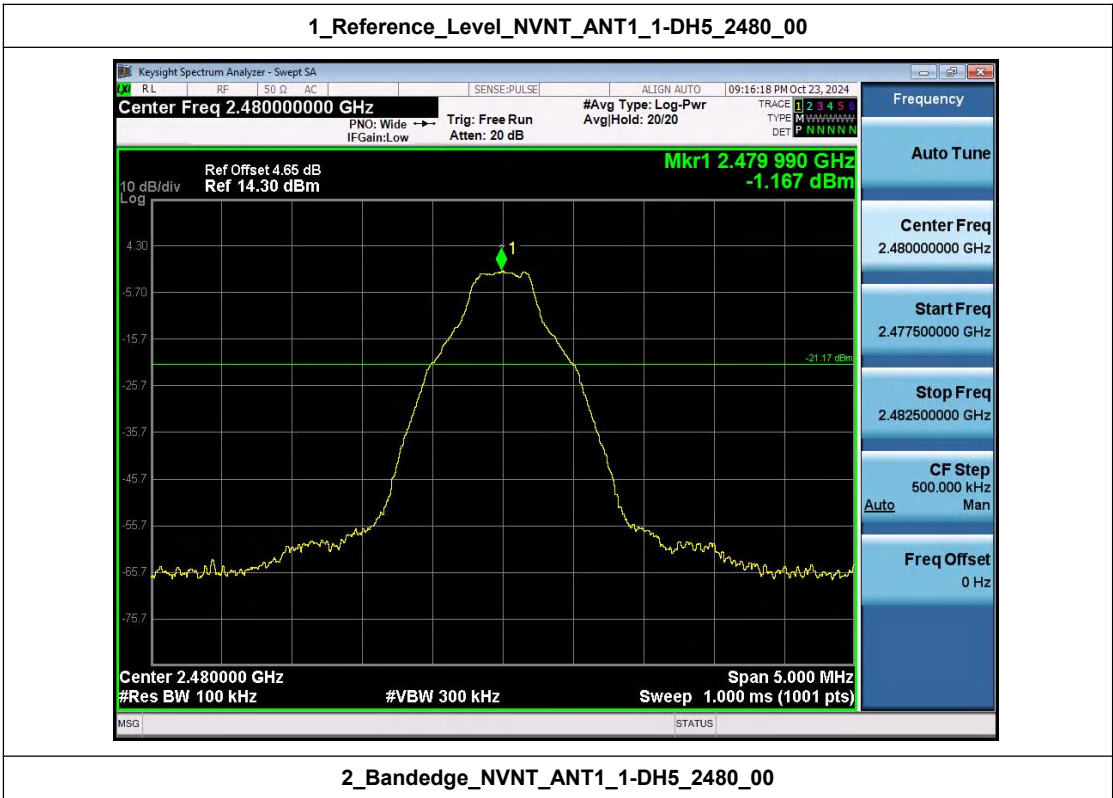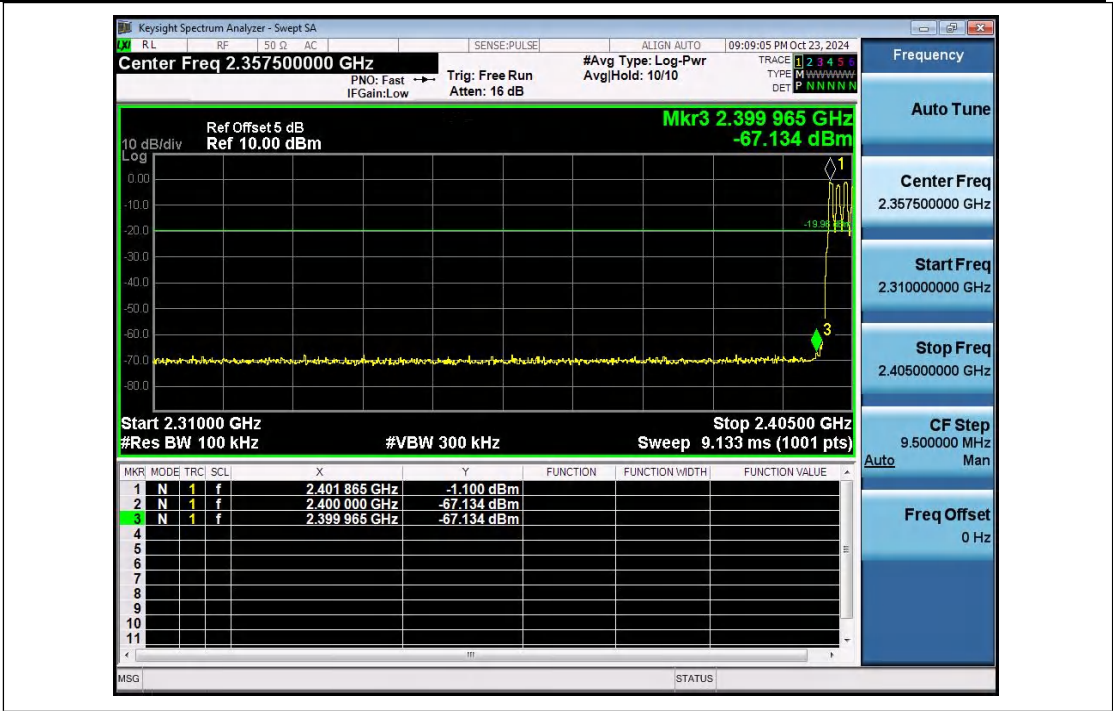

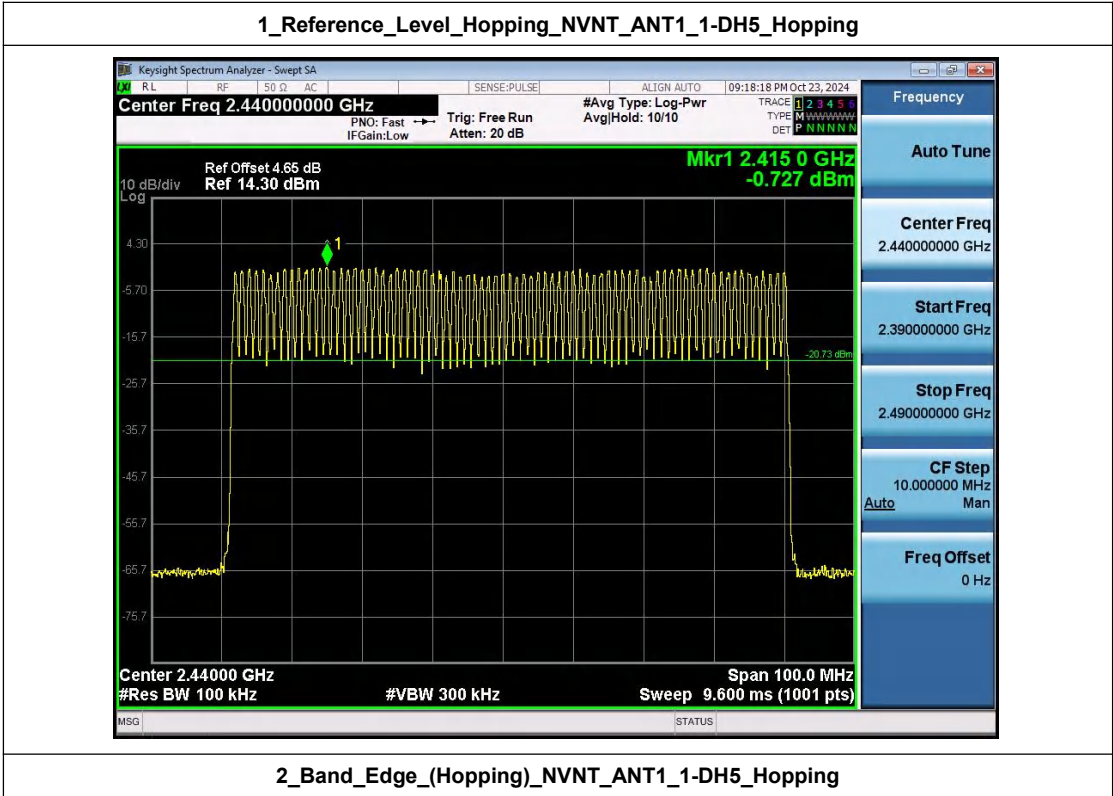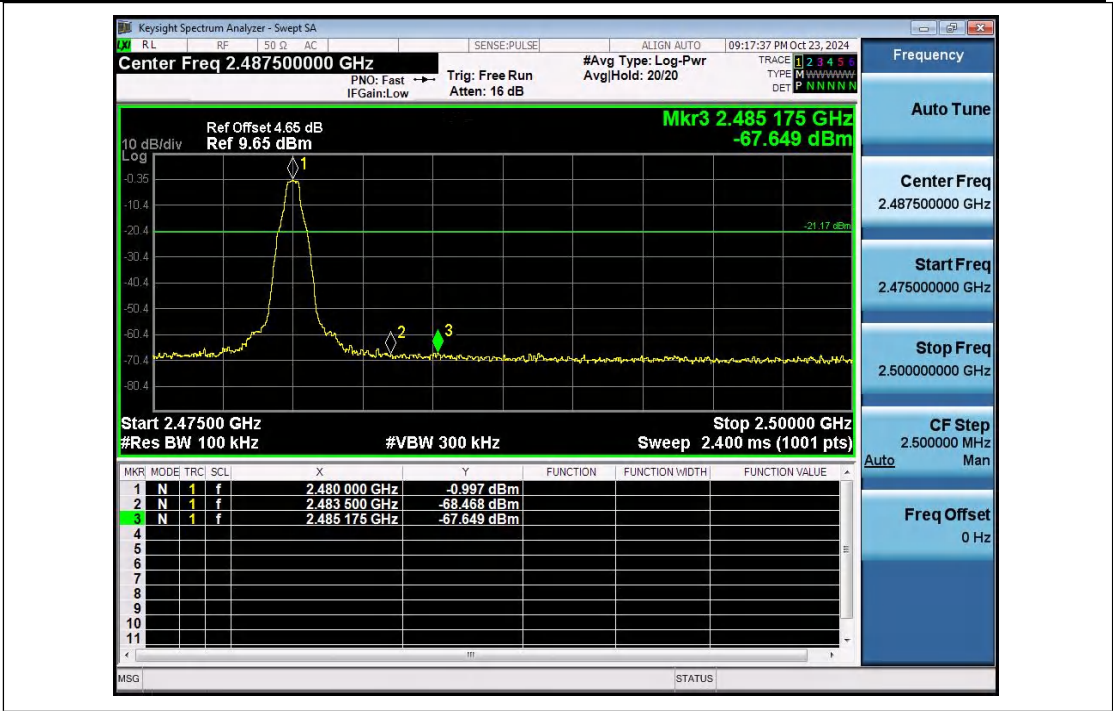


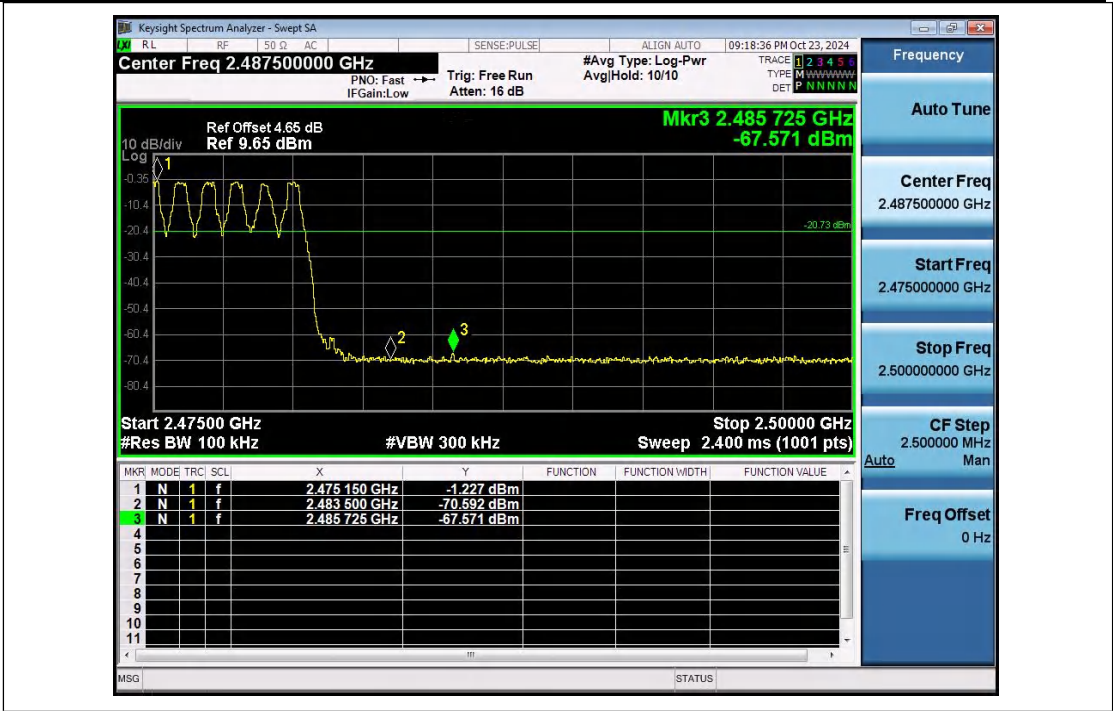



1_Reference_Level_NVNT_ANT1_2-DH5_2402_00

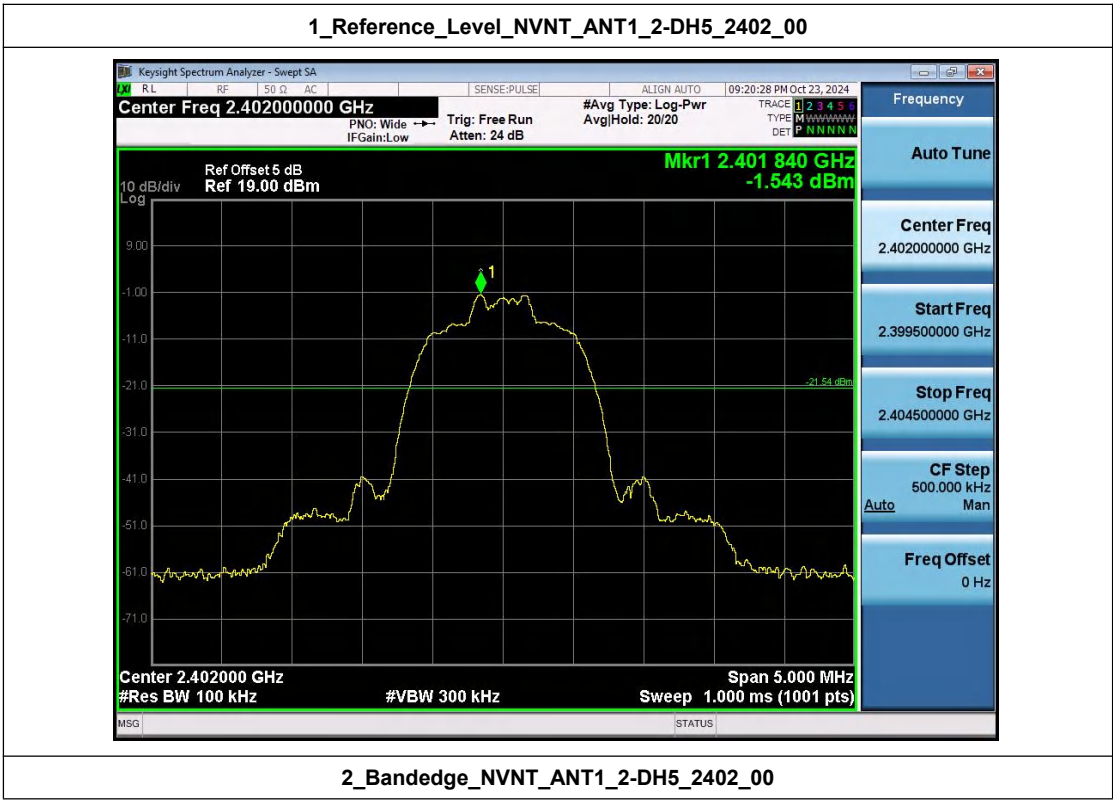


2_Bandedge_NVNT_ANT1_2-DH5_2402_00



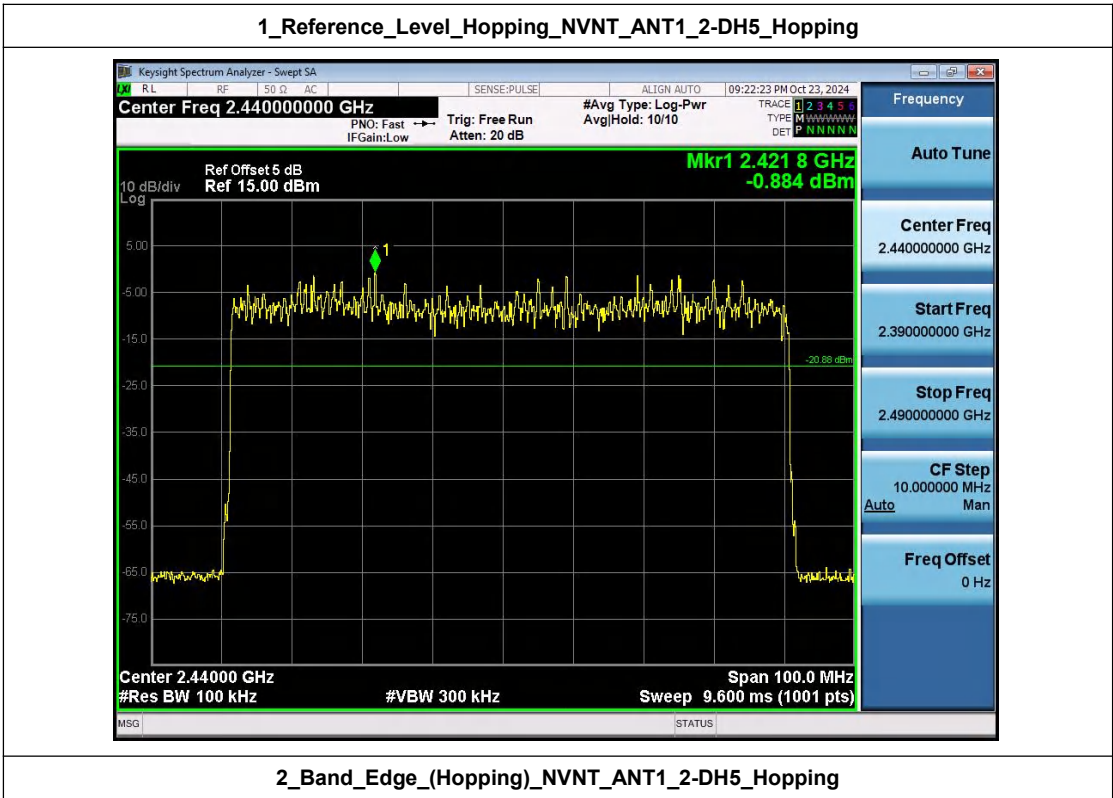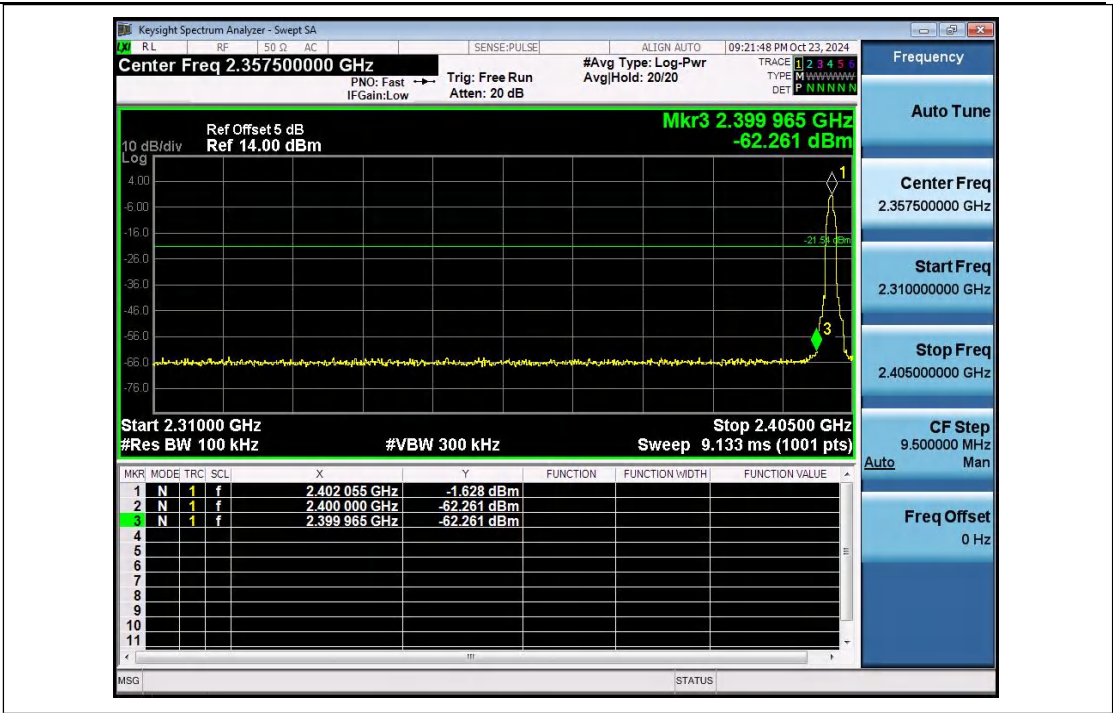

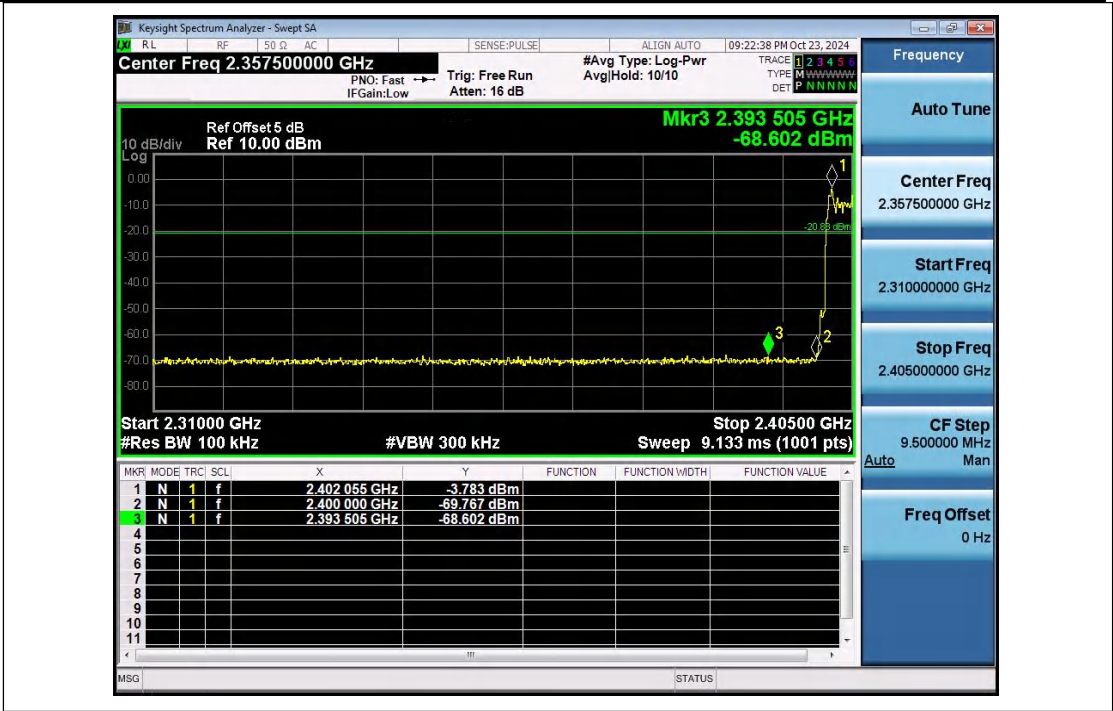


1_Reference_Level_NVNT_ANT1_2-DH5_2480_00

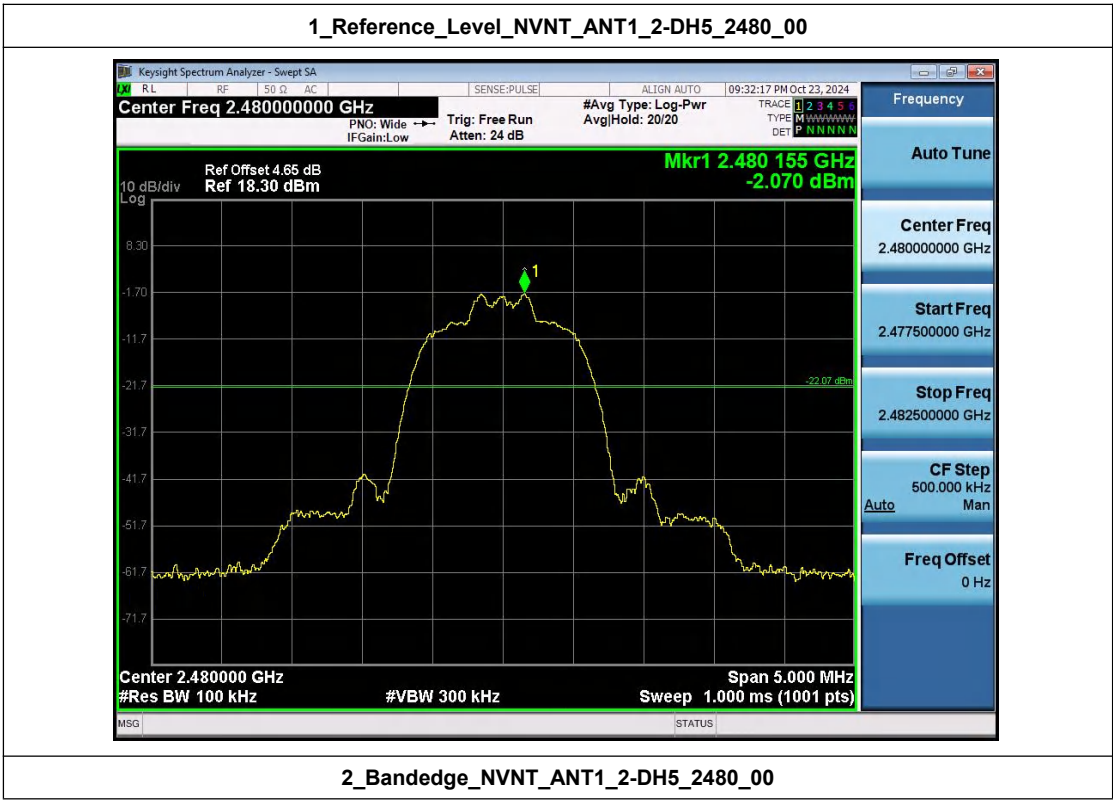


2_Bandedge_NVNT_ANT1_2-DH5_2480_00



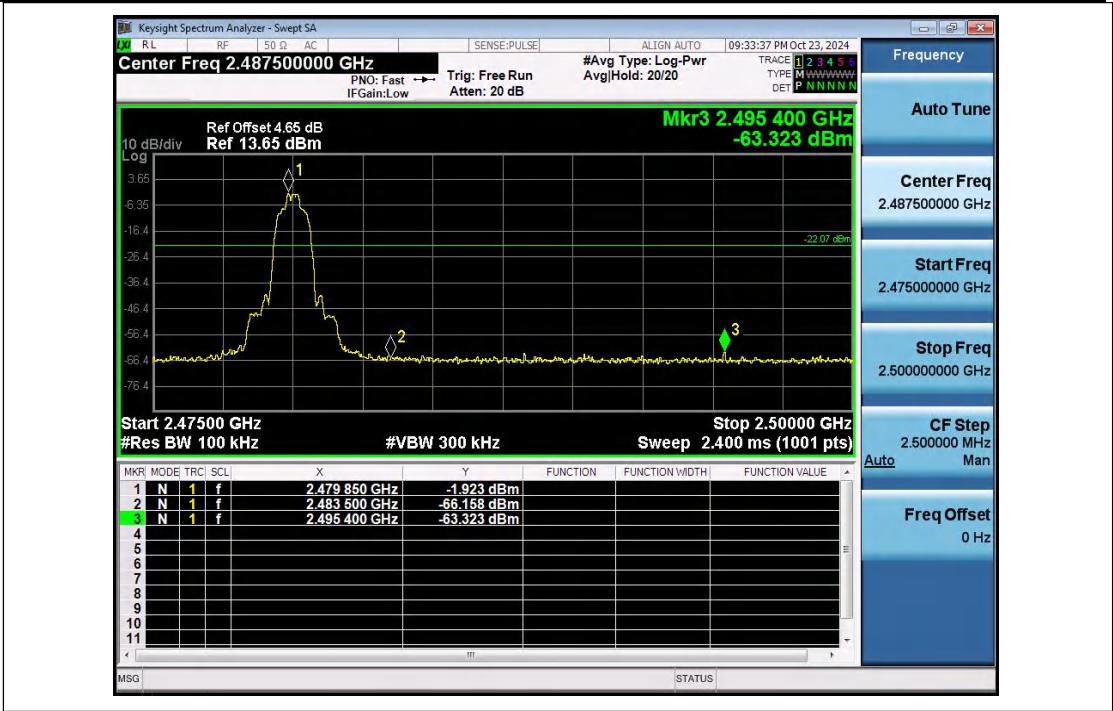


1_Reference_Level_Hopping_NVNT_ANT1_2-DH5_Hopping

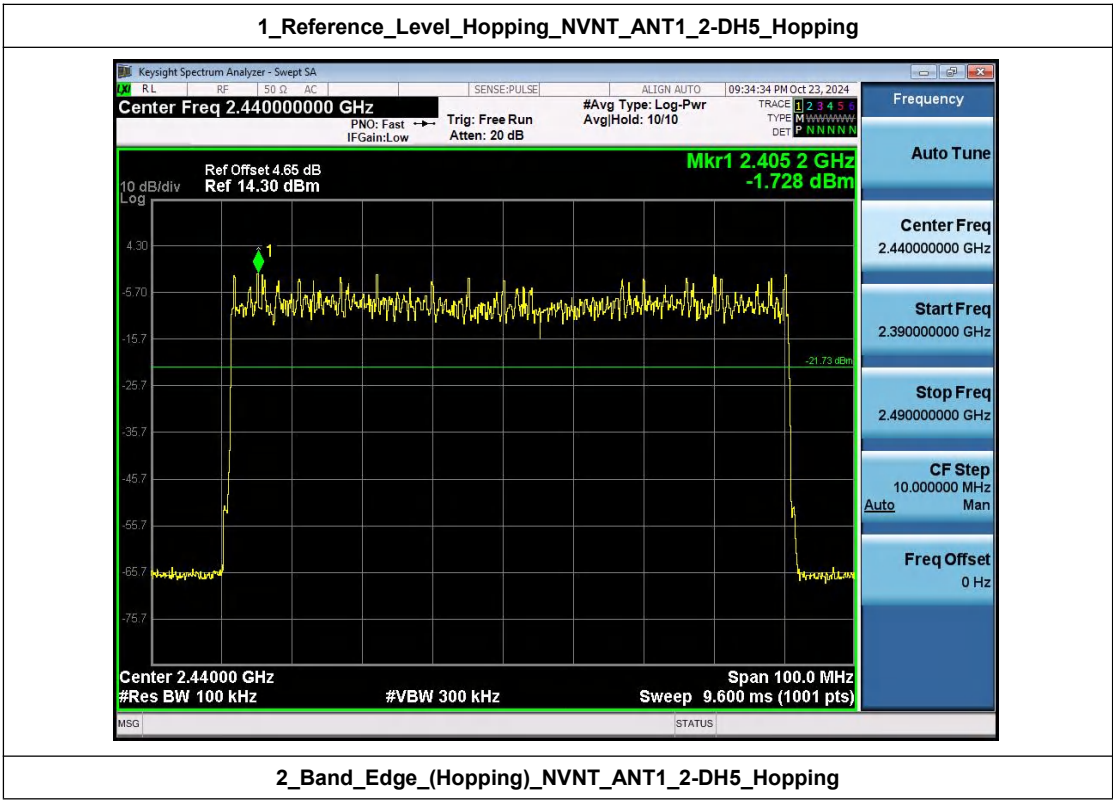


2_Band_Edge_(Hopping)_NVNT_ANT1_2-DH5_Hopping




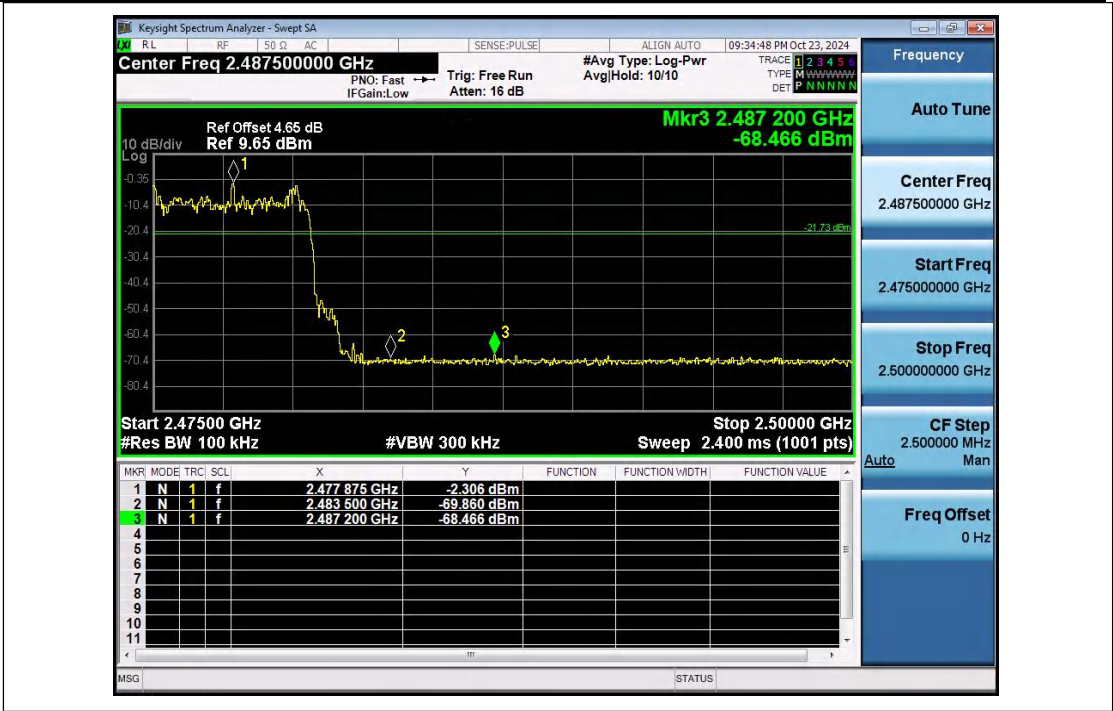



1_Reference_Level_NVNT_ANT1_3-DH5_2402_00

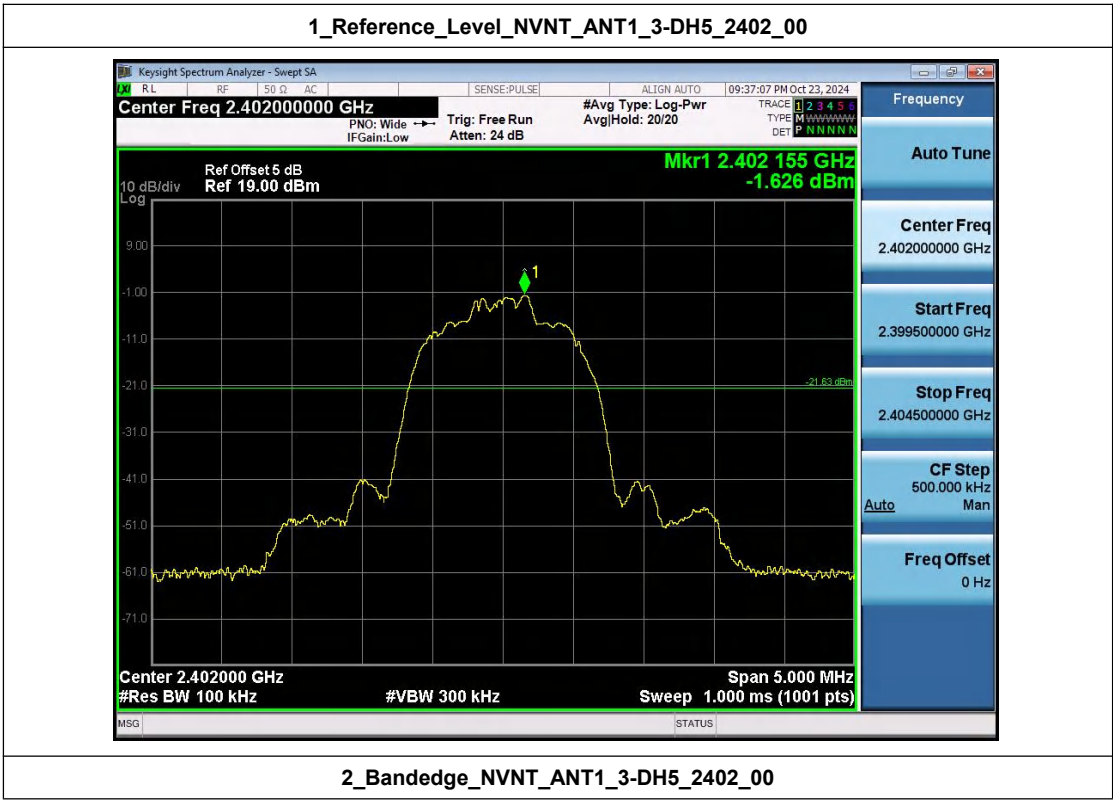


2_Bandedge_NVNT_ANT1_3-DH5_2402_00



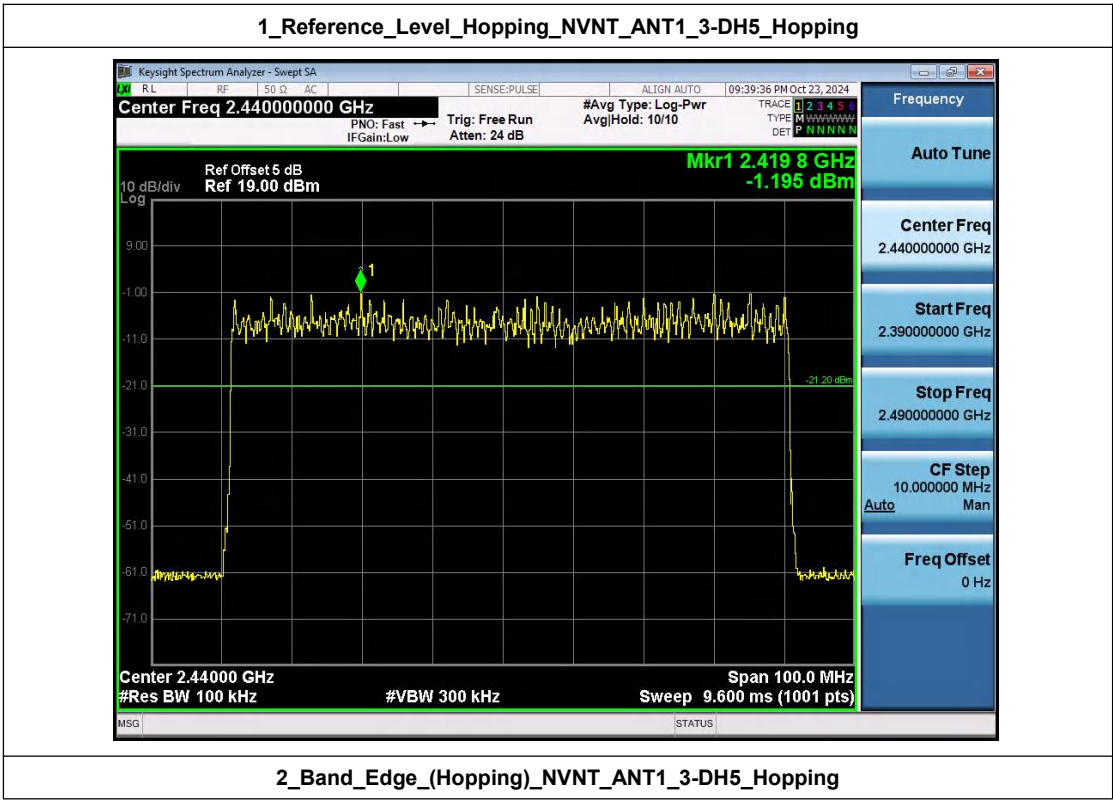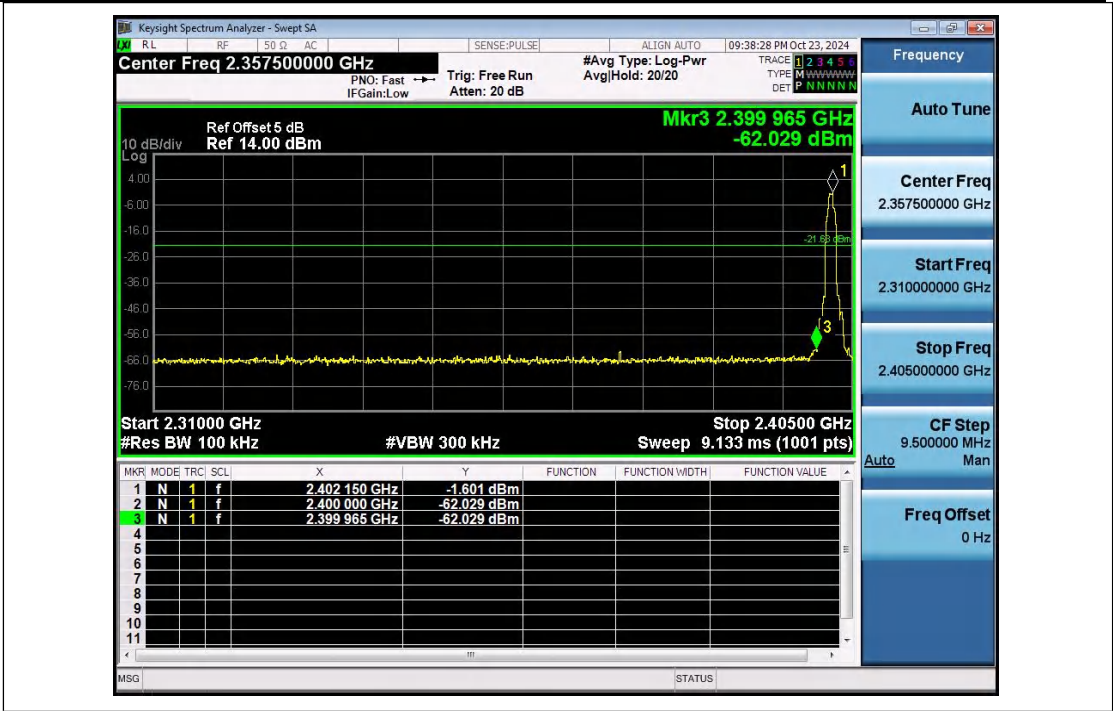


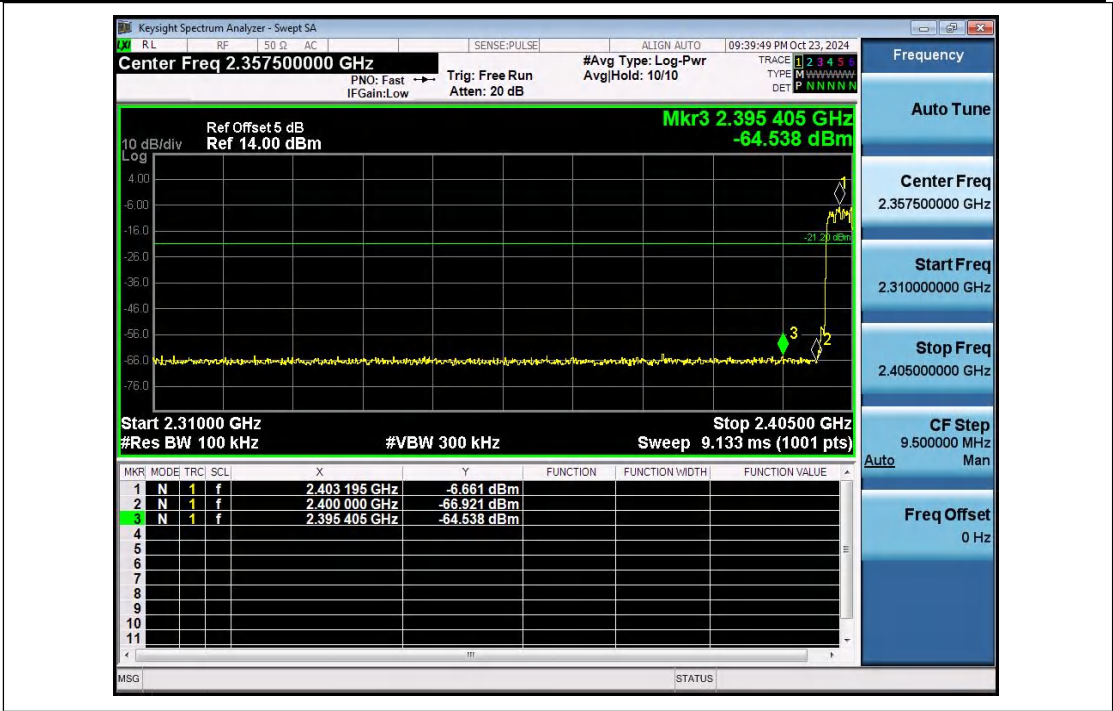



1_Reference_Level_NVNT_ANT1_3-DH5_2480_00

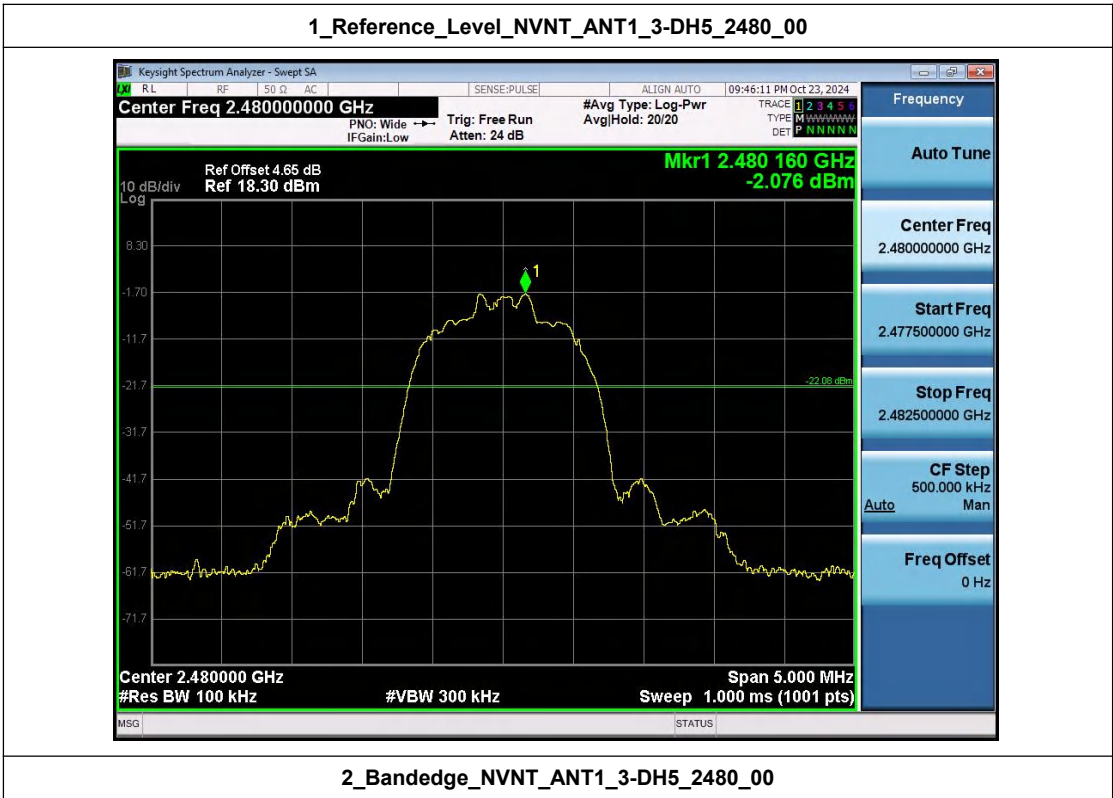

2_Bandedge_NVNT_ANT1_3-DH5_2480_00



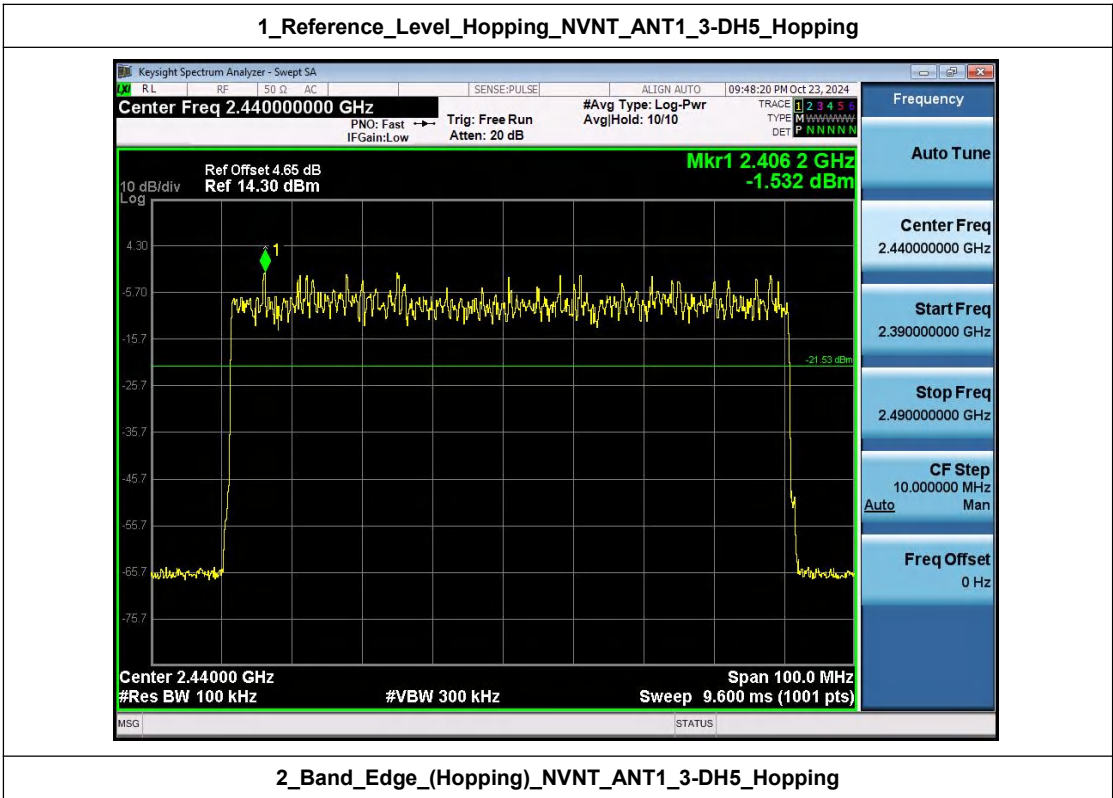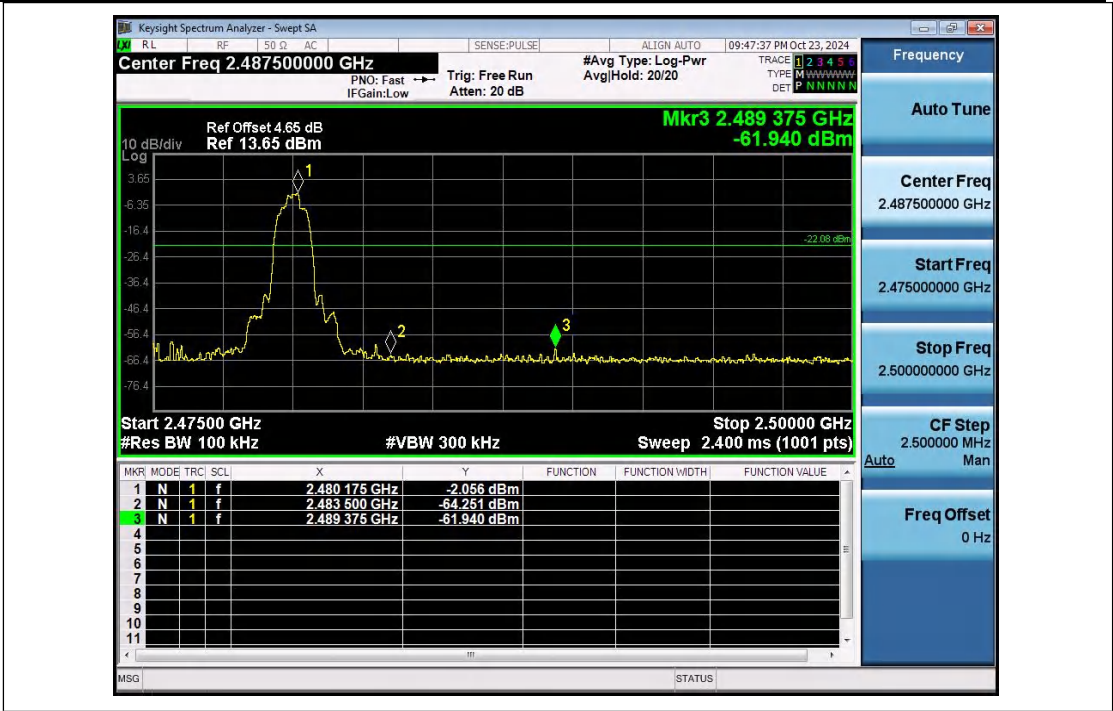

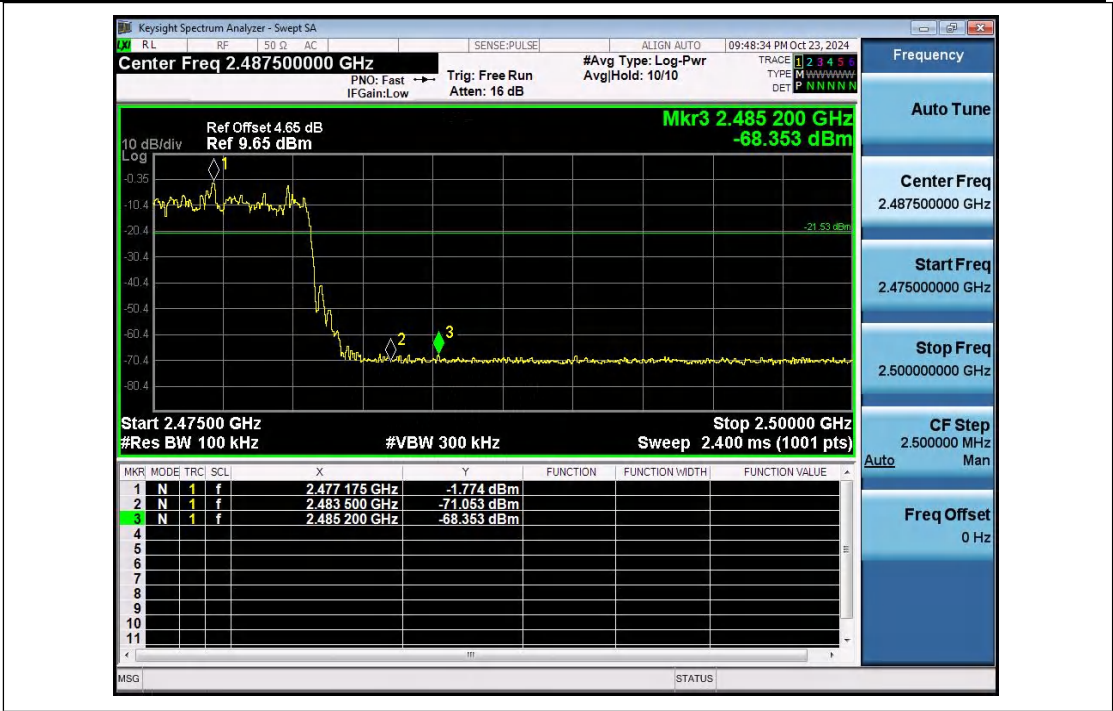

Shenzhen Anbotek Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com




Appendix F: Carrier Frequencies Separation (Hopping)

Condition	Antenna	Modulation	Frequency(MHz)	Hopping NO.0 (MHz)	Hopping NO.1 (MHz)	Carrier Frequencies Separation(MHz)	Limit(MHz)	Result
NVNT	ANT1	1-DH5	2441.00	2440.951	2442.067	1.12	0.851	Pass
NVNT	ANT1	2-DH5	2441.00	2440.804	2441.944	1.14	0.875	Pass
NVNT	ANT1	3-DH5	2441.00	2440.837	2441.791	0.95	0.851	Pass

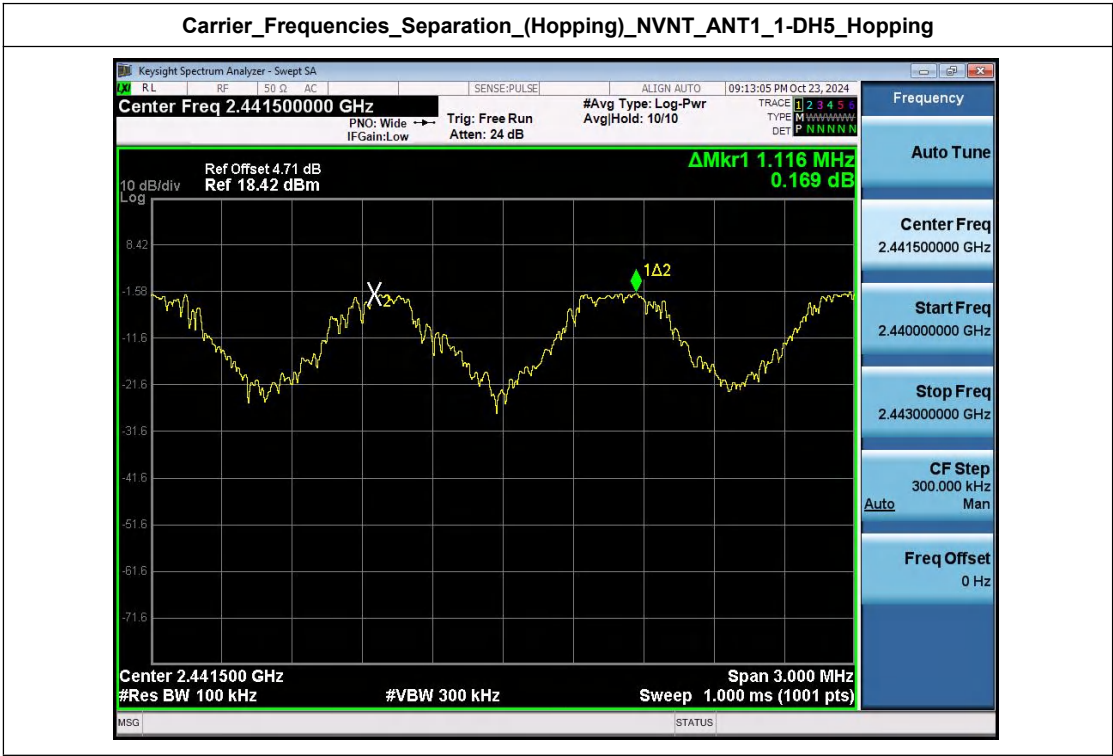


Carrier_Frequencies_Separation_(Hopping)_NVNT_ANT1_2-DH5_Hopping



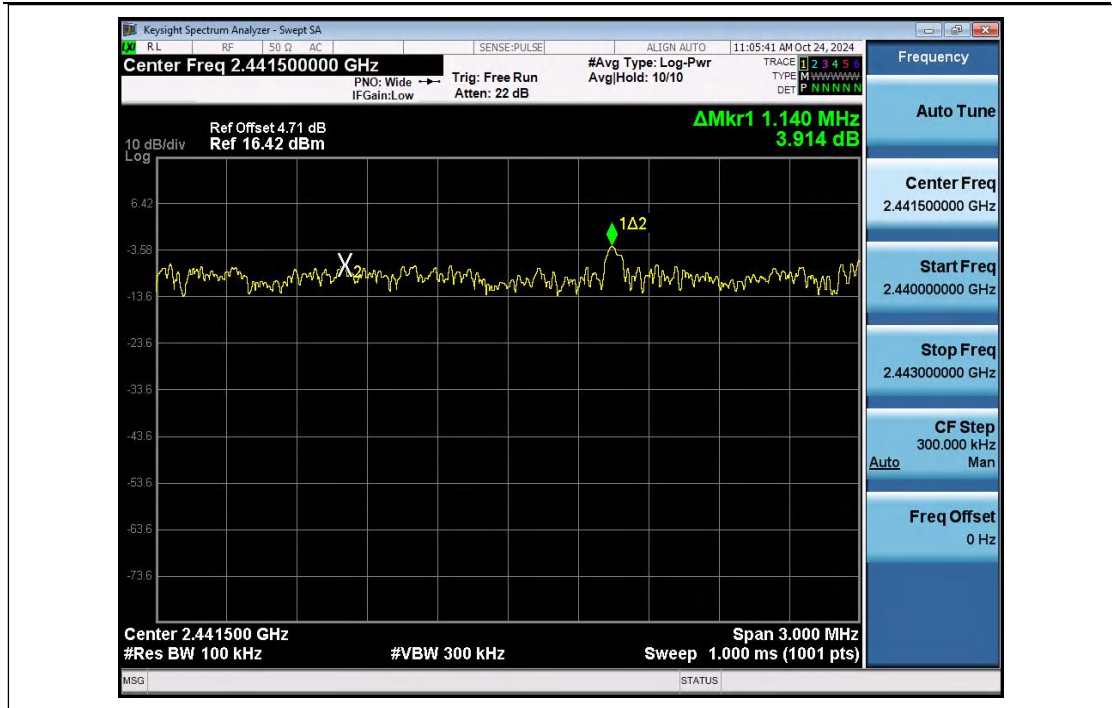


Carrier_Frequencies_Separation_(Hopping)_NVNT_ANT1_3-DH5_Hopping

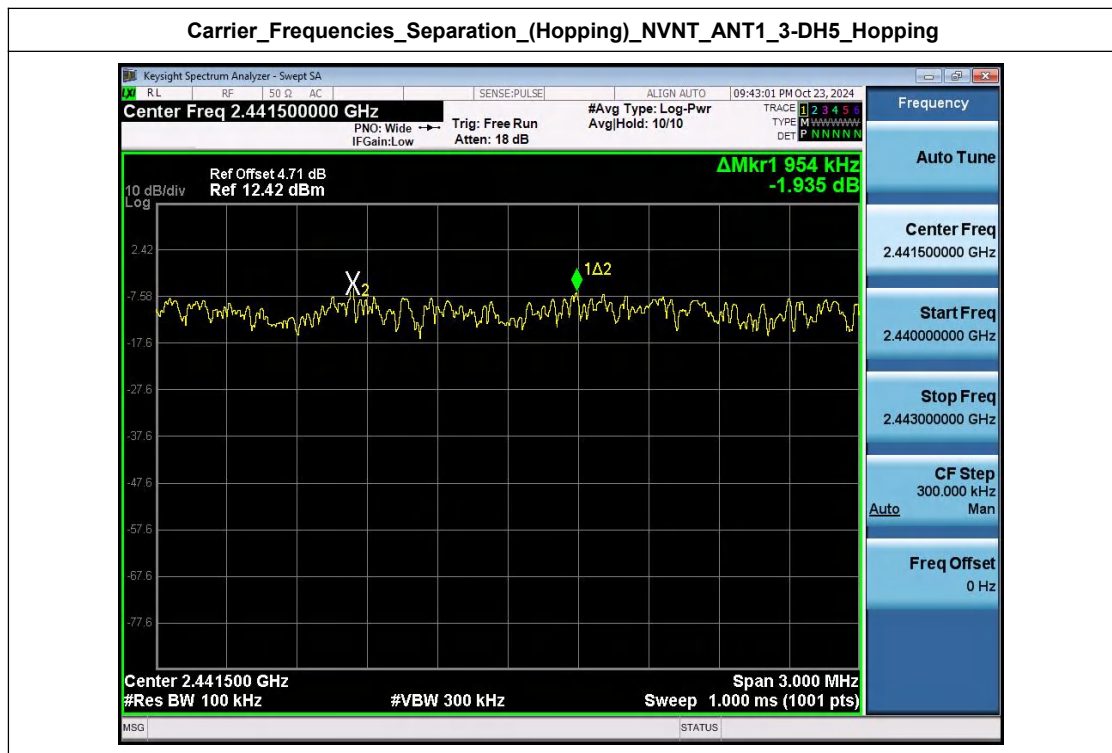


Appendix G: Number of Hopping Channel (Hopping)


Condition	Antenna	Modulation	Hopping Num	Limit	Result
NVNT	ANT1	1-DH5	79	75	Pass
NVNT	ANT1	2-DH5	79	15	Pass
NVNT	ANT1	3-DH5	79	15	Pass

Number_of_Hopping_Channel_(Hopping)_NVNT_ANT1_1-DH5_Hopping

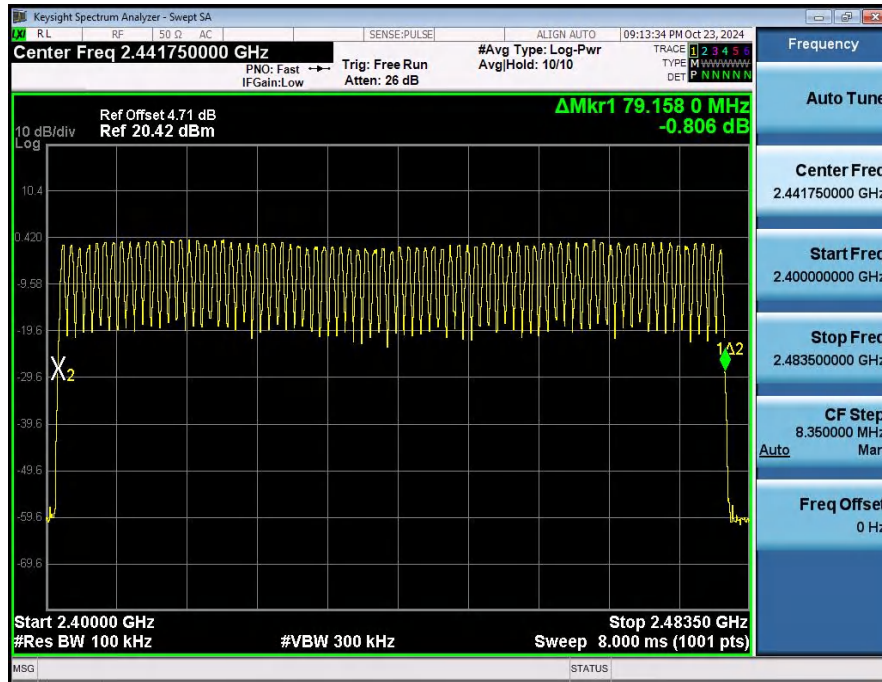

Number_of_Hopping_Channel_(Hopping)_NVNT_ANT1_2-DH5_Hopping

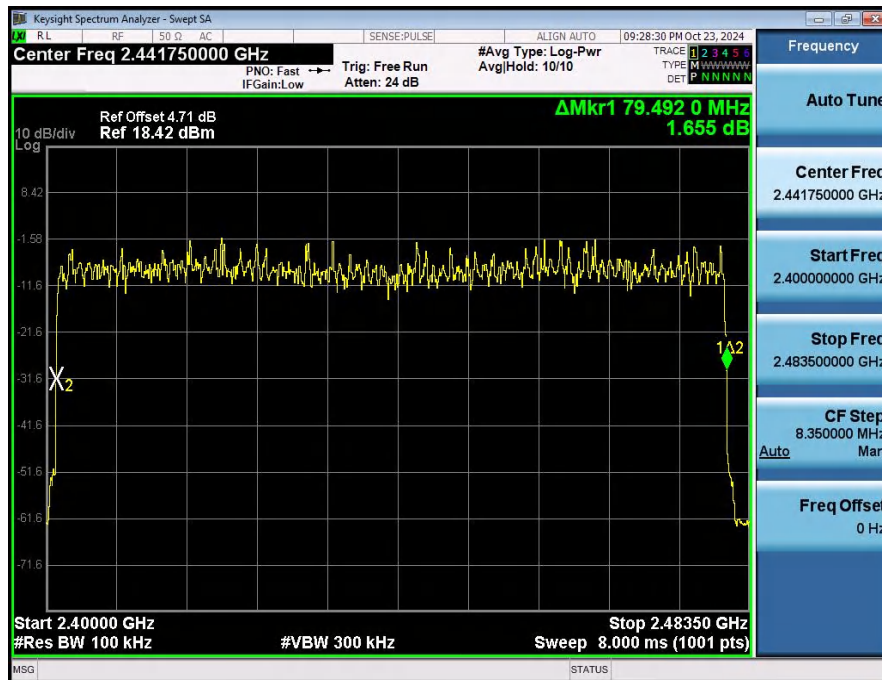

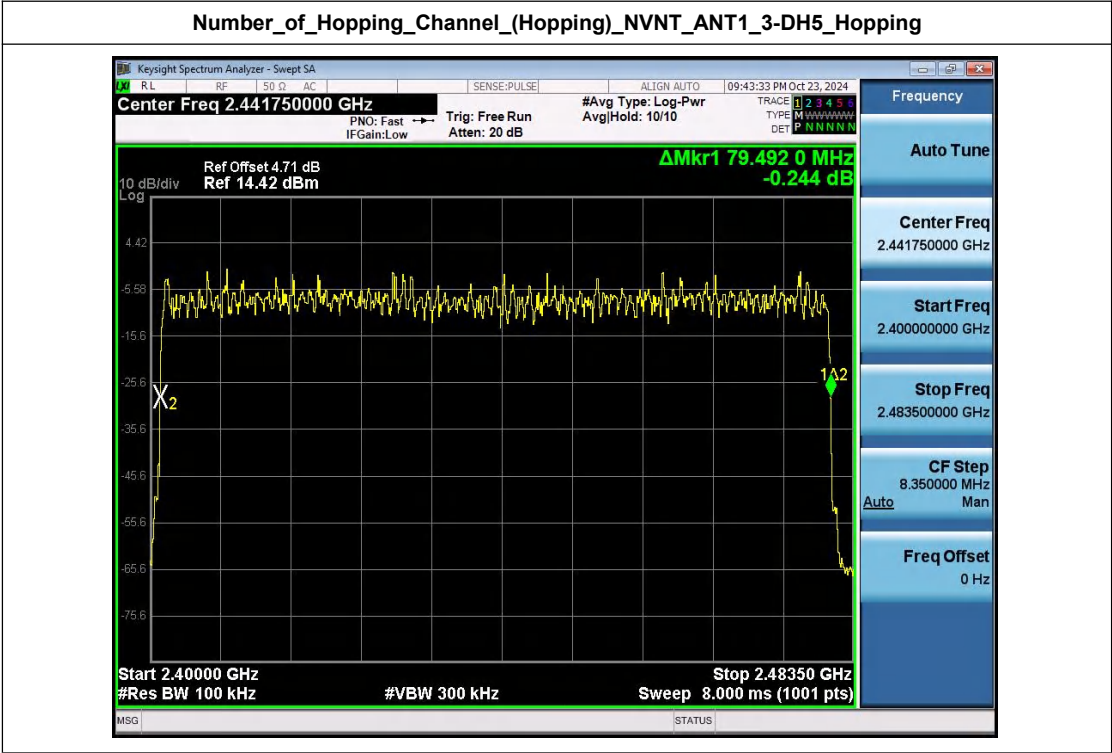

Shenzhen Anbotek Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com






Appendix H: Dwell Time (Hopping)

Condition	Antenna	Packet Type	Pulse Time(ms)	Hops	Dwell Time(ms)	Limit(s)	Result
NVNT	ANT1	1-DH5	2.880	114.00	328.320	0.40	Pass
NVNT	ANT1	2-DH5	2.884	109.00	314.356	0.40	Pass
NVNT	ANT1	3-DH5	2.887	99.00	285.813	0.40	Pass
NVNT	ANT1	1-DH1	0.376	1.00	0.376	0.40	Pass
NVNT	ANT1	1-DH3	1.633	165.00	269.445	0.40	Pass
NVNT	ANT1	2-DH1	0.276	320.00	88.320	0.40	Pass
NVNT	ANT1	2-DH3	1.640	156.00	255.840	0.40	Pass
NVNT	ANT1	3-DH1	0.384	1.00	0.384	0.40	Pass
NVNT	ANT1	3-DH3	1.635	160.00	261.600	0.40	Pass

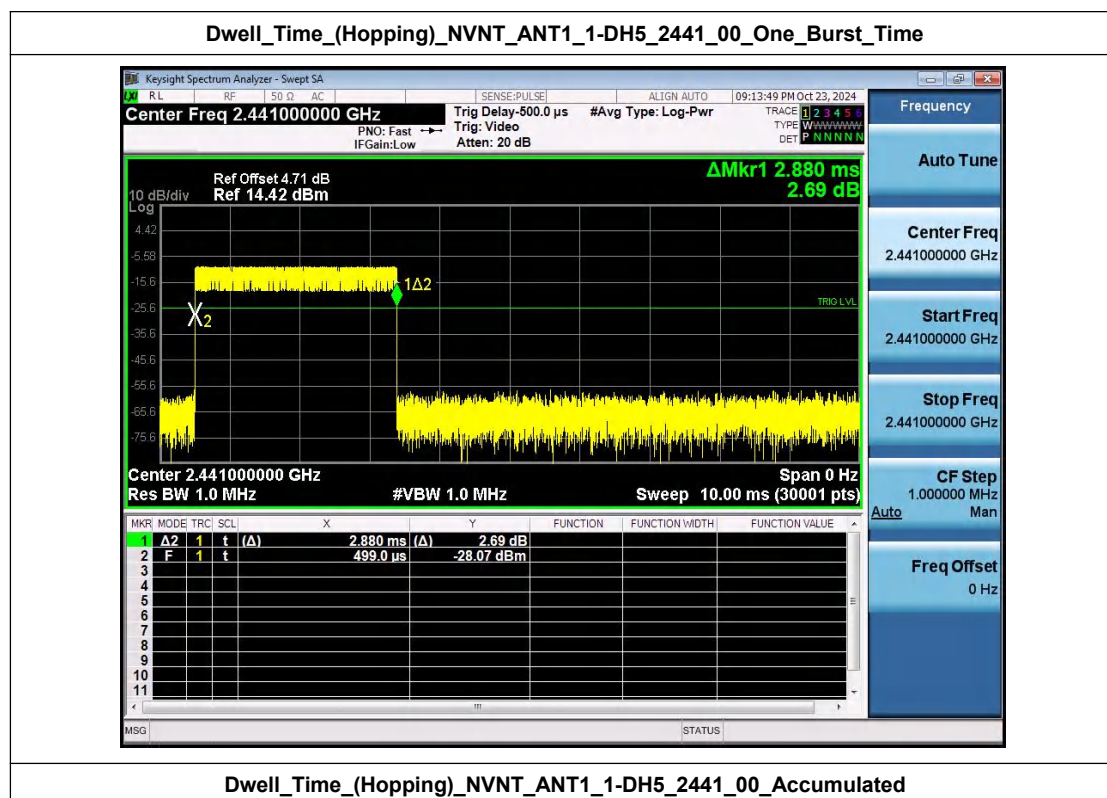


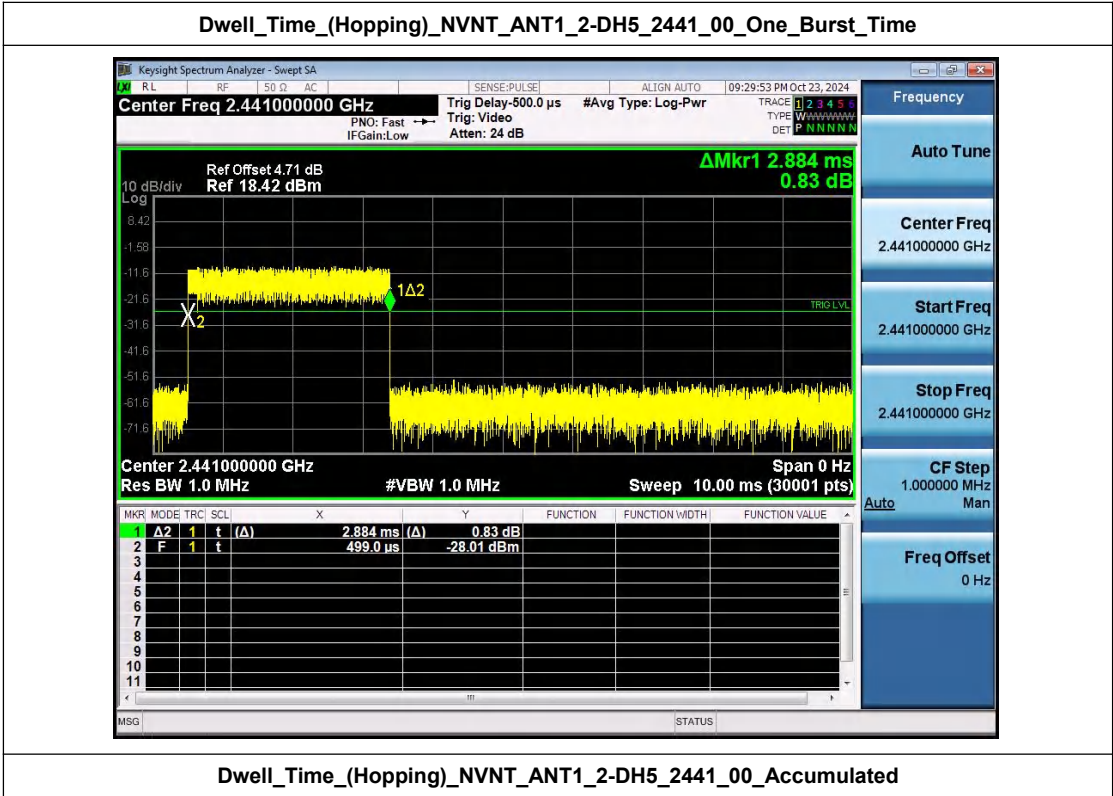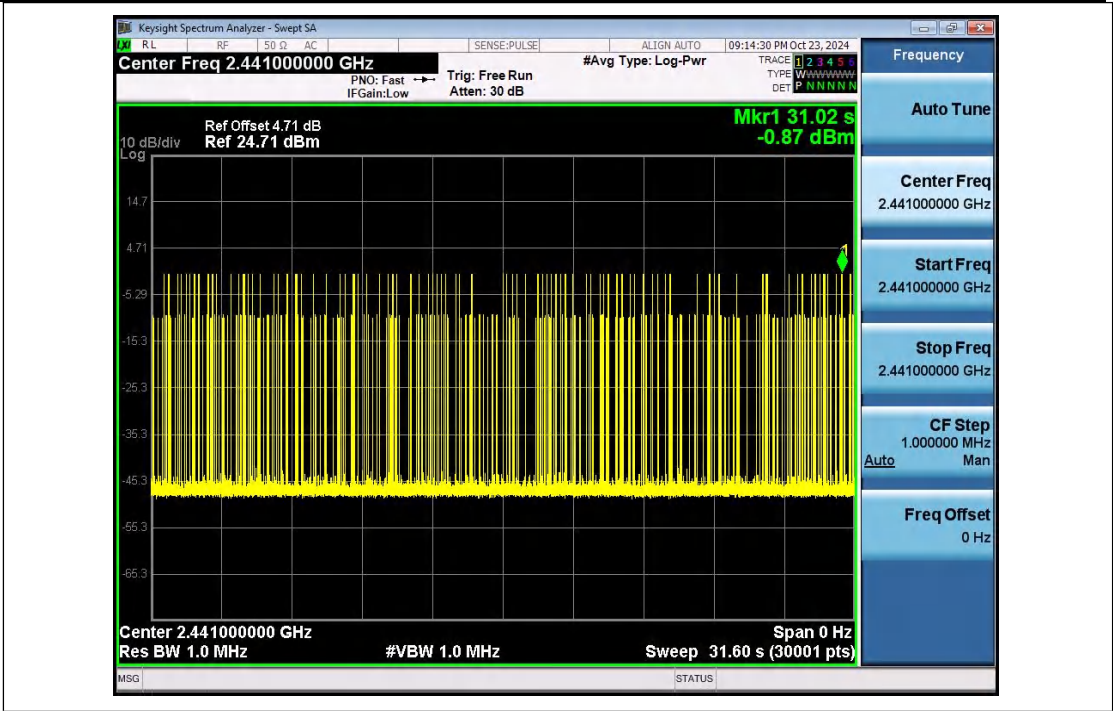

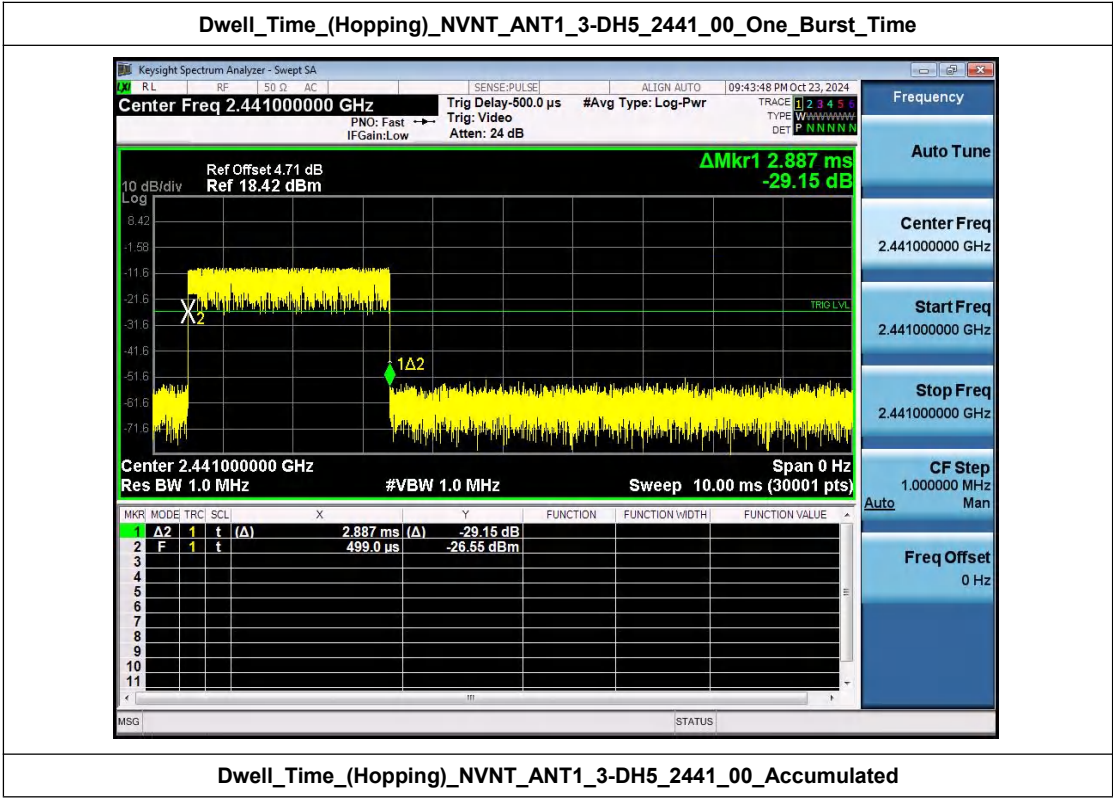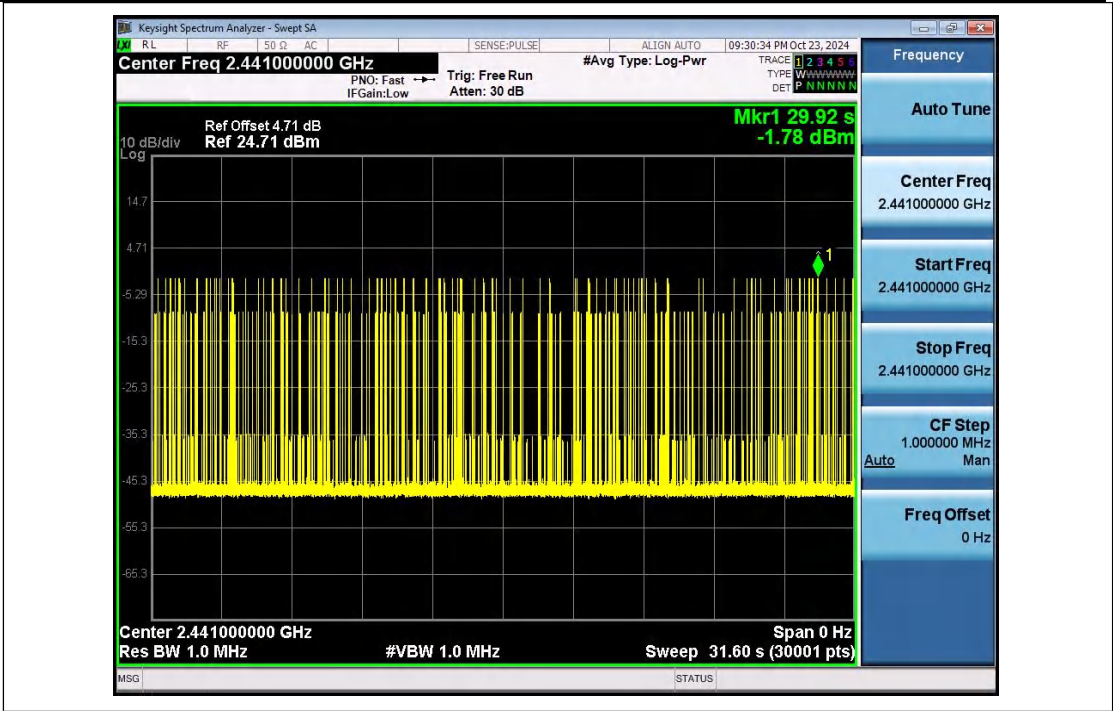


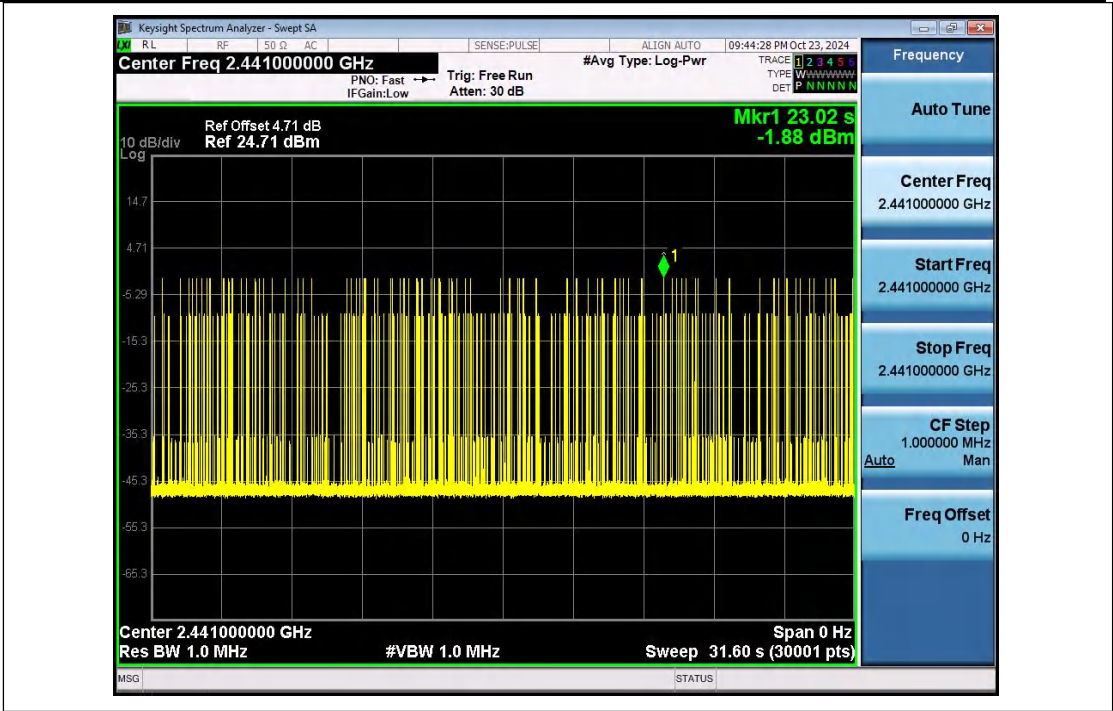




Dwell_Time_(Hopping)_NVNT_ANT1_1-DH1_2441_00_One_Burst_Time


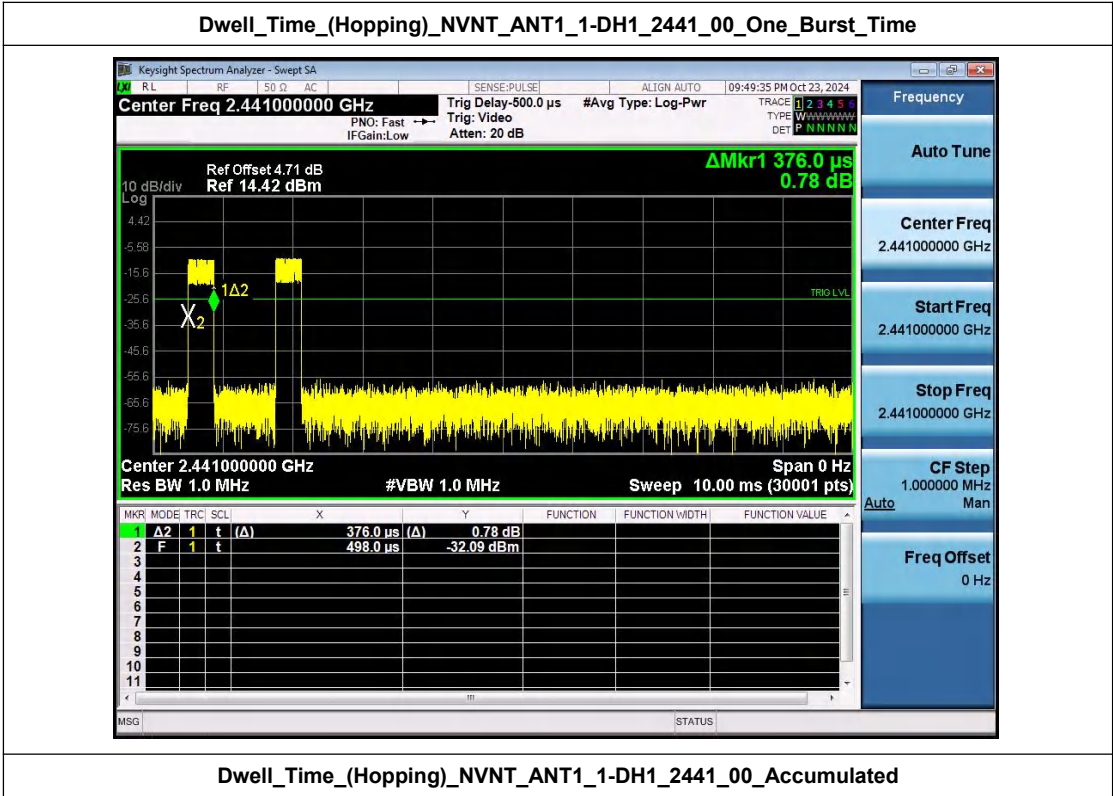




Dwell_Time_(Hopping)_NVNT_ANT1_1-DH1_2441_00_Accumulated





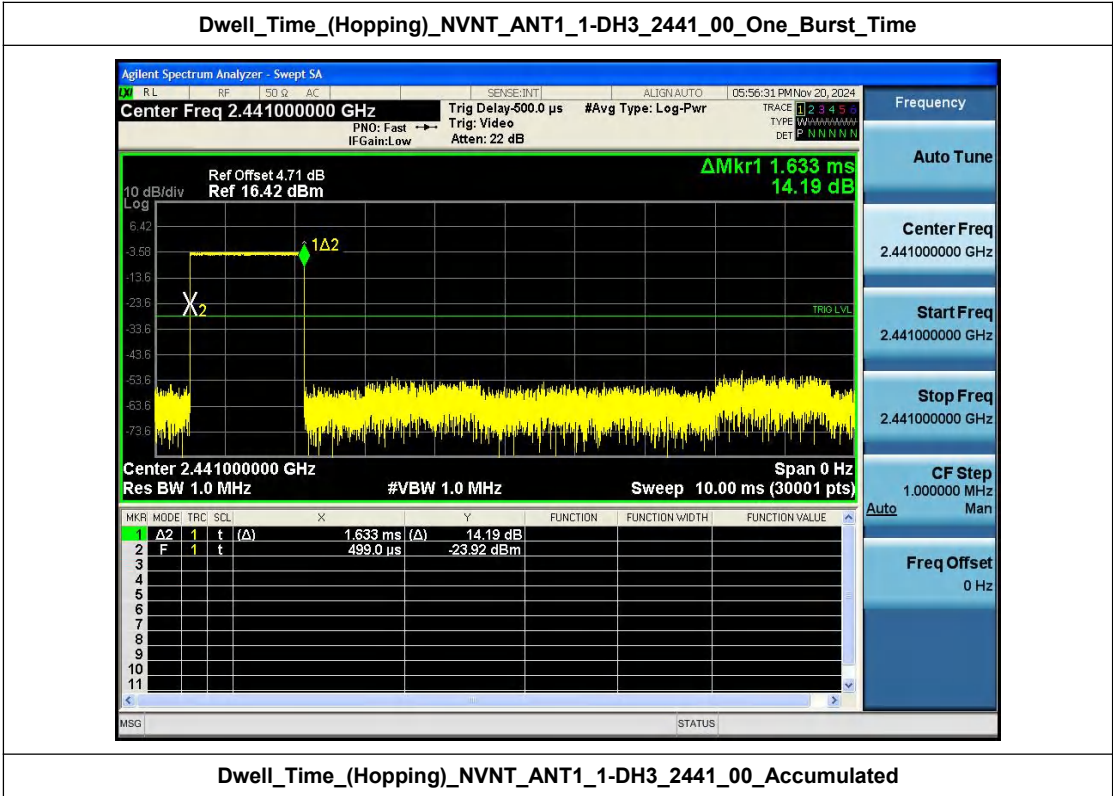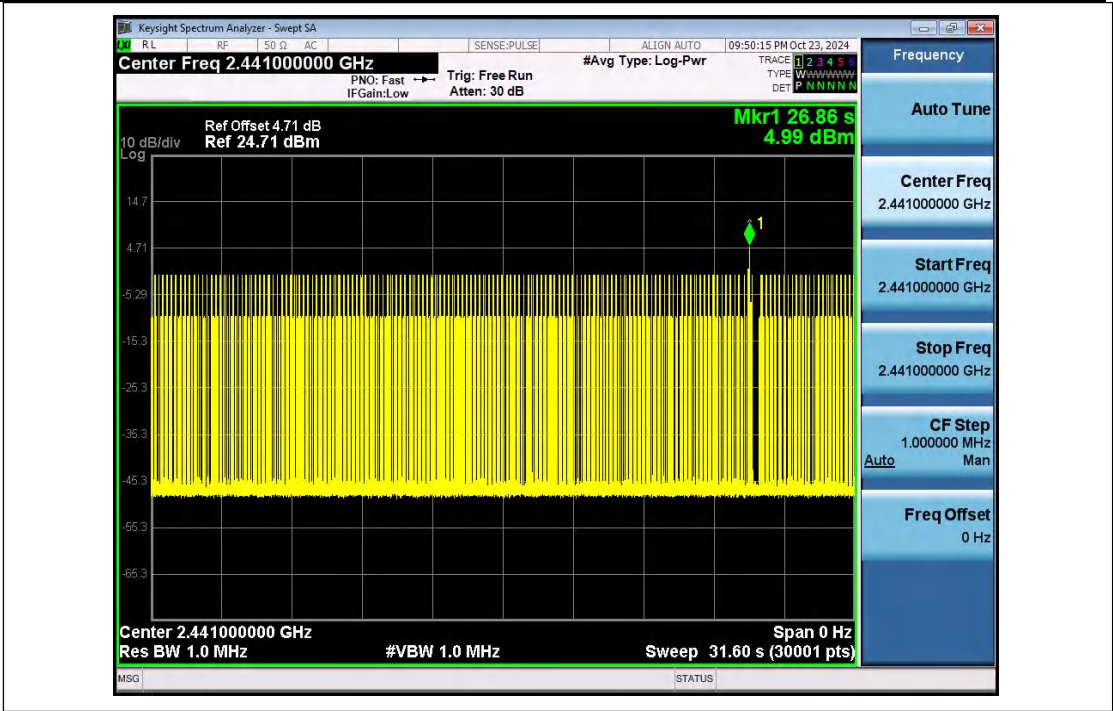


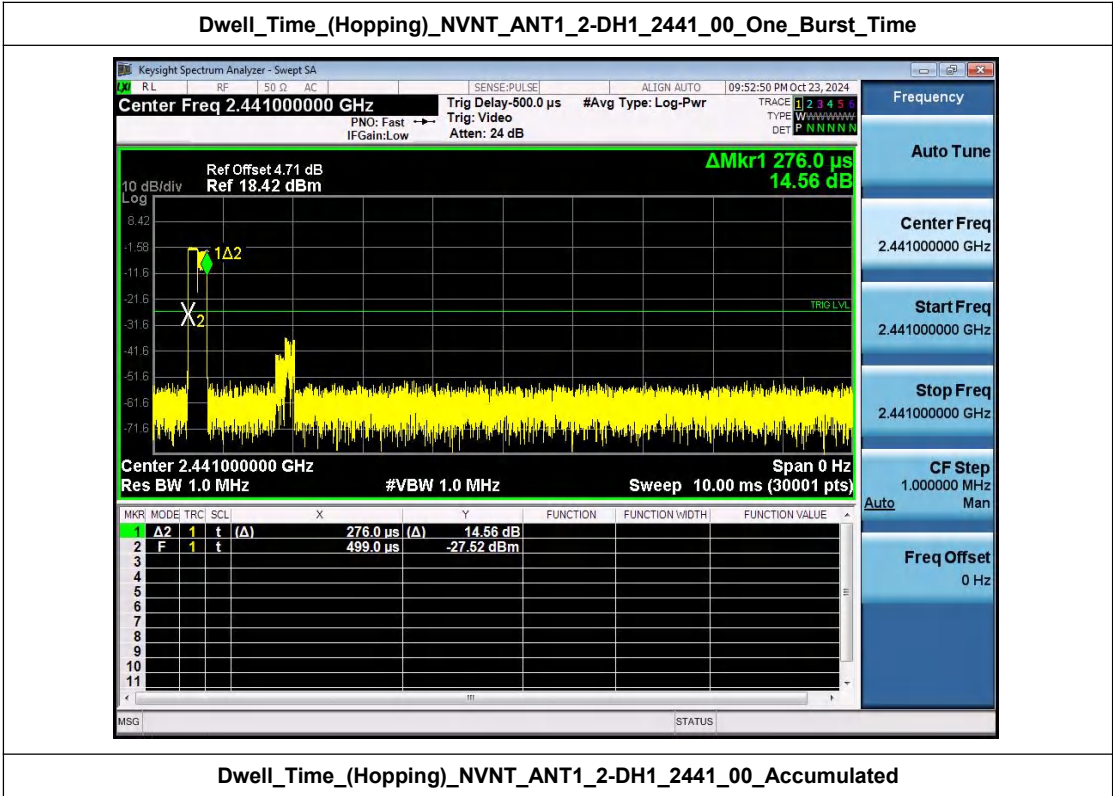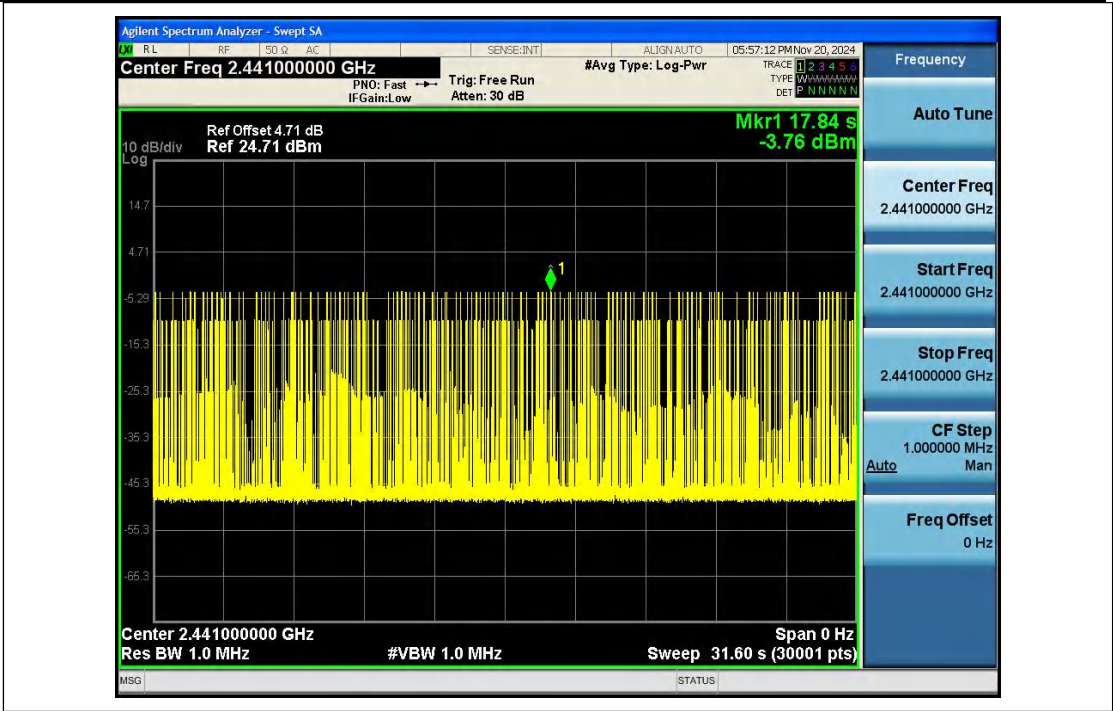

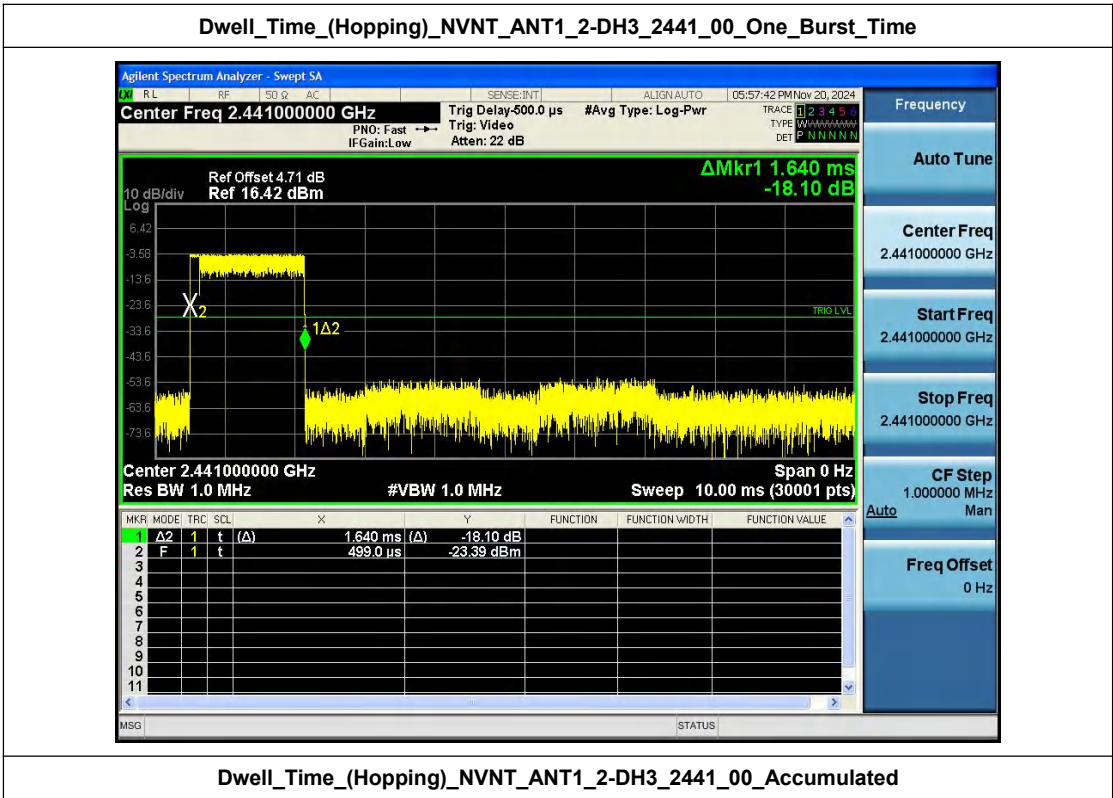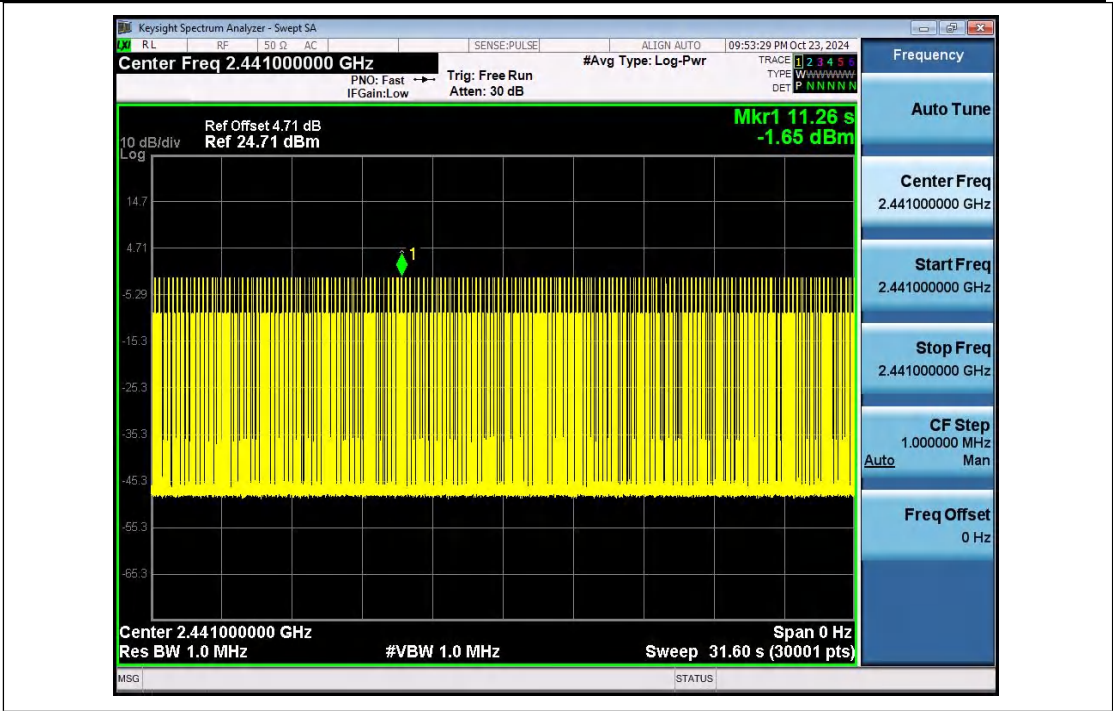

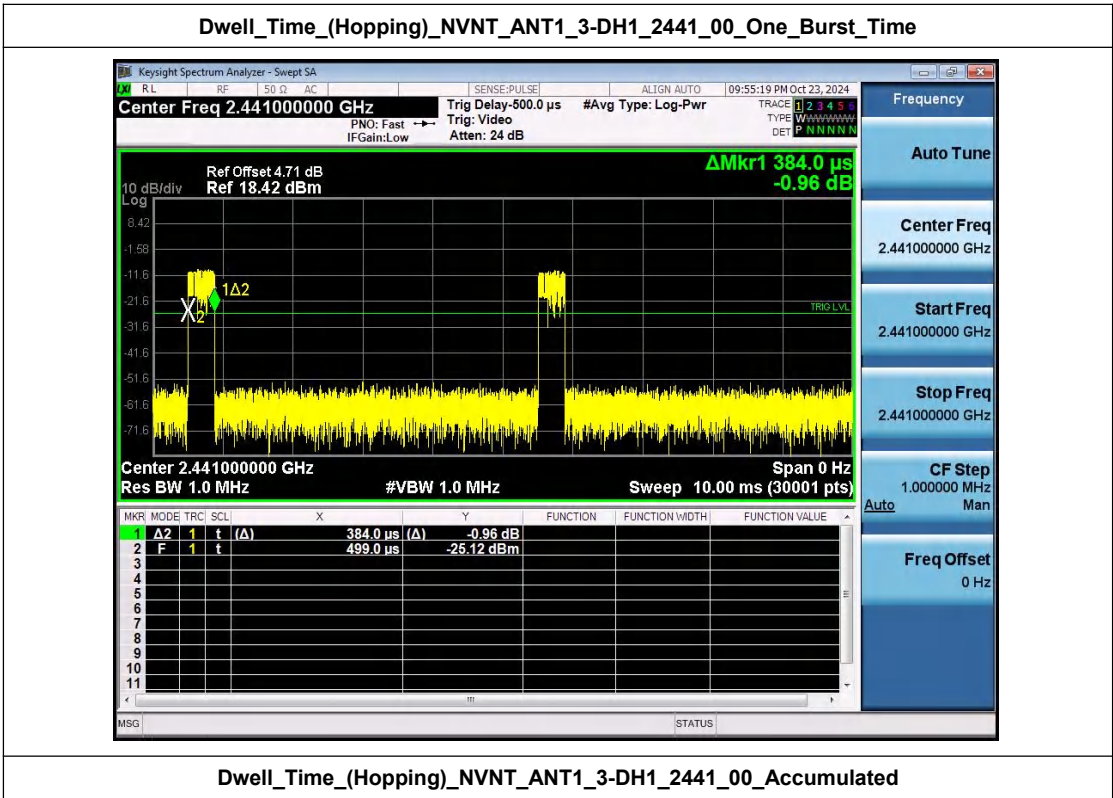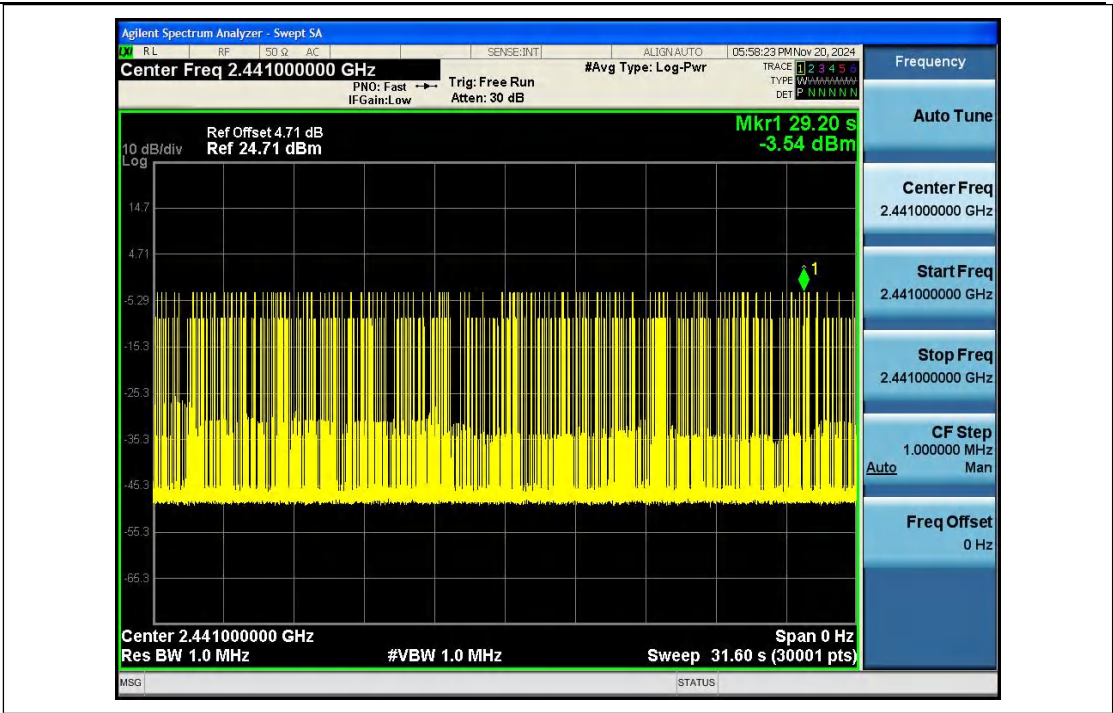

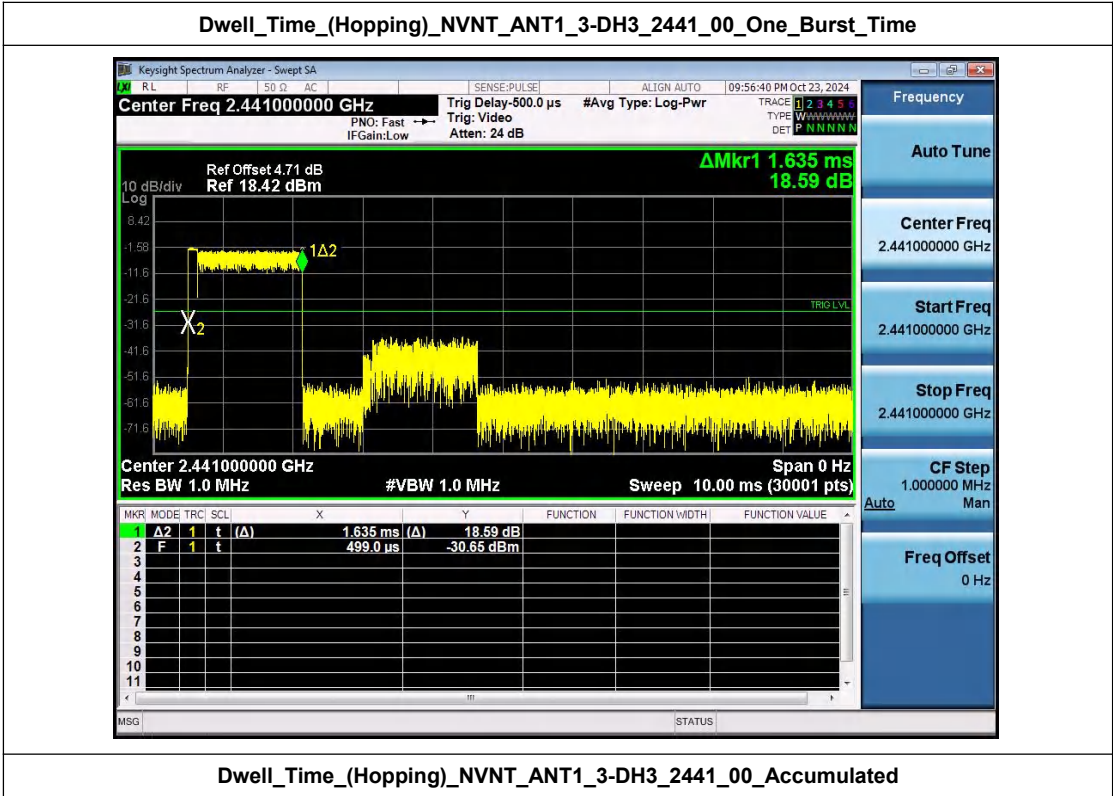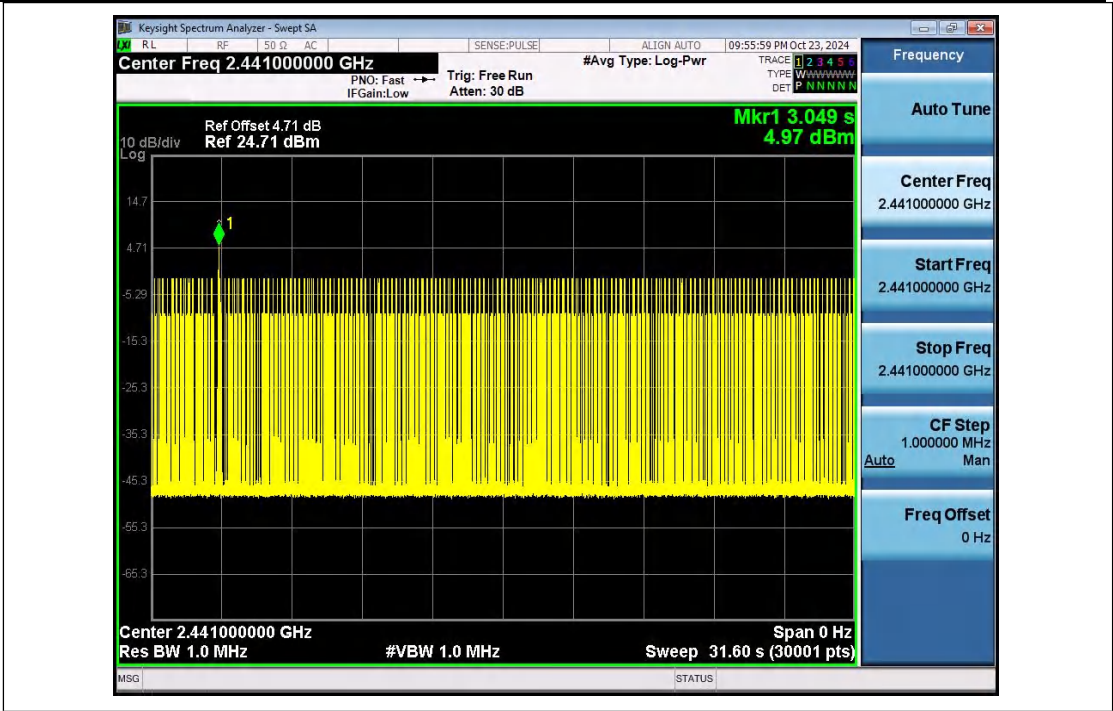

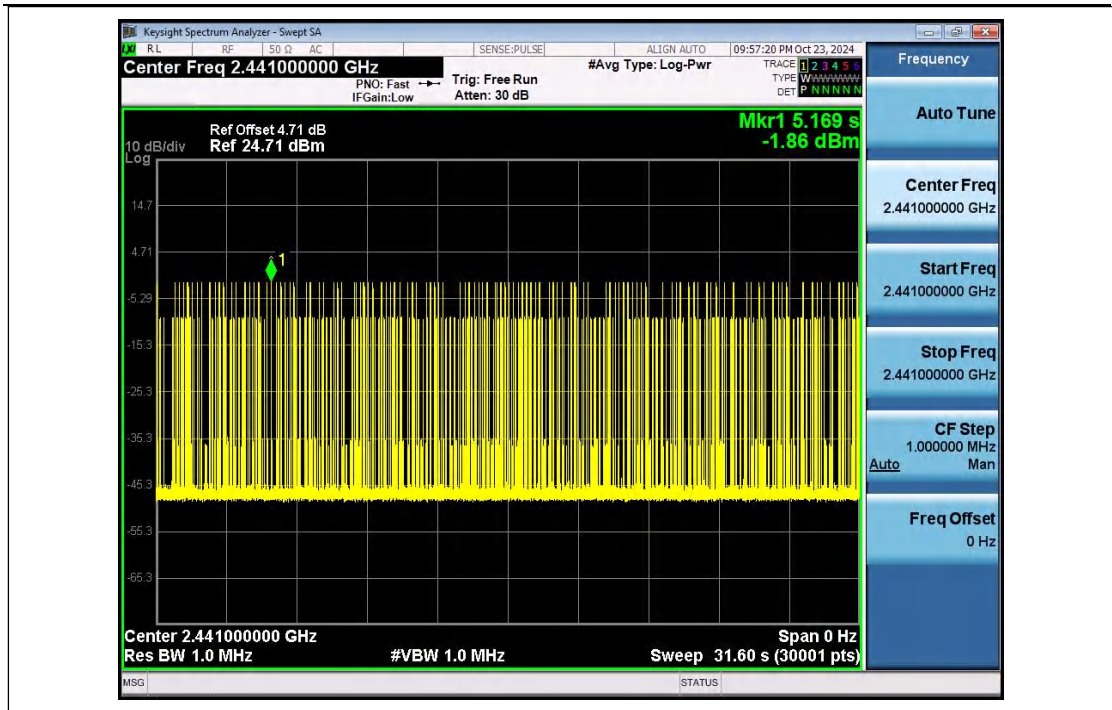

---END---

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com

