

**CyMedica Orthopedics®**  
**e-vive™ NMES USER'S MANUAL**

Read this manual carefully before operating the e-vive™ NMES System

Customer Service 1-844-CYM-2014

[www.cymedicaortho.com](http://www.cymedicaortho.com)

**Please log onto [www.cymedicaortho.com](http://www.cymedicaortho.com) for instructional videos  
related to the proper use of e-vive™ system.**



CY-0090-018

Rev. A

## Contents

<b>1 INTRODUCTION.....</b>	<b>4</b>
<b>2 INTENDED USE .....</b>	<b>4</b>
<b>3 SAFETY INFORMATION .....</b>	<b>6</b>
3.1 EXPLANATION OF SYMBOLS .....	6
3.2 DEFINITIONS .....	8
3.3 CONTRAINDICATION.....	9
3.4 WARNINGS.....	9
3.5 PRECAUTIONS.....	10
3.6 ADVERSE REACTIONS.....	13
<b>4 E-VIVE™ SYSTEM COMPONENTS .....</b>	<b>13</b>
4.1 e-vive™ Controller .....	13
4.2 Range of Motion Sensor Pod.....	16
4.3 Conductive Garment (NMES mode) .....	16
4.4 Electrodes and Covers .....	16
4.5 Electrode Gel .....	17
4.6 e-vive™ System Replacement Part Numbers .....	18
4.7 NMES Garment Electrodes Replacement Instructions.....	18
<b>5 E-VIVE™ OPERATING INSTRUCTIONS.....</b>	<b>20</b>
5.1 Charging and Storing the e-vive™ Controller .....	20
5.2 Wearing the NMES Conductive Garment .....	21
5.3 Operating the e-vive™ Device for NMES Treatment .....	23
5.4 Operating the e-vive™ device as a bilateral system (2 garments and one controller).....	28
5.5 Performing Range of Motion Test .....	28
<b>6 E-VIVE™ SYSTEM TROUBLESHOOTING.....</b>	<b>31</b>
<b>7 LIST OF ERROR MESSAGES .....</b>	<b>33</b>
<b>8 CUSTOMER SERVICE &amp; MAINTENANCE.....</b>	<b>33</b>
8.1 Customer Service .....	33

8.2	Repair.....	34
8.3	Cleaning and Maintenance.....	34
8.4	Operating Conditions.....	35
8.5	Transportation and Storage Conditions .....	35
8.6	Shelf Life or Use By Date Information .....	35
8.7	Expected Service Life and Disposal Information .....	35
8.8	Replacement Parts Ordering Information .....	36
8.9	Limited warranty .....	36
<b>9</b>	<b>TECHNICAL SPECIFICATIONS .....</b>	<b>37</b>
9.1	Waveform Information.....	37
9.2	Compliance Declaration .....	40
9.3	Guidance and Manufacturer's Declaration – Electromagnetic Emissions.....	40
9.4	FCC and IC.....	45
9.5	Wireless Quality of Service and Coexistence.....	46
9.6	Recommendations for Safe Wireless Connections.....	47
9.7	Wireless Connections Troubleshooting.....	47
9.8	Mobile Device Compatibility .....	48
9.9	Measurements Accuracy .....	49
9.10	Materials Specifications.....	49

## 1 INTRODUCTION

The CyMedica Orthopedics e-vive™ system with CyMotion® technology is an electrotherapy device providing neuromuscular electrical stimulation (NMES). The e-vive™ system is a prescription device in the USA and is intended for use under the direction of a medical provider. The device may be used in a health care facility setting or by a patient at home.

The e-vive™ closed loop system provides strong yet comfortable muscle activation. In NMES mode, pulses stimulate motor points of target muscles causing a contraction. The e-vive™ has two different NMES treatment programs: Post-Operative treatment and strength building. Each program treats atrophy and re-educates muscles.



Read this User Manual carefully before using the device. Pay attention to the Safety Information and Warnings throughout the manual.

**Caution:** Federal law restricts this device to sale by or on the order of a practitioner licensed by the law of the State in which he/she practices to use or order the use of the device.

This product is covered by one or more U.S. Patents, see [www.cymedicaortho.com](http://www.cymedicaortho.com) for details.

## 2 INTENDED USE

The e-vive™ System is an electrotherapy device with a neuromuscular electrical stimulation (NMES) treatment mode. The intended use of the e-vive™ NMES device, including any indications for use, is limited to use in rehabilitation, including providing adjunctive therapy in rehabilitation for medical purposes.

In addition, the e-vive™ device is intended to evaluate joint function by measuring and recording range of motion.

## Indications for Use:

As an NMES device, indications are for the following conditions:

- Relaxation of muscle spasms
- Retardation or prevention of disuse atrophy
- Increasing local blood circulation
- Re-educating muscles
- Immediate post-surgical stimulation of calf muscles to prevent venous thrombosis
- Maintaining or increasing range of motion

## Use environment

The e-vive™ system is a prescription device in the USA and is intended for use in accordance with the directions of a health care provider. The device may be used in a health care facility setting or by a patient or lay operator in a home environment.

## 3 SAFETY INFORMATION

### 3.1 EXPLANATION OF SYMBOLS

The following symbols are used in this user's manual, and on the device packaging, or on the device or accessory labeling.

Symbol	Description	Reference Number for Symbol
	Reference number; part number	ISO 15223-1:2012(E) 5.1.6
	Lot number	ISO 15223-1:2012(E) 5.1.5
	Serial Number	ISO 7000:2014-2498
	Manufacturing date	ISO 15223-1:2012(E) 5.1.3
	Legal Manufacturer name and address	ISO 15223-1:2012(E) 5.1.1
	Follow instructions for use	ISO 7010:2011-M002
	Expiration date	ISO 15223-1:2012(E) 5.1.4
	The system is provided Non Sterile	ISO 15223-1:2012(E) 5.2.7
	Prescription only (USA)	FDA General Guidance Device Labeling – FDA 89-4203
	Minimum and maximum operating range temperature range	ISO 15223-1:2012(E) 5.3.7
	Humidity Limitation	ISO 7000:2014-2620

	Temperature Limitation	ISO 7000:2014-0632
	Pressure Limitation	ISO 7000:2014-2621
	Keep the device away from sunlight	ISO 15223-1:2012(E) 5.3.2
	Keep the device dry	ISO 15223-1:2012(E) 5.3.4
	Do not iron device	ISO 7000:2014-3113
	Do not machine wash device	ISO 7000:2014-3123
	Do not use bleach to clean device	ISO 7000:2014-3124
	Do not tumble dry device	ISO 7000:2014-3109
	Do not dry clean	ISO 7000:2014-3114
	CE Marking	Medical Device Directive 93/42/EEC
	Authorized Representative	ISO 15223-1:2012(E) 5.1.2
	ETL Classified C US, 9900900, Electronic Testing Lab, indicates product meets US and Canadian product safety standards. This device conforms to AAMI Std. ES60601-1. Certified to CAN/CSA Std. C22.2#60601-1	ISO 60601-1:2005(E)
	Attention – consult instructions for use	ISO 15223-1:2012(E)
	Caution	ISO 15223-1:2012(E) 5.4.4
<b>IP20</b>	Protection against medium-sized foreign bodies with a diameter > 12 mm	IEC 60529 Edition 2.1 2001-02

<b>IP02</b>	Protection against vertically falling water drops when enclosure tilted up to 15°	IEC 60529 Edition 2.1 2001-02
<b>IP22</b>	Protection against medium-sized foreign bodies with a diameter > 12 mm; Protection against vertically falling water drops when enclosure tilted up to 15°	IEC 60529 Edition 2.1 2001-02
	Type BF applied parts	IEC 60417.1-2004-5333
	Lead wires comply with the performance standard for electrode lead wires (21 CFR part 898)	IEC 60417.1-2004-5035
	Product contains electrical and electronic equipment. User should not discard this product along with other household waste; it must be collected and treated separately.	Directive 2016/19/EU
	Wireless	ISO 7000:2014-3600
	Bluetooth Low Energy	IEEE 802.15.1-2005

### 3.2 DEFINITIONS

- Applied Parts – Part of the medical equipment, which is designed to come into physical contact with the patient, or parts that are likely to be brought into contact with the patient. For example, the electrodes are an example of an applied part.

### **3.3 CONTRAINDICATION**

- Powered muscle stimulators should not be used on patients with cardiac demand pacemakers.

### **3.4 WARNINGS**

1. The long-term effects of chronic electrical stimulation are unknown.
2. Stimulation should not be applied over the carotid sinus nerves, particularly in patients with a known sensitivity to the carotid sinus reflex.
3. Stimulation should not be applied over the neck or mouth. Severe spasm of the laryngeal and pharyngeal muscles may occur, and the contractions may be strong enough to close the airway or cause difficulty in breathing.
4. Stimulation should not be applied transthoracically in that the introduction of electrical current into the heart may cause cardiac arrhythmias.
5. Stimulation should not be applied transcerebrally.
6. Stimulation should not be applied over swollen, infected, or inflamed areas or skin eruptions, e.g., phlebitis, thrombophlebitis, varicose veins, etc.
7. Stimulation should not be applied over, or in proximity to, cancerous lesions.
8. Do not apply stimulation in the presence of electronic monitoring equipment (e.g., cardiac monitors, ECG alarms), which may not operate properly when the electrical stimulation device is in use.
9. No modification of this device is allowed.
10. Use this device only with the leads, electrodes, electrode gel, and accessories recommended by CyMedica Orthopedics indicated in this User's Manual document.
11. Do not use this device while connected to high frequency surgical equipment. The simultaneous connection may result in burns at the site of the electrodes and possible damage to the device.
12. Do not use this device in close proximity (e.g. 1 m) of a shortwave or microwave equipment. The close proximity may produce instability in device performance.

13. Do not service or perform any maintenance on device while in use.
14. Do not apply the treatment continuously more than one full cycle at a time (20 minutes for NMES treatment). Allow a minimum of three hours rest in between each treatment.

### **3.5 PRECAUTIONS**

1. Safety of powered muscle stimulators for use during pregnancy has not been established.
2. Caution should be used for patients with suspected or diagnosed heart problems.
3. Caution should be used for patients with suspected or diagnosed epilepsy.
4. Caution should be used in the presence of the following:
  - a- When there is a tendency to hemorrhage following acute trauma or fracture;
  - b- Following recent surgical procedures when muscle contraction may disrupt the healing process;
  - c- Over the menstruating or pregnant uterus; and
  - d- Over areas of the skin which lack normal sensation.
5. Some patients may experience skin irritation or hypersensitivity due to the electrical stimulation or electrical conductive medium. The irritation can usually be reduced by using an alternate conductive medium, or alternate electrode placement.
6. Electrode placement and stimulation settings should be based on the guidance of the prescribing practitioner.
7. Powered muscle stimulators should be kept out of the reach of children.
8. Powered muscle stimulators should be used only with the leads and electrodes recommended for use by the manufacturer.
9. Portable powered muscle stimulators such as e-vive™ device should not be used while driving, operating machinery, or during any activity in which involuntary muscle contractions may put the user at undue risk of injury.
10. Inspect electrodes before each use. Replace electrodes when they begin to deteriorate or lose adhesion. Poor contact between the electrodes and the patient's skin increases the risk of skin irritation or burns. Electrodes will last longer if used and stored according to instructions on electrode packaging. Attach

the electrodes in such a way that their entire surface is in contact with the skin.

11. Use of electrodes with an active area less than 16 cm<sup>2</sup> will risk suffering a burn injury. Caution should always be exercised with current densities more than 2 mA/cm<sup>2</sup>.
12. Do not wrap electrode lead wires around your neck and keep them out of the reach of children. Strangulation may result from entanglement in the electrode lead wires.
13. Keep this device out of the reach of children.
14. Do not allow any foreign bodies (soil, water, metal, etc.) to penetrate the e-vive™ device and the battery compartment.
15. Do not use the e-vive™ Conductive Garment in proximity of fire or excessive heat sources due to the risk of fire. Make sure that the electrodes cover the connectors on the garment before use to avoid shocking, skin irritation, and burns.
16. Care should be used to avoid tripping on lead wires.
17. Do not operate this device while charging.
18. Do not disconnect any stimulation cables during a session while the stimulator is switched on. Switch the stimulator off first. Always turn off the stimulator before moving or removing any electrodes during a session.
19. Do not apply stimulation in the vicinity of metal. Remove jewelry, body piercings, buckles or any other removable metallic product or device in the area of stimulation.
20. Never use the electrodes contra-laterally; i.e., do not use two pins connected to the same channel on opposite segments of the body.
21. For an effective stimulation and maximum comfort, follow your clinician instructions or the following guideline for placing the electrodes on the Conductive Garment.
22. Hair may be trimmed in vicinity of electrodes for additional comfort.
23. Apply electrode gel on the treatment area of the skin for additional comfort.
24. The following equipment or environments could generate enough electromagnetic interference to potentially create

unwanted activation of your e-vive™ system. Avoid them if possible.

- a. Antennas of citizen band (CB) or ham radios.
- b. Electric arc welding equipment.
- c. Electric induction heaters.
- d. Electric steel furnaces.
- e. High-voltage areas (safe if outside the fenced area).
- f. Large stereo speakers.
- g. Magnets or other equipment that generate strong magnetic fields.
- h. Microwave communication transmitters (safe if outside the fenced area).
- i. Power lines or power generators.
- j. Television and radio transmitting towers (safe if outside the fenced area).

25. If you suspect that equipment is interfering with the e-vive™ system, do the following:

- a. Move away from the equipment or object.
- b. If possible, turn off the equipment or object,

26. The presence of lint, dust, pets, pests, and children in the operating environment can impact the performance of the e-vive™ system. Prior to use, the system should be inspected for the following:

- a. Dust, dirt, lint, or pet hair on the face of the electrode(s). Should the electrodes pick up small amounts of debris you may use a drop of water or the electrode gel on your finger to gently rub the debris off the electrode. Electrodes are reusable as long as they are clean without any sign of visible damage and still tacky. Replace the electrodes if they no longer adhere to the skin properly.
- b. Damage may be caused to the e-vive™ controller, e-vive™ cradle, or electrode wires by pests, pets, or children. If there is evidence of damage, the system should be returned to CyMedica Orthopedics.

27. Device contains small parts, which may present a choking hazard to small children. Keep the e-vive™ device and its accessories away from small children.

### **3.6 ADVERSE REACTIONS**

- Skin irritation and burns beneath the electrodes have been reported with the use of powered muscle stimulators.

## **4 E-VIVE™ SYSTEM COMPONENTS**

The e-vive™ system provides NMES treatment to prevent or reduce quadriceps atrophy.

The e-vive™ NMES system consists of a NMES control unit, universal USB charging cord, NMES conductive garment, NMES electrodes, and electrode gel. The user interface is controlled by a proprietary smart phone or tablet CyMedica e-vive™ application (app) that must be downloaded from an App store and installed to your personal device in order to operate the control unit.

To download the app go to the App Store or Google Play for your device and search for “CyMedica e-vive™”. Select download/install and follow the prompts to complete your profile.

### **4.1 e-vive™ Controller**

The e-vive™ controller is the stimulation generator and the e-vive™ app controls this device for the e-vive™ system. It sends the selected therapeutic program to the electrodes on the body. The controller has a single tactile power button for on/off/pause user control, and the e-vive™ app controls the levels of intensity and captures rehabilitation and usage data.



On/Off/Pause  
Button

Battery Charge Port

e-vive™ app available for download



In the ON position, the LED light on the e-vive™ controller will illuminate white indicating that the system is powered on and ready, but not connected to Bluetooth. The e-vive™ controller will turn blue when connected to Bluetooth, indicating the mobile e-vive™ app and the mobile device are ready to deliver stimulation treatment. In the OFF position, the LED light on the e-vive™ controller will no longer illuminate. The controller will be off and will not deliver treatment.

#### Controller Protective Cover



A protective cover is included in the device packaging to protect it from damage due to an accidental drop and/or an accidental water spill.

### **Battery Charge Port**

Plug the universal USB charging cord into a standard 5V USB wall charger adapter and then plug into the e-vive™ controller micro USB port to recharge the e-vive™ controller.

### **Charging the Controller**

When charging the controller battery, the LED light on the controller (near the USB charging port) will blink blue. When fully charged, the LED light will stop blinking and be solid blue. When the charging cable is disconnected the charging LED blue light will turn off.

The battery can be fully charged in approximately 4 hours. A fully charged controller can deliver at least three 20-minute treatment programs before it needs to be charged again.

### **Universal USB cord**

The universal USB charging cord should be plugged into a standard 5V USB Wall adapter to charge the e-vive controller. A power supply is not provided with the e-vive system.



#### 4.2 Range of Motion Sensor Pod

The e-vive range of motion sensor is used to evaluate the full movement potential of the knee joint, usually its range of flexion and extension. The sensor pod cannot be removed from the garment.



Sensor pod

#### 4.3 Conductive Garment (NMES mode only)

The e-vive™ NMES conductive garment is used to position the electrodes to your thigh during NMES treatment.




Electrodes

#### 4.4 Electrodes and Covers

The e-vive™ system uses hydrogel electrodes to deliver the stimulation program to your thigh muscles. The NMES conductive garment employs three electrodes: two 2" x 3.5" (5 cm x 10 cm) electrodes and one 2" x 2" (5 cm x 5 cm) electrode.

These electrodes are reusable if they are clean and without any sign of visible damage, and still tacky.

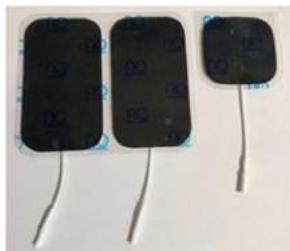

NMES  
Electrodes

The electrode covers protect the electrodes from debris and damage while not in use. Before treatment, remove clear plastic covers so the electrodes can contact the skin. After treatment, place the plastic side of the supplied black electrode cover over the electrode.



Electrode  
Covers

#### 4.5    Electrode Gel

Electrode gel can be used for additional treatment comfort for patients with dry skin. CyMedica recommends utilizing a small amount of gel to hydrate the skin where the electrodes will be placed on the leg.



Electrode  
Gel

#### 4.6 e-vive™ System Replacement Part Numbers

The table below shows a list of replacement electrode sets. Please visit the CyMedica Orthopedics shop page at <https://www.cymedicaortho.com/shop> to order these items. Contact CyMedica Orthopedics (1-844-CYM-2014) if you have any questions about online ordering.

Part	Part Number
e-vive™ NMES Electrodes Set	CY-1000-183
Electrode covers	CY-1000-034

#### 4.7 NMES Garment Electrodes Replacement Instructions


Your garment is provided with pre-installed electrode wires with protective caps covering the metal conductive pins. Follow these instructions to initially place or change your electrodes with a new set:

Acquire an electrode set. If this is the first time you are placing electrodes on your garment, remove the plastic electrode pin covers. If you are replacing electrodes already on your garment, gently peel the existing electrodes from the garment.





Pull the white wire connected to the electrode out of garment until second wire (blue, black, red) is exposed. Unplug the white electrode wire. Position a new electrode of the same size (2" x 2" or 2" x 3.5") so the black sticky side of electrode is facing up, the attachment side is facing down, and firmly place within the electrode outlines on the garment. Plug in the new electrode all of the way so that the metal pin is completely covered.

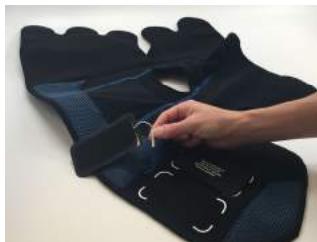

Push electrode wire back into garment as far as possible.



Remove clear plastic liner from top of electrode. After removing the clear plastic liner, place the reusable black electrode cover from packaging or the old electrode on the new electrode. Repeat the above steps for the other two electrodes.



## 5 e-vive™ OPERATING INSTRUCTIONS

### 5.1 Charging and Storing the e-vive™ Controller

When not in use, the e-vive™ controller can be stored in the docking pod attached to the conductive garment.

To charge the controller, undock it from the docking pod and attach the supplied USB charging cord to a standard 5V wall adapter charger. Plug the small, micro USB end of the USB cable into the side of the e-vive™ controller. While charging, the LED light (near the USB charging port) will blink blue until fully charged. Once fully charged, the blue LED light will stop blinking and remain a solid blue until the charging cable is removed.



## 5.2 Wearing the NMES Conductive Garment- NMES Treatment

The e-vive™ NMES System is designed to specifically target and activate two important muscles of the quadriceps: the vastus medialis oblique (VMO) muscle located near the inner part of the upper knee area, and the rectus femoris (RF) muscle located at the top-middle part of the thigh.



For best results: Wash and dry skin. Apply a small, pea-sized amount of electrode gel to electrode area of skin. Remove electrode covers from all three electrodes.

Sit down with the leg extended. Place the conductive garment under the leg. The blue surface should be against the back of the thigh and the round cutout behind the knee.

(Note: The pictures shown here are for the right leg garment).



Pull garment strap 1 over the electrode flap and attach to the garment as shown.

Wrap the calf side flap over the top of the leg.

Pull garment strap 2 over the calf flap and attach as shown. Verify the front knee opening fits comfortably around the knee.

Attach garment straps 3 and 4 in order around leg ensuring a snug but comfortable fit as shown.

Wrap the electrode flap over top of thigh as shown.





Refer to the CyMedica Orthopedics website, [www.cymedicaortho.com](http://www.cymedicaortho.com) for instructions related to the use of e-vive™ post-operative range of motion knee brace.

### **5.3 Operating the e-vive™ Device for NMES Treatment**

All electrodes should be in direct contact with the skin. Turn on the e-vive™ controller by pressing the power button. When the controller is turned on, the LED light on the controller will glow white, indicating that the system is powered on and ready, but is not connected to Bluetooth.

The e-vive™ controller will turn blue when connected to Bluetooth, indicating that the mobile app and the mobile device are ready to deliver a stimulation treatment. The LED light on the e-vive™ controller will glow yellow when a treatment is in progress and will blink yellow when the treatment is in progress and is outputting energy.

When the LED light is alternating blue and yellow, the controller is connected but the treatment is paused. Alternating white and yellow LED lights mean the controller is not connected to Bluetooth and the treatment is paused. When powered off, the LED light on the e-vive™ controller will turn off. The controller will be off and will not deliver treatment. After powering off, wait at least 5 seconds before turning the controller back on.

If the LED on the controller flashes red contact the CyMedica Customer Service (refer Section 8.1).

Purple	Controller is ON, not in dock
White	Controller is ON and in dock, not connected to Bluetooth
Blue	Controller is ON, in dock, connected to Bluetooth
Yellow	Treatment in progress, not outputting energy
Yellow blinking	Treatment in progress, outputting energy
Yellow/White blinking	Treatment paused, not connected to Bluetooth
Yellow/Blue blinking	Treatment paused, connected to Bluetooth
Red	Battery critically low, needs to charge
Red flashing	Failure, call Customer Service



### Pairing Your e-vive™ Controller & Smart Device

#### Important:

You must pair your e-vive™ controller with your smart device (smart phone or tablet) *before* starting a treatment. See section 9.8 for compatible mobile devices.

Open the e-vive™ app, select Stimulation Therapy or Range of Motion Test, and follow the on-screen instructions to pair your smart device with your controller. Bluetooth must be enabled on your smart device in order to connect to the controller. For Android devices, Location Services must also be enabled for pairing.



Notes:

- Once paired, your e-vive™ controller and smart device should connect automatically every time they are both switched on with Bluetooth enabled.
- If the pairing fails, your smart device will advise you of this and prompt you to retry the process.

Once the controller and the app on your smart device are successfully paired you may start using your e-vive™ system.

Secure the controller into the dock on the garment and position the garment as instructed in section 5.2. The controller should be firmly seated into the dock on the garment.



## App Home Screen Overview

Now that you have secured your garment properly to your leg and have paired your e-vive™ controller to the e-vive™ app on your smart device, you are ready to use the e-vive™ system.

The app home screen, or e-vive™ Dashboard, allows you to view your weekly progress, begin stimulation treatment for muscle strengthening, as well as test your range of motion.

The top section of the e-vive™ app will display a Dashboard Ring of your daily progress. Each day you will be asked to conduct two 20-minute stimulation muscle strengthening sessions and a range of motion test.




## Stimulation Programs

The e-vive™ app offers two NMES therapy programs: Strength and Post-Op.

**Note:** Strength is the default program. You can select the Post-Op program instead by tapping Settings and selecting the preferred treatment under Stimulation Therapy.

## Begin a Stimulation Session

To start a stimulation session, simply tap Stimulation Therapy on the Dashboard screen.

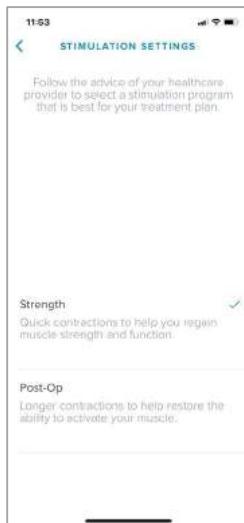

On the Stimulation Level screen, you set the intensity levels. Each level begins with a setting of 0 and has a maximum setting of 100.

Tap “+” to increase knee treatment intensity

Tap “-” to decrease knee treatment intensity

**NOTE:** It is common to have different desired intensity levels for the KNEE and THIGH.

Increase the intensity until you achieve a **strong, comfortable muscle contraction.**



Once the intensity levels are set, tap the “START TREATMENT” button. NMES treatment programs are 20 minutes long.

Note: The “hamburger icon” (≡) located on the upper left of the stimulation screen allows you to navigate back to the Dashboard during stimulation therapy.



**NOTE:** At any time, you may tap the black “Pause” button at the bottom of the screen to interrupt the treatment program. Tap the black triangle “play” icon to resume on the screen when ready to restart your therapy session. You may terminate your stimulation session at any time by tapping the black “exit” icon (✖) on the screen. You may also pause the stimulation therapy at any time by pressing the on/off power button on the e-vive™ controller.

### Treatment Completion

Once treatment is complete, this screen will be displayed:



### 5.4 Operating the e-vive™ device as a bilateral system (2 garments and one controller)

The bilateral e-vive™ system is indicated for treatment of both the left and right knee. Only one controller is needed for use with both garments.

Once the device has been paired using either garment it is not necessary to pair the other garment. The e-vive™ controller can be interchanged with both garments. When the e-vive™ controller is fully seated, power the controller on, verify Bluetooth connection, select the appropriate program and begin session (see section 5.3 on how to operate the e-vive™ device).

### 5.5 Performing Range of Motion Test

In addition to electrical stimulation, the e-vive™ system incorporates range of motion sensing technology. The range of motion test is easy to perform and will allow you and your healthcare provider to track your progress against your goals. Once daily you will be prompted to perform a range of motion test.



For accurate range of motion readings, it is important that the blue stitching on the top of the thigh area on the garment be aligned with the middle of your thigh. Similarly, the stitching on the bottom area of

the garment below the knee should be aligned with the center of your shin. Adjust the garment as needed for proper orientation.

To begin the range of motion test, position yourself at the edge of the seat, in a chair where your knee can extend and bend comfortably. It is important that the garment be adequately secured to your leg as described in section 5.2 (wearing the NMES conductive garment).


**Extension:** From a seated position at the edge of a seat, slide your heel on the floor to fully extend your leg. When you feel you have extended your leg as far as possible, while keeping your heel on the floor, gently push the back of your knee toward the ground.

In the e-vive™ app Range of Motion test, tap “Save” when you have reached your maximum extension.

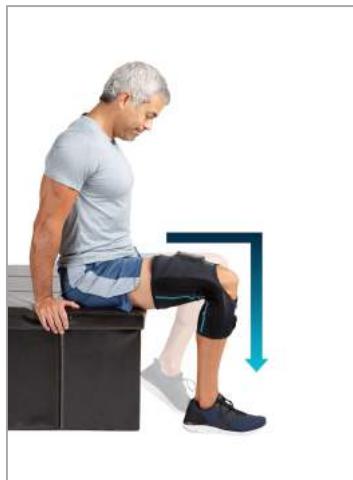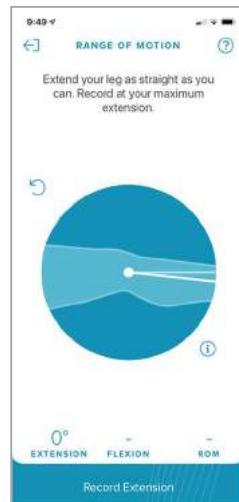

**Flexion:** From a seated position at the end of a chair, slide your heel on the floor toward your buttock. When necessary, move from your heel on floor to your toe. If you feel you can achieve even greater flexion, it may be necessary to remove your toe from the ground and continue to move your heel up towards your buttock.

In the e-vive™ app Range of Motion test, tap “Save” when you have reached your maximum flexion.

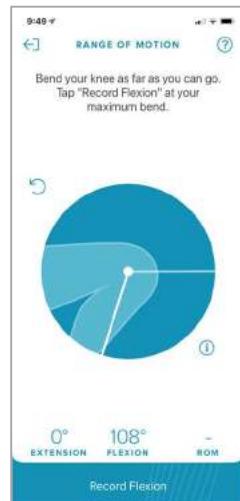

It is important to not over-exert your range of motion beyond your comfort limits and to follow any instructions that your healthcare provider may have given to you. The knee image on the app will show the angle of your knee and resulting range of motion.

## 6 e-vive™ SYSTEM TROUBLESHOOTING

### e-vive™ app Error Messages:

#### **Bluetooth connection is interrupted**

If during a stimulation treatment the Bluetooth connection signal is disrupted, the stimulation will continue. To pause the stimulation, momentarily press the on/off button on the e-vive™ controller. To stop the stimulation, press and hold the on/off button on the e-vive™ controller for 2 seconds to turn off the device.

#### **Battery discharged**

Should the e-vive™ controller internal battery become discharged, a screen will be displayed on the e-vive™ app once treatment is complete. The e-vive™ controller needs to be recharged before the next treatment. Refer to Section 5.1, “Charging the e-vive™ controller” for battery charging instructions.

## Troubleshooting Table

Problem	Possible cause	Solution
The Controller is not responding	Loose connection	Check the e-vive™ controller connection to the dock
	Battery discharged	Recharge e-vive™ controller
	Bad connection	Verify the connection of lead wires to electrodes
	Defective electrode	Replace the defective electrodes
	Damaged or worn electrode(s)	Replace the electrode(s)
Weak stimulation	Electrode placement	Ensure all electrodes are at least 1 inch apart
	Electrode covers are in place over electrode(s)	Remove all electrode covers prior to treatment.
Stimulation stops during treatment	Poor electrode contact	Reapply electrodes, secure firmly. Ensure all electrodes are at least 1 inch apart.
	Damaged or worn electrode(s)	Replace the electrode(s)
	Battery discharged	Recharge the e-vive™ controller
Stimulation weakens during treatment	This is a normal body adaptive process	Increase the intensity of the treatment using the e-vive™ mobile app
Stimulation is uncomfortable	Treatment intensity is too high	Decrease the intensity of the treatment using the e-vive™ mobile app
	Electrodes are too close together	Reposition the electrodes. Ensure all electrodes are at least 1 inch apart.
	Damaged or worn electrode(s)	Replace the electrode(s)
	Ensure proper program is being used	Refer to the app Settings for a description of all available treatment programs
	Dry skin	Apply electrode gel to the electrode contact area of the skin. Do not shave leg before treatment.
Stimulation is ineffective	Improper electrode placement	Reposition electrodes. Ensure all electrodes are at least 1 inch apart.
	Electrode covers are in place over electrode(s)	Remove all electrode covers prior to treatment.
Stimulation only felt on one muscle group (VMO or Rectus Femoris)	Improper electrode placement	Reposition electrodes. Ensure all electrodes are at least 1 inch apart.
	Damaged or worn electrode(s)	Replace the electrode(s)
	Electrode covers are in place over electrode(s)	Remove all electrode covers prior to treatment.
Intermittent Output	Damaged or worn electrode(s)	Replace the electrode(s)
	Ensure proper program is being used	Refer to the app Settings for a description of all available treatment programs
Stimulation is not producing the usual sensation	Damaged or worn electrode(s)	Replace the electrode(s)
	Ensure proper program is being used	Refer to the app Settings for a description of all available treatment programs
	Improper electrode placement	Reposition electrodes. Ensure all electrodes are at least 1 inch apart.
	Dry skin	Apply electrode gel to the electrode contact area of the skin

## 7 LIST OF ERROR MESSAGES

Error Message	Solution
Cannot proceed without garment	Fully insert controller into dock on conductive garment and make sure controller is on.
Over temperature condition detected	Shut down controller and mobile application, allow to cool, and turn power back on.
Failed to configure controller	Reconnect your mobile device with your controller by re-scanning the garment.

## 8 CUSTOMER SERVICE & MAINTENANCE

### 8.1 Customer Service

CyMedica Orthopedics Customer Service can be reached at 1-844 -CYM-2014.

Please contact Customer Service if you need assistance setting up, using, or maintaining the e-vive™ system or to report any unexpected operation or events.

When returning any products, please include your name, address, phone number, and Return Material Authorization (RMA) number provided by Customer Service.

All product returns should be mailed to:

CyMedica Orthopedics  
Attn: RMA # \_\_\_\_\_  
19120 N. Pima Rd.  
Suite 135  
Scottsdale, AZ 85255

## **8.2 Repair**

The CyMedica Orthopedics e-vive™ system is not field-serviceable and has no user serviceable parts inside the device. If the device appears to be damaged or to be non-functional, please contact CyMedica Orthopedics Customer Service.

Do not attempt to repair any part of the CyMedica Orthopedics e-vive™ System. Never dismantle the e-vive™ controller due to risk of electric shock. CyMedica Orthopedics, Inc. declines all responsibilities for any damages or consequences resulting from unauthorized attempts to open, modify, or repair the stimulator.

## **8.3 Cleaning and Maintenance**

### **Conductive Garment Cleaning**

- For hygiene reasons, the conductive garment is intended for single person use only.
- Do not hand wash or machine wash, submerge, or dry clean the conductive garment
- If the conductive garment picks up debris or dirt, clean it using a damp, soft cloth and mild soap.

### **e-vive™ Controller and NMES Pod Accessory Cleaning**

- Clean the outside surface of the e-vive™ controller or NMES accessories gently using a damp and soft cloth when contaminated
- Do not sterilize the e-vive™ controller
- Do not immerse e-vive™ controller in liquids

### **Electrodes Cleaning**

For hygiene reasons, the NMES electrodes are intended for single person use only. After each use, place the plastic side of the supplied black electrode cover over the electrode. If an electrode picks up small amounts of debris you may use a drop of water or electrode gel on your finger to gently rub the debris off the electrode.

The electrodes are reusable as long as they are clean, still tacky, and without any sign of visible damage. Replace the electrodes if they no longer adhere to the skin properly.

### **Calibration**

The CyMedica Orthopedics e-vive™ System does not require equipment calibration. Each e-vive™ stimulator is tested prior to shipment. Its characteristics do not vary under normal operating conditions.

## **8.4 Operating Conditions**

The e-vive™ device should be operated in temperatures between 50°F and 104°F (5°C and 40°C), atmospheric pressures between 70 and 106 kPa, and relative humidity between 15% and 90%. If the device has been stored or transported at the extremes of the recommended storage temperatures, the user should allow the unit to acclimate at room temperature for about 45 minutes prior to operating the device.

## **8.5 Transportation and Storage Conditions**

The e-vive™ device should be transported and stored in temperatures between -13°F and 158°F (-25°C and 70°C), atmospheric pressures between 50 and 106 kPa and relative humidity between 10% and 93%.

## **8.6 Shelf Life or Use By Date Information**

The shelf life or Use By Date requirement applies only to the electrodes and electrode gel. The shelf life of the electrodes and electrode gel are specified on the e-vive™ system individual package label.

## **8.7 Expected Service Life and Disposal Information**

The e-vive™ controller and NMES conductive garment are expected to provide at least one year of normal use.

Replace electrodes when they begin to deteriorate or lose adhesion. Poor contact between the electrodes and the patient's skin increases the risk of skin irritation or burns. Electrodes will last longer if used and stored according to instructions on electrode packaging.

The e-vive™ controller and sensor in the NMES conductive garment is a piece of electronic equipment and may include substances that can damage the environment. DO NOT dispose of the device in municipal waste. Please deliver the device to a suitable collection point for recycling of electronic equipment.

When the electrodes no longer stick well to your skin, dispose of them in a receptacle out of reach of children and pets.

## **8.8 Replacement Parts Ordering Information**

To order replacement electrodes for your e-vive™ device, please visit the CyMedica Orthopedics shop page at

<https://www.cymedicaortho.com/shop>. Refer to Section 4.7, “e-vive™ System Replacement Part Numbers” of this manual for more information.

## **8.9 Limited warranty**

CyMedica Orthopedics offers a warranty of 1 year for the e-vive™ system. Should your e-vive™ system develop a fault within the warranty period, CyMedica Orthopedics will replace your e-vive™ system free of charge, provided the system:

- has been used for its intended purpose by the original User and in the manner described in this manual
- has not been connected to an unsuitable power source
- has not been subjected to misuse or neglect
- has not been exposed to water damage
- has not been modified or repaired by anyone other than an approved CyMedica Orthopedics agent


## 9 TECHNICAL SPECIFICATIONS

### 9.1 Waveform Information


Treatment Program	NMES STRENGTH	NMES POST-OP
Pulse shape	Monophasic	Monophasic
Treatment duration	20 minutes	20 minutes
Frequency	50 pps	50 pps
Pulse width	5 ms	5 ms
Duty cycle	25%	25%
Work cycle	12 s	13 s
Relaxation time	10 s	10 s
Work cycle	Work cycle – consists of five cycles of oscillating contractions per muscle group Relaxation time – rest period between work cycles	Work cycle – consists of two cycles of oscillating contractions per muscle group Relaxation time – rest period between work cycles

## NMES Waveforms


Full output, Voltage across 500Ω load

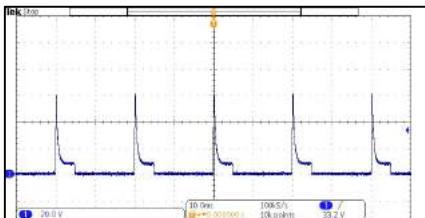

Full output, Voltage across 2,000Ω load

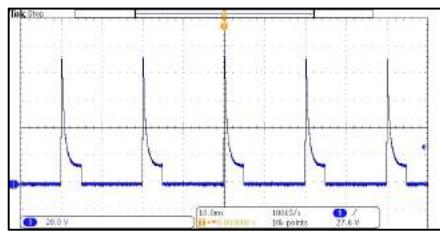

Full output, Voltage across 10,000Ω load

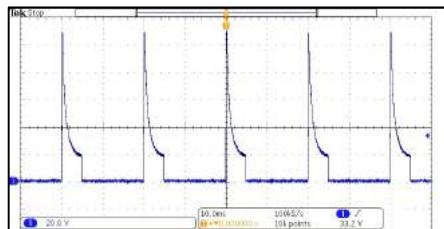

## Rated Outputs – POST-OP NMES

Parameter	500 Ω	2 kΩ	10 kΩ
-----------	-------	------	-------

Output Voltage (V <sub>RMS</sub> )	9.2 V	16.4 V	21.3 V
Output Voltage (V <sub>PEAK</sub> )	64 V	96 V	111 V
Output Current (I <sub>RMS</sub> )	18.3 mA	8.2 mA	2.1 mA
Output Current (I <sub>PEAK</sub> )	128 mA	48 mA	11 mA
Output Frequency	50 pps	50 pps	50 pps
DC Component: Approx.	3.4 V	7.0 V	9.0 V
Positive Pulse Width	5 ms	5 ms	5 ms
Interphase Interval	15 ms	15 ms	15 ms
Duty Cycle	25%	25%	25%
Net Charge	366 μC		

## Rated Outputs – STRENGTH NMES

Parameter	500 Ω	2 kΩ	10 kΩ
-----------	-------	------	-------

Output Voltage (V <sub>RMS</sub> )	9.2 V	16.4 V	21.3 V
Output Voltage (V <sub>PEAK</sub> )	64 V	96 V	111 V
Output Current (I <sub>RMS</sub> )	18.3 mA	8.2 mA	2.1 mA
Output Current (I <sub>PEAK</sub> )	128 mA	48 mA	11 mA
Output Frequency	50 pps	50 pps	50 pps
DC Component: Approx.	3.4 V	7.0 V	9.0 V
Positive Pulse Width	5 ms	5 ms	5 ms
Interphase Interval	15 ms	15 ms	15 ms
Duty Cycle	25%	25%	25%
Net Charge	366 μC		

## 9.2 Compliance Declaration

IEC 60601-1:2014, 4th Edition

Medical electrical equipment - Part 1:  
General requirements for basic safety and  
essential performance

IEC 60601-1-2: 2014, 4th Edition

Medical electrical equipment - Part 1-2:  
General requirements for basic safety and  
essential performance - Collateral Standard:  
Electromagnetic Compatibility -  
Requirements and Tests

IEC 60601-1-6: 2010, 3rd Edition

Medical electrical equipment - Part 1-6:  
General requirements for safety - Collateral  
Standard: Usability

IEC 60601-1-11: 2015

Medical electrical equipment - Part 1-11:  
Collateral Standard: Requirements for  
medical electrical equipment and medical  
electrical equipment used in the home  
healthcare environment

IEC 60601-2-10: 2012, 2nd Edition

Medical electrical equipment - Part 2-10:  
Particular requirements for basic safety and  
essential performance of nerve and muscle  
stimulators

CENELEC EN60601-1: 2006

Medical electrical equipment - Part 1:  
General requirements for basic safety and  
essential performance

AAMI ES60601-1: 2005

Medical electrical equipment - Part 1:  
General requirements for basic safety and  
essential performance

CSA C22.2 #60601-1: 2008, 3rd Edition

Medical electrical equipment - Part 1:  
General requirements for basic safety and  
essential performance

## 9.3 Guidance and Manufacturer's Declaration – Electromagnetic Emissions

- The e-vive™ device needs special EMC precautions and must be installed and started according to the EMC information supplied in this manual.

- Warning: The use of accessories, other than those recommended by the manufacturer, may result in stronger emissions or reduce the immunity of the e-vive™ device.
- Warning: The e-vive™ device should not be used beside or stacked on top of any other equipment. If you must use it side by side or on top of another system, you should check that the e-vive™ device works properly in the chosen configuration.
- Meeting the emissions levels shown in the first table is considered to be essential performance of the e-vive™ device.

#### GUIDANCE AND MANUFACTURER'S DECLARATION – ELECTROMAGNETIC EMISSIONS

e-vive™ is intended for use in the electromagnetic environment specified below. The customer or user of the e-vive™ should assure that it is used in such an environment.

Emissions test	Compliance	Electromagnetic environment - guide
RF emissions CISPR 11	Group 1	The e-vive™ uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.
RF emissions CISPR 11	Class B	The e-vive™ is suitable for use in all establishments, including domestic establishments and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
Harmonic emissions IEC 61000-3-2	Not applicable, battery powered	
Voltage fluctuations/ emission oscillations IEC 61000-3-3	Not applicable, battery powered	

#### GUIDANCE AND MANUFACTURER'S DECLARATION – ELECTROMAGNETIC IMMUNITY

e-vive™ is intended for use in the electromagnetic environment specified below. The customer or user of the e-vive™ system should assure that it is used in such an environment

Immunity test	Test level IEC 60601	Compliance level	Electromagnetic environment - recommendations
Electrostatic discharge (ESD) IEC 61000-4-2	±6 kV contact ±8 kV air	±6 kV contact ±8 kV air	Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30 %.

Electrical fast transient/burst IEC 61000-4-4	±2 kV for power supply lines ±1 kV for input/output lines	Not Applicable – Battery powered Not Applicable – signal lines less than 3 meters	Mains power quality should be that of a typical commercial or hospital environment.
Surge IEC 61000-4-5	±1 kV line to line ±2 kV line to earth	Not Applicable – Battery powered	Mains power quality should be that of a typical commercial or hospital environment.
Voltage dips, short interruptions and voltage variations on power supply input lines IEC 61000-4-11	<5% $U_T$ (>95% dip in $U_T$ ) for 0.5 cycle 40% $U_T$ (60% dip in $U_T$ ) for 5 cycles 70% $U_T$ (30% dip in $U_T$ ) for 25 cycles <5% $U_T$ (>95% dip in $U_T$ ) for 5 s	Not Applicable – Battery powered	Mains power quality should be that of a typical commercial or hospital environment. If the user of the e-vive™ requires continued operation during power mains interruptions, it is recommended that the e-vive™ be powered from an uninterruptible power supply or a battery.
Power frequency (50/60 Hz) magnetic field IEC 61000-4-8	3 A/m	3 A/m	Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or hospital environment.

NOTE:  $U_T$  is the a.c. mains voltage prior to application of the test level.

**GUIDANCE AND MANUFACTURER'S DECLARATION –  
ELECTROMAGNETIC IMMUNITY**

The e-vive™ is intended for use in the electromagnetic environment specified below. The customer or the user of the e-vive™ should assure that it is used in such an environment.

Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment - recommendations
Conducted RF IEC 61000-4-6	3 Vrms 150 kHz to 80 MHz	3 Vrms	<p>Portable and mobile RF communication equipment should be used no closer to any part of the e-vive™ device, including cables, than recommended separation distance calculated from the equation applicable to the frequency of the transmitter.</p> <p><b>Recommended separation distances</b></p> $d = 1.2 \sqrt{P}$ <p><math>d = 1.2 \sqrt{P}</math> 80 MHz to 800 MHz</p> <p><math>d = 2.3 \sqrt{P}</math> 800 MHz to 2.5 GHz</p> <p>Where P is the maximum output power of the transmitter in Watts (W) according to the transmitter manufacturer and where <math>d</math> is the recommended separation distance in meters (m).</p> <p>Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey,<sup>a</sup> should be less than the compliance level in each frequency range.<sup>b</sup></p> <p>Interference may occur in the vicinity of equipment marked with the following symbol:</p> 
Radiated RF IEC 61000-4-3	3 V/m 80 MHz to 2.5 GHz	3 V/m	

NOTE 1 At 80 MHz and at 800 MHz, the higher frequency range applies.

NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

<sup>a</sup> Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the E-VIVE device is used exceeds the applicable RF compliance level above, the e-vive™ device should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as re orienting or relocating the e-vive™ device.

<sup>b</sup> Over the frequency range 150 kHz to 80 MHz, field strengths should be less than 1 V/m.

**RECOMMENDED SEPARATION DISTANCES BETWEEN PORTABLE AND MOBILE  
RF COMMUNICATIONS EQUIPMENT AND THE  
E-VIVE**

The e-vive™ is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or the user of the e-vive™ can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the e-vive™ as recommended below, according to the maximum output power of

Rated maximum output power of transmitter  W	Separation distances according to frequency of the transmitter		
	From 150 kHz to 80 MHz  $d = 1.2 \sqrt{P}$	From 80 kHz to 800 MHz  $d = 1.2 \sqrt{P}$	From 800 MHz to 2.5 GHz  $d = 2.3 \sqrt{P}$
0.01	0.12	0.12	0.23
0.1	0.38	0.38	0.73
1	1.20	1.20	2.30
10	3.79	3.79	7.27
100	12.00	12.00	23.00

For transmitters rated at a maximum output power not listed above, the recommended separation distance  $d$  in meters (m) can be estimated using the equation applicable to the frequency of the transmitter, where  $P$  is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer.

NOTE 1 At 80 MHz and 800 MHz, the separation distance for the higher frequency range applies.

NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is modified by absorption and reflection from structures, objects and people.

## 9.4 FCC and IC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

### FCC RF Radiation Exposure Statement

FCC ID: 2AU28-CY1000330

Model: e-vive II

The minimum distance of the radiating structure of this device, during normal operation, is 15mm from the body of the user (§2.1093).

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter meets both portable and mobile limits as demonstrated in the RF Exposure Analysis.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. (Part. 15.21)

## **Bluetooth**

Communication between the e-vive™ Device and the Smartphone is via Bluetooth.

### **Bluetooth Specifications:**

Bluetooth Low Energy (BLE) modulation (as defined in the Bluetooth Core Specification) is Gaussian (shaped, binary). Frequency Shift Keying (GFSK) with a modulation index of 0.5 using frequency hopping in bursts of 1 mega-symbols/second on 2 MHz spacing within the 2.402 to 2.440 GHz band. BLE employs both FDMA (frequency division) and TDMA (time division) multiple-access schemes.

The BLE maximum output power levels in e-vive™ are -1.1dBm. The BLE links used in e-vive™ have a range of up to 10 meters (between the mobile device and controller).

Bluetooth Module: Texas Instruments CC2640R2F MCU targeting

Bluetooth® 4.2

Transmit Power: -1.1dBm (controller to mobile)

Receiver Sensitivity: -97 dBm

Frequency Regulations

ETSI EN 300 328 (Europe)

EN 300 440 Class 2 (Europe)

FCC CFR47 Part 15 (US)

ARIB STD-T66 (Japan)

Frequency Range: 2,400 – 2,482 MHz

Output Watts: 0.7762 mW (-1.1 dBm)

## **9.5 Wireless Quality of Service and Coexistence**

The e-vive™ system utilizes Bluetooth data transmission between your controller and your mobile device to perform the intended device function. All data sent over BLE is either acknowledged or transmitted often enough that transient data is regularly updated. The wireless

Quality of Service in the e-vive™ device is entirely managed by the Bluetooth Standard Technology and does not require you to configure any settings to perform device functions.

The coexistence of the e-vive™ wireless system has been tested for up to forty wireless and microwave devices near the 2.4 GHz band, including 5 e-vive™ devices operating simultaneously within a 50 meters radius.

## **9.6 Recommendations for Safe Wireless Connections**

The e-vive™ system utilizes encrypted Bluetooth wireless data transmission to protect information. Additionally, the e-vive™ system uses Wi-Fi or cellular data connections to transmit usage information via web service data transmissions that are encrypted and decrypted, see security note for details.

The QR code of the e-vive™ controller provides a unique controller ID address (6-character alphanumeric code) that allows only mobile devices that have been paired to the e-vive™ controller to connect to and operate the e-vive™ device. To prevent any un-authorized access, only provide your QR code or controller ID to persons that you may allow to access or control your e-vive™ device.

Note: Web service data transmissions use TLS 1.2 protocol with AES-256 cipher encryption.

## **9.7 Wireless Connections Troubleshooting**

In the event that your e-vive™ controller is not connecting to your mobile device, take the following steps:

- 1) Ensure that your Bluetooth is enabled in your device settings. Note: you will not see the e-vive™ device listed in your Bluetooth connected device list.
- 2) Ensure that your mobile device is on, has sufficient battery, and that you have opened your e-vive™ app.
- 3) Ensure that your controller is powered on and you have paired the e-vive™ controller to your mobile device.

- 4) If the controller LED light is blue, this indicates that your mobile device is connected via Bluetooth. You should see the app recognize the controller and indicate the controller battery level in the top-right section of the app home screen (Dashboard).
- 5) If the controller and mobile device are still not connected via Bluetooth, reconnect the controller to your mobile device by the following: In the e-vive™ mobile app, from the Dashboard, select 'Settings' then the 'Bluetooth Pairing' button. The app will walk you through connecting your controller to your mobile device.

In the event that your e-vive™ mobile app is not connecting to the internet, take the following steps:

- 1) Ensure that your WiFi is enabled in your device settings and you are connected to a valid WiFi connection. If a WiFi connection is not available, ensure that your cellular data is turned on and that you have authorized the e-vive app to use cellular data.
- 2) Open your e-vive™ app.

Note: An internet connection via WiFi or cellular data is not required to operate the e-vive™ device but is required to create and access your profile information, initially pair the device, and to communicate your rehabilitation results with your healthcare provider.

If you are still experiencing wireless connection issues, verify that your device is compatible per section 9.8 below. Also verify that you have installed your latest mobile device operating system updates and the latest e-vive™ mobile app from the app store. If you are still experiencing difficulties, call CyMedica Orthopedics Customer Service.

Note: Android devices require Location Services to be enabled for proper connection to the e-vive™ controller.

## **9.8 Mobile Device Compatibility**

Mobile devices compatible with the e-vive™ system include:

Apple devices with minimum requirements:

- **OS Level:** The OS level must be at 10.0 or higher
- **Bluetooth:** The device must have Bluetooth with at least

revision 4.0 or higher

- **Memory:** At least 200MB of available RAM memory

Android devices, with minimum requirements:

- **OS Level:** The OS level must be at 6.0 or higher
- **Bluetooth:** The device must have Bluetooth with at least revision 4.0 or higher
- **Memory:** At least 200MB of available RAM memory

Note: Certain operating systems and security software can interfere with the operation of the e-vive™ app and the user may need to work with their phone provider to resolve any incompatibilities in operating system software with CyMedica assistance.

## 9.9 Measurements Accuracy

Duration of treatment is accurate within  $\pm 1$  minute.

Range of motion is accurate within  $\pm 2$  degrees.

## 9.10 Materials Specifications

NMES conductive garment: Inner fabric laminate: Spandex, foam, and silicone

NMES electrodes: Conductive silicon rubber layer and a conductive hydrogel layer

**NOTE:** The e-vive™ conductive garment and NMES electrodes are “not made with natural rubber latex”.



CyMedica Orthopedics  
19120 North Pima Road  
Suite 135  
Scottsdale, AZ 85255 USA



Emergo Europe  
Prinsesegracht 20  
2514 AP The Hague  
The Netherlands

