

## 12. Hopping Channel Separation

### 12.1 Block Diagram Of Test Setup



### 12.2 Limit


Frequency hopping systems shall have hopping channel carrier frequencies separated by a minimum of 25 kHz or the 20 dB bandwidth of the hopping channel, whichever is greater. Alternatively, frequency hopping systems operating in the 2400-2483.5 MHz band may have hopping channel carrier frequencies that are separated by 25 kHz or two-thirds of the 20 dB bandwidth of the hopping channel, whichever is greater, provided the systems operate with an output power no greater than 0.125W.


### 12.3 Test procedure


1. Remove the antenna from the EUT and then connect a low RF cable from the antenna port to the spectrum.
2. Set the spectrum analyzer: RBW = 30 kHz. VBW = 100 kHz, Span = 2.0MHz. Sweep = auto; Detector Function = Peak. Trace = Max hold.
3. Allow the trace to stabilize. Use the marker-delta function to determine the separation between the peaks of the adjacent channels. The limit is specified in one of the subparagraphs of this Section Submit this plot.


### 12.4 Test Result


Condition	Mode	Hopping Freq1 (MHz)	Hopping Freq2 (MHz)	HFS (MHz)	Limit (MHz)	Verdict
NVNT	1-DH1	2401.83	2402.83	1	0.687	Pass
NVNT	1-DH1	2440.83	2441.828	0.998	0.695	Pass
NVNT	1-DH1	2478.83	2479.83	1	0.688	Pass
NVNT	2-DH1	2401.828	2402.83	1.002	0.859	Pass
NVNT	2-DH1	2440.828	2441.828	1	0.859	Pass
NVNT	2-DH1	2478.83	2479.828	0.998	0.858	Pass
NVNT	3-DH1	2401.828	2402.828	1	0.837	Pass
NVNT	3-DH1	2440.828	2441.828	1	0.815	Pass
NVNT	3-DH1	2478.828	2479.83	1.002	0.85	Pass

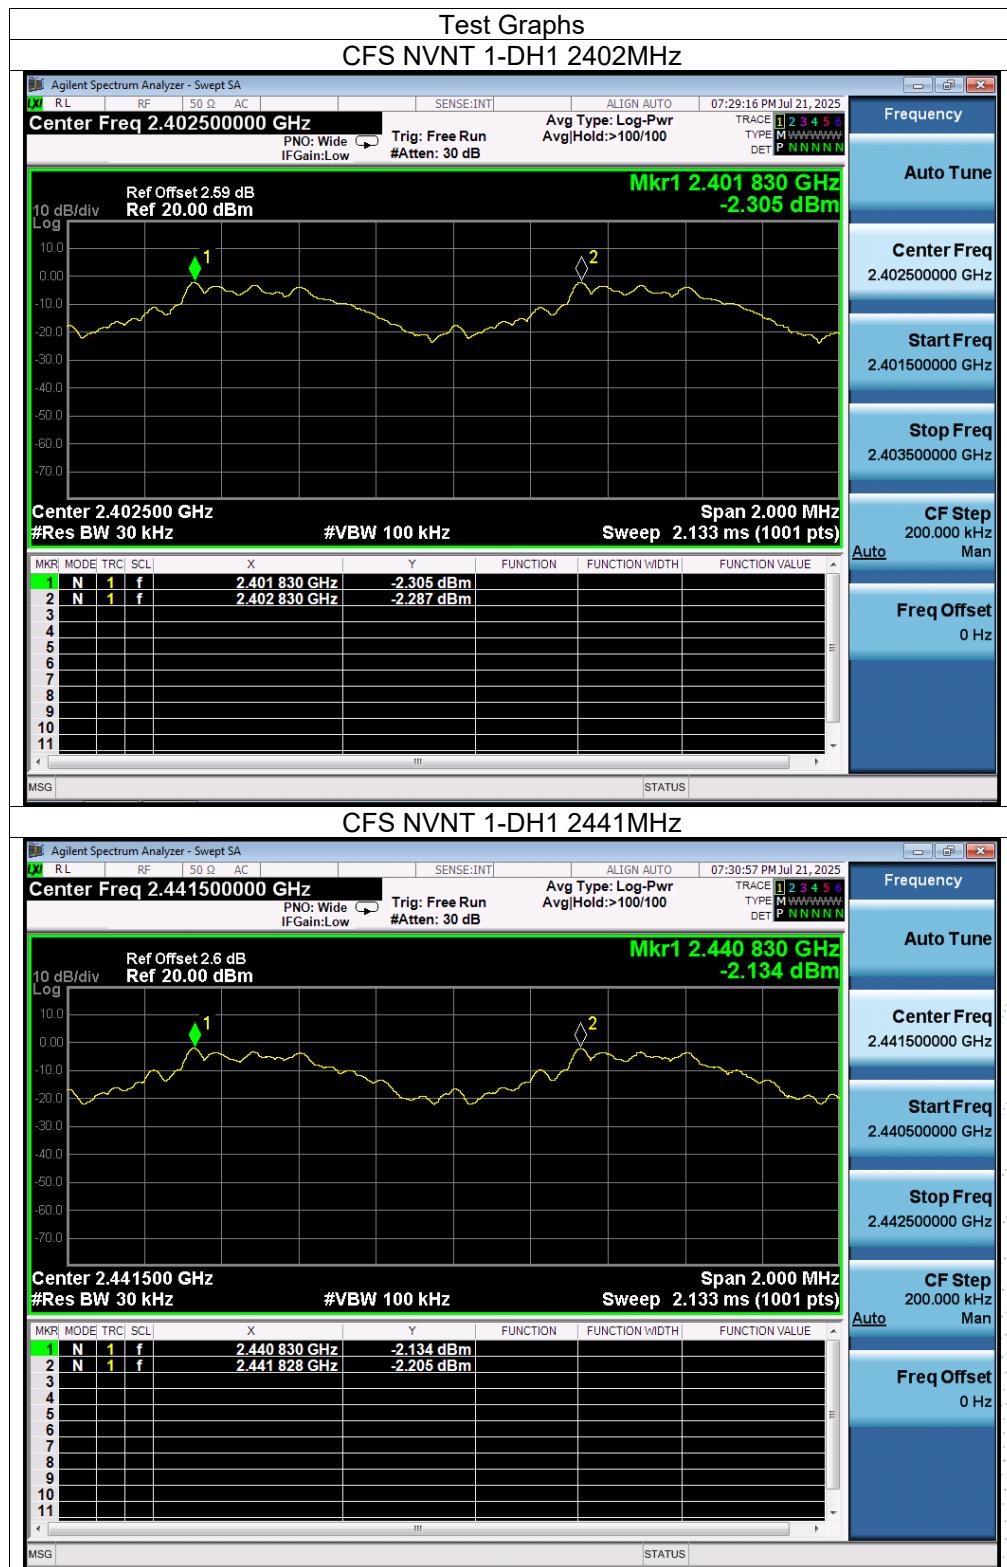

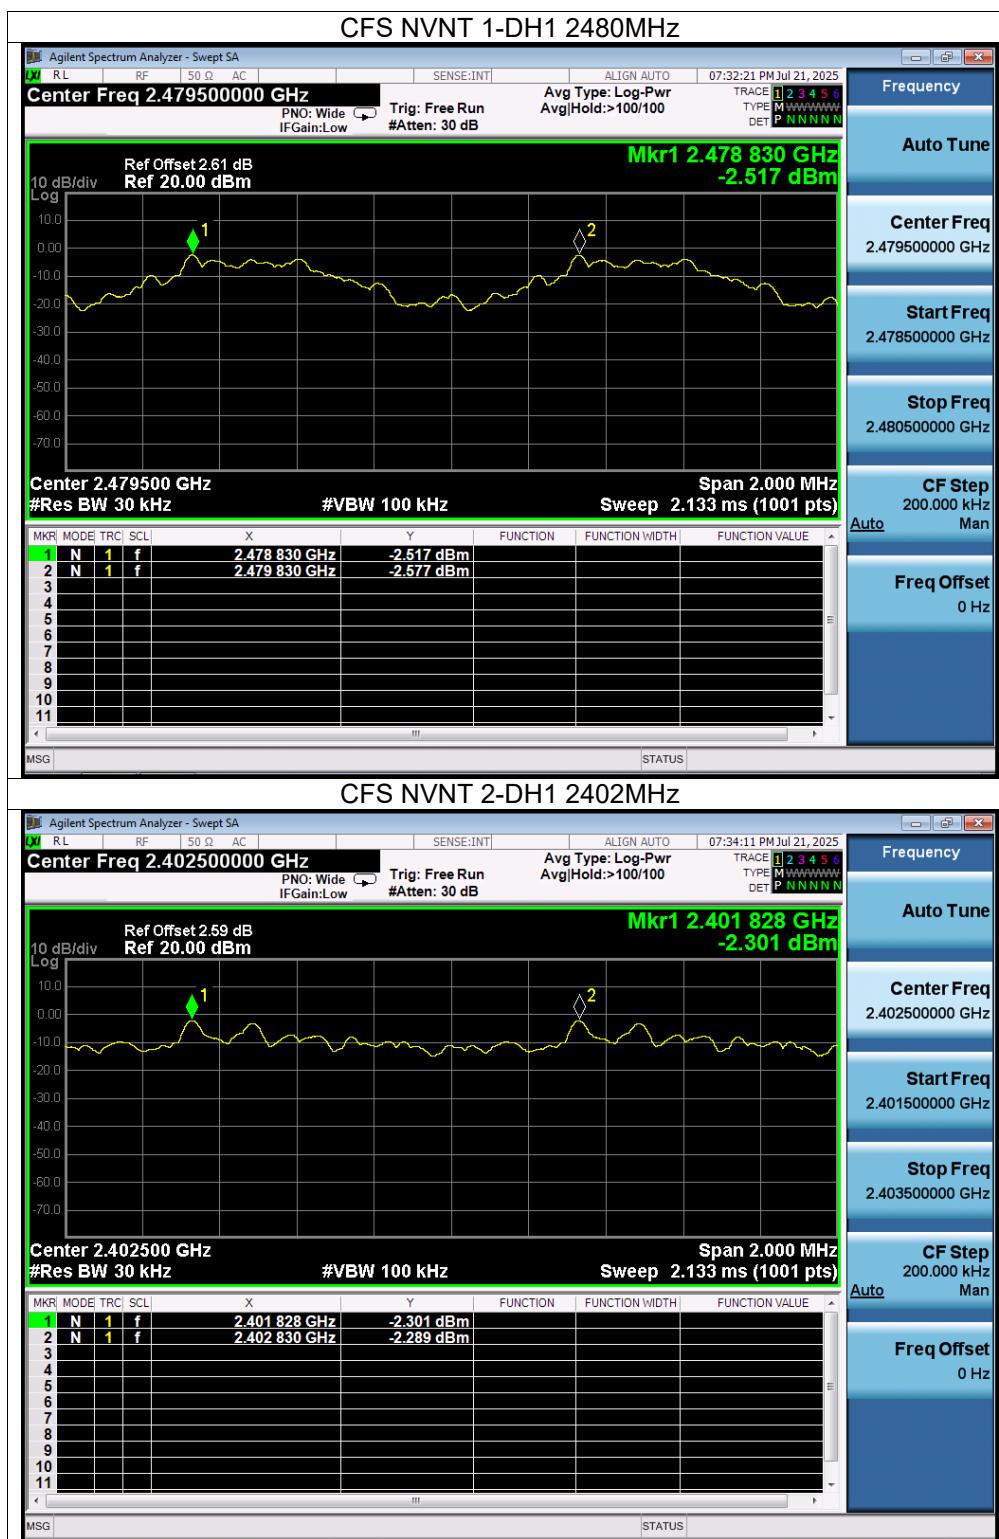

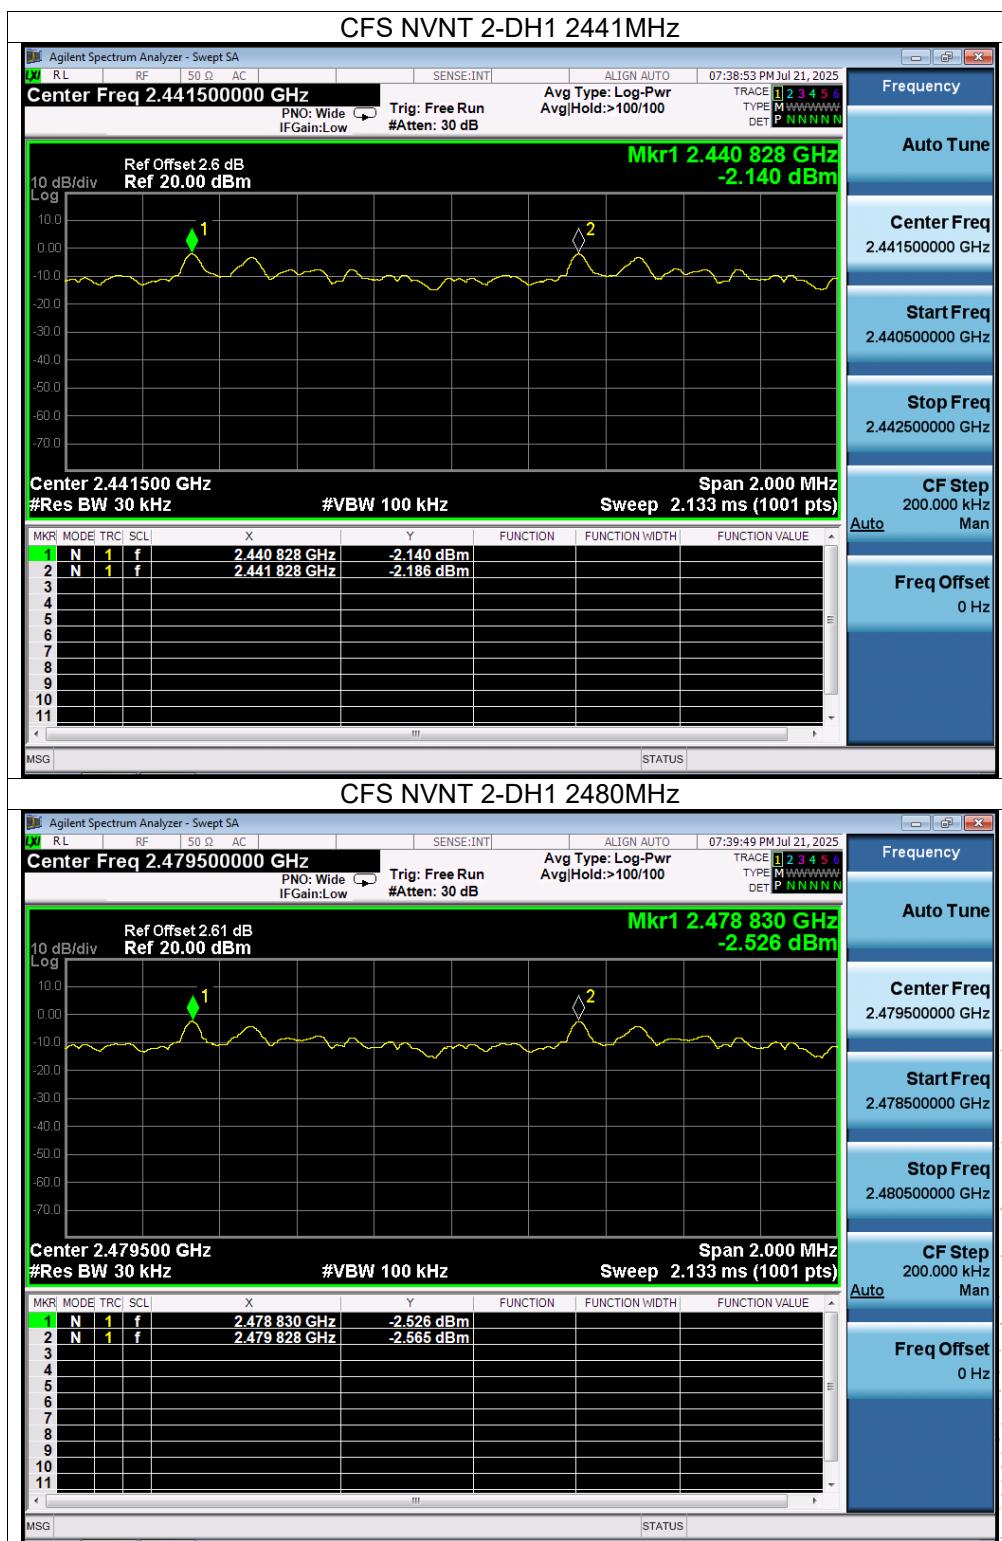

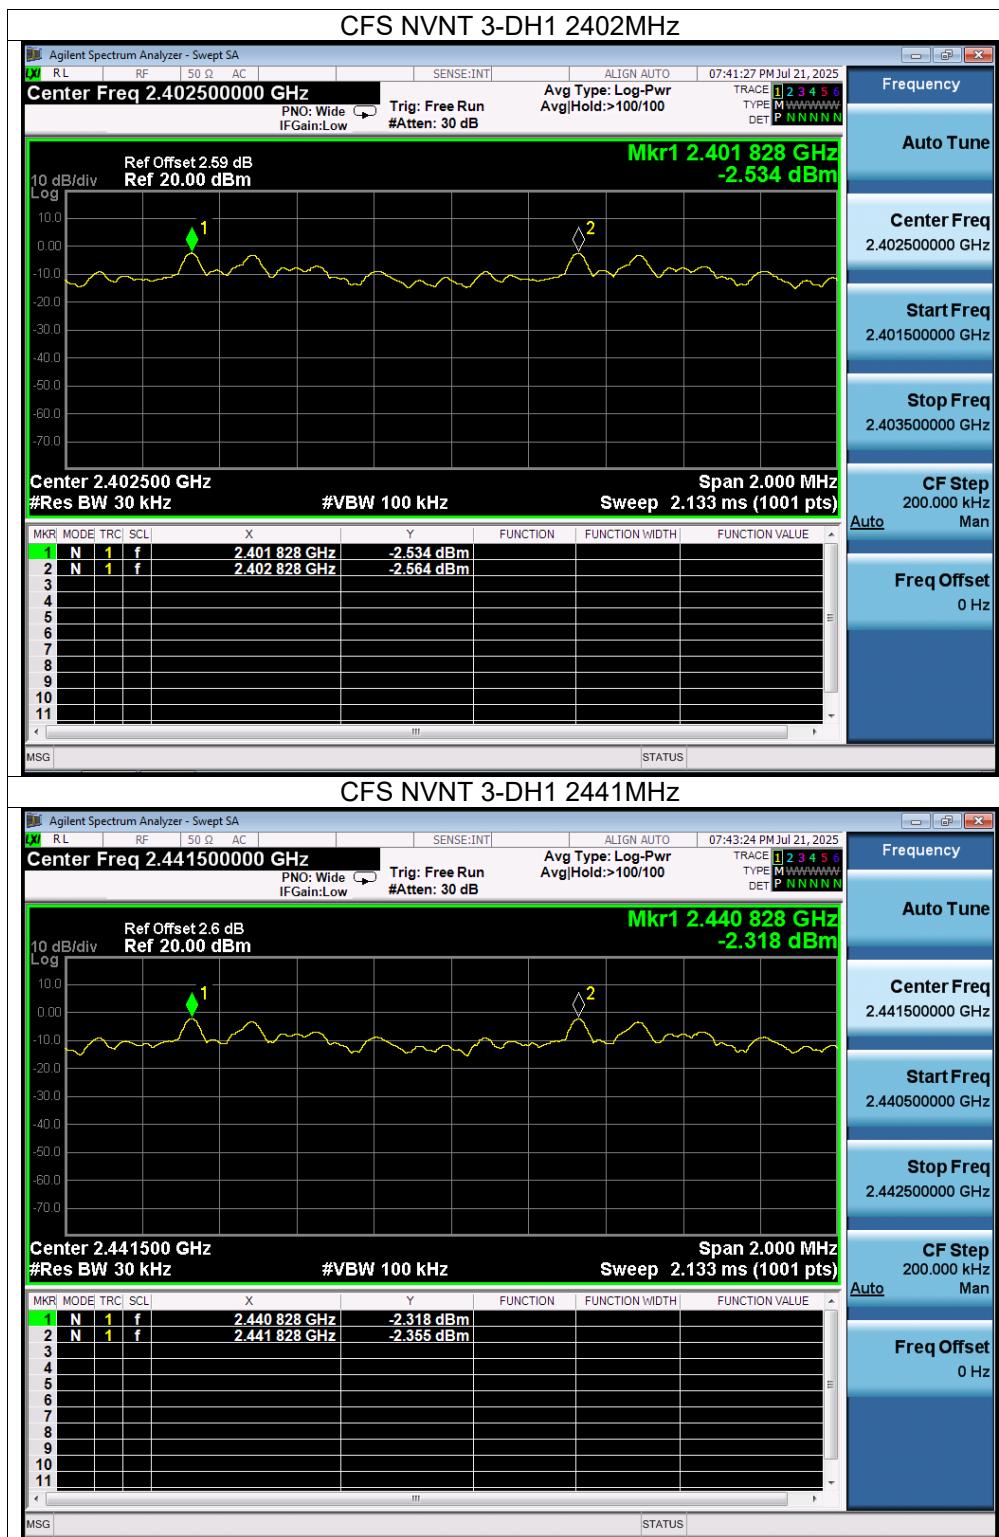

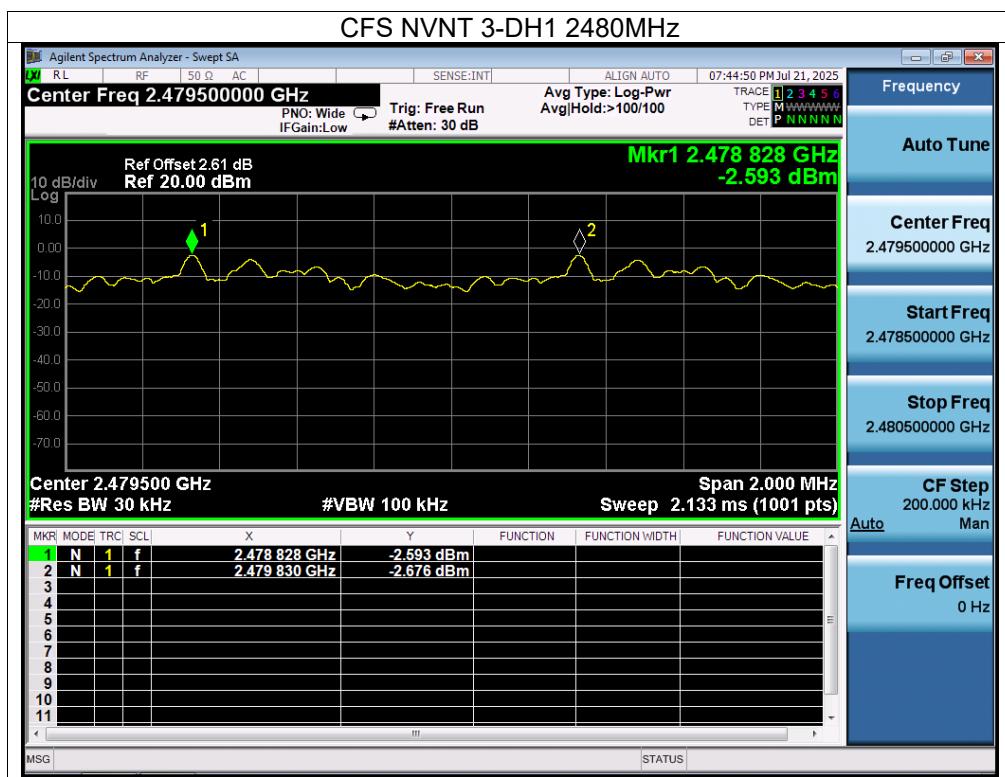

### 13. Number Of Hopping Frequency

#### 13.1 Block Diagram Of Test Setup



#### 13.2 Limit


Frequency hopping systems in the 2400-2483.5 MHz band shall use at least 15 channels.


#### 13.3 Test procedure

1. Remove the antenna from the EUT and then connect a low RF cable from the antenna port to the spectrum.
2. Set the spectrum analyzer: RBW = 100 kHz. VBW = 300 kHz. Sweep = auto; Detector Function = Peak. Trace = Max hold.
3. Allow the trace to stabilize. It may prove necessary to break the span up to sections. in order to clearly show all of the hopping frequencies. The limit is specified in one of the subparagraphs of this Section.
4. Set the spectrum analyzer: Start Frequency = 2.4GHz, Stop Frequency = 2.4835GHz. Sweep=auto;

#### 13.4 Test Result

Condition	Mode	Hopping Number	Limit	Verdict
NVNT	1-DH1	79	15	Pass
NVNT	2-DH1	79	15	Pass
NVNT	3-DH1	79	15	Pass

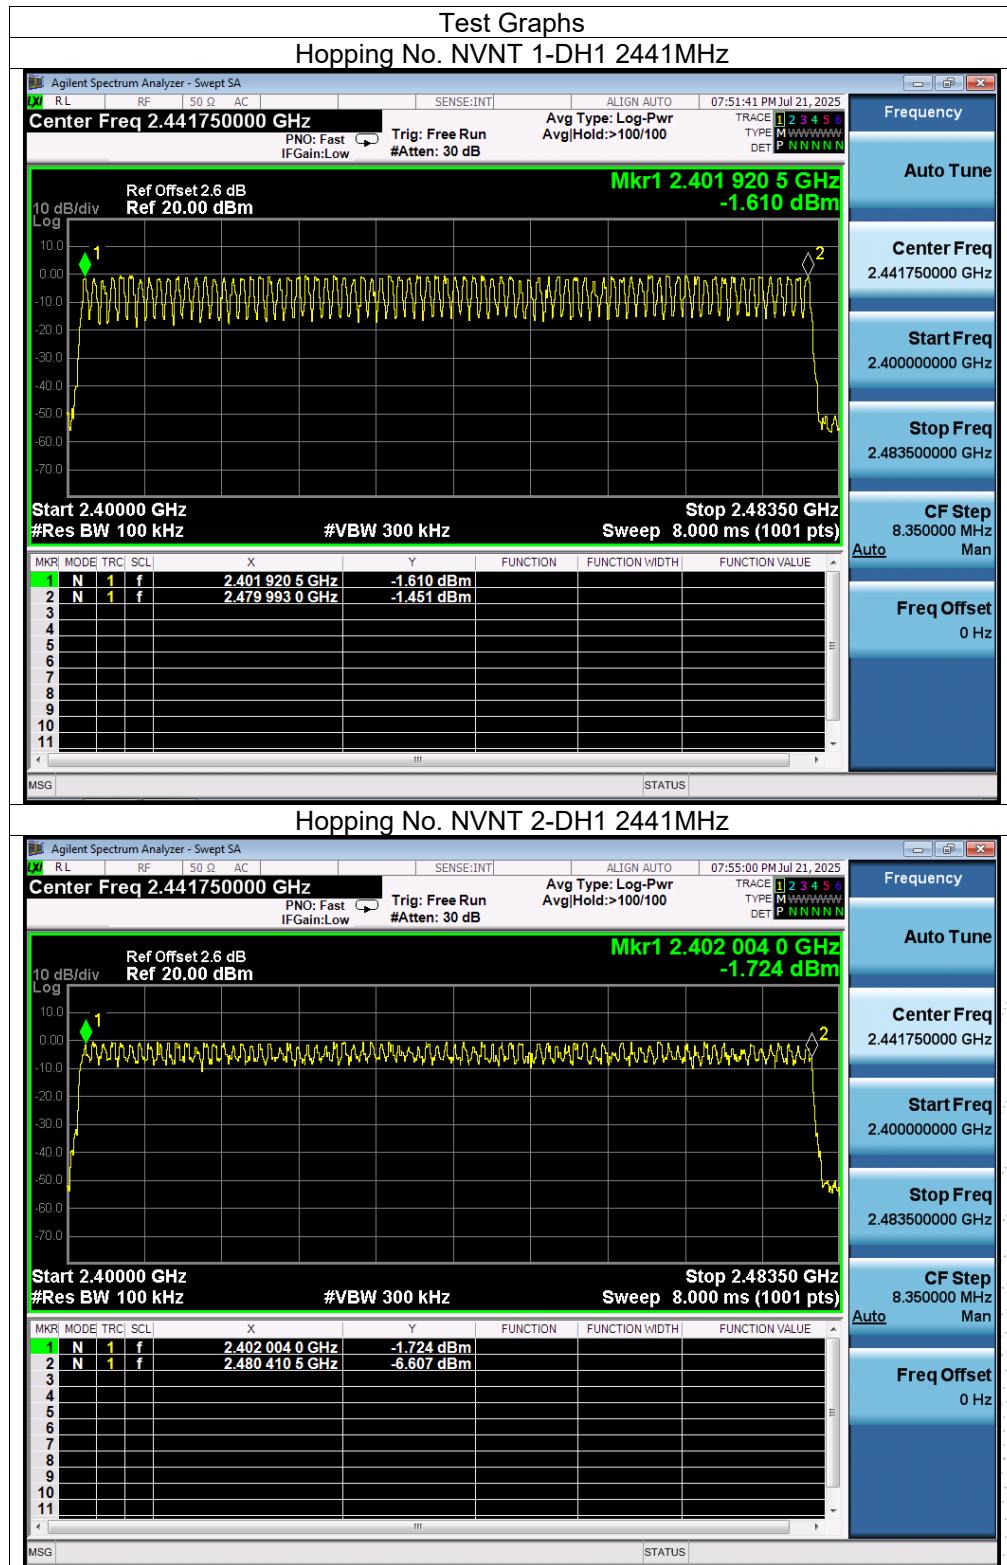

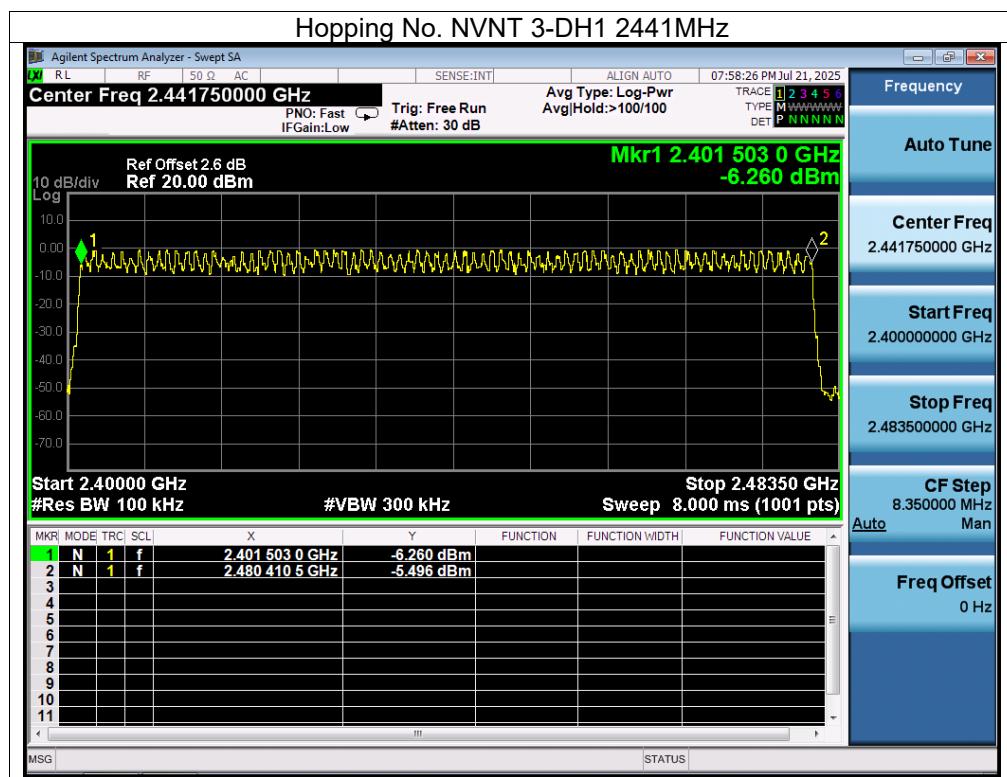

## 14. Dwell Time

### 14.1 Block Diagram Of Test Setup



### 14.2 Limit

Frequency hopping systems in the 2400-2483.5 MHz band shall use at least 15 channels. The average time of occupancy on any channel shall not be greater than 0.4 seconds within a period of 0.4 seconds multiplied by the number of hopping channels employed. Frequency hopping systems may avoid or suppress transmissions on a particular hopping frequency provided that a minimum of 15 channels are used.


### 14.3 Test procedure


1. Remove the antenna from the EUT and then connect a low RF cable from the antenna port to the spectrum.
2. Set spectrum analyzer span = 0. Centred on a hopping channel;
3. Set RBW = 1MHz and VBW = 3MHz. Sweep = as necessary to capture the entire dwell time per hopping channel. Set the EUT for DH5, DH3 and DH1 packet transmitting.
4. Use the marker-delta function to determine the dwell time. If this value varies with different modes of operation (e.g.. data rate, modulation format, etc.). repeat this test for each variation. The limit is specified in one of the subparagraphs of this Section. Submit this plot(s).


### 14.4 Test Result


Condition	Mode	Frequency (MHz)	Pulse Time (ms)	Total Dwell Time (ms)	Burst Count	Period Time (ms)	Limit (ms)	Verdict
NVNT	1-DH1	2441	0.376	118.816	316	31600	400	Pass
NVNT	1-DH3	2441	1.633	264.546	162	31600	400	Pass
NVNT	1-DH5	2441	2.88	311.04	108	31600	400	Pass
NVNT	2-DH1	2441	0.386	121.204	314	31600	400	Pass
NVNT	2-DH3	2441	1.638	258.804	158	31600	400	Pass
NVNT	2-DH5	2441	2.885	297.155	103	31600	400	Pass
NVNT	3-DH1	2441	0.387	121.518	314	31600	400	Pass
NVNT	3-DH3	2441	1.638	255.528	156	31600	400	Pass
NVNT	3-DH5	2441	2.889	283.122	98	31600	400	Pass


Note: Total Dwell Time (ms) = Pulse Time (ms)\*Burst Count

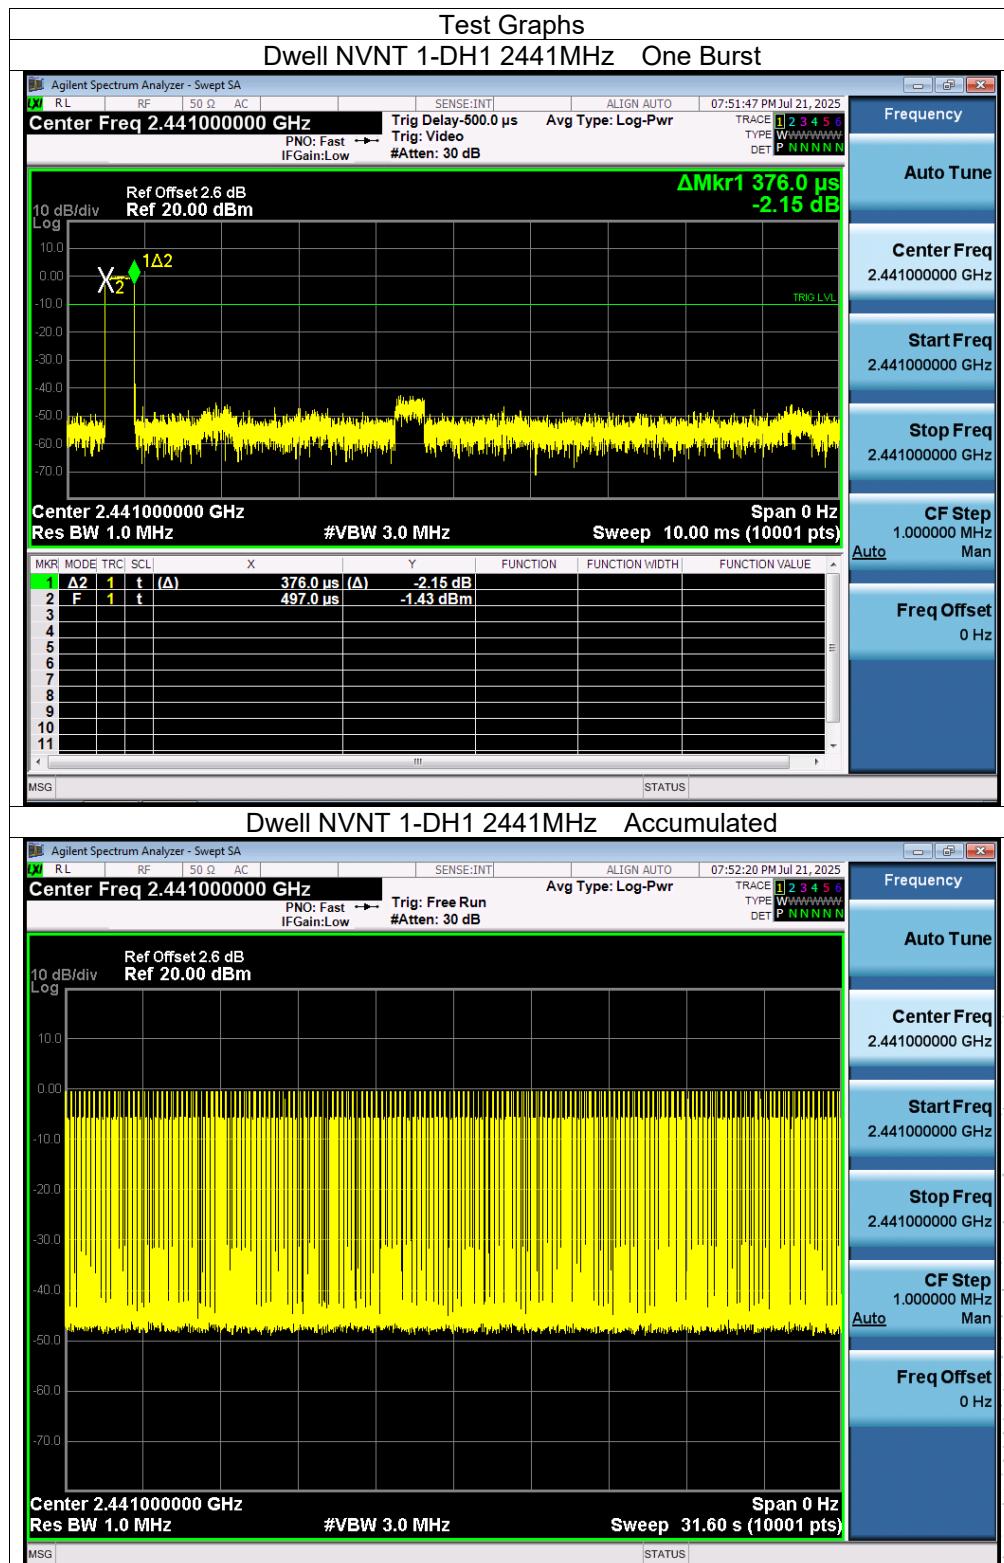


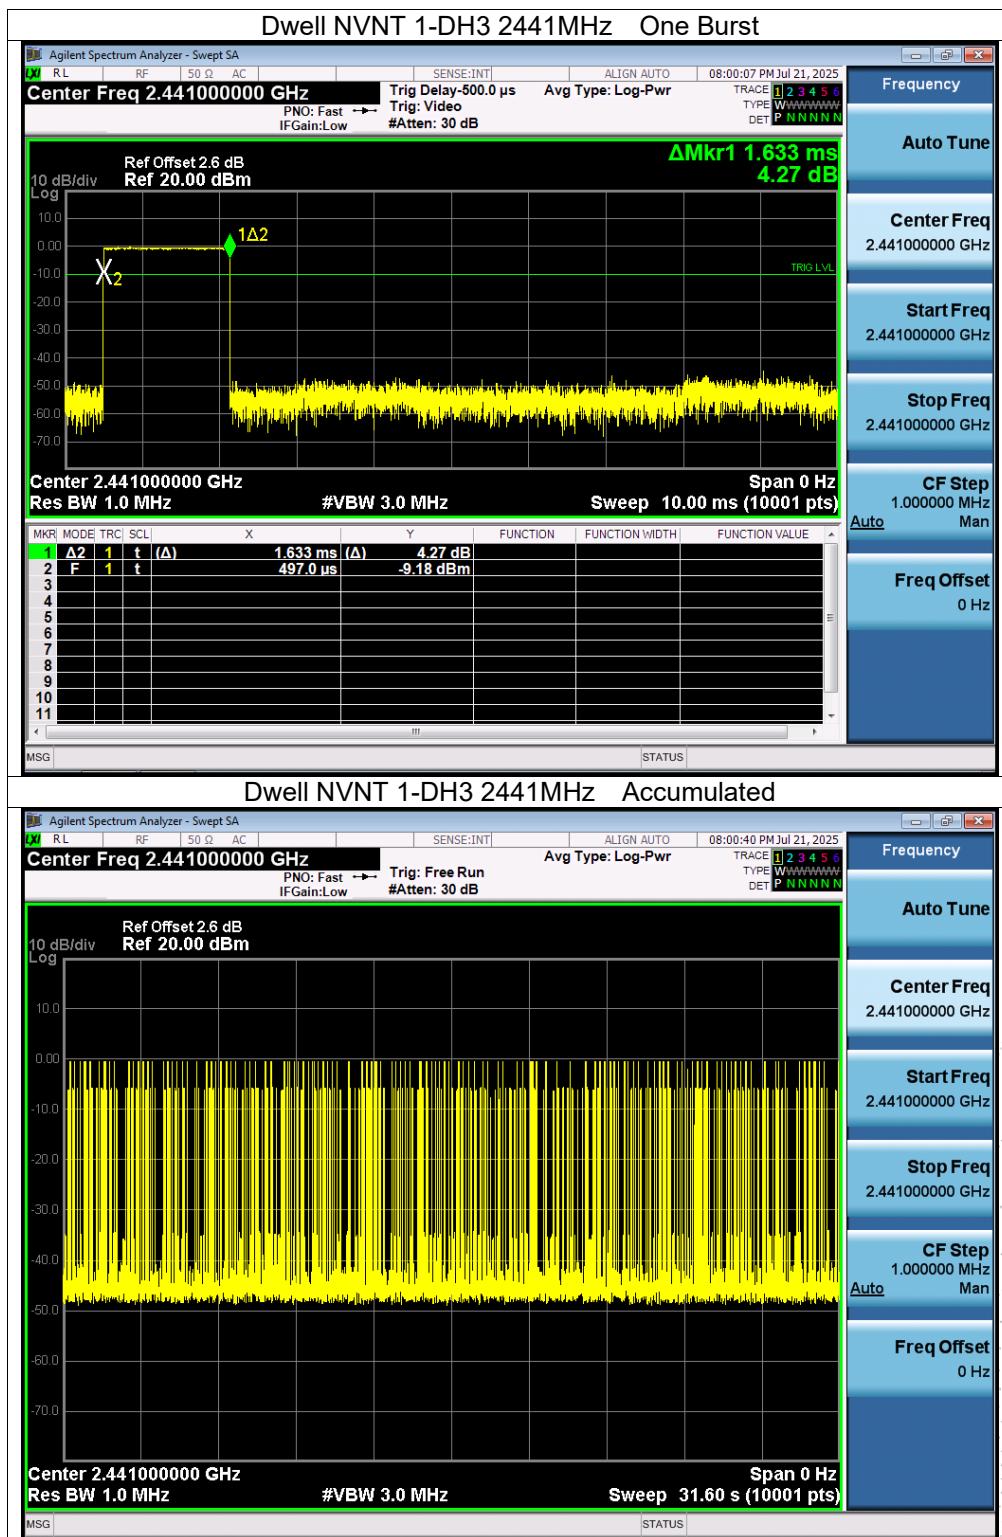


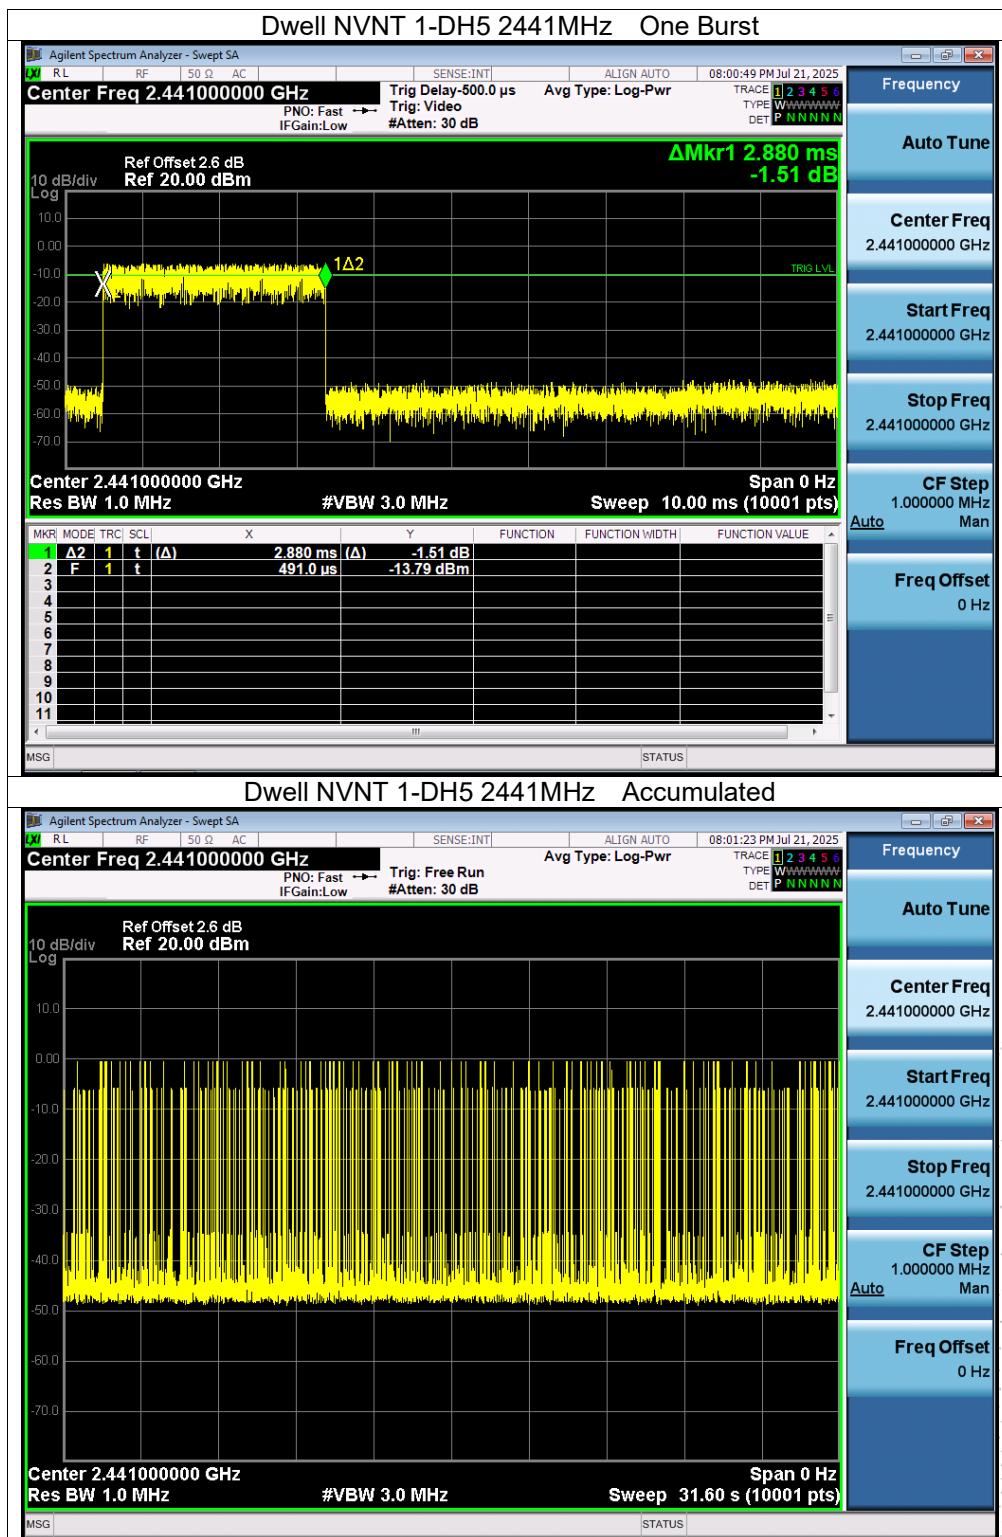


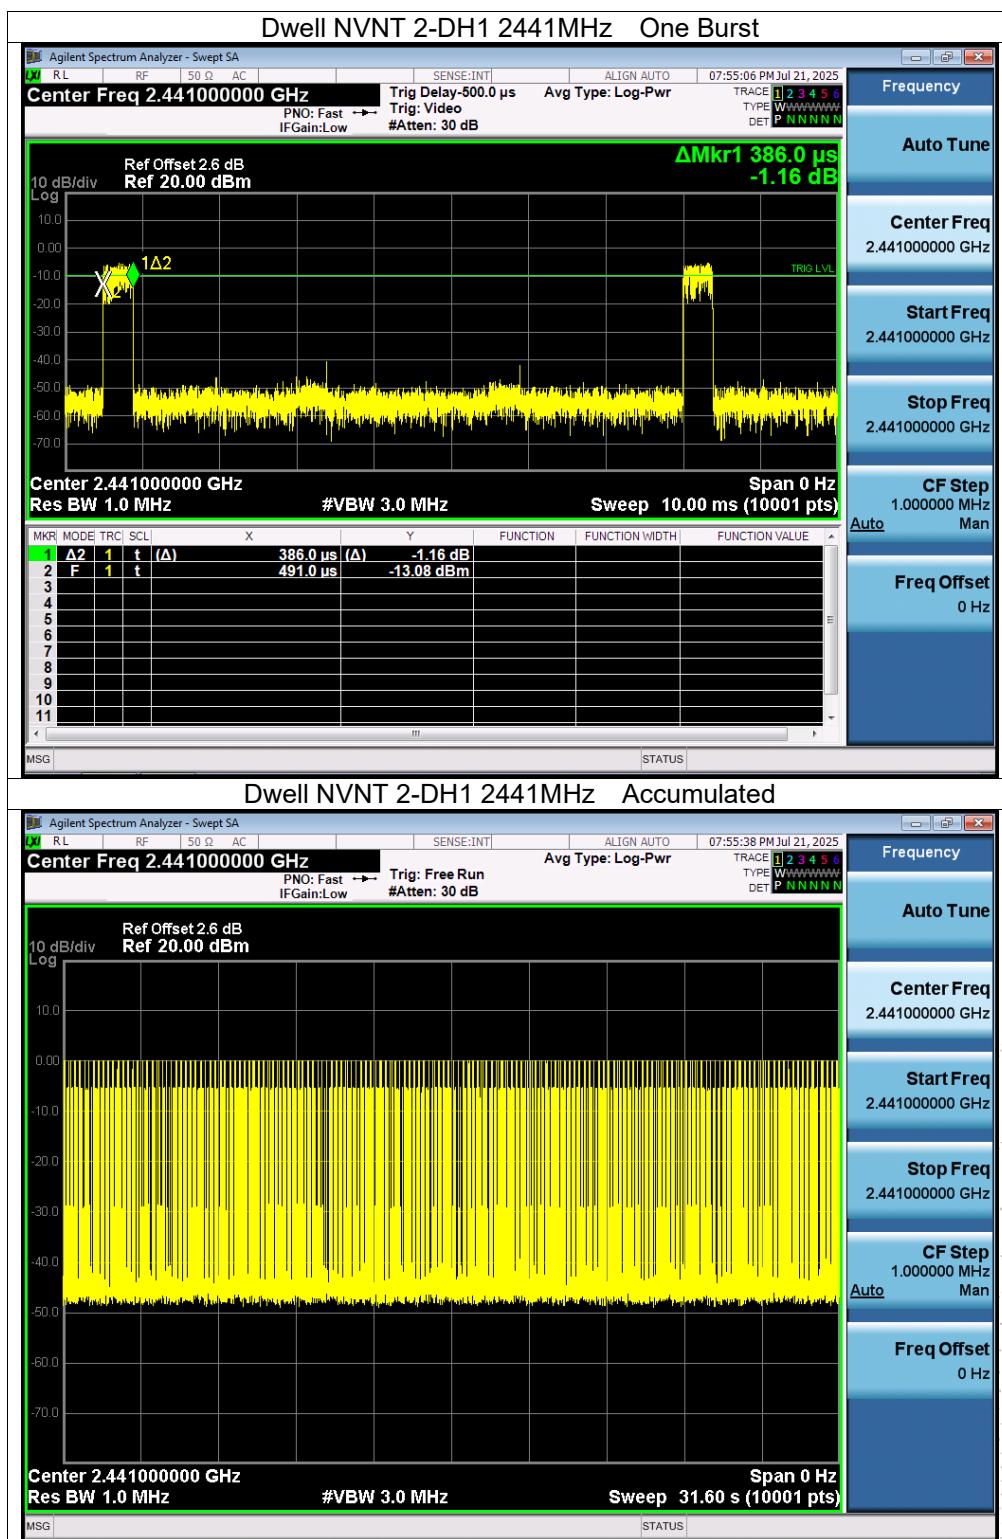


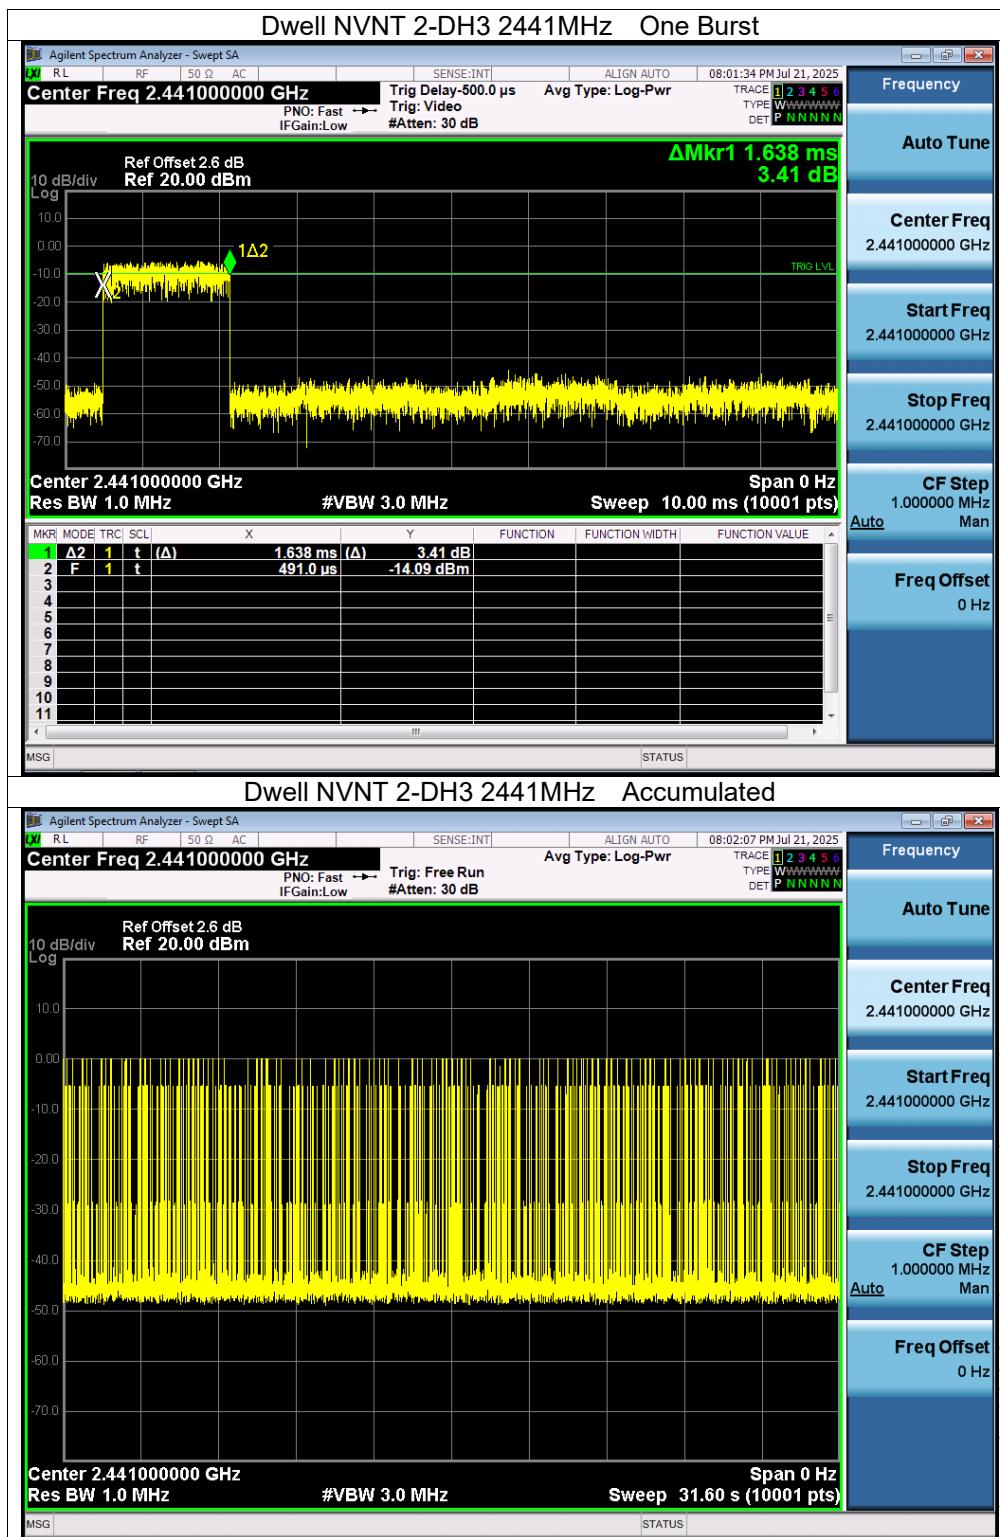

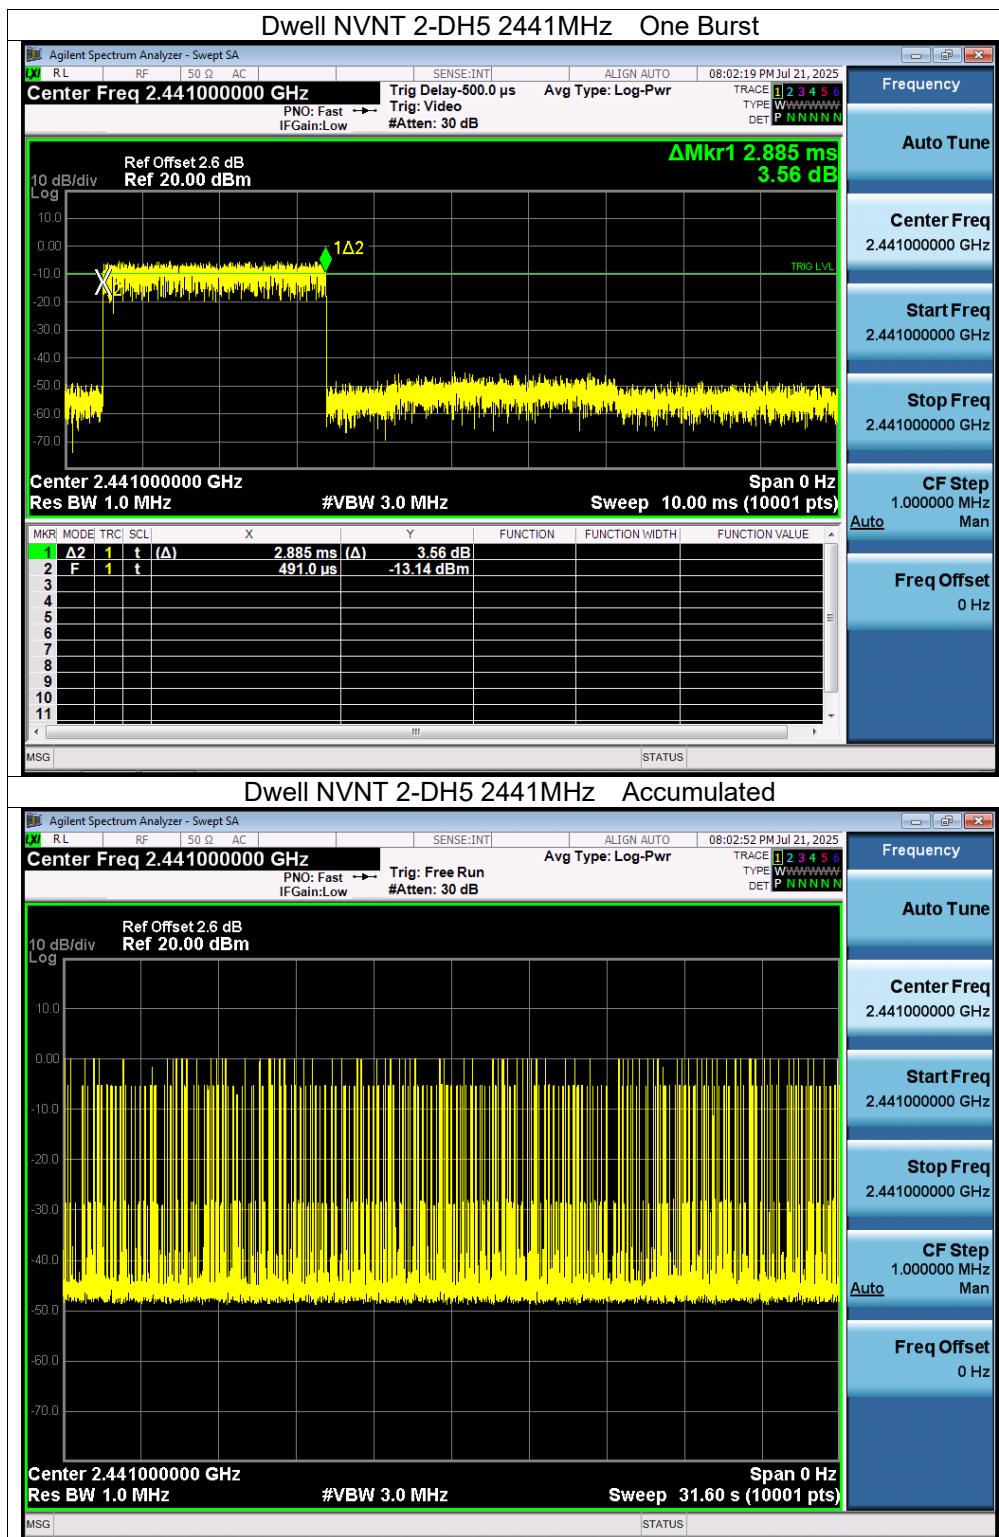

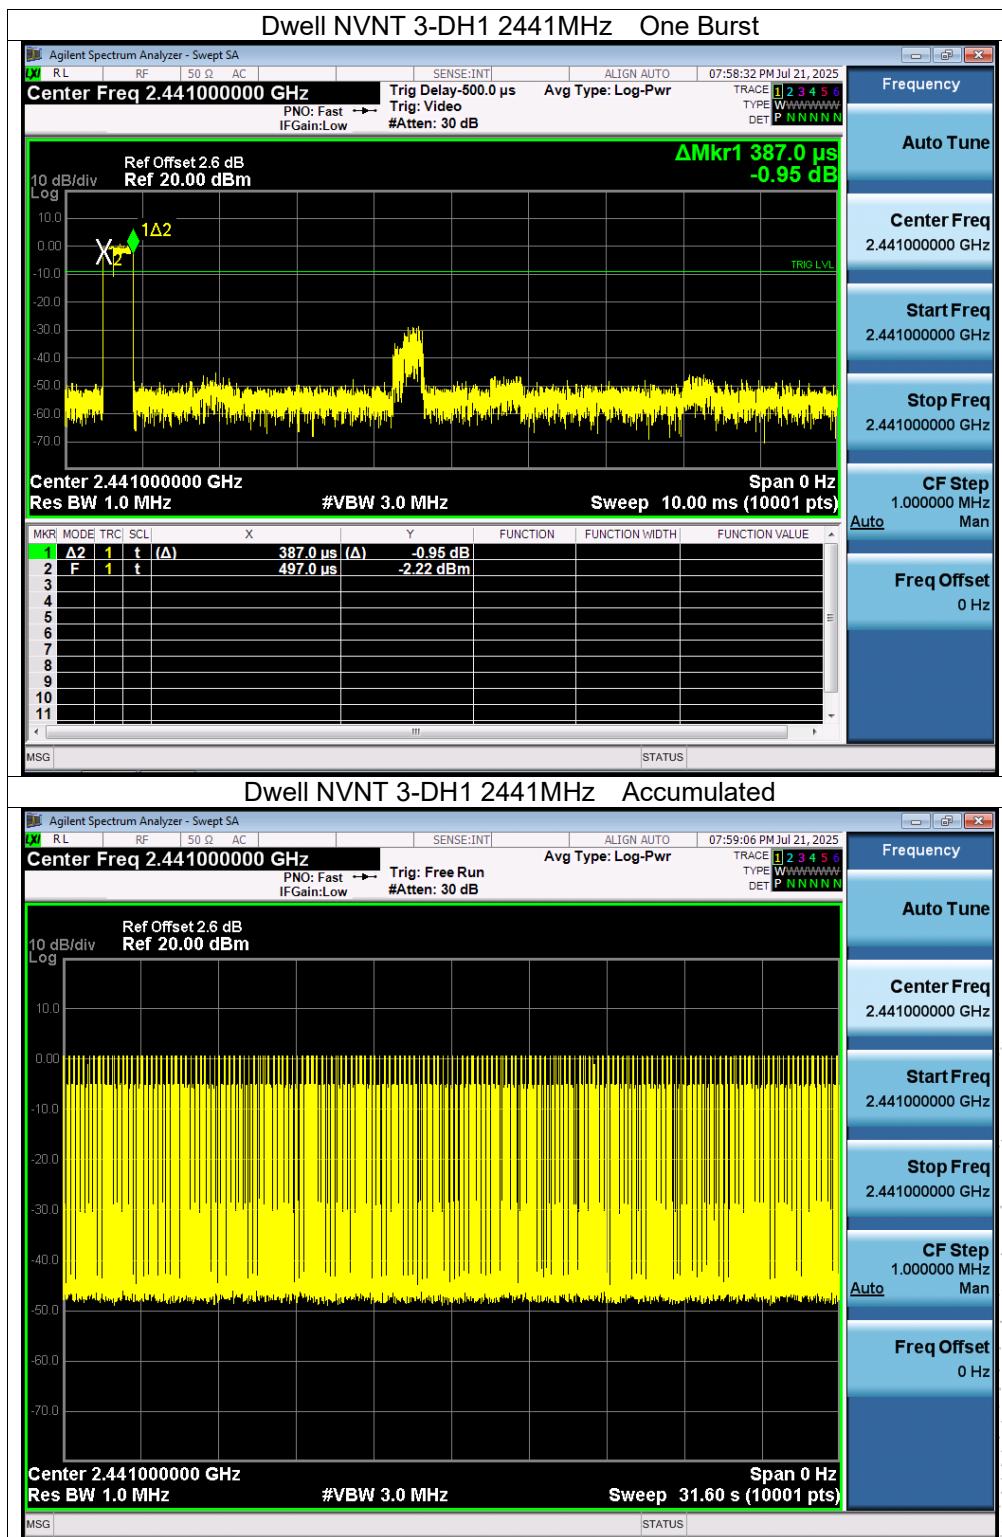

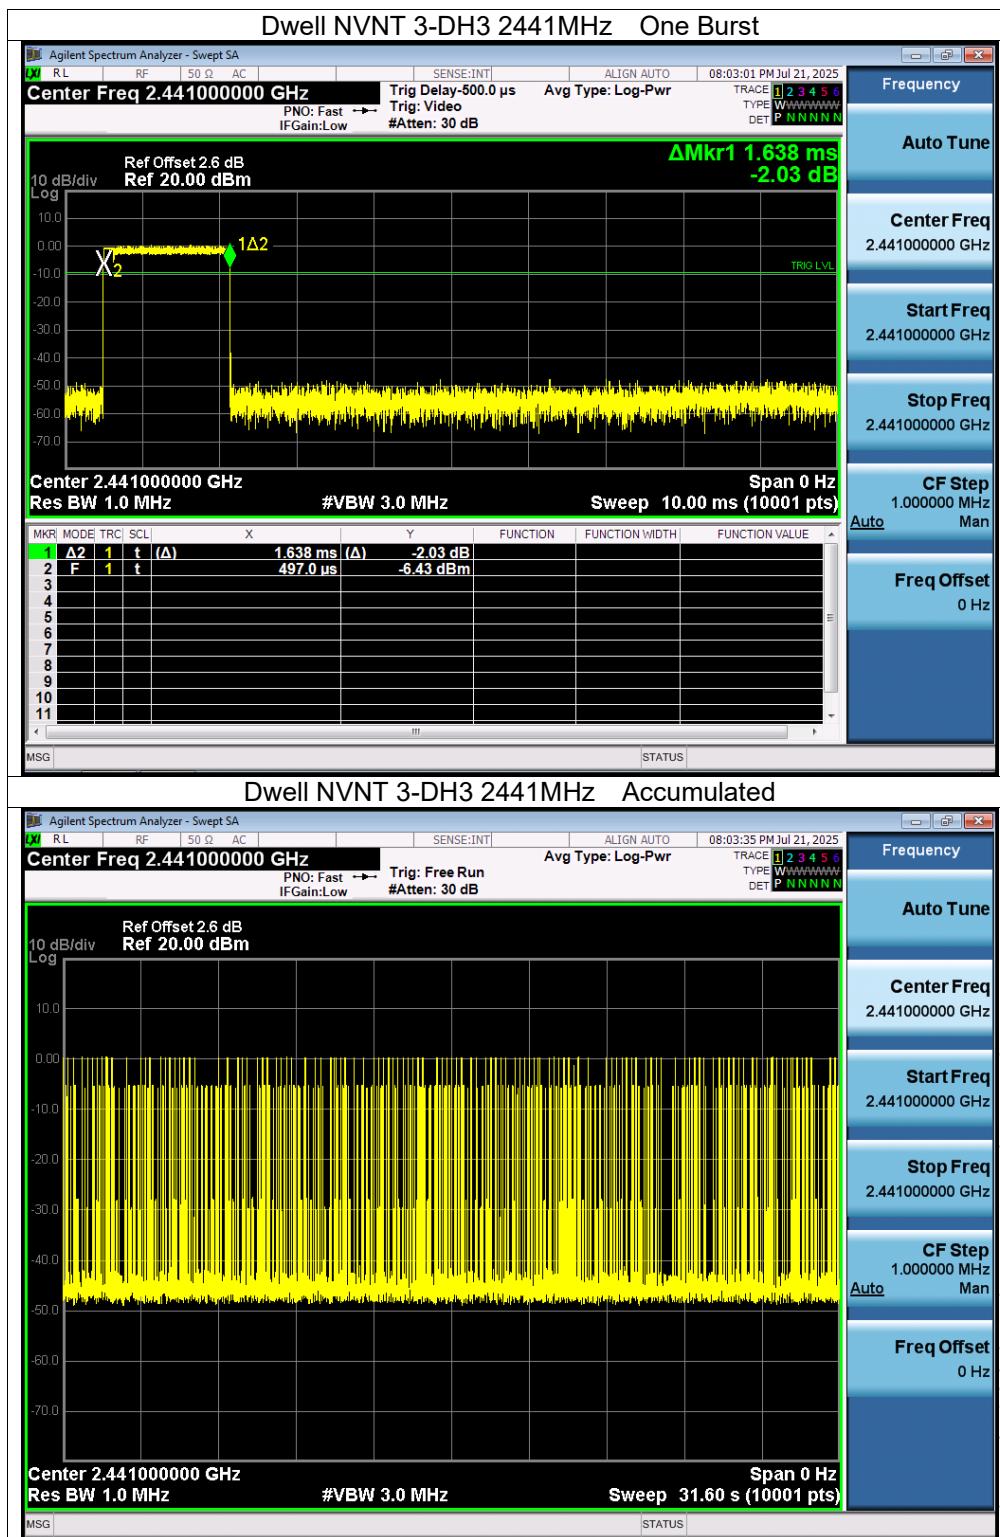

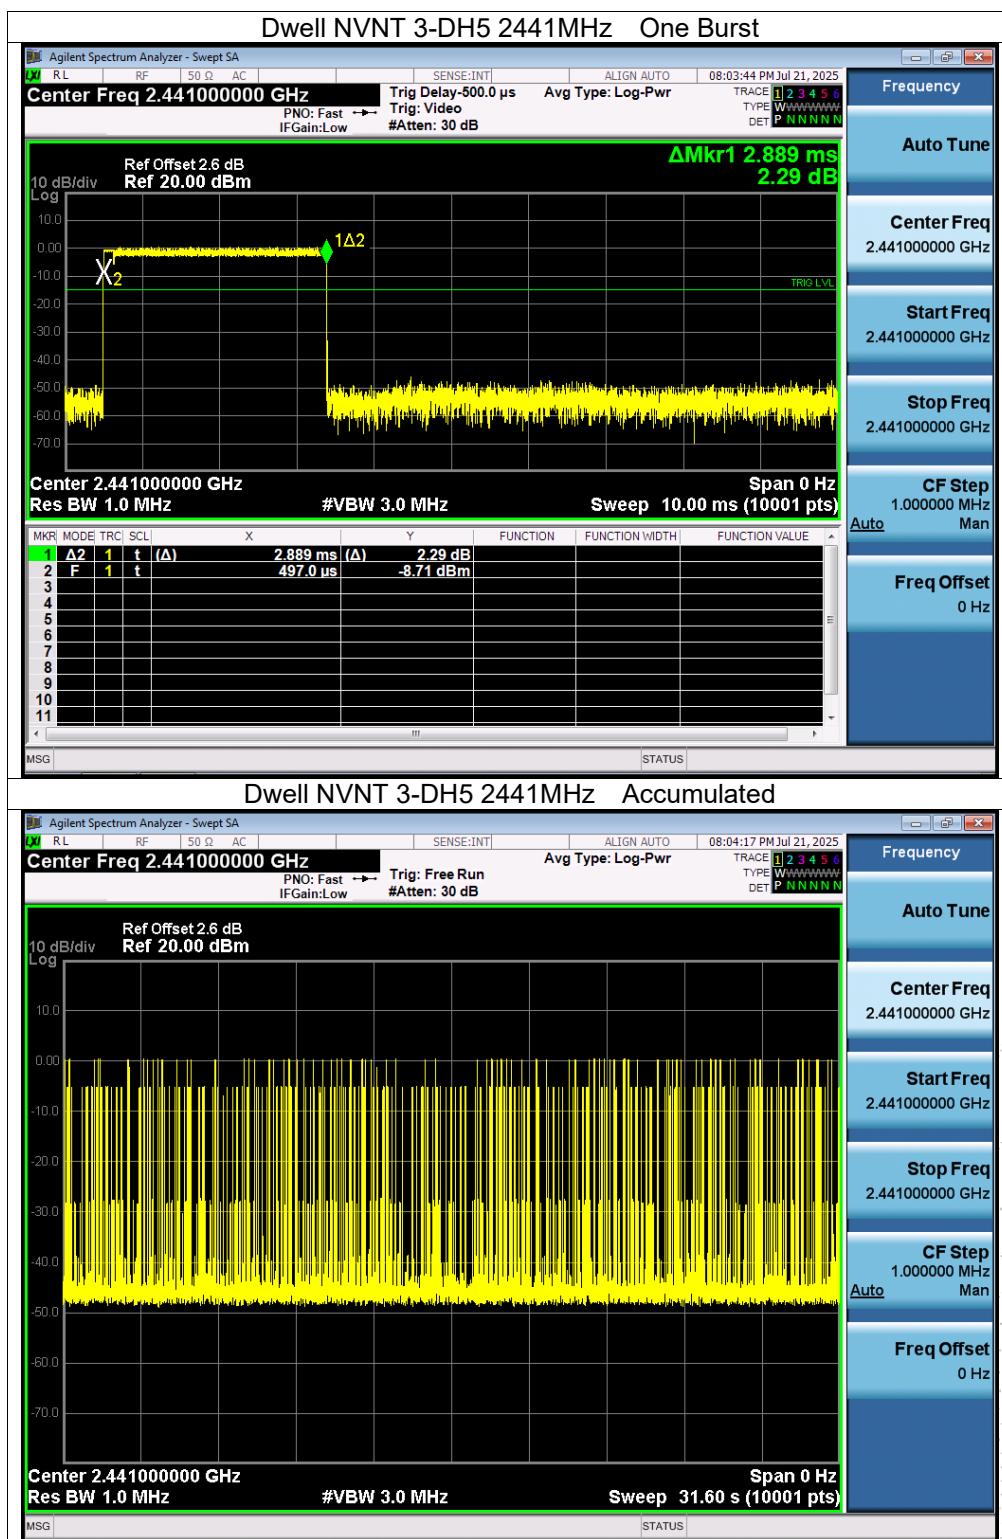


## 15. Antenna Requirement

### 15.1 Limit

15.203 requirement: For intentional device, according to 15.203: an intentional radiator shall be designed to ensure that no antenna other than that furnished by the responsible party shall be used with the device.


### 15.2 Test Result

The EUT antenna is Internal antenna, fulfill the requirement of this section.

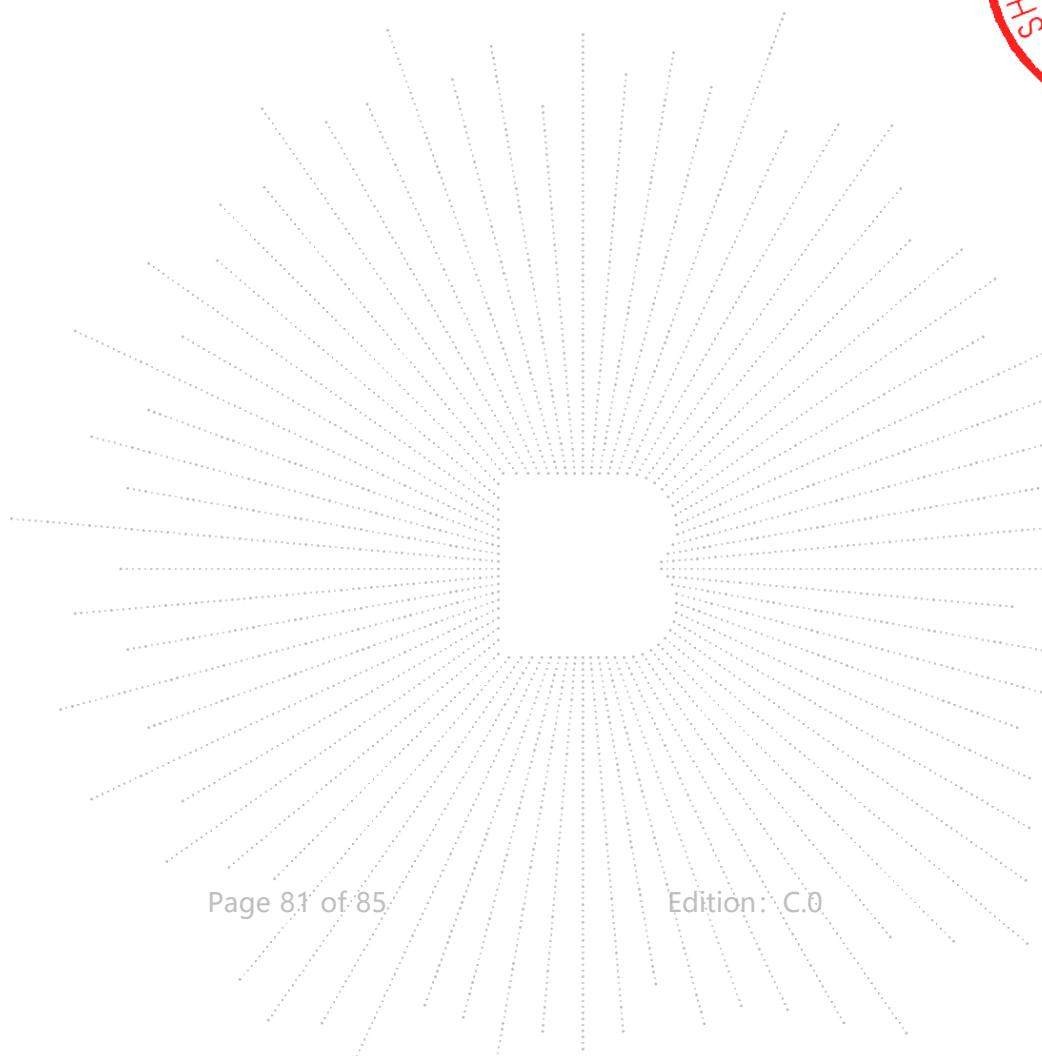 SHENZHEN

## 16. EUT Photographs

**EUT Photo 1**

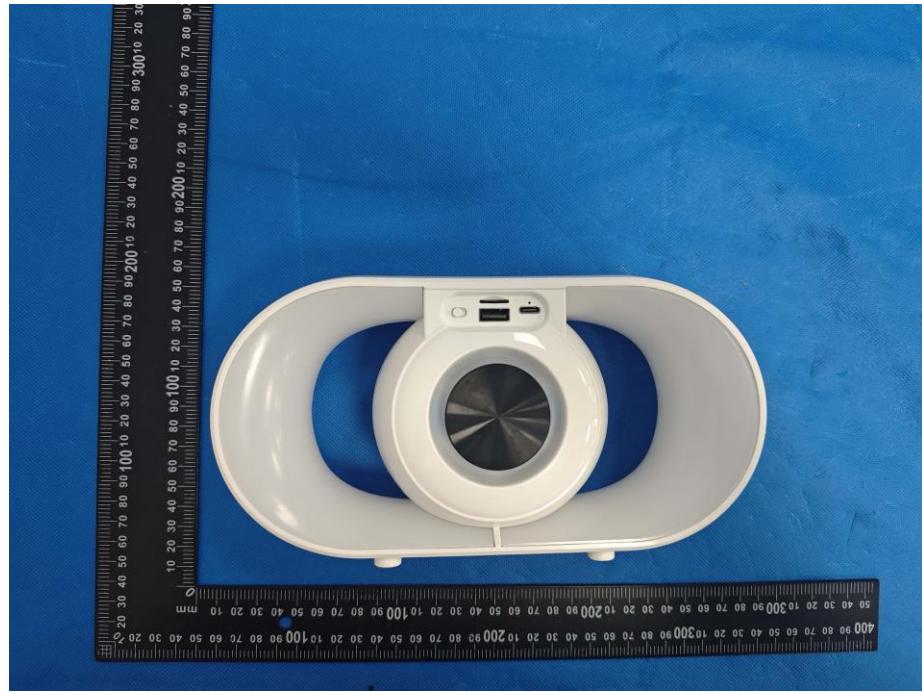

**EUT Photo 2**



NOTE: Appendix-Photographs Of EUT Constructional Details.



## 17. EUT Test Setup Photographs

### Conducted Emissions Photo



### Radiated Measurement Photos



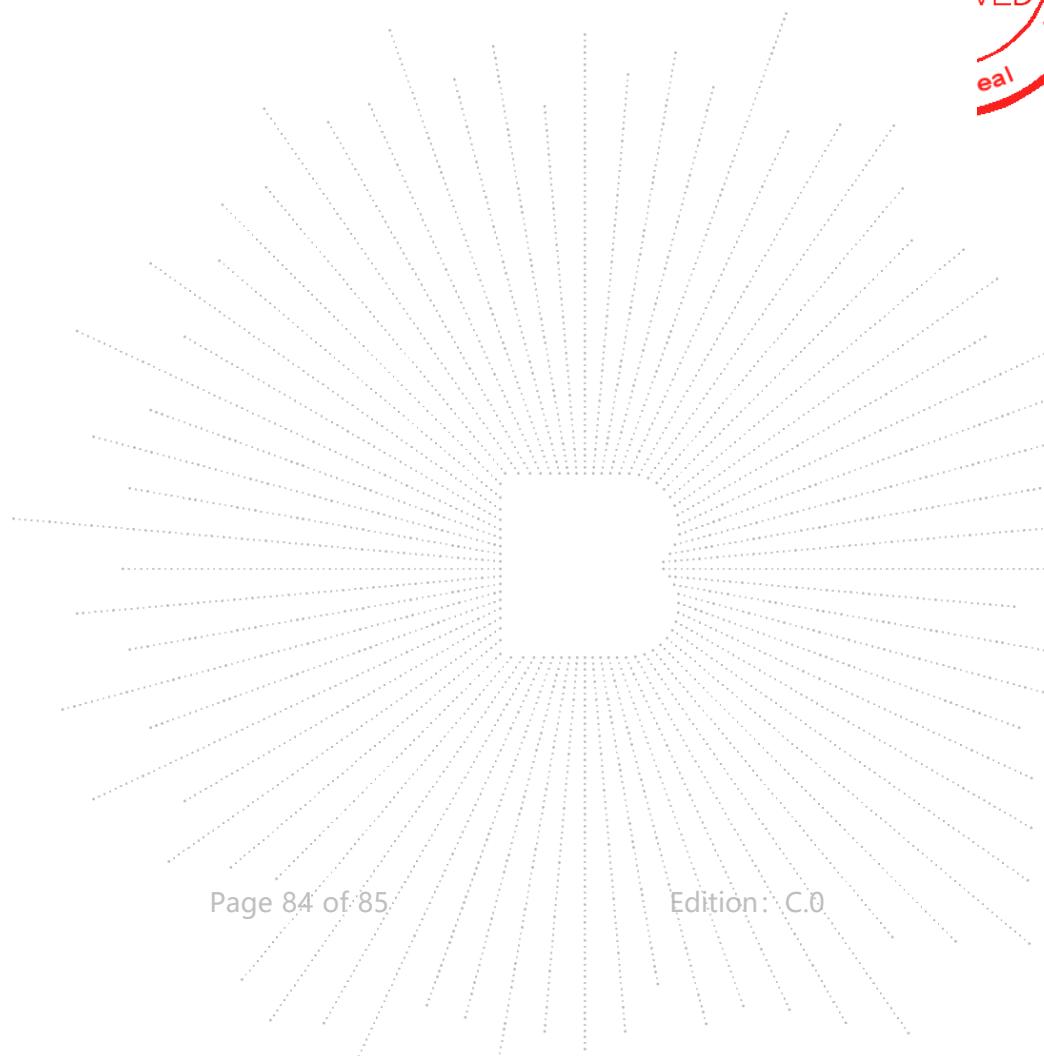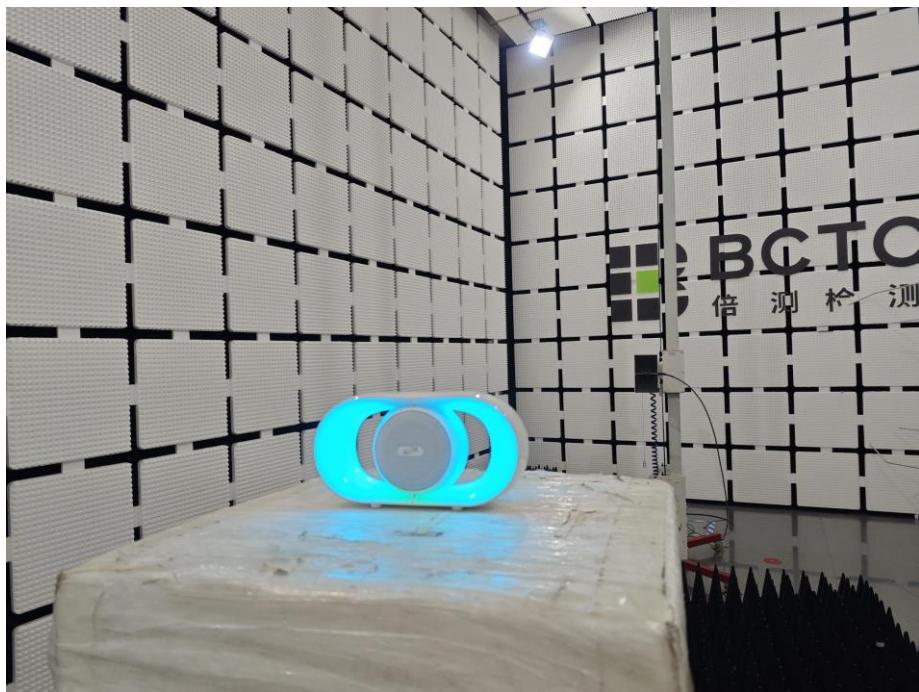

**STATEMENT**

1. The equipment lists are traceable to the national reference standards.
2. The test report can not be partially copied unless prior written approval is issued from our lab.
3. The test report is invalid without the "special seal for inspection and testing".
4. The test report is invalid without the signature of the approver.
5. The test process and test result is only related to the Unit Under Test.
6. Sample information is provided by the client and the laboratory is not responsible for its authenticity.
7. The quality system of our laboratory is in accordance with ISO/IEC17025.
8. If there is any objection to this test report, the client should inform issuing laboratory within 15 days from the date of receiving test report.

**Address:**

1-2/F., Building B, Pengzhou Industrial Park, No.158, Fuyuan 1st Road, Zhancheng, Fuhai Subdistrict, Bao'an District, Shenzhen, Guangdong, China

TEL: 400-788-9558

P.C.: 518103

FAX: 0755-33229357

Website: <http://www.chnbctc.com>

Consultation E-mail: [bctc@bctc-lab.com.cn](mailto:bctc@bctc-lab.com.cn)

Complaint/Advice E-mail: [advice@bctc-lab.com.cn](mailto:advice@bctc-lab.com.cn)

※※※※※ END ※※※※※

