


版本	更改	审核	日期
A0	首版发布	杨振华	22.02.23
A1	更新内容	杨振华	22.03.30
A2	更新内容(开机时间12s等), FCC警告语	杨振华	24.03.15

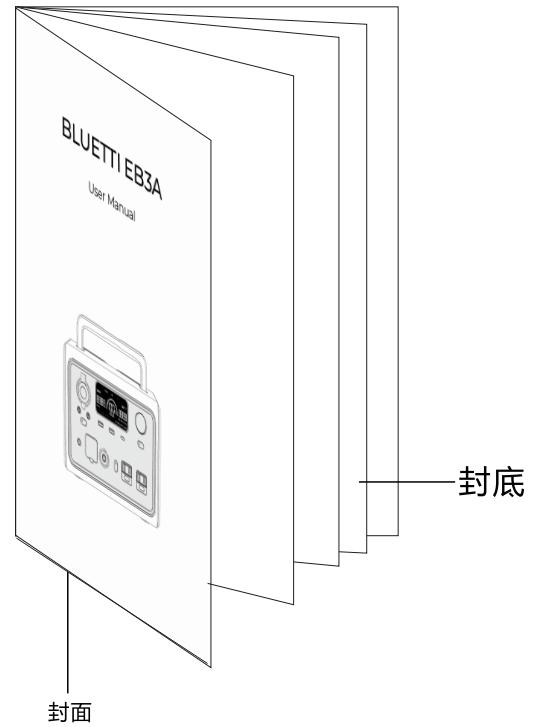

说明书示意图 (20P)

技术要求

成品尺寸: A5 (145X210mm)

材质: 封面封底内页80g铜版纸, 订装


颜色: 单黑印刷

深圳市德兰明海科技有限公司
Shenzhen PowerOak Newener Co.,Ltd

材料	表面处理	见技术说明	无特殊说明, 长度单位: mm 未标注尺寸公差按:
型号	EB3A	比例: 1:1 /A4	图纸编号/版本 PPS004-6d01A2 见技术说明
名称	英文说明书 (BLUETTI)		* 一重要尺寸 ○一般尺寸
设计	审核	批准	物料编号
杨振华 24.03.15			17.0303.0446-02 共 1 页

BLUETTI EB3A

User Manual

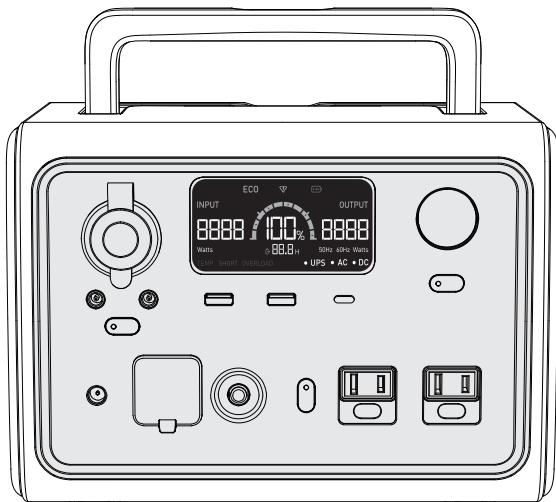

Thank You

Thank you for making BLUETTI a part of your family.

From the very beginning, BLUETTI has tried to stay true to a sustainable future through green energy storage solutions for both indoor and outdoor use while delivering an exceptional eco-friendly experience for our homes and our world.

That's why BLUETTI makes its presence in 70+ countries and is trusted by millions of customers across the globe.



CONTENTS

Before You Begin	4
Instructions	4
General Safety	4
Maintenance	5
Handling & Storage	5
What's In The Box	6
Standard Packaging	6
Product Overview	7
Diagram	7
Specifications	8
Operation	9
LCD Screen	9
Powering On/Off	10
Standard Mode	10
UPS	11
Setting	11
BLUETTI APP	12
Charging	12
Discharging	14
Appendix	15
FAQs (Frequently Asked Questions)	15
FCC Statement	16
IC Caution	17

Before You Begin

The information contained herein is subject to change without notice.

For the latest version, please visit <https://www.bluettipower.com/pages/user-guides>.

- The user manual contains instructions and notes on the operation and use of this unit.
- BLUETTI recommends that you use genuine accessories from BLUETTI.
- BLUETTI shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the BLUETTI.
- For your safety and benefit, please read carefully before using and keep it handy for future reference.

Instructions

Please read this guide for important safety information about your device. Failure to follow these guidelines for proper set up, use, and care for your device may cause damage to this unit and injury to yourself or others.

SAVE THESE INSTRUCTIONS!

General Safety

- Always operate or store the unit in accordance with specified temperature range.
- DO NOT expose the unit to fire, liquids, sweat, dirt or other contaminants, as that may cause the battery to explode or leak flammable liquid or gas.
- DO NOT store the unit with hazardous materials including flammables, explosives, radioactive materials, etc.
- DO NOT place the unit on an unstable or tilted surface.
- Make sure the place where you are using the unit is well ventilated and spacious.
- Keep away from children and pets.
- Check if the connectors of all connection cables are locked before use.
- DO NOT use the unit while driving.
- DO NOT modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

- Battery fluid is corrosive and may be toxic. If a battery leaks, keep the leaked fluid from touching your skin, eyes, clothes, or other surfaces. Immediately flush the affected areas with water, or seek medical help.
- DO NOT ignore those warning signs on components or products made by manufacturers.
- DO NOT dismantle, cut, crush, puncture, or otherwise damage the unit in any way.
- DO NOT insert foreign objects into the fan, vents, ports, or other openings.
- NEVER use a damaged battery or component. Improper use or misuse of damaged batteries may cause damage to your device or injury to yourself as a result of battery fluid leakage, fire, overheating, or explosion.
- Use approved battery and accessories ONLY. Improper use, or use of unapproved or incompatible batteries or components may result in a risk of fire, explosion, or other hazards, and may invalidate any approval or warranty.
- Turn off the unit IMMEDIATELY in case of malfunction.
- Use dry powder fire extinguisher in case of fire.
- DO NOT attempt to modify, replace the internal battery or any other component of the unit by anyone other than qualified personnel. If necessary, take it to an authorized service center as incorrect reassembly may result in a risk of fire or electric shock.

SAVE THESE INSTRUCTIONS!

Maintenance


- When not using the unit for extended periods of time, power off the unit and disconnect the AC adapter from the outlet.
- Charge the unit to 80% SOC every 3-6 months for long-term storage.
- When the battery capacity drops to 20%, charge the EB3A to extend battery lifespan and do NOT power devices with 400W and above.
- Clean the unit with a dry cloth gently and carefully.

Handling and Storage


- Use mechanical assistance as needed (e.g. trolleys and adjustable height workbenches).
- DO NOT stack anything on top of the unit either in storage or in use.
- Recommended storage temperature: 14-113°F/10-45°C.

What's In The Box


Standard Packaging

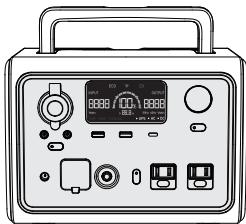

EB3A Portable Power Station



Solar Charging Cable

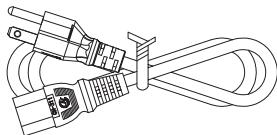

AC Charging Cable



User Manual

* Below accessories are not included in standard packaging and can be purchased at <https://www.bluettipower.com/>.



Car Charging Cable



USB-C to USB-C Cable

*** Solar Charging Cable:** 59in/150cm, 16AWG, MC4 to DC7909.

AC Charging Cable: 71in/180cm.


Car Charging Cable: 28in/72cm, 16AWG, Cigarette Lighter Port to DC7909.

USB-C to USB-C Cable: 59in/150cm, 16AWG.

Note: Package details are subject to change without prior notice.

Product Overview

Diagram

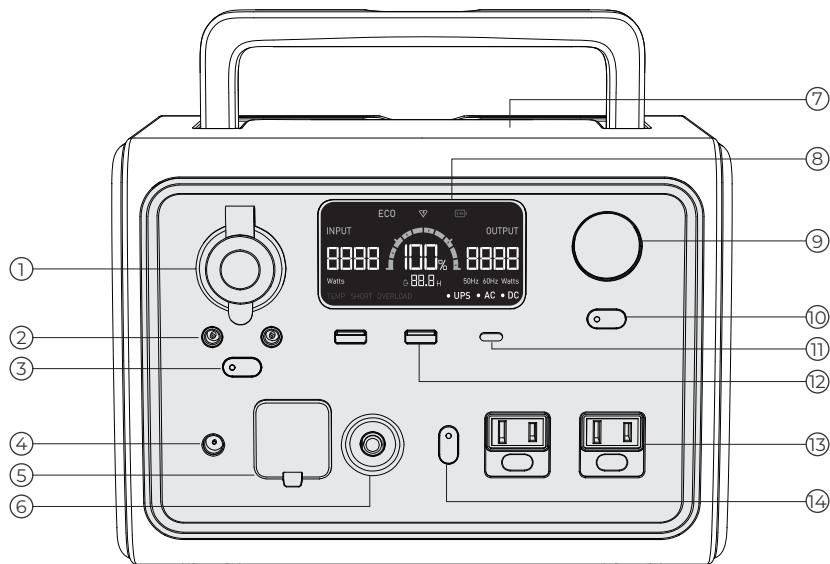

1. Cigarette Lighter Port	8. LCD Screen
2. DC5521 Port	9. LED Lamp
3. DC Power Button	10. LED Lamp Button
4. DC Input Port	11. USB-C Port
5. AC Input Port	12. USB-A Port
6. AC Circuit Breaker*	13. AC Output Port
7. Wireless Charging Pad	14. AC Power Button


*A circuit breaker is an electrical safety switch designed to protect your unit from damage caused by overcurrent or short circuit. When the AC current exceeds 10A, it will trip automatically. Press it once to reset the unit after these symptoms cleared.

Specifications

Item \ Product	EB3A US	EB3A EU/UK/AU
General		
Battery Capacity	268.8Wh(12Ah)	
Cell Type	LiFePO4	
Dimensions (L*W*H)	10.04*7.09*7.20IN/255*180*183MM	
Weight	10.14LB/4.6KG	
Discharging Temperature	-4-104°F/-20-40°C	
Charging Temperature	32-104°F/0-40°C	
Working Humidity	10-90%	
AC Output		
Power	600W	
Surge	1200W	
Voltage	120VAC	220-240VAC
Current	5A	2.6A
DC Output		
Cigarette Lighter Port *1	Voltage	12VDC
	Current	10A
DC5521 *2	Voltage	12VDC
	Current	10A
USB-A *2	Voltage	5VDC
	Current	3A
USB-C PD3.0 *1	Power	100W Max.
Wireless Charging *1	Power	5/7.5/10/15W
AC Input		
Power	268W Max.	
Voltage	120VAC	220-240VAC
Current	9A	4A
Frequency	60Hz	50Hz
DC Input		
Power	200W Max.	
Voltage	12-28VDC	
Current	8.5A Max.	

Operation

LCD Screen

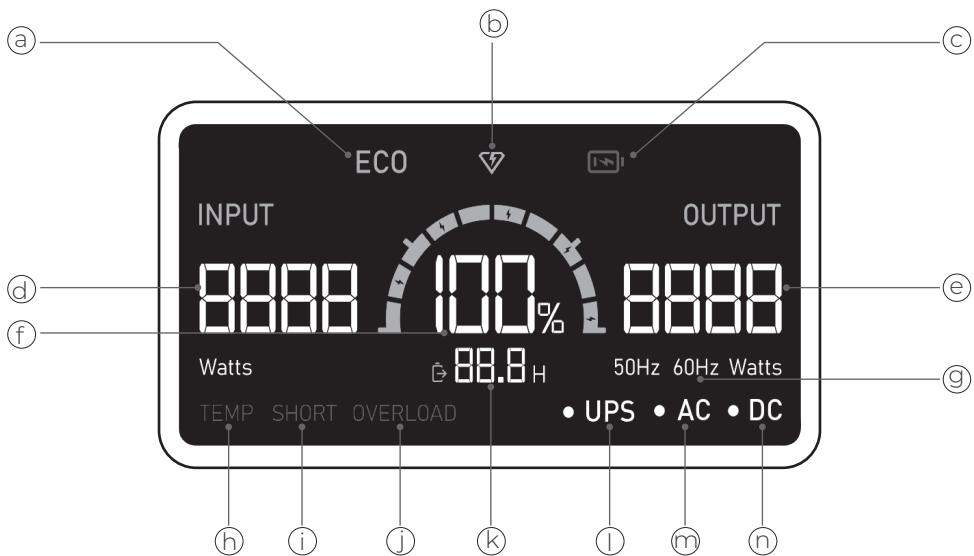

a: ECO Mode

h: Temperature Anomaly Alert

b: Turbo Charging

i: Short-circuit Alert

c: Low-battery Alert

j: Overload Alert

d: Input Power

k: Remaining Time Indicator*

e: Output Power

l: UPS Indicator

f: Battery Capacity

m: AC Indicator

g: AC Frequency

n: DC Indicator

*This indicator tells the remaining charge/discharge time.

Powering On/Off

Powering on: Press and hold the AC/DC Power Button for 1s to start up corresponding output.

Green light(on the button)	ON
LCD Display	ON

Note: Please turn on the DC power to enable the wireless charging.

Press any button, the LCD screen will stay on for 60 seconds.

Powering off: Press and hold power buttons to shut down corresponding output.

Green light(on the button)	OFF
LCD Display	OFF

Note: Press and hold any button for at least 3s, the unit will be off.

Standard Mode

Setting Mode: When the AC power is off and LCD screen is on, press and hold AC and DC power buttons simultaneously for 2s. The AC frequency indicator will flash.

Press and hold AC and DC power buttons simultaneously to exist 'Setting Mode' .

Note: If the unit has been idle for 1 minute under 'Setting Mode' , it will automatically exit 'Setting Mode' and the setting changes will not be saved.

ECO Mode: Under 'Setting Mode', press the DC power button to turn it on/off.

Note: When on this mode, the AC/DC output will automatically turn off after 4-hour low ($\leq 10W$ for AC, $\leq 1W$ for DC) or no load to save power.

Power Lifting Mode: Enable in BLUETTI App.

Note: When on this mode, both output voltage and current can be adjusted to a higher level for running high-powered heating devices like space heaters and electric irons.

Do NOT use this unit to run an air conditioner or washing machine.

UPS

UPS Bypass Mode: Connect the EB3A with the AC power and the 'UPS' will be on display.


Then turn on the AC output.

When on this mode, the AC power will directly support the loads on AC output ports and charge the EB3A.

Note: Max. output power: 600W.

The AC inverter is disabled under UPS Bypass Mode.

The unit won't enter this mode unless connecting with AC power AND turning on the AC output.

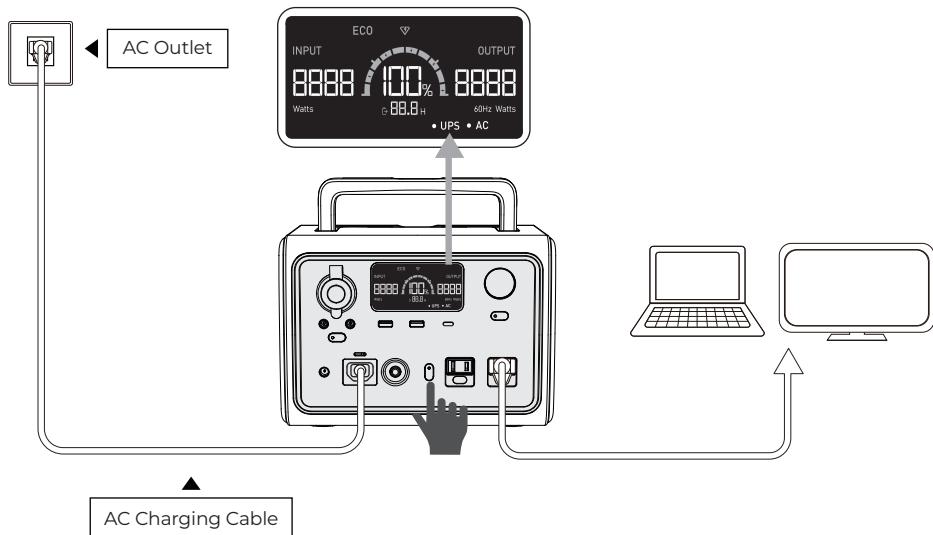

Setting

AC Frequency: Under 'Setting Mode', press the AC power button to switch.

¹ AC Frequency: The number of alternating cycles per second in an AC sine wave. The utility frequency in US is generally 60Hz.

BLUETTI APP

Download BLUETTI App from Google Play or App Store.




EB3A only supports Bluetooth connection. Once connected, EB3A can be accessed and controlled on phone or other smart devices. For more details, please refer to BLUETTI APP INSTRUCTIONS.

Charging

AC Charging

Simply plug the EB3A into the standard wall outlet and start charging.

Note: EB3A supports Standard(268W)/Turbo/Silent charging modes. Turbo/Silent mode can be enabled on BLUETTI App.

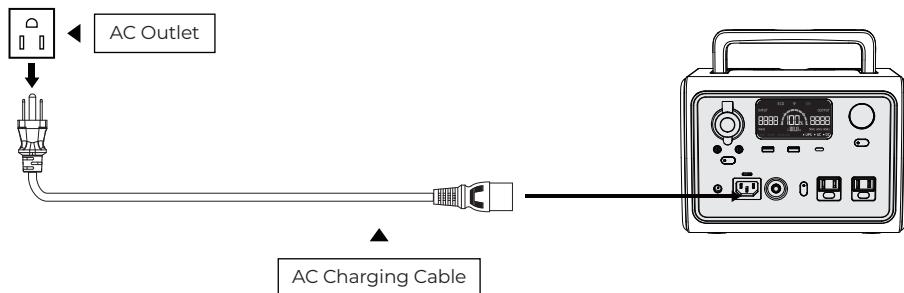


PV Charging

Connect the solar panels (in series or parallel) to EB3A via the solar charging cable.

Note: Please make sure your solar panels comply with:


OCV²: 12-28V Input Current: 8.5A Max. Input Power: 200W Max.

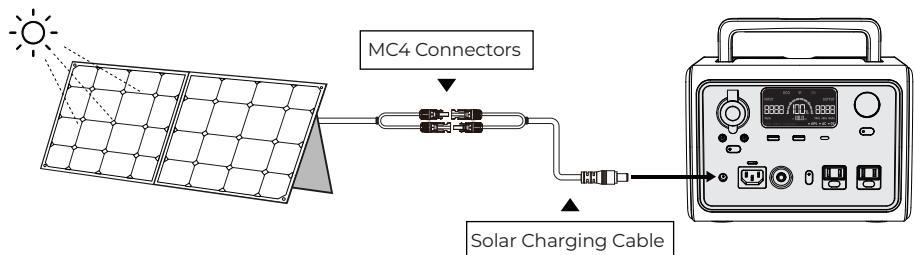

⚠ ONLY use solar panels with compatible voltage.

Car Charging

Connect the EB3A directly to the vehicle plug-in cigarette lighter port via the car charging cable.

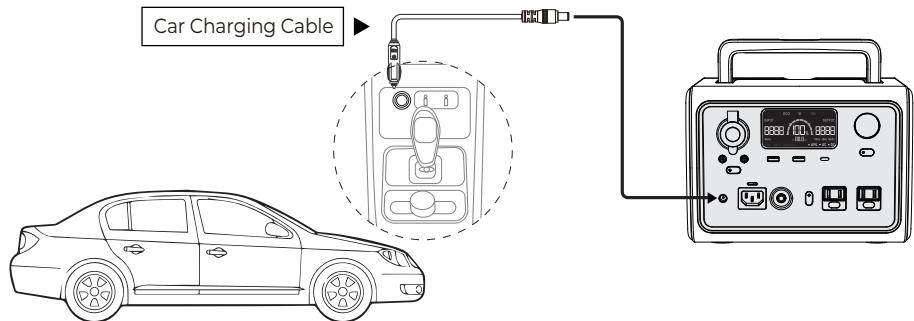


⚠ Cigarette lighter MUST be fully inserted into the lighter port of the machine.

² OCV: Open circuit voltage. The maximum voltage that the solar panel can produce with no load on it.

Generator Charging

Connect the EB3A with the generator via the AC charging cable.

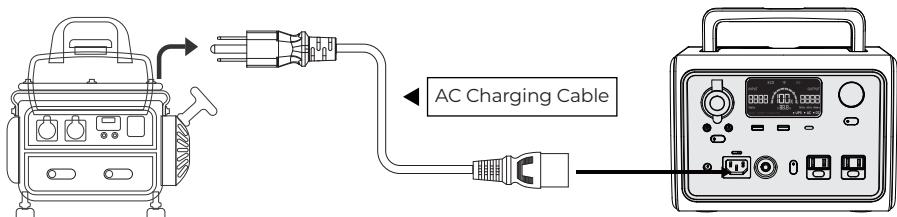

Note: Please select the generator with compliant and stable voltage.

Discharging



Iphone13
12-17 Times
13Wh



MacBook
5-6 Times
49.9Wh



Drone
5-6 Times
43Wh



Camera
10-15 Times
16.4Wh



Power Tool
2.5-3Hrs
80W



Refrigerator
2-2.5Hrs
90W

$$268.8\text{Wh} \times \text{DoD} \times \eta \div (\text{load power}) = \text{charging time (estimated)}$$

Note: DoD refers to the Depth of Discharge, η is the local inverter efficiency. DoD=80-90%, η =90%.

DoD may vary depending on ambient-operating temperature and discharge rate.

Load power and charging time are measured in Watt and Hour.

Appendix

FAQs (Frequently Asked Questions)

Q: How do I know whether my devices will work well with this product?

A: Please evaluate the total constant load of your appliances. If it doesn't exceed the Max. output power of EB3A, you can use this power station to charge.

Q: Can I use third-party solar panels to charge this product?

A: Yes, you can. As long as the specs of solar panels you're using fall in below range:

OCV: 12-28V

Input Current: 8.5A Max.

Input Power: 200W Max.

With the same power connector (MC4 or Anderson)

Q: How can I turn on the UPS Bypass Mode and what does it mean?

A: Connect the EB3A with the AC power and the 'UPS' will be on display. Then turn on the AC output. When on this mode, the AC power will directly support the loads on AC output ports and charge the EB3A.

Q: Is there a button to turn on/off the wireless charging?

A: Yes. Press the DC Power Button to enable the wireless charging.

Q: Can it charge and discharge at the same time?

A: Yes. It supports pass-through charging. EB3A comes with the premium LiFePO4 battery and proprietary Battery Management System to ensure that it can charge and discharge at the same time.

FCC Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Warning Statements:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment shall be installed and operated with minimum distance 20cm between the radiator & body.

IC Caution

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada' s licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L' émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d' Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L' exploitation est autorisée aux deux conditions suivantes:

- (1) L' appareil ne doit pas produire de brouillage;
- (2) L' appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d' en compromettre le fonctionnement.

ISED Radio Frequency Exposure Statement (WPT):

This equipment complies with IC exposure limits set forth for an uncontrolled environment. This equipment shall be installed and operated with minimum distance 10cm between the radiator & body.

Déclaration d'ISDE sur l'exposition aux radiofréquences (WPT) :

Cet équipement est conforme aux limites d'exposition IC définies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 10cm entre le radiateur et la carrosserie.

ISED Radio Frequency Exposure Statement (BT):

This equipment complies with IC exposure limits set forth for an uncontrolled environment. This equipment shall be installed and operated with minimum distance 20cm between the radiator & body.

Déclaration d'ISDE sur l'exposition aux radiofréquences (BT) :

Cet équipement est conforme aux limites d'exposition IC définies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 20cm entre le radiateur et la carrosserie.

For more information, please visit:

Web: <https://www.bluettipower.com>



@ BLUETTI Support

@ BLUETTI Official



@ bluetti_inc



@bluetti.inc



@bluetti_official



service@
bluettipower.com

SHENZHEN POWEROAK NEWENER CO., LTD.

Add: F19, BLD No.1, Kaidaer, Tongsha Rd No.168, Xili Street,
Nanshan, Shenzhen, China

USA Company

Company: BLUETTI POWEROAK INC
Add: 6185 S VALLEY VIEW BLVD STE D LAS VEGAS
NEVADA 89118 United States
FRN: 0033559824

Customer Service

Tel: 800-200-2980 (Monday to Sunday 9:00-17:00)
Email: sale@bluettipower.com (Pre-sales),
service@bluettipower.com (After-sales)





BLUETTI

Γ Γ

└ └

Just Power On

P/N:17.0303.0446-02A2