


2044训狗器中性中英文说明书折页
80X110MM

远程训狗器



请在使用前仔细阅读本说明书

产品介绍

本宠物训练器经过长期的市场验证和用户反馈,证明是安全的,有效的,舒适的,它可以帮助您在有效的范围内控制并训练您的狗狗,通过振动提醒、声音警告、电击惩罚等功能,来实现遥控止吠、纠正狗狗跑跳、轻咬咬绳、及阻止狗狗扑架人、在户外乱跑乱吃等不良习惯,还可以进行其它复杂的训练。本训练器将帮您管理您的狗狗的助力。

安全信息

- ★检查项圈的松紧度,佩戴过紧会导致宠物颈部的损伤,佩戴过松会导致电极接触点(橡胶帽)接触不到狗狗的皮肤,造成静电无效。
- ★请不要使用接收器项圈系狗绳,这可能会导致接收器被拉得太紧,橡胶帽顶着狗狗的脖子造成压力过大,您可以使用一个单独的项圈系狗绳。
- ★请经常检查狗狗颈部的皮肤,如果观察到皮肤有任何不良反应,请停止几天使用训练器。
- ★如项圈佩戴时间过长或项圈圈的太紧引起了红肿,建议恢复后再使用。
- ★训练器的目的是帮助您训练,我们建议每天不超过18小时,每天取下数小时让狗狗感受轻松和自由。
- ★如果是专业训练,尽可能的每1-2小时检查项圈的佩戴位置。
- ★绝大多数狗狗在首次佩戴时不会出现过敏反应,只有少数会表现得非常敏感,但是一段时间后就会有良好的适应性,此时建议不使用任何功能,请让狗狗习惯带着它。
- ★我们建议您给狗狗使用电击功能前,先使用振动功能或警告音功能,经过一段时间的训练,狗狗会发现振动或警告音后会有静电麻痛的感觉,这样,振动功能或警告音功能就可以有效地遏制宠物的不当行为,电击功能作为“一惩罚措施,不必经常使用。
- ★非常感谢您选择本宠物训练器,我们的目的是确保狗狗在安全的前提下,为您提供工具和技术支持,帮助您轻松,成功的训练狗狗。

产品特点

- 1.遥控发射器小巧,使用简便。
- 2.接收器在狗狗喝水时或雨天,游泳潜水都可以正常使用。
- 3.振动和电击的档位可以调节,初次使用时请选择合适的档位,试用时0-99档逐级递增。
- 4.3种功能模式:电击/声音/振动。
- 5.本宠物训练器的遥控距离在800米范围内。(海平面测试距离)
- 6.有3个信号通道,一个遥控发射器可以控制三个同型号的接收器。
- 7.节能设计,有自动待机及记忆功能。
- 8.低电提示功能。
- 9.本款训练器适合绝大多数中、小型犬。

重要提醒


本训练器出厂时已对好码,不需重新连接信号,可直接使用。如果发射器和接收器没连接信号,请按说明书中的说明方法给发射器和接收器重新对码连接信号。

训狗器开关机

- 1.遥控发射器具有自动休眠省电功能,约30秒无操作会自动休眠关机,按任意键都可开机。
- 2.接收器具有自动休眠省电功能,静止5分钟没有接收到信号时会进入休眠省电状态。短按一下接收器电源开关,接收器发出“嗒”二声响,即进入关机状态,短按一下“嗒”一声响即开机。

遥控发射器和接收器连接信号

- 1.按下遥控发射器上的任何按钮,打开遥控发射器,调整振动、静电档位不为0。
- 2.按“CH”信号通道按钮选择一个信号通道。
- 3.长按接收器电源开关按钮3秒左右,接收器会发出“嗒”的1次响声,指示灯长闪动。此时请在10秒内按下遥控发射器的电击/声音/振动模式其中的任一按钮,即会连接好信号;同时,接收器会发出“嗒”的1次响声,灯也会停止闪动,表示配对成功。
- 5.如果没有在10秒内按下电击/声音/振动模式其中的任一按钮,请重复上述步骤。
- 6.如果拥有2只以上接收器,再次按下遥控“CH”按钮选择另一个信号通道连接信号。



功能按键指示

- ① 天线:传输信号到接收器。
- ② CH1/2/3:3个信号通道显示。
- ③ 0-99档位显示。
- ④ 电源开关按钮:如果上一次刚使用过振动或声音模式轻按这个按钮会自动切换为电击模式,显示屏上会显示电击符号,按—/+按钮可以调整电击的强弱,档位分为0-99,再次按下此键时电击的符号开始闪动,接收器上可产生当前强度的电击。
- ⑤ 振动模式按钮:如果上一次刚使用过电击或声音模式轻按这个按钮会自动切换为振动模式,显示屏上会显示振动符号,按—/+按钮可以调整振动的强弱,档位分为0-99,再次按下此键时振动的符号开始闪动,接收器上可产生当前强度的振动。
- ⑥ 减少按钮:按这个按钮,可以调整电击和振动的强弱。
- ⑦ 手电筒:当按下按钮15按钮时发光。

请记好您使用的信号通道,不要随意更换,否则遥控会失效!

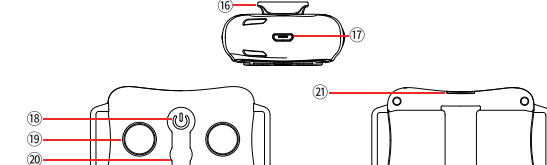
如果训练器不敏感,请检查下面的问题。

- 1) 遥控器和接收器是否相距太远?
- 2) 遥控器和接收机之间有什么障碍/干扰吗?
- 3) 遥控器和接收器都充满电了吗?
- 4) 遥控器或接收机是否处于待机状态?
- 5) 两种模式切换狗绳吗?
- 6) 是按钮按得太紧了,还是按了按钮的中心?

注:IPX7防水功能能保护接收器和遥控器不受潮湿的,但是,它们不能在水中浸泡很长时间。

功能按键指示

- ④ 增加按钮:按这个按钮,可以调整电击和振动的强弱。
- ⑤ LED手电筒按钮:按此按钮,发射器LED手电筒灯光亮起,再按一下,就会关闭手电筒功能,点按此键可点亮接收器上的照明灯,再点按可关闭接收器上的照明灯。如果没有手动操作遥控器关闭约5分钟接收器也会自动关闭照明灯。
- ⑥ 手电筒:用于发射器充电。
- ⑦ USB接口:用于发射器充电。
- ⑧ 电源开关:打开/关闭接收器,与遥控器发射器连接信号,或信号重置。
- ⑨ 静电电柱(电极):安装一对适合不同厚度狗毛的橡胶导电电柱(电极接触点),有效地传导静电电击训练。
- ⑩ 电源指示灯:显示接收器开机、关机,及充电状态。



关于充电

★在第一次使用之前,请给遥控器和接收器充电

遥控发射器充电:

- 1.连接好充电器,将充电器插入标准的插座。
- 2.充电时遥控发射器显示屏上面电符号会不停闪动。
- 3.遥控发射器充满电后,显示屏上面电符号停止闪动。

接收器充电:

- 1.打开橡胶盖,连接好充电器,将充电器插入标准的插座。
- 2.充电时接收器指示灯会显示翠绿色,会不停闪动。
- 3.接收器充满电后,翠绿色指示灯长亮不闪动。
- 4.充完电后要扣充电口的橡胶盖盖紧,避免进水。

温馨提示

- 1.请在首次充电时,给遥控发射器和接收器充电2小时以上。
- 2.当给接收器充电时,它处于睡眠模式,无法接收来自遥控器发射器的信号。
- 3.如果电量不足,遥控发射器屏幕上会显示电量为空的图标电批。
- 4.如果接收器电量不足,则指示灯提示。
- 5.本产品是充电设备,为了保证产品功能的正常,如果长时间不使用,请每月为本产品充电一次。

使用注意事项

- 1.遥控发射器采用高频传输技术,无须直接对接接收器,遥控信息可穿透墙体等障碍物,但会影响遥控发射器的有效距离。
- 2.机站、磁场、障碍物、自身电池的强弱,其他无线设备、地形、植被及其它因素都可能影响遥控发射器的信号传输,也会影响遥控发射器的实际使用距离。
- 3.本产品为宠物训练器,只有通过训练,狗狗才能理解您的意愿,良好的效果需要经过一段时间的训练。
- 4.应保持积极的培训,每次的时间不宜过长,约10-15分钟。
- 5.目前,该产品是最有效和最安全的宠物训练工具,按照正确的使用方法,可以有效地训练狗狗而又不会使其受到伤害。

定期维护

- 1.请定期检查接收器的密封性,检查外部是否有破损。
- 2.每周用柔软清洁布擦拭橡胶电柱一次。
- 3.检查狗狗的脖子,每周清洁清洗。

测试本训练器


- 1.电击功能测试
电击功能用肉眼是看不到的,请使用我们的测试灯。
测试前,请设置电击模式档位不为0,您可以按—/+按钮调整,确定液晶显示屏不为0,按遥控器④按钮,接收器发出静电及闪电,用测试灯测试,测试灯将发光。
- 2.振动功能测试
测试前,请设置振动模式档位不为0,您可以按—/+按钮调整,确定液晶显示屏不为0,按遥控器⑤按钮,接收器会振动及闪电。
- 3.声音功能测试
这个档位不需要调节,液晶显示档位与这个功能没有关系,按遥控器⑥按钮,接收器会发出滴声及闪电。
- 4.发射遥控器手电筒及接收器照明灯功能测试
这个档位不需要调节,液晶显示屏没有这个功能显示。按一下遥控器⑦按钮,发射器LED手电筒灯光亮起,再按一下⑧按钮,就会关闭遥控器手电筒功能。长按⑨按钮2秒可点亮接收器上的照明灯,再长按⑨按钮2秒可关闭接收器上的照明灯。如果没有手动操作遥控器约10分钟接收器也会自动关闭照明灯。

定期维护

- 1.请定期检查接收器的密封性,检查外部是否有破损。
- 2.每周用柔软清洁布擦拭橡胶电柱一次。
- 3.检查狗狗的脖子,每周清洁清洗。

正确佩戴接收器

- 1.正确的接收器配戴位置有助于健康有效的训练。接收器必须放在狗狗的脖子上底部,放电柱与狗狗的皮肤直接接触。
- 2.如果狗狗脖子的毛比较长或厚,请使用较长的橡胶帽。
- 3.项圈松紧以能伸进一个手指为宜,不能很松,否则会影响电击效果。
- 4.如果项圈过松或过紧,请调整长度,让您的狗狗感到舒适,调整适中再佩戴。



常见问题汇总

问题	回答
狗狗多大时可以使用本训练器?	您的狗狗能够识别服从基本的命令,如“坐”或“过来”,本训练器适合绝大多数25公斤内的狗狗,部分精瘦的狗狗也可以使用。
我的狗狗已经遵守我的命令,是否还需要继续训练?	您可能还需要加强狗狗的记忆。
我可以给本训练器再加一个接收器吗?	可以的,遥控发射器有三个信号通道,您可以分别控制三只狗狗。
训练器可以遥控多远距离?	训练器在无任何干扰且无障碍情况下可以达到800米,但是我们在使用中,地形、气候、植被、机站、磁场、障碍物、其他无线电设备、自身电池的强弱及其他因素都可能影响遥控的有效距离。
我想用手测试接收器的静电电击,但它没有反应,请问是我的方法不对吗?	请您同时佩戴两个静电电柱上,只佩戴一个静电电柱是不导电。
振动或电击一直按着可以持续多久?	如果您一直按这振动或电击功能,它工作时间为10秒钟,在这之后,接收器将停止工作,您必须松开按钮再次按才起作用。
狗狗喝水或雨天淋水,游泳潜水都可以正常的使用,注意充电口的橡胶盖盖紧。	
本训练器的接收器防水吗?	狗狗喝水或雨天淋水,游泳潜水都可以正常的使用,注意充电口的橡胶盖盖紧。
如果我的狗狗脖子有红班时该怎么办?	请停止使用训练器观察几天,如果症状持续超过48小时,可以咨询一下兽医。如果狗狗皮肤恢复正常了,使用训练器时也应该经常的检查,这可能会导致橡胶帽磨损狗狗的脖子,建议使用一个单独的项圈系狗绳。
我可以把狗绳系在接收器项圈上吗?	您可以使用一个单独的项圈系狗绳。

常见问题汇总

问题	回答
狗狗可以经常带着接收器吗?	我们建议狗狗每天带着训练器不超过18小时,如果长时间带着,建议您经常检查。
项圈是多长的?	项圈的总长度是60CM,如果太紧或者松的话可以调整带扣。
我的狗需要使用多大的接收器档位和电击档位?	请您为您的狗狗找到最适合的振动档位和电击档位,建议您从最低档试起,不必使用很大的档位让狗狗反应很强烈。
有什么其它更好的训练方法吗?	您可以准备一些狗零食作为训练奖励品,这样训练时会有效果,每次有奖励时不宜为奖励品;您可以告诉狗狗该做什么或不做什么,多次训练后狗狗会明白您喜欢它做什么和不喜欢它做什么。
训练器不工作,或者带到狗狗脖子上后,发出功能指令狗狗没有反应,该怎么办?	1.请检查遥控发射器和接收器是否有电。 2.请检查振动或电击功能是否调整了档位。 3.请检查是否开启了接收器。 4.请检查是否无意中按到了遥控发射器的CH按钮,更换了信号通道。 5.您可以试着遥控发射器和接收器重新连接信号。 6.取下接收器,测试2种功能是否正常工作。 7.请确保接收器位置佩戴正确,项圈不能佩戴过松。 8.修剪剪过长的狗毛,或使用较长的接触点。



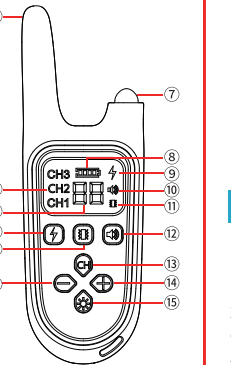
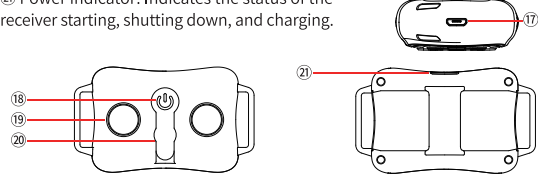
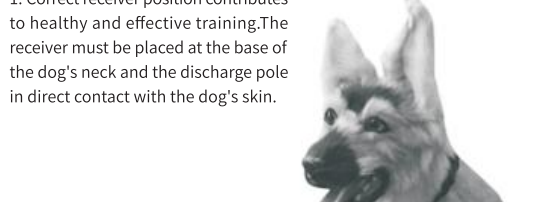
合格证

出厂日期: 频率:433.92MHz

检验员: 发射机:3.7V 300ma LIP

执行标准: 接收器:3.7V 300ma LIP

中国制造

<div>USER MANUAL</div> <div></div> <div>Please read this manual carefully before using it</div>		<div>Product introduction</div> <p>This pet trainer authentication and user feedback, after a long period of market proved to be safe, effective, comfortable, it can help you in the range of effective control and train your dog, by vibration to remind, voice warning, shock punishment, and other functions, to achieve remote stop barking, correct the dog run free and easy call, and stop a dog fight the flapping, random pick up bad habits such as eating outdoors. Other complex exercises can be performed. This trainer will be your right-hand man in managing your dog.</p> <div>Safety information</div> <ul style="list-style-type: none">★Check for tightness in the collar, which can lead to neck damage. Wearing too loose will cause the electrode contact point (rubber cap) to miss the dog's skin, resulting in ineffective static.★Do not use a receiver collar to tie your dog. This may cause the receiver to be pulled too tight and the rubber cap to put too much pressure on the dog's neck. You can use a separate collar to tie your dog.★Check your dog's neck frequently and stop using the trainer for a few days if you notice any adverse reactions.★If because wear time is too long or the collar is too tight caused by red spots, it is recommended to use after recovery.★The trainer is designed to help you train, we recommend no more than 18 hours a day, take off a few hours a day to let the dog feel relaxed and free.★If trained professionally, check the collar position every 1-2 hours if possible.★Most dogs will not show fidgety reaction when first worn, only a few will show very sensitive, but after a period of time will have a good adaptability, it is recommended not to use any function at this time, please let the dog get used to wearing it.★We recommend that you give dogs using electric shock function, use vibration function or warning sound function first, after a period of training, the dog will find vibration or there will be a static help after warning sound, in this way, vibration or warning sound functions can effectively curb the pet's misconduct, electric shock function as a punishment, not frequently used.★Thank you very much for choosing this pet trainer. Our goal is to provide tools and technical support for your dog under the premise of safety to help you train your dog easily and successfully. <div>-1-</div>		<div>Product features</div> <ol style="list-style-type: none">1. Remote control transmitter is flexible and compact, easy to use.2. The receiver can be used normally when the dog is drinking or on rainy days when swimming or diving.3. The gear of vibration and electric shock can be adjusted. Please select the appropriate gear for the first use and increase step by step from 0 to 99 for trial use.4.3 functional modes: shock/sound/vibration.5.The remote control range of this pet trainer is within 800 meters.(Sea level test Distance)6.There are three signal channels and a remote transmitter can control three receivers of the same type.7.Energy-saving design, with automatic standby and memory functions.8.Low power prompt function.9.This trainer is suitable for most medium and small dogs. <div>Important reminder</div> <p>The dog trainer has been coded before leaving the factory. It can be used directly without reconnecting the signal. If the transmitter and receiver cannot connect the signal, please follow the instructions in the instructions to reconnect the signal to the transmitter and receiver.</p> <div>Dog Switches</div> <ol style="list-style-type: none">1. The transmitter of the remote control has the function of automatic sleep and power saving. It will automatically sleep and shut down if there is no operation for about 30 seconds.2.The receiver has the function of automatic hibernation to save power. It will enter the state of power saving when no signal is received after 5 minutes of static.Short click on the receiver Power switch, the receiver sends out "beep" two sound, that is to enter the shutdown state, short press "Beep" a sound is started. <div>-2-</div>		<div>Pair the Remote and Receiver</div> <ol style="list-style-type: none">1.Press any button on the remote control transmitter to open the remote control transmitter and adjust the vibration and static gear not to 0.2.Press the "CH" signal channel button to select a signal channel.3.Long press the power switch button of the receiver for about 3 seconds, the receiver will emit a "di" sound, and the indicator light will flash.4.At this point, you must press any of the buttons in the remote control transmitter's shock/sound/vibration mode within 10 seconds, which will connect the signal: at the same time, the receiver will emit a "di" sound, and the lamp will stop flashing, indicating that the match is successful.5.If you do not press any of the shock/sound/vibration modes within 10 seconds, repeat the above steps.6.If you have more than 2 receivers, press the remote "CH" button again to select another signal channel to connect the signal. <div></div> <div>Please remember the signal channel you use, do not change at will, or the remote control will lose its function!</div> <div>If the trainer is not sensitive, check the following questions.</div> <ol style="list-style-type: none">1)Is the remote control too far away from the receiver?2)Is there any barrier/interference between the remote control and the receiver?3)Are the remote control and receiver fully charged?4)Is the remote control or receiver in standby mode?5)Do the two modes switch frequently?6)Is the button pressed too light, or is the center of the button pressed? <div>Note:IPX7 Waterproof features protect the receiver and remote from moisture. However, they cannot be soaked in water for a long time.</div> <div>-3-</div>		<div>Function key indicator</div> <ol style="list-style-type: none">① Antenna: Transmits a signal to a receiver.② CH1/2/3:3 signal channel display.③ 0-99 gear display.④ Shock mode button: If you have used vibration or sound mode last time, gently pressing this button will automatically switch to shock mode and the shock symbol will be displayed on the screen.Press —/+button to adjust the intensity of the shock. The tap position is 0-99. When this button is pressed again, the shock symbol starts to flash, and the current intensity of the shock can be generated on the receiver.⑤ Vibration mode button:If you have just used electric shock or sound mode, gently pressing this button will automatically switch to vibration mode, and the vibration symbol will be displayed on the screen.Press —/+button to adjust the intensity of vibration. The gear is divided into 0-99. When this key is pressed again, the vibration symbol starts to flash, and the vibration of current intensity can be generated on the receiver.⑥ Reduce button: Press this button to adjust intensity of shock and vibration.⑦ Flashlight: Shines when the button shown in Figure 15 is pressed.⑧ Battery capacity display.⑨ Shock mode display.⑩ Sound mode display.⑪ Vibration mode display.⑫ Sound mode button: Press this button, the receiver will beep and the light will twinkle. The gear is not adjustable.⑬ Signal channel button: This product has 3 signal channels to choose. Press this button, you can choose different receivers and transmitters to match. <div></div> <div>Function key indicator</div> <ol style="list-style-type: none">④ Add button: Press this button to adjust the intensity of shock and vibration.⑤ LED flashlight button: Press this button, the LED flashlight lamp light of the emitter will light up, press it again, and the flashlight function will be turned off.Click this button to light up the illumination lamp on the receiver.Click again to turn off the light on the receiver.The receiver will also automatically turn off the lights if the remote control is not manually switched off for about 5 minutes.⑥ Belt buckle.⑦ USB interface: Used for charging transmitter.⑧ Power switch: Turn receiver on/off, connect signal to remote transmitter, or reset signal.⑨ Electrostatic column (electrode): A pair of rubber conductive column (electrode contact point) suitable for different thickness of dog hair is installed to conduct static electricity effectively for easy training.⑩ Charging hole: Used for charging the receiver.⑪ Power indicator: Indicates the status of the receiver starting, shutting down, and charging. <div></div> <div>About charging</div> <p>★Charge the remote control and receiver before you use it for the first time</p> <div>Remote transmitter charging:</div> <ol style="list-style-type: none">1. Connect the charger and plug it into a standard socket.2.The battery symbol on the display of the remote control transmitter will constantly flash when charging.3.When the remote transmitter is fully charged, the battery symbol on the screen stops flashing. <div>Receiver charging:</div> <ol style="list-style-type: none">1.Open the rubber cover, connect the charger and plug it into a standard socket.2.When charging, the receiver indicator light will show bright green, will keep flashing.3.When the receiver is fully charged, the bright green indicator light will not flash for a long time.4.After charging to plug the rubber cover of the charging port tightly to avoid water. <div>Warm prompt</div> <ol style="list-style-type: none">1. Please charge the remote control transmitter and receiver for more than 2 hours during the first charge.2. When the receiver is charged, it is in sleep mode, unable to receive signals from the remote transmitter.3.If the battery is low, the remote transmitter screen will display the icon battery with empty battery.4.If the receiver is low in power, the indicator indicates.5.This product is a rechargeable device. In order to ensure the normal function of the product, if it is not used for a long time, please charge this product once a month. <div>Precautions for Use</div> <ol style="list-style-type: none">1.The remote control transmitter adopts high-end transmission technology, which does not need to directly aim at the receiver. The remote control information can penetrate obstacles such as walls, but it will affect the effective distance of the remote control transmitter.2.Station, magnetic field, obstacles, the strength of its own battery, other wireless equipment, terrain, vegetation and other factors may affect the signal transmission of the remote control transmitter, which will affect the actual remote control distance of the remote control transmitter.3.This product is a pet trainer, only through training, the dog can understand your intention, good results need to go through a period of training.4.Training should be kept active and should not last too long, about 10-15 minutes.5.At present, this product is the most effective and safest pet training tool. When used correctly, dogs can be trained effectively without being harmed. <div>-5-</div>		<div>Test the training collar set (After paired successfully)</div> <ol style="list-style-type: none">1. Shock function test The electric shock function is invisible to the naked eye, please use our test lamp. Before the test, please set the shock mode to 0, and you can press —/+ button to make sure that the LCD display is not 0. Press the ④ button of the remote control and the receiver emits static electricity and flashing light. Test with a test lamp and the test lamp will glow.2. Vibration function test Before the test, please set the vibration mode position not to 0, and you can press —/+ button to make sure that the LCD display is not 0. Press the ⑤ button of the remote control and the receiver will vibrate and flash.3.Sound function test There is no need to adjust this position. The LCD position has nothing to do with this function. Press the ⑦ button of the remote control, the receiver will emit beep and flash lights.4.Launch remote control flashlight and receiver lamp function test This position does not need to be adjusted, LCD does not display this function. Press the ⑧ button of the remote control, the LED flashlight lamp lights up. Press the ⑧ button again, and the flashlight function of the remote control will be turned off. Long press ⑧ button for 2 seconds to turn off the light on the receiver. Press ⑧ button for another 2 seconds to turn off the light on the receiver. The receiver will automatically turn off the light if the remote control is not manually operated for about 10 minutes. <div>Regular maintenance</div> <ol style="list-style-type: none">1. Check the receiver regularly for leakproofness and external damage.2. Clean the electrode rubber column with alcohol once a week.3. Check your dog's neck and clean it weekly. <div>-7-</div>	<div>Proper handling of receivers</div> <ol style="list-style-type: none">1. Correct receiver position contributes to healthy and effective training. The receiver must be placed at the base of the dog's neck and the discharge pole in direct contact with the dog's skin.2. If the dog has a long or thick neck, use a long rubber cap.3.The collar should be tight enough to reach into a finger, not too loose, otherwise it will seriously affect the shock effect.4.If the collar is too loose or too tight, adjust the length of the buckle to make your dog comfortable, adjust the collar properly and then wear it. <div></div> <div>-8-</div>	<div>F.A.Q</div> <p>Q:When can a dog use this trainer?</p> <p>A:Your dog can recognize and obey basic commands, such as "sit" or "come here". This trainer is suitable for most dogs with 25 kg of meat. Some heavier dogs can also be used.</p> <p>Q:My dog has complied with my orders. Does he need to be trained continuously?</p> <p>A:You may also need to strengthen your dog's memory.</p> <p>Q:Can I add another receiver to this trainer?</p> <p>A:Yes, the remote control transmitter has three signal channels, you can control three dogs.</p> <p>Q:How far can dog trainers be remotely controlled?</p> <p>A:The trainer can reach 800 meters without any interference and without any obstacle. However, in our use, terrain, climate, vegetation, airport station, magnetic field, obstacles, other radio equipment, the strength of its own battery and other factors may affect the effective distance of the remote control.</p> <p>Q:I want to test the static function of the receiver by hand, but it doesn't respond. Is my method wrong?</p> <p>A>Please touch two static poles at the same time. Touching only one static pole does not induce static electricity.</p> <p>Q:How long can the vibration or shock be held down?</p> <p>A:If you keep pressing the vibration or shock function, it will work for 10 seconds. After this, the receiver will stop working and you will have to release the button and press it again to work.</p> <p>Q:Is the receiver of this trainer waterproof?</p> <p>A:The dog drink water or rain water, swimming and diving can be used normally, pay attention to the charge of the rubber cover to cover tightly.</p> <p>Q:What should I do if my dog has red spots on his neck?</p> <p>A>Please stop using the dog trainer for a few days and consult your veterinarian if symptoms persist for more than 48 hours. If your dog's skin returns to normal, you should also check it frequently while using the trainer.</p> <p>Q:Are there any other better training methods?</p> <p>A:You can prepare some dog snacks as training rewards, so that the training will be more effective. You can tell your dog what to do or what not to do after you stop the bad habit. After many times of training, your dog will understand what you like and don't like.</p> <p>Q:If the dog trainer does not work, or if the dog does not respond to functional commands after being put on the dog's neck, how should the dog trouble shooter?</p> <p>A:1. Please check whether the remote transmitter and receiver are powered. 2. Please check whether the vibration or electric shock function has adjusted the gear. 3. Please check whether the receiver is on. 4. Please check whether you accidentally pressed the CH button of the remote transmitter and changed the signal channel. 5. You can try to reconnect the remote transmitter and receiver. 6. Take off the receiver and test whether the three functions are normal. 7. Please ensure that the receiver is properly positioned and that the collar is not too loose. 8. Trim the dog's hair too long or use a longer contact point.</p> <div>-9-</div>		<div>F.A.Q</div> <p>Q:Can I tie the leash to the receiver collar?</p> <p>A:This can lead to rubber hats resting on the dog's neck. A separate collar and leash reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none">- Reorient or relocate the receiving antenna.- Increase the separation between the product and receiver.- Connect the product into an outlet on a circuit different from that to which the receiver is connected.- Consult the dealer or an experienced radio/TV technician for help. <p>FCC Radiation Exposure Statement This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 5cm between the radiator & your body.</p> <div>Certification</div> <div>Manufacture date: 频率:433.92MHz</div> <div>Inspector: 发射机:3.7V 300ma LIP</div> <div>Execution standard: 接收器:3.7V 300ma LIP</div> <div>Made in china</div> <div>-11-</div>
---	--	--	--	---	--	---	--	--	--	---	--	---	--	--

FCC Instructions:

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 5cm between the radiator & your body.