




Mewwell Cat Litter Box
Instruction Manual

Product List

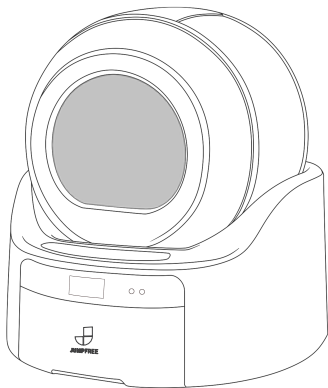

Cat litter box*1



Detachable filter*1



Anti-stick pad*1




Power adapter*1



Instruction Manual*1

Note: Please plug in the power adapter before ture on

Product Features

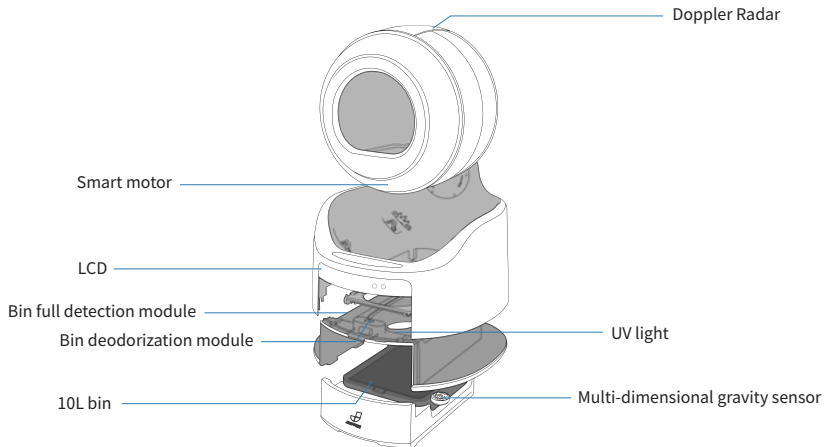

Start-up instructions

1. Please be sure to level litter after each litter addition so that the equipment can record the litter weight change, otherwise it will affect the work of the equipment.
2. This product is suitable for a variety of cat litters such as mineral cat litter, bentonite cat litter, tofu cat litter and mixed cat litter.
3. Machine only supports existing 2.4GHz router (only Pinyin or English name is supported, Chinese name is not supported).
4. Please use original accessories.
5. The battery should not be disassembled, hit, crushed or put into the fire.


Exception handling

1. Prompt "manual stop": press any key/APP to resume work.
2. Prompt "radar sensing": the work will be suspended for 3s when there is an object close to it, and the equipment will resume operation after the object stops running or leaves the radar range.

Product Introductions

Button Description

- ◆ "Confirm": short press to confirm; when "bin abnormal warning", long press to resume work.
- ◆ "Select": short press to select functions.
(short press $<2.5s$; long press $\geq 2.5s$)

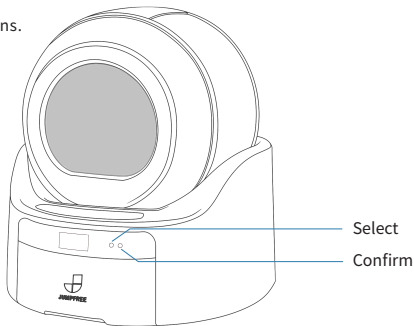


*Note: When leveling litter, cleaning or changing litter, press any button to stop and long press the "Confirm" to stop the current running.
When manually stop, press any button to resume running.

Product Features

Display Description

1. During standby and normal operation, the main interface is displayed; when an abnormal condition occurs, the warning interface is displayed, prompting a warning message.
2. Short press the "Select" button and the display will show the function page, such as: clean, change litter, packing, level litter, automatic, manual.

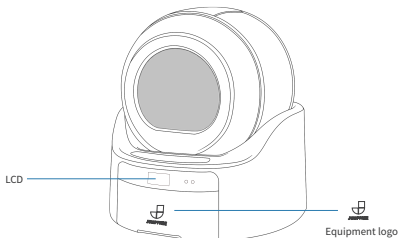

Product Parameters

Product Name	Mewwell Cat Litter Box	Main material	PP+ABS
Product Size	595*597*650 mm	Applicable cat weight	1KG-8KG
Litter capacity	5L	Rated voltage	12V
Bin Capacity	10L	Rated current	1A

Function Descriptions

- ◆ Clean: manual button cleaning / automatic sense cleaning / scheduled cleaning.
- ◆ Data monitoring: automatic recording of toilet data.
- ◆ Chang litter: Press the button to change the litter (clean all the litter into the bin).
- ◆ Adding litter: After adding litter, it is necessary to execute the "Level litter" function.
- ◆ Level litter: After adding litter, changing litter, wash the ball and putting it back to the roller, the litter leveling operation is required after the machine is turned on.
- ◆ Reminder: The number of times the cat goes to the toilet.
- ◆ Reset: reset the number of times the cat goes to the toilet.
- ◆ Deodorization and sterilization module (optional module).

Adding devices

1. Download

Scan the QR code below to download Smart Life APP.



2. Register

Enter your cell phone number - get the verification code - set the password - click register.

3. Login

Cell phone number login-enter your cell phone number-enter your password-click Login.

Third party account login-Allow third party login-Click OK.

Networking settings

4. Fast networking

Short press the "Select" button on the panel to select the wiring function → Short press the "Confirm" button on the panel → Bluetooth wiring is in progress → Click to add device at APP → Select Bluetooth network mode → Input WIFI account and password → Click OK → Network pairing success / Network pairing failure → Press any button to exit.

*Note: There is a network status icon in the upper right corner of the main interface of the display, you can use Smart Life APP to scan the QR code to check the network allocation guide.



Main screen of the display

Cat weight, poop times.

Equipment operation status: Standby | Stop | Level litter | Clean | Change litter | Caking.

Operation mode: Manual | Automatic.

*Note: When leveling litter, cleaning and changing litter, press any button to stop; when manually stopping, press any button to resume work.

Weight Calibration

Short press the "Select" button to enter the calibration interface → Short press the "Confirm" button → Enter S1 Empty roller weight test → Short press the "Confirm" button to enter S2 5KG weight test → Put 5kg weight items → Press the "Confirm" button briefly → Enter S3 → Press the "Confirm" button briefly → Calibration is completed.

*Note: When you receive this product, it has been calibrated, so there is no need to calibrate it again. If you find that the weight is wrong during use, use this function again and empty the ball compartment and the bin compartment before calibration.

Dismantling and Maintenance

Dismantling and Cleaning

For daily maintenance, wipe the surface of the roller with a damp rag and, if necessary, disassemble and clean it as follows:

Warning! Always do this in a dry, power-off condition



Step 1: Press the disassembly ring



Step 2: Rotate the disassembly ring



Step 3: Remove the ball compartment

Installation

After disassembling and cleaning as required, dry all accessories and put back the anti-adhesive pad directly under the roller, while the magnetic door needs to be sucked in the entry door.

Caution

Always use the device in a dry environment, not near any water.

Make sure the power adapter and the device are not damaged before use; do not operate if the cord is damaged or the device is disassembled.

Only original accessories (power adapter, garbage bags, batteries, etc.) are available for this device.

The power must be disconnected before performing cleaning and maintenance.

After Sales Service

Warranty Regulations

During the guarantee period, the product performance failure caused by non-human damage ring can enjoy the following three services:

- ◆ Within 7 days from the date of purchase, non-human caused quality problems, to ensure the integrity of the product and accessories, the appearance intact, does not affect the secondary sale. Consumers can enjoy the return or replacement of new machines;
- ◆ Within 15 days from the date of purchase, if the quality problem is not caused by human factors, the consumer can enjoy the exchange or repair service after the company's inspection and identification;
- ◆ Within 12 months from the date of purchase, the consumer can enjoy free repair service for non-human caused quality problems, after the company's testing and identification.

Non-warranty regulations

Belonging to one of the following (not limited to) is not in the scope of the "three services":

- ◆ All human factors damage and failure and damage caused by not using in accordance with the instructions;
- ◆ Damage caused by disassembly, modification, maintenance and storage not in accordance with the instructions in the user manual;
- ◆ Damage caused by other force majeure (such as flood, fire, lightning, pet chewing, etc.);
- ◆ Normal wear and tear, aging, soaking, etc. in the process of product use;
- ◆ Can not show a valid proof of purchase, etc;
- ◆ The normal fading, wear and tear and consumption during the use of the product, which does not fall within the scope of the warranty failure.

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.