




OBW NVNT ac20 5180MHz Ant1

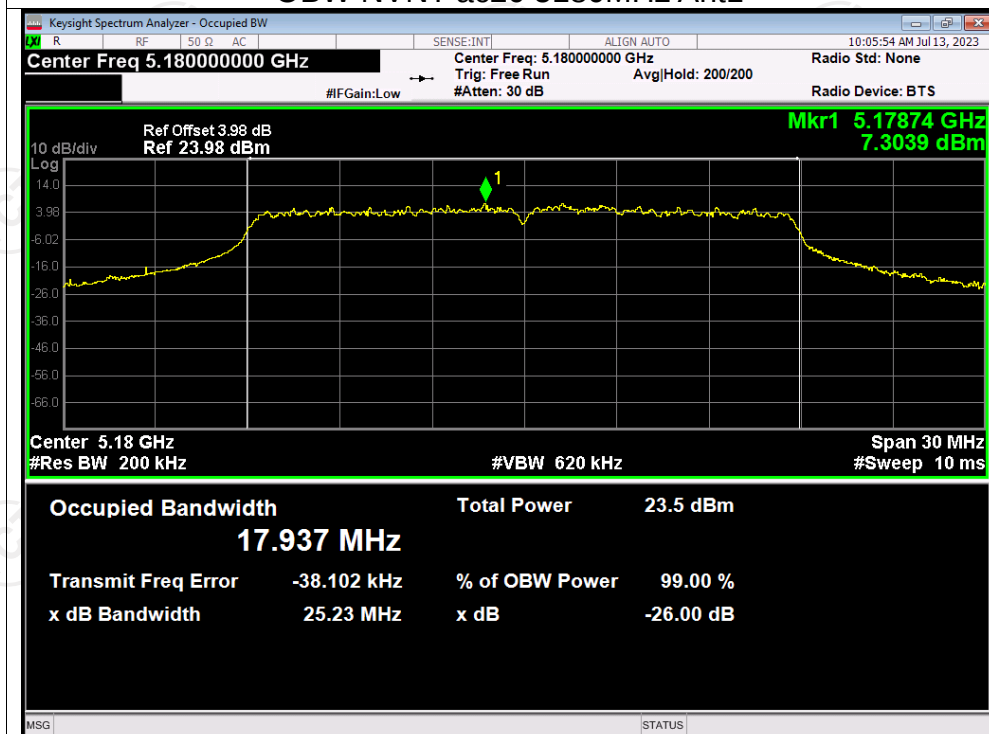


OBW NVNT ac20 5200MHz Ant1

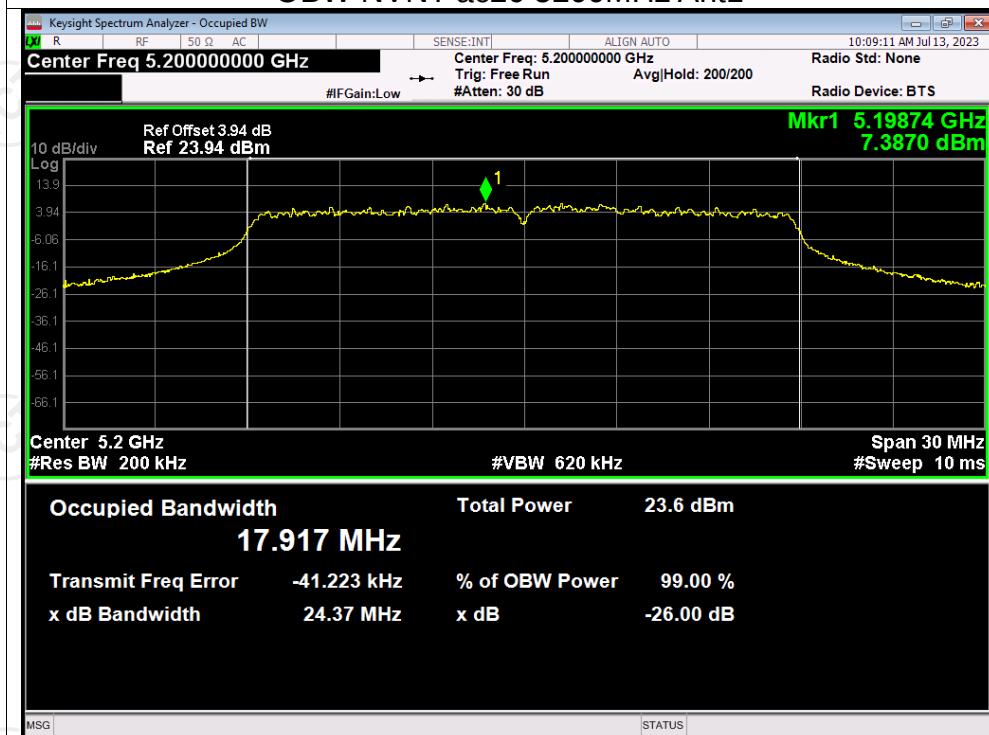


OBW NVNT ac20 5240MHz Ant1

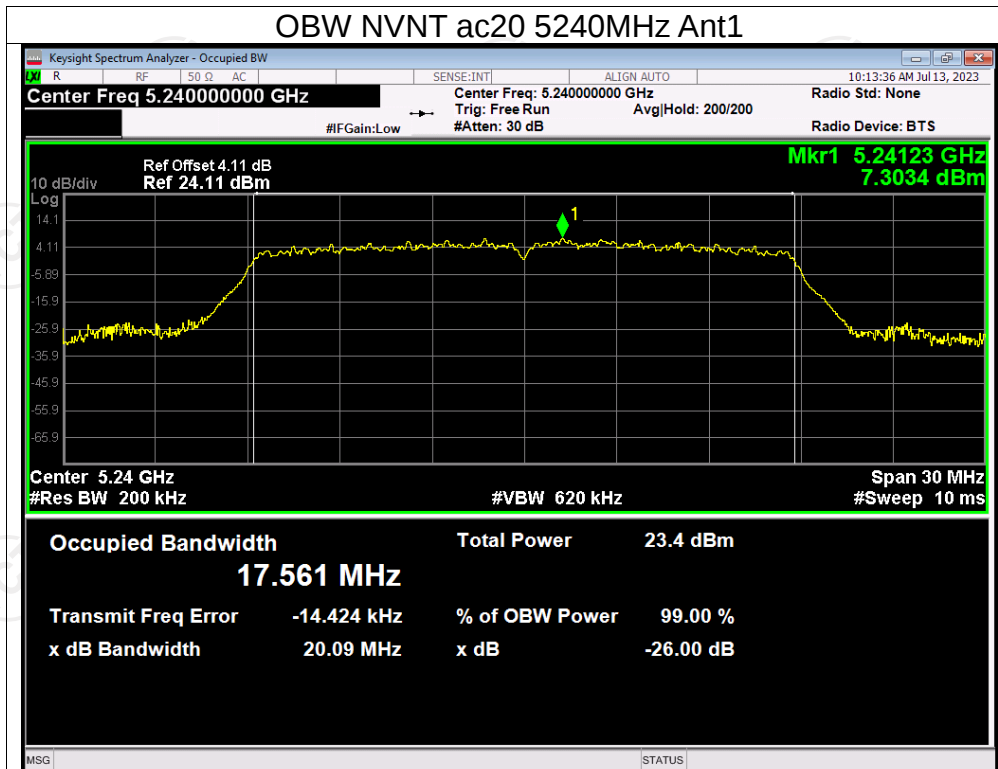


OBW NVNT ac40 5190MHz Ant1

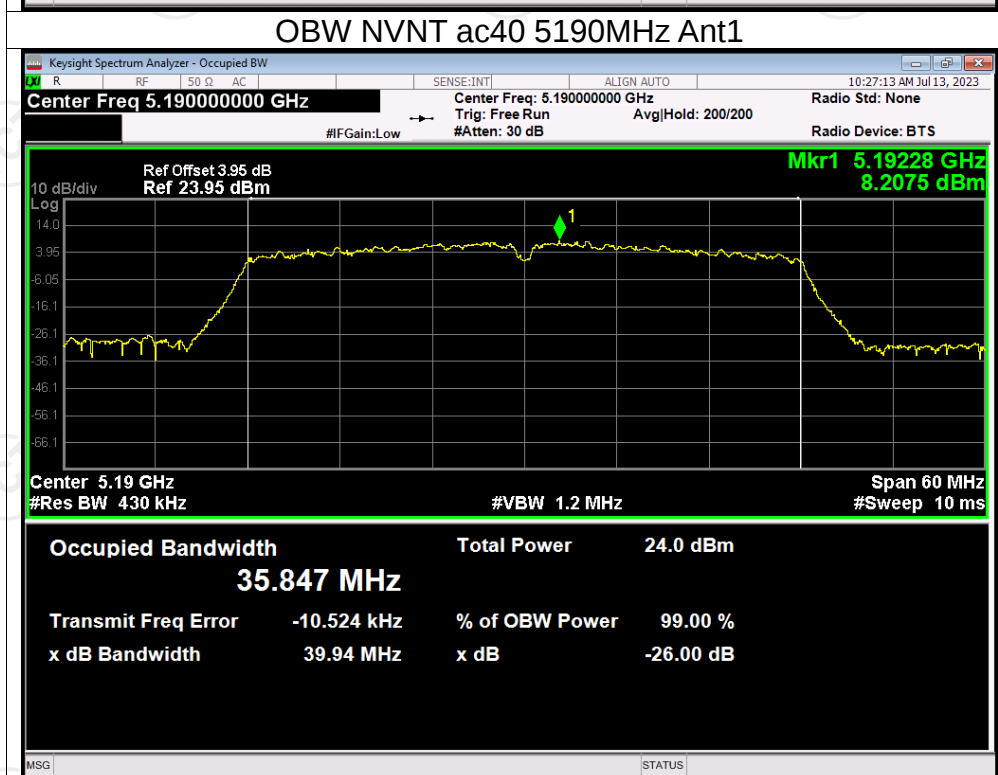


OBW NVNT ac40 5230MHz Ant1

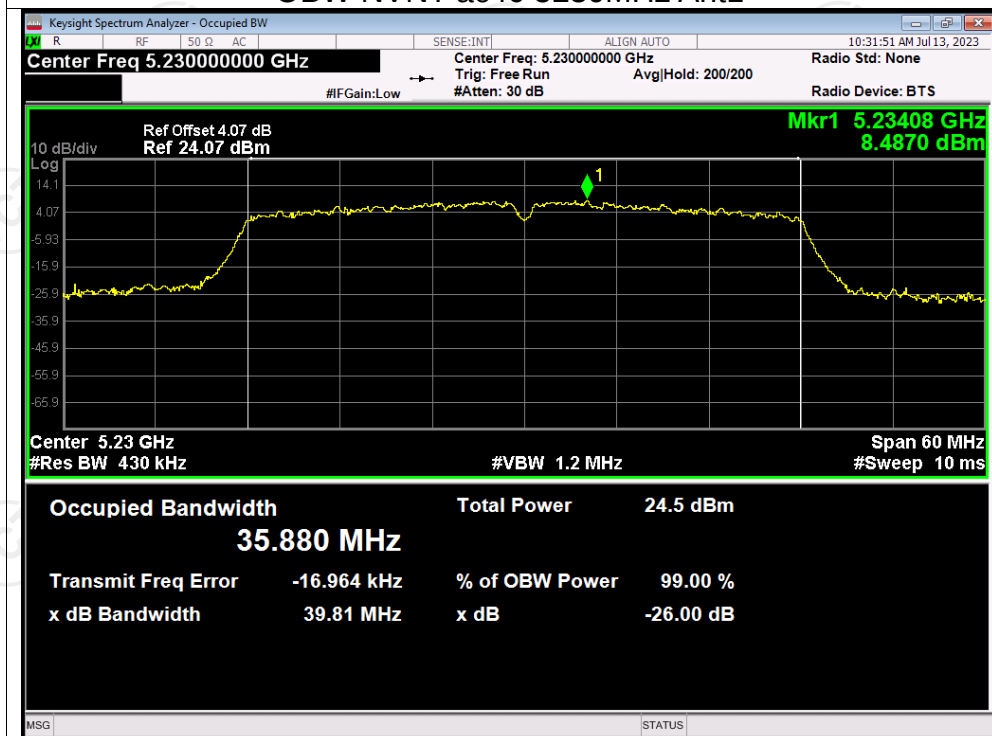


OBW NVNT ac80 5210MHz Ant1

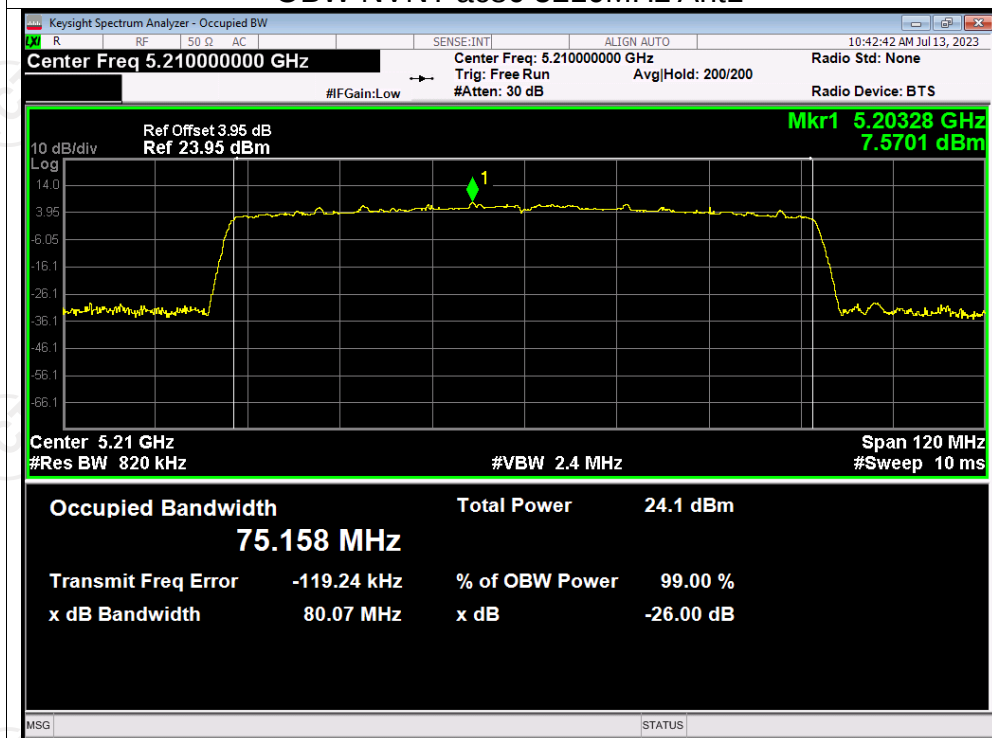


OBW NVNT ax20 5180MHz Ant1

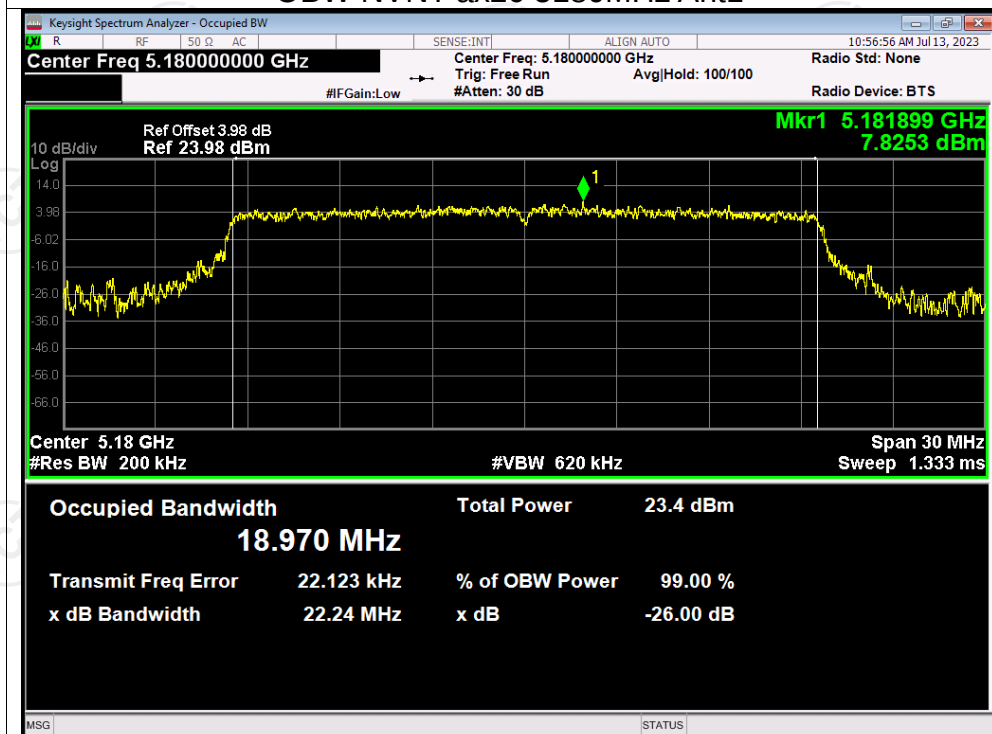


OBW NVNT ax20 5200MHz Ant1

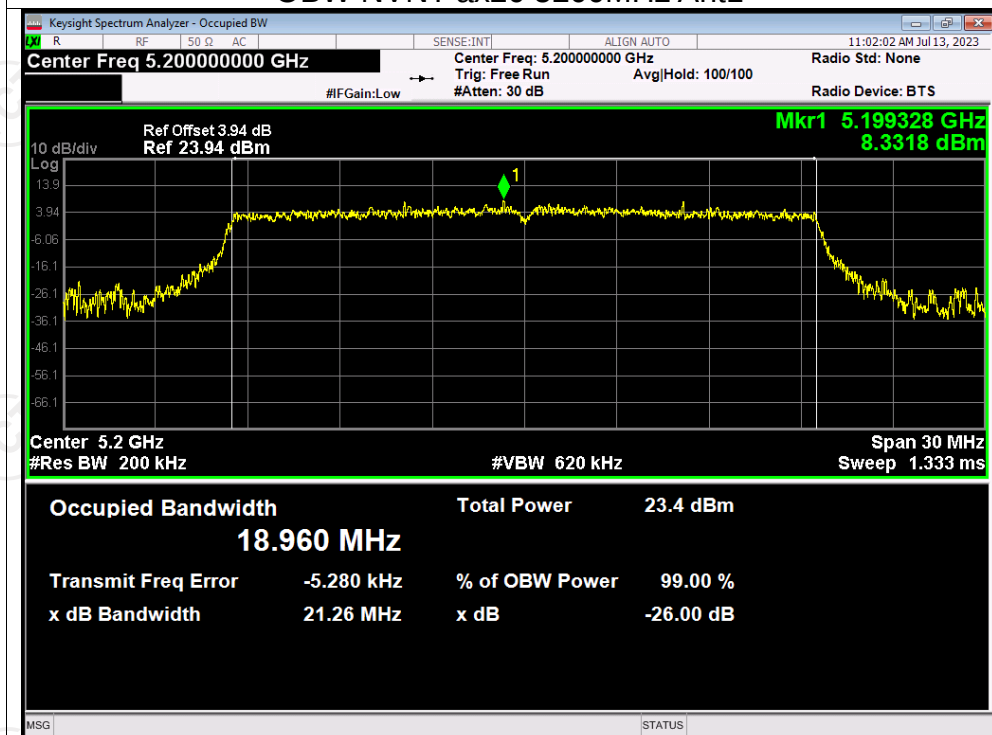


OBW NVNT ax20 5240MHz Ant1

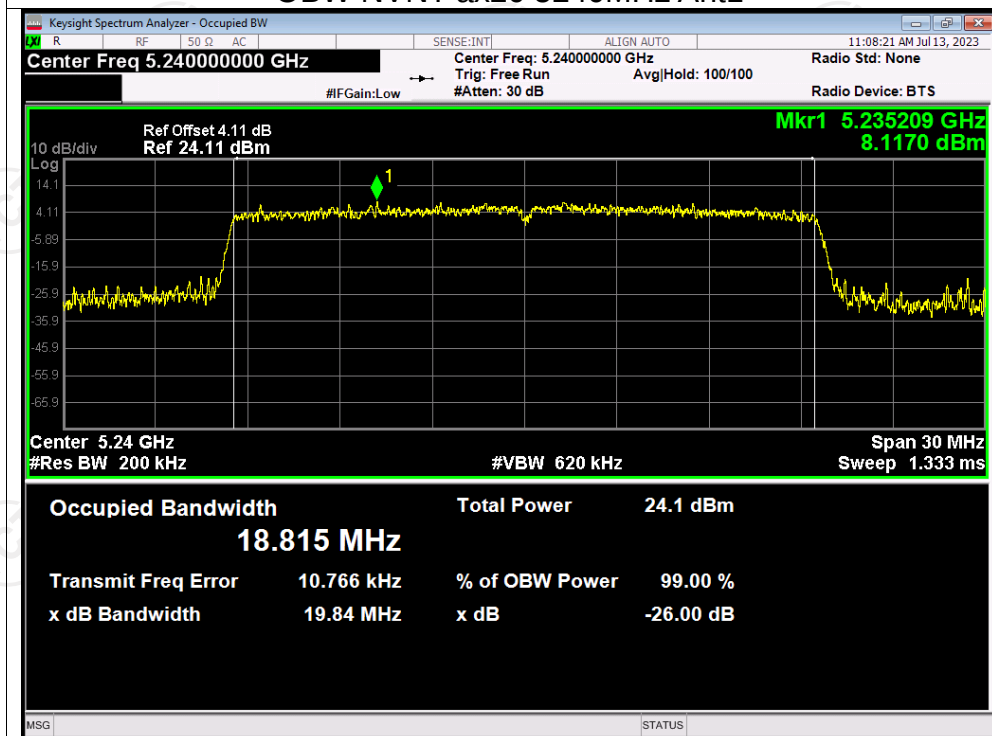


OBW NVNT ax40 5190MHz Ant1

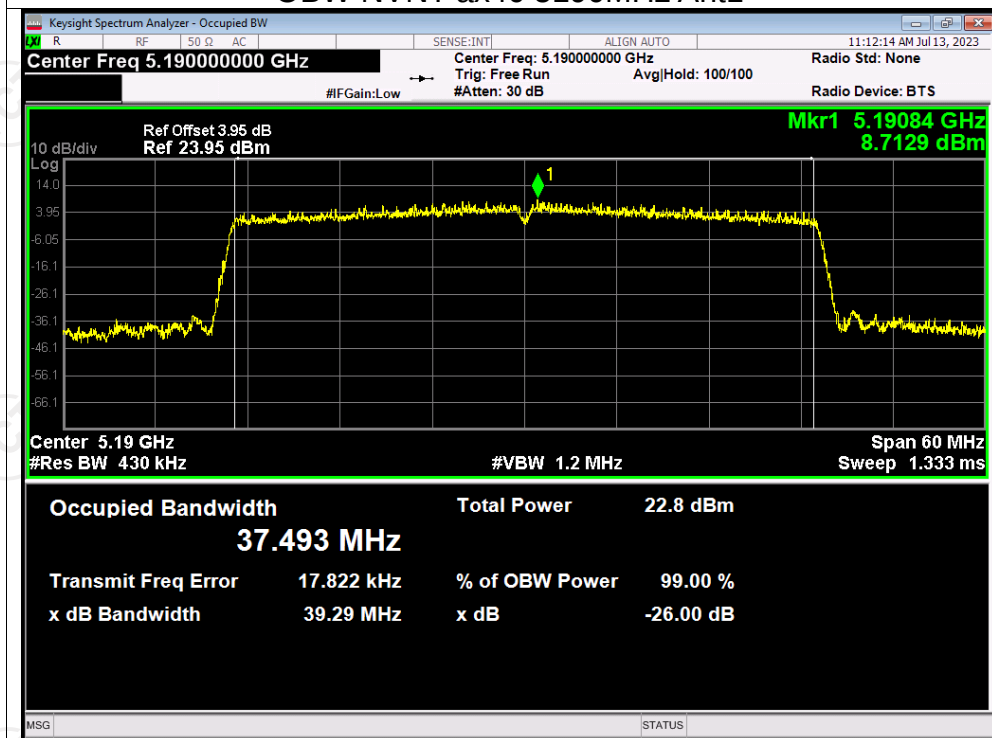

OBW NVNT ax40 5230MHz Ant1

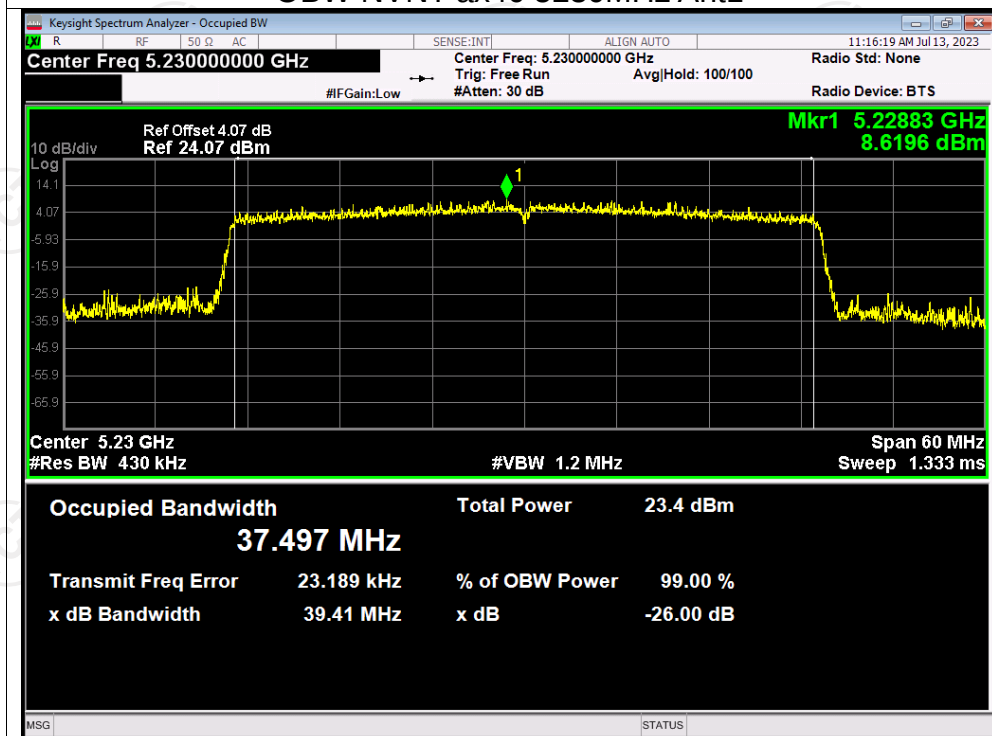


OBW NVNT ax80 5210MHz Ant1

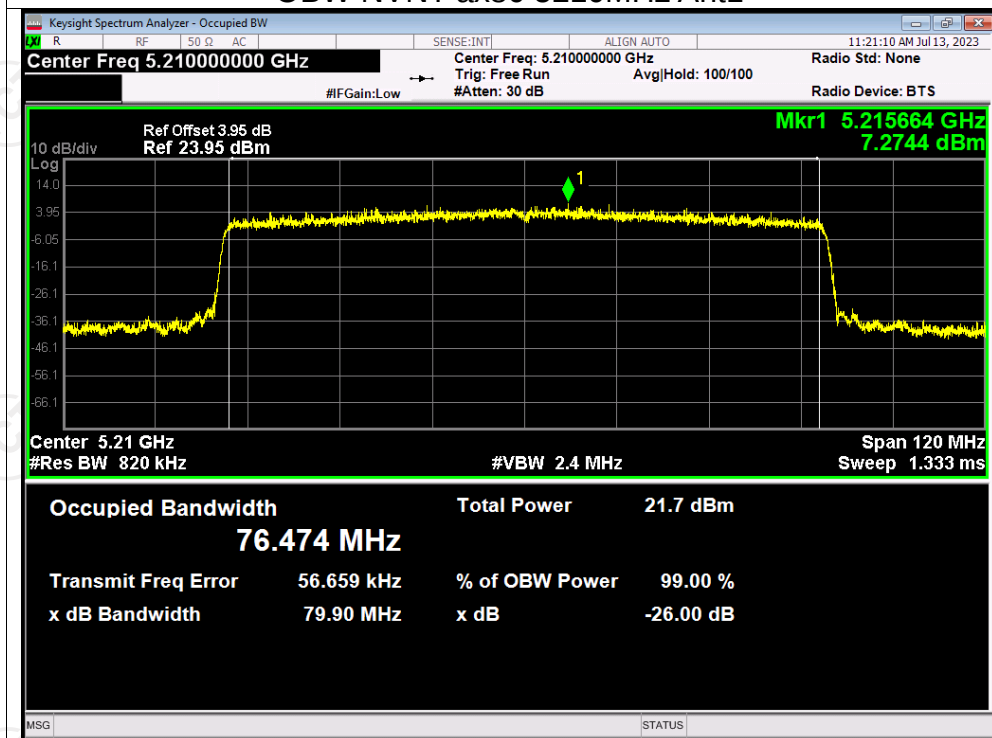




Test Graphs

OBW NVNT a 5260MHz Ant1

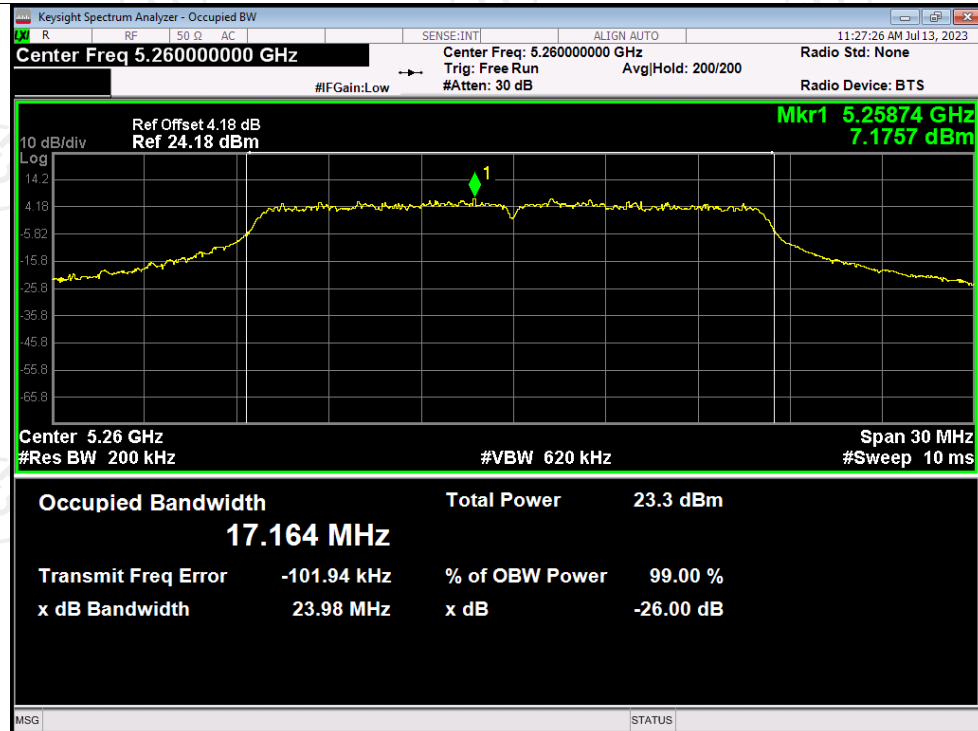


OBW NVNT a 5300MHz Ant1

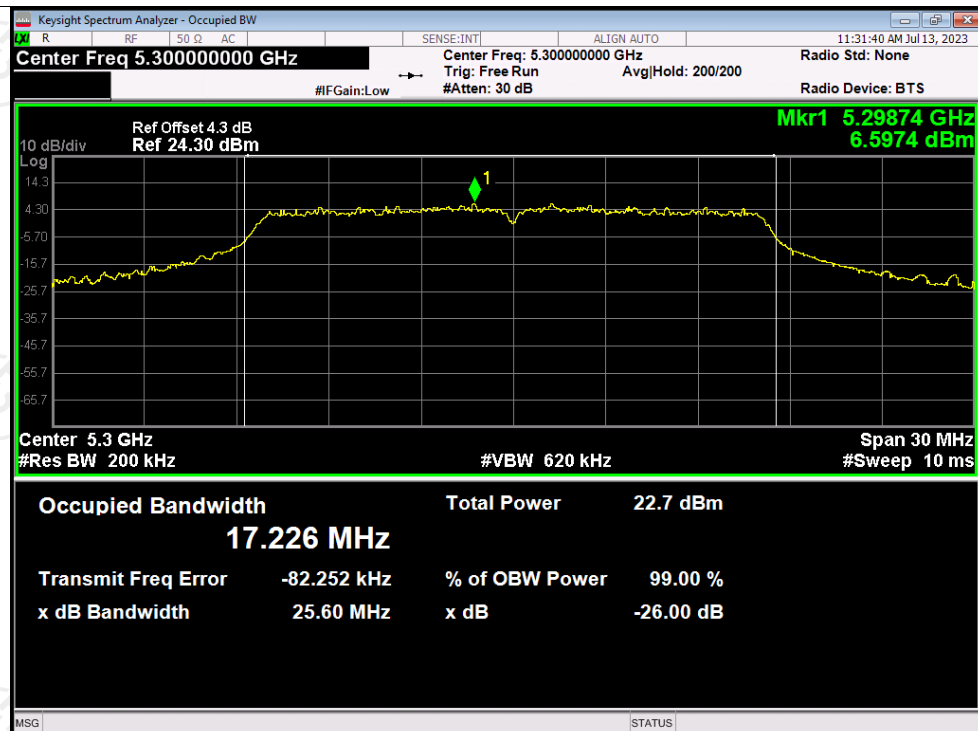


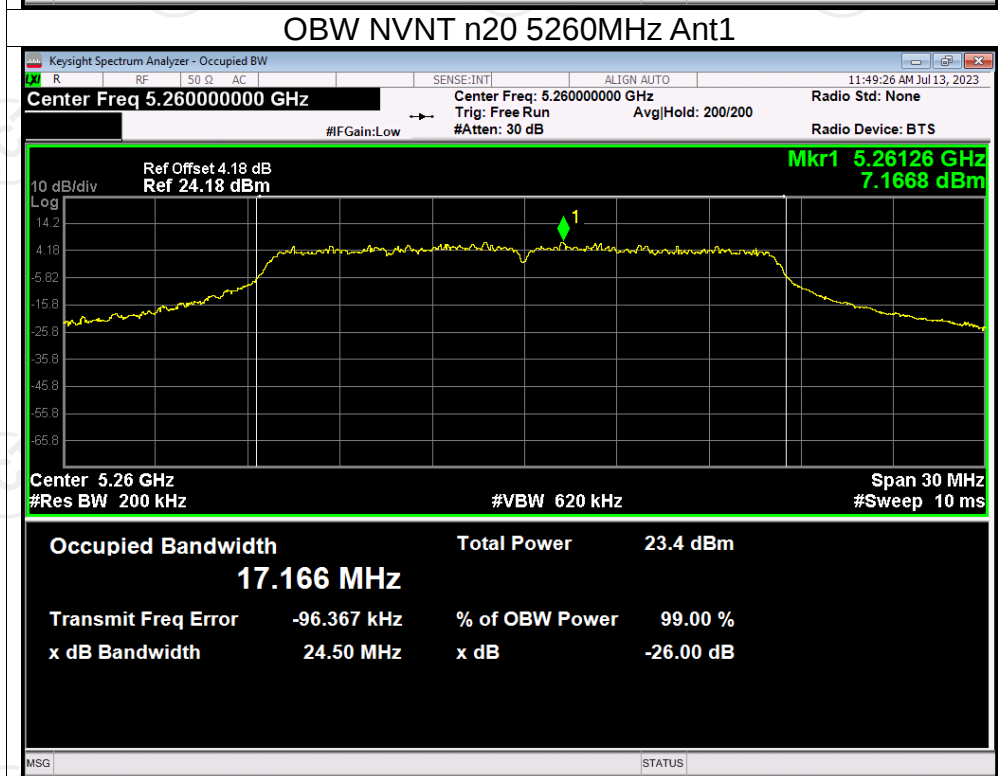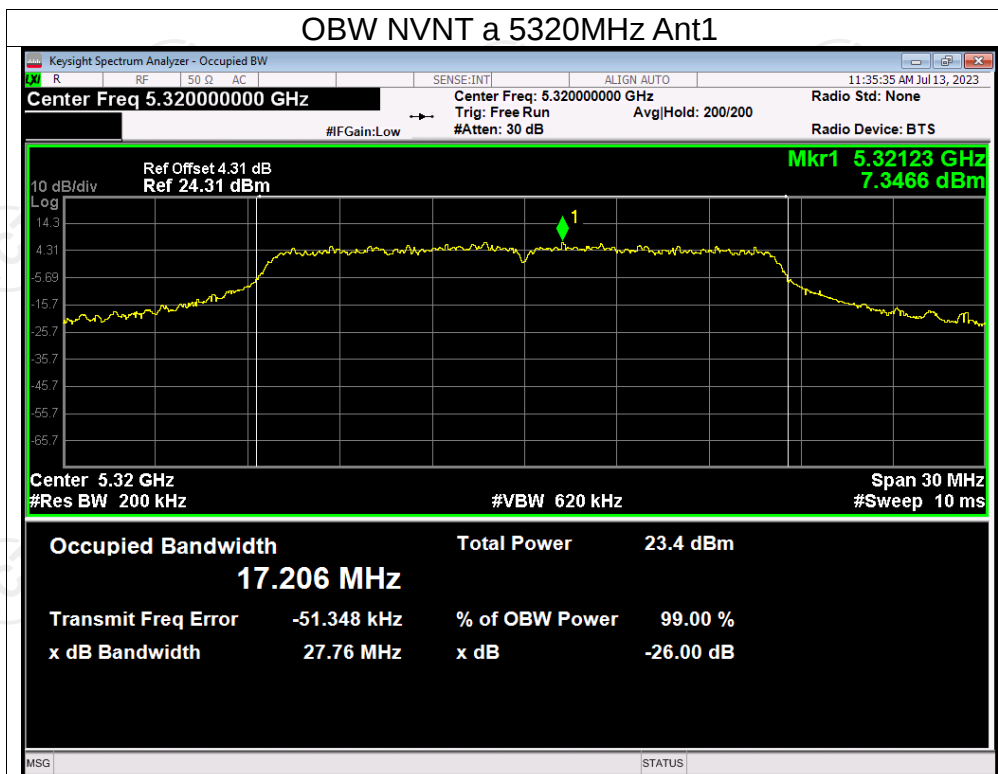


OBW NVNT n20 5300MHz Ant1

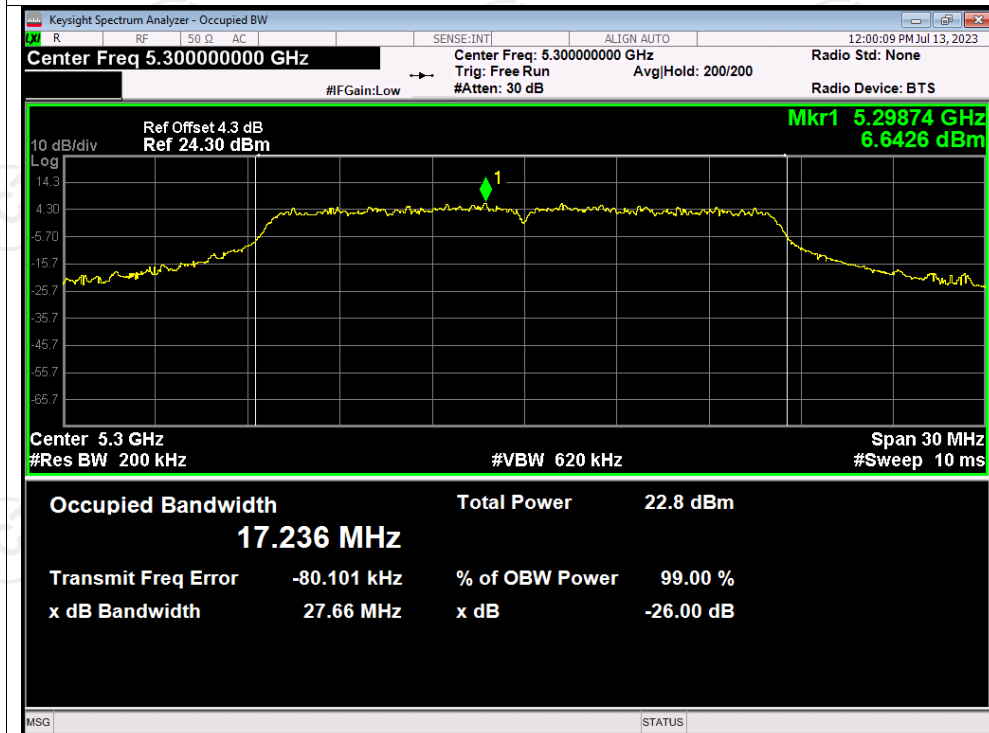


OBW NVNT n20 5320MHz Ant1

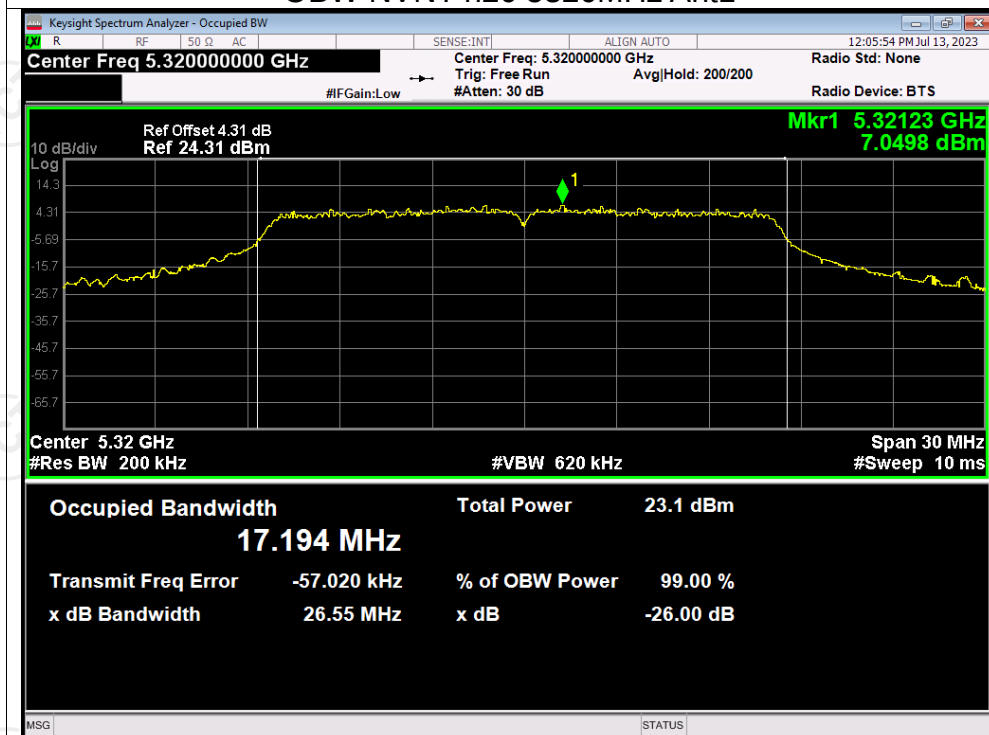


OBW NVNT n40 5270MHz Ant1

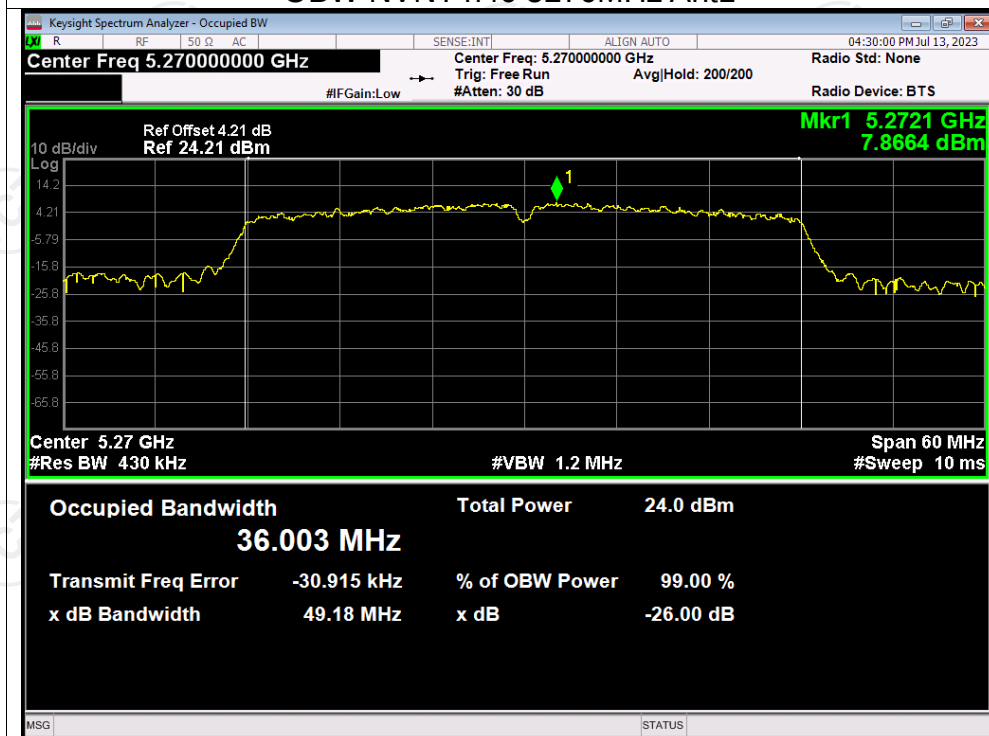


OBW NVNT n40 5310MHz Ant1

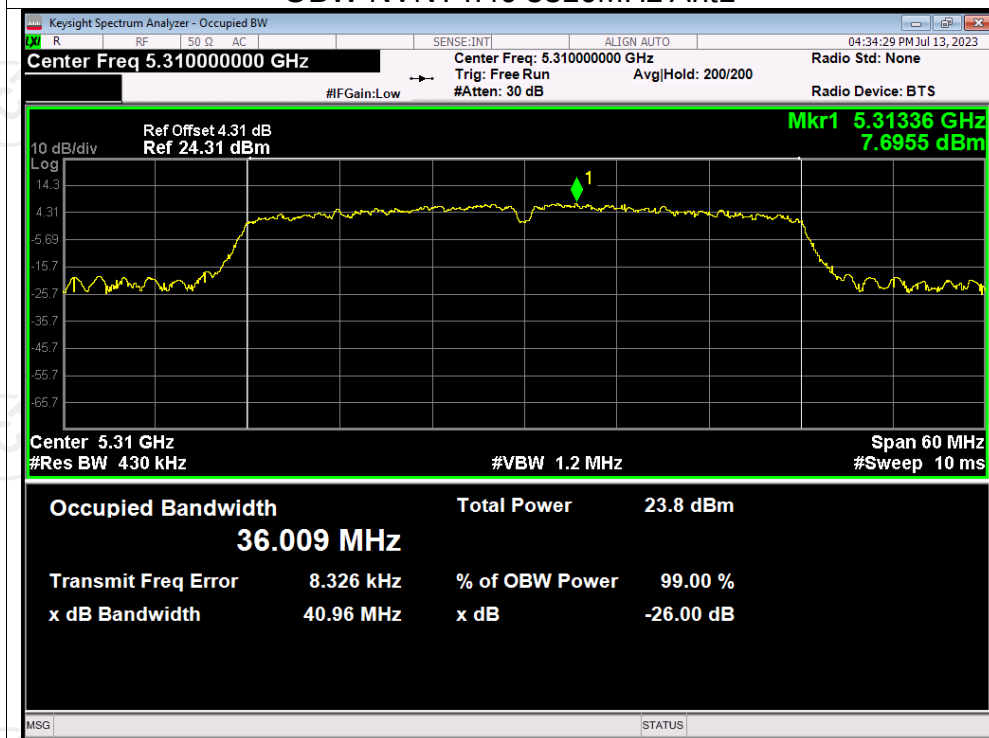


OBW NVNT ac20 5260MHz Ant1

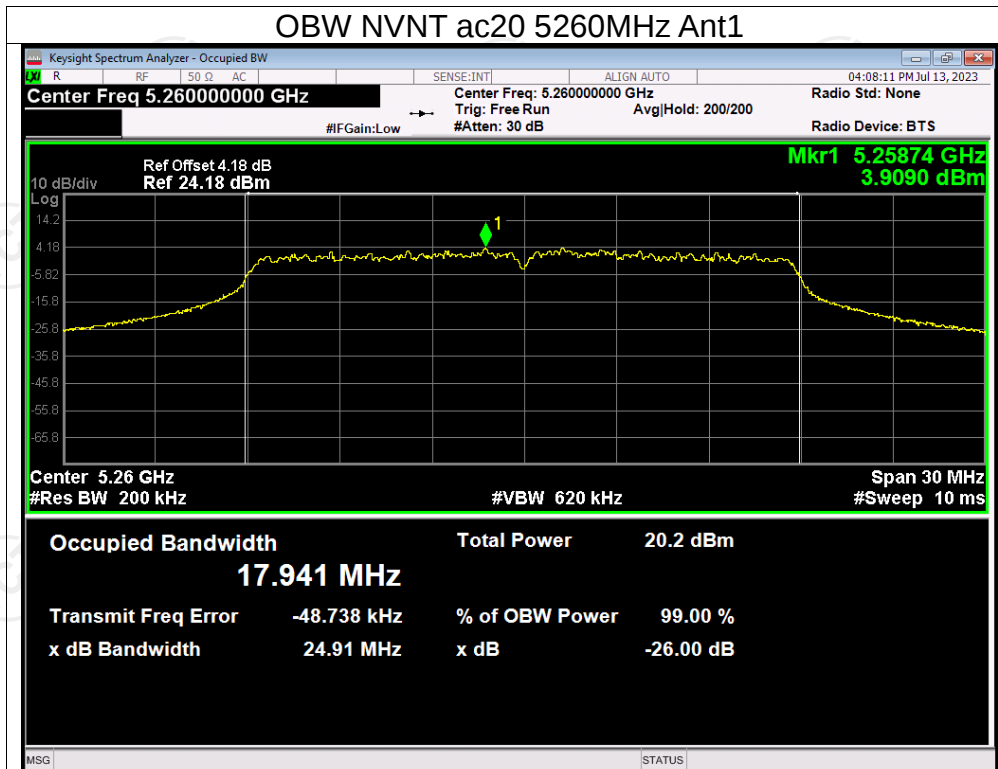


OBW NVNT ac20 5300MHz Ant1

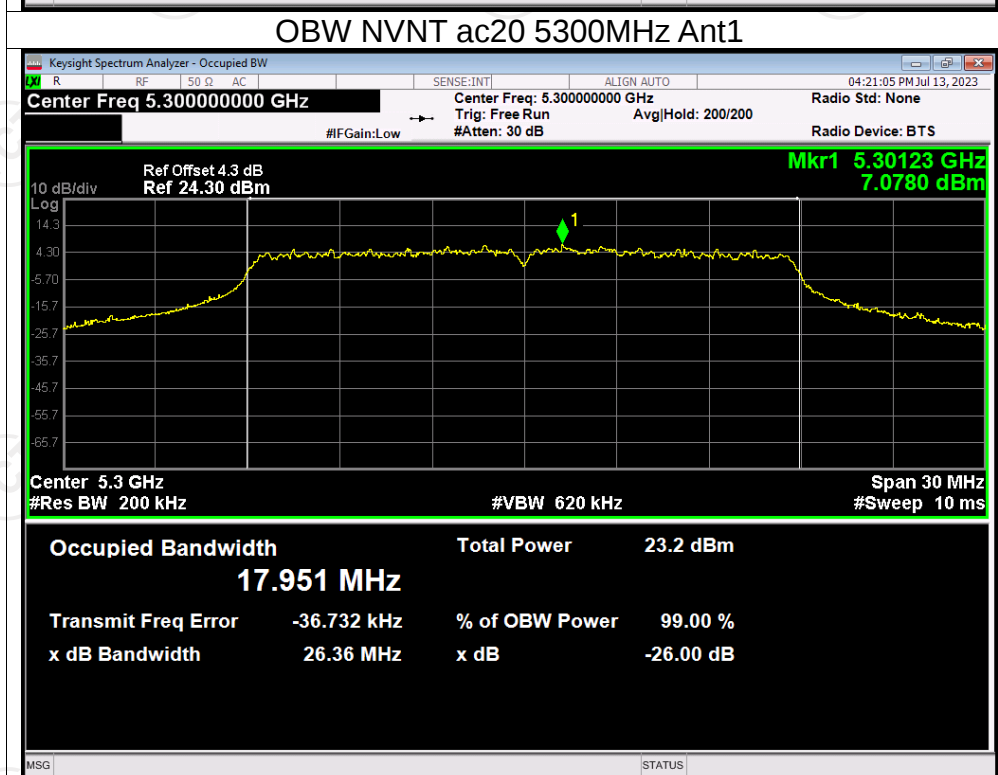


OBW NVNT ac20 5320MHz Ant1

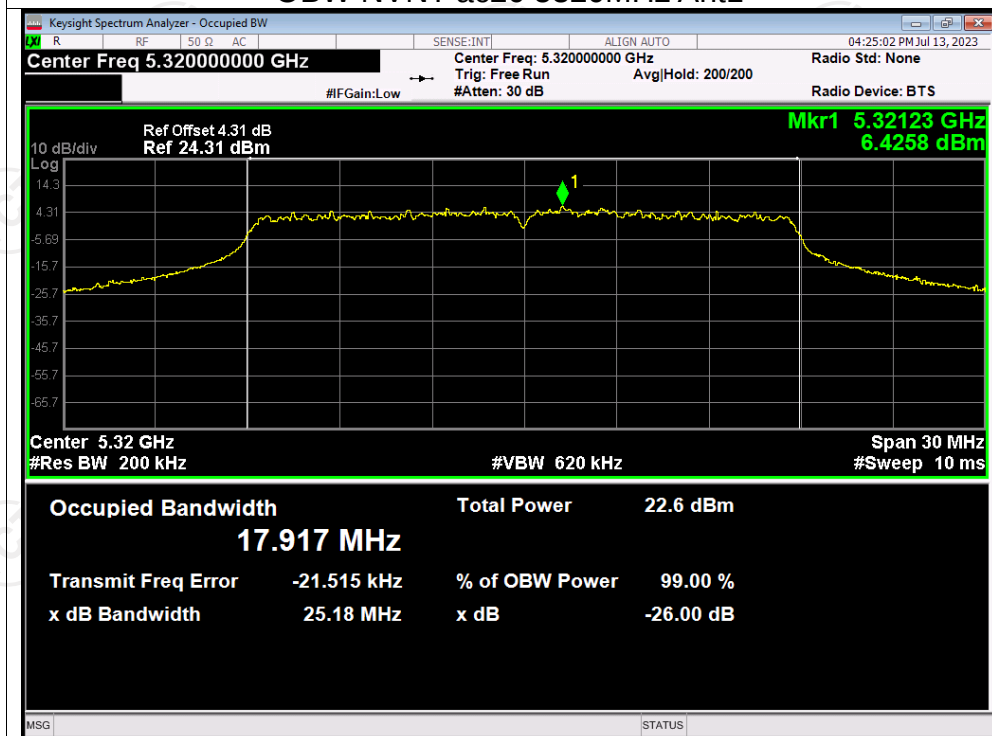


OBW NVNT ac40 5270MHz Ant1

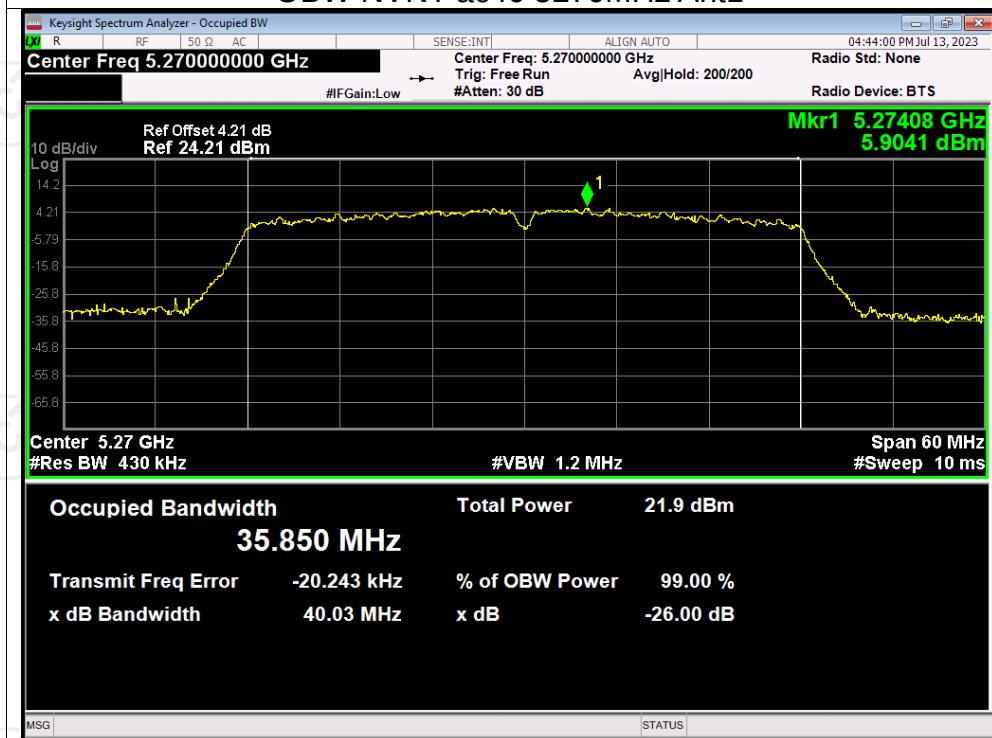


OBW NVNT ac40 5310MHz Ant1

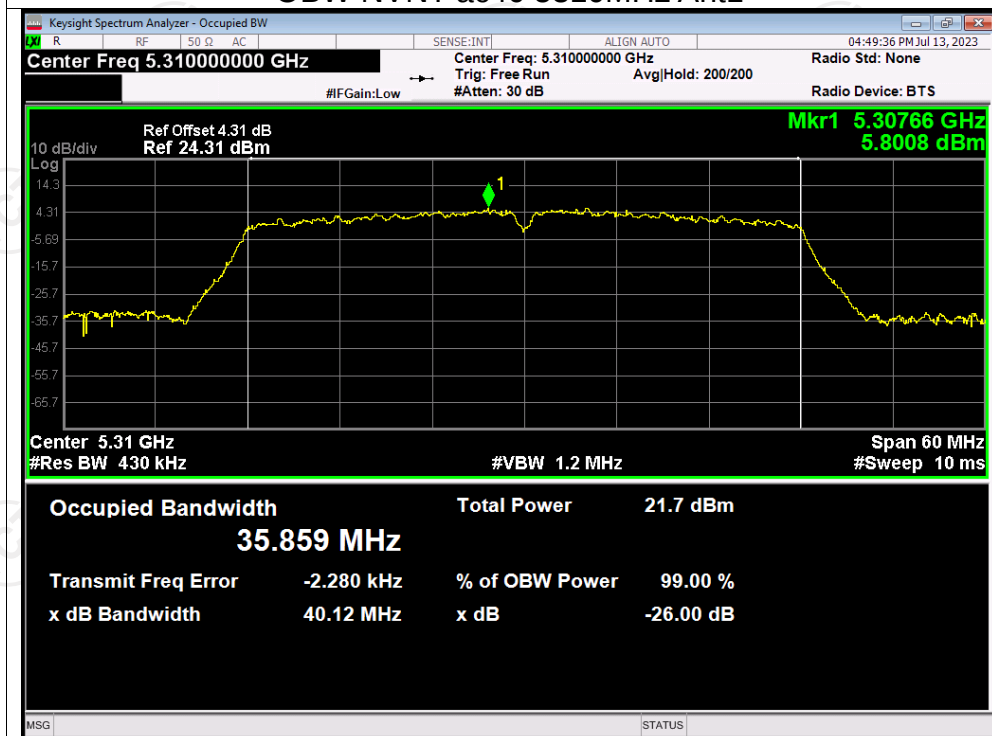


OBW NVNT ac80 5290MHz Ant1

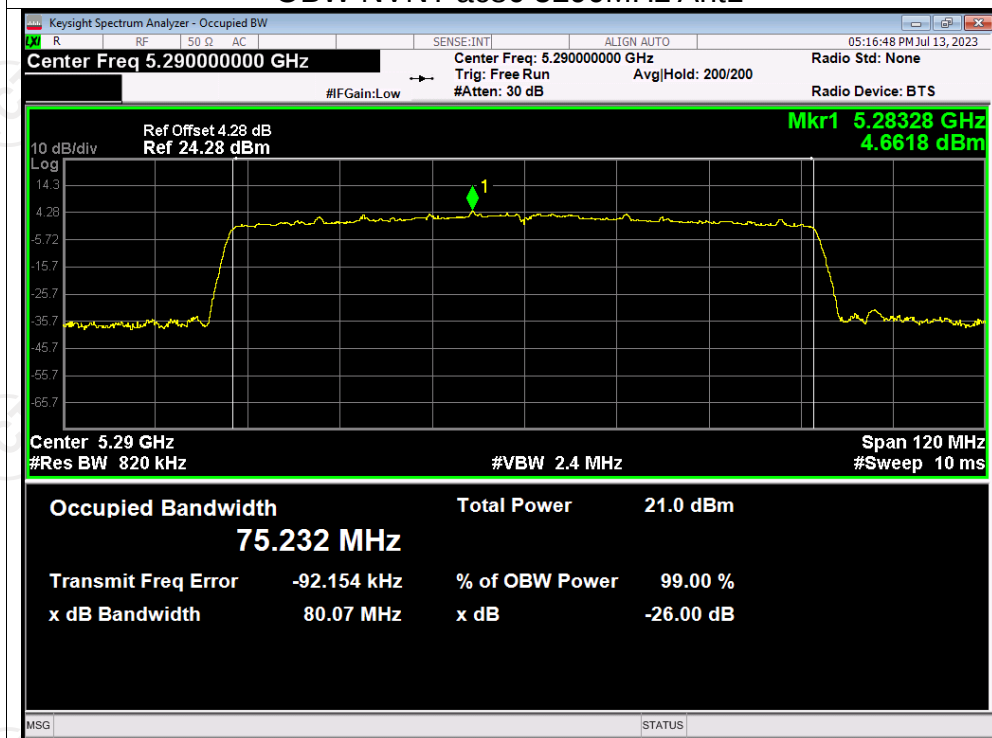


OBW NVNT ax20 5260MHz Ant1

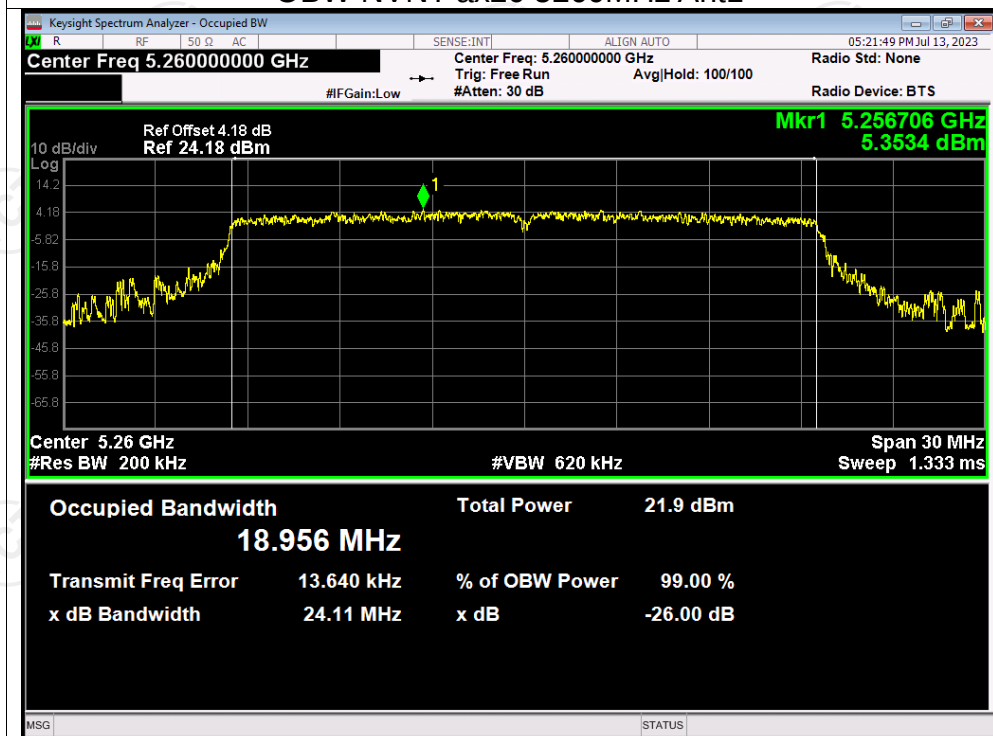


OBW NVNT ax20 5300MHz Ant1

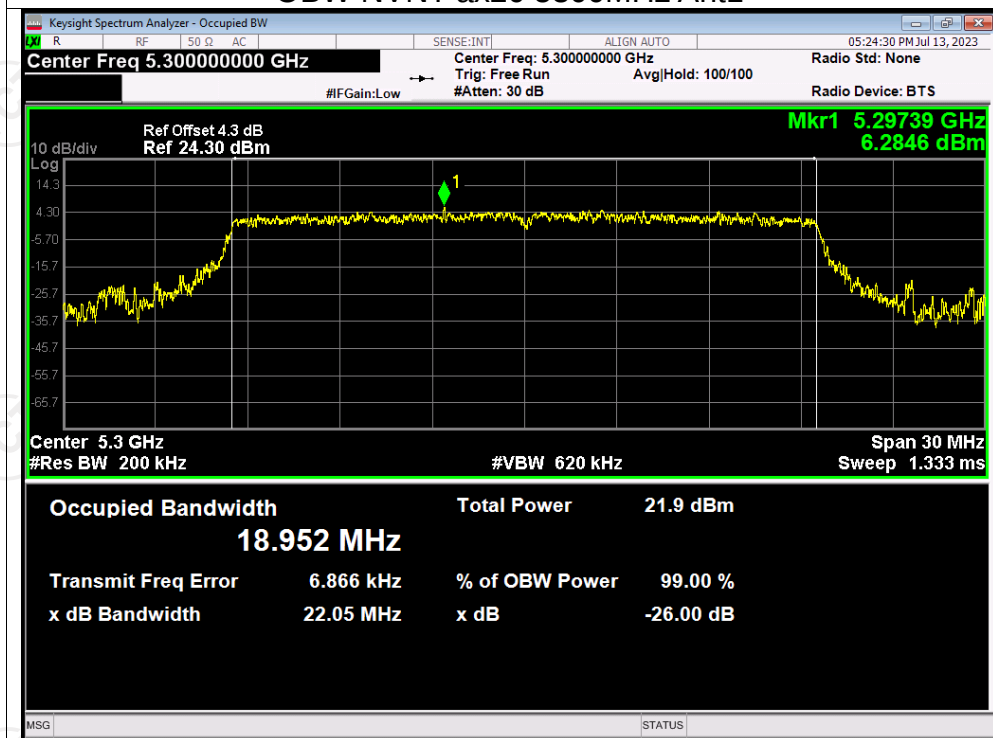


OBW NVNT ax20 5320MHz Ant1

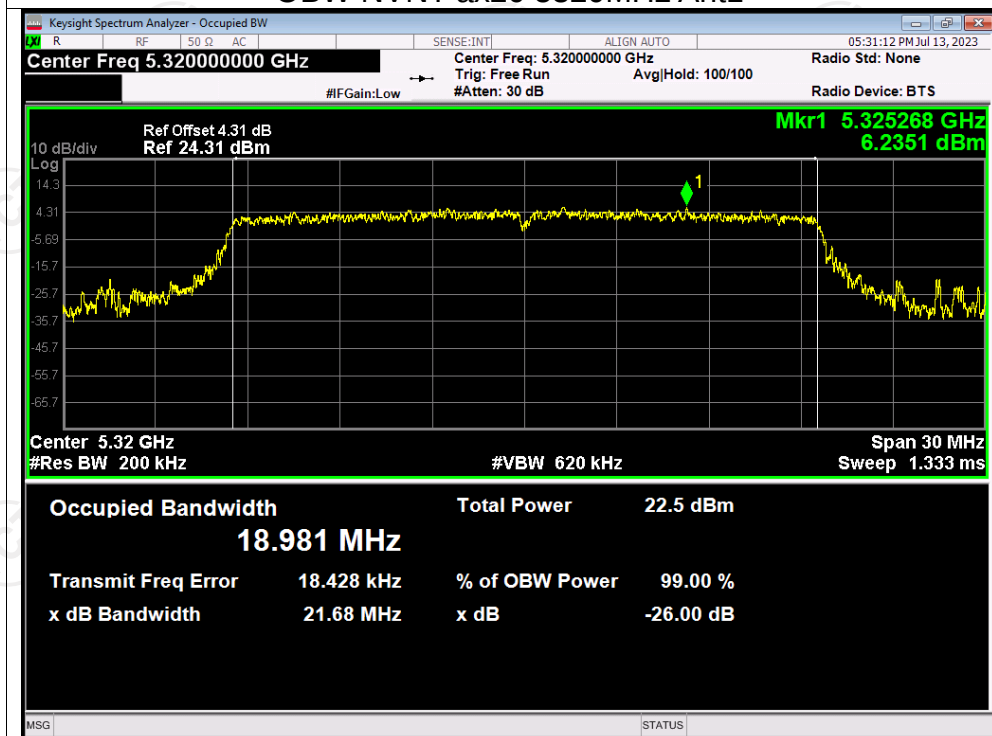


OBW NVNT ax40 5270MHz Ant1

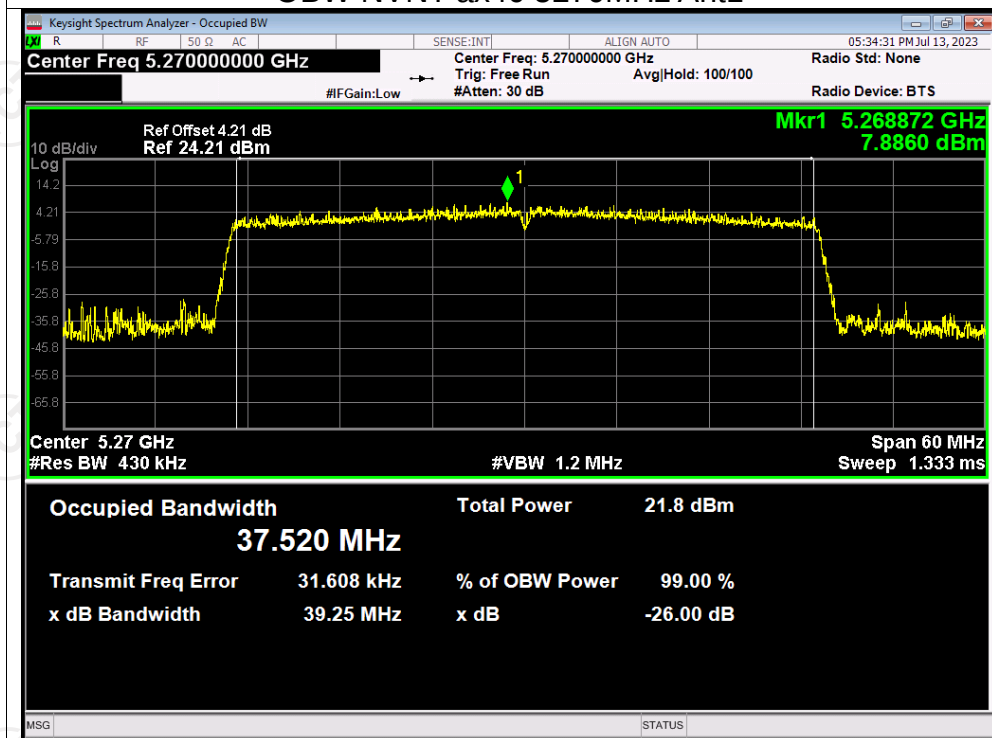

OBW NVNT ax40 5310MHz Ant1

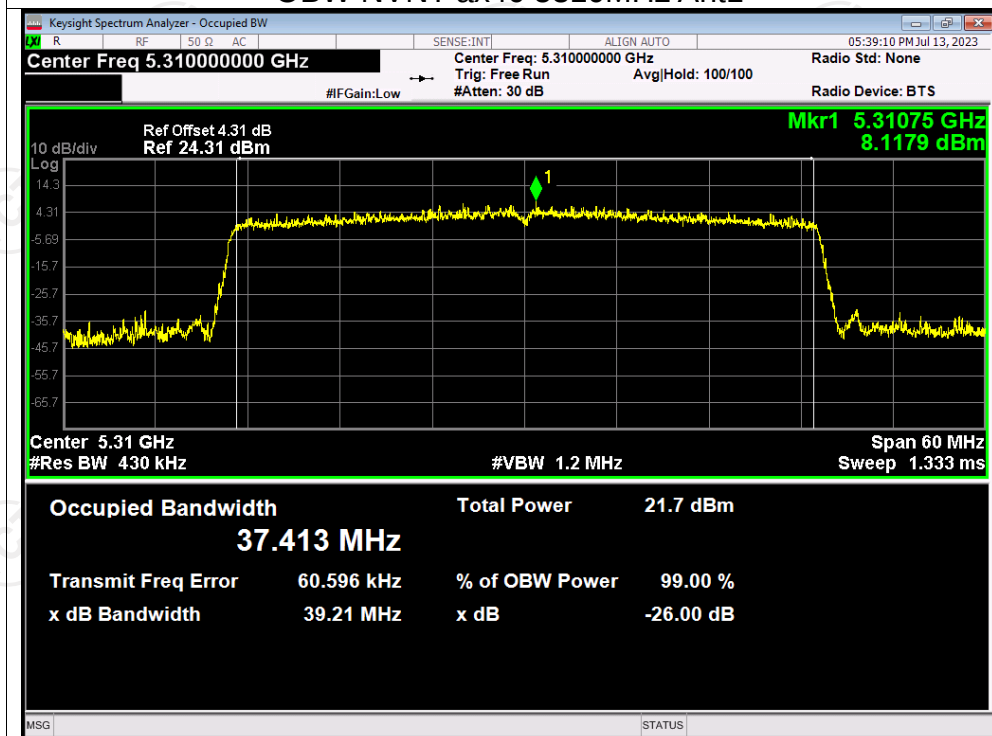


OBW NVNT ax80 5290MHz Ant1

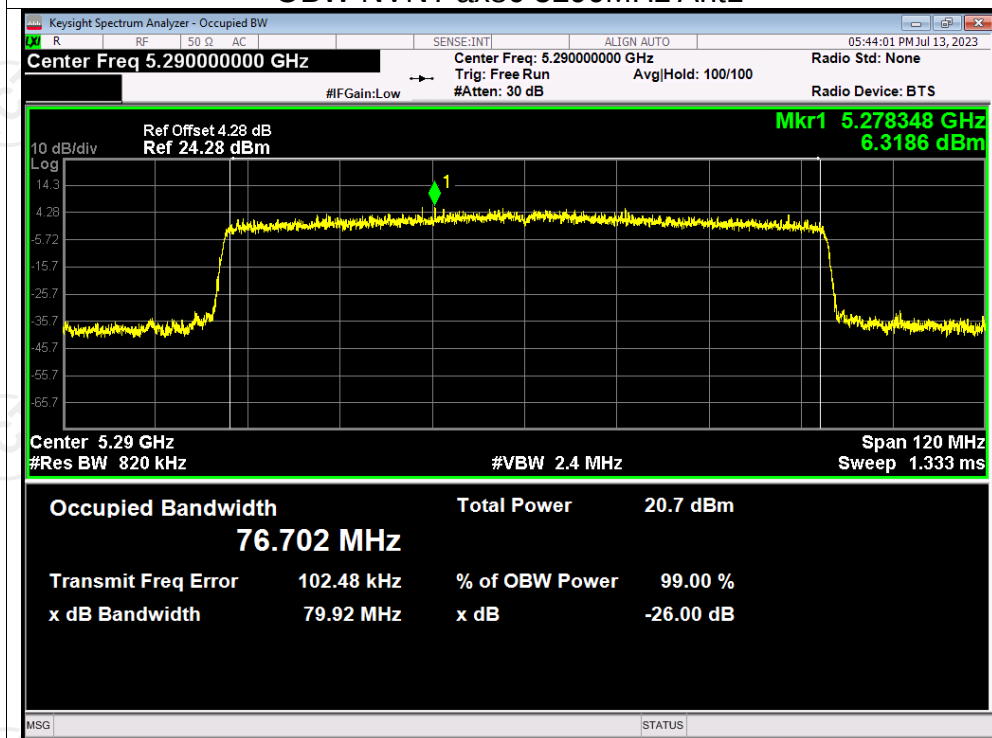


Test Graphs


OBW NVNT a 5500MHz Ant1

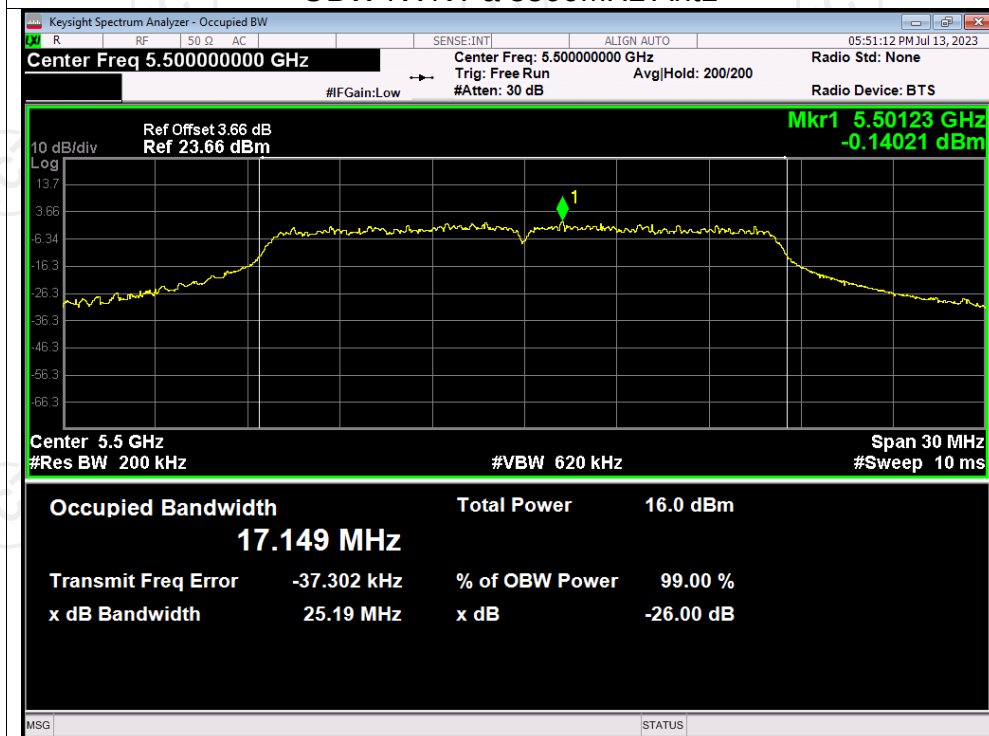


OBW NVNT a 5600MHz Ant1

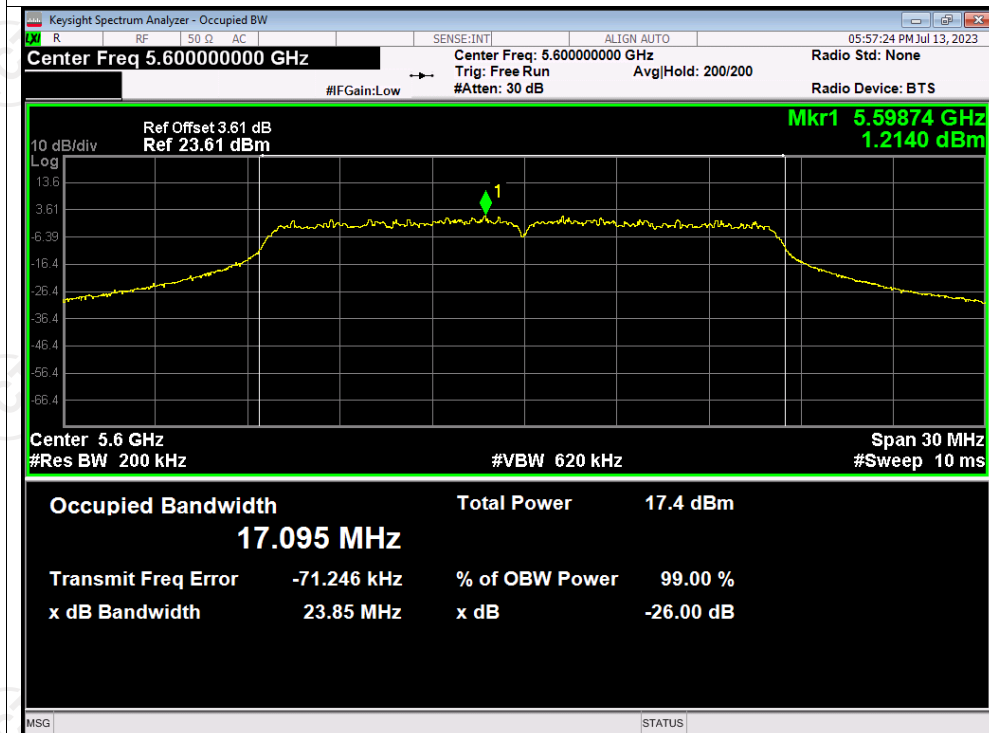


OBW NVNT a 5700MHz Ant1

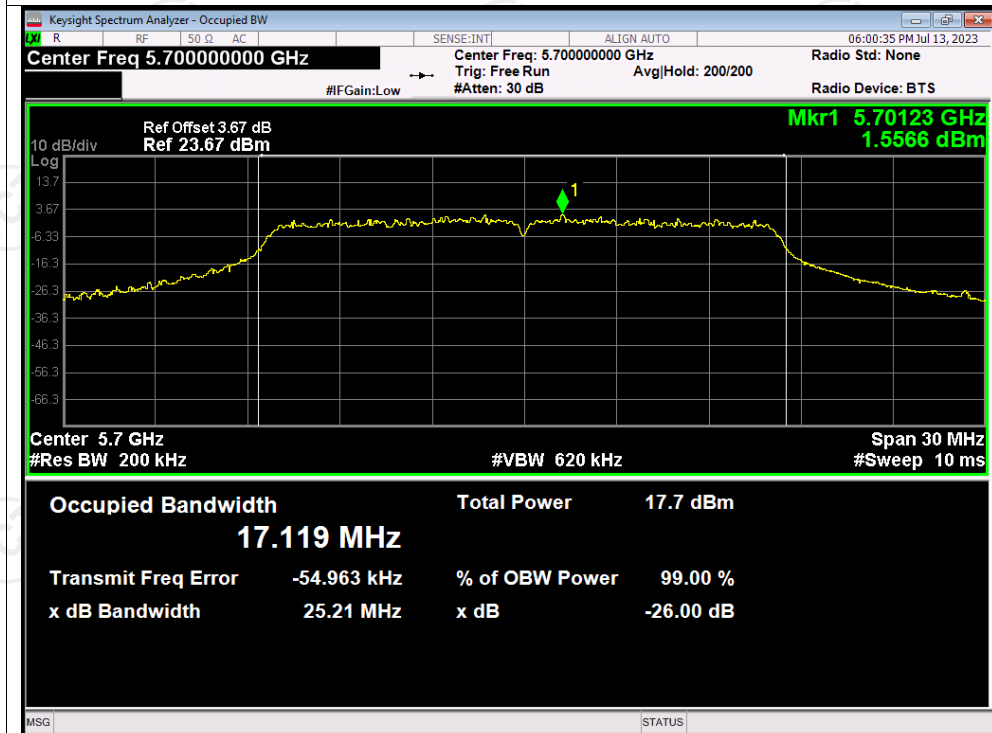


OBW NVNT n20 5500MHz Ant1

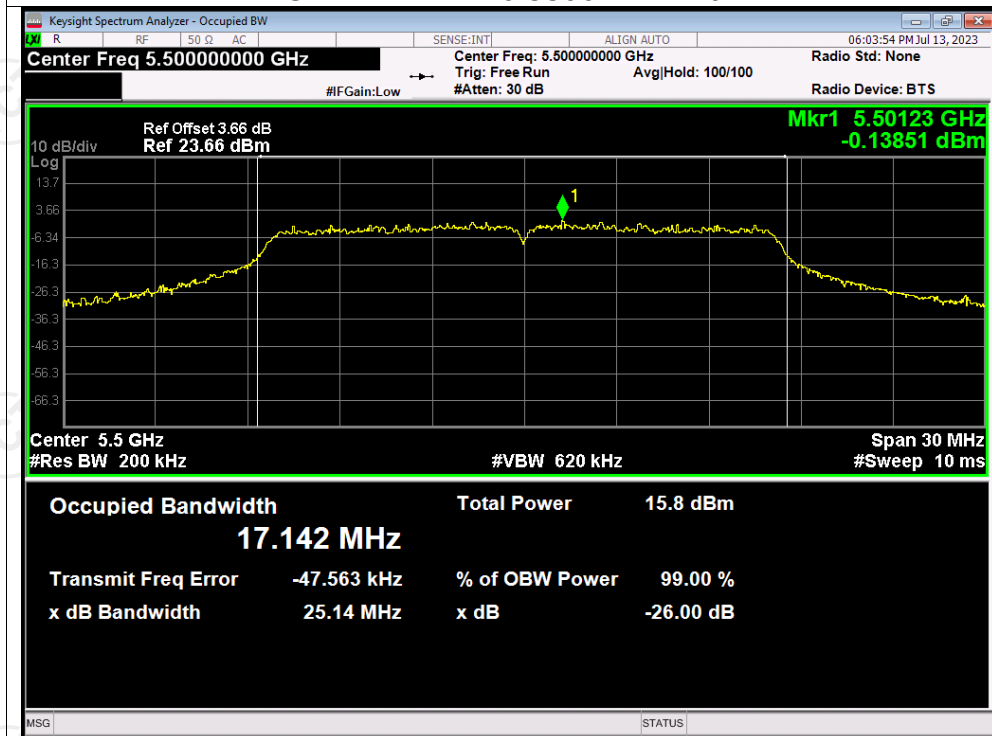


OBW NVNT n20 5600MHz Ant1

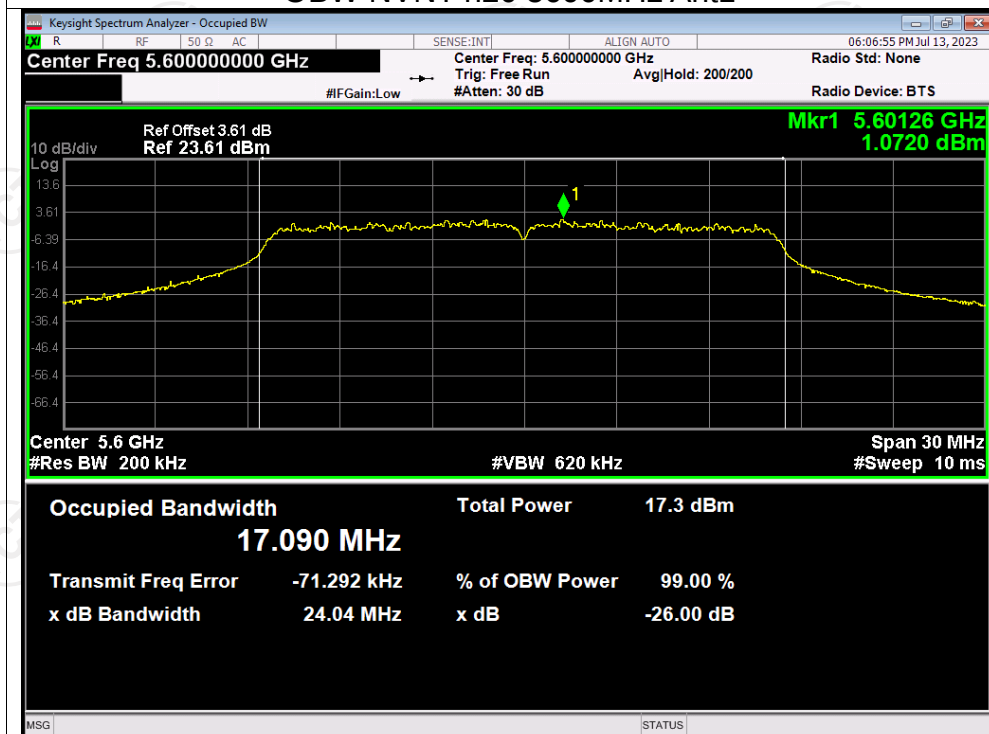


OBW NVNT n20 5700MHz Ant1

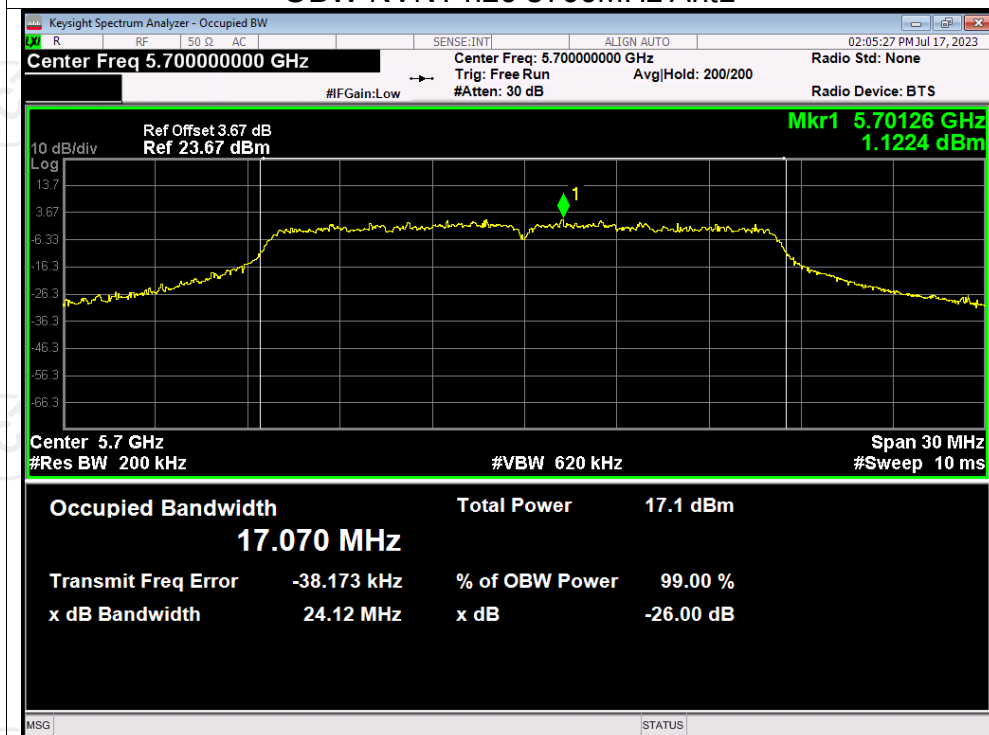


OBW NVNT n40 5510MHz Ant1

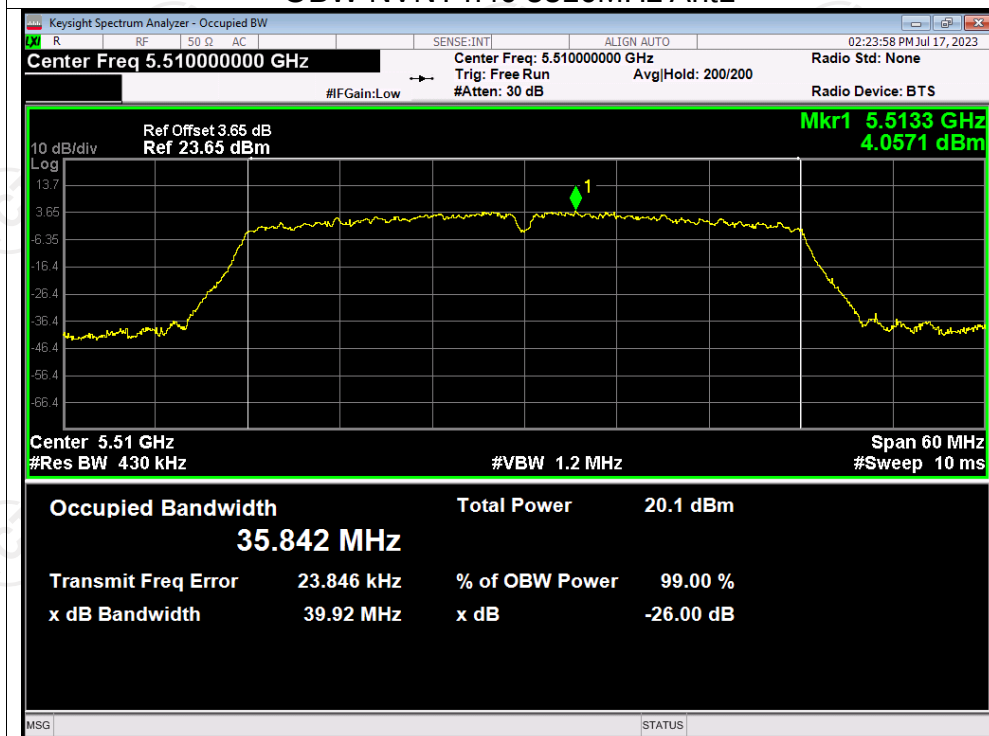


OBW NVNT n40 5590MHz Ant1

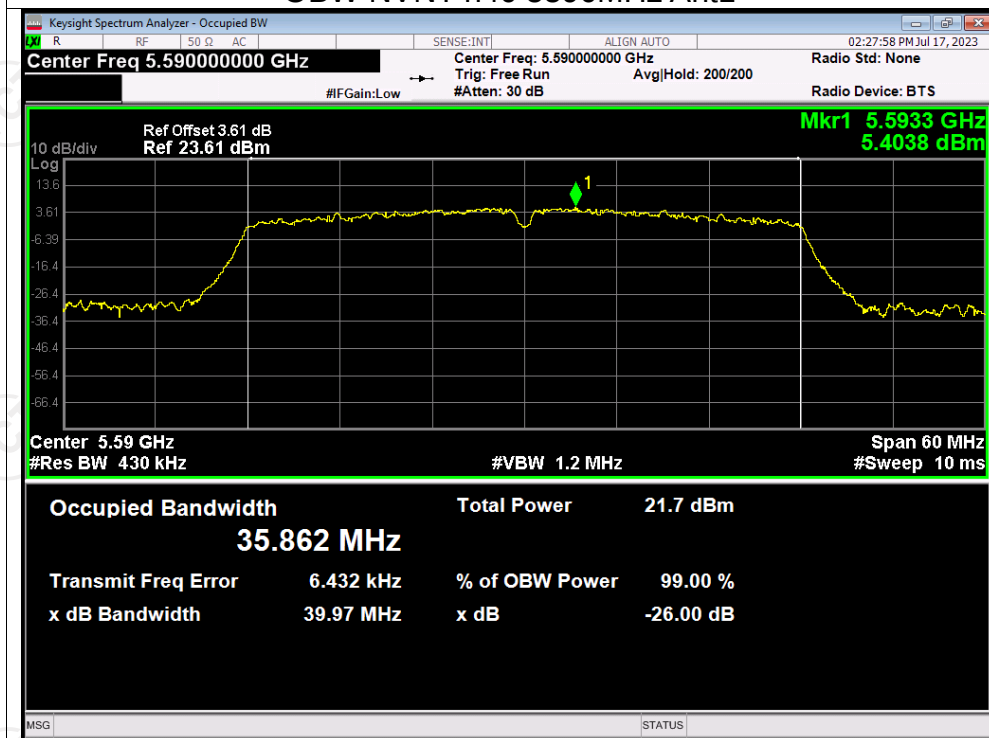


OBW NVNT n40 5670MHz Ant1

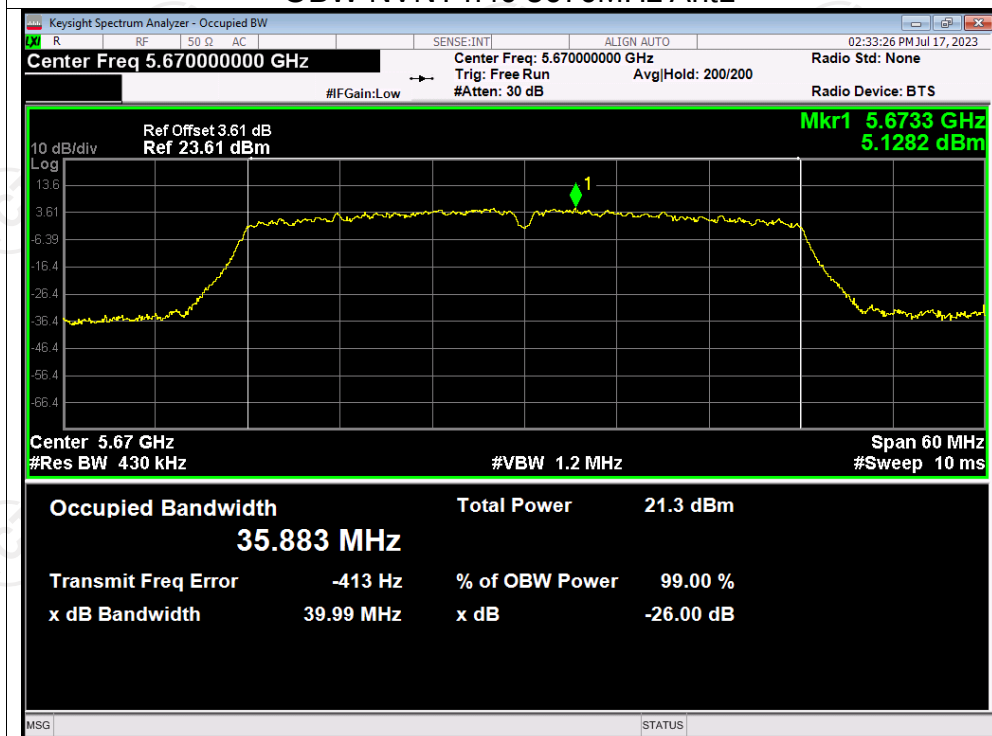


OBW NVNT ac20 5500MHz Ant1

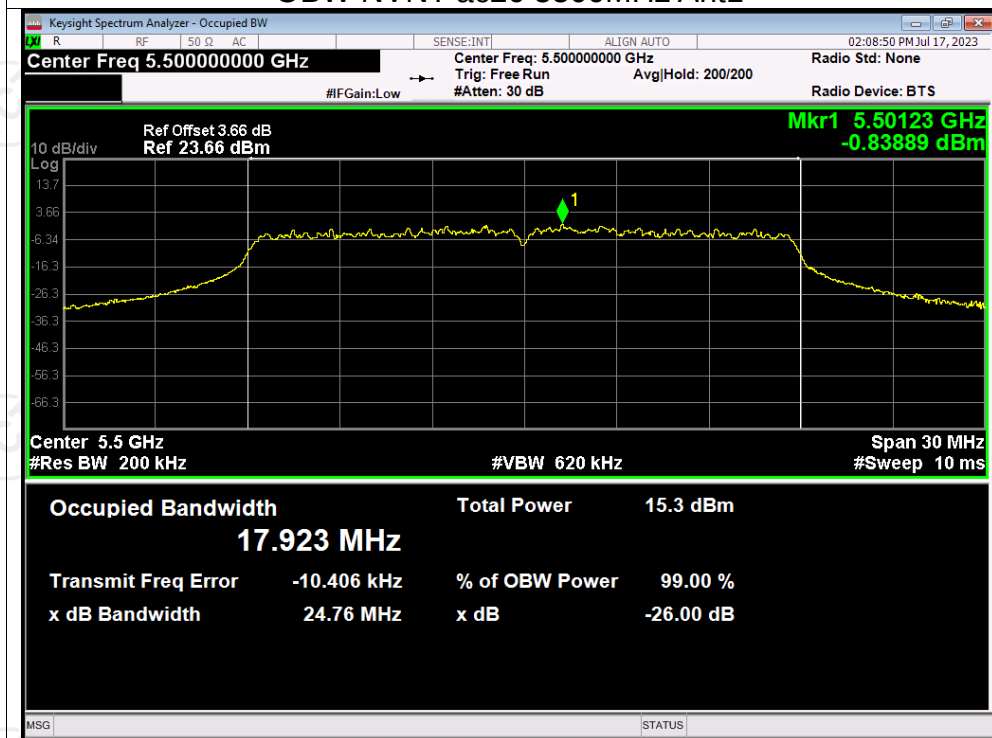


OBW NVNT ac20 5600MHz Ant1

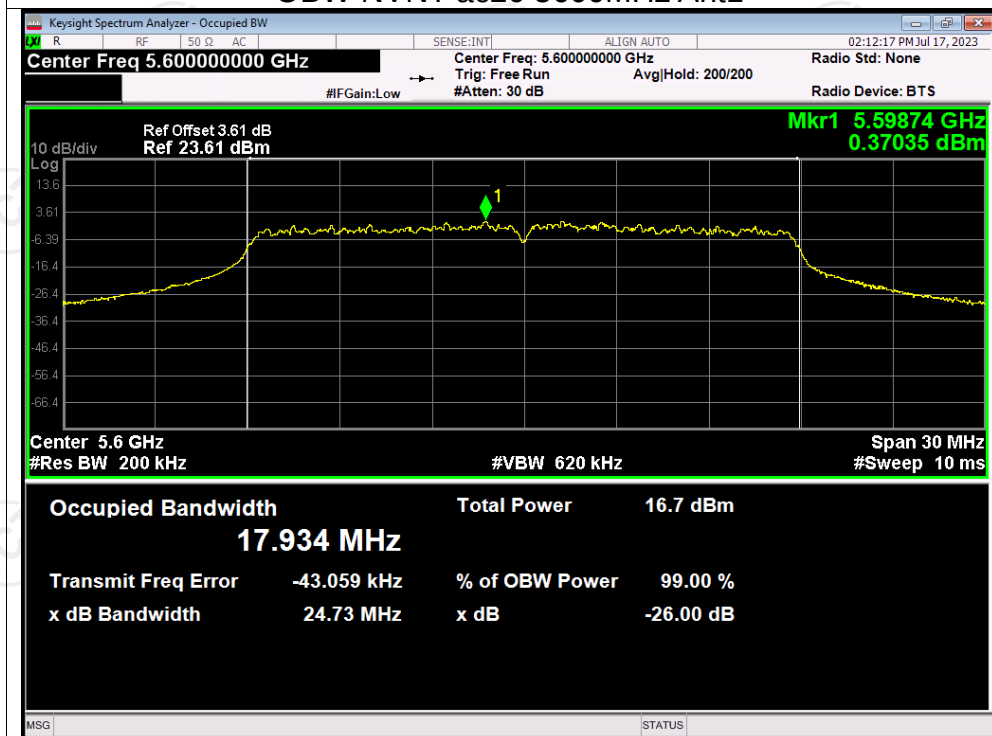


OBW NVNT ac20 5700MHz Ant1

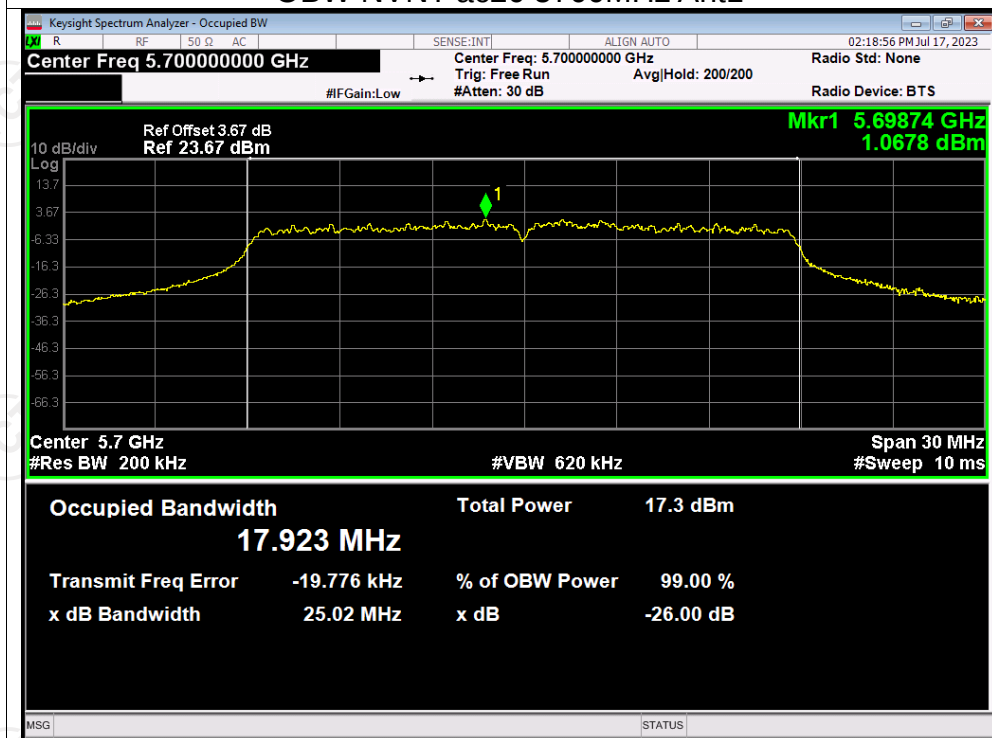


OBW NVNT ac40 5510MHz Ant1

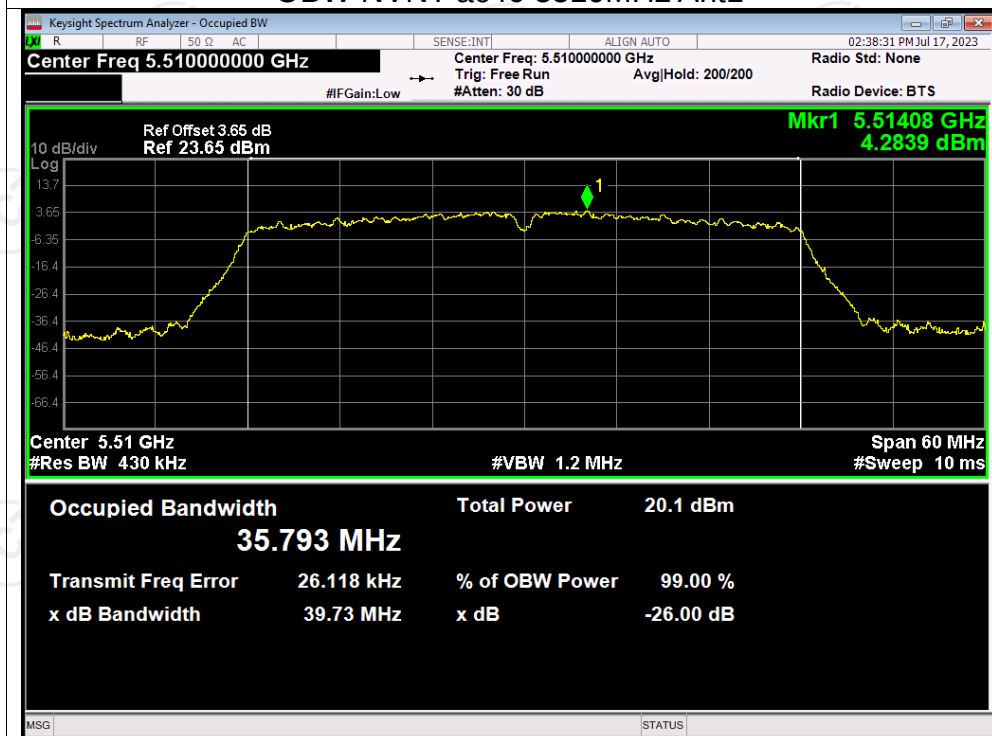


OBW NVNT ac40 5590MHz Ant1

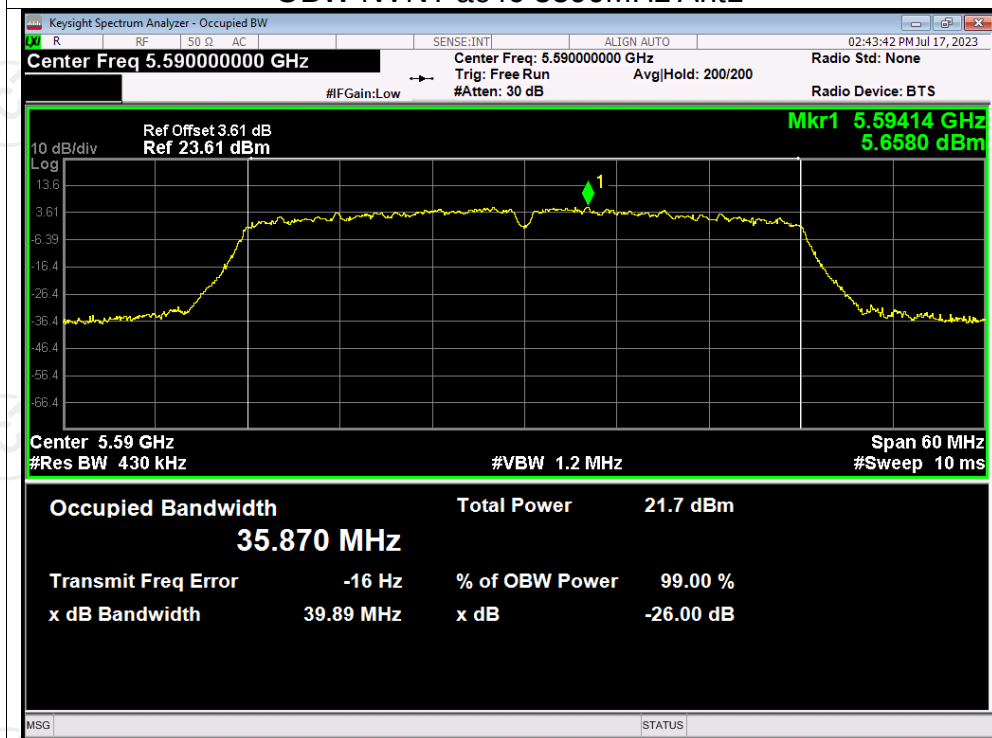


OBW NVNT ac40 5670MHz Ant1

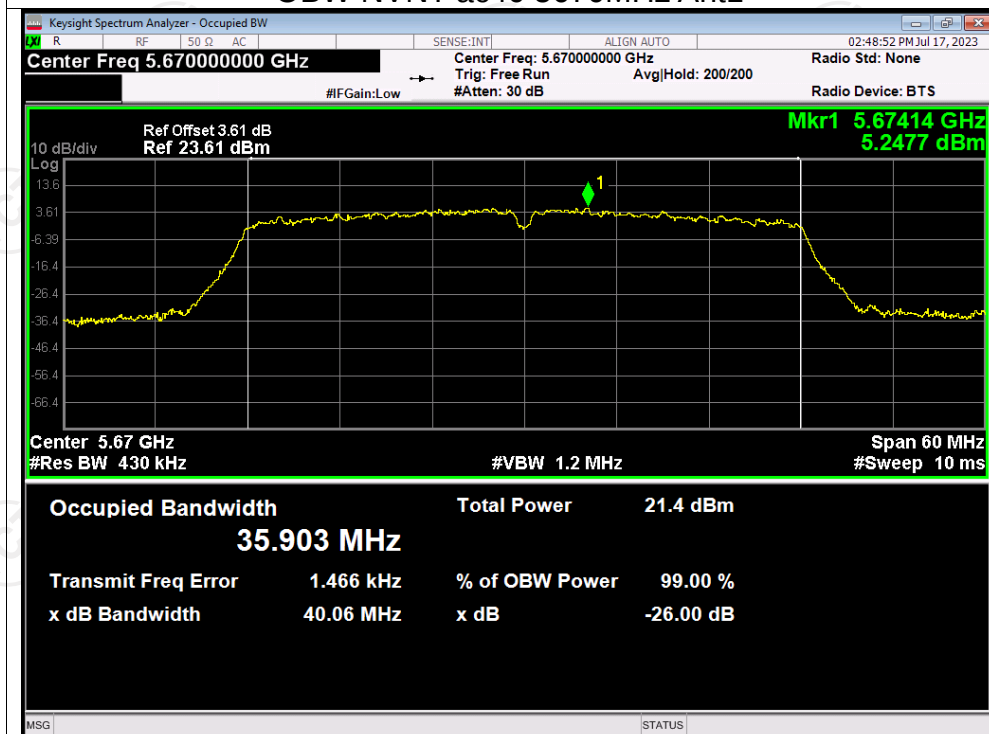


OBW NVNT ac80 5530MHz Ant1

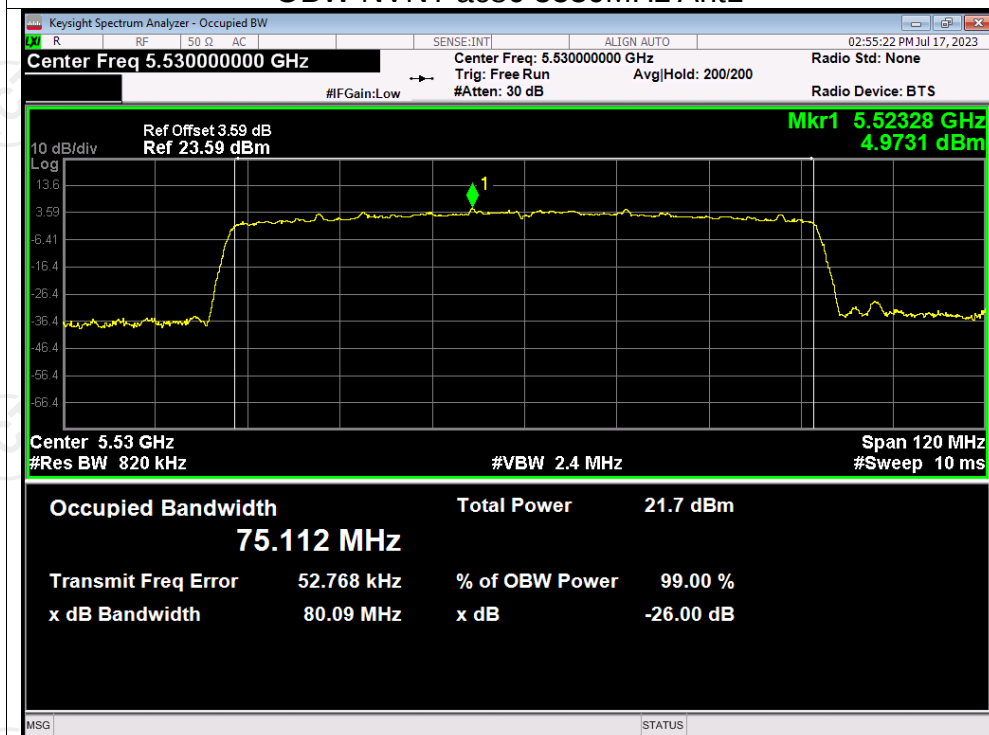


OBW NVNT ac80 5610MHz Ant1

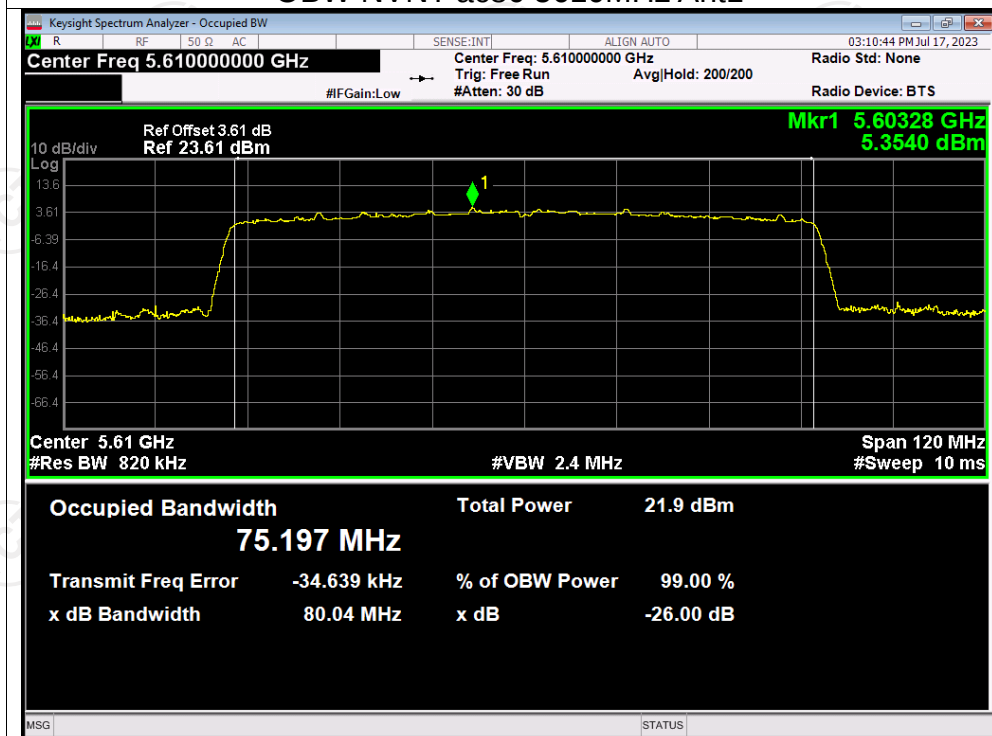


OBW NVNT ax20 5500MHz Ant1

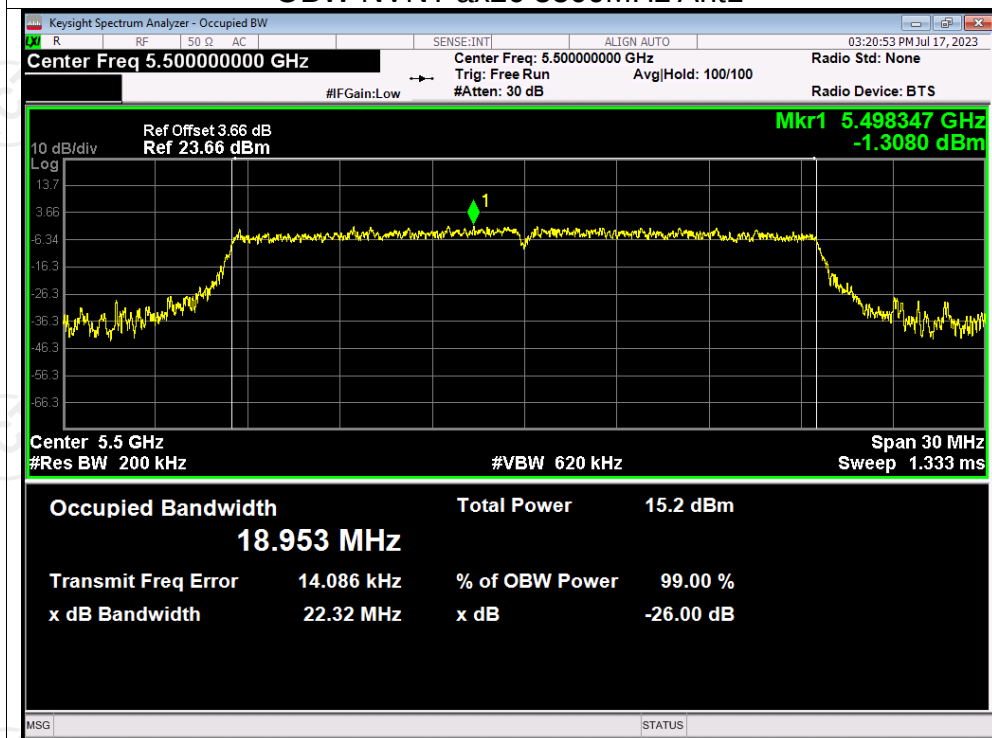


OBW NVNT ax20 5600MHz Ant1

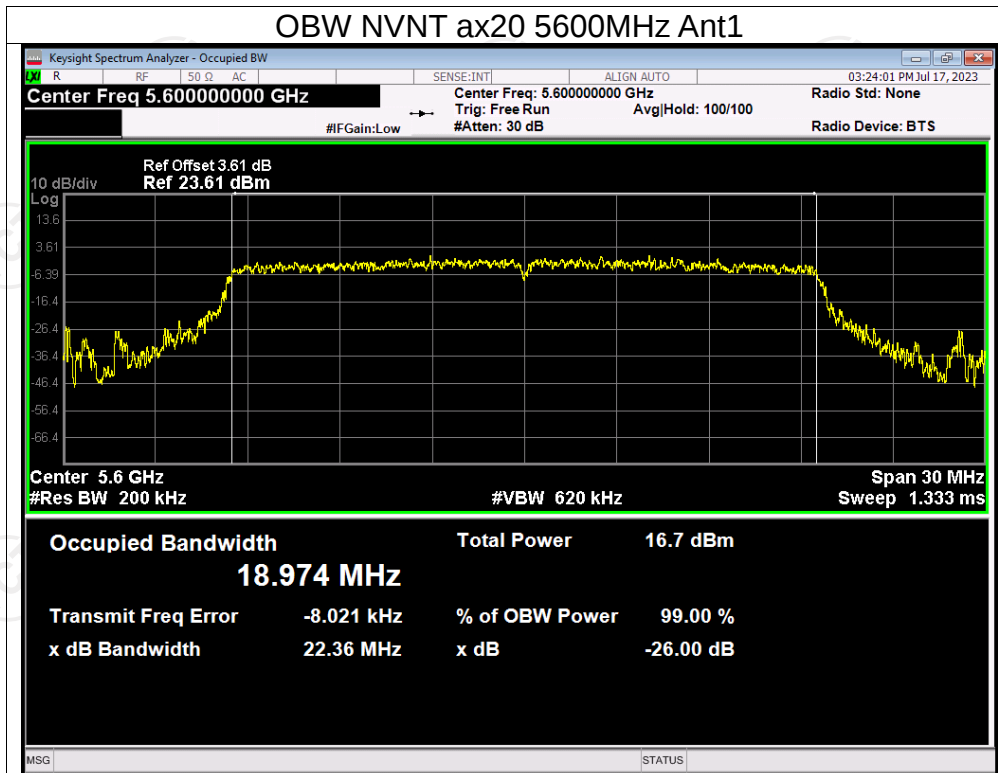


OBW NVNT ax20 5700MHz Ant1

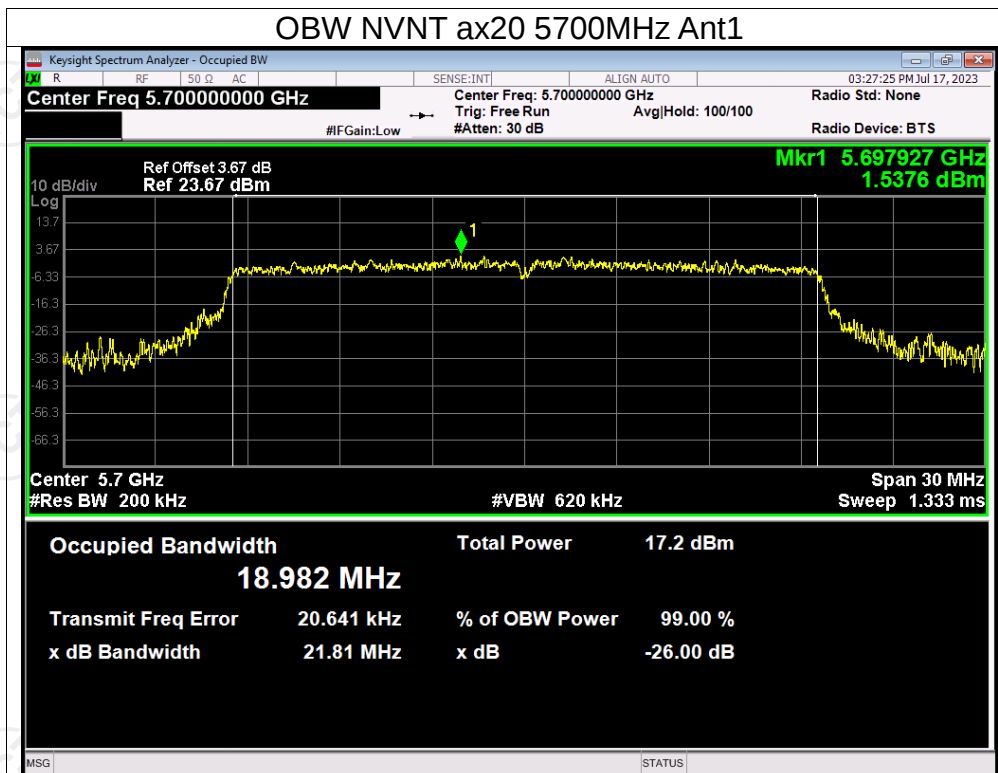


OBW NVNT ax40 5510MHz Ant1

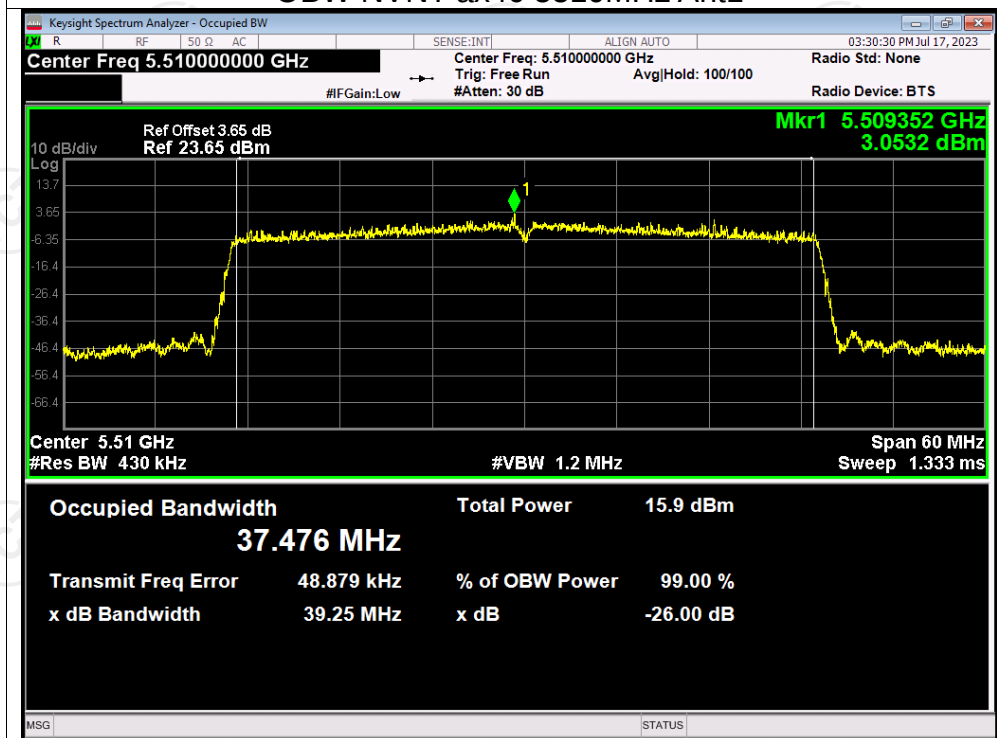


OBW NVNT ax40 5590MHz Ant1

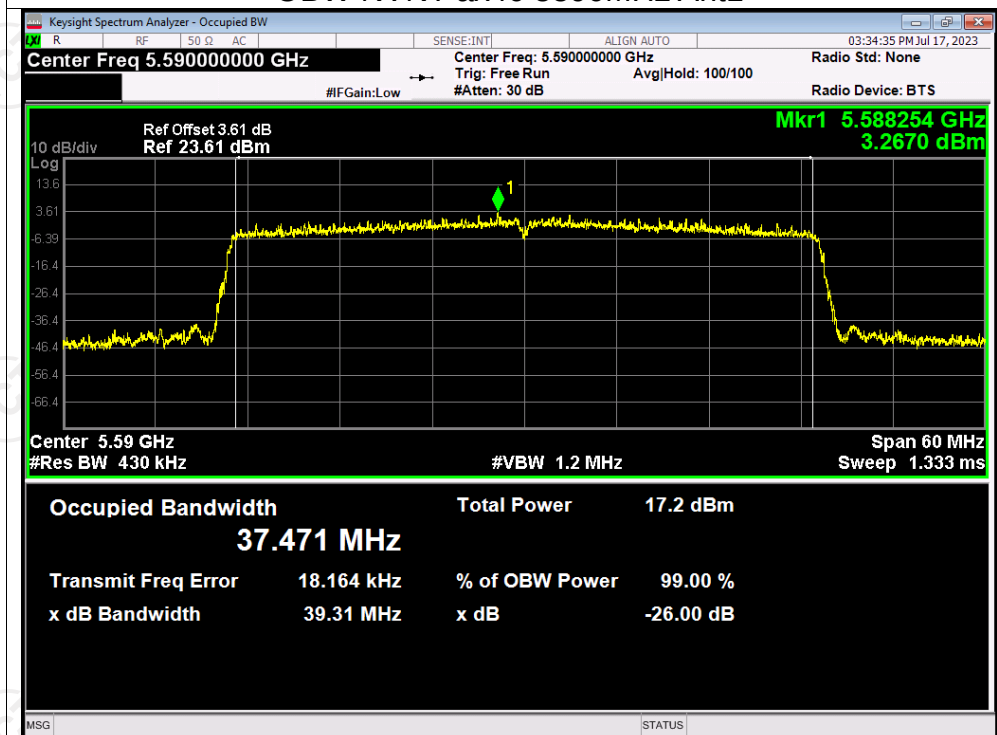


OBW NVNT ax40 5670MHz Ant1

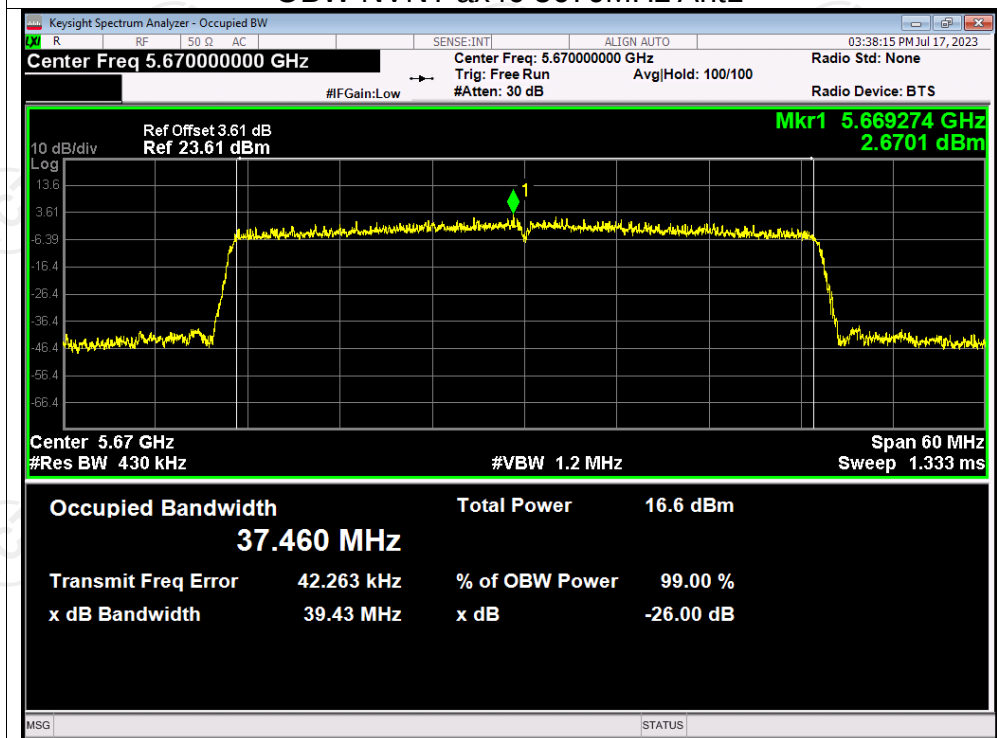


OBW NVNT ax80 5530MHz Ant1

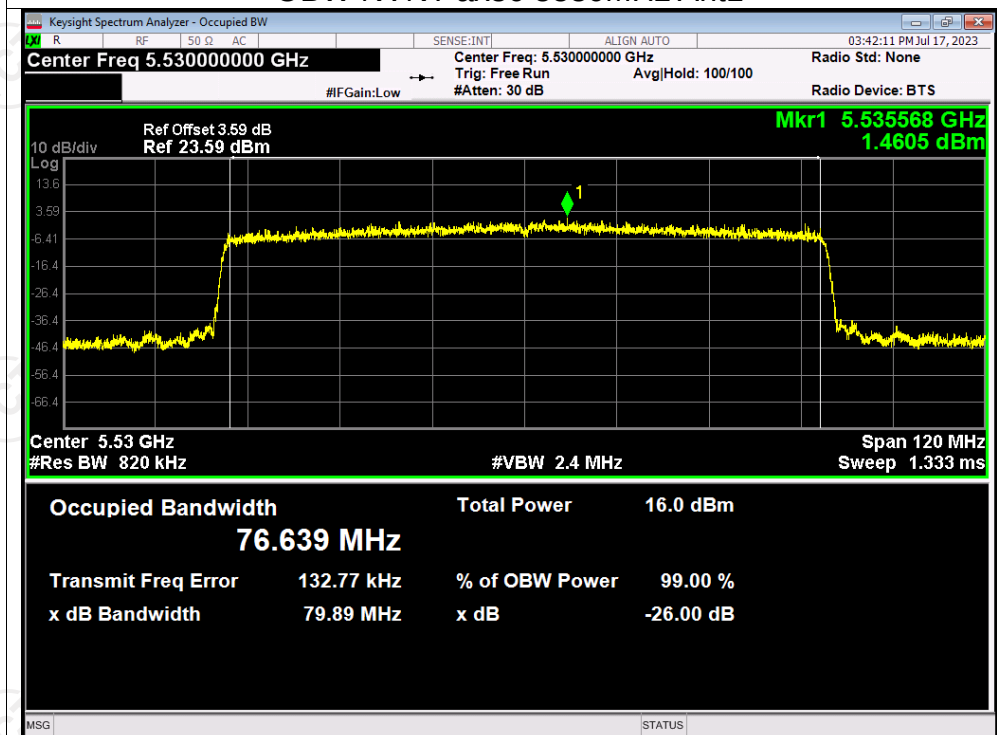

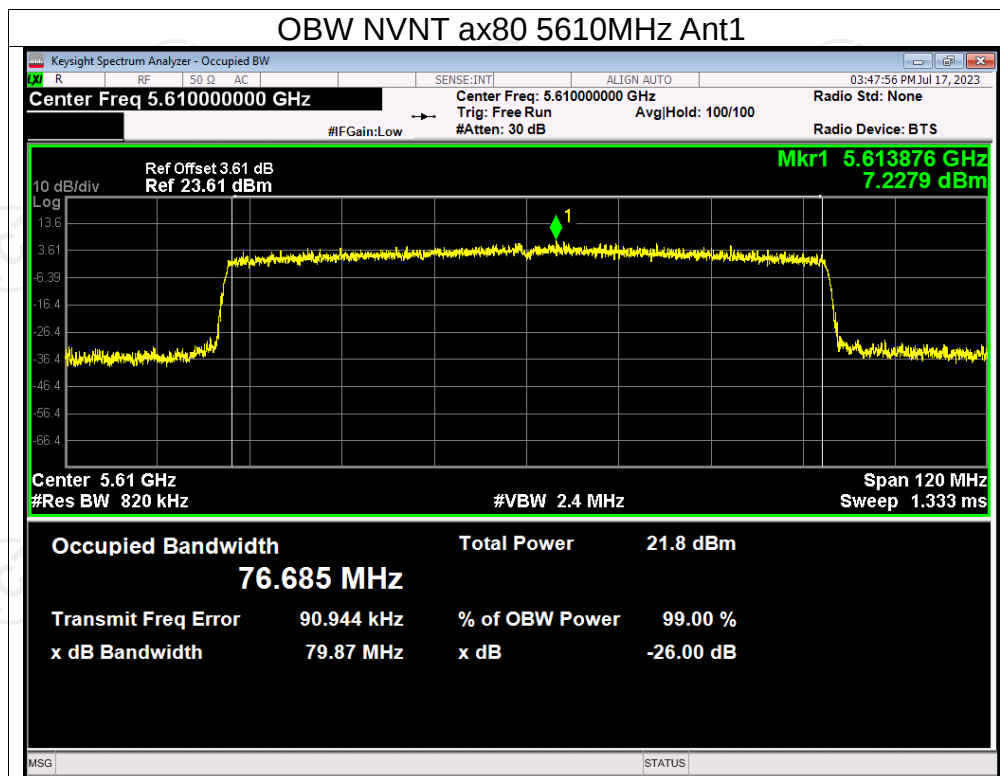


Test Graphs


OBW NVNT a 5745MHz Ant1

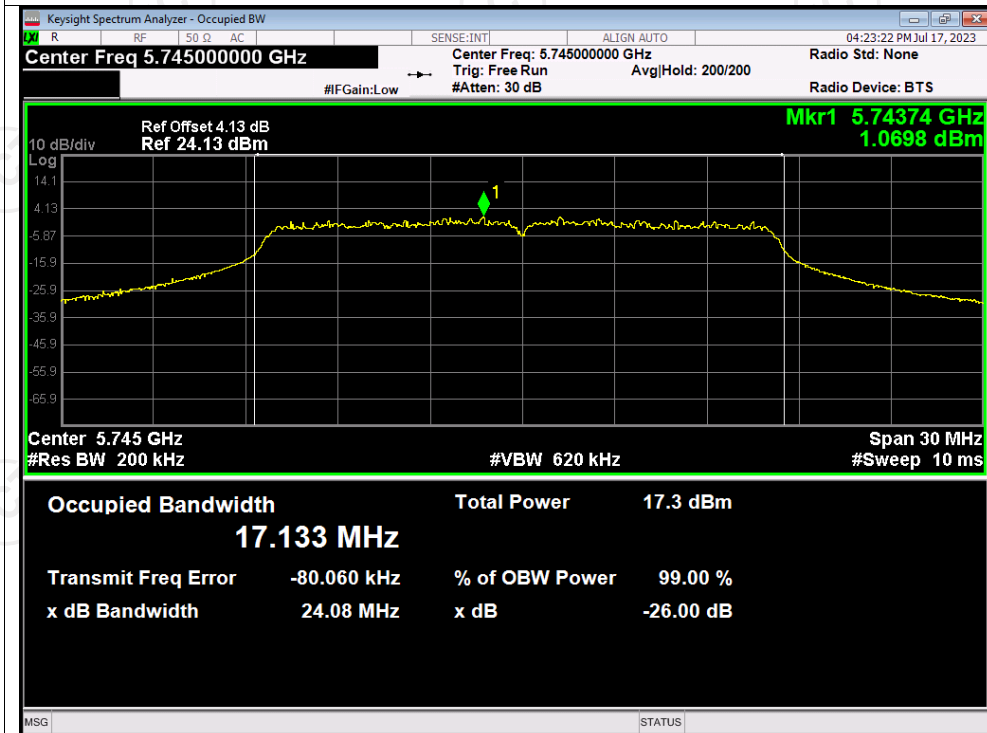


OBW NVNT a 5785MHz Ant1

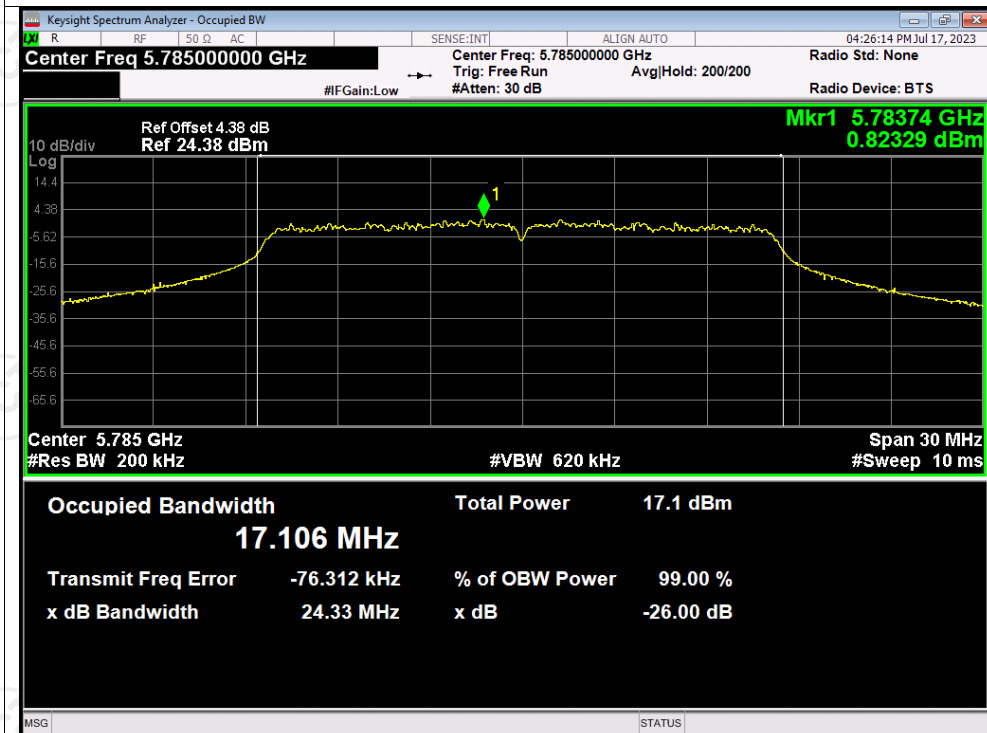


OBW NVNT a 5825MHz Ant1

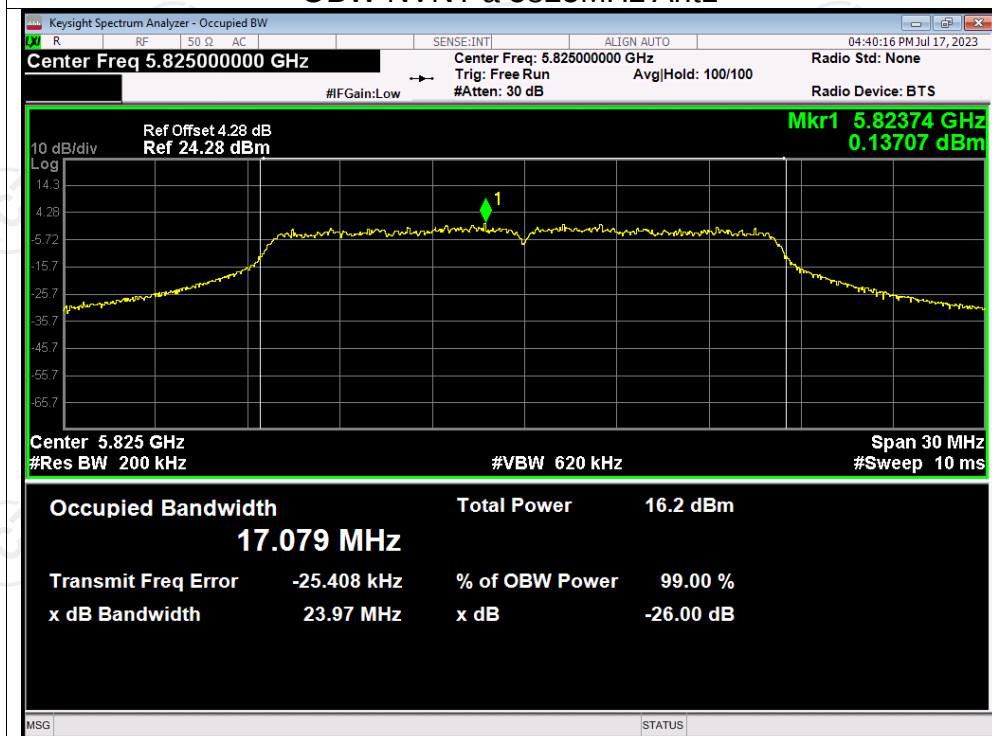


OBW NVNT n20 5745MHz Ant1

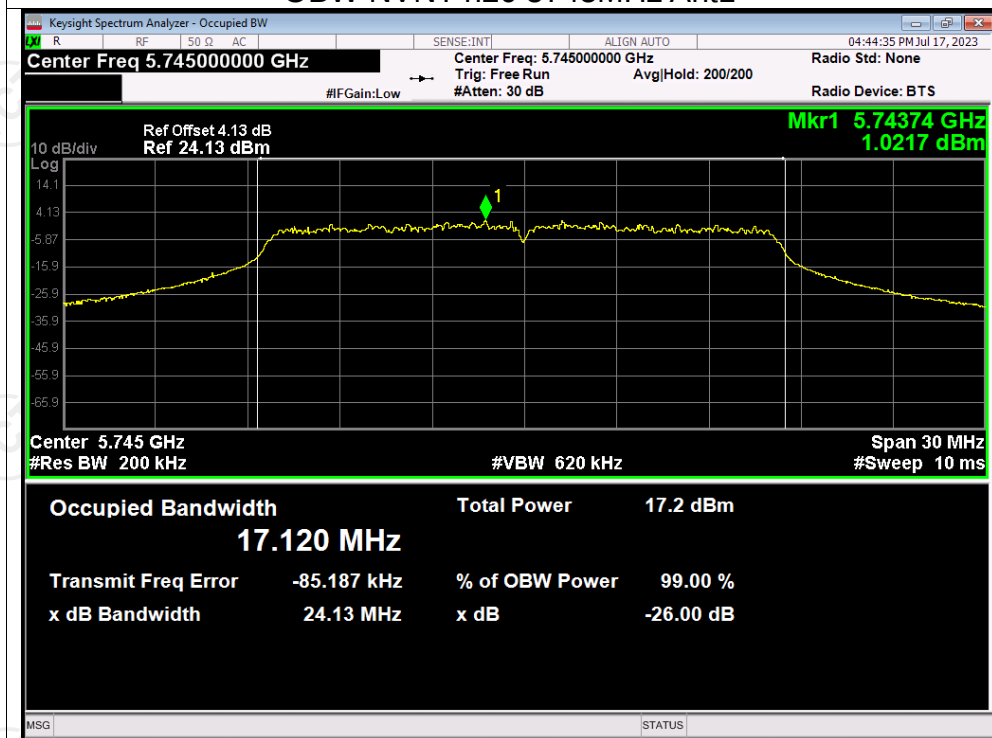


OBW NVNT n20 5785MHz Ant1

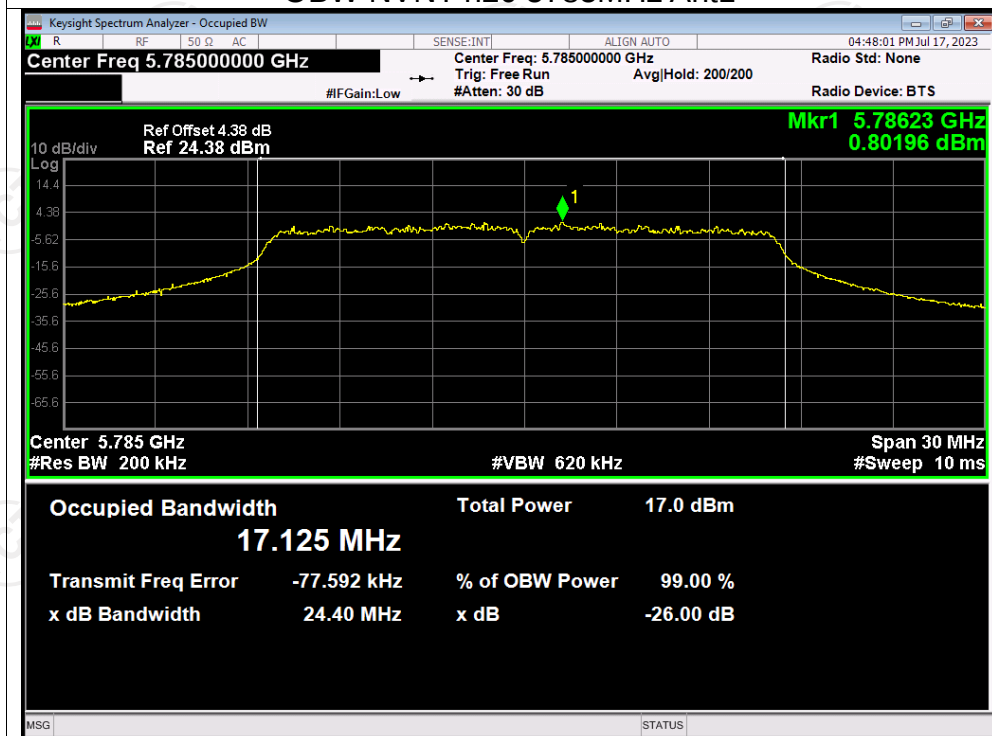


OBW NVNT n20 5825MHz Ant1

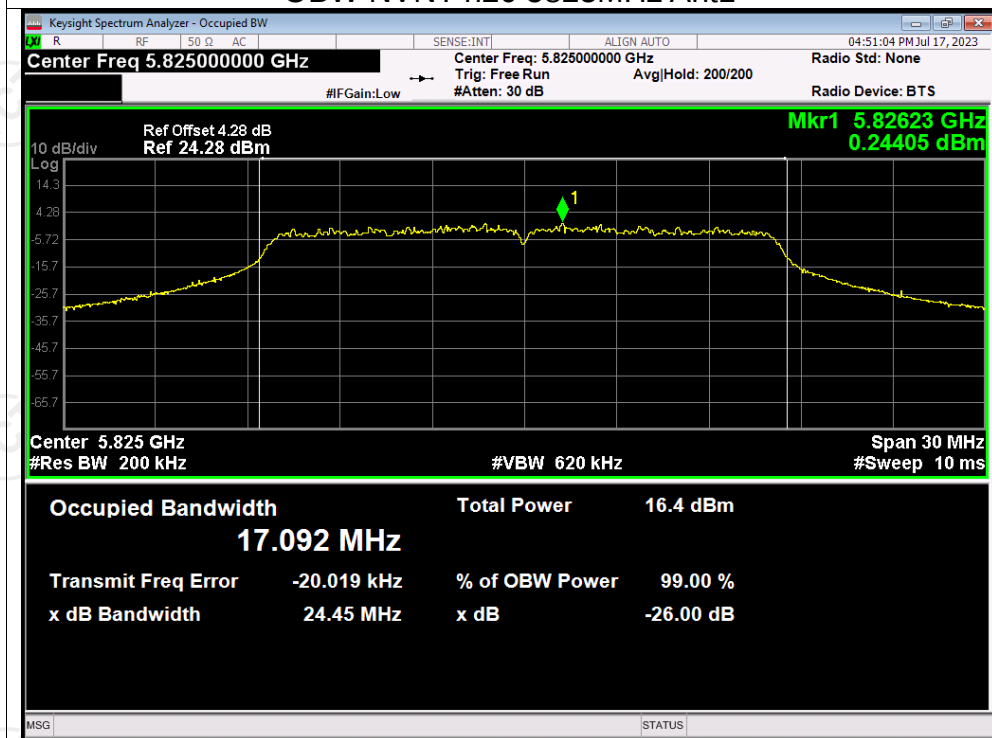


OBW NVNT n40 5755MHz Ant1

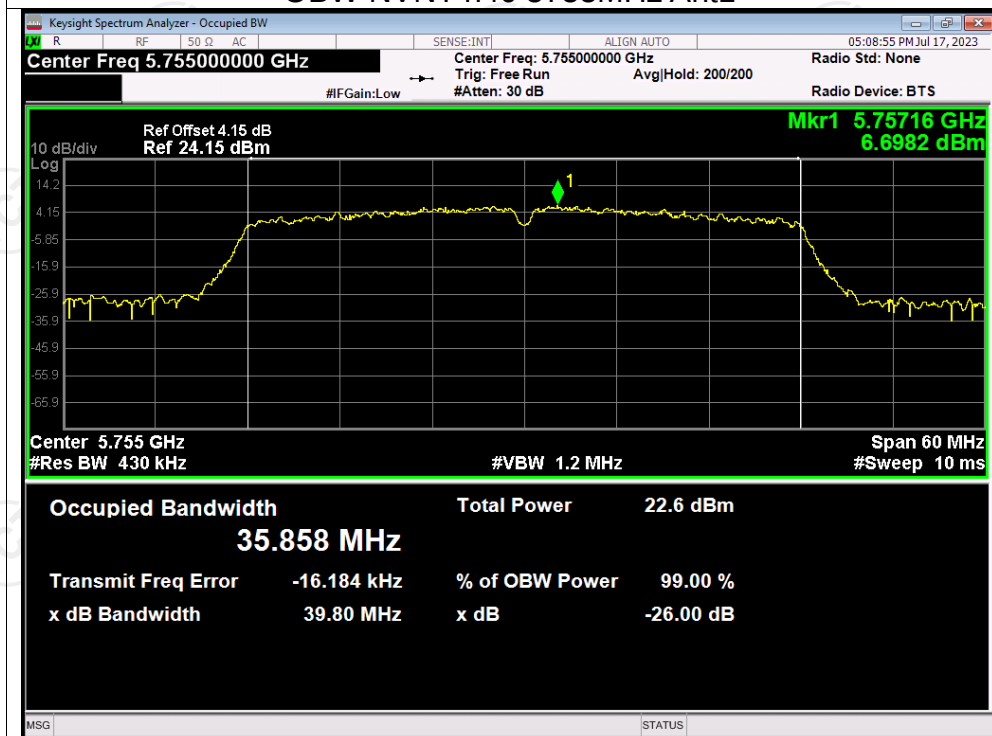


OBW NVNT n40 5795MHz Ant1

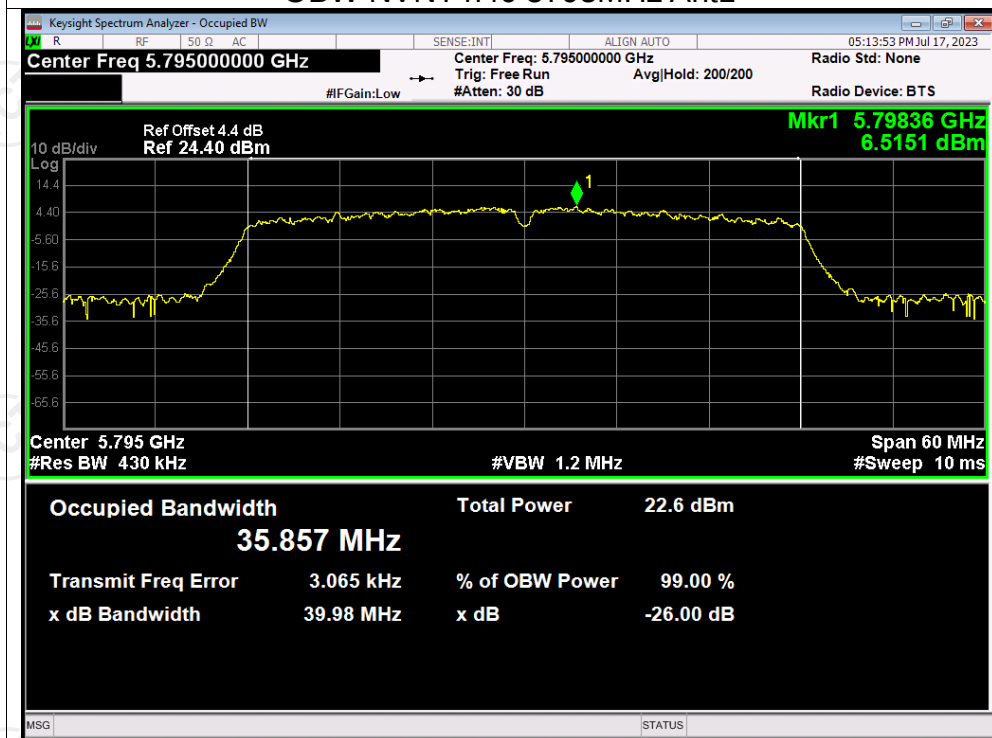


OBW NVNT ac20 5745MHz Ant1

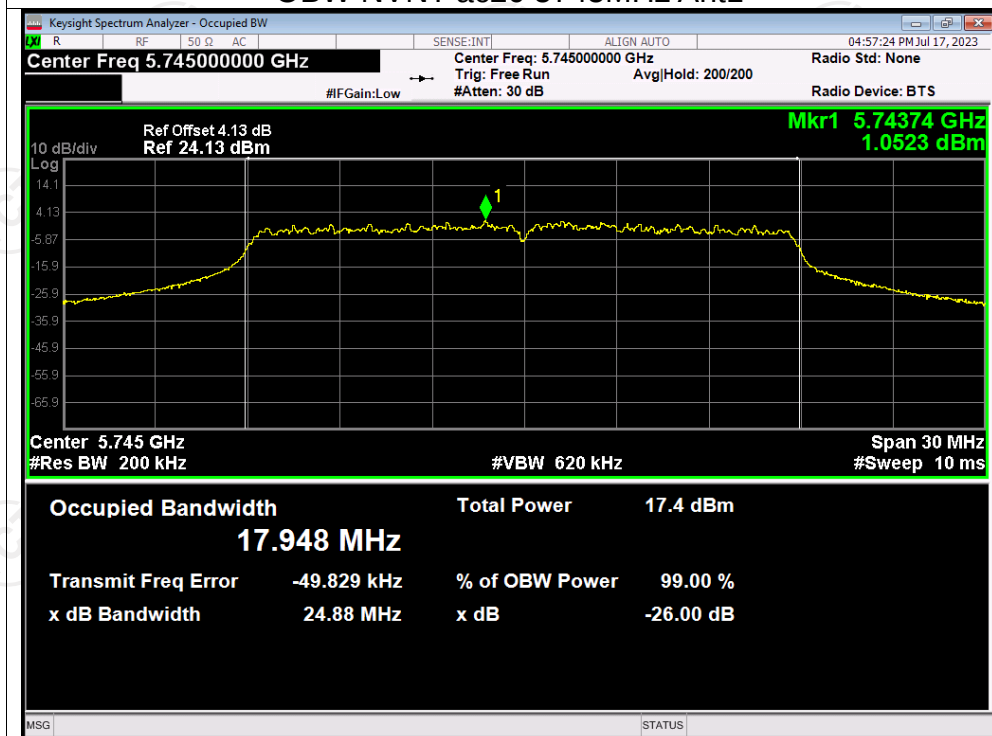


OBW NVNT ac20 5785MHz Ant1

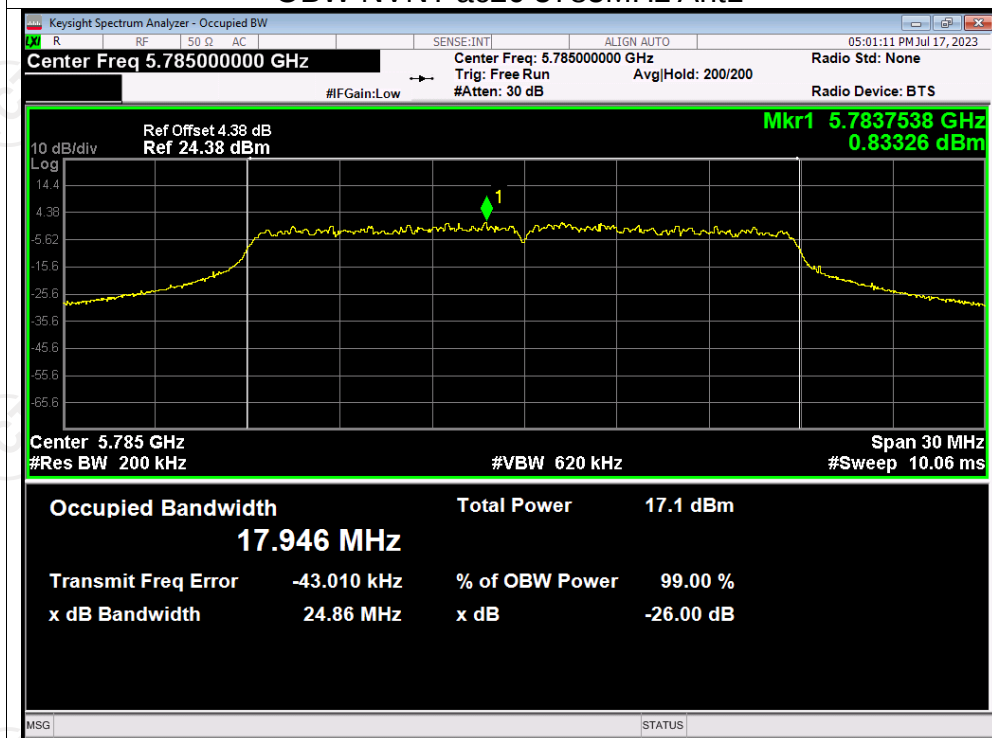


OBW NVNT ac20 5825MHz Ant1

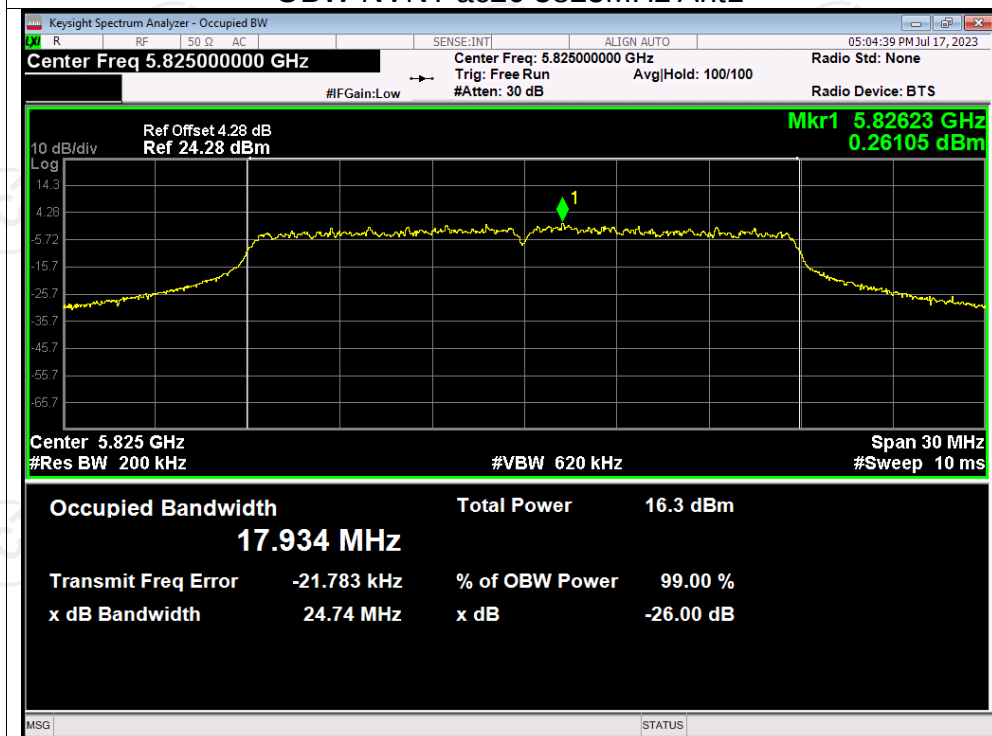


OBW NVNT ac40 5755MHz Ant1

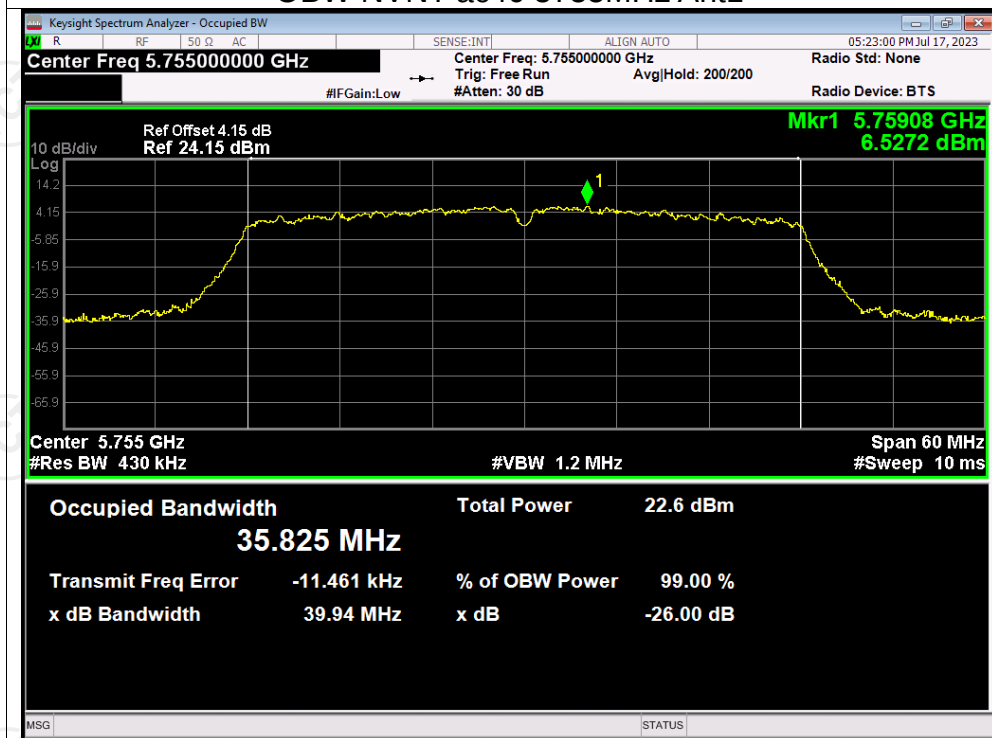


OBW NVNT ac40 5795MHz Ant1

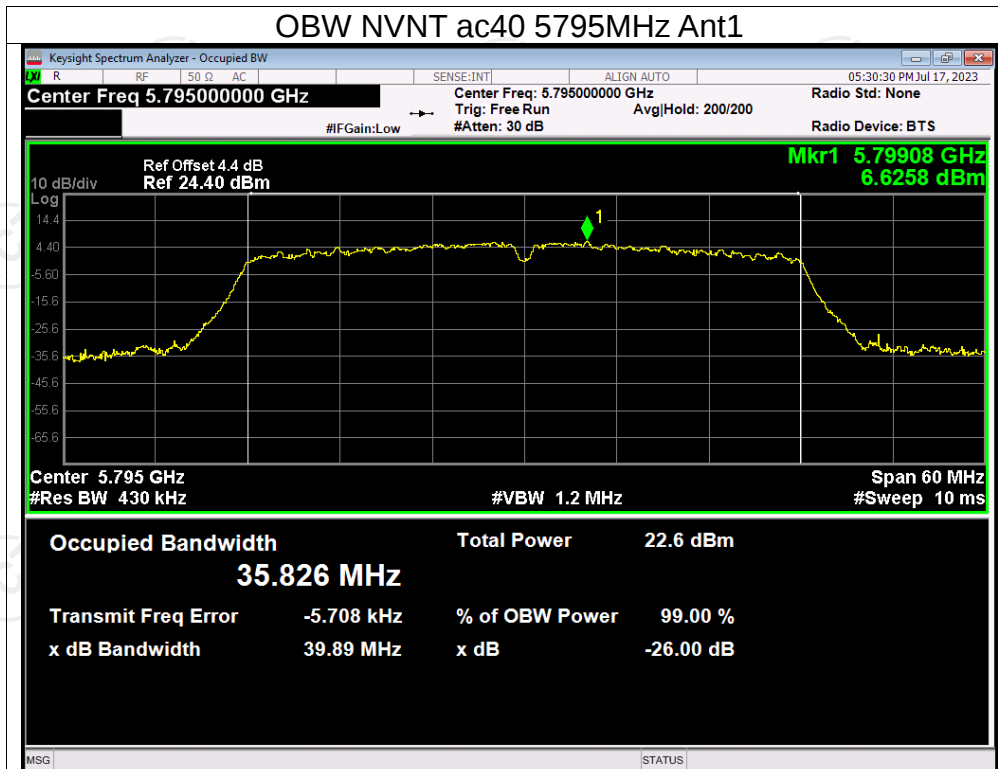


OBW NVNT ac80 5775MHz Ant1

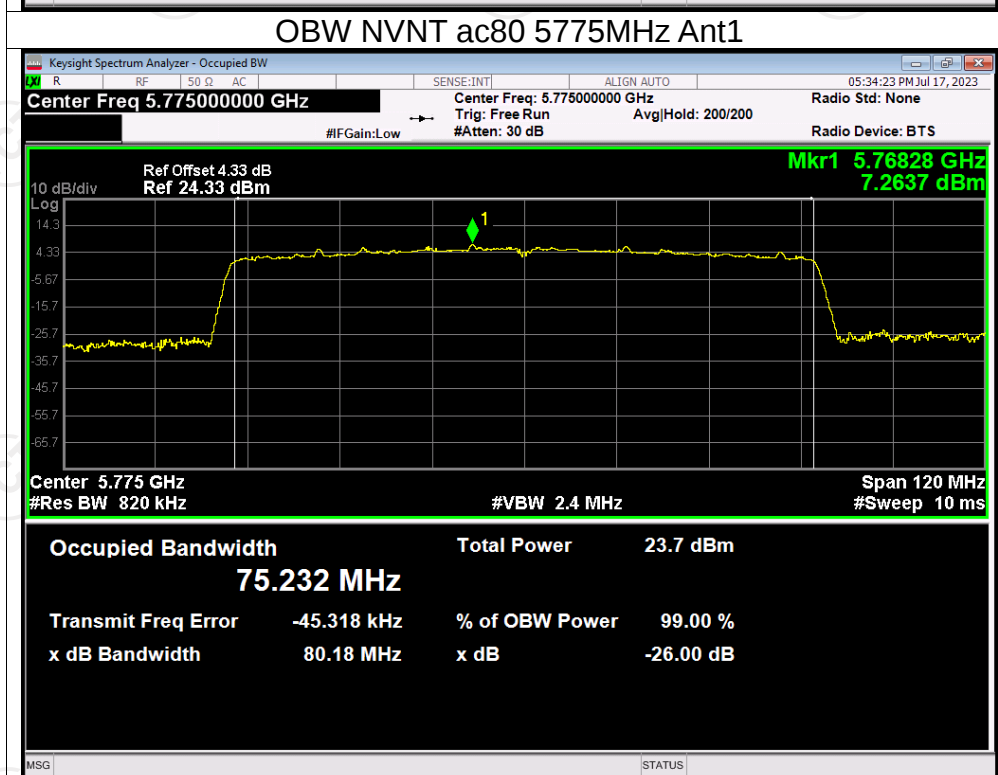


OBW NVNT ax20 5745MHz Ant1

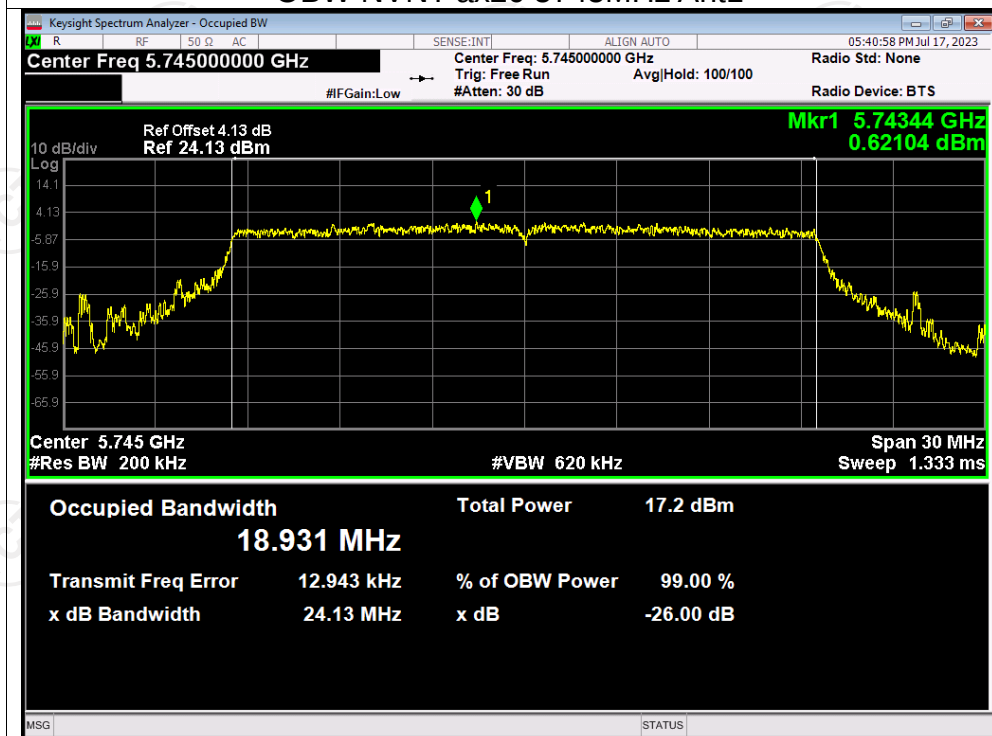


OBW NVNT ax20 5785MHz Ant1

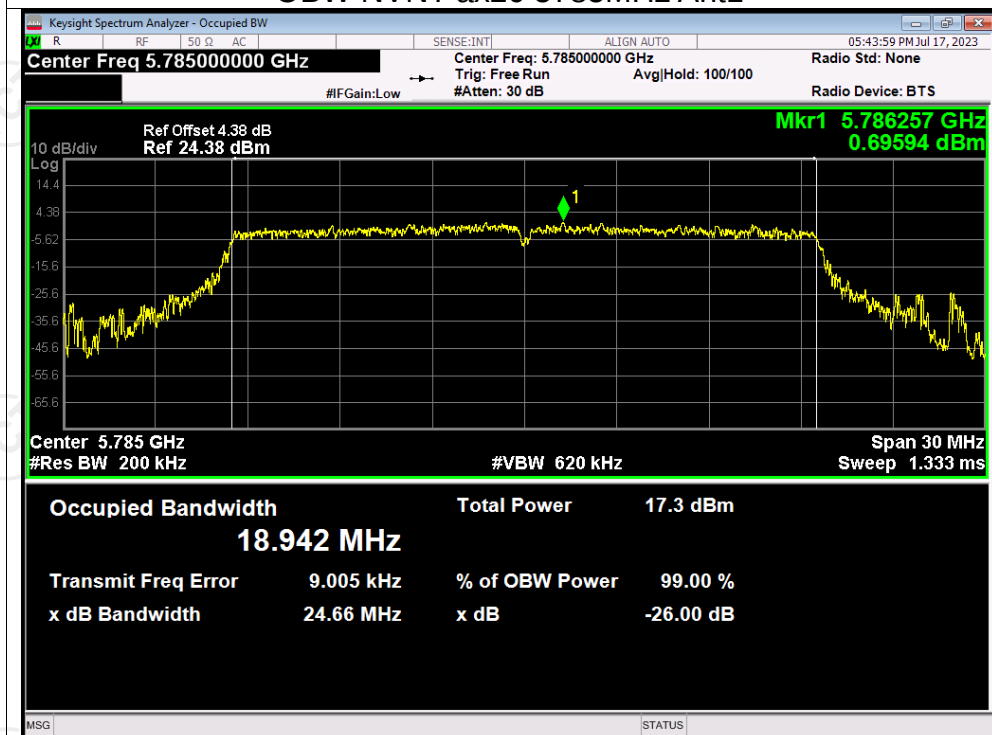


OBW NVNT ax20 5825MHz Ant1

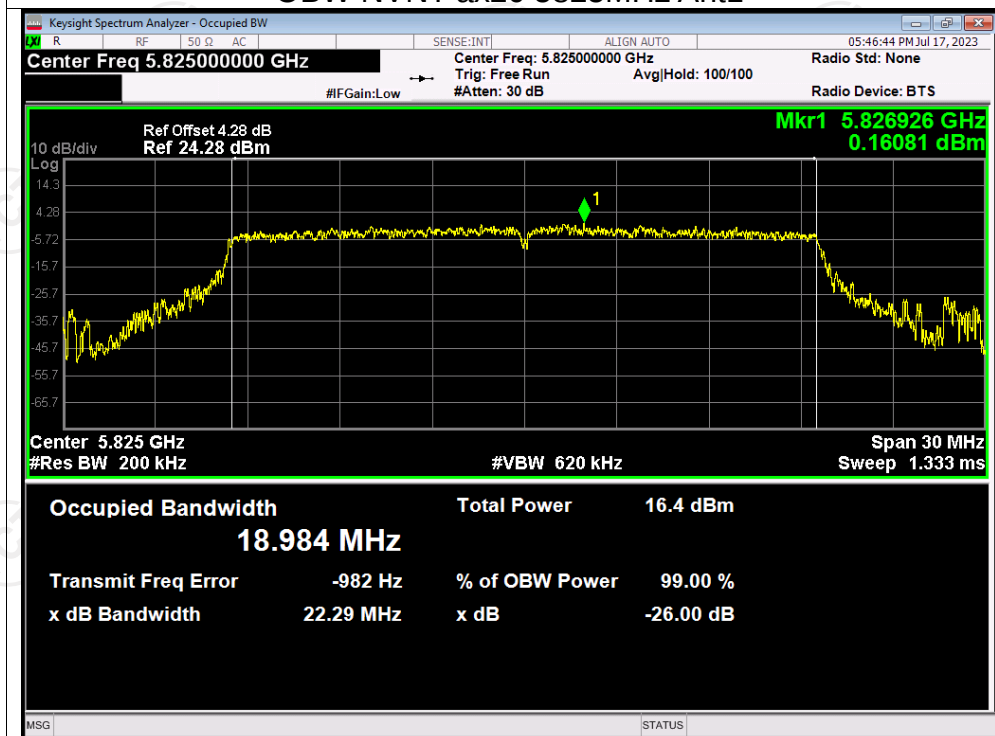


OBW NVNT ax40 5755MHz Ant1

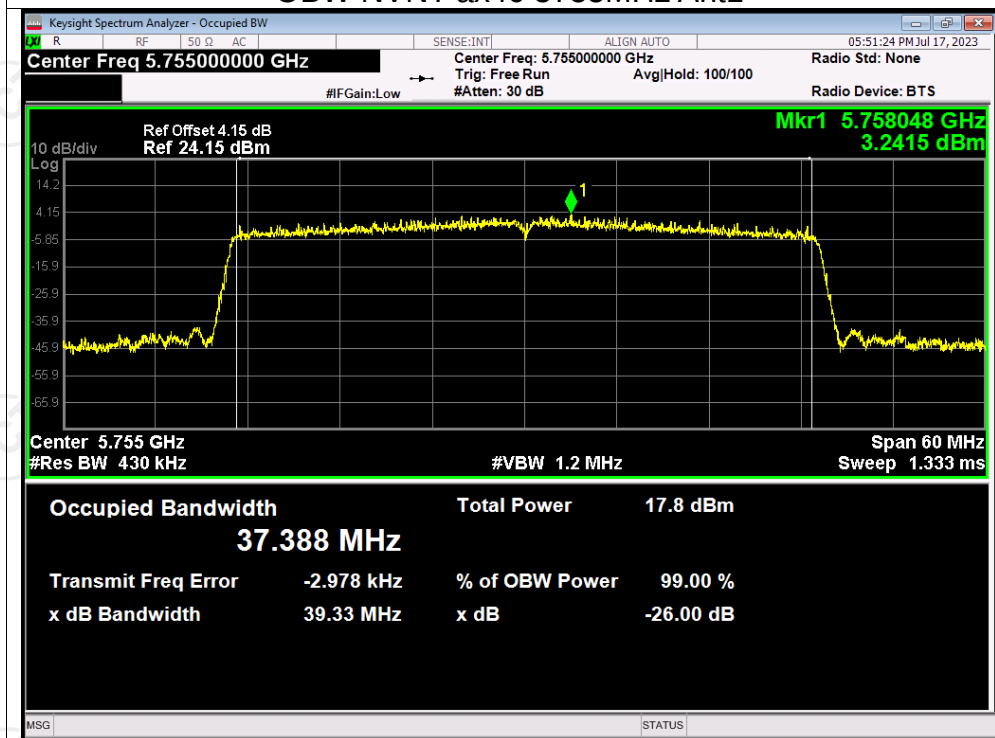

OBW NVNT ax40 5795MHz Ant1

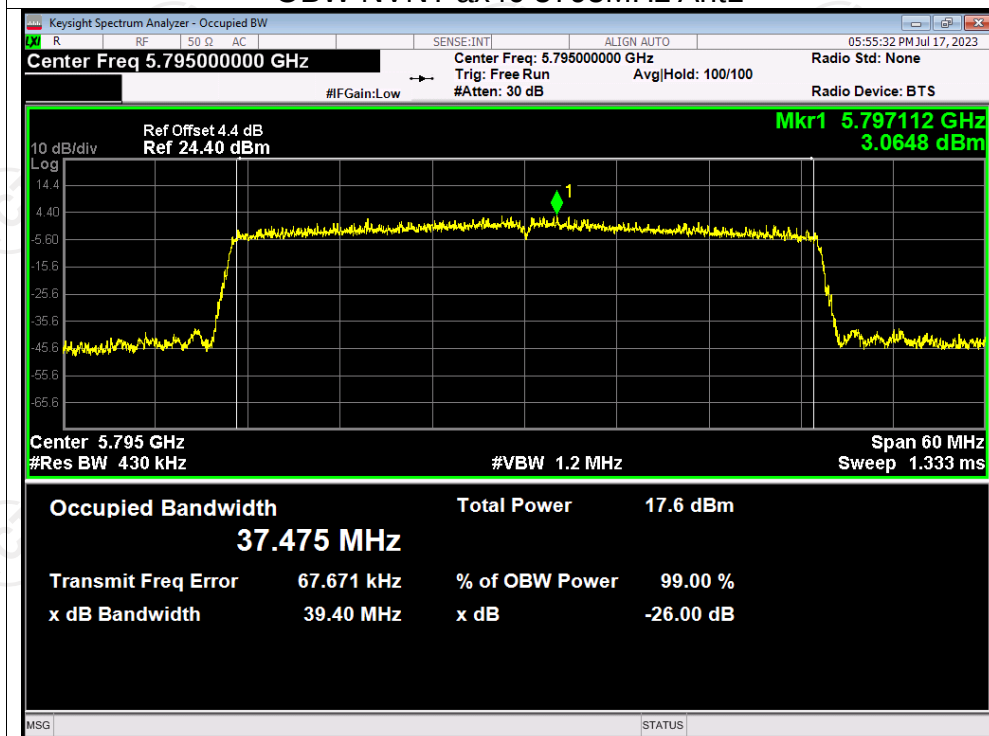

OBW NVNT ax80 5775MHz Ant1

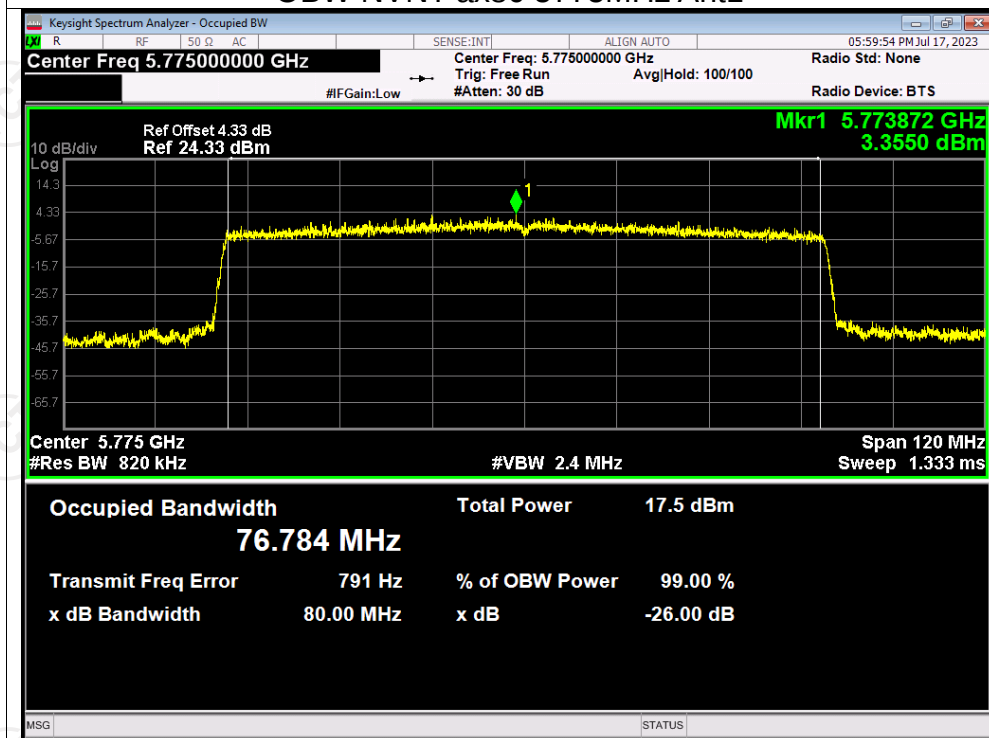


Maximum Power Spectral Density Level

Condition	Mode	Frequency (MHz)	Antenna	Conducted PSD (dBm/MHz)	Duty Factor (dB)	Total PSD (dBm/MHz)	Limit (dBm/MHz)	Verdict
NVNT	a	5180	Ant1	4.35	0	4.35	11	Pass
NVNT	a	5200	Ant1	6.11	0	6.11	11	Pass
NVNT	a	5240	Ant1	6.06	0	6.06	11	Pass
NVNT	n20	5180	Ant1	6.00	0	6.00	11	Pass
NVNT	n20	5200	Ant1	6.12	0	6.12	11	Pass
NVNT	n20	5240	Ant1	6.18	0	6.18	11	Pass
NVNT	n40	5190	Ant1	3.80	0.15	3.95	11	Pass
NVNT	n40	5230	Ant1	4.26	0.15	4.41	11	Pass
NVNT	ac20	5180	Ant1	5.75	0	5.75	11	Pass
NVNT	ac20	5200	Ant1	5.89	0	5.89	11	Pass
NVNT	ac20	5240	Ant1	5.93	0	5.93	11	Pass
NVNT	ac40	5190	Ant1	3.89	0.15	4.04	11	Pass
NVNT	ac40	5230	Ant1	4.39	0.15	4.54	11	Pass
NVNT	ac80	5210	Ant1	-0.49	0.31	-0.18	11	Pass
NVNT	ax20	5180	Ant1	6.56	0.10	6.66	11	Pass
NVNT	ax20	5200	Ant1	6.34	0.10	6.44	11	Pass
NVNT	ax20	5240	Ant1	7.17	0.13	7.30	11	Pass
NVNT	ax40	5190	Ant1	3.53	0.19	3.72	11	Pass
NVNT	ax40	5230	Ant1	3.64	0.19	3.83	11	Pass
NVNT	ax80	5210	Ant1	-0.93	0.34	-0.59	11	Pass
NVNT	a	5260	Ant1	6.03	0	6.03	11	Pass
NVNT	a	5300	Ant1	5.32	0	5.32	11	Pass
NVNT	a	5320	Ant1	6.02	0	6.02	11	Pass
NVNT	n20	5260	Ant1	6.08	0	6.08	11	Pass
NVNT	n20	5300	Ant1	5.43	0	5.43	11	Pass
NVNT	n20	5320	Ant1	5.76	0	5.76	11	Pass
NVNT	n40	5270	Ant1	3.74	0.16	3.90	11	Pass
NVNT	n40	5310	Ant1	3.57	0.15	3.72	11	Pass
NVNT	ac20	5260	Ant1	2.39	0	2.39	11	Pass
NVNT	ac20	5300	Ant1	5.49	0	5.49	11	Pass
NVNT	ac20	5320	Ant1	4.85	0	4.85	11	Pass
NVNT	ac40	5270	Ant1	1.63	0.16	1.79	11	Pass
NVNT	ac40	5310	Ant1	1.45	0.16	1.61	11	Pass
NVNT	ac80	5290	Ant1	-3.44	0.31	-3.13	11	Pass
NVNT	ax20	5260	Ant1	5.03	0.10	5.13	11	Pass
NVNT	ax20	5300	Ant1	4.94	0.11	5.05	11	Pass
NVNT	ax20	5320	Ant1	5.65	0.10	5.75	11	Pass
NVNT	ax40	5270	Ant1	2.34	0.19	2.53	11	Pass
NVNT	ax40	5310	Ant1	2.16	0.20	2.36	11	Pass
NVNT	ax80	5290	Ant1	-2.43	0.34	-2.09	11	Pass
NVNT	a	5500	Ant1	-1.29	0	-1.29	11	Pass
NVNT	a	5600	Ant1	0.13	0	0.13	11	Pass
NVNT	a	5700	Ant1	0.46	0	0.46	11	Pass
NVNT	n20	5500	Ant1	-1.34	0	-1.34	11	Pass
NVNT	n20	5600	Ant1	0.03	0	0.03	11	Pass


NVNT	n20	5700	Ant1	-1.44	0	-1.44	11	Pass
NVNT	n40	5510	Ant1	0.13	0.16	0.29	11	Pass
NVNT	n40	5590	Ant1	1.39	0.16	1.55	11	Pass
NVNT	n40	5670	Ant1	1.15	0.16	1.31	11	Pass
NVNT	ac20	5500	Ant1	-2.28	0	-2.28	11	Pass
NVNT	ac20	5600	Ant1	-1.06	0	-1.06	11	Pass
NVNT	ac20	5700	Ant1	-0.41	0	-0.41	11	Pass
NVNT	ac40	5510	Ant1	0.07	0.16	0.23	11	Pass
NVNT	ac40	5590	Ant1	1.48	0.15	1.63	11	Pass
NVNT	ac40	5670	Ant1	1.11	0.16	1.27	11	Pass
NVNT	ac80	5530	Ant1	-2.90	0.31	-2.59	11	Pass
NVNT	ac80	5610	Ant1	-2.66	0.30	-2.36	11	Pass
NVNT	ax20	5500	Ant1	-1.55	0.11	-1.44	11	Pass
NVNT	ax20	5600	Ant1	-0.19	0.10	-0.09	11	Pass
NVNT	ax20	5700	Ant1	0.07	0.11	0.18	11	Pass
NVNT	ax40	5510	Ant1	-3.22	0.20	-3.02	11	Pass
NVNT	ax40	5590	Ant1	-2.18	0.20	-1.98	11	Pass
NVNT	ax40	5670	Ant1	-3.04	0.19	-2.85	11	Pass
NVNT	ax80	5530	Ant1	-7.37	0.36	-7.01	11	Pass
NVNT	ax80	5610	Ant1	-1.29	0.34	-0.95	11	Pass
NVNT	a	5745	Ant1	-2.88	0	-2.88	30	Pass
NVNT	a	5785	Ant1	-2.98	0	-2.98	30	Pass
NVNT	a	5825	Ant1	-3.72	0	-3.72	30	Pass
NVNT	n20	5745	Ant1	-2.90	0	-2.90	30	Pass
NVNT	n20	5785	Ant1	-2.95	0	-2.95	30	Pass
NVNT	n20	5825	Ant1	-3.72	0	-3.72	30	Pass
NVNT	n40	5755	Ant1	-0.38	0.15	-0.23	30	Pass
NVNT	n40	5795	Ant1	-0.29	0.15	-0.14	30	Pass
NVNT	ac20	5745	Ant1	-3.18	0	-3.18	30	Pass
NVNT	ac20	5785	Ant1	-3.32	0	-3.32	30	Pass
NVNT	ac20	5825	Ant1	-4.05	0	-4.05	30	Pass
NVNT	ac40	5755	Ant1	-0.34	0.15	-0.19	30	Pass
NVNT	ac40	5795	Ant1	-0.37	0.15	-0.22	30	Pass
NVNT	ac80	5775	Ant1	-3.72	0.30	-3.42	30	Pass
NVNT	ax20	5745	Ant1	-2.59	0.10	-2.49	30	Pass
NVNT	ax20	5785	Ant1	-2.83	0.10	-2.73	30	Pass
NVNT	ax20	5825	Ant1	-3.47	0.10	-3.37	30	Pass
NVNT	ax40	5755	Ant1	-4.47	0.20	-4.27	30	Pass
NVNT	ax40	5795	Ant1	-4.63	0.20	-4.43	30	Pass
NVNT	ax80	5775	Ant1	-8.27	0.34	-7.93	30	Pass

Test Graphs


PSD NVNT a 5180MHz Ant1

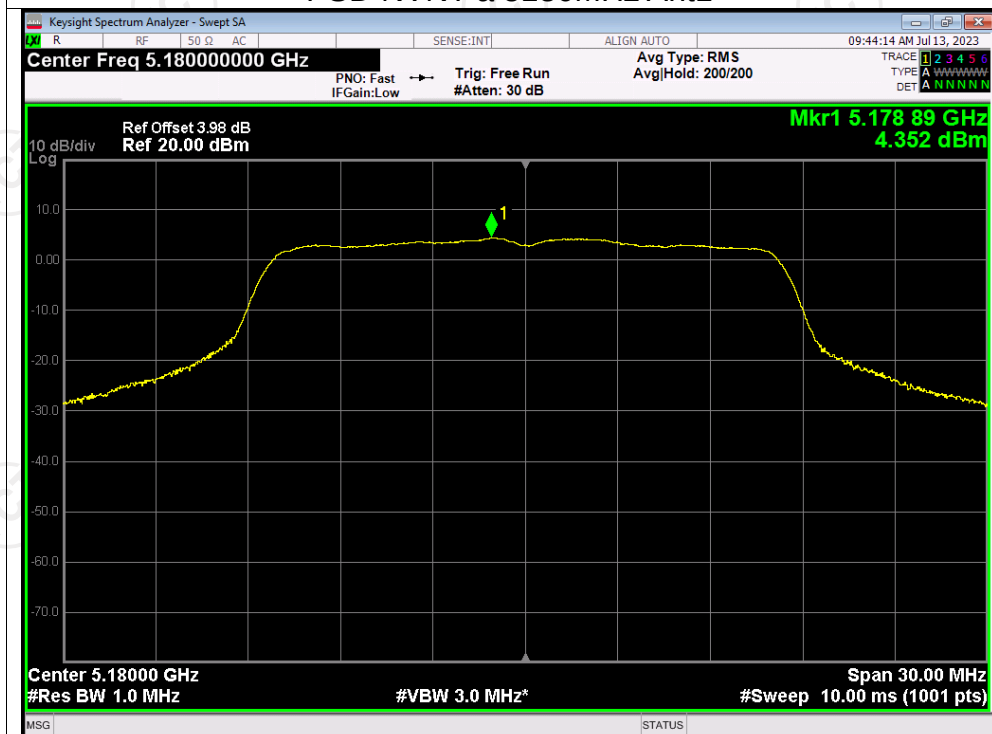


PSD NVNT a 5200MHz Ant1

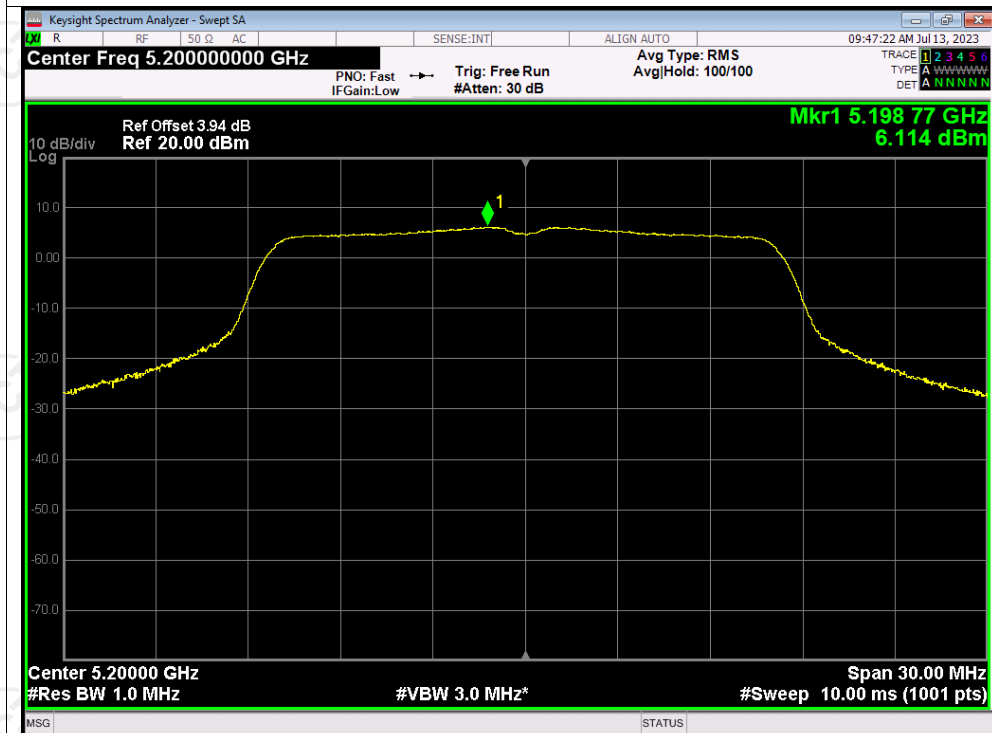


PSD NVNT a 5240MHz Ant1

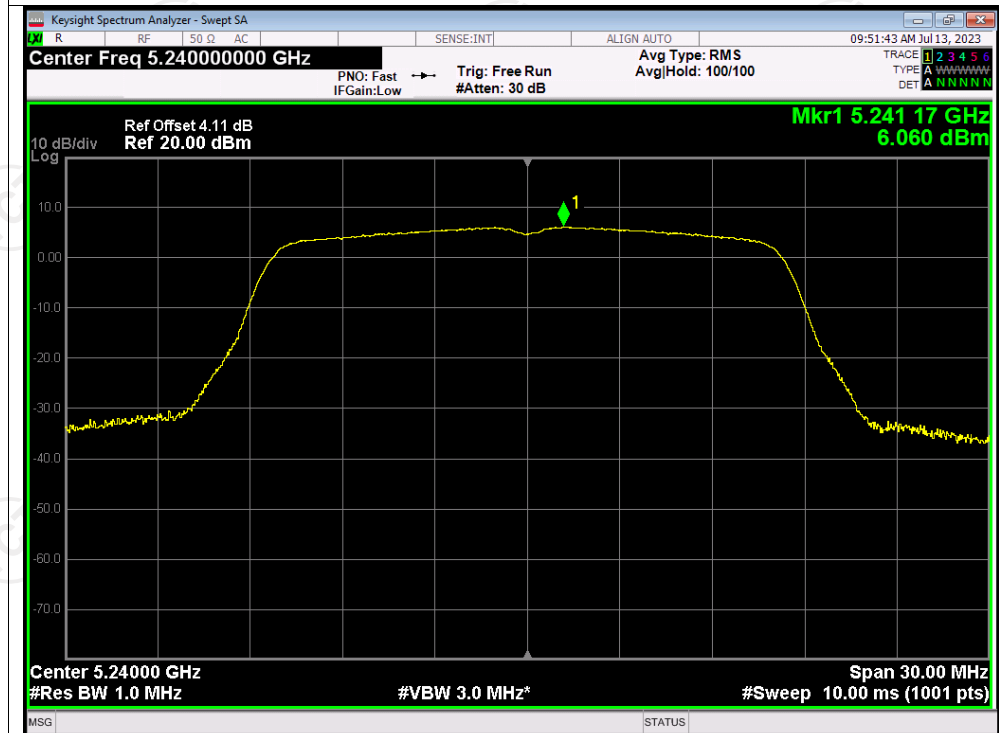


PSD NVNT n20 5180MHz Ant1

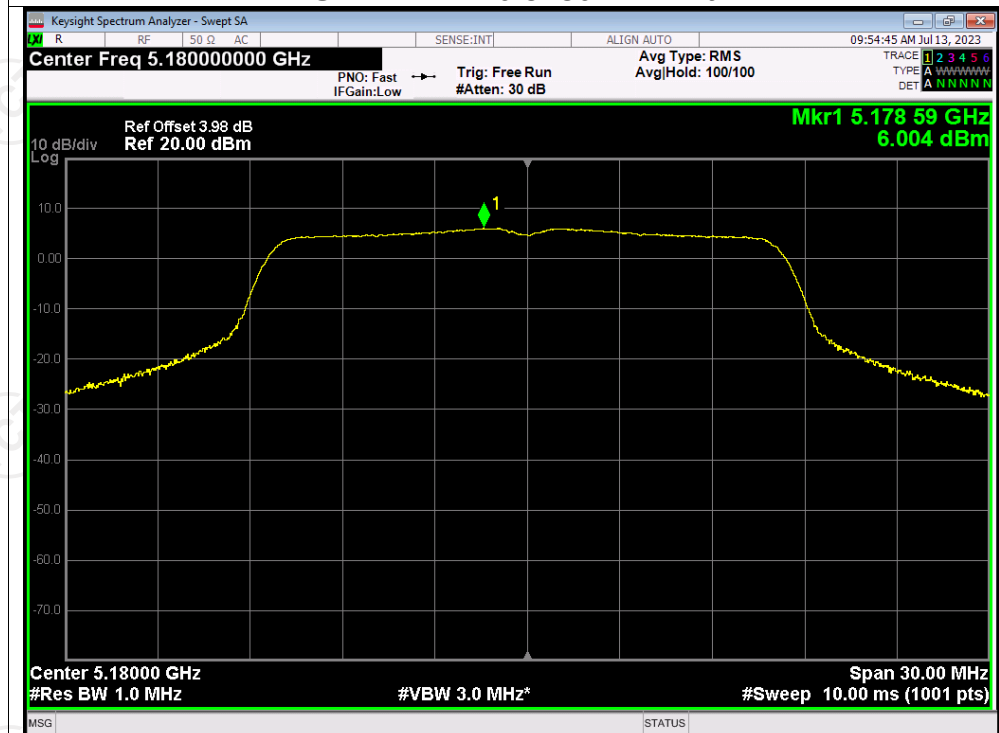


PSD NVNT n20 5200MHz Ant1

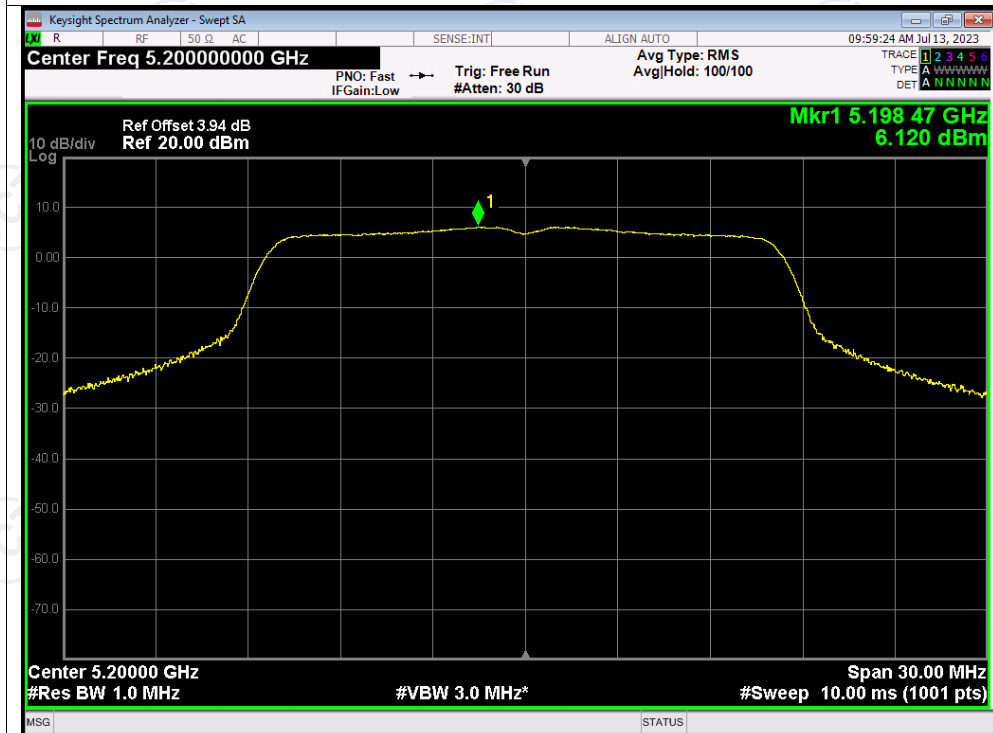


PSD NVNT n20 5240MHz Ant1

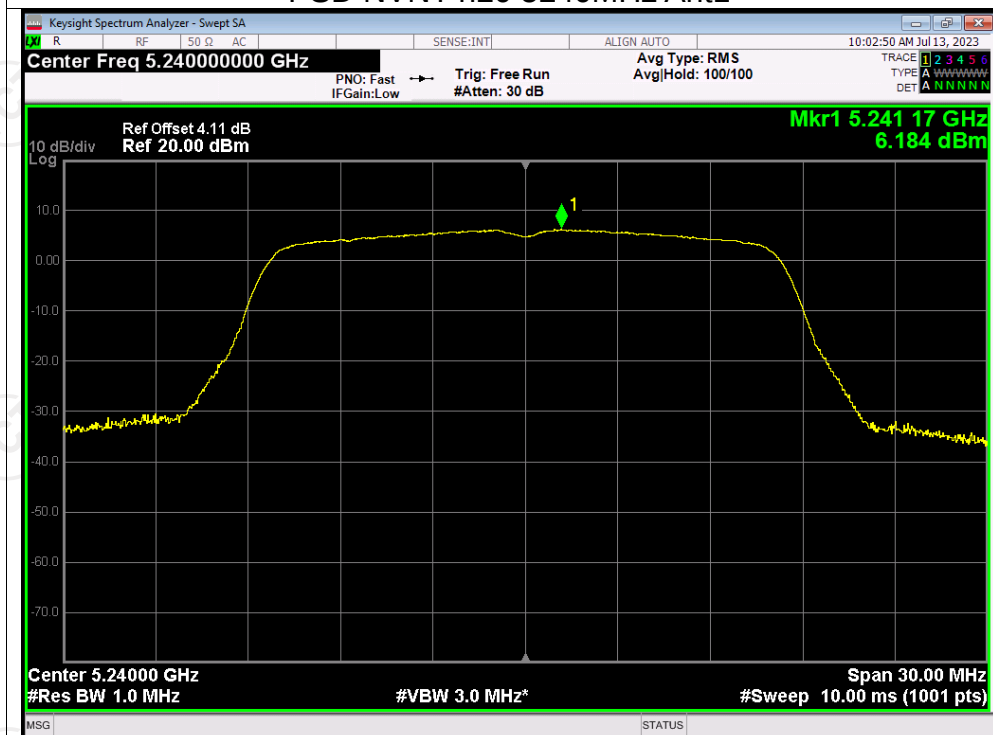


PSD NVNT n40 5190MHz Ant1

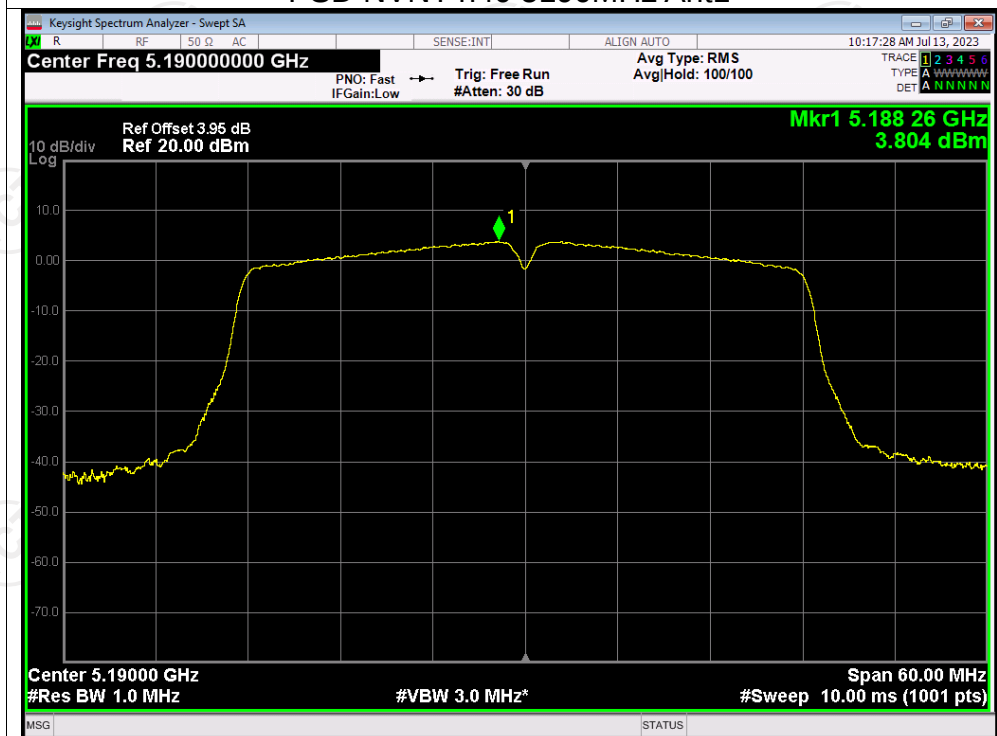


PSD NVNT n40 5230MHz Ant1

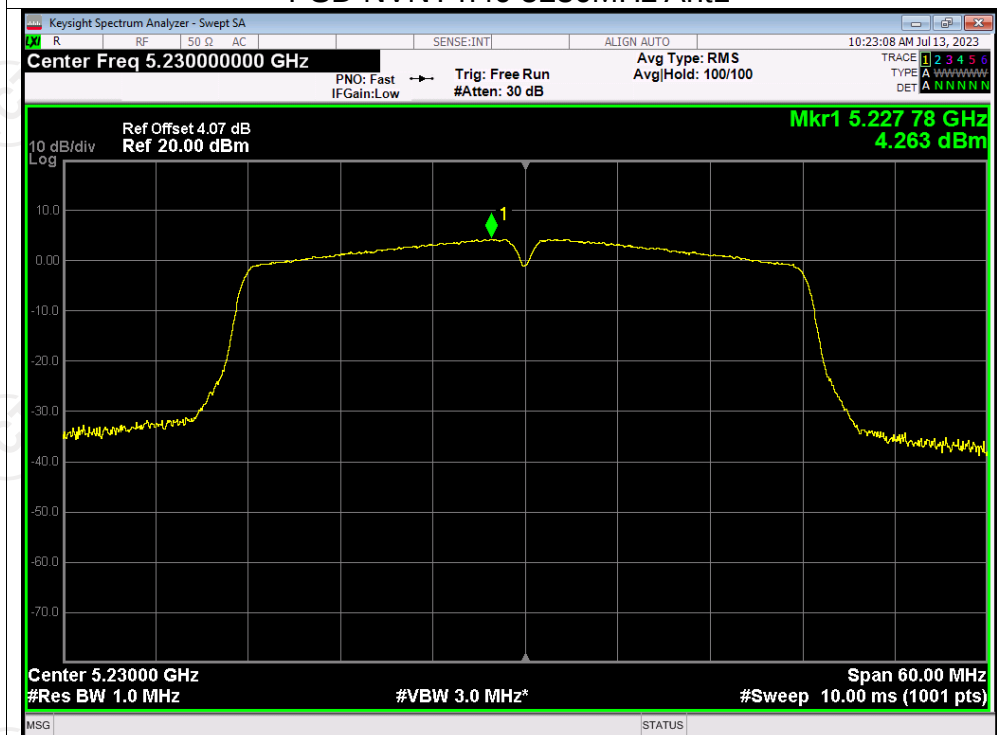


PSD NVNT ac20 5180MHz Ant1

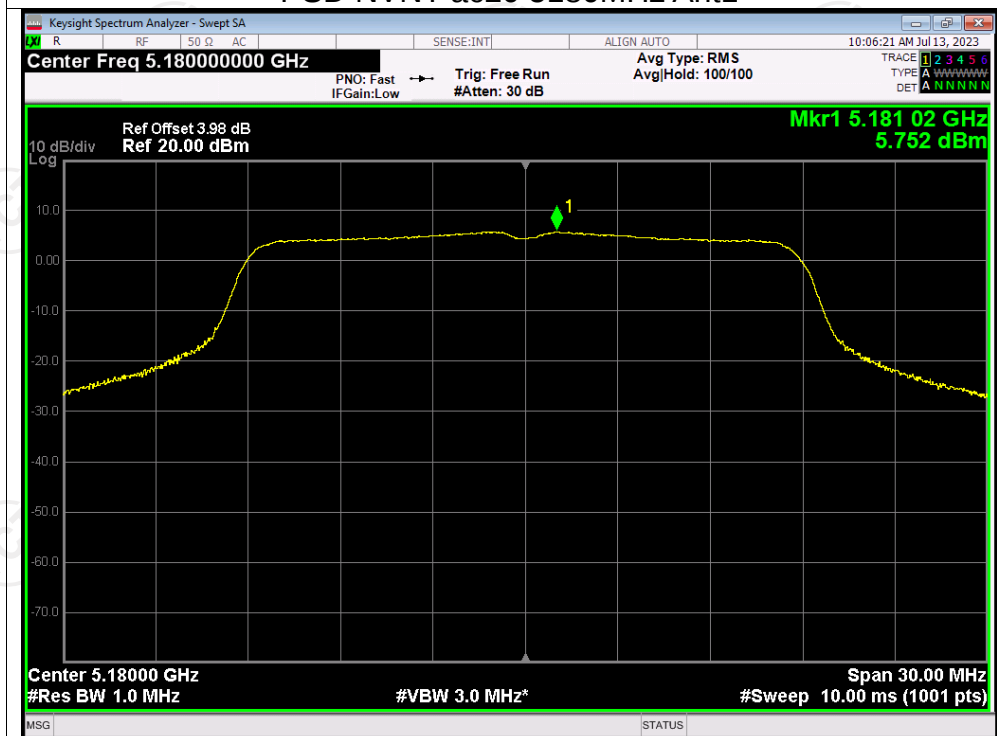


PSD NVNT ac20 5200MHz Ant1

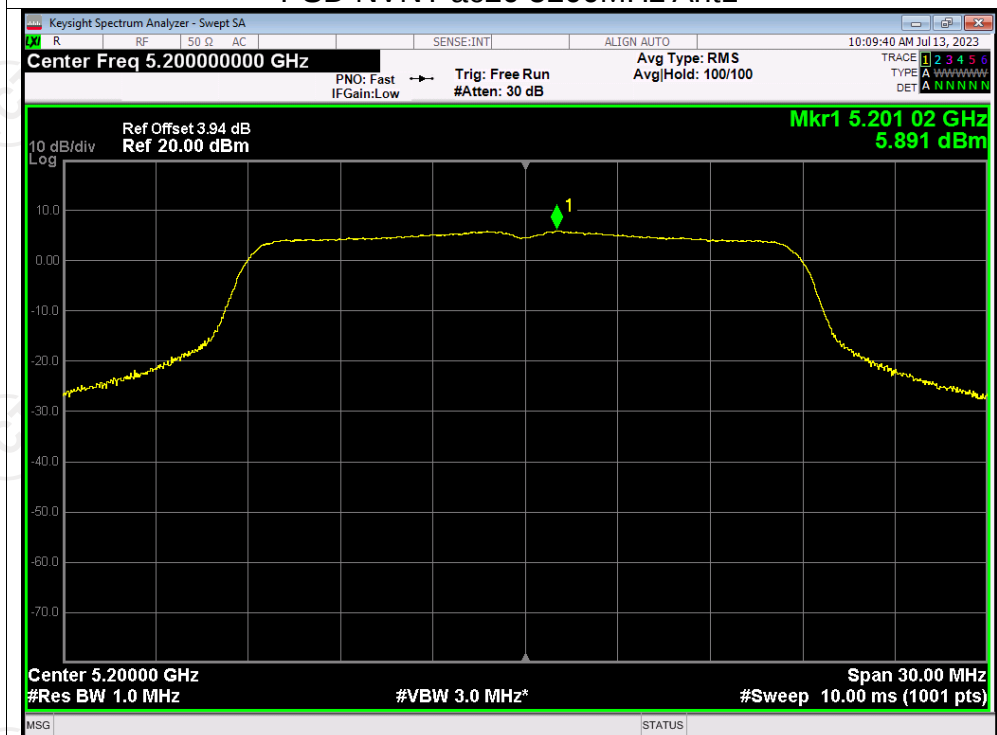


PSD NVNT ac20 5240MHz Ant1

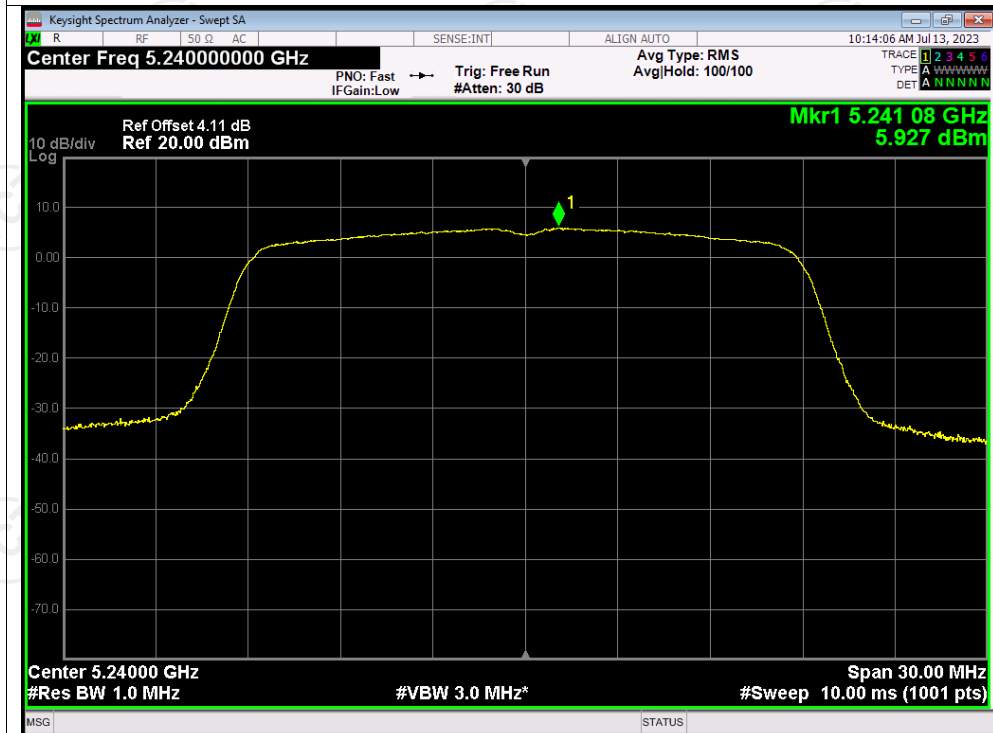


PSD NVNT ac40 5190MHz Ant1

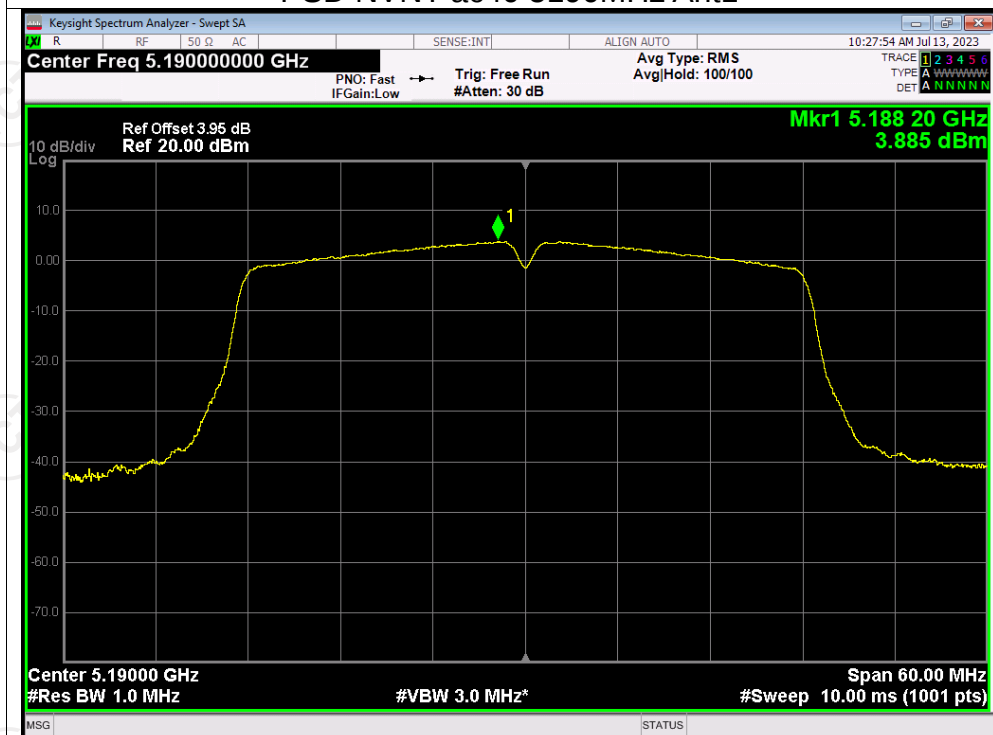


PSD NVNT ac40 5230MHz Ant1

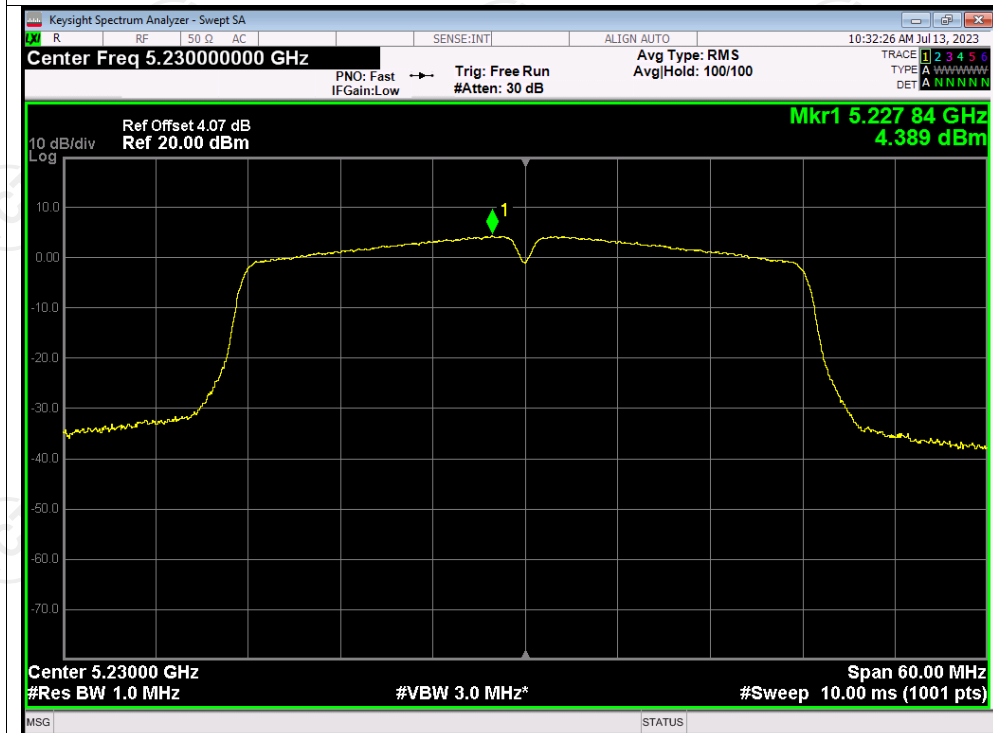


PSD NVNT ac80 5210MHz Ant1

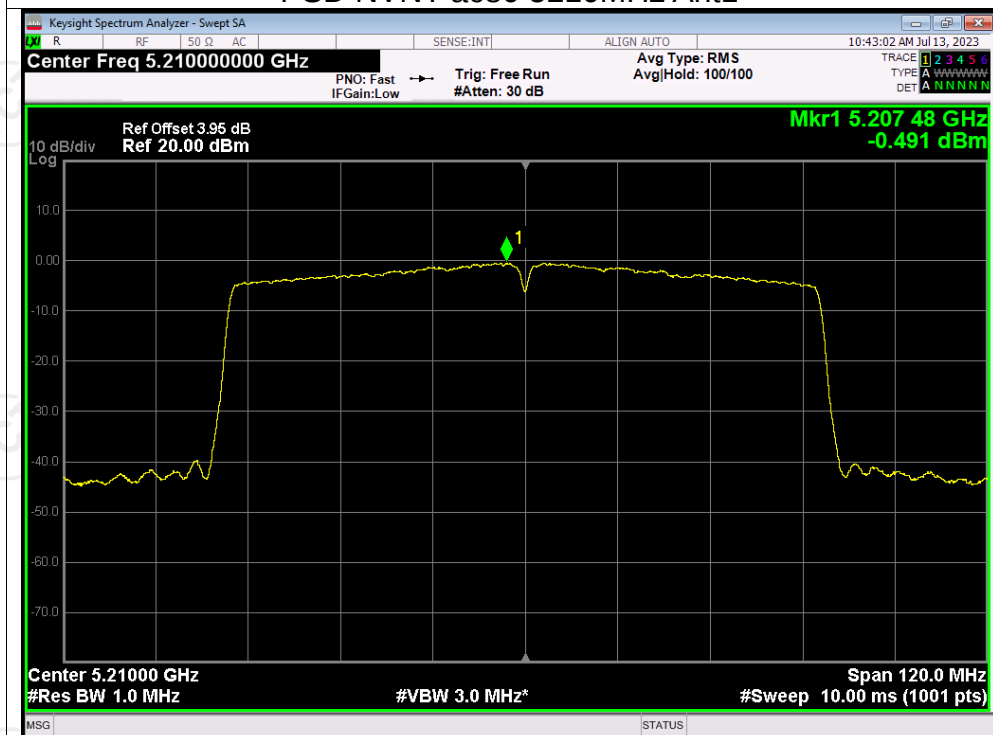


PSD NVNT ax20 5180MHz Ant1

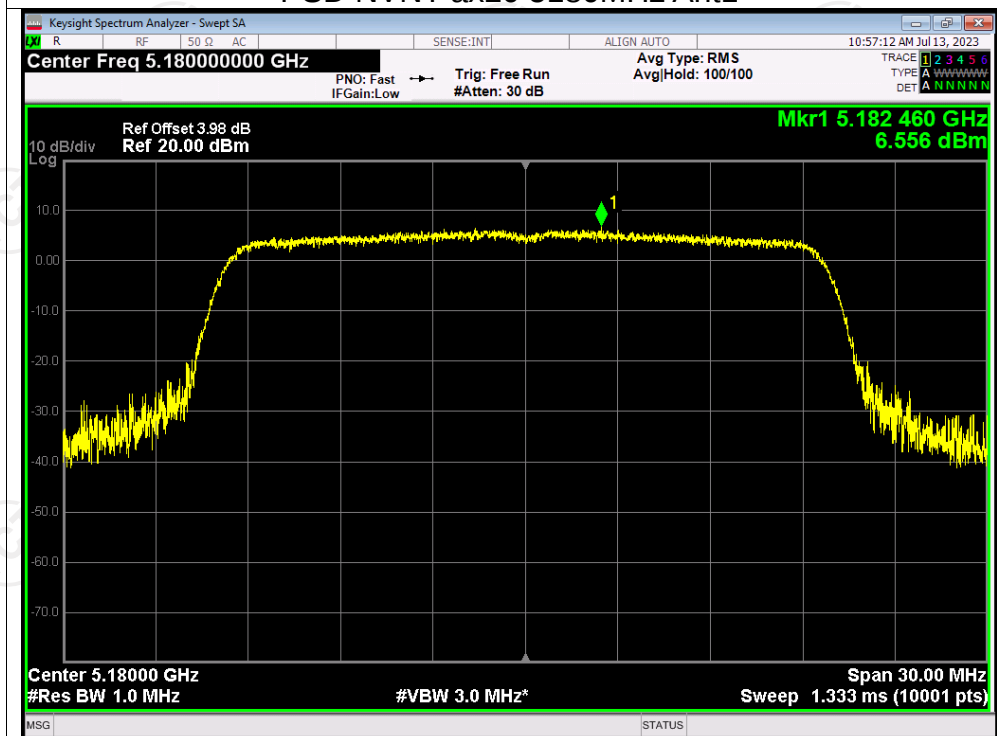


PSD NVNT ax20 5200MHz Ant1

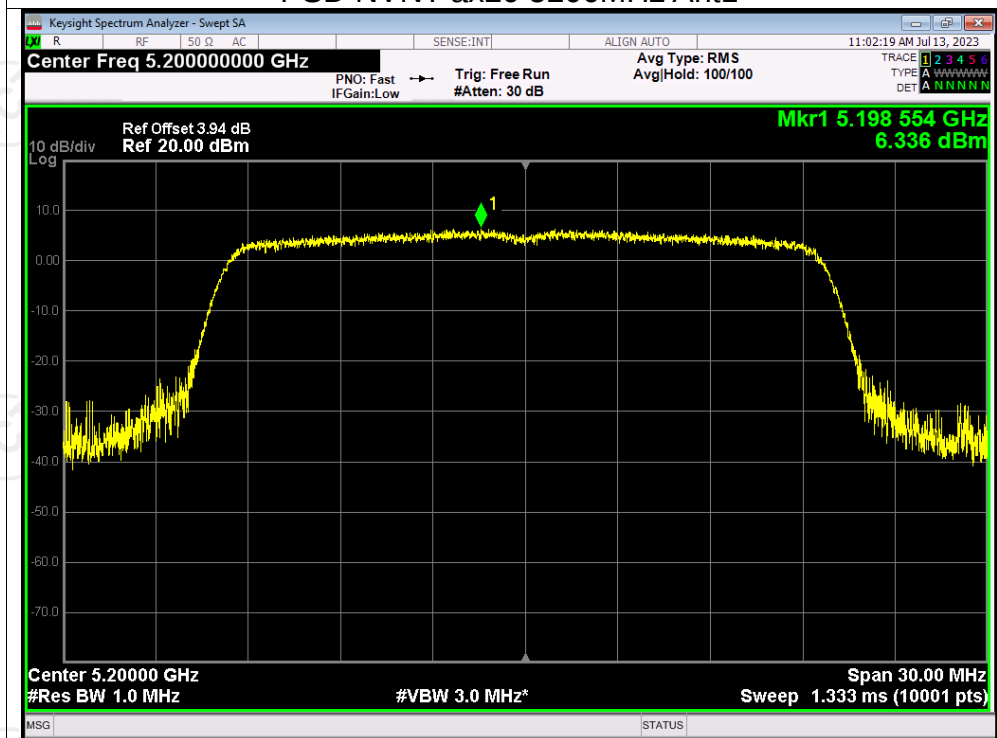


PSD NVNT ax20 5240MHz Ant1

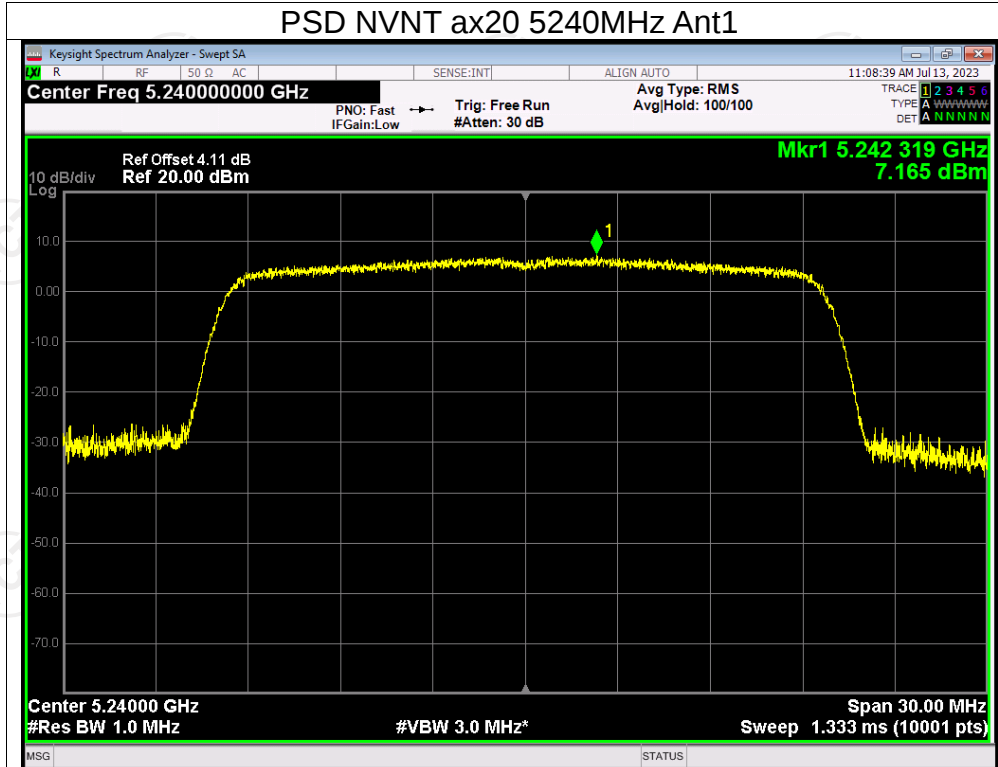


PSD NVNT ax40 5190MHz Ant1

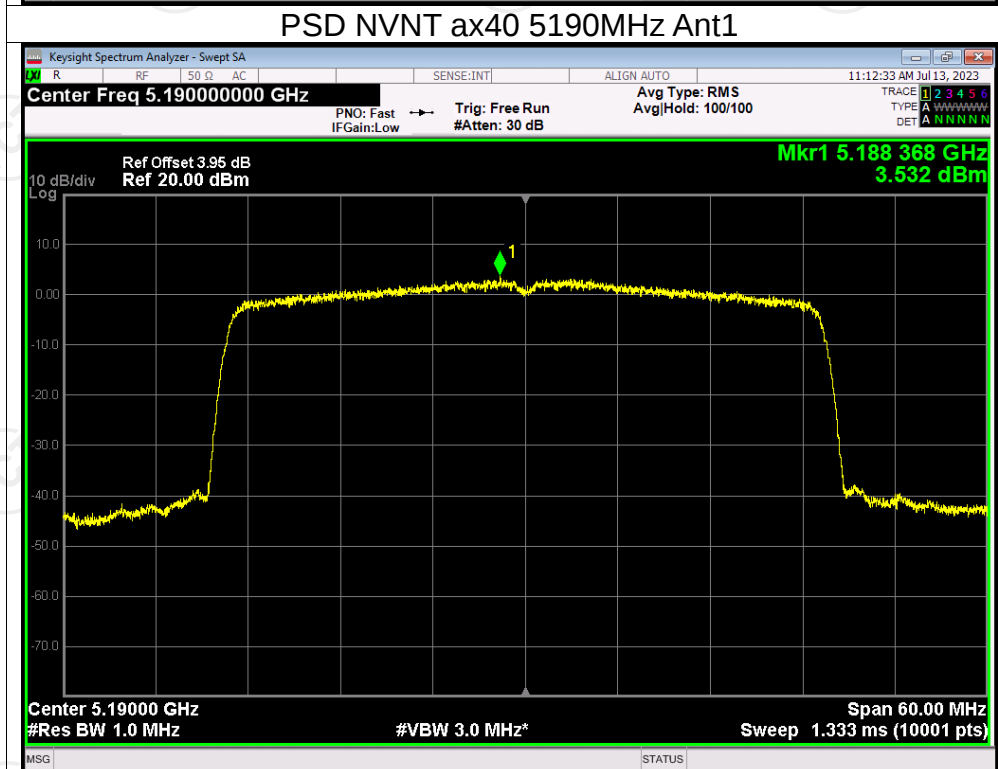

PSD NVNT ax40 5230MHz Ant1

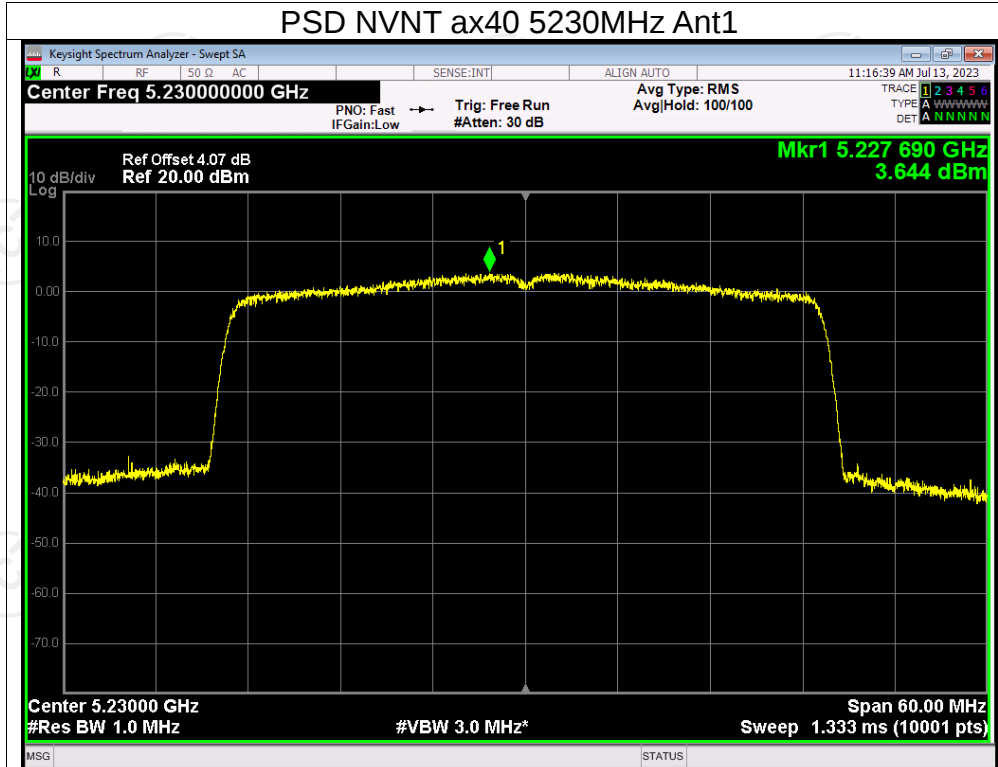


PSD NVNT ax80 5210MHz Ant1

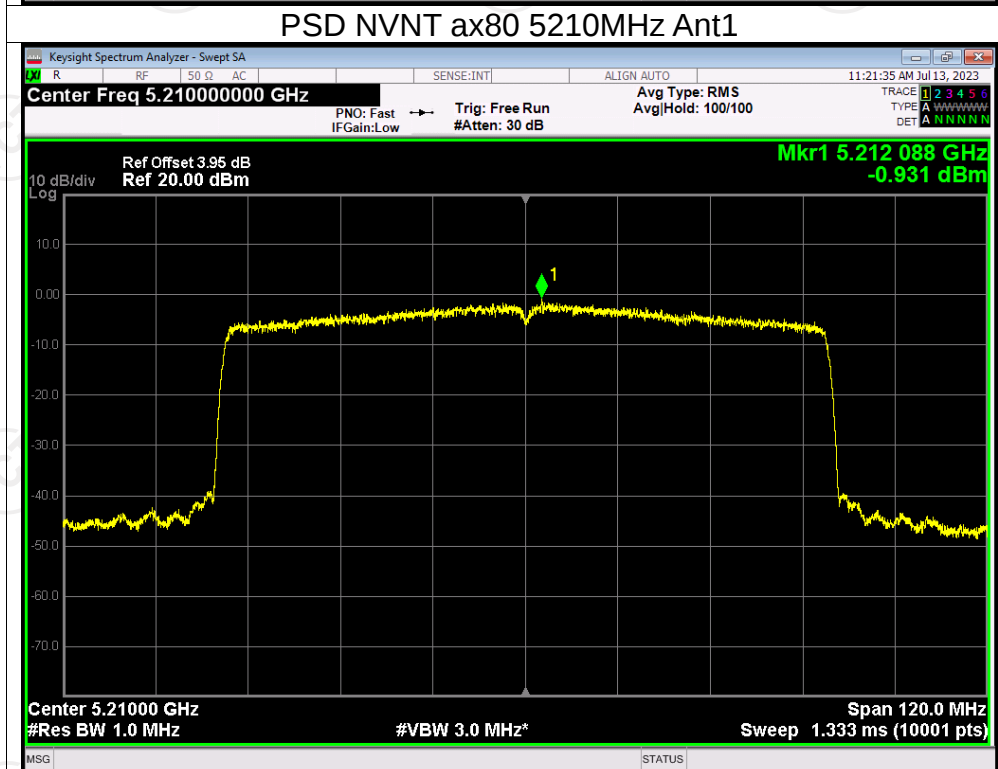


Test Graphs


PSD NVNT a 5260MHz Ant1

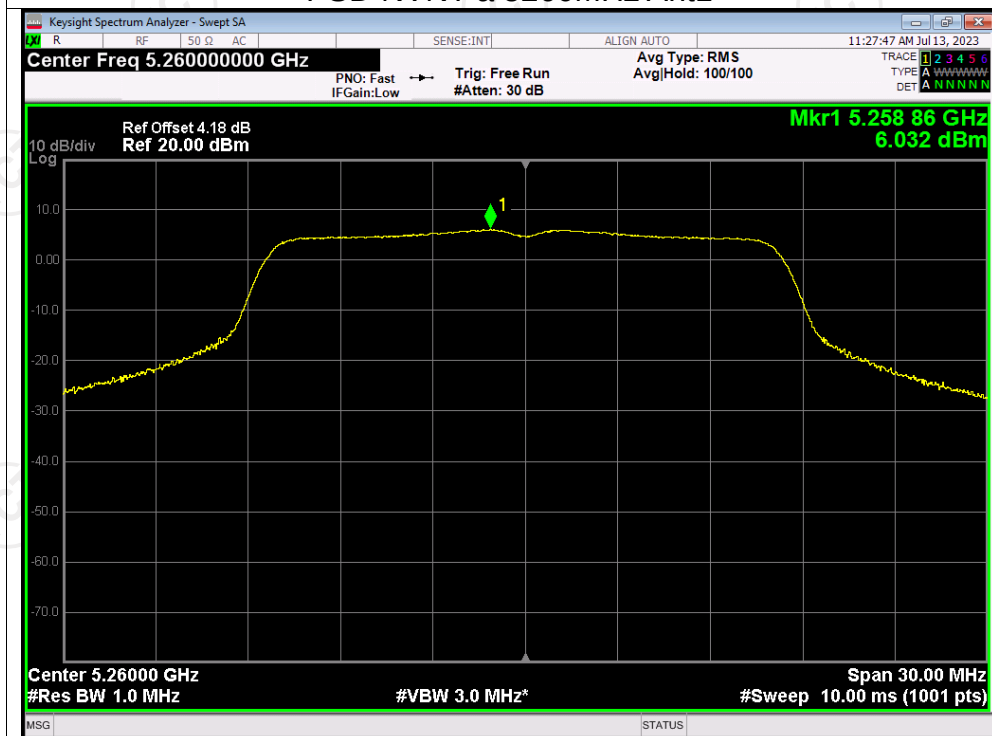


PSD NVNT a 5300MHz Ant1

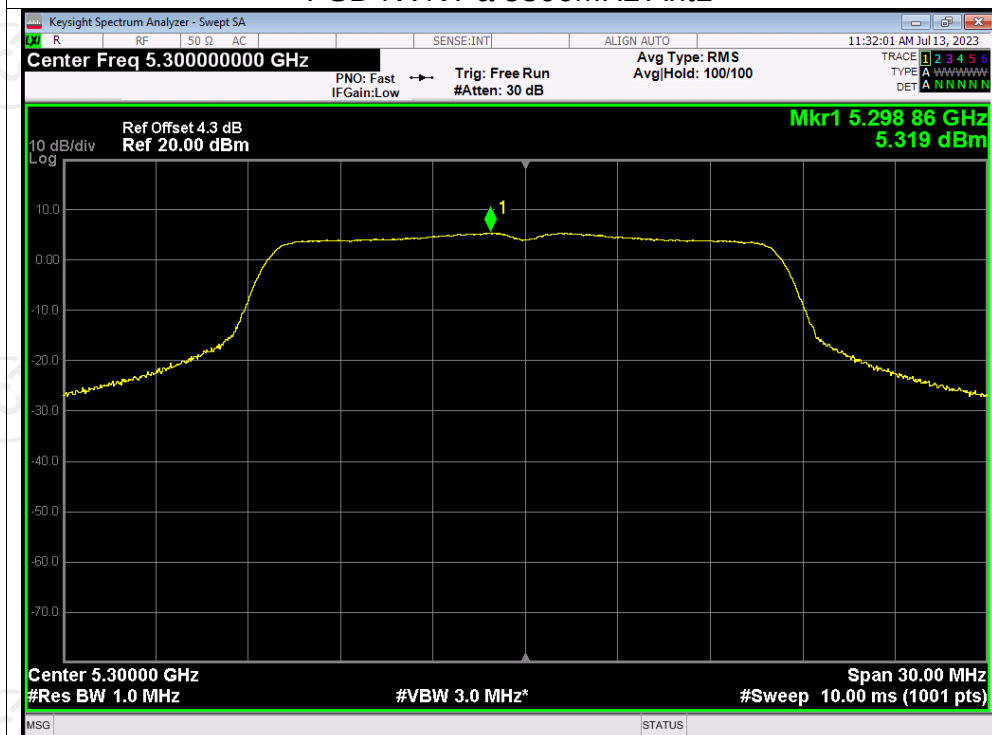


PSD NVNT a 5320MHz Ant1

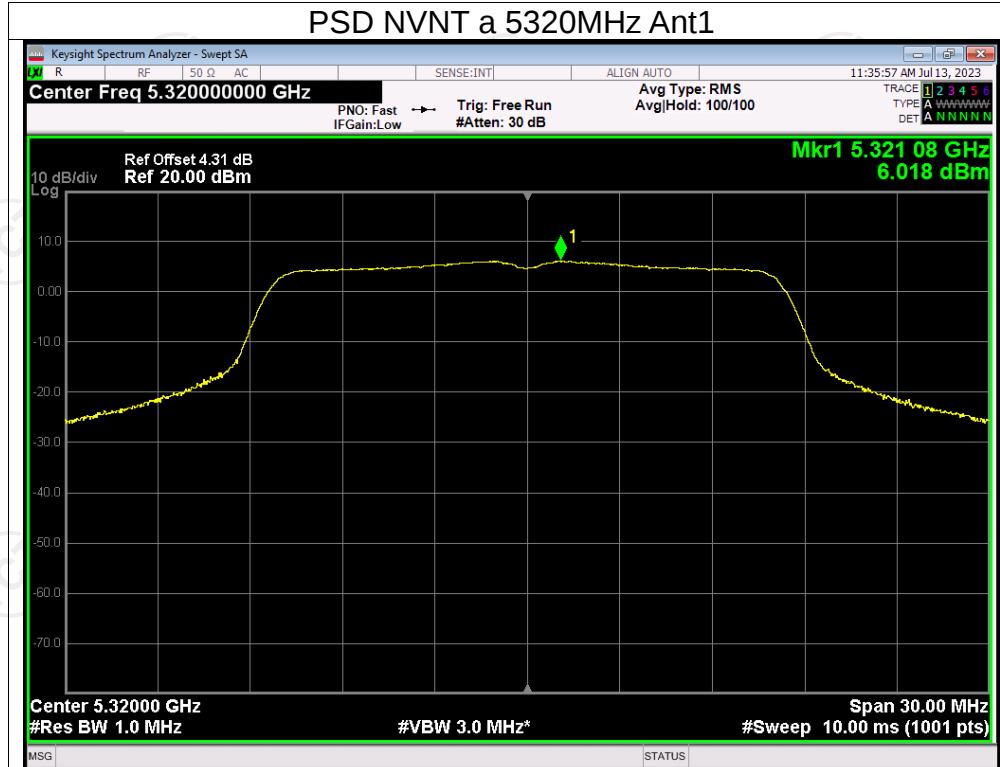


PSD NVNT n20 5260MHz Ant1

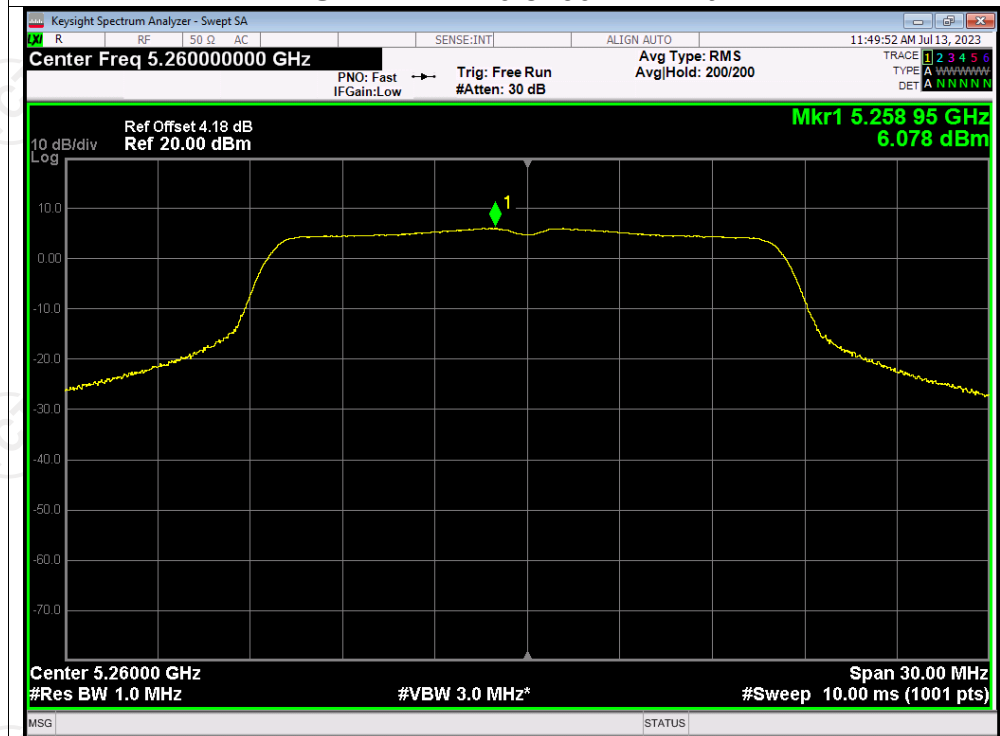


PSD NVNT n20 5300MHz Ant1

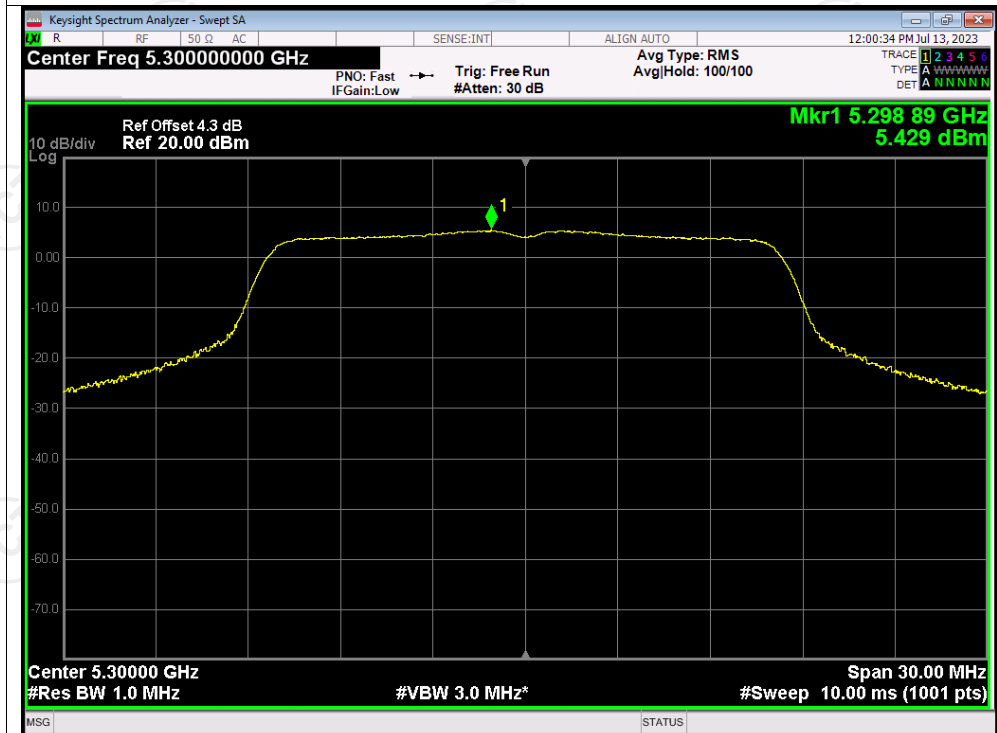


PSD NVNT n20 5320MHz Ant1


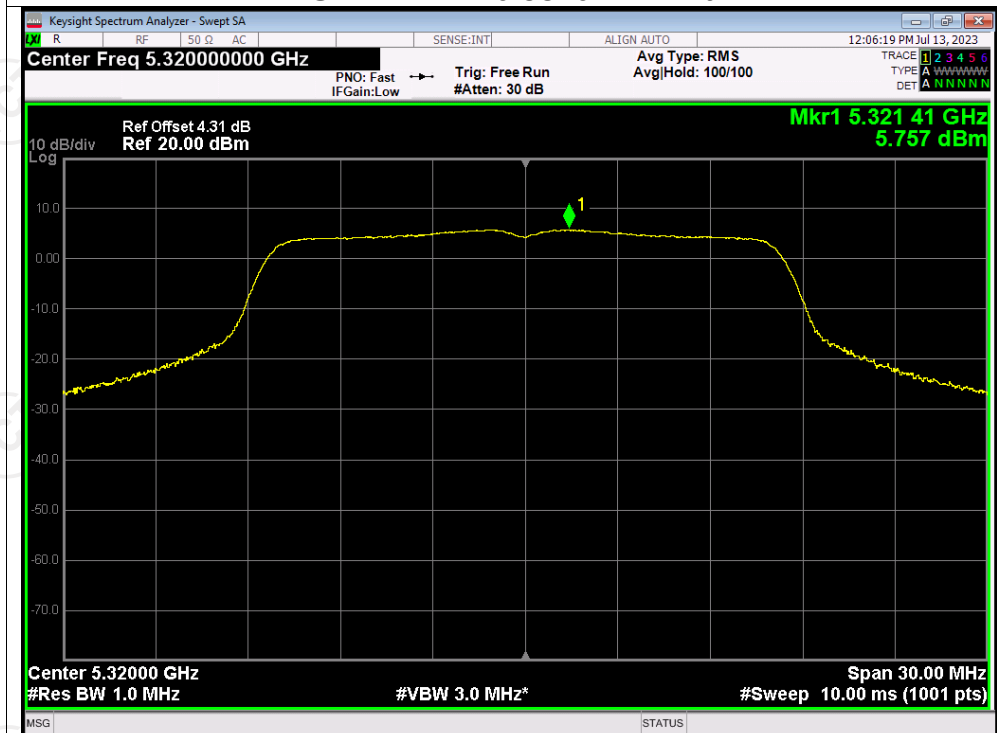


PSD NVNT n40 5270MHz Ant1

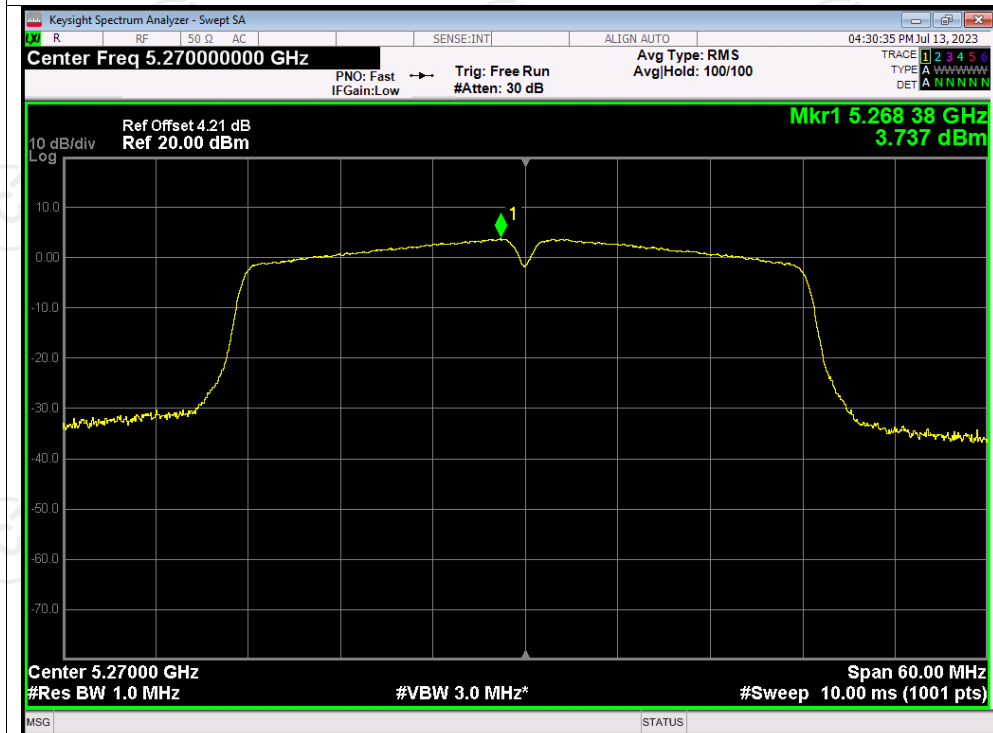


PSD NVNT n40 5310MHz Ant1

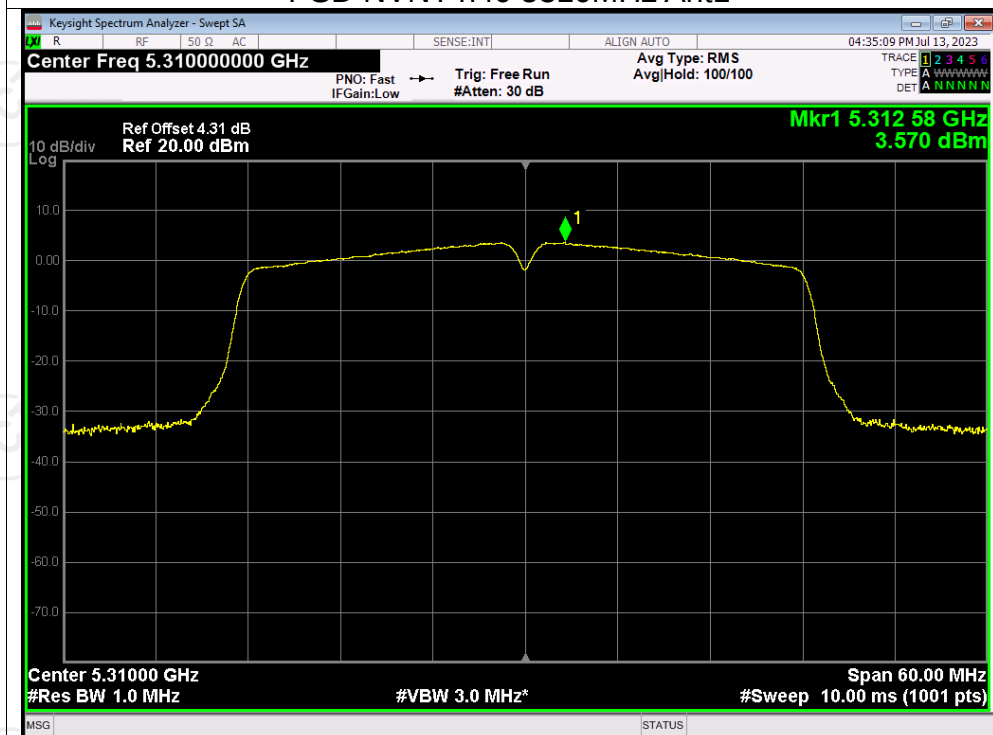


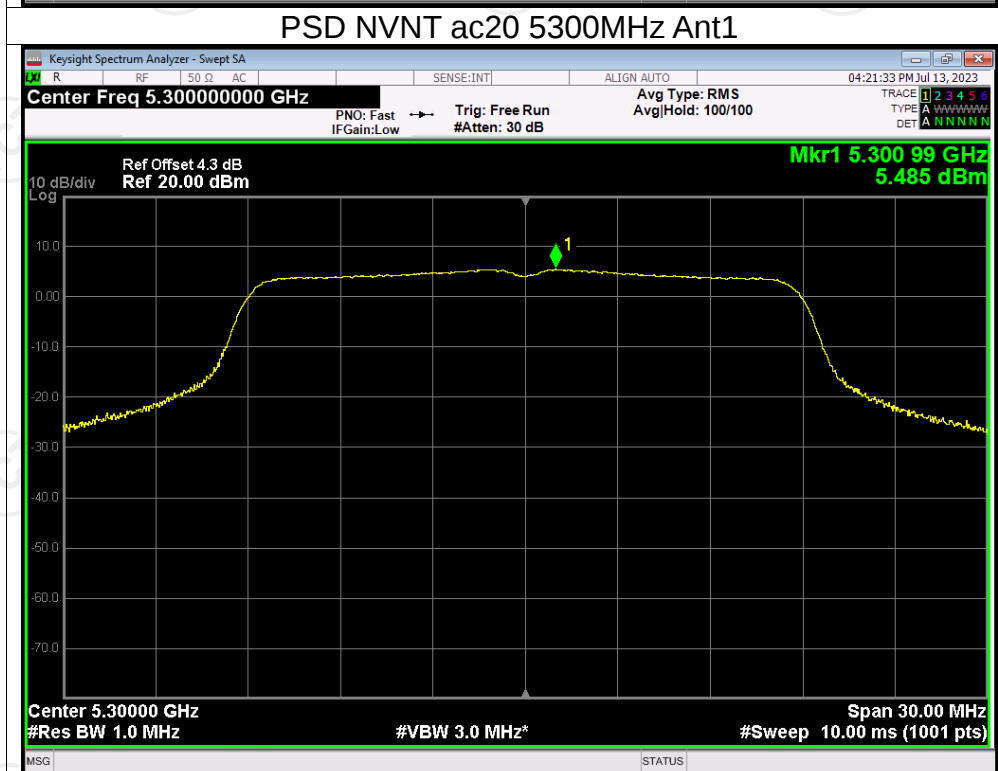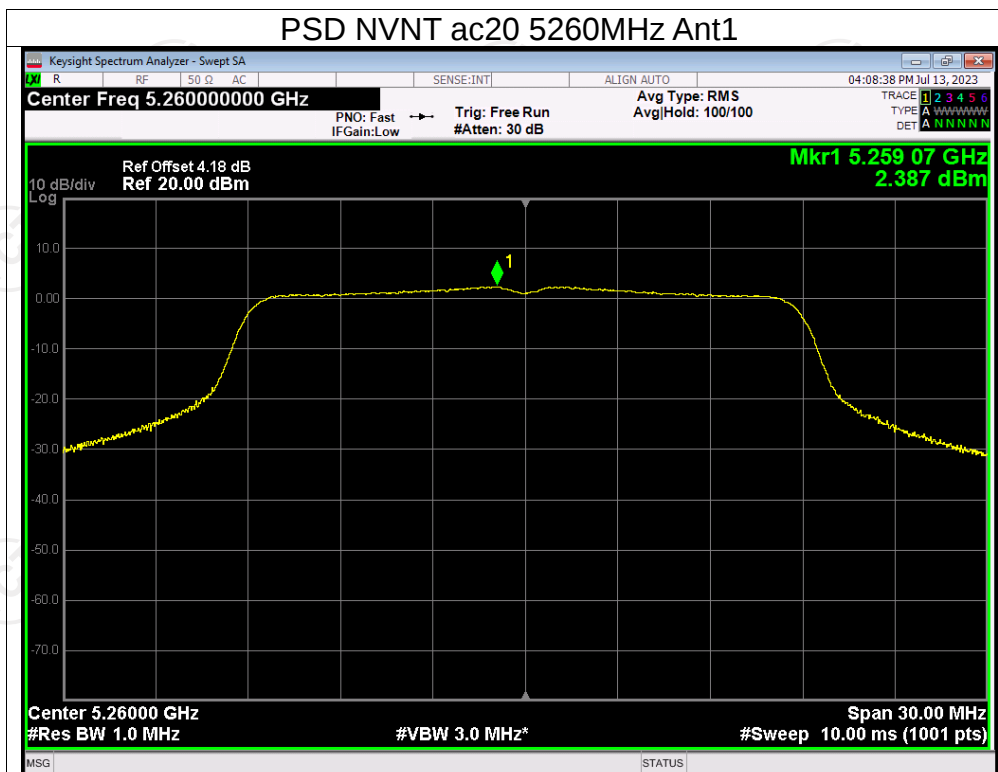


PSD NVNT ac20 5320MHz Ant1

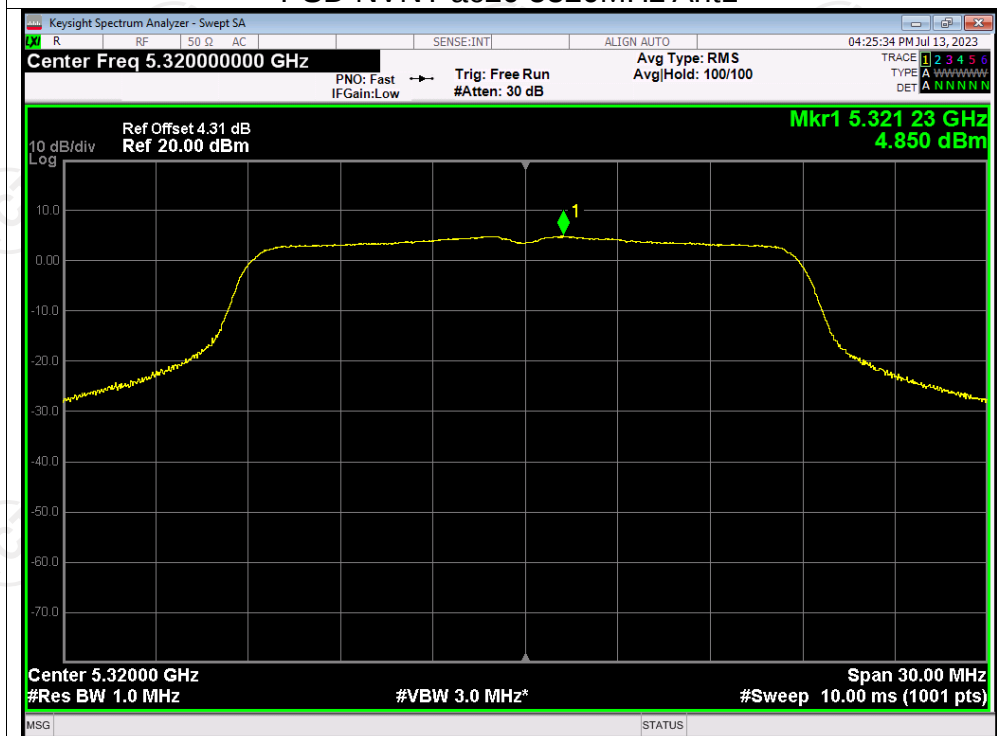


PSD NVNT ac40 5270MHz Ant1


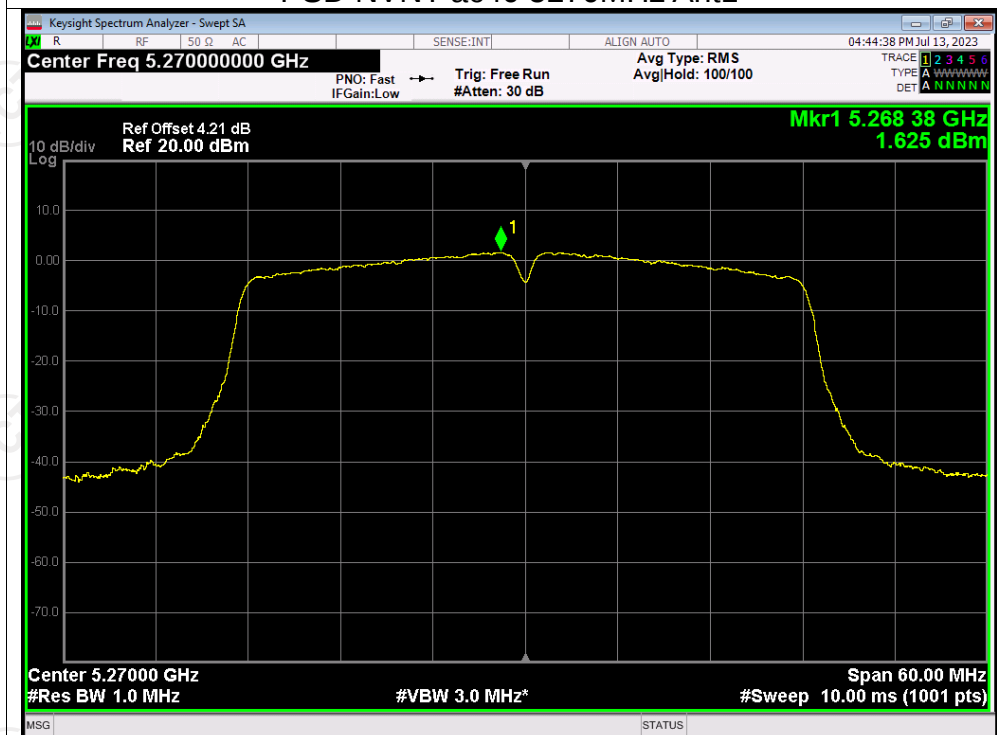


PSD NVNT ac40 5310MHz Ant1

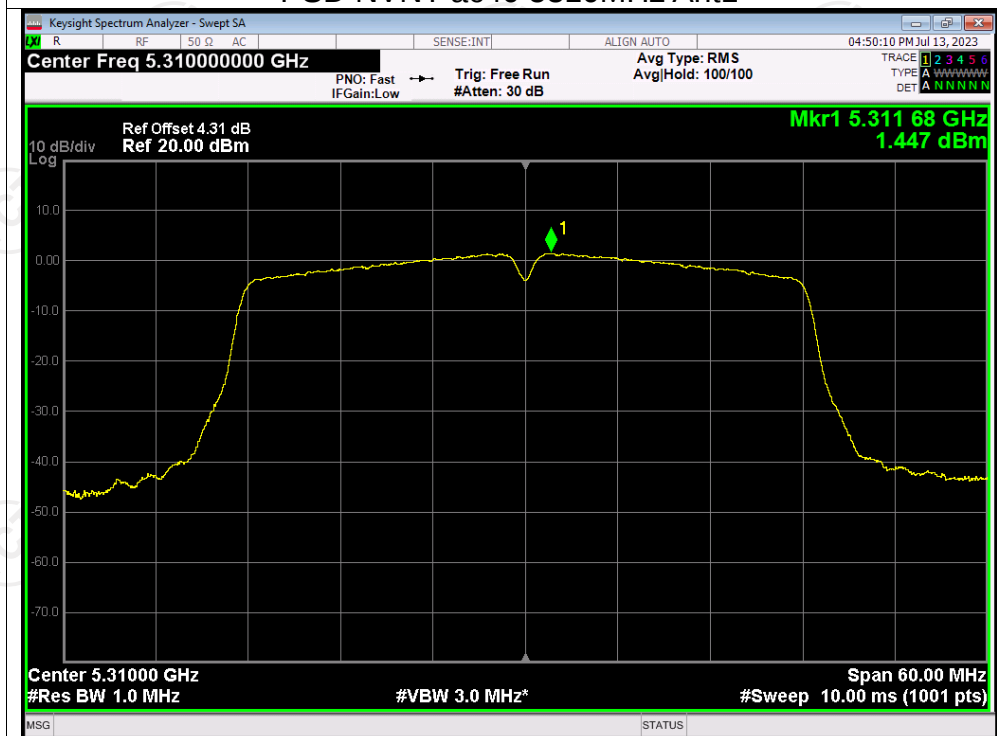


PSD NVNT ac80 5290MHz Ant1

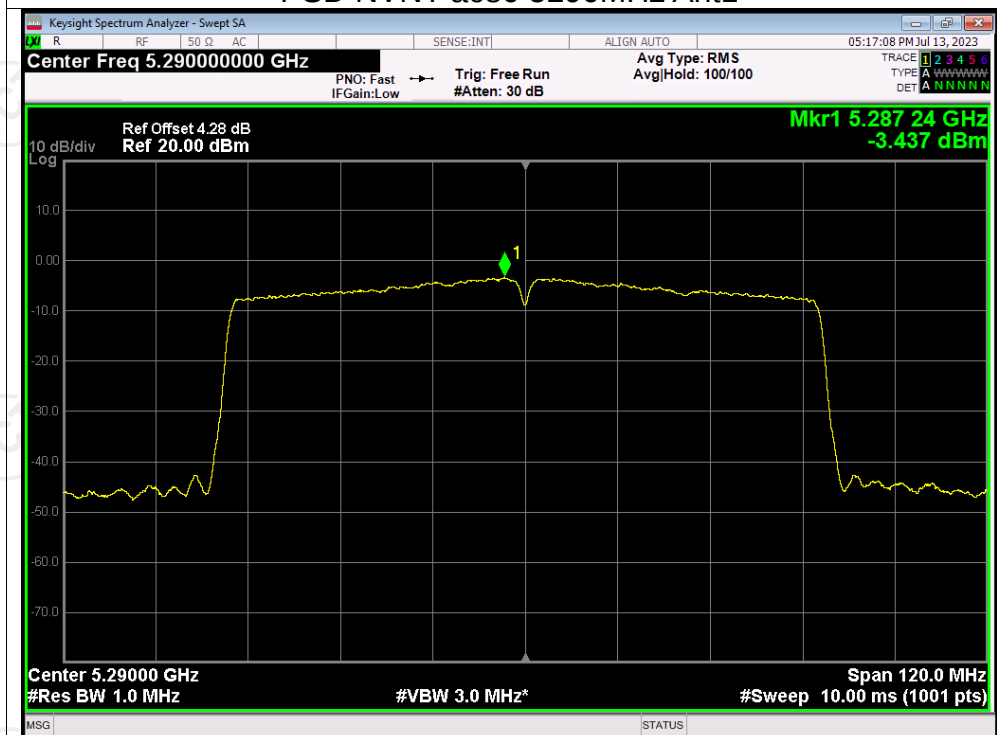


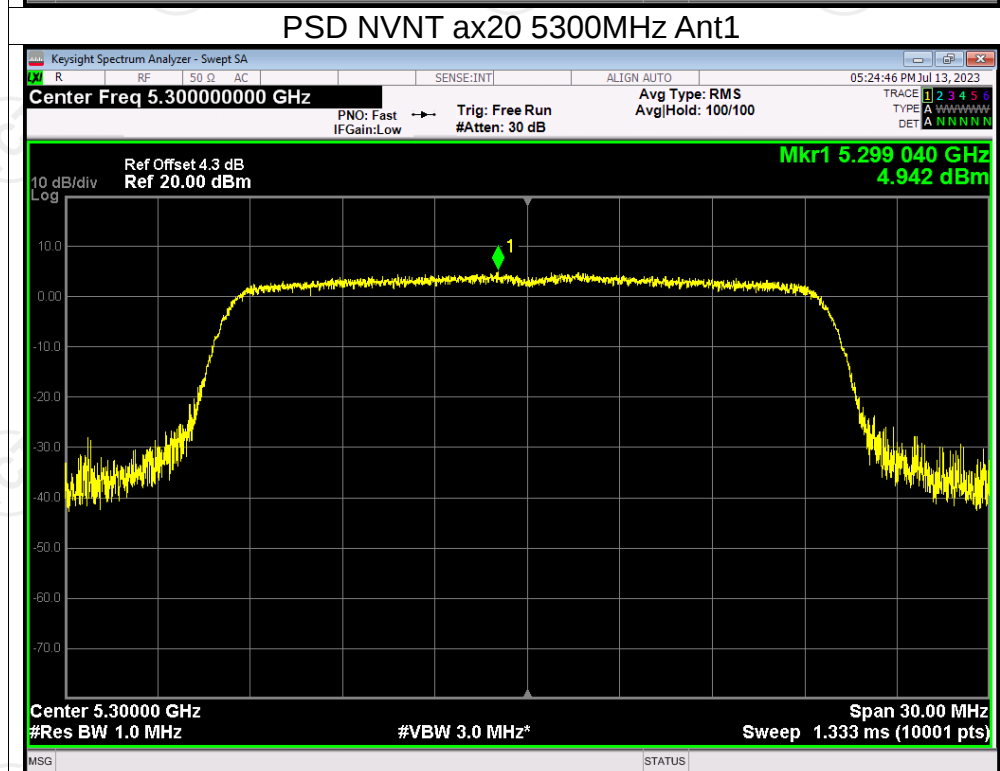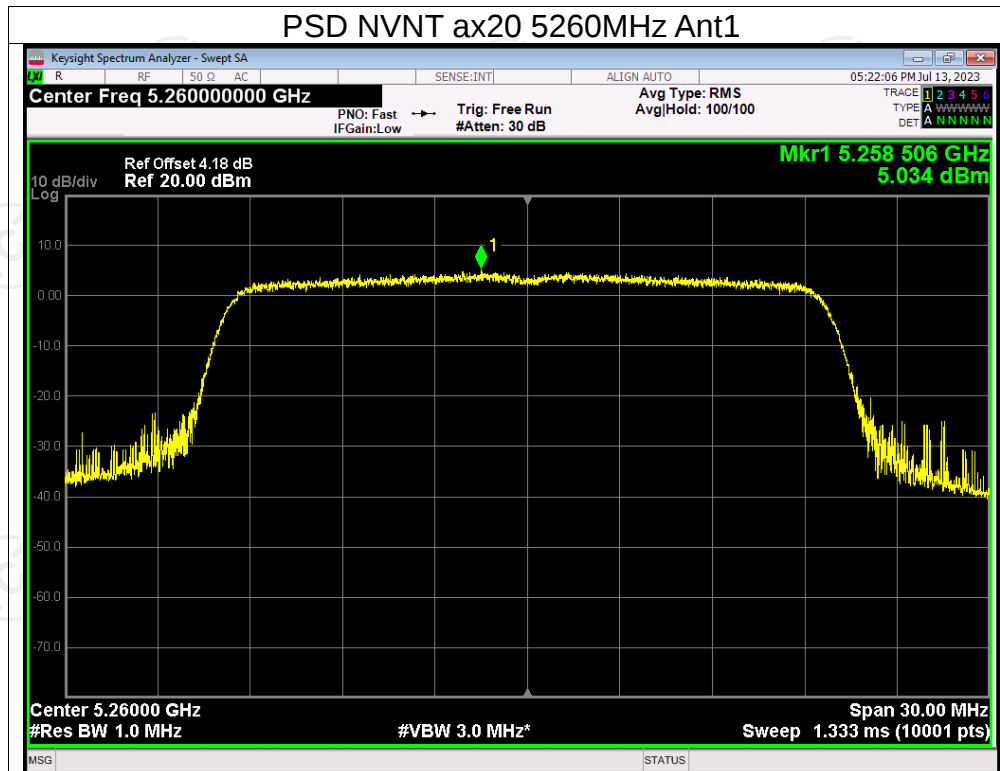


PSD NVNT ax20 5320MHz Ant1

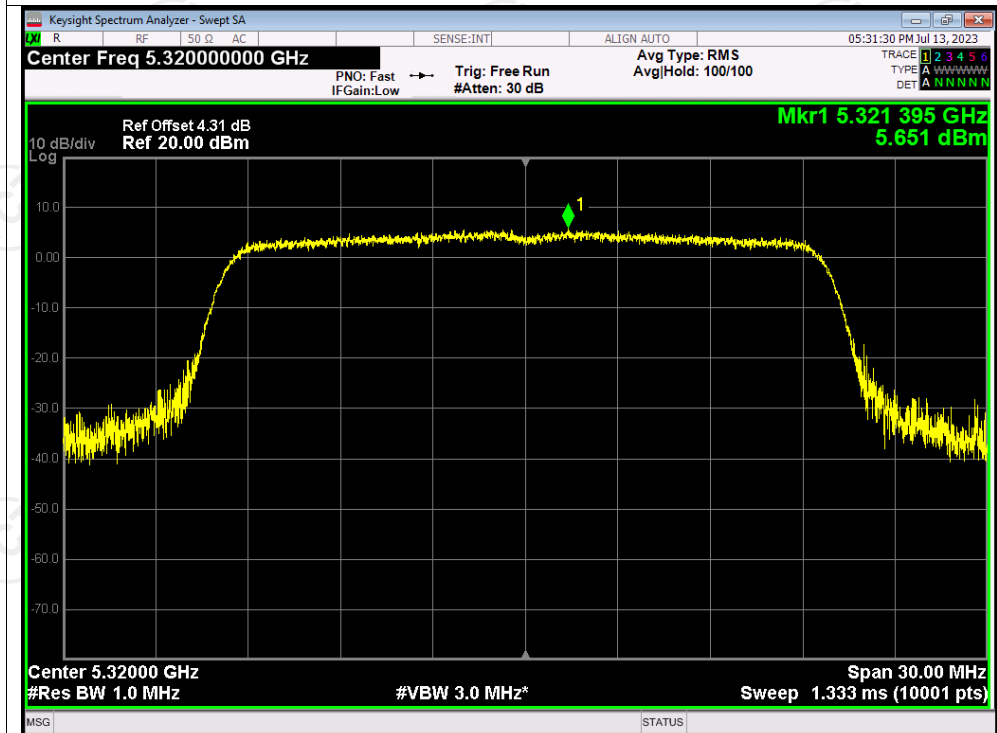


PSD NVNT ax40 5270MHz Ant1

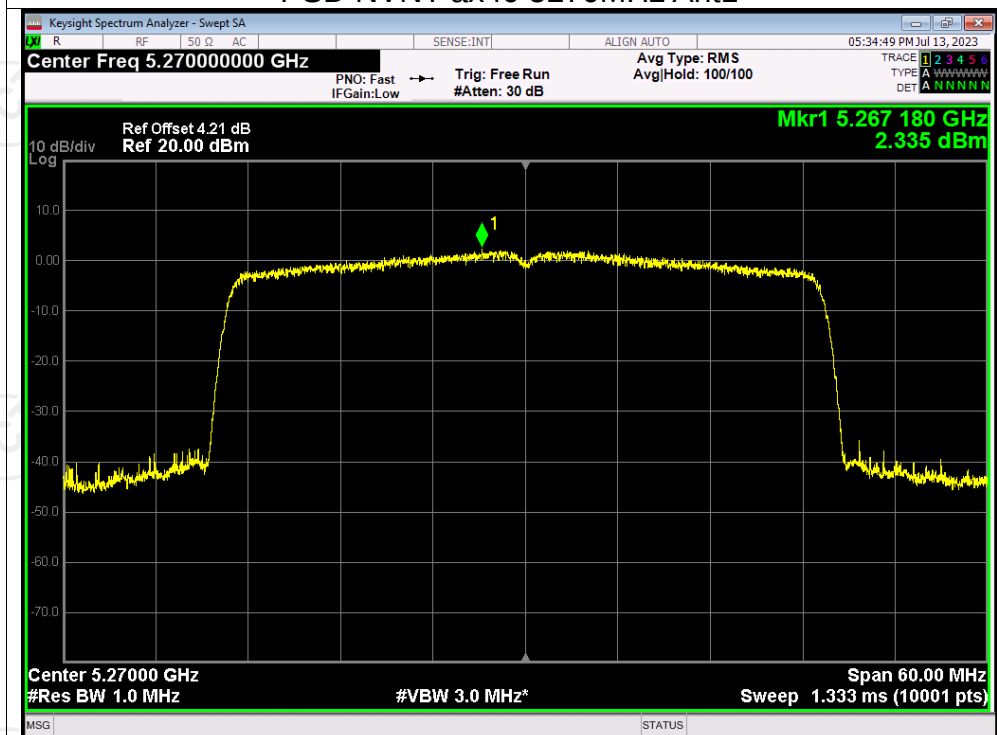

PSD NVNT ax40 5310MHz Ant1

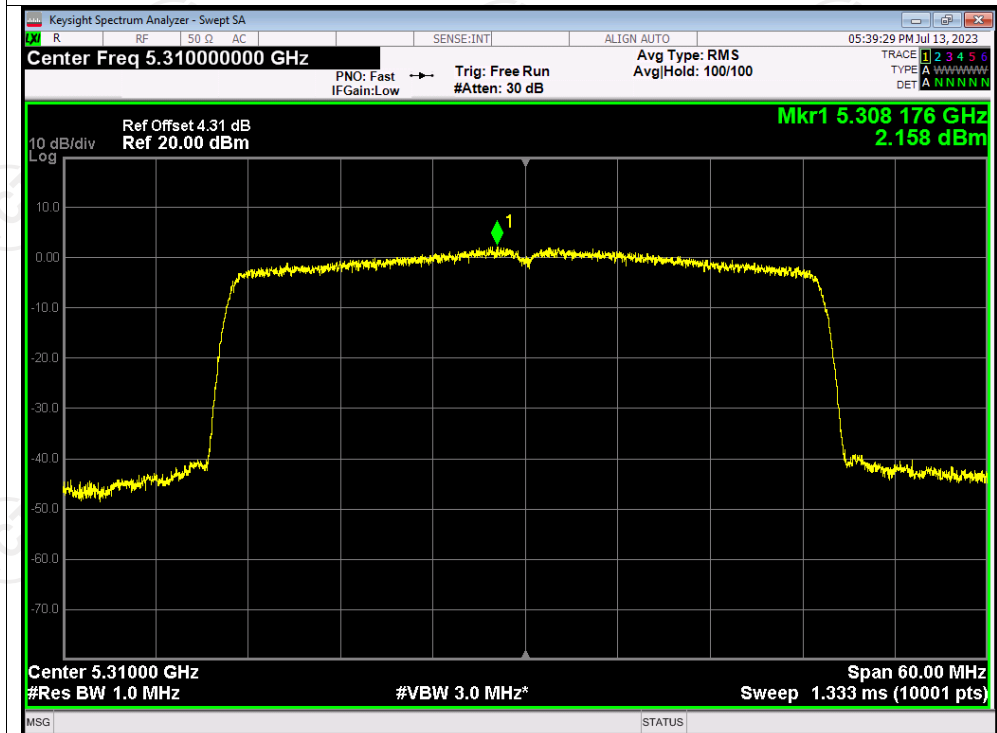


PSD NVNT ax80 5290MHz Ant1

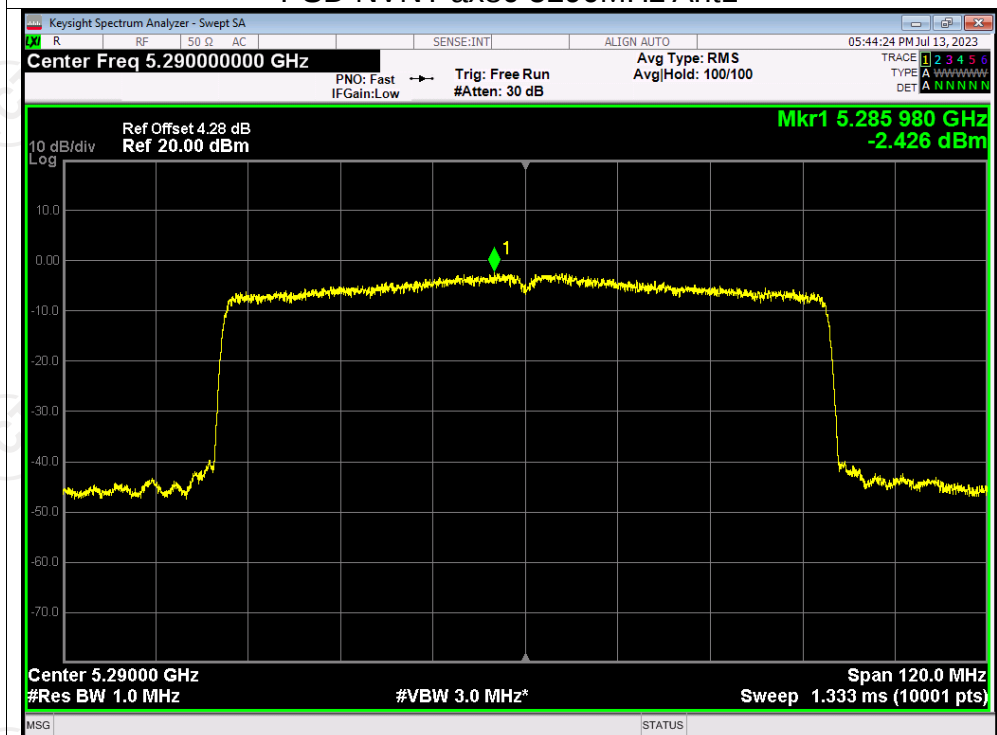


Test Graphs


PSD NVNT a 5500MHz Ant1

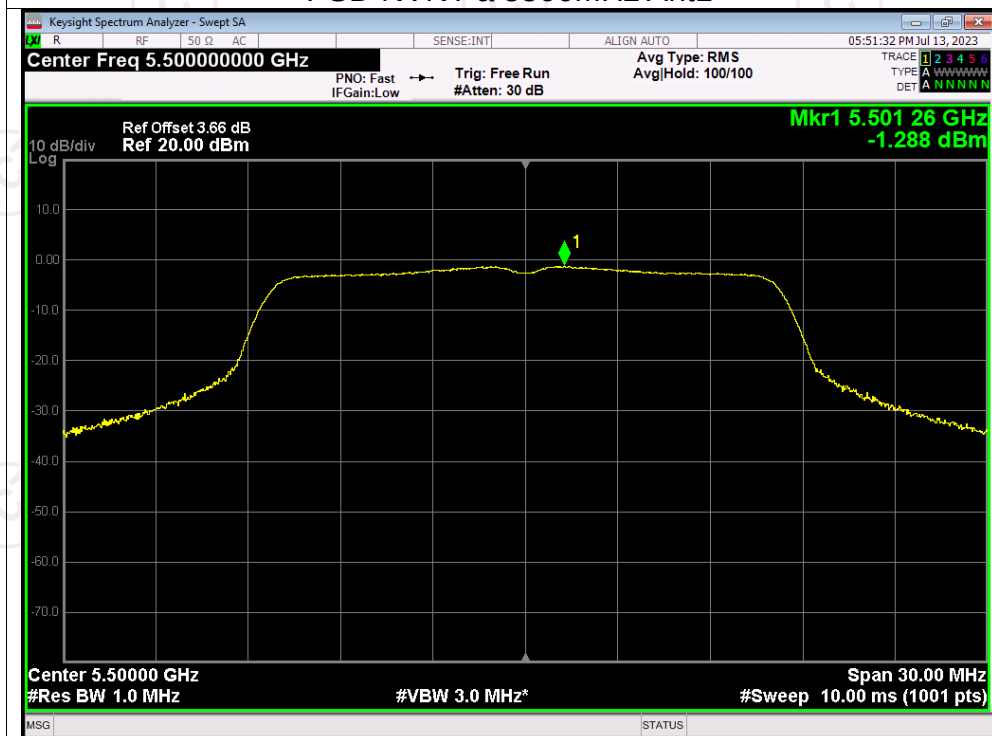


PSD NVNT a 5600MHz Ant1

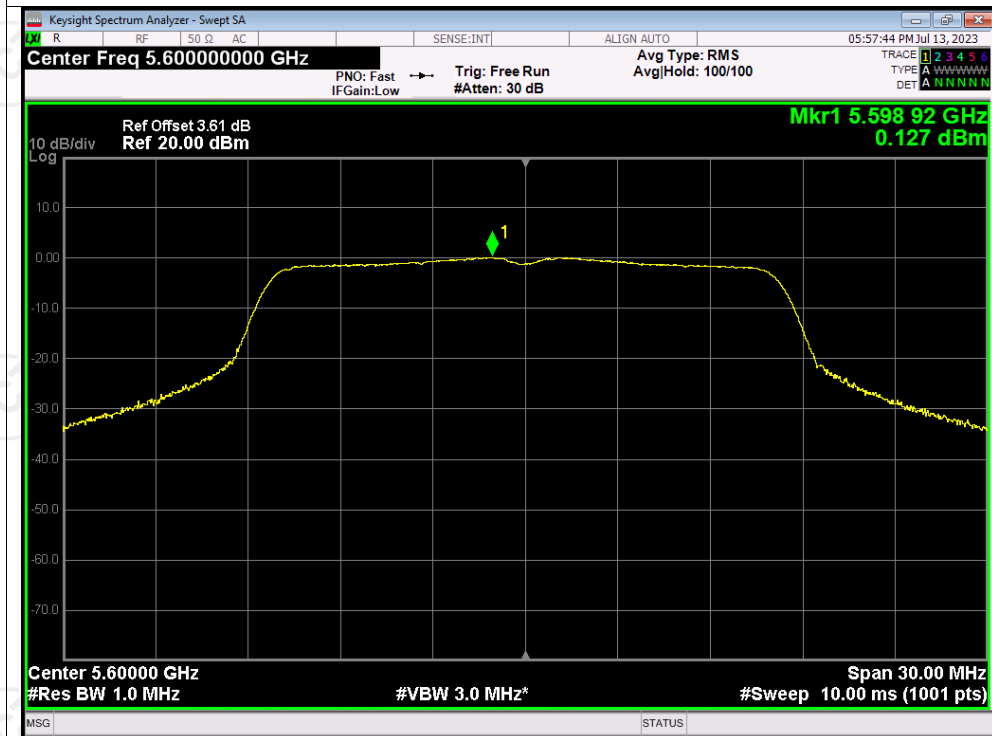


PSD NVNT a 5700MHz Ant1

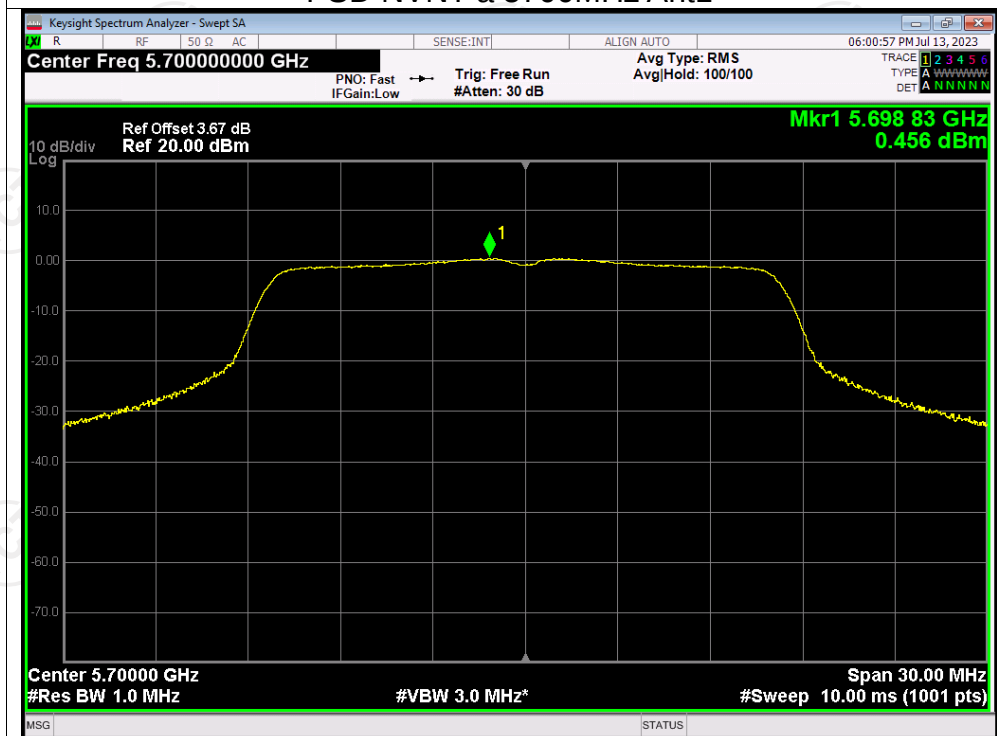


PSD NVNT n20 5500MHz Ant1

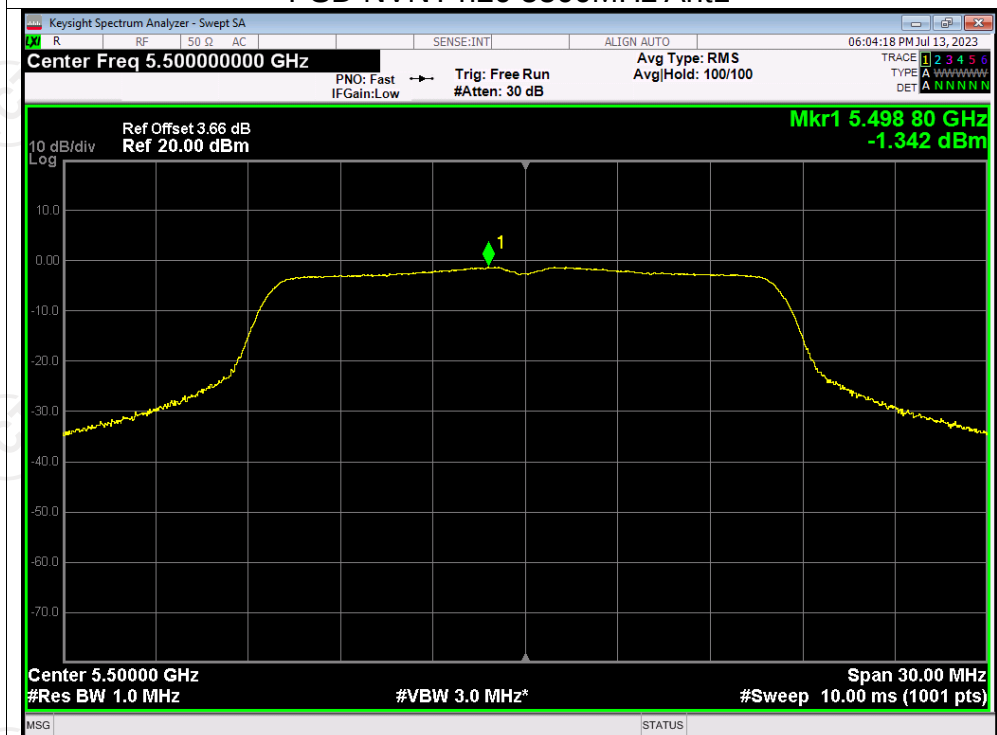


PSD NVNT n20 5600MHz Ant1

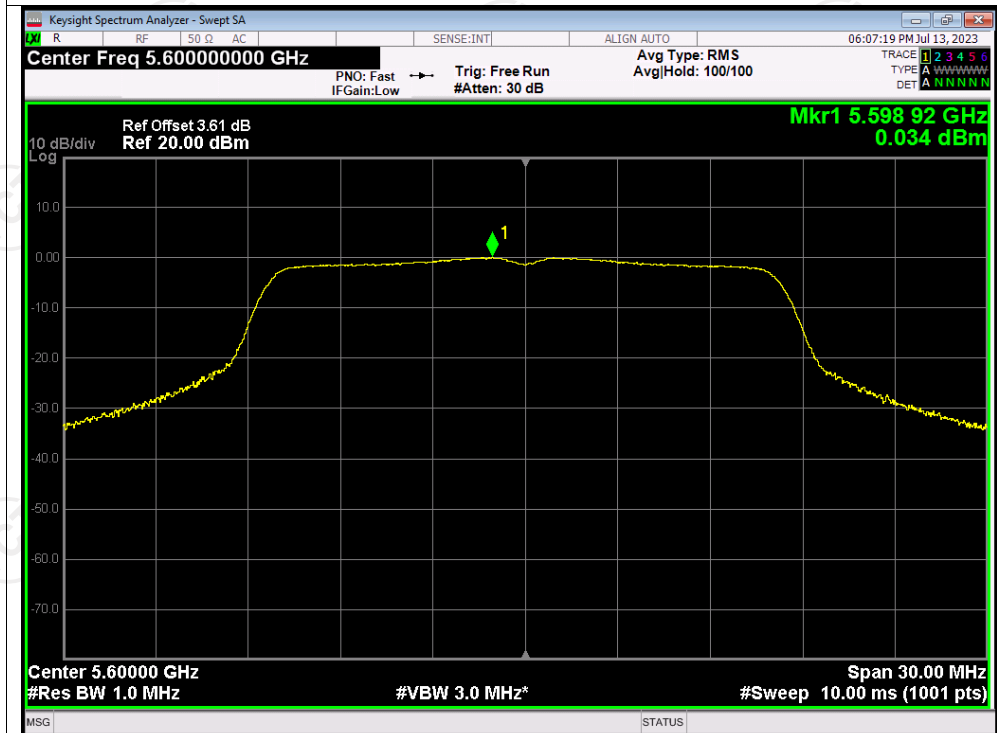


PSD NVNT n20 5700MHz Ant1

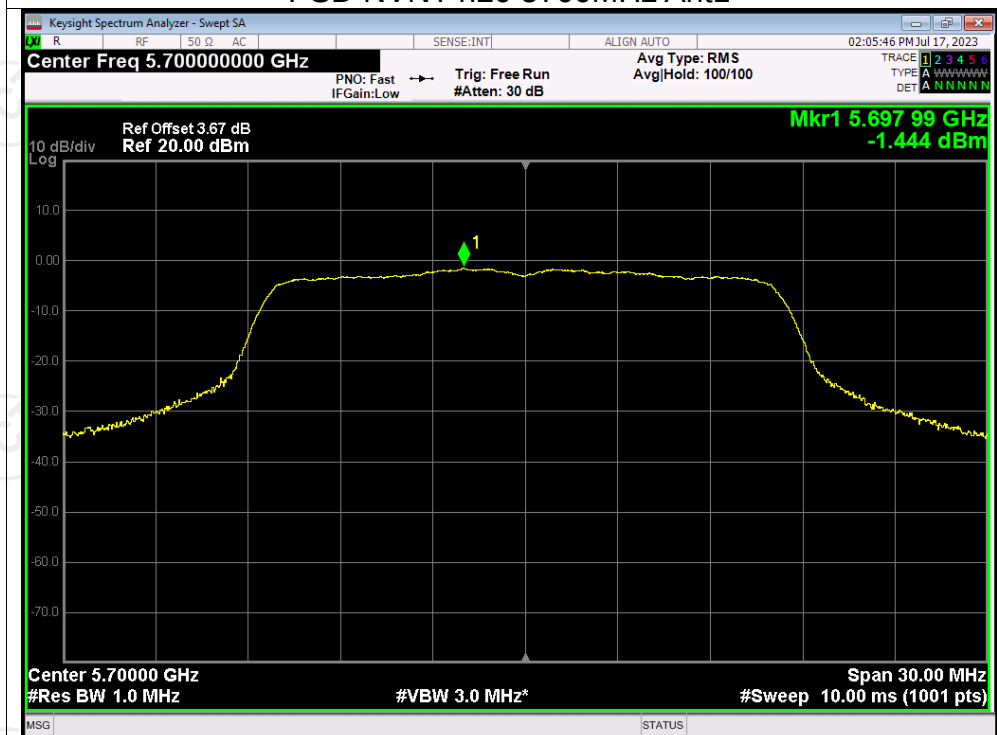


PSD NVNT n40 5510MHz Ant1

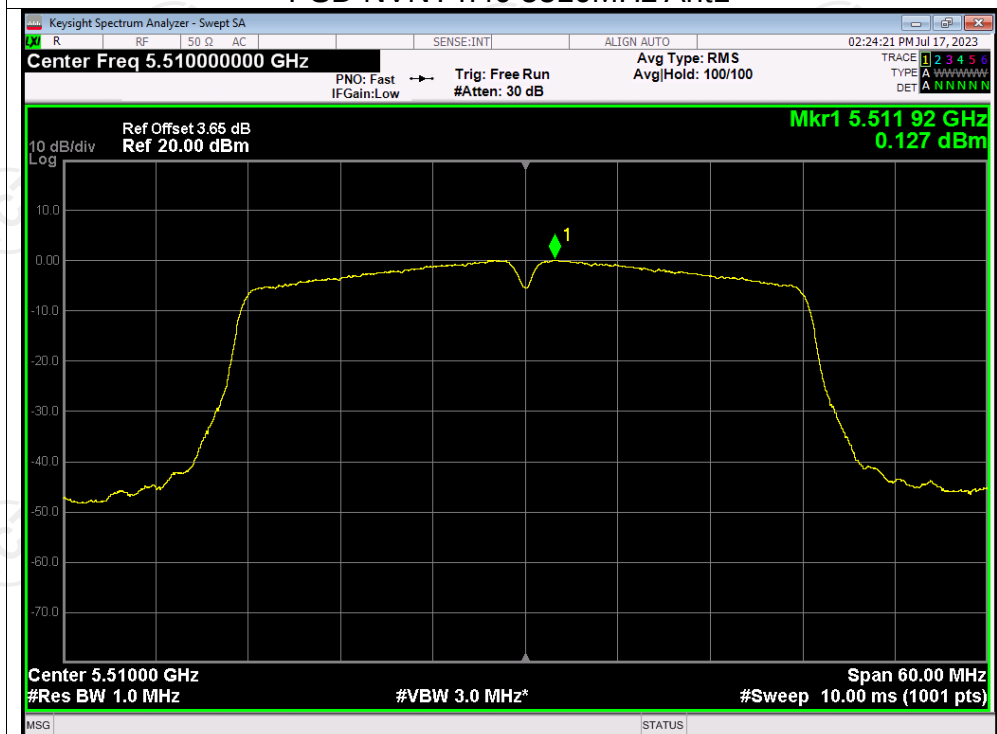


PSD NVNT n40 5590MHz Ant1

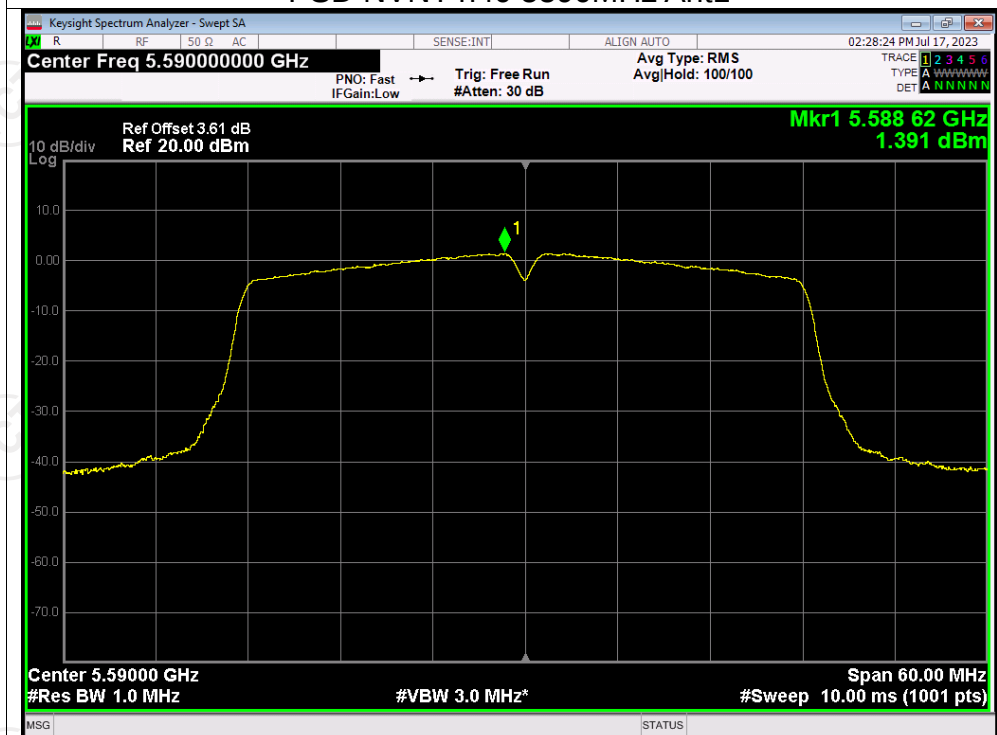


PSD NVNT n40 5670MHz Ant1

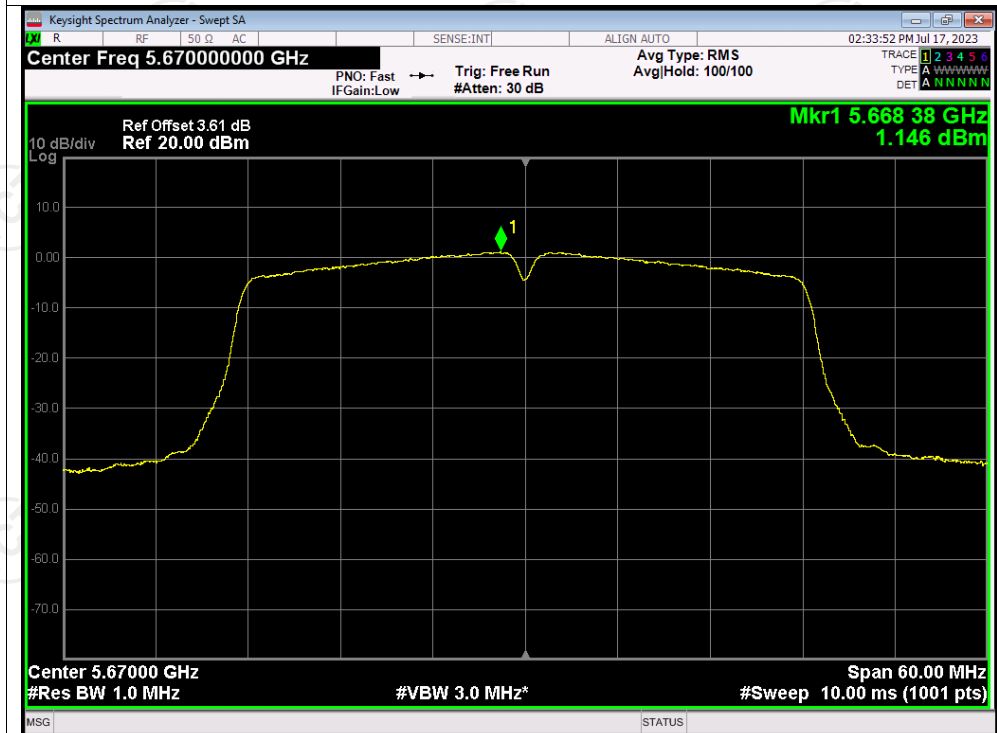


PSD NVNT ac20 5500MHz Ant1

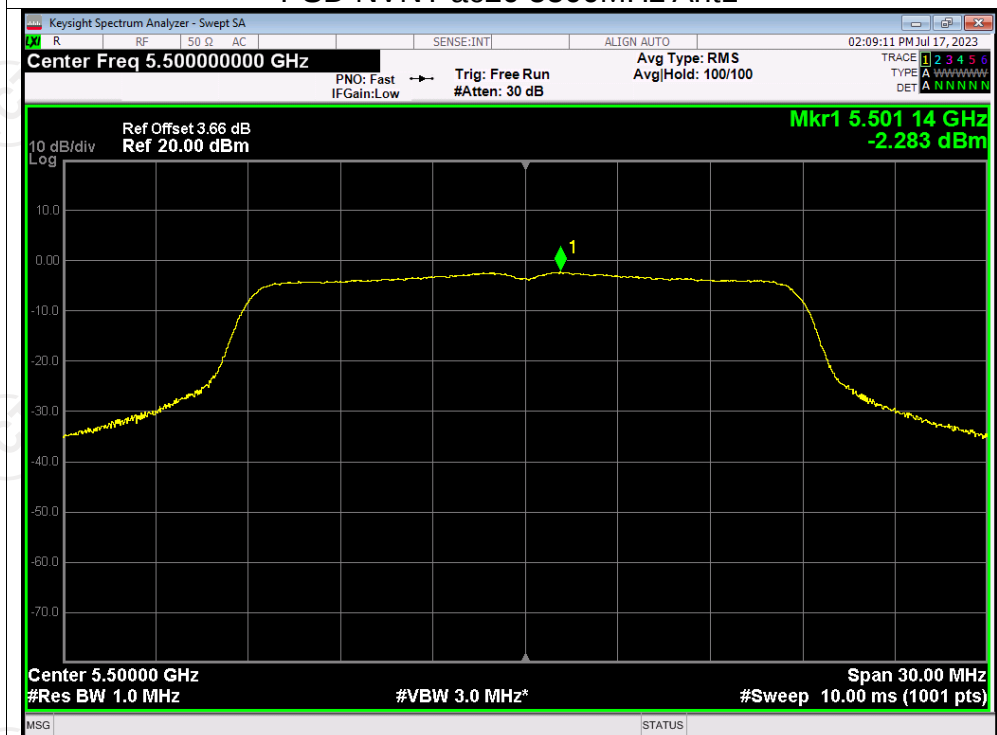


PSD NVNT ac20 5600MHz Ant1

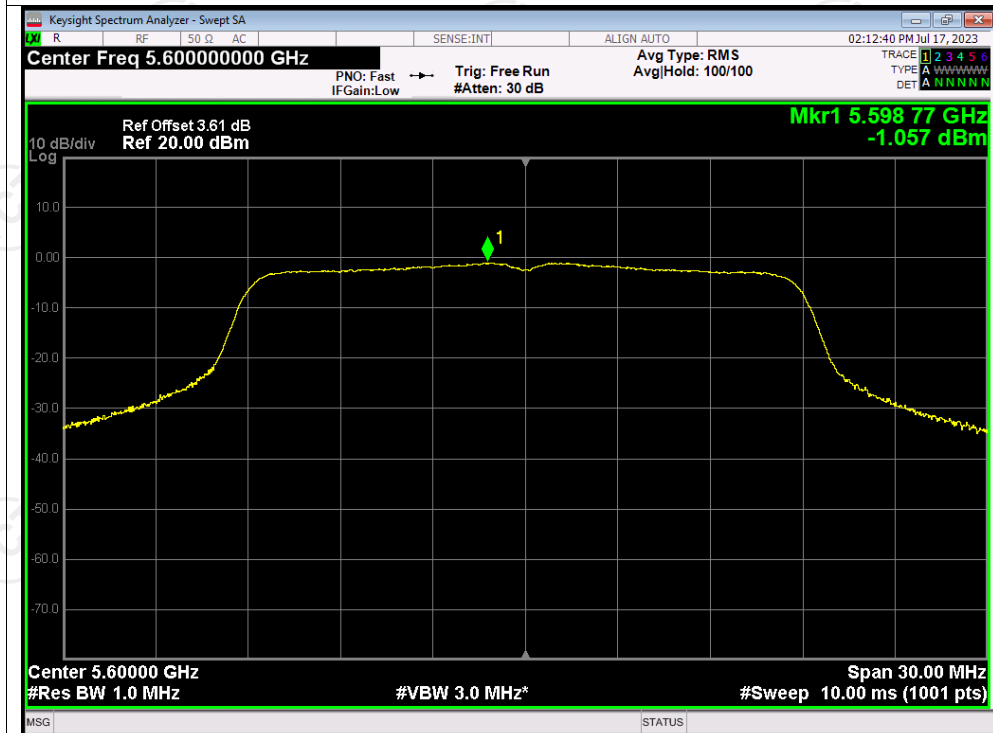


PSD NVNT ac20 5700MHz Ant1

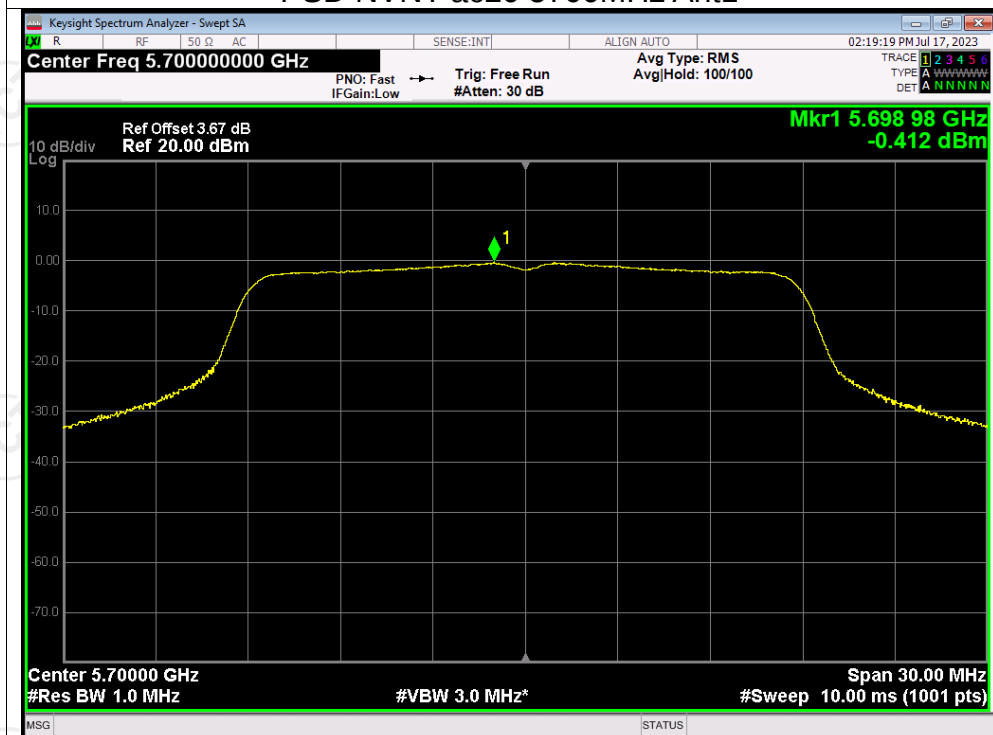


PSD NVNT ac40 5510MHz Ant1

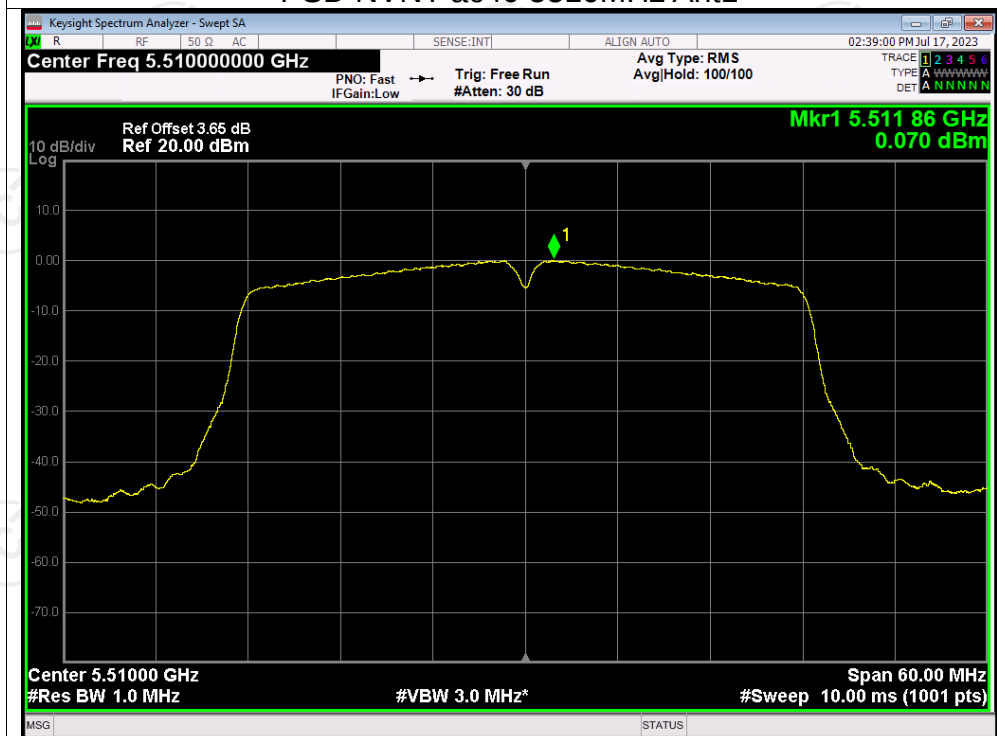

PSD NVNT ac40 5590MHz Ant1

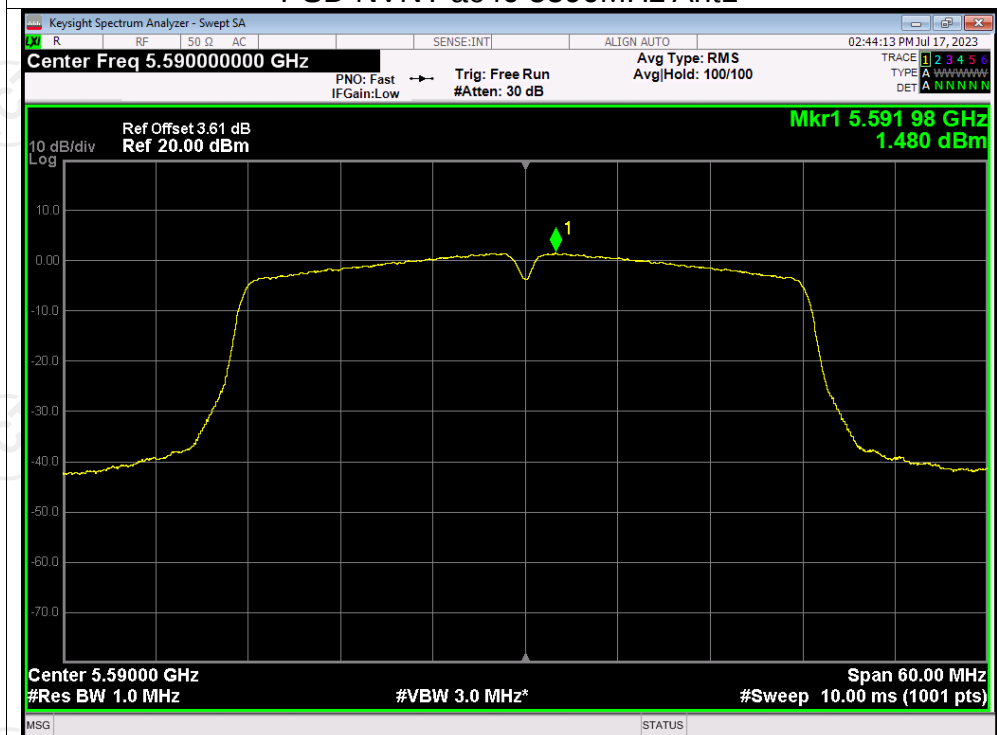


PSD NVNT ac40 5670MHz Ant1

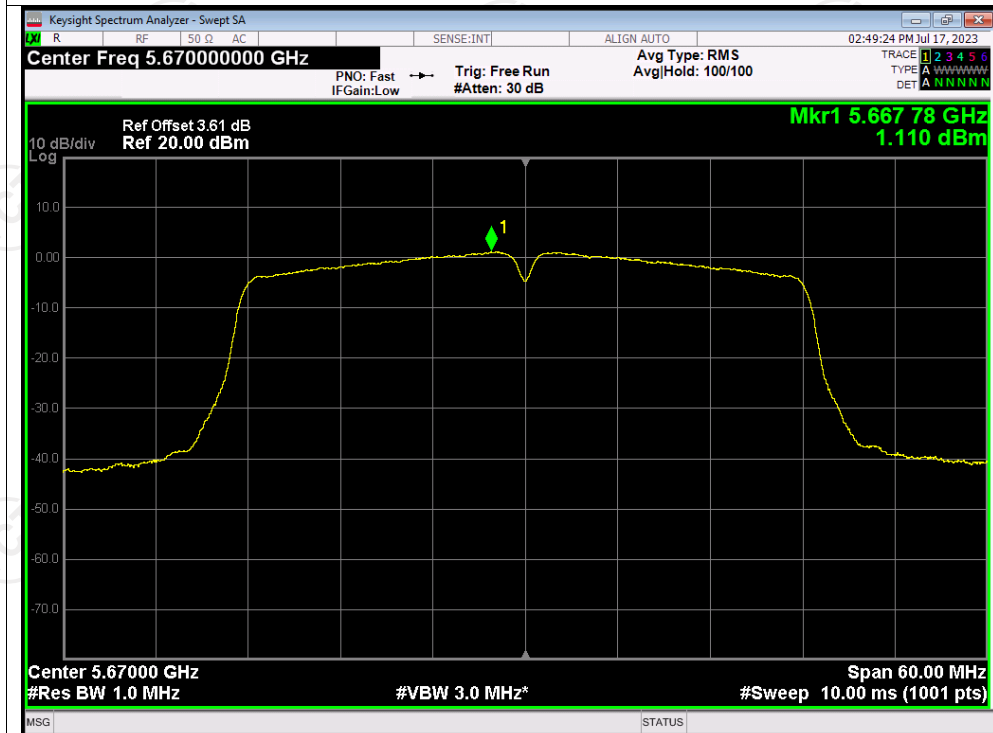

PSD NVNT ac80 5530MHz Ant1



PSD NVNT ac80 5610MHz Ant1

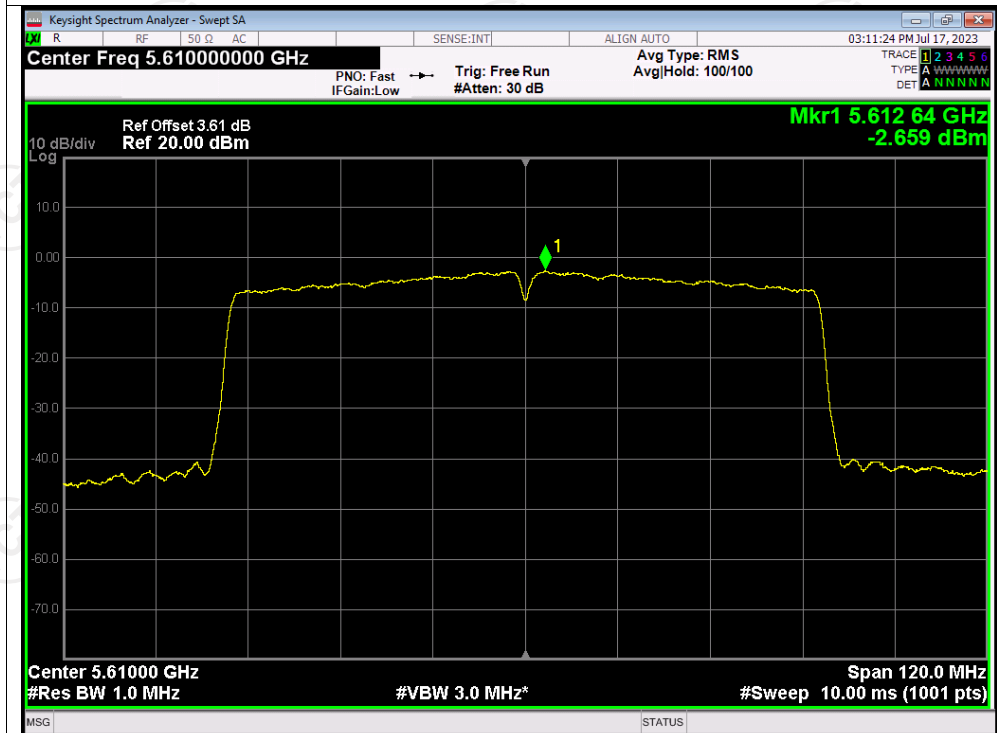

PSD NVNT ax20 5500MHz Ant1

