

RF REMOTE CONTROL PAGE TURNER

PRODUCT MANUAL



HKRC002


Universal RF Remote Control Page Turner

Product use:

The product is suitable for all kinds of capacitive screen e-readers, tablets and mobile phones, mainly for e-book page turning.

Product features:

1. Using RF wireless signal, remote signal can reach all directions and any position, the maximum remote control distance is 30m(98 feet) .
2. Long battery life. If you read for three hours a day, the receiver lasts 15 days on a single charge. The remote control can be used for six months on a single charge.
3. The receiver's 10-minute standby mode saves power.
4. Lighting design makes night reading more convenient.
5. Mute button makes reading quieter.

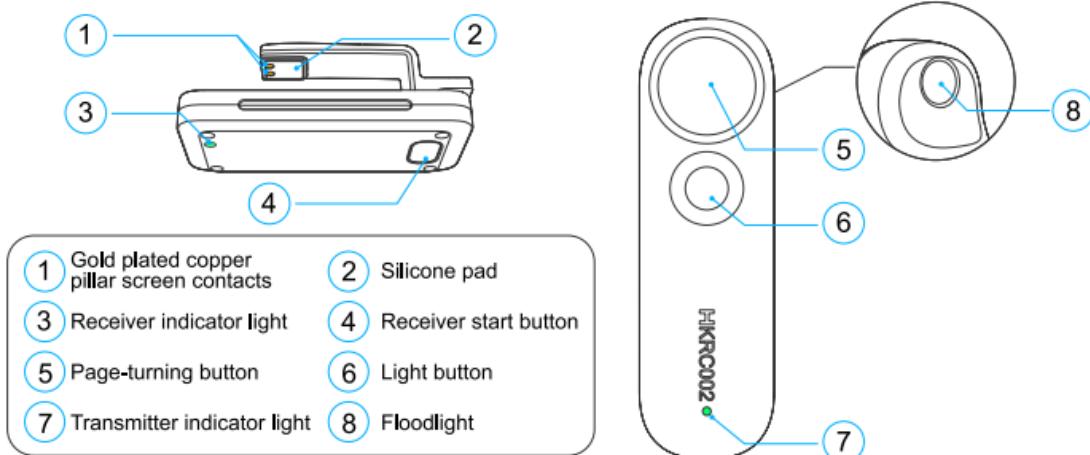

Product packaging:

1. Remote control *1
2. Receiver *1
3. Type-c charging cable *1
4. Storage bag *1

How to use:

When you receive the product, the remote control and the receiver are already matched, you only need to clip the receiver in the correct place on the screen, press the button on the receiver, and then press the page button on the remote control to turn the page. After reading, please remove the receiver in a timely manner and store it properly to avoid long-term stress on the receiver and affecting its service life.

Important notes:

1. The total thickness of the e-reader and the protective shell shall not exceed 11.5mm(0.45inch); If more than, please remove the protective case.
2. When pressing the button of the remote control or receiver, if the indicator light is not on or the red light is blinking, please charge it in time.
3. The input voltage is DC 5V, which can be charged with the mobile phone charger.
4. Keep receiver trigger points clean.
5. During use, make sure the receiver trigger point is close to the screen. And ensure that the silicone pad ② effectively contacts the screen.
6. When reading e-books, the remote control has forward function and reverse function. The receiver clipped on the left side of the screen is the reverse function, and the receiver clipped on the right side is the forward function.
7. If you need to use the remote control to control your phone to use the selfie function, the receiver must be clipped onto the confirmation button on the screen.
8. In the case of all green lights, if you press the page turning button of the remote control, the indicator light of the receiver does not flash, please re-match. (Press and hold the button on the receiver for 3 seconds. When the green light is long on, press the page turning button of the remote control. At this time, the green light of the receiver flashes, indicating that the match is successful.)

9. When the receiver has no operation for 10 minutes, it will automatically enter the standby mode, press the button on the receiver to reactivate it.
10. The other small button on the remote control is the lighting switch. Press and hold for 3 seconds to turn on the lights, and press again to turn off the lights.
11. When the e-reader cannot turn the page, please try the following solutions.
 - A. Try more positions and directions on the screen to find the right trigger point.
 - B. Close the e-reader screen and then open it again.
 - C. Clip the receiver to a number in your phone's calculator APP and test if it works. If the above methods are still unable to solve, please contact our customer service via support@hoganess.com.

Warning:

1. After long-term storage, please use it after charging.
2. The product is not waterproof, do not use in extremely cold, high temperature, humid environment.
3. Do not use the receiver roughly to avoid breaking it.

Warranty:

We provide one year warranty for our products (from the date of purchase). When you encounter any problems during use, please contact us by sending a message on Amazon and we will give you a quick and satisfactory reply.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.