



BUBLUE



Bubot 800P ROBOTIC
POOL CLEANER

Thank you for choosing BUBLUE Bubot 800P Robotic Pool Cleaner.

We appreciate your trust in us to keep your pool clean and ready for your enjoyment. This manual is your comprehensive guide to operating, maintaining, and maximizing the performance of your BUBLUE Bubot 800P Robotic Pool Cleaner. Before you begin using your new Robotic Pool Cleaner, we strongly recommend taking a few moments to review this manual thoroughly, to ensure a smooth and trouble-free experience. If you have any questions or need further assistance while using this product, please don't hesitate to contact us at support@bubluerobot.com for prompt support.

Content

1. Introduction	02
2. Packing List	02
3. Safety Guidelines	03
4. Product Specifications	03
5. Operating Instructions	04
6. Troubleshooting	15
7. Warranty	16



01

IMPORTANT SAFETY INSTRUCTIONS

Please read and follow the instructions below:

1. Do not use this Bubot 800P Robotic Pool Cleaner (hereafter referred to as the "cleaner") under conditions that exceed its operating limits. Before use, please carefully read this manual and strictly follow the instructions. BUBLUE will not be liable for any losses or injuries caused by improper use.
2. Use only the original or recommended accessories.
3. This cleaner is not intended for children or individuals with mental impairments. If necessary, it should be used under the supervision of a guardian. Do not allow children to sit on or play with the product as a toy.
4. The power box is splash-proof; do not immerse it in water.
5. Only use the original power box provided with the product.
6. The AC cord of the power box must be plugged only into a receptacle protected by a ground fault circuit interrupter. Use only grounding-type receptacles.
7. If any issues occur before the cleaner completes its cycle, please turn off the power device and unplug the power cord.
8. Always unplug the power box before performing any maintenance activities.
9. Do not allow anyone to enter the water while the cleaner is operating to avoid potential harms.
10. Do not plug in the power box before placing the cleaner into the water.
11. Clean the filter basket after each use to prevent excess debris from affecting the cleaner's performance.
12. Store the cleaner in a cool, ventilated indoor area when not in use, avoiding direct sunlight.
13. Only trained professionals should disassemble the cleaner's sealed box assembly to avoid danger or damage to the unit.
14. The motor contains grease that may leak and cause light water contamination if a leak occurs.
15. Do not puncture the cleaner's shell with nails or sharp objects, and avoid hammering, striking, or throwing the unit.
16. Do not use or store the cleaner near heat sources.
17. Coil the cable and store it in a cool, dry place.



02



1. Introduction

Bubot 800P Robotic Pool Cleaner is a highly efficient device designed to keep your pool sparklingly clean. It effortlessly cleans the pool floor by capturing floating debris and sediment with its advanced filtration system.

With the power box, this cleaner offers continuous operation without the need for regular charging, ensuring excellent convenience and reliability.

Before using this product, please take a moment to read through this manual to ensure optimal performance.

2. Packing List

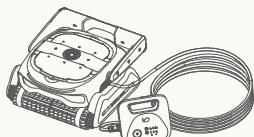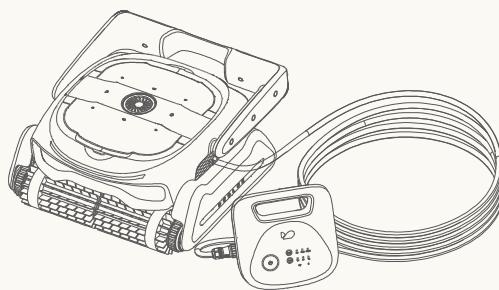

Robotic Pool Cleaner x1



Power Box x1



Carabiner x1



Rope x1



User Manual x1



3. Safety Guidelines

1. Power box safety protection requirements: Refer to "Important Safety Instructions" Items 4, 5, and 6.
2. Operate the cleaner in an environment with temperatures between 50°F and 95°F (10°C and 35°C).
3. Unplug the power box before performing any maintenance activities.
4. Ensure no one is in the water while the cleaner is in operation to avoid potential danger.


4. Product Specifications

1. Charger's Input Voltage	100Vac - 240Vac	9. Waterproof Rating	IPX8
2. Charger's Rated Output Current	5A	10. Maximum Cleaning Depth	9.84 ft (3 m)
3. Charger's Rated Output Voltage	28V	11. Weight	22.7 lbs (10.3 kg)
4. Maximum Runtime	240 mins	12. Cleaner Dimensions	19.6 inch*18.3 inch*9.0 inch (490 mm*465 mm*228 mm)
5. Cable Length	49.21 ft (15 m)	13. Power Box Dimensions	8.7 inch*8.5 inch*4.1 inch (220 mm*215 mm*104 mm)
6. Maximum Coverage Area	1076 ft ² (100 m ²)	14. Storage Temperature	-4°F to 140°F (-20°C to 60°C)
7. Filtration Density	Up to 180 µm	15. Cleaning Cycle	2 h/3 h/4 h
8. Moving Speed	Up to 39 ft/min (12 m/min)		


5. Operating Instructions

5.1 Cleaner Setup


1 Unwind the cable and straighten it along one side of the pool, ensuring there are no twists or knots.

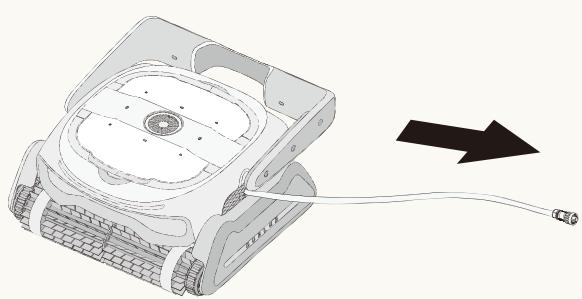


2 Tie one end of the rope to the carabiner and the other end to the power box. Hook the carabiner onto a fixed position to prevent the power box from being pulled into the water.

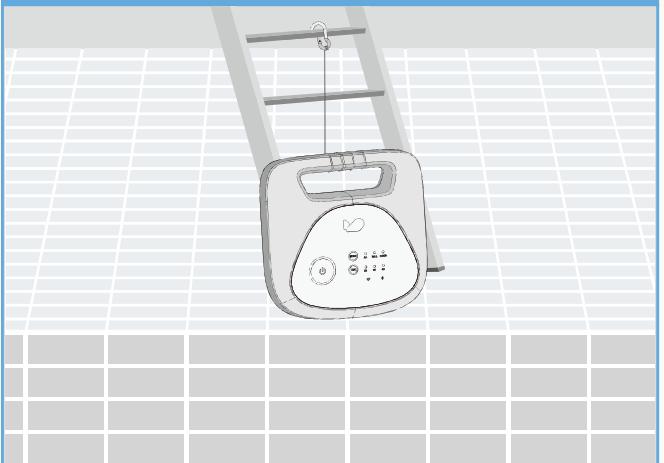


③ Insert the floating cable plug of the cleaner into the power box. Then, plug the AC cable of the power box into an outlet with leakage protection.

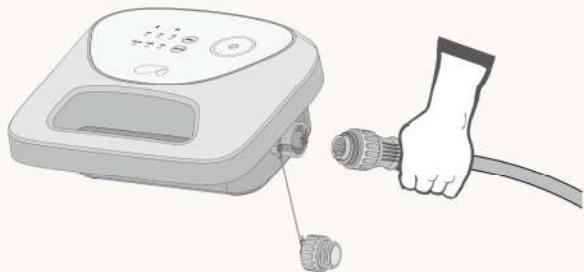

④ Hold the rocker handle and place the cleaner into the pool; then release the handle.

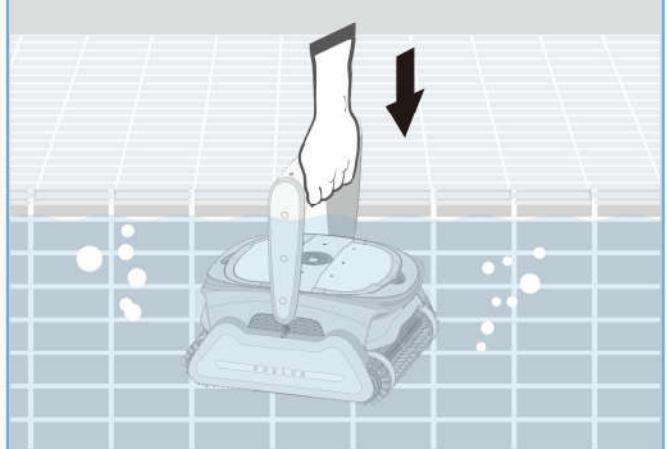

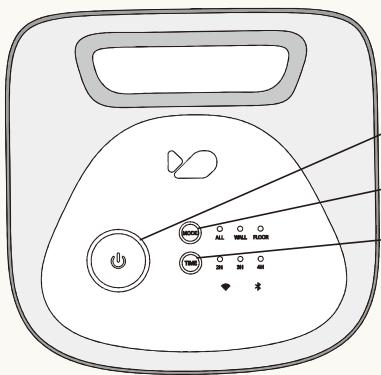5 To start the cleaner using the panel control:

1. Press the power button for 1 second. The power button will flash, indicating the cleaner is powered on.

2. Once the power button stops flashing, select the desired cleaning mode using the mode selection button.

3. Select the desired working time using the time selection button.

4. The cleaner will start working in a few seconds.

5.1.1 Button & Icon Guide


Button Image	Button Function
	Power
	Mode Selection
	Time Selection
	WIFI
	Bluetooth

5.1.2 Indicator Light Guide

Indicator Light Display	Operating Status
Blue light constant	Normal operation
Yellow light flashing	Parking near the wall
Red light flashing	Fault (Refer to "Section 6. Troubleshooting")
Red light constant	Hardware malfunction


5.2 Retrieval

After the cleaner completes its cleaning cycle, gently pull the floating cable until the cleaner rises to the water surface, then lift it using the handle.

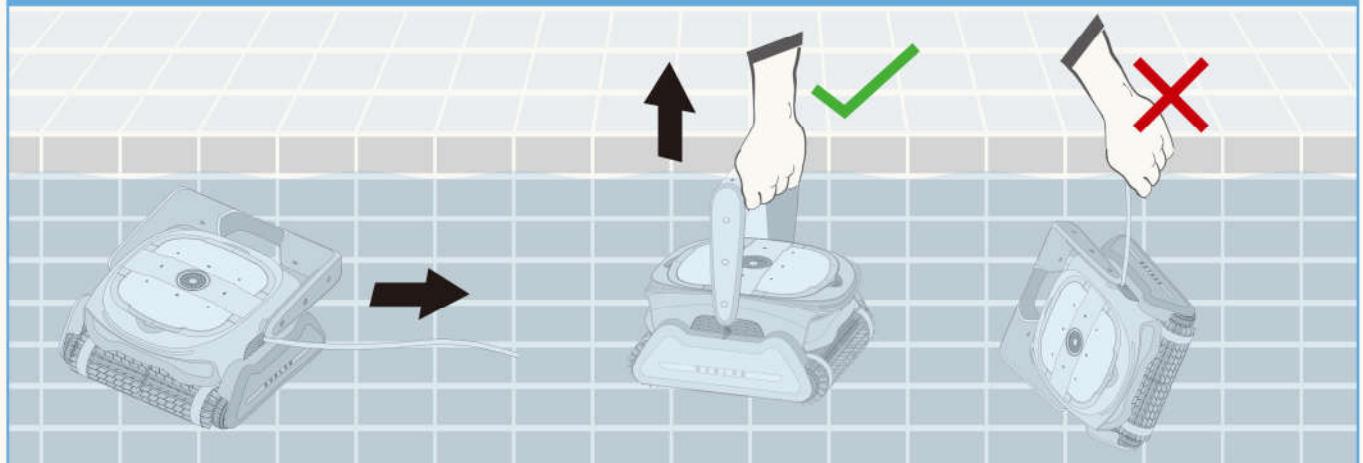


5.3 Filter Basket Cleaning & Installation


1 Remove the filter basket: Place the cleaner on the poolside. Use your hands to lift the handle, revealing the filter basket.

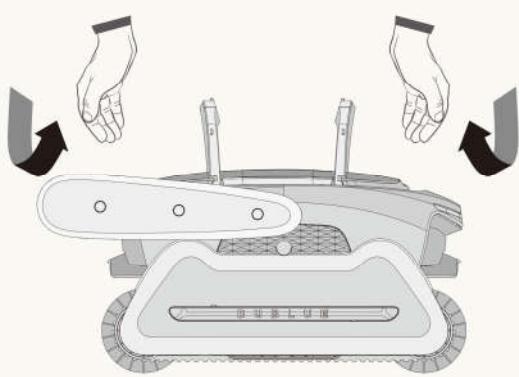


2 Take out the filter basket from the cleaner.

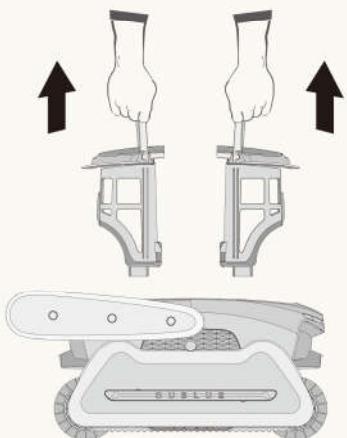

3 Filter basket cleaning: Rinse off the debris on the filter mesh thoroughly with clean water.

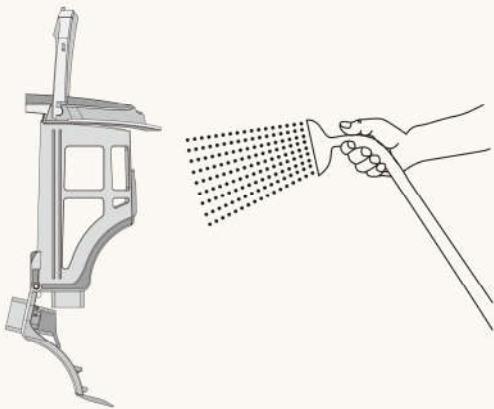

4 Reinstall the filter basket: Align the guide ribs on both sides of the filter basket with the grooves in the upper shell of the cleaner and place it inside. Lock the handle buckle securely for a perfect fit.

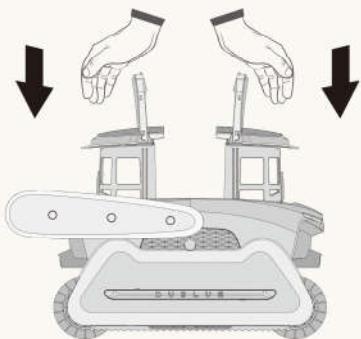




5.4 App User Guide


1. Set up and add a device for the first time




Step 1: Create an account

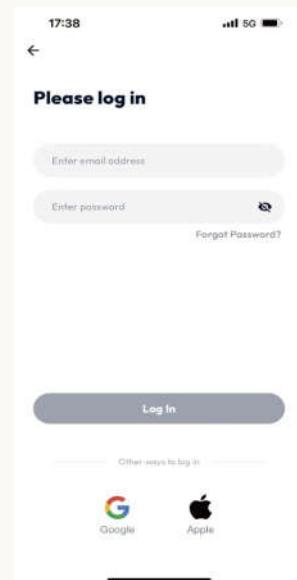

Step2: Log in to the account

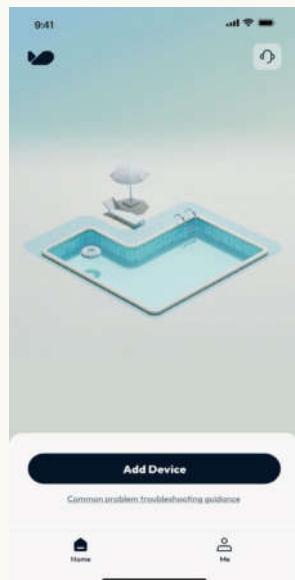

Step 3: Click "Add Device"

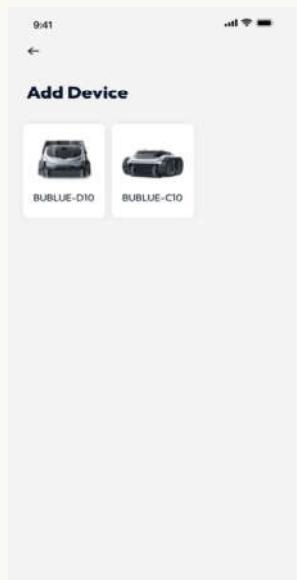

Step 4: Choose a device to add




5.4 App User Guide



Step 5: Turn on the device's Bluetooth (Long press the Bluetooth button on the panel and make sure the Bluetooth icon is flashing)



Step 6: Select the device's Bluetooth

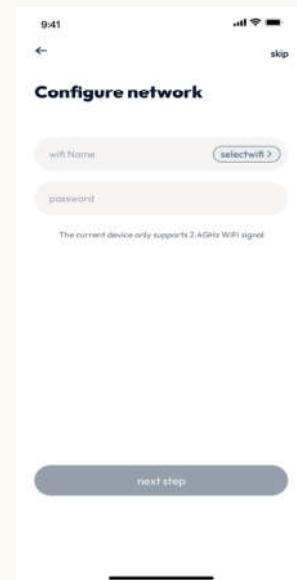

Step 7: Click "Select Wifi" to connect to a WIFI network



Step 8: Please wait for the device registration and initialization to finish



5.4 App User Guide



Step 9: The device is ready



Click the to start cleaning in Auto mode



Swipe up to open the adjustment module and fine-tune the mode settings.



Click the "calendar" icon on the right to open the scheduling module


2. Start a cleaning task

3. Schedule a cleaning task



5.4 App User Guide

4. Remote control

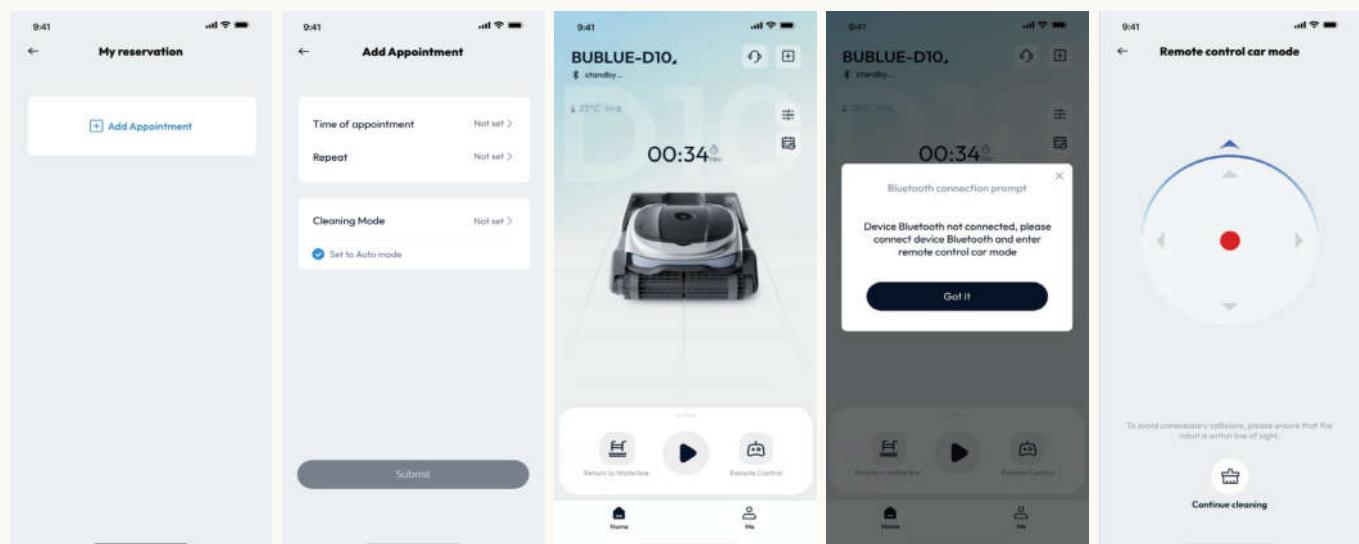

Click "Add Appointment"

Select your preferred settings and complete the scheduling. The cleaner will remind you 15 minutes before the scheduled appointment.

Click "Remote Control"

Ensure Bluetooth is turned on and connected. If not, a prompt will appear asking you to enable Bluetooth.

Drag the red dot to control the pool cleaner effortlessly.



6. Troubleshooting

Issue	Possible Cause	Solution
	Obstacles in the pool	Remove obstacles from the pool
Cable twist or cable winding	Insufficient cable length in water	Place enough cable in the water to allow the cleaner to reach the farthest corner of the pool
	Foreign object stuck between wheels	Remove foreign objects from the cleaner
Red light flashing	Debris stuck in the impeller	Unplug the power box and then remove the debris
Motor not working	Impeller blocked	Unplug the power supply and then remove the debris
	Power or signal connection not properly connected	Check the cable connections between the cleaner and the power box
Cleaner not sinking	Sponge on the roller brush is dry	Wet the sponge on the roller brush to keep it moist
Cleaner tipping over	Filter clogged	Clean the filter and remove debris from the filter basket
Cleaner moves slowly or cleans inefficiently	Filter clogged	Clean the filter and remove debris from the filter basket

If these suggested solutions do not solve your problem, please contact our customer support team.



7. Warranty

- 1.This product is covered by BUBLUE warranty for 12 months (only for the driving kit) from the date of purchase. Consumable parts, including the filter tray, brush, wheels, and nozzles, are beyond warranty.
- 2.This warranty is voided if the product has been altered, misused, or has been repaired by unauthorized personnel.
- 3.The warranty extends only to manufacturing defects and does not cover any damage resulting from the mishandling of the product by the owner.
- 4.The order number or record must be presented for any claim or repair during the warranty period.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.



BUBLUE

BUBLUE TECHNOLOGY INC

30 N Gould St, Ste R, Sheridan, WY 82801
www.bubblue.com
support@bubluerobot.com



BUBLUE FACEBOOK



BUBLUE INSTAGRAM