




-26dB Bandwidth NVNT n20 5600MHz Ant1

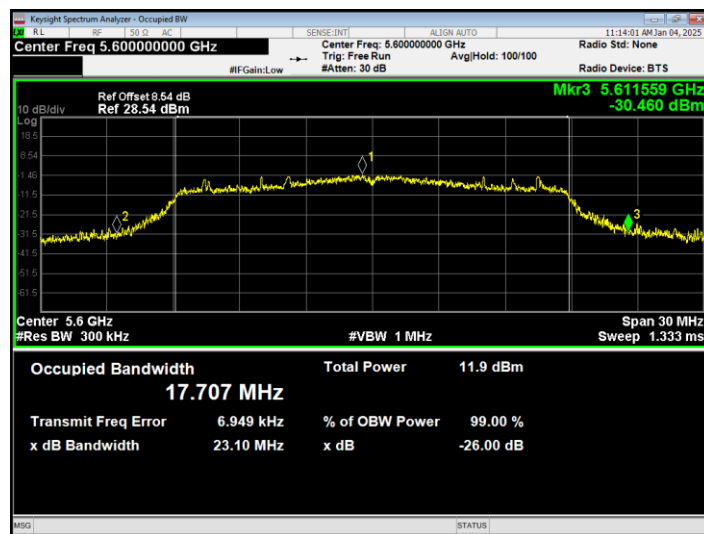


-26dB Bandwidth NVNT n20 5700MHz Ant1

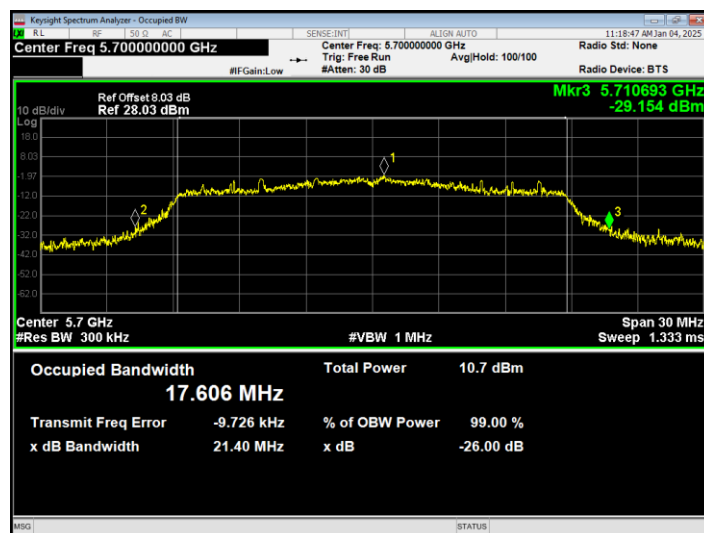


-26dB Bandwidth NVNT n40 5510MHz Ant1

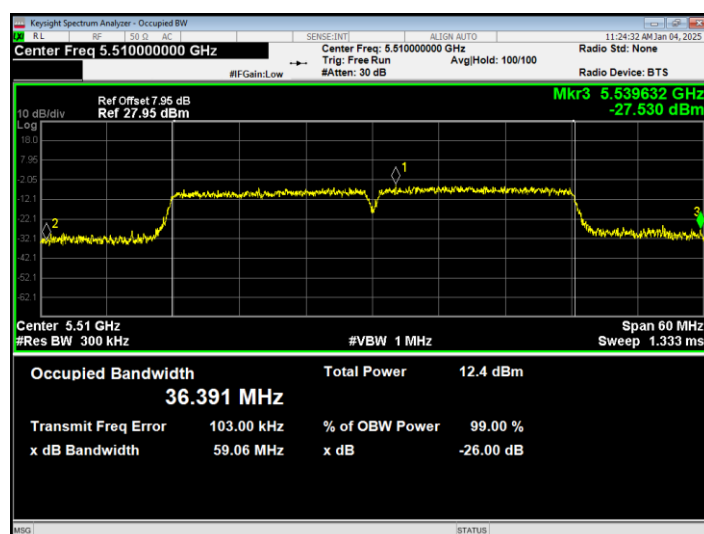

-26dB Bandwidth NVNT n40 5550MHz Ant1

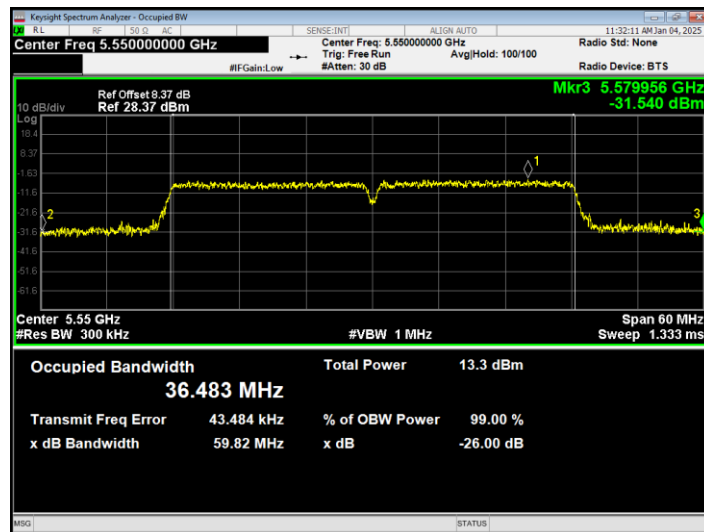


-26dB Bandwidth NVNT n40 5670MHz Ant1

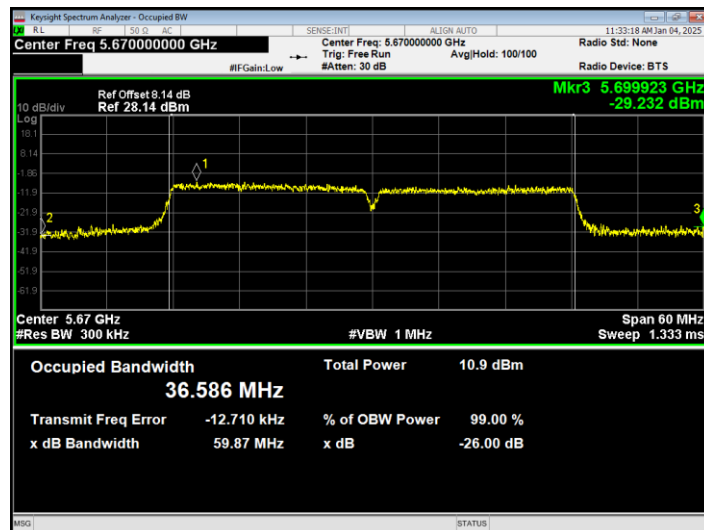


Occupied Channel Bandwidth

Condition	Mode	Frequency (MHz)	Antenna	99% OBW (MHz)
NVNT	a	5500	Ant1	17.76472255
NVNT	a	5600	Ant1	17.6038868
NVNT	a	5700	Ant1	17.53750611
NVNT	ac20	5500	Ant1	17.82731567
NVNT	ac20	5600	Ant1	17.61884573
NVNT	ac20	5700	Ant1	17.46511861
NVNT	ac40	5510	Ant1	36.53782924
NVNT	ac40	5550	Ant1	36.60586046
NVNT	ac40	5670	Ant1	36.78692051
NVNT	ac80	5530	Ant1	75.97115041
NVNT	ax20	5500	Ant1	17.75913849
NVNT	ax20	5600	Ant1	17.65742317
NVNT	ax20	5700	Ant1	17.51717406
NVNT	ax40	5510	Ant1	36.58053292
NVNT	ax40	5550	Ant1	36.63579199
NVNT	ax40	5670	Ant1	36.83479617
NVNT	ax80	5530	Ant1	75.98518728
NVNT	n20	5500	Ant1	17.68950533
NVNT	n20	5600	Ant1	17.57422679
NVNT	n20	5700	Ant1	17.48777235
NVNT	n40	5510	Ant1	36.52913087
NVNT	n40	5550	Ant1	36.61410831
NVNT	n40	5670	Ant1	36.76021059


OBW NVNT a 5500MHz Ant1

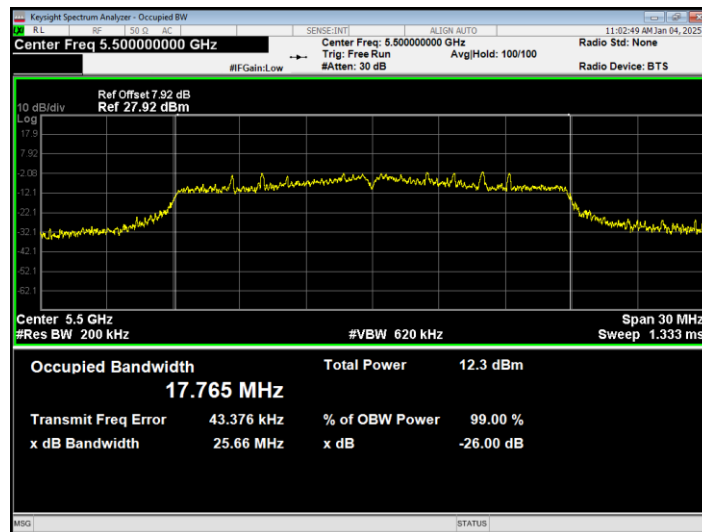


OBW NVNT a 5600MHz Ant1

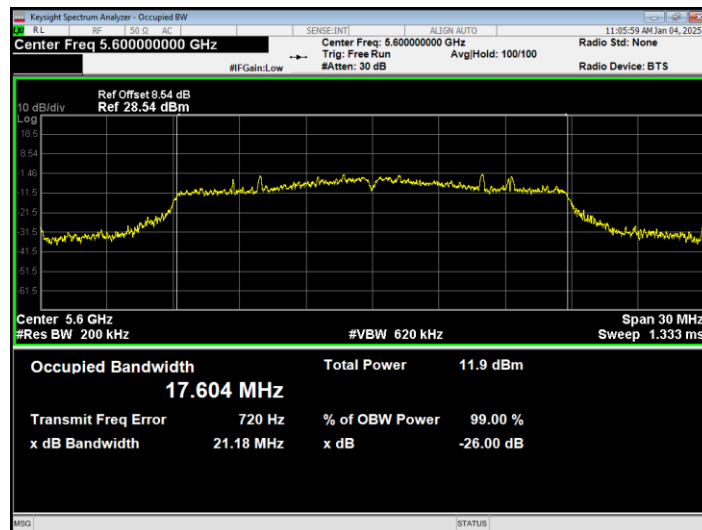


OBW NVNT a 5700MHz Ant1

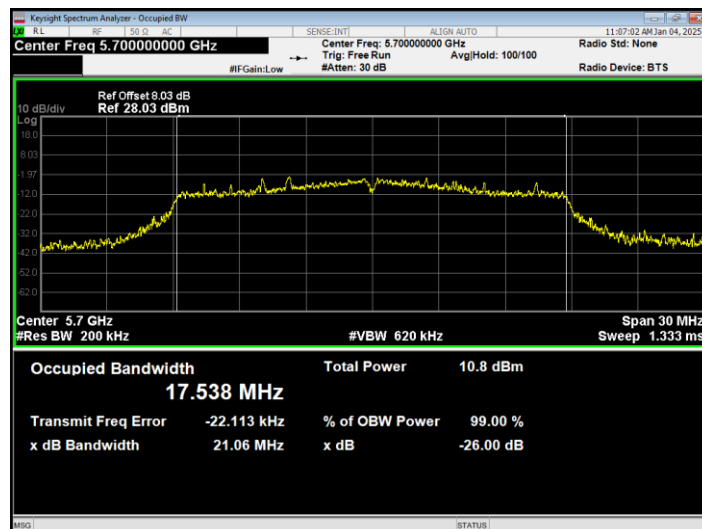


OBW NVNT ac20 5500MHz Ant1

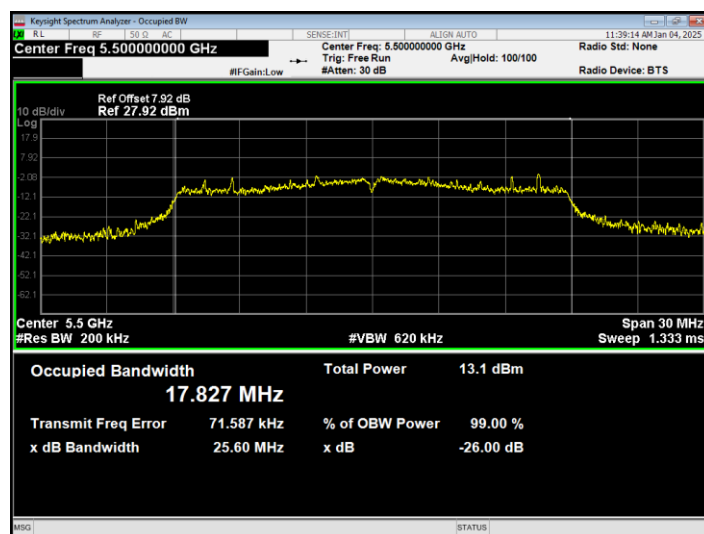


OBW NVNT ac20 5600MHz Ant1

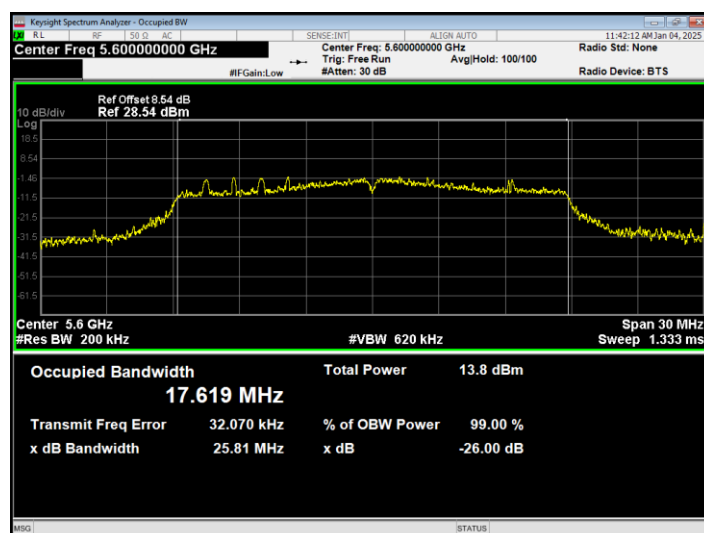


OBW NVNT ac20 5700MHz Ant1

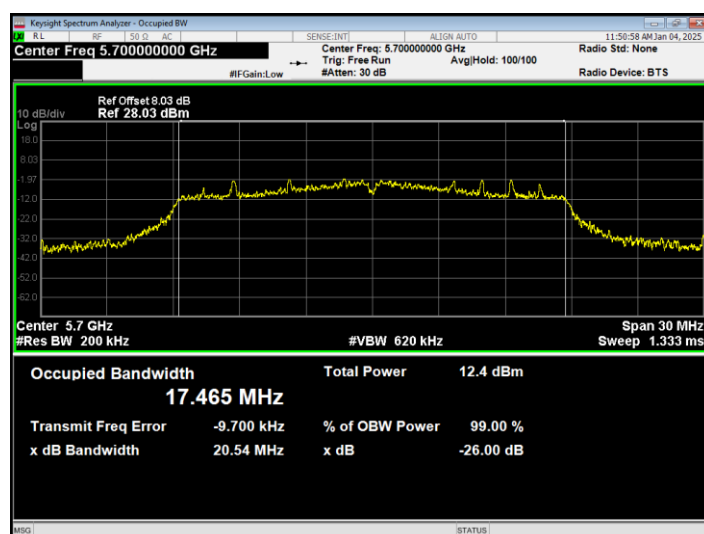


OBW NVNT ac40 5510MHz Ant1

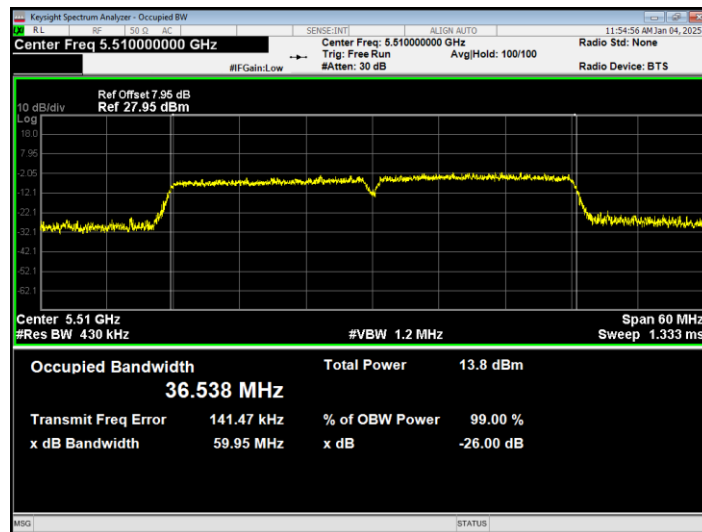


OBW NVNT ac40 5550MHz Ant1

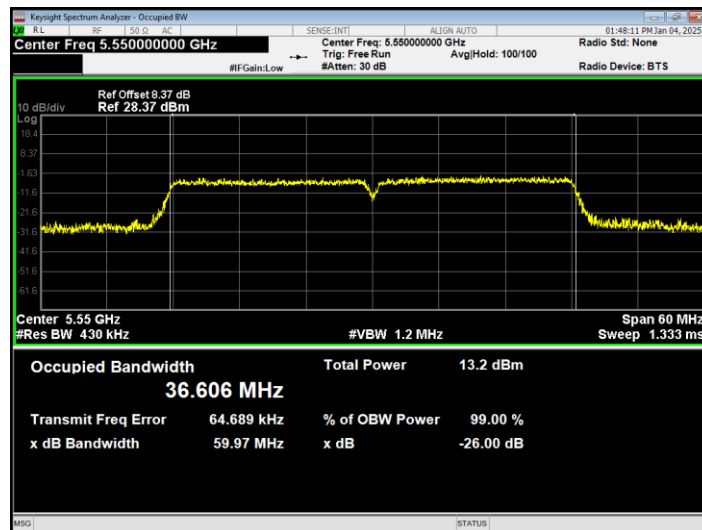


OBW NVNT ac40 5670MHz Ant1

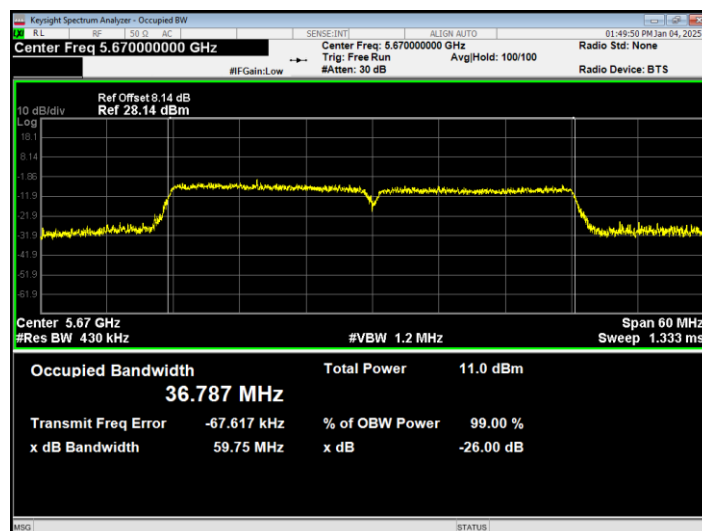


OBW NVNT ac80 5530MHz Ant1

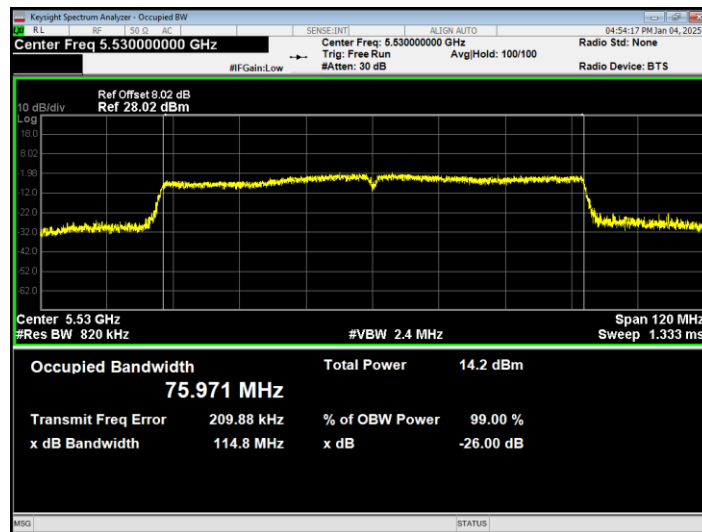


OBW NVNT ax20 5500MHz Ant1

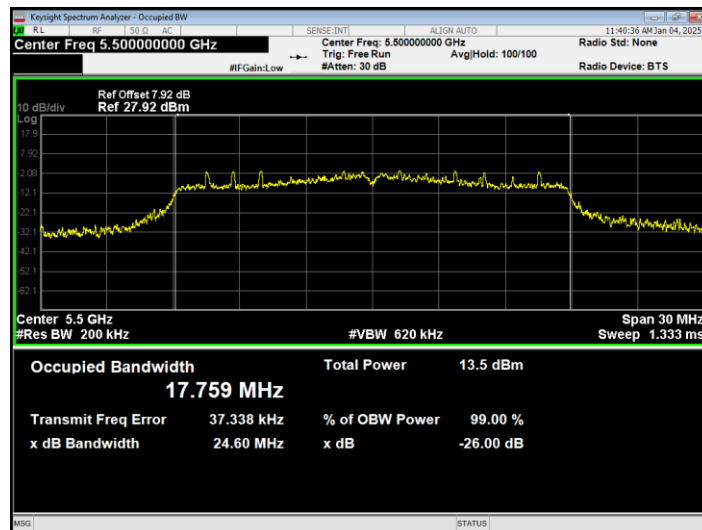


OBW NVNT ax20 5600MHz Ant1

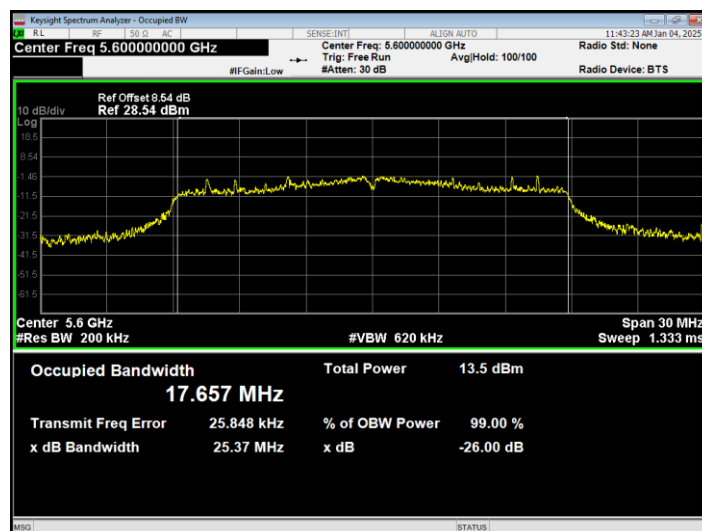


OBW NVNT ax20 5700MHz Ant1

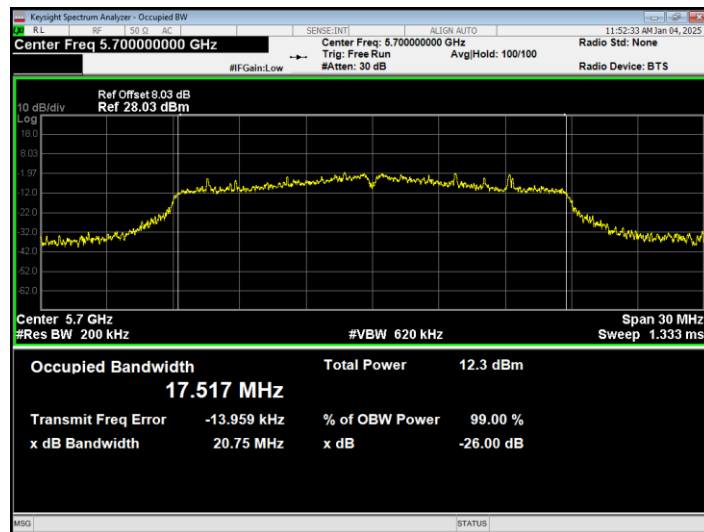


OBW NVNT ax40 5510MHz Ant1

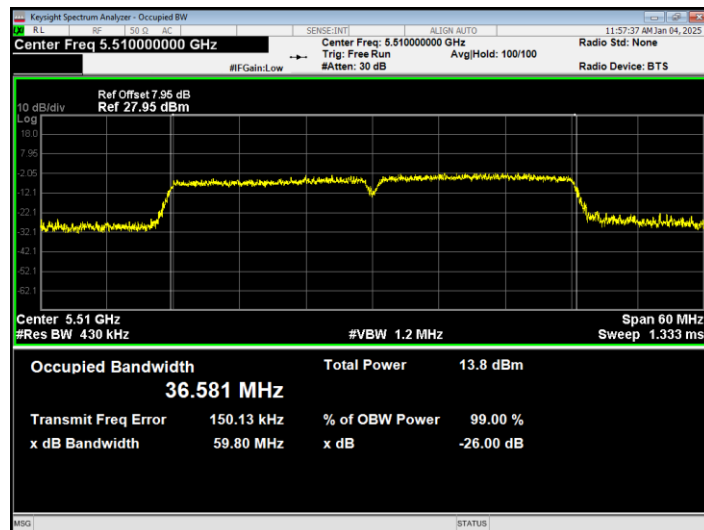


OBW NVNT ax40 5550MHz Ant1

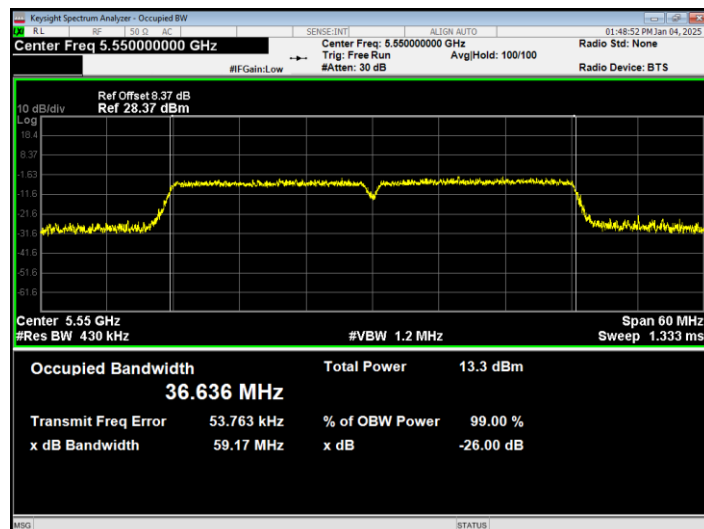


OBW NVNT ax40 5670MHz Ant1

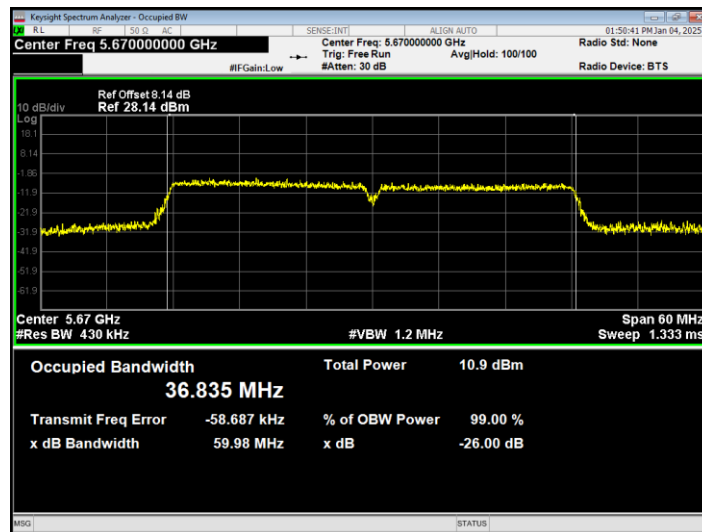


OBW NVNT ax80 5530MHz Ant1

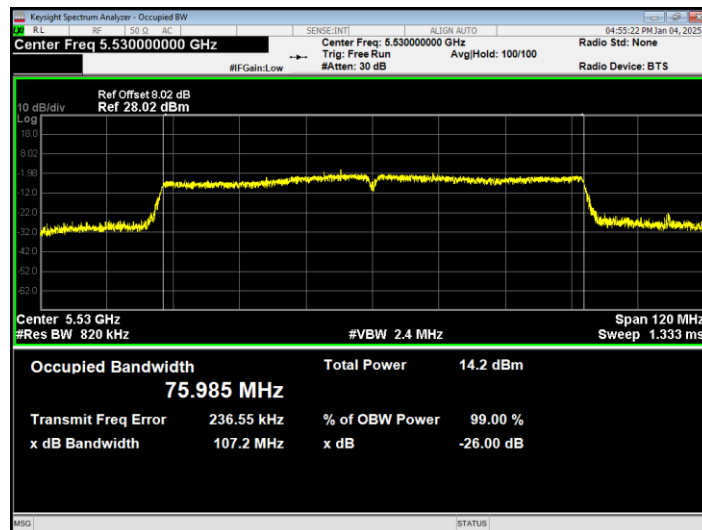


OBW NVNT n20 5500MHz Ant1

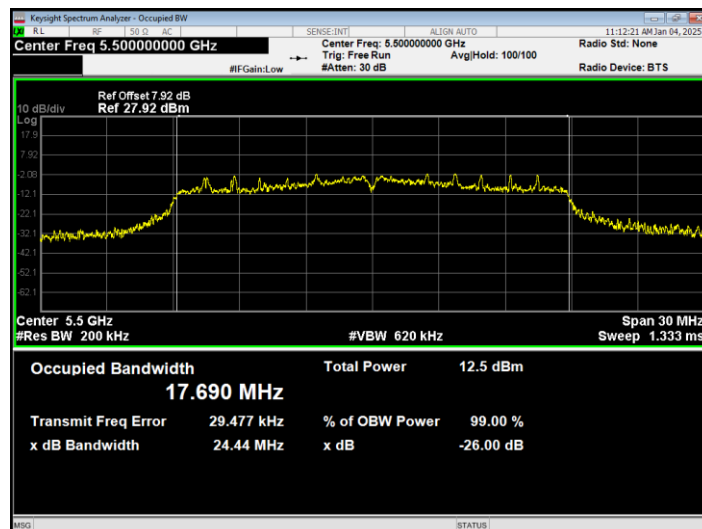


OBW NVNT n20 5600MHz Ant1

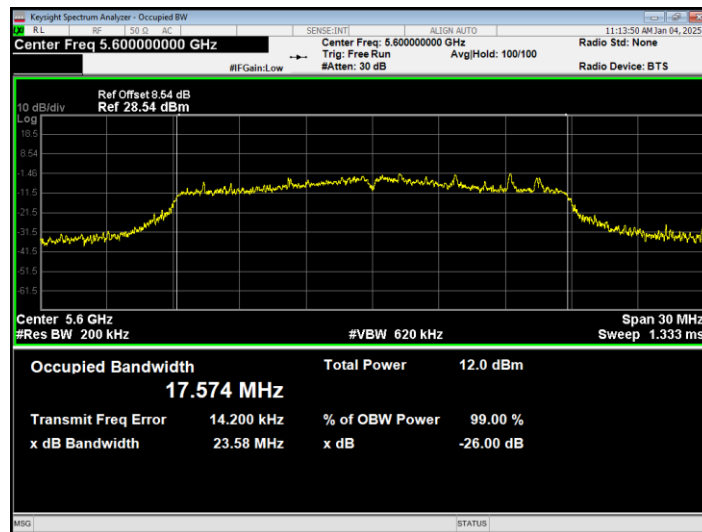


OBW NVNT n20 5700MHz Ant1

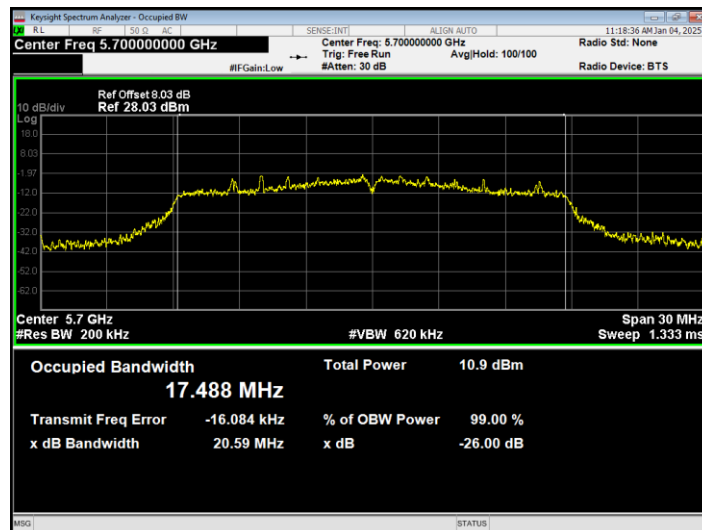


OBW NVNT n40 5510MHz Ant1

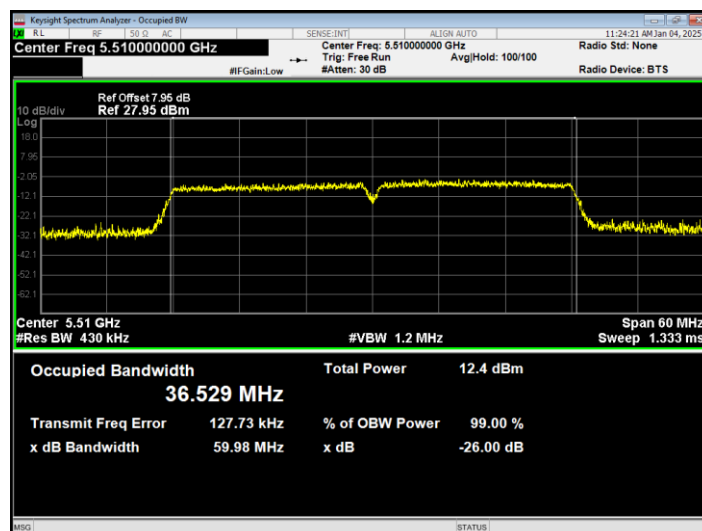

OBW NVNT n40 5550MHz Ant1

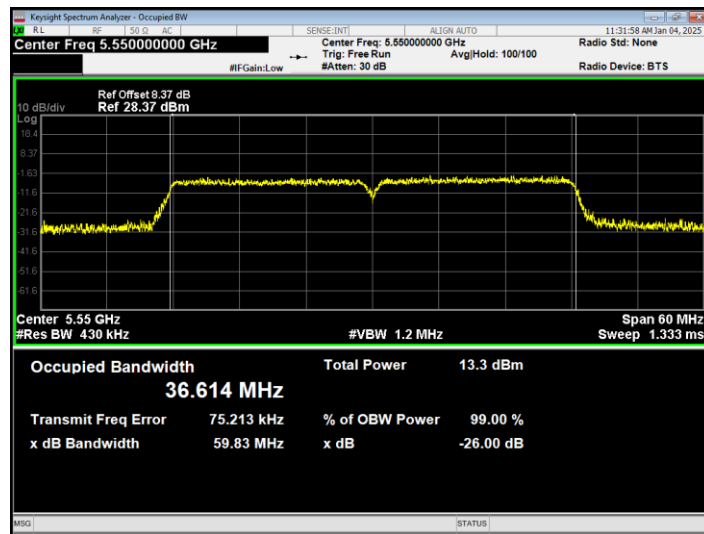


OBW NVNT n40 5670MHz Ant1

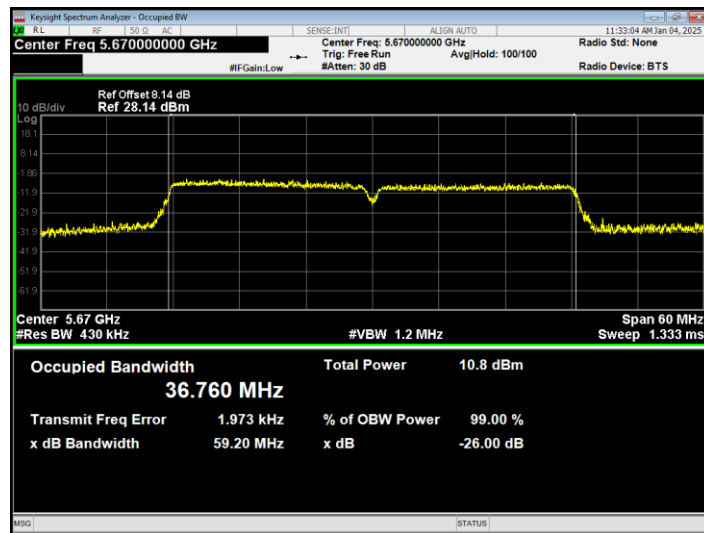


Maximum Power Spectral Density Level

Condition	Mode	Frequency (MHz)	Antenna	Max PSD (dBm)	Duty Factor (dB)	Total PSD (dBm)	Limit (dBm)	Verdict
NVNT	a	5500	Ant1	-2.863	0	-2.863	11	Pass
NVNT	a	5600	Ant1	-2.234	0	-2.234	11	Pass
NVNT	a	5700	Ant1	-3.176	0	-3.176	11	Pass
NVNT	ac20	5500	Ant1	-1.719	1.2	-0.519	11	Pass
NVNT	ac20	5600	Ant1	-0.472	0	-0.472	11	Pass
NVNT	ac20	5700	Ant1	-1.772	0	-1.772	11	Pass
NVNT	ac40	5510	Ant1	-5.222	0	-5.222	11	Pass
NVNT	ac40	5550	Ant1	-6.456	0	-6.456	11	Pass
NVNT	ac40	5670	Ant1	-7.794	0	-7.794	11	Pass
NVNT	ac80	5530	Ant1	-8.61	1.05	-7.56	11	Pass
NVNT	ax20	5500	Ant1	-1.864	3.02	1.156	11	Pass
NVNT	ax20	5600	Ant1	-0.694	0	-0.694	11	Pass
NVNT	ax20	5700	Ant1	-1.587	0	-1.587	11	Pass
NVNT	ax40	5510	Ant1	-5.126	0	-5.126	11	Pass
NVNT	ax40	5550	Ant1	-6.316	1.2	-5.116	11	Pass
NVNT	ax40	5670	Ant1	-7.758	0	-7.758	11	Pass
NVNT	ax80	5530	Ant1	-8.57	1.15	-7.42	11	Pass
NVNT	n20	5500	Ant1	-2.386	1.22	-1.166	11	Pass
NVNT	n20	5600	Ant1	-2.373	0	-2.373	11	Pass
NVNT	n20	5700	Ant1	-3.392	0	-3.392	11	Pass
NVNT	n40	5510	Ant1	-6.849	1.2	-5.649	11	Pass
NVNT	n40	5550	Ant1	-6.567	0	-6.567	11	Pass
NVNT	n40	5670	Ant1	-7.555	0	-7.555	11	Pass


PSD NVNT a 5500MHz Ant1

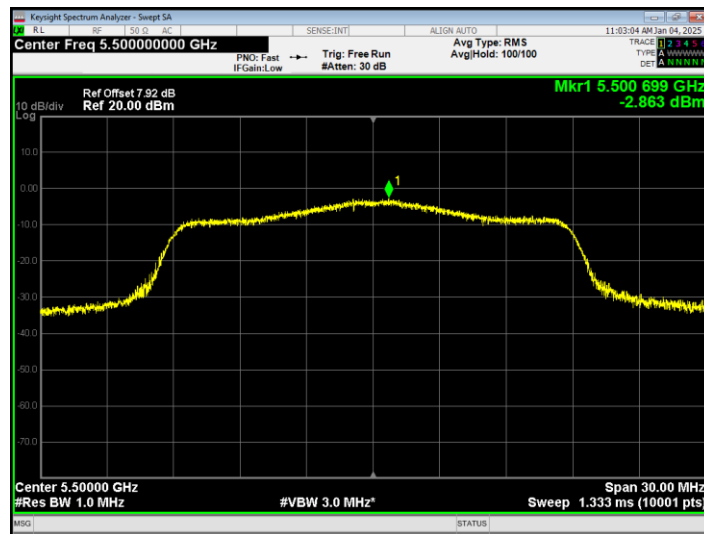


PSD NVNT a 5600MHz Ant1

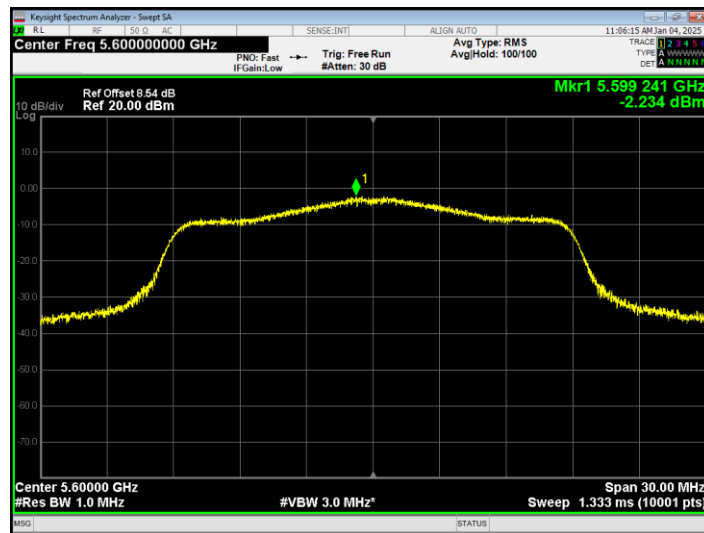


PSD NVNT a 5700MHz Ant1

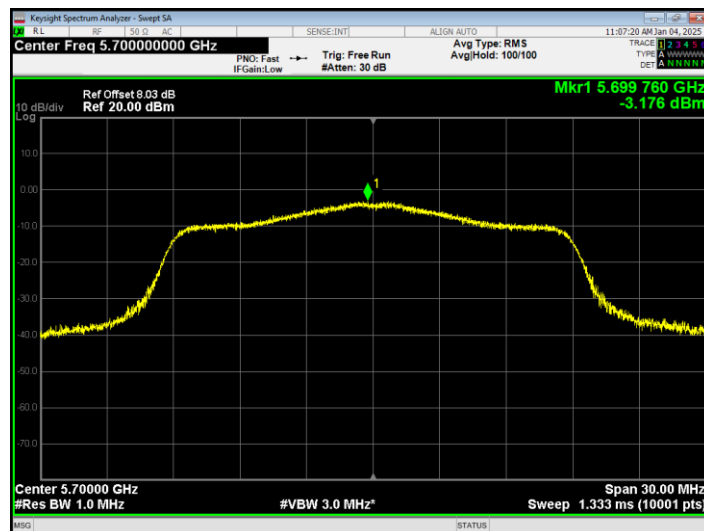


PSD NVNT ac20 5500MHz Ant1

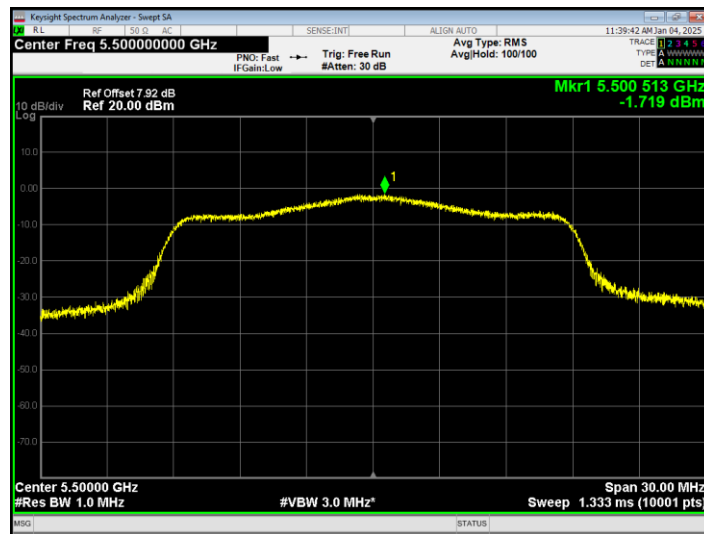


PSD NVNT ac20 5600MHz Ant1

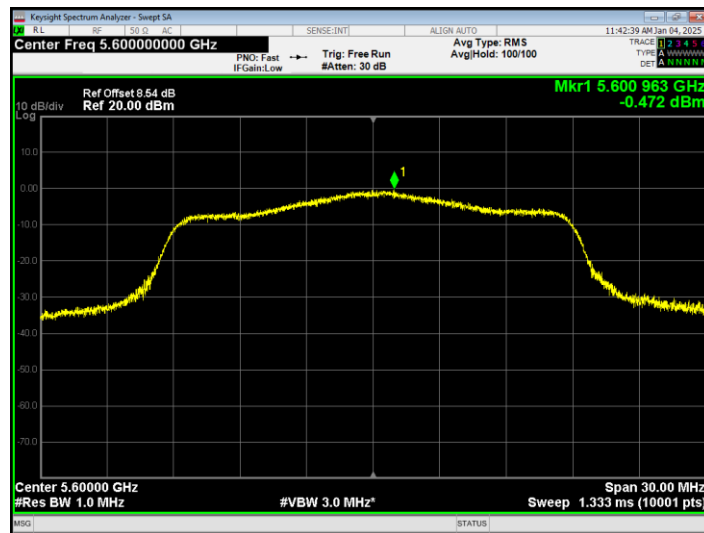


PSD NVNT ac20 5700MHz Ant1

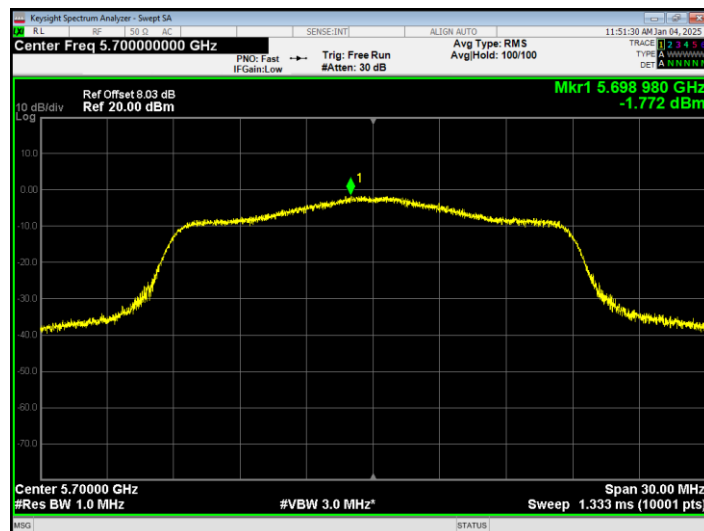

PSD NVNT ac40 5510MHz Ant1

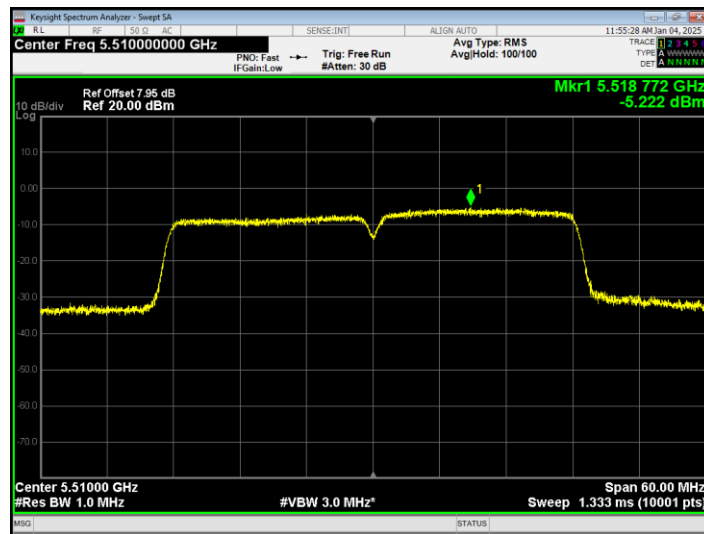

PSD NVNT ac40 5550MHz Ant1

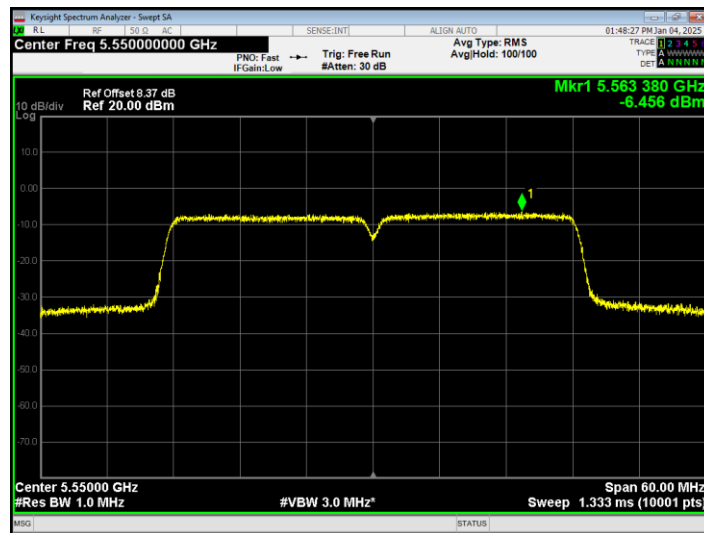


PSD NVNT ac40 5670MHz Ant1




PSD NVNT ac80 5530MHz Ant1




PSD NVNT ax20 5500MHz Ant1

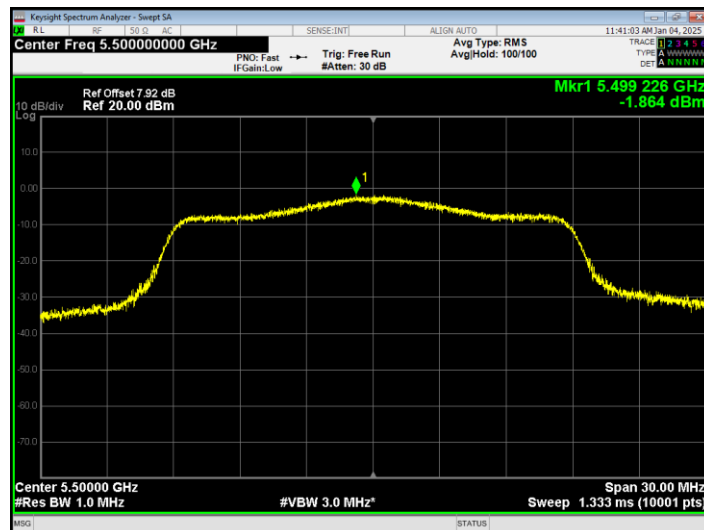


PSD NVNT ax20 5600MHz Ant1

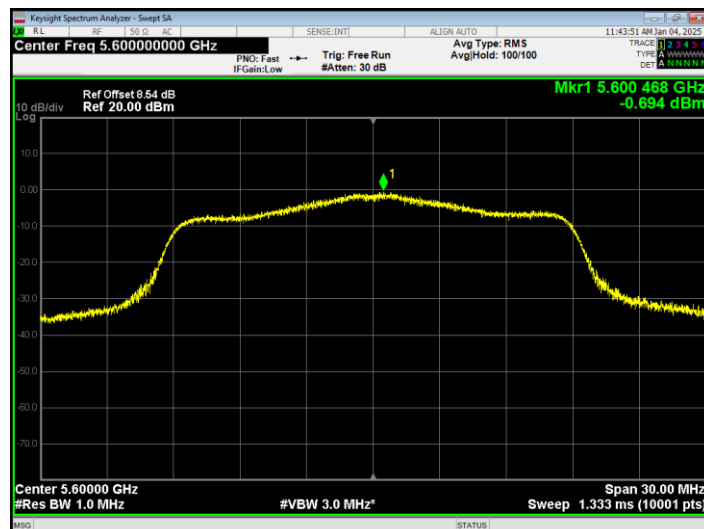


PSD NVNT ax20 5700MHz Ant1

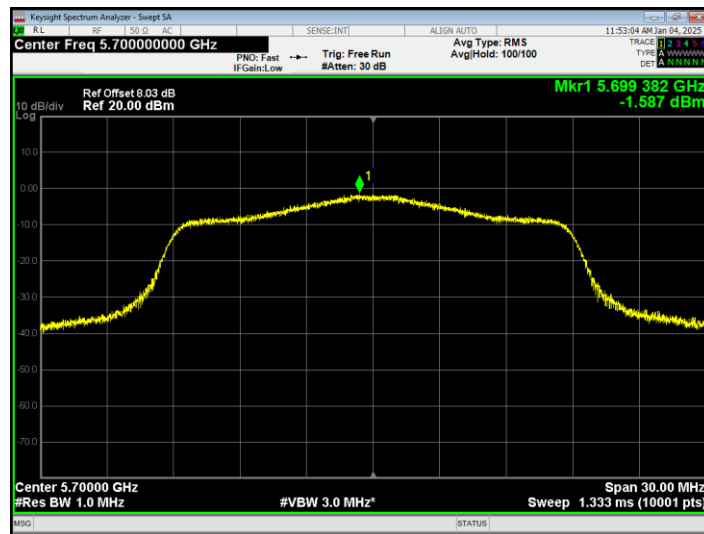

PSD NVNT ax40 5510MHz Ant1

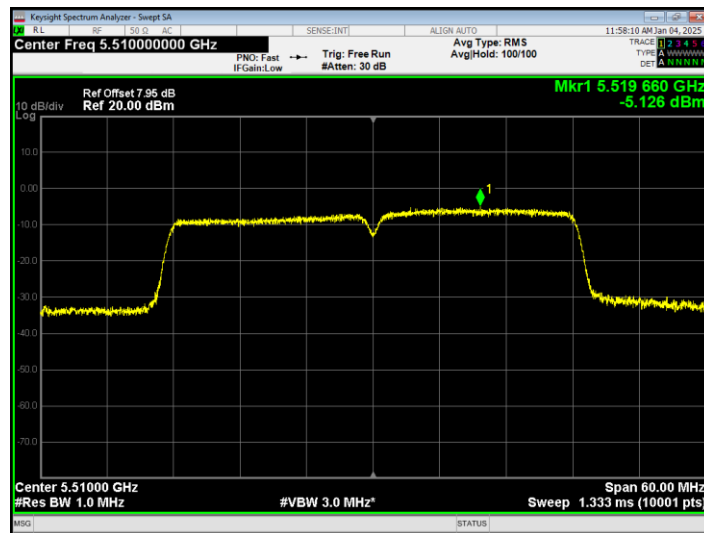


PSD NVNT ax40 5550MHz Ant1

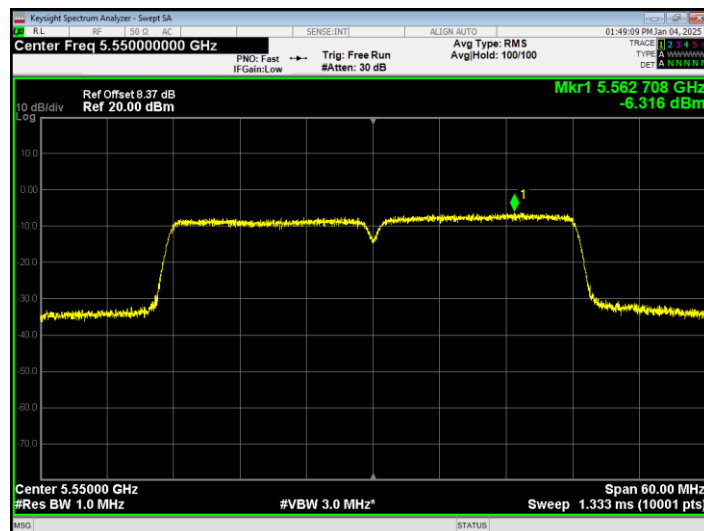


PSD NVNT ax40 5670MHz Ant1



PSD NVNT ax80 5530MHz Ant1

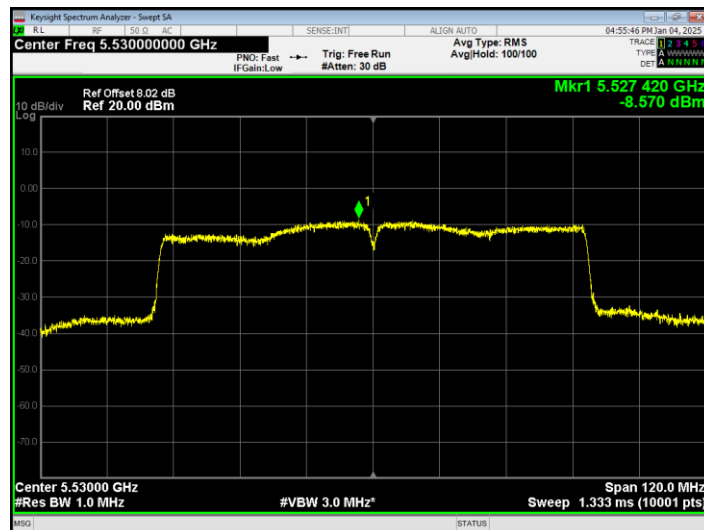


PSD NVNT n20 5500MHz Ant1

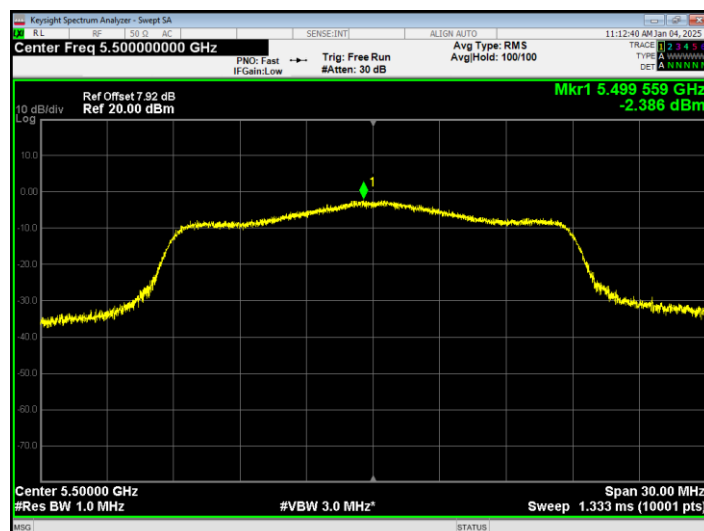


PSD NVNT n20 5600MHz Ant1




PSD NVNT n20 5700MHz Ant1

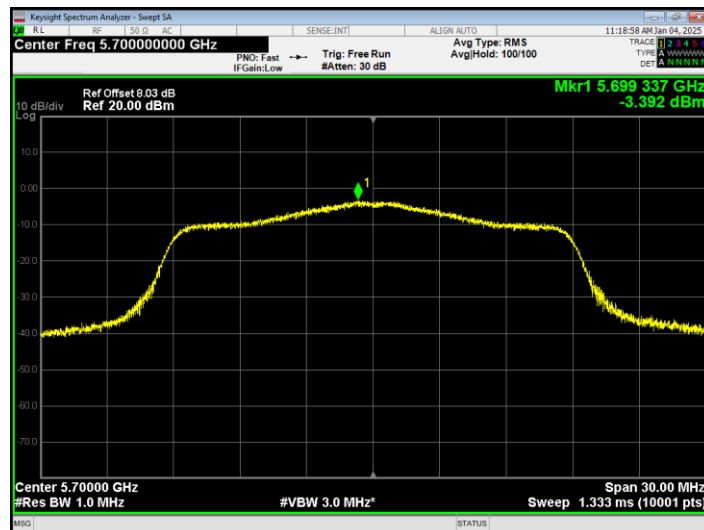

PSD NVNT n40 5510MHz Ant1

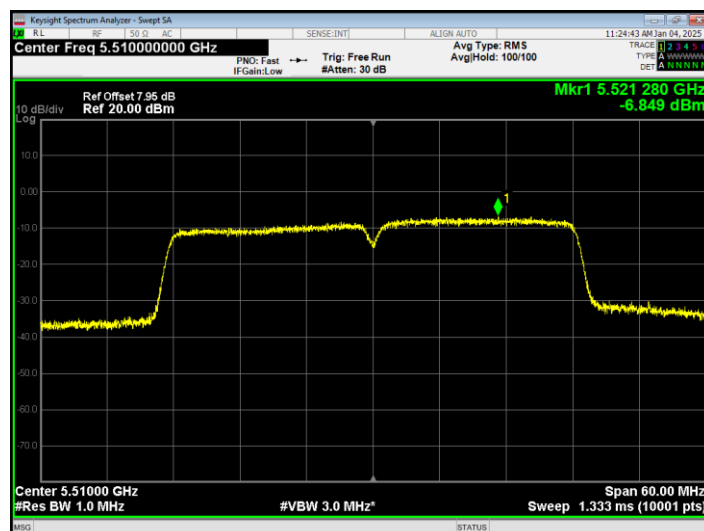

PSD NVNT n40 5550MHz Ant1

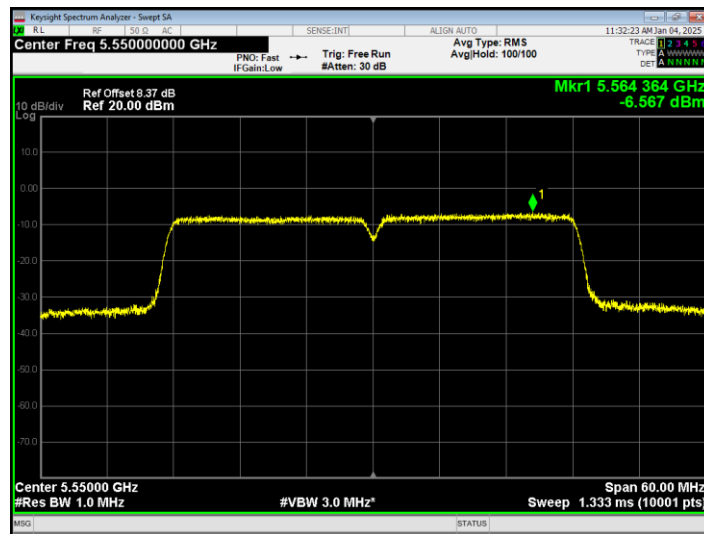


PSD NVNT n40 5670MHz Ant1




Duty Cycle

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)
NVNT	a	5500	Ant2	98.97	0
NVNT	a	5600	Ant2	98.97	0
NVNT	a	5700	Ant2	98.97	0
NVNT	ac20	5500	Ant2	75.89	1.2
NVNT	ac20	5600	Ant2	98.97	0
NVNT	ac20	5700	Ant2	98.97	0
NVNT	ac40	5510	Ant2	99.36	0
NVNT	ac40	5550	Ant2	98.71	0
NVNT	ac40	5670	Ant2	99.36	0
NVNT	ac80	5530	Ant2	78.57	1.05
NVNT	ax20	5500	Ant2	75.98	1.19
NVNT	ax20	5600	Ant2	75.89	1.2
NVNT	ax20	5700	Ant2	98.97	0
NVNT	ax40	5510	Ant2	99.36	0
NVNT	ax40	5550	Ant2	99.36	0
NVNT	ax40	5670	Ant2	99.36	0
NVNT	ax80	5530	Ant2	78.57	1.05
NVNT	n20	5500	Ant2	99.66	0
NVNT	n20	5600	Ant2	98.97	0
NVNT	n20	5700	Ant2	98.97	0
NVNT	n40	5510	Ant2	75.86	1.2
NVNT	n40	5550	Ant2	75.86	1.2
NVNT	n40	5670	Ant2	98.71	0


Duty Cycle NVNT a 5500MHz Ant2

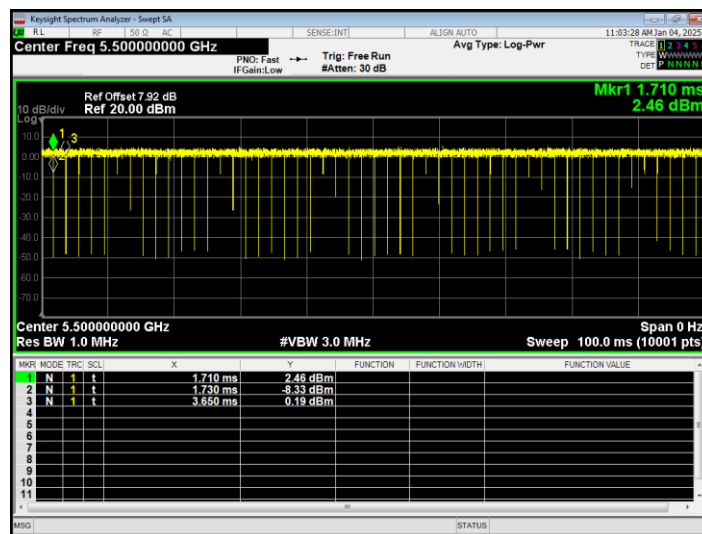


Duty Cycle NVNT a 5600MHz Ant2

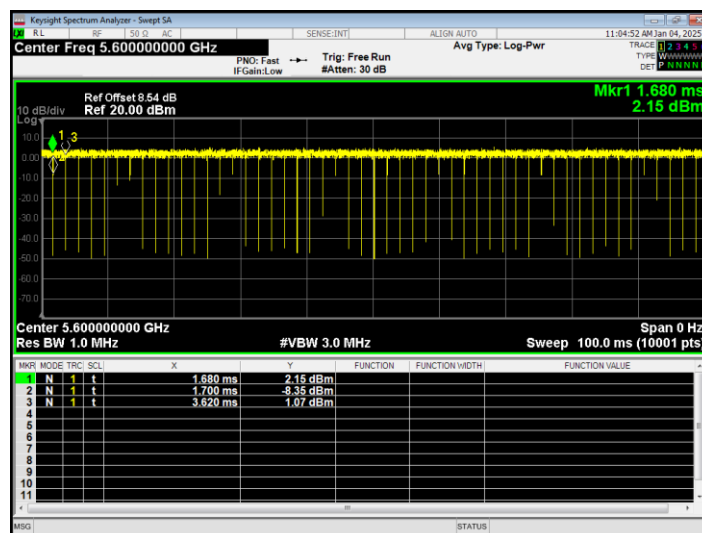


Duty Cycle NVNT a 5700MHz Ant2

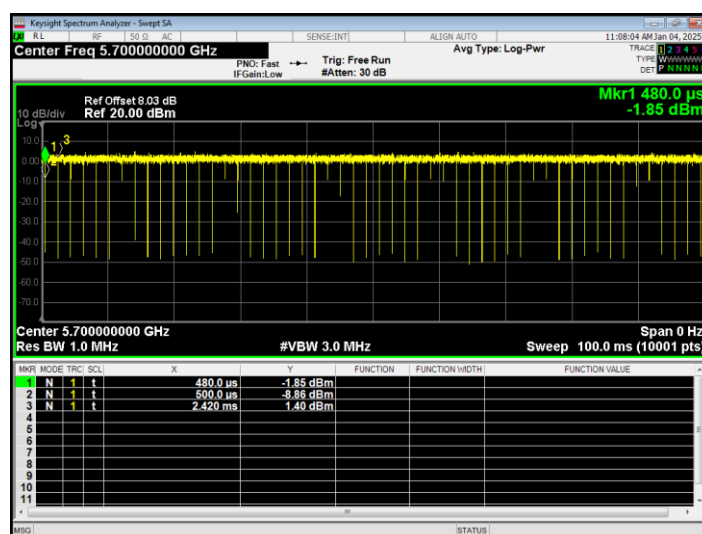


Duty Cycle NVNT ac20 5500MHz Ant2

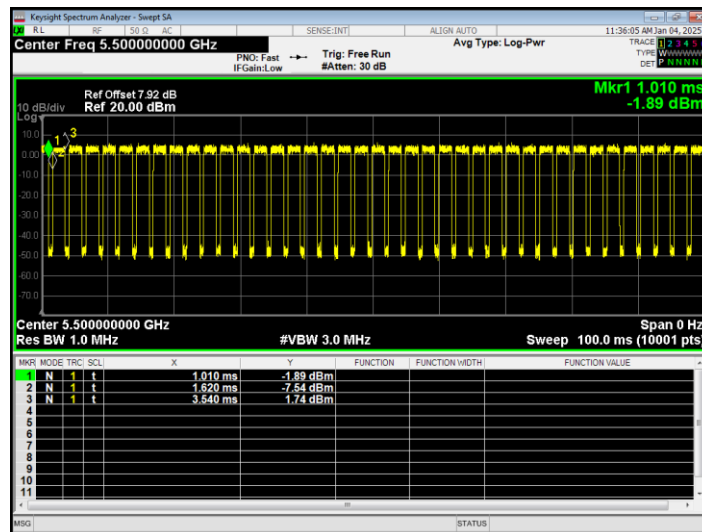


Duty Cycle NVNT ac20 5600MHz Ant2

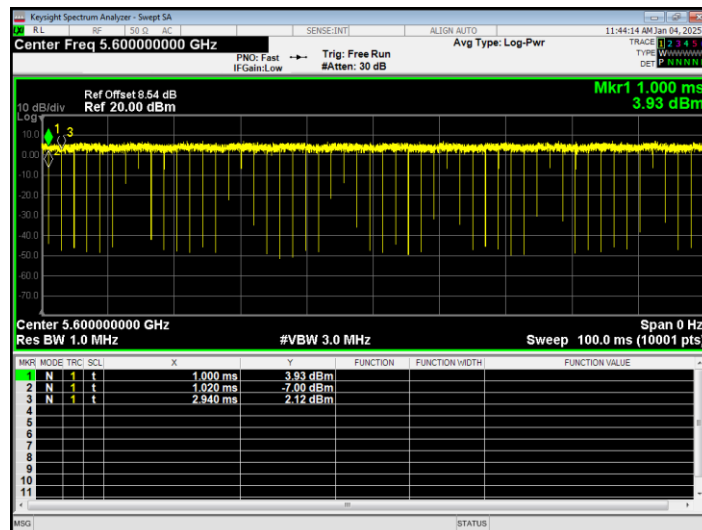


Duty Cycle NVNT ac20 5700MHz Ant2

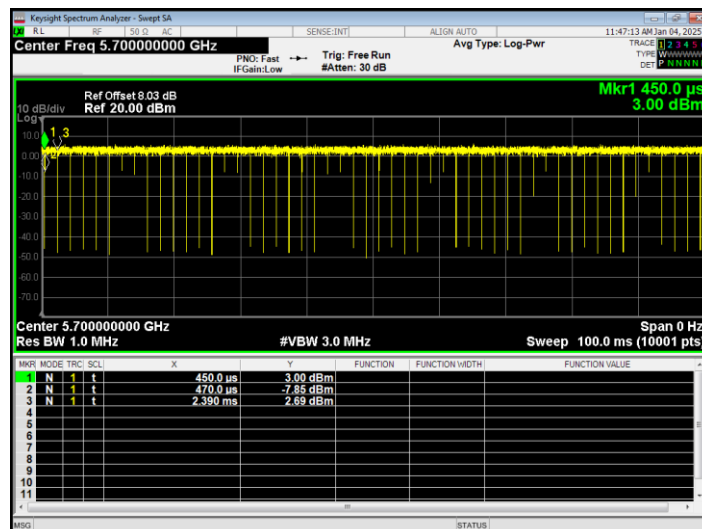


Duty Cycle NVNT ac40 5510MHz Ant2

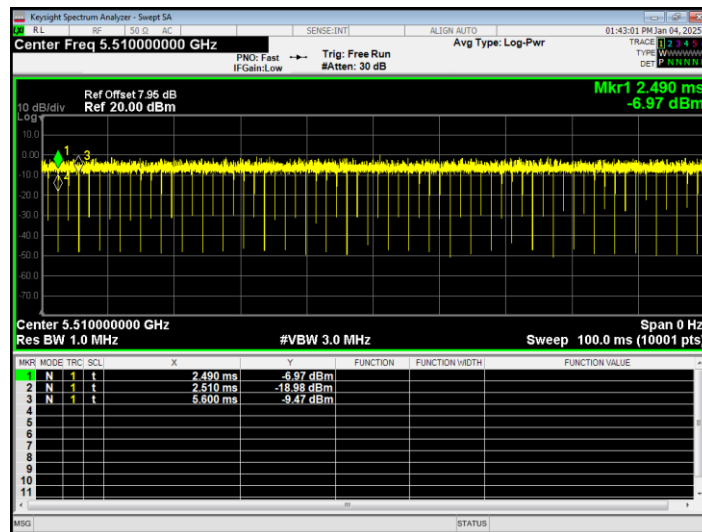


Duty Cycle NVNT ac40 5550MHz Ant2

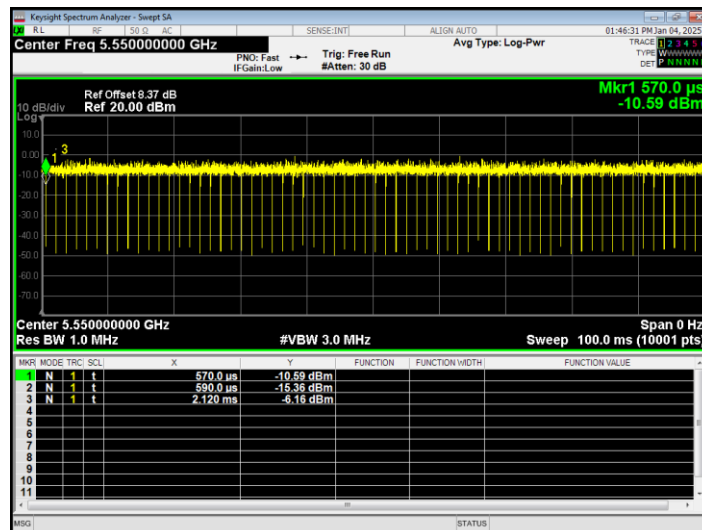


Duty Cycle NVNT ac40 5670MHz Ant2

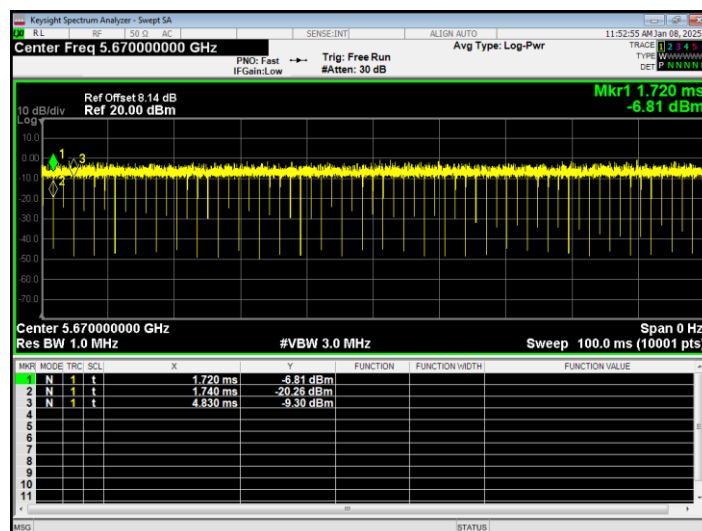


Duty Cycle NVNT ac80 5530MHz Ant2

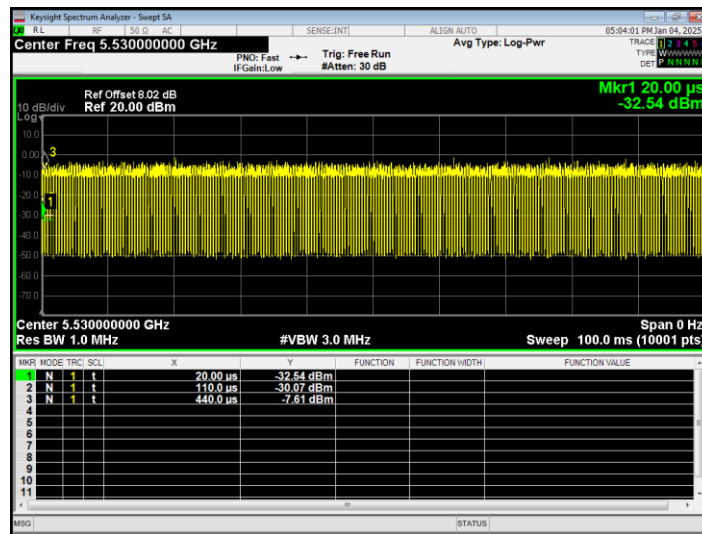


Duty Cycle NVNT ax20 5500MHz Ant2

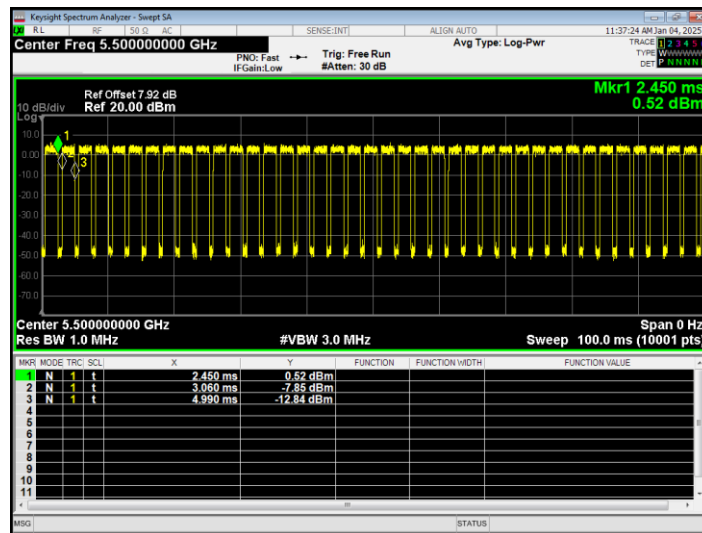


Duty Cycle NVNT ax20 5600MHz Ant2

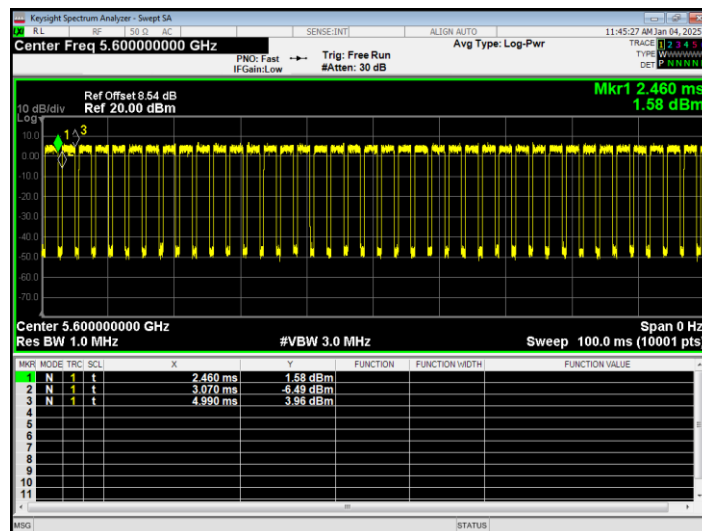

Duty Cycle NVNT ax20 5700MHz Ant2

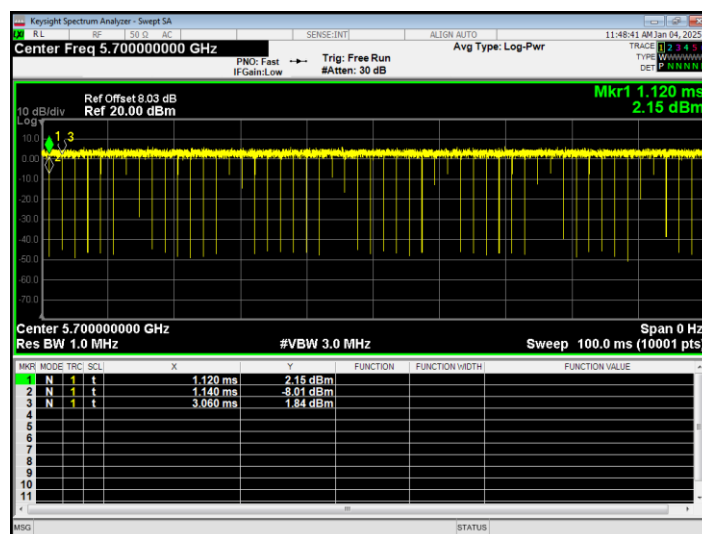

Duty Cycle NVNT ax40 5510MHz Ant2

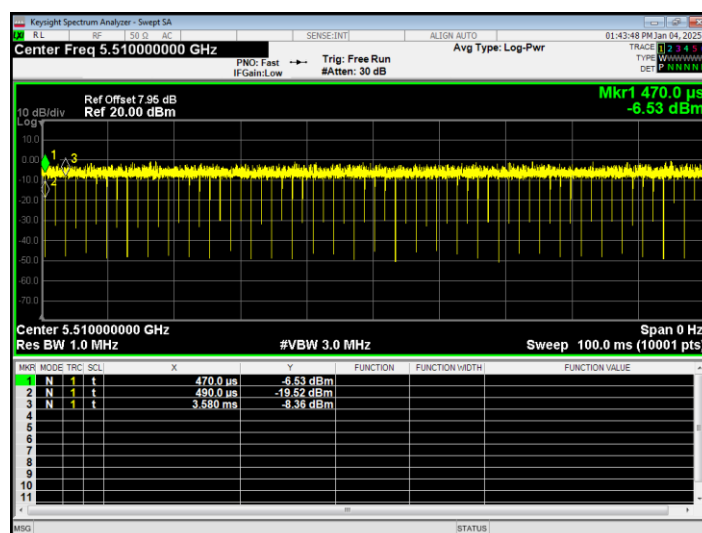

Duty Cycle NVNT ax40 5550MHz Ant2

