




Band Edge NVNT ac20 5180MHz Low Ant1

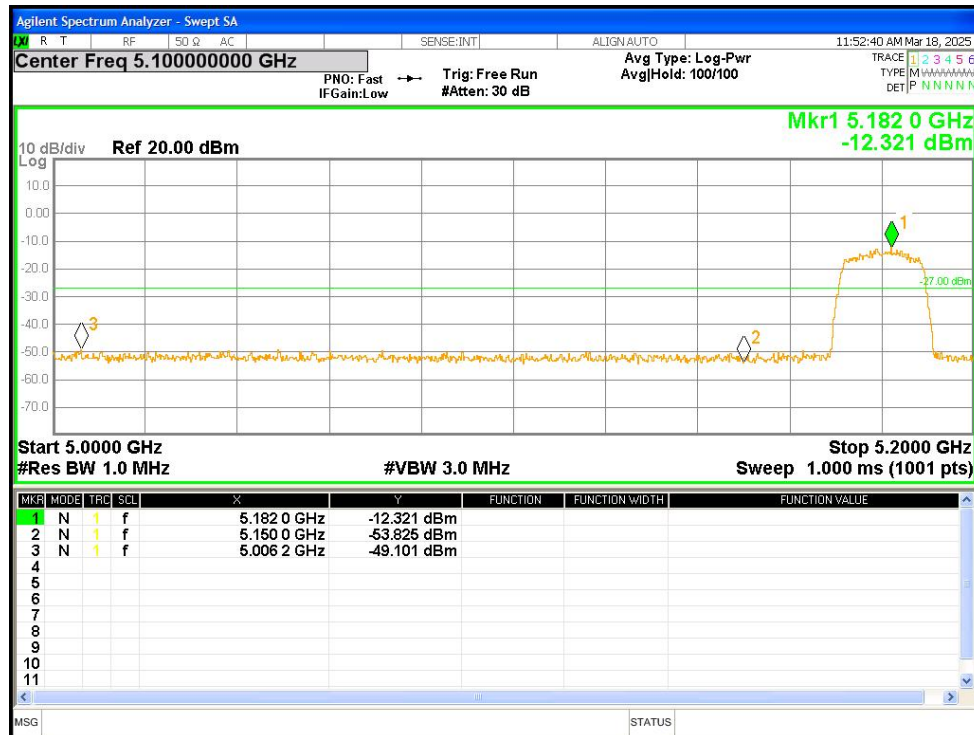


Band Edge NVNT ac20 5240MHz High Ant1

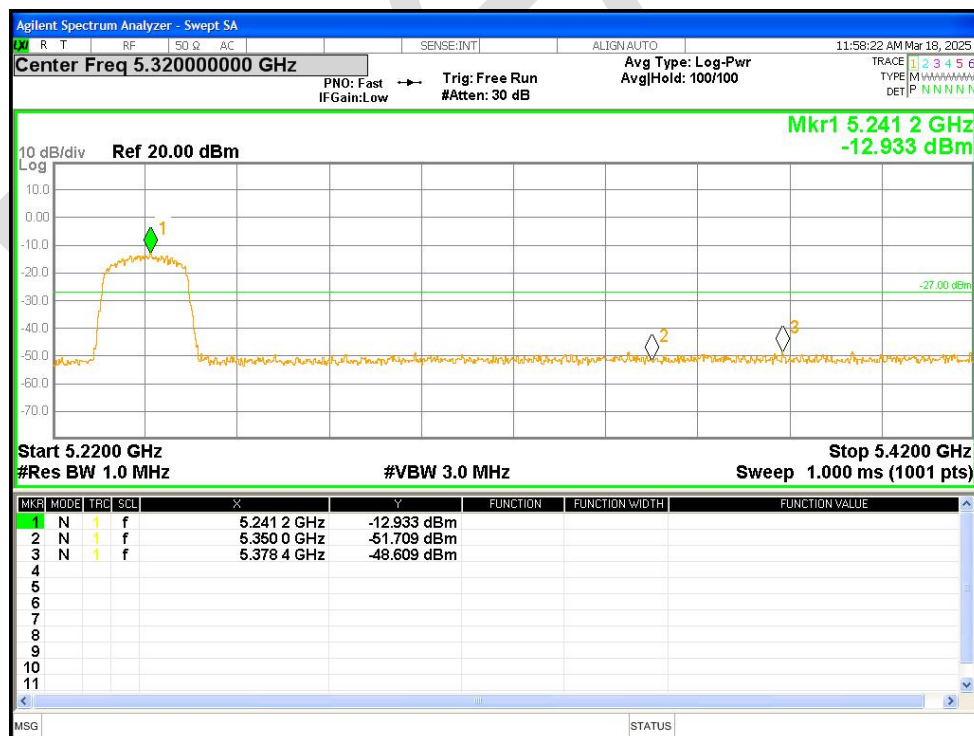


Band Edge NVNT ac20 5745MHz Low Ant1

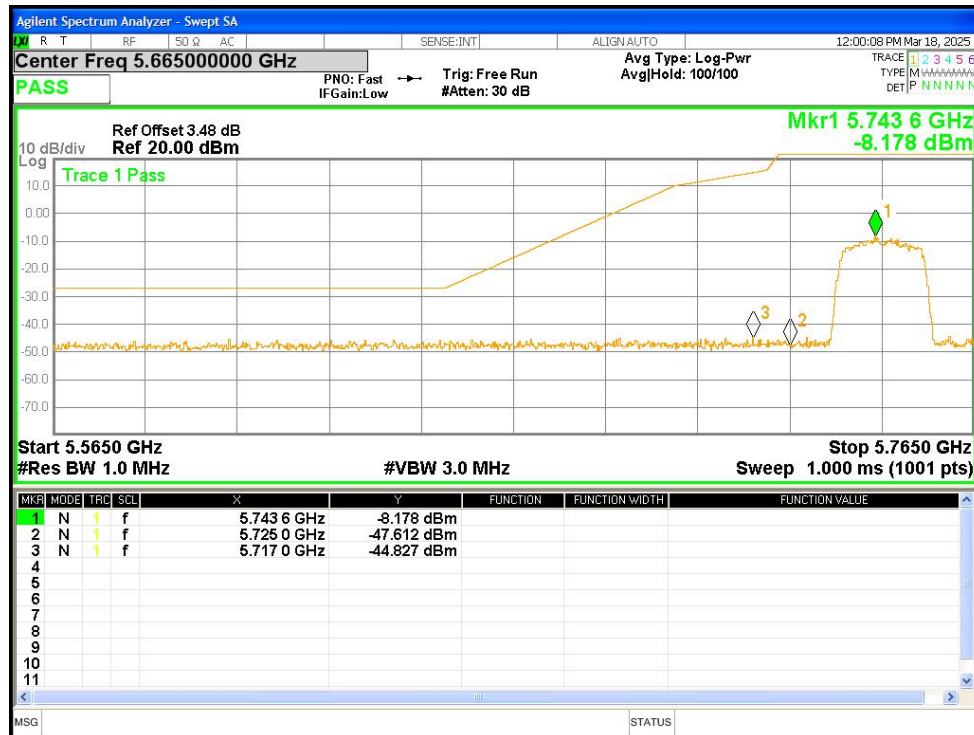


Band Edge NVNT ac20 5825MHz High Ant1

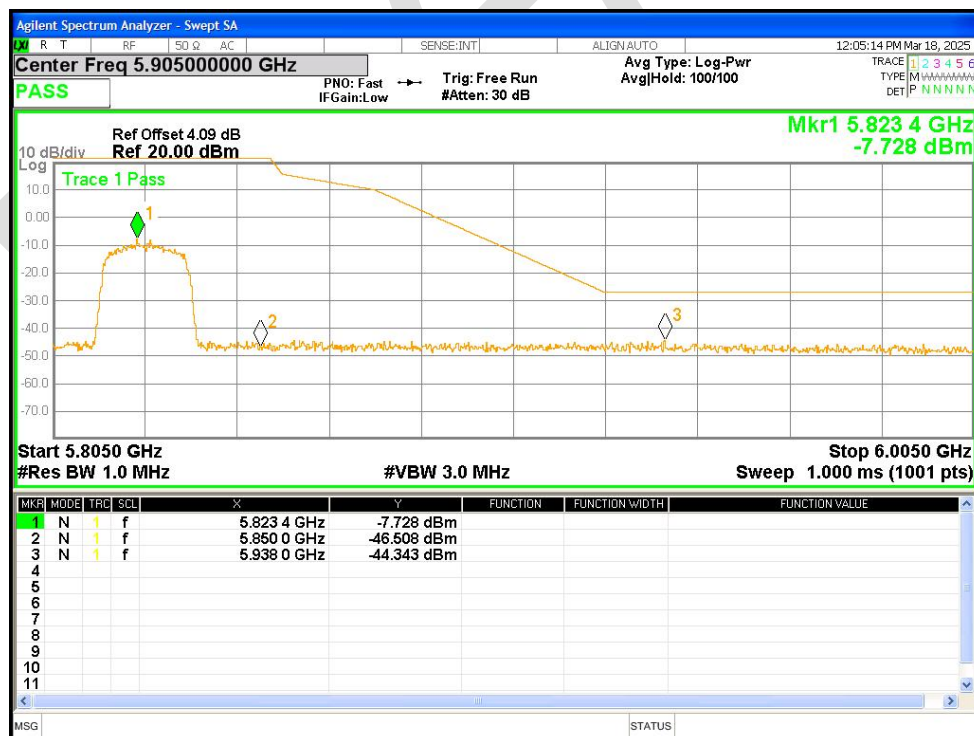


Band Edge NVNT ac40 5190MHz Low Ant1

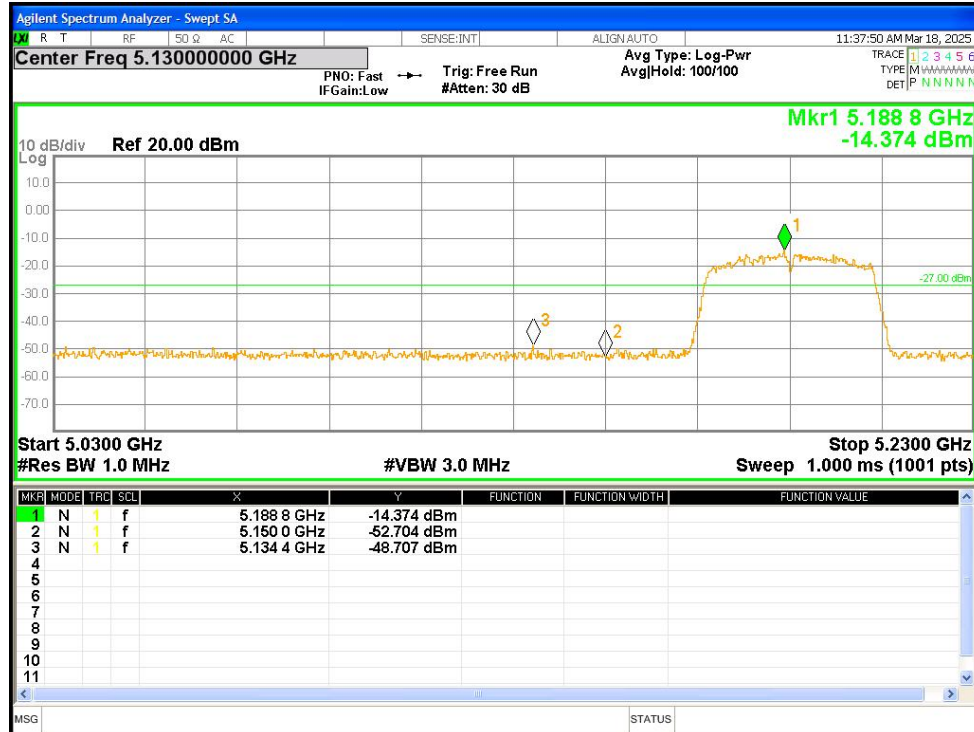

Band Edge NVNT ac40 5230MHz High Ant1

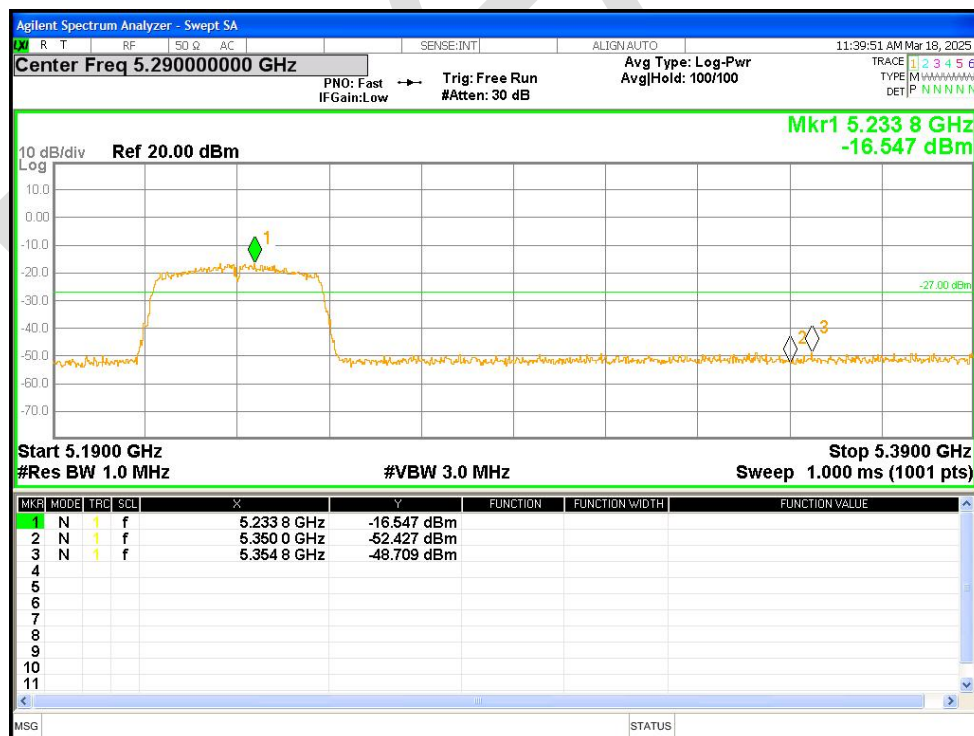


Band Edge NVNT ac40 5755MHz Low Ant1

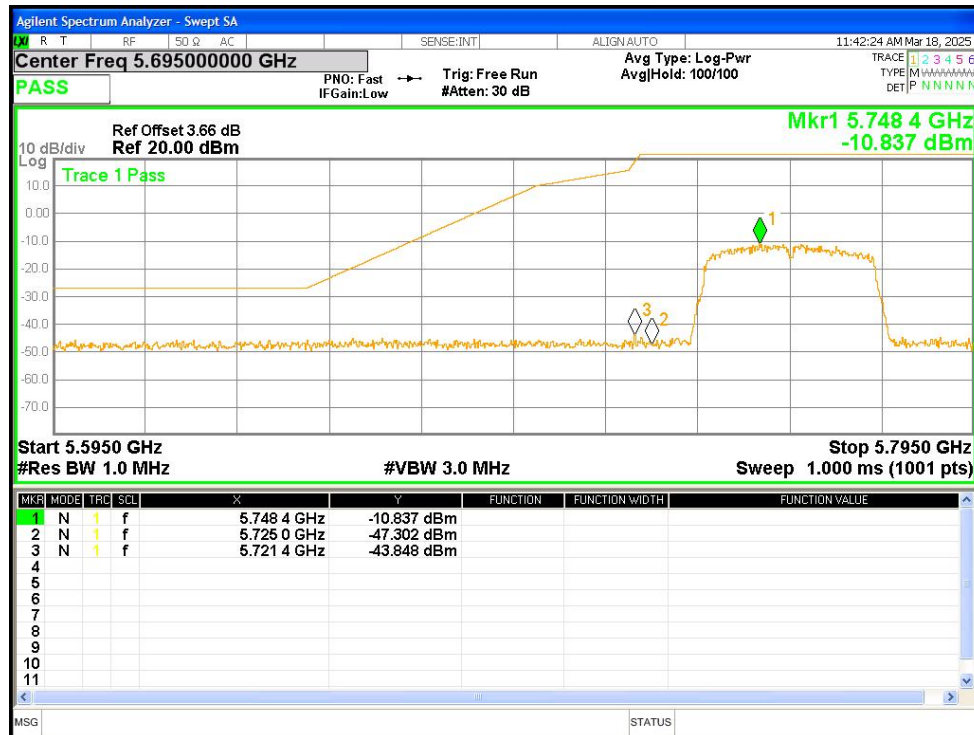


Band Edge NVNT ac40 5795MHz High Ant1



Band Edge NVNT ac80 5210MHz Low Ant1

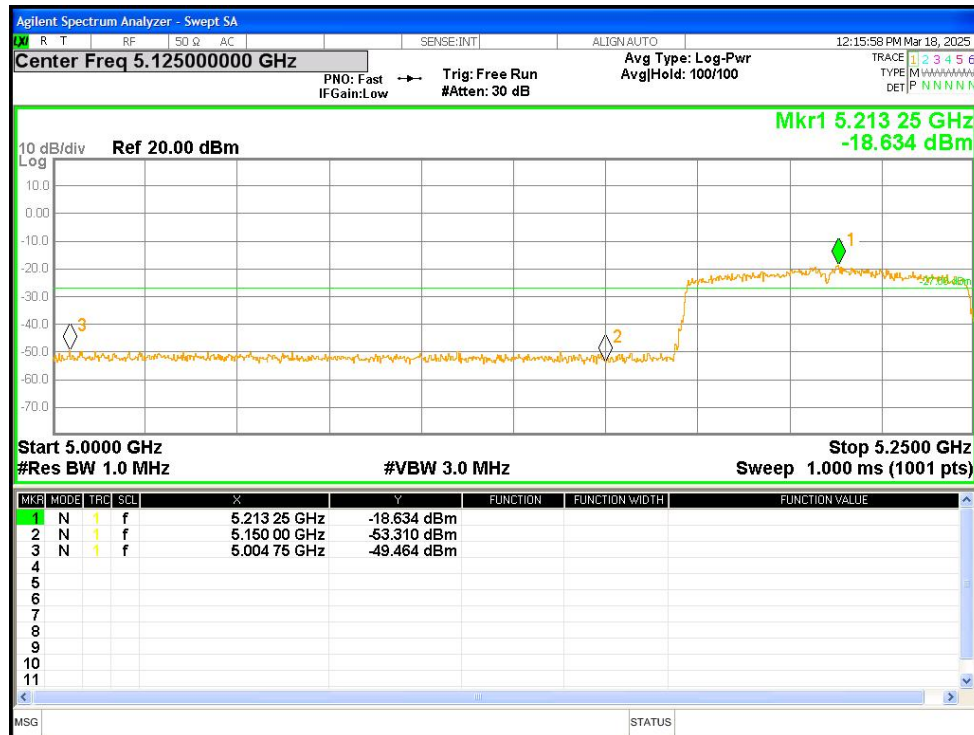


Band Edge NVNT ac80 5775MHz High Ant1

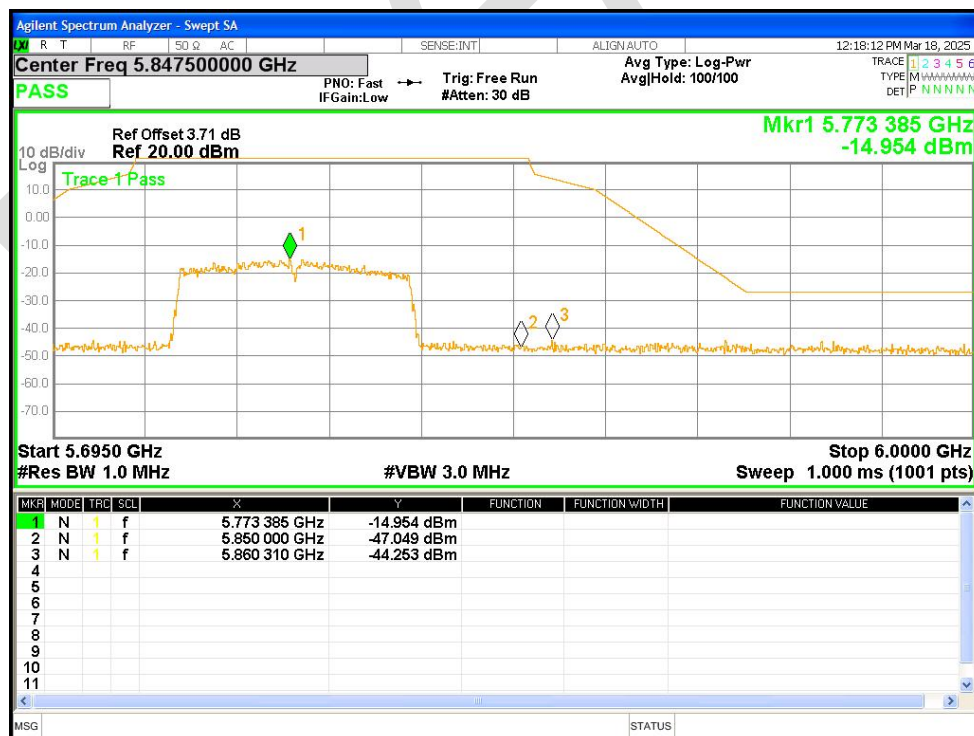


7.6 Frequency Stability

Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	a	5180	Ant1	5180.02	20000	3.86	25	Pass
NVNT	a	5200	Ant1	5200	0	0	25	Pass
NVNT	a	5240	Ant1	5240	0	0	25	Pass
NVNT	a	5745	Ant1	5744.98	-20000	-3.48	25	Pass
NVNT	a	5785	Ant1	5785.02	20000	3.46	25	Pass
NVNT	a	5825	Ant1	5824.98	-20000	-3.43	25	Pass
NVNT	n20	5180	Ant1	5179.96	-40000	-7.72	25	Pass
NVNT	n20	5200	Ant1	5199.98	-20000	-3.85	25	Pass
NVNT	n20	5240	Ant1	5240.02	20000	3.82	25	Pass
NVNT	n20	5745	Ant1	5744.98	-20000	-3.48	25	Pass
NVNT	n20	5785	Ant1	5784.98	-20000	-3.46	25	Pass
NVNT	n20	5825	Ant1	5824.98	-20000	-3.43	25	Pass
NVNT	n40	5190	Ant1	5189.96	-40000	-7.71	25	Pass
NVNT	n40	5230	Ant1	5230	0	0	25	Pass
NVNT	n40	5755	Ant1	5754.92	-80000	-13.9	25	Pass
NVNT	n40	5795	Ant1	5795	0	0	25	Pass
NVNT	ac20	5180	Ant1	5180	0	0	25	Pass
NVNT	ac20	5200	Ant1	5199.96	-40000	-7.69	25	Pass
NVNT	ac20	5240	Ant1	5240	0	0	25	Pass
NVNT	ac20	5745	Ant1	5744.96	-40000	-6.96	25	Pass
NVNT	ac20	5785	Ant1	5784.96	-40000	-6.91	25	Pass
NVNT	ac20	5825	Ant1	5824.98	-20000	-3.43	25	Pass
NVNT	ac40	5190	Ant1	5189.96	-40000	-7.71	25	Pass
NVNT	ac40	5230	Ant1	5230	0	0	25	Pass
NVNT	ac40	5755	Ant1	5754.96	-40000	-6.95	25	Pass
NVNT	ac40	5795	Ant1	5794.96	-40000	-6.9	25	Pass
NVNT	ac80	5210	Ant1	5209.92	-80000	-15.36	25	Pass
NVNT	ac80	5775	Ant1	5774.92	-80000	-13.85	25	Pass


Freq. Stability NVNT a 5180MHz Ant1

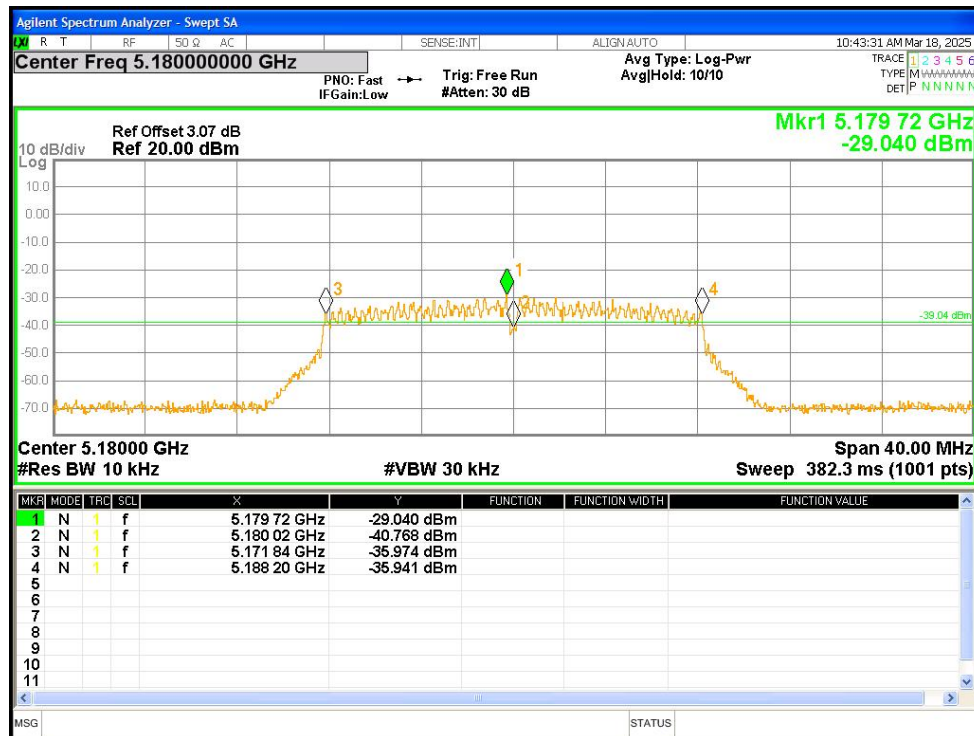


Freq. Stability NVNT a 5200MHz Ant1

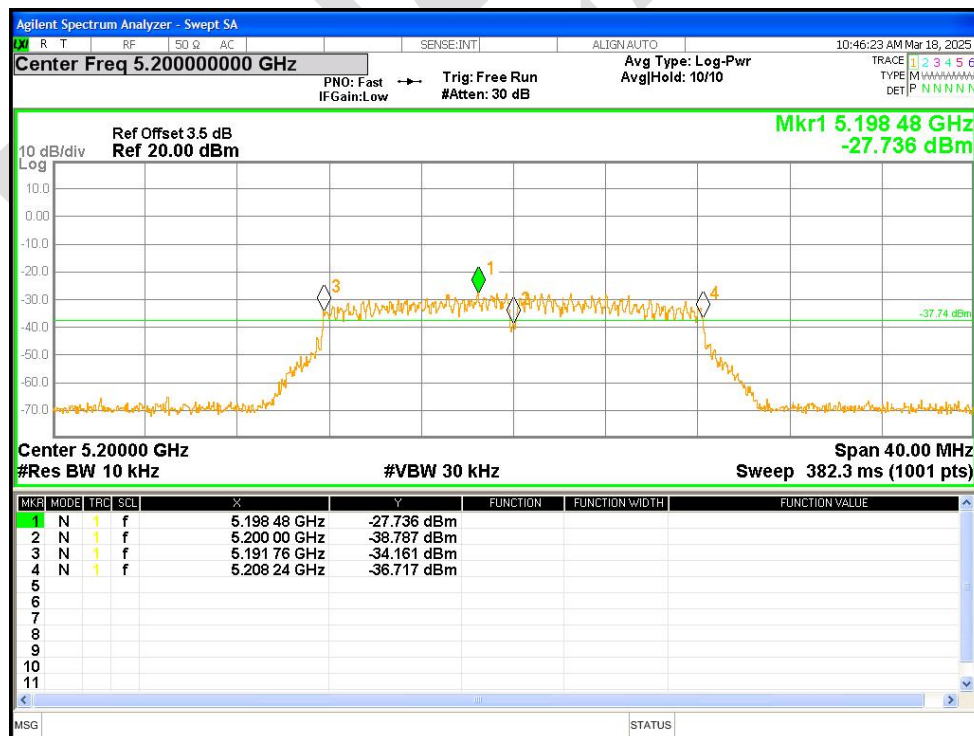


Freq. Stability NVNT a 5240MHz Ant1

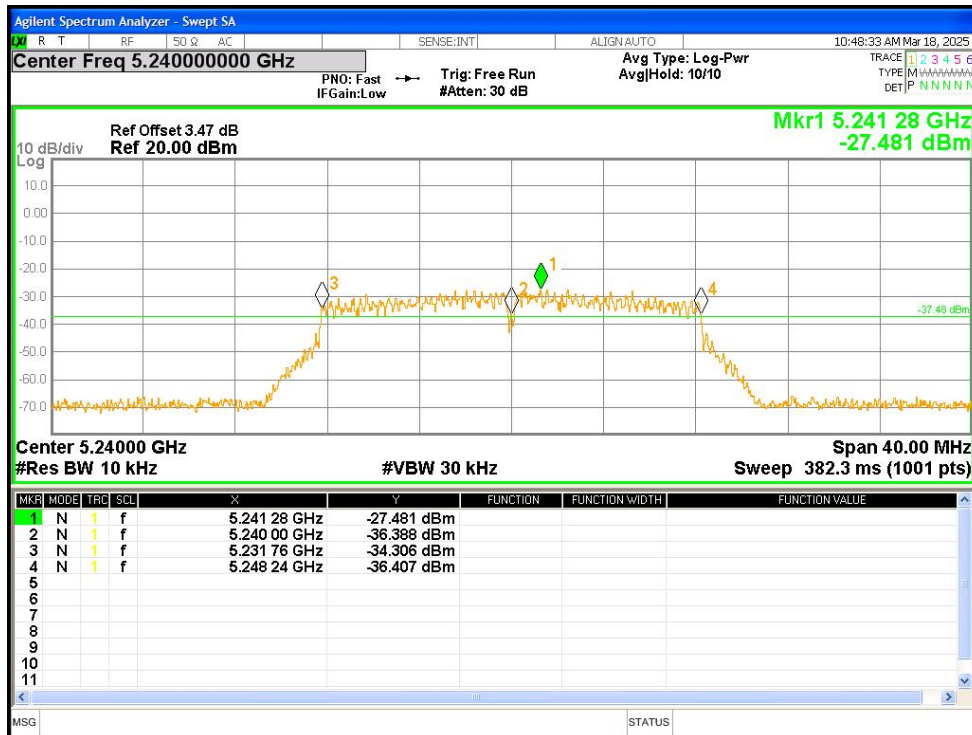


Freq. Stability NVNT a 5745MHz Ant1

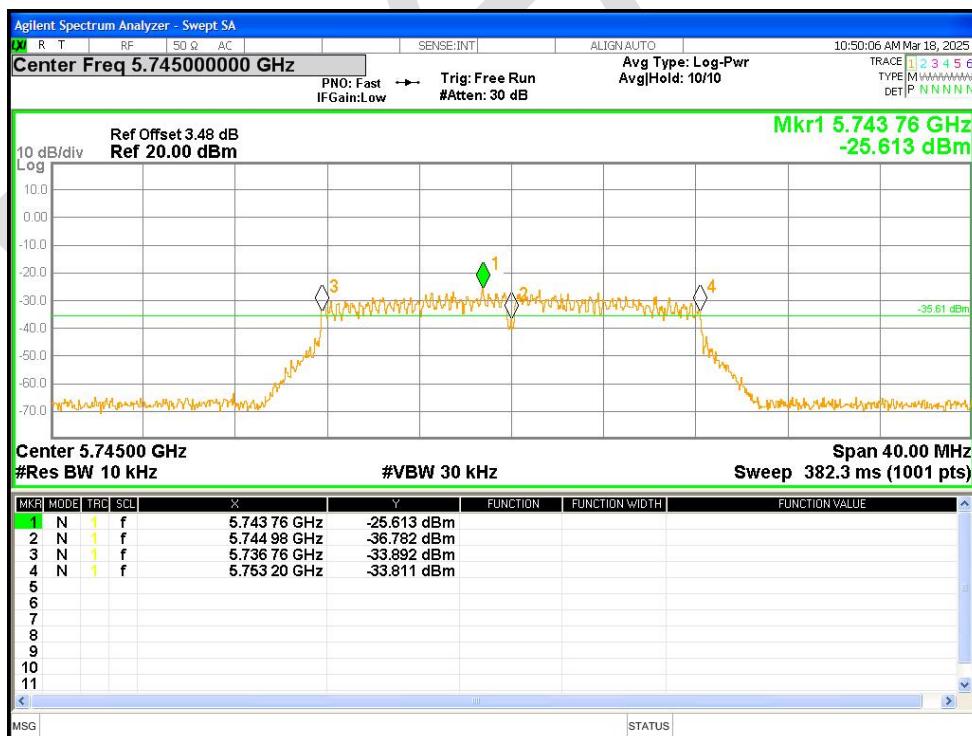


Freq. Stability NVNT a 5785MHz Ant1

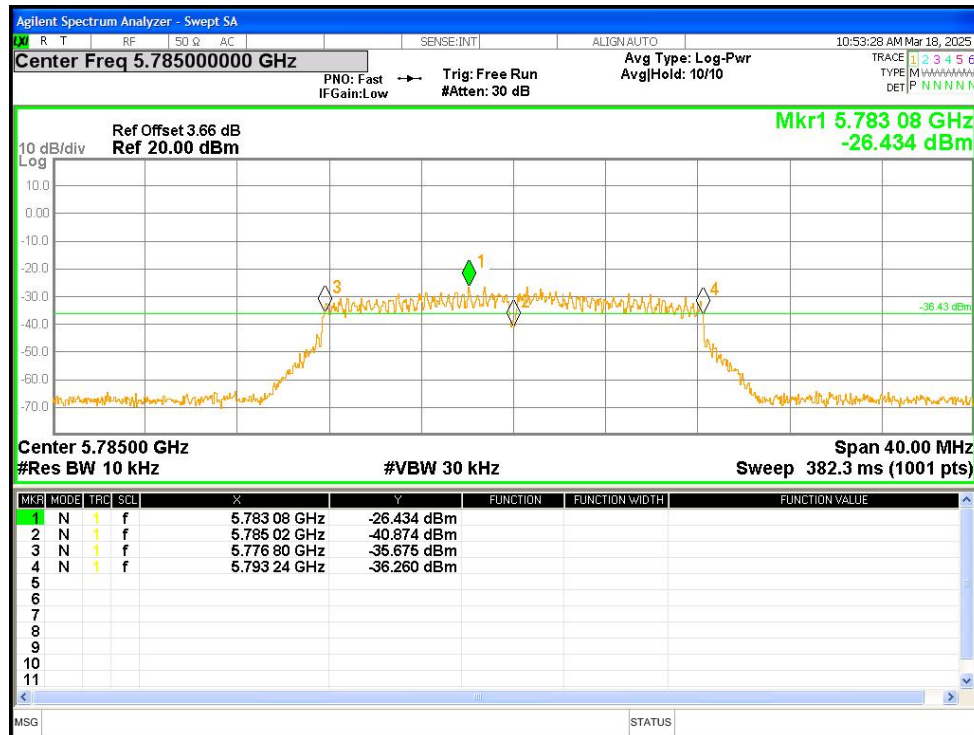


Freq. Stability NVNT a 5825MHz Ant1

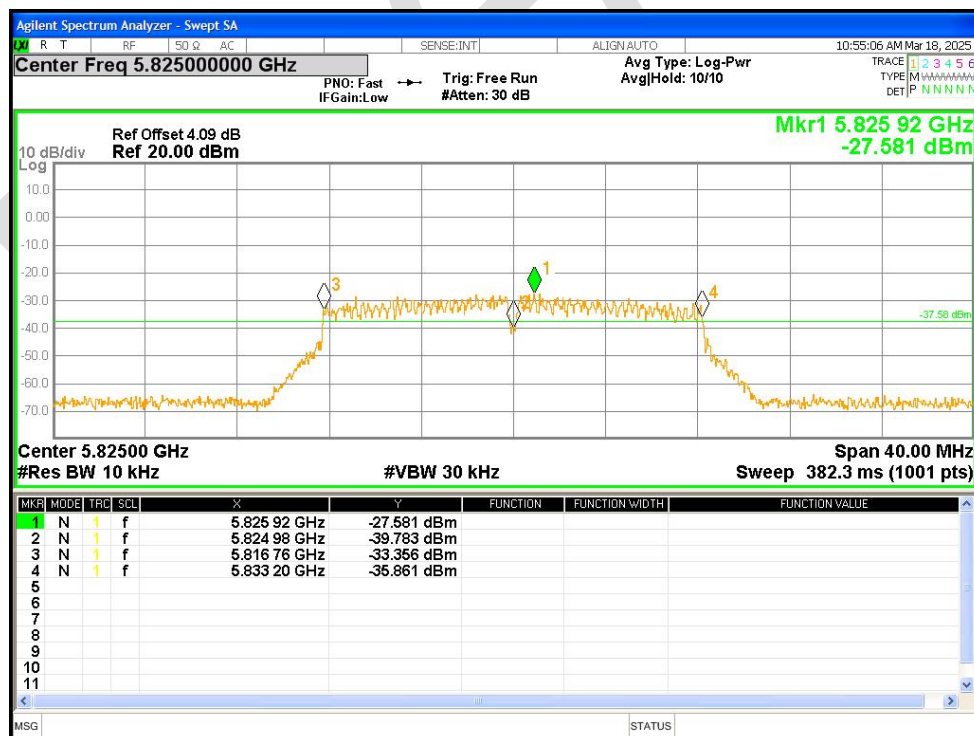


Freq. Stability NVNT n20 5180MHz Ant1

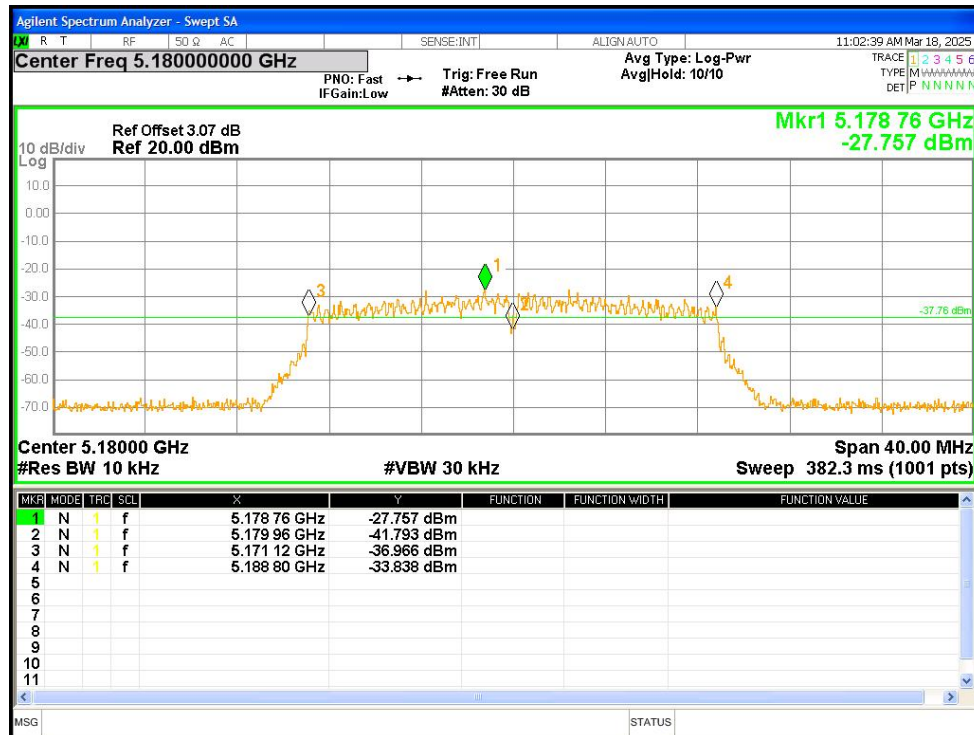


Freq. Stability NVNT n20 5200MHz Ant1

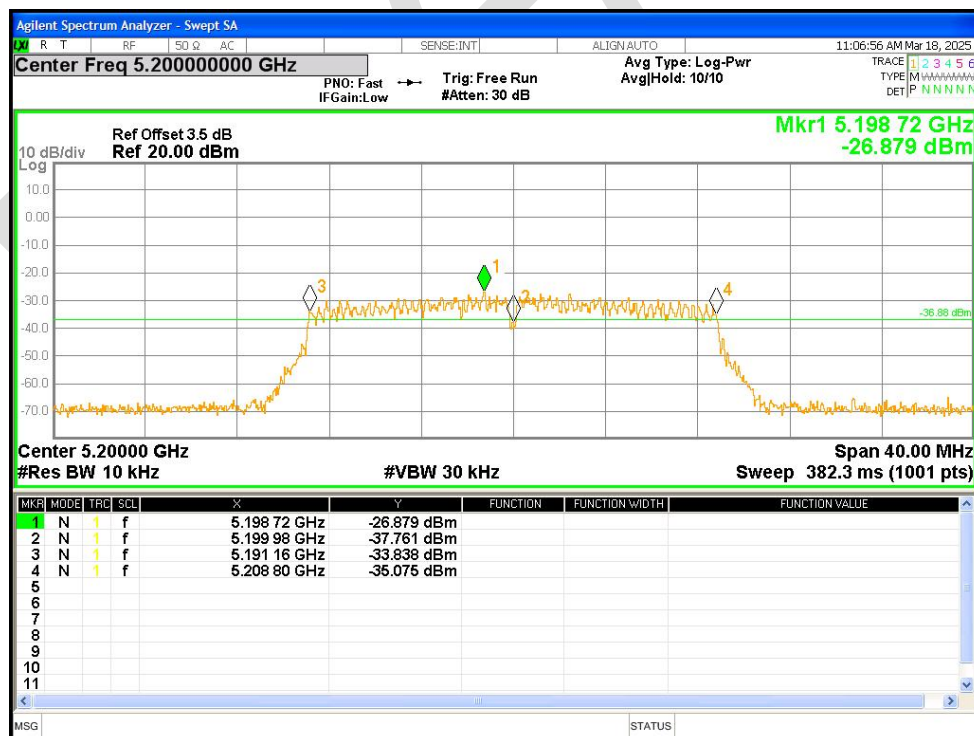


Freq. Stability NVNT n20 5240MHz Ant1

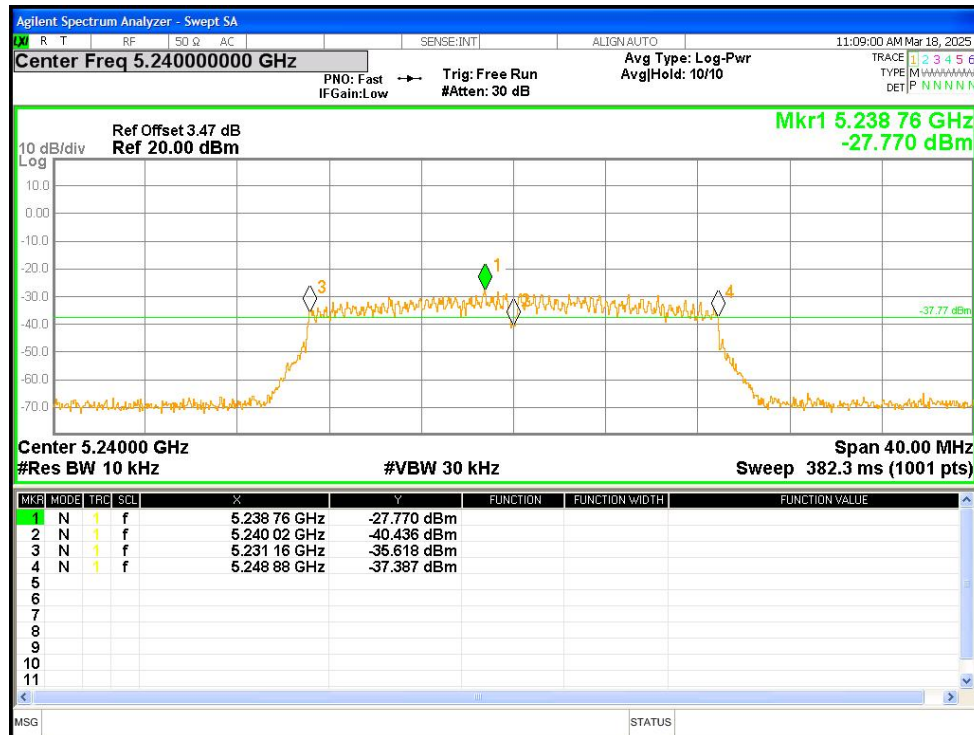


Freq. Stability NVNT n20 5745MHz Ant1

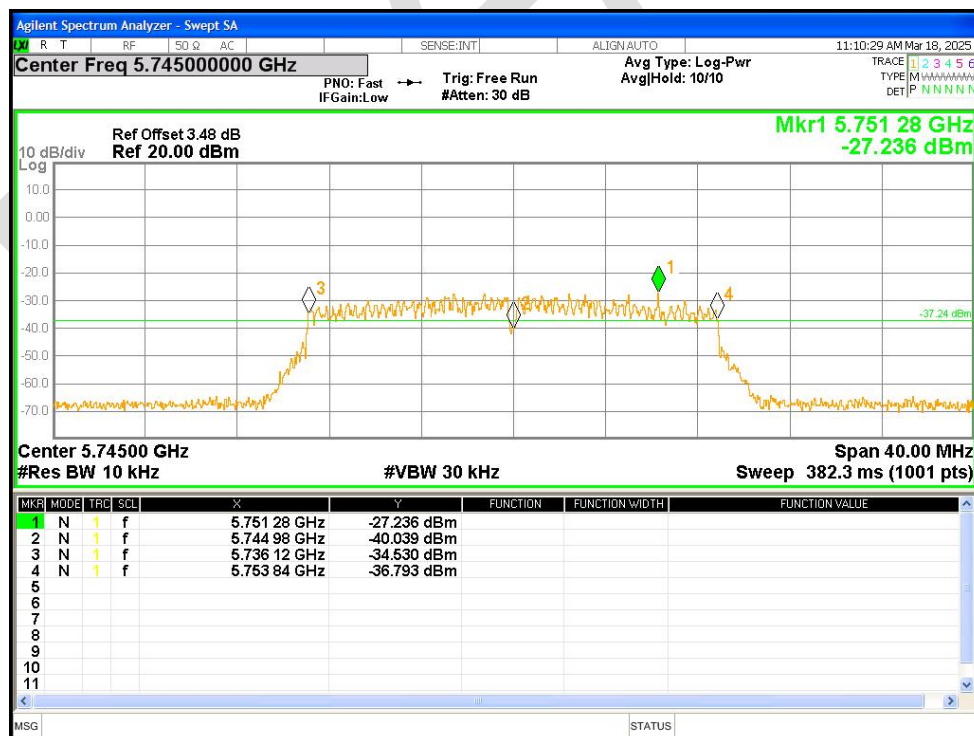


Freq. Stability NVNT n20 5785MHz Ant1

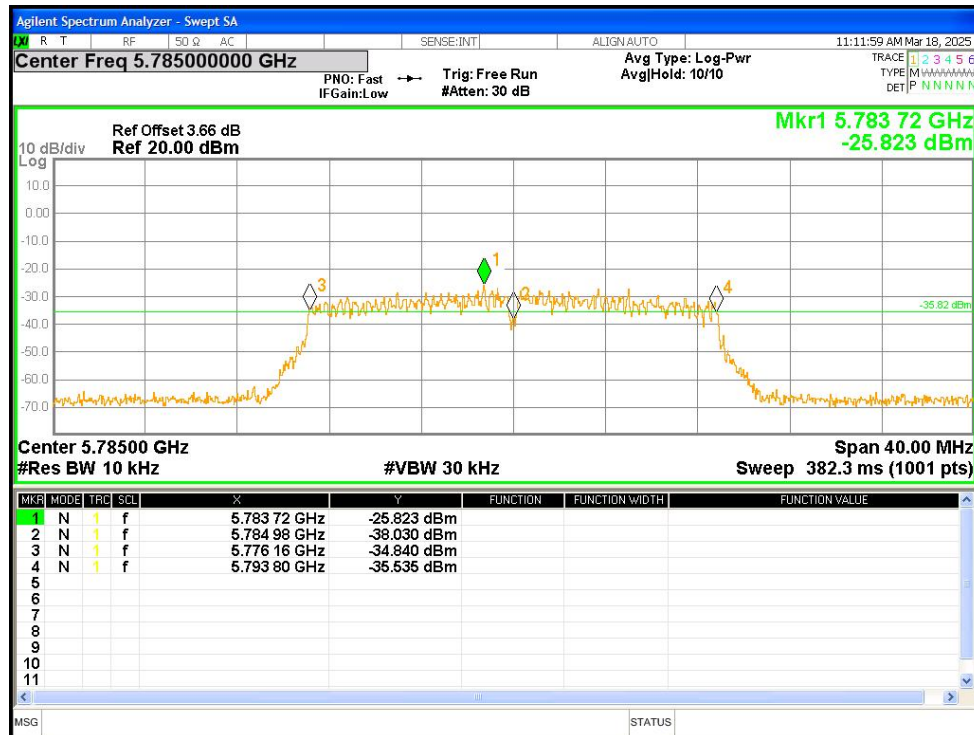


Freq. Stability NVNT n20 5825MHz Ant1

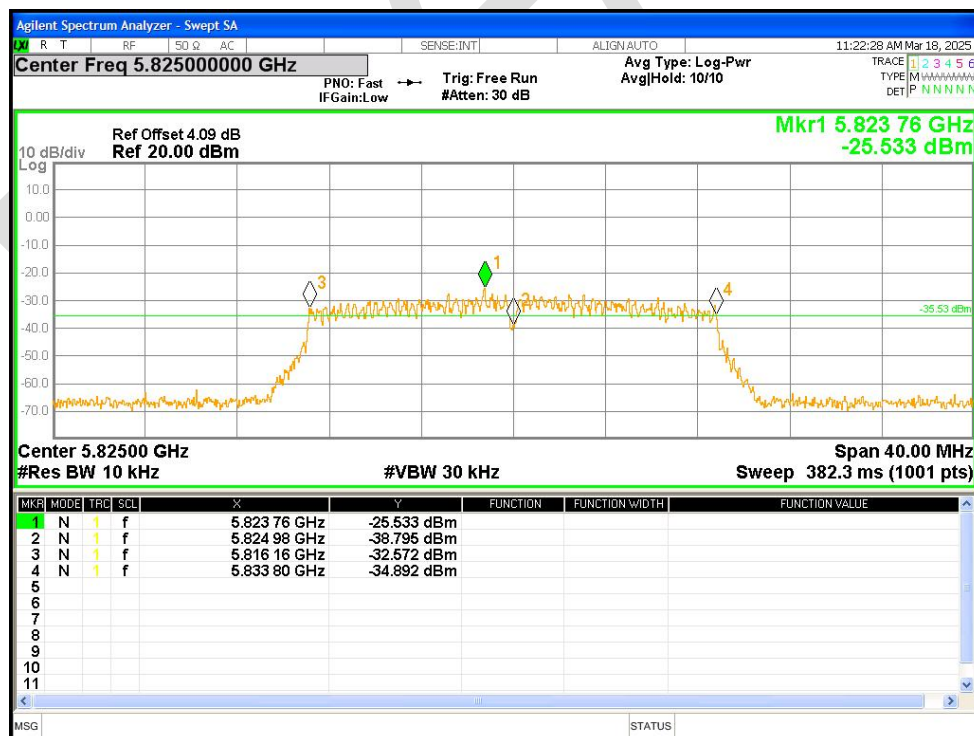


Freq. Stability NVNT n40 5190MHz Ant1

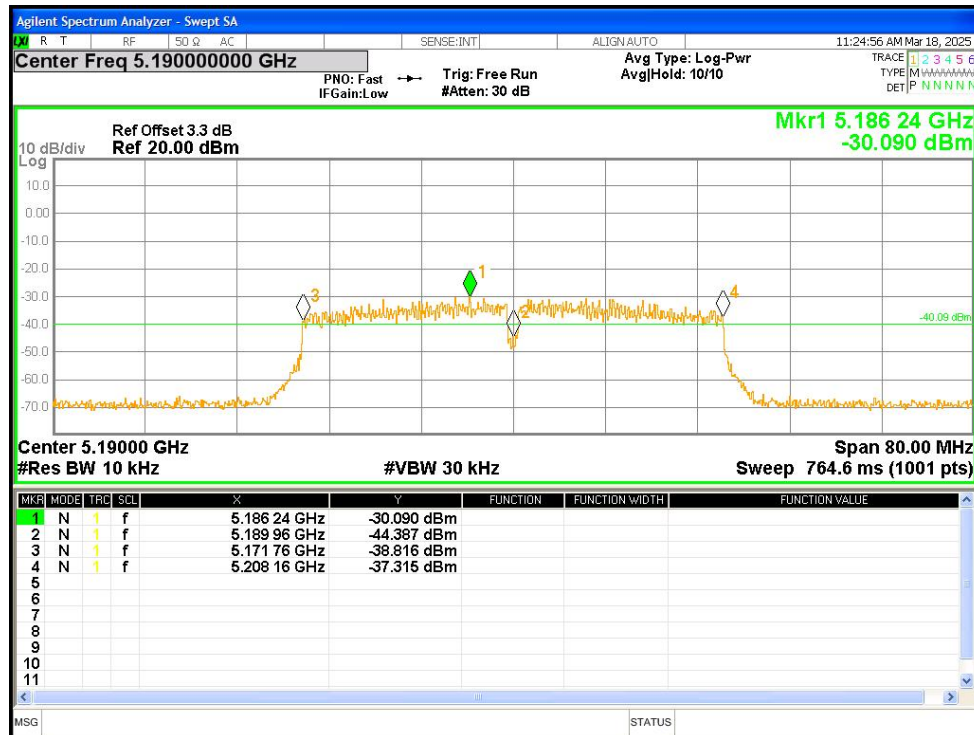


Freq. Stability NVNT n40 5230MHz Ant1

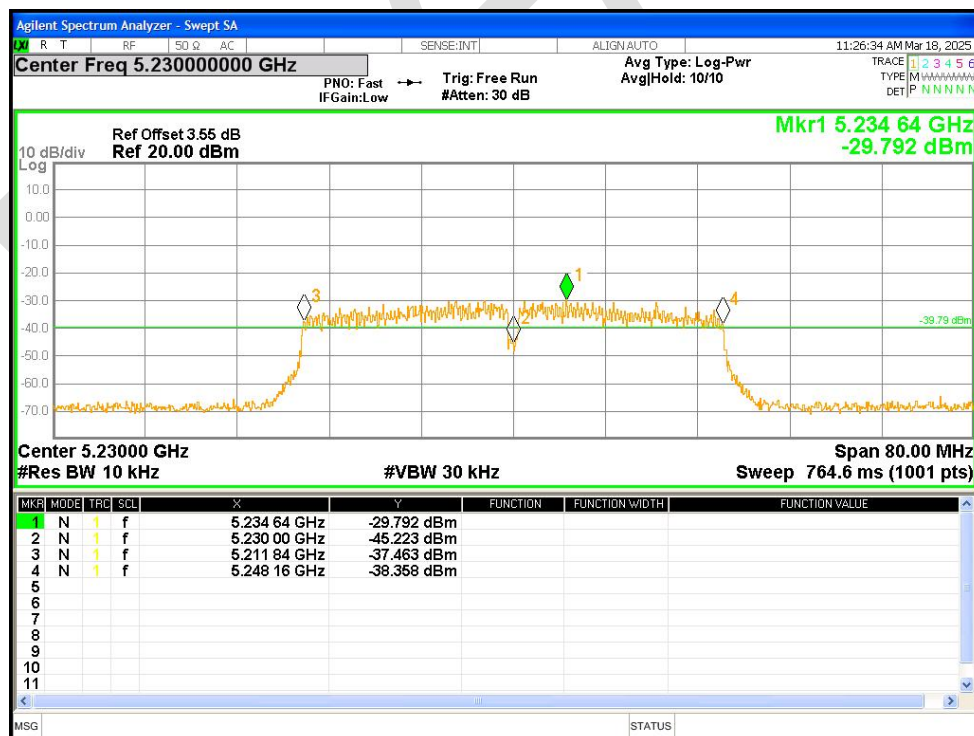


Freq. Stability NVNT n40 5755MHz Ant1

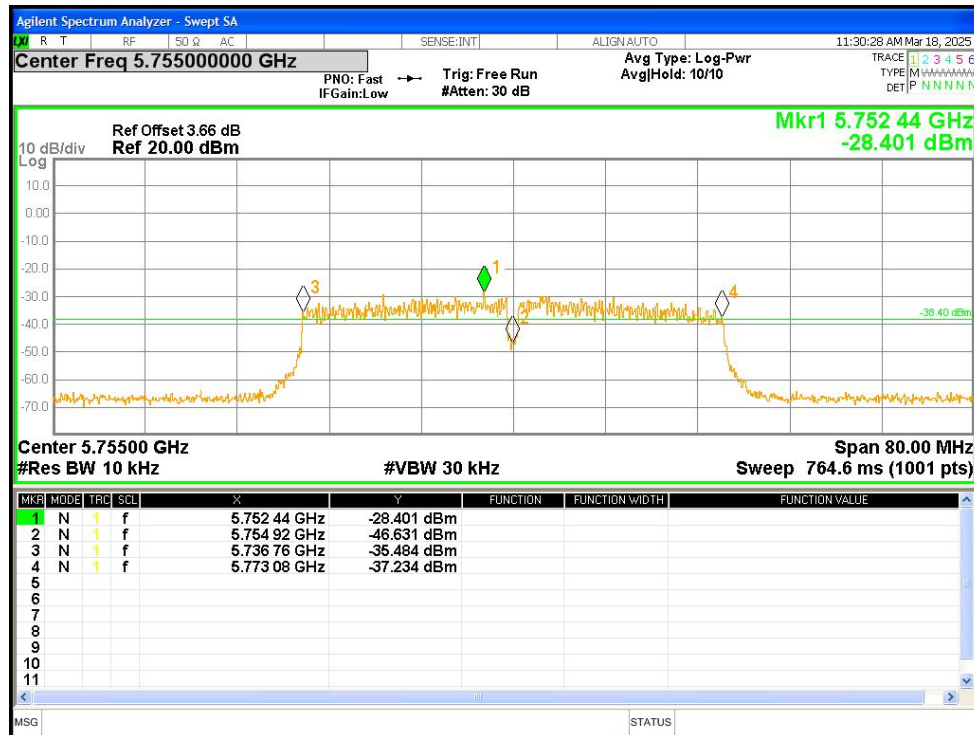


Freq. Stability NVNT n40 5795MHz Ant1

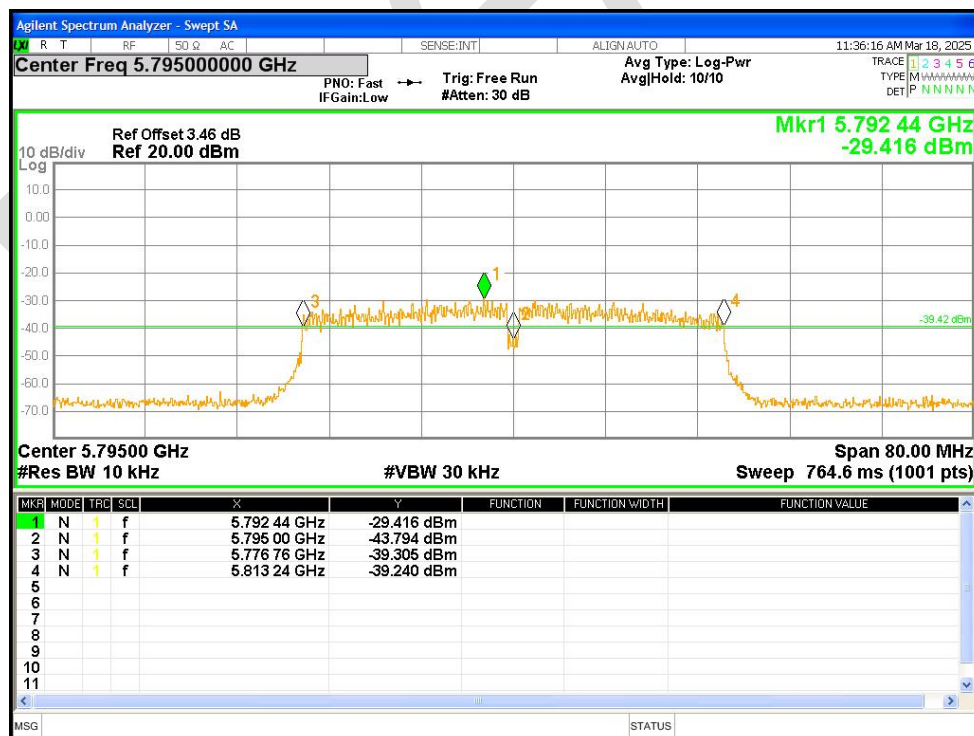


Freq. Stability NVNT ac20 5180MHz Ant1

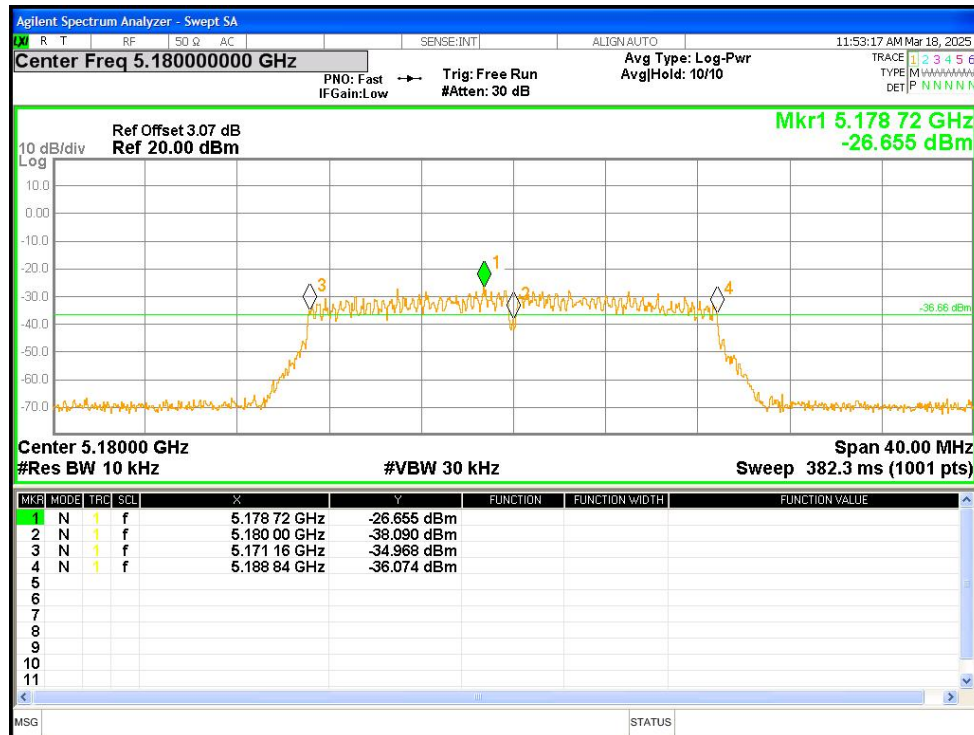


Freq. Stability NVNT ac20 5200MHz Ant1

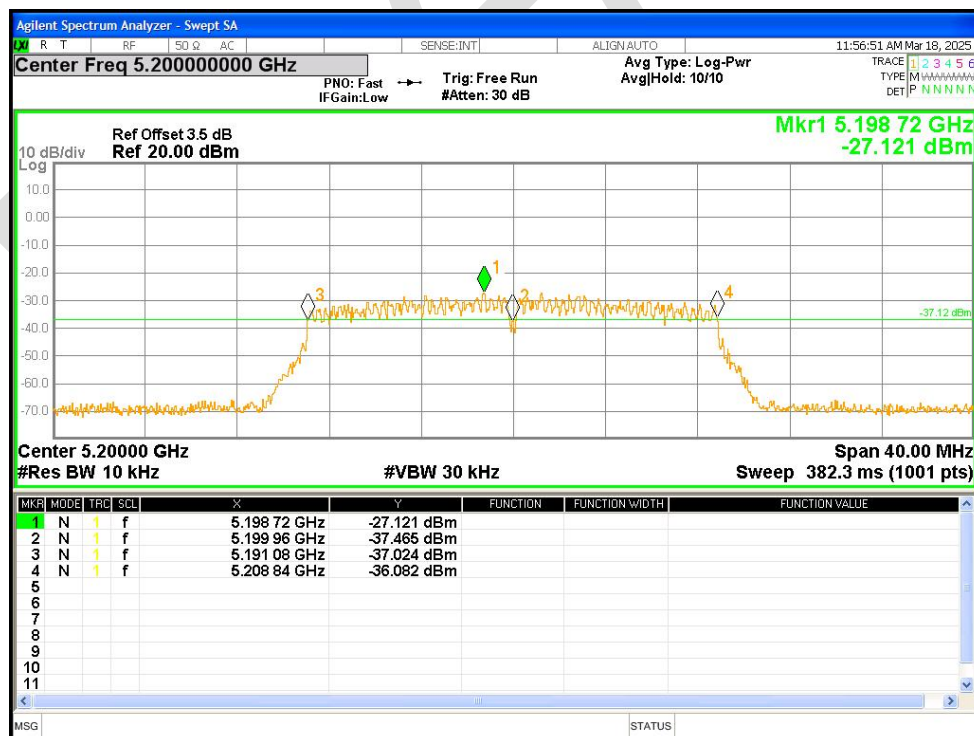


Freq. Stability NVNT ac20 5240MHz Ant1

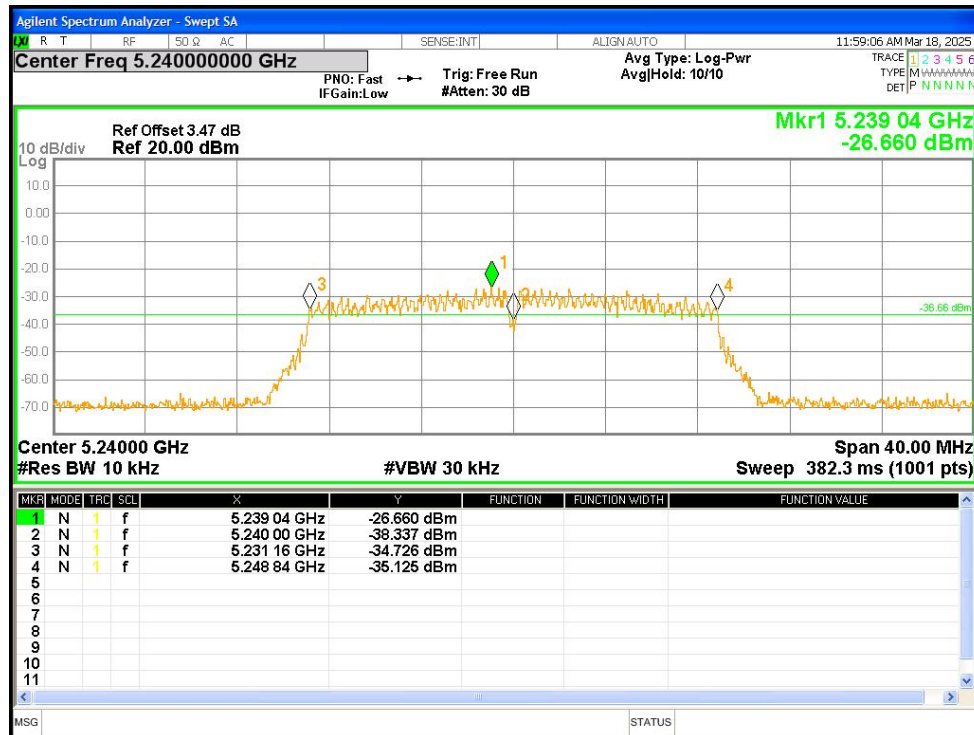


Freq. Stability NVNT ac20 5745MHz Ant1

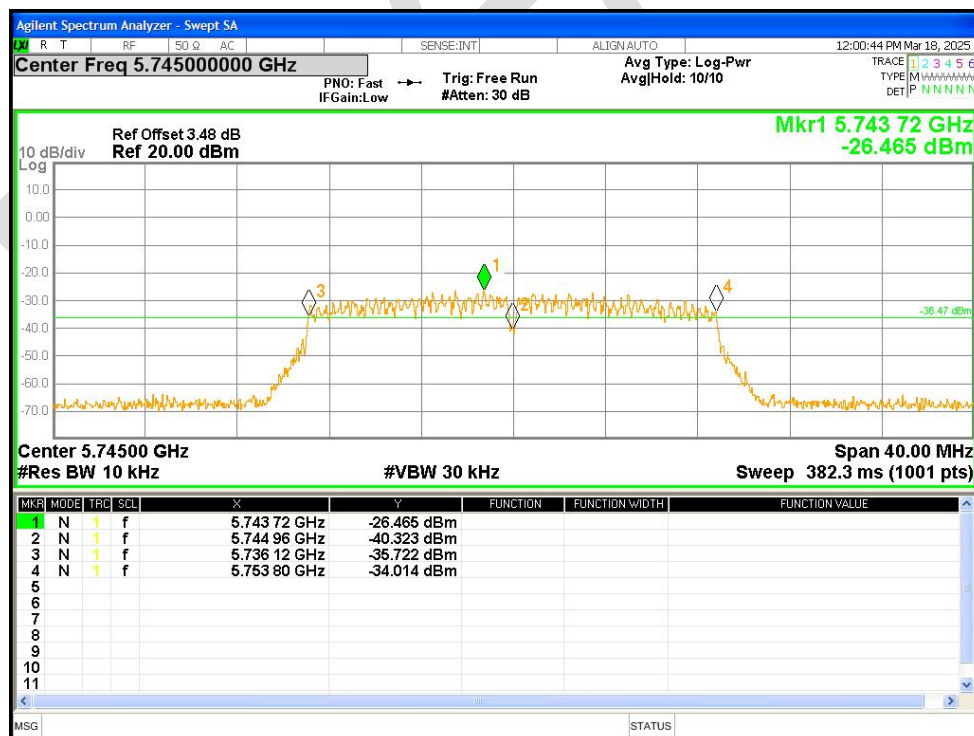


Freq. Stability NVNT ac20 5785MHz Ant1

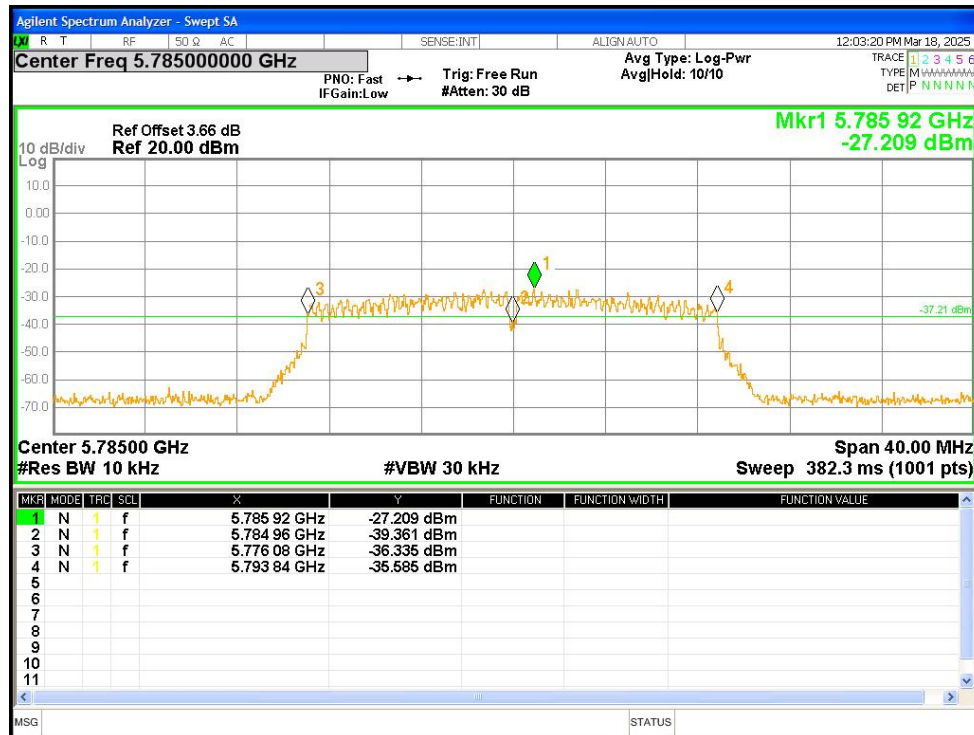


Freq. Stability NVNT ac20 5825MHz Ant1

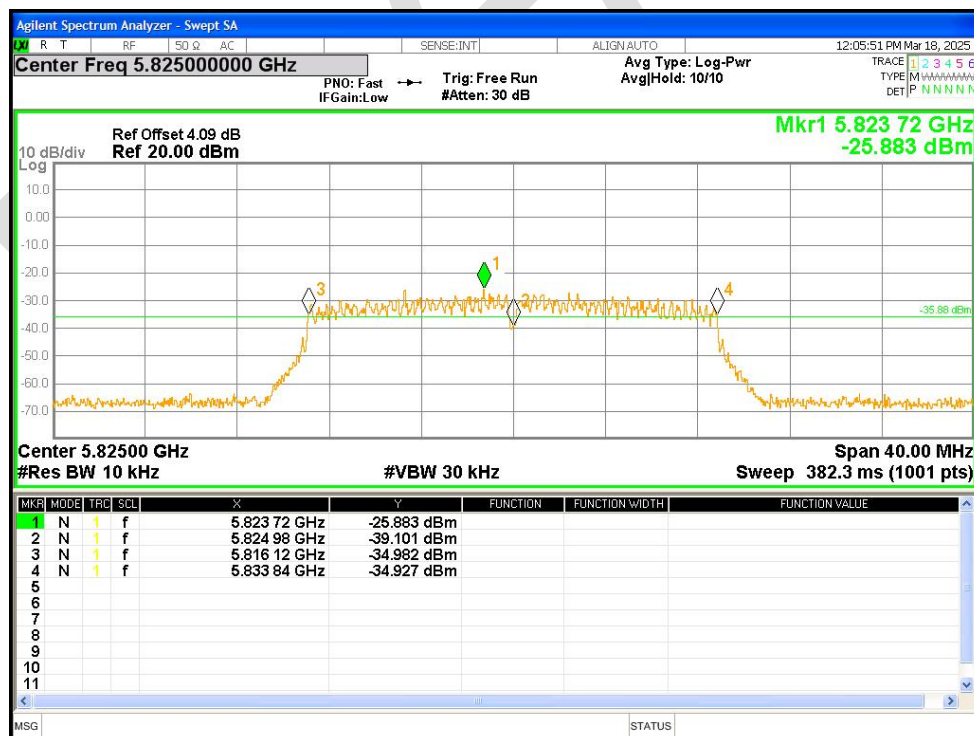


Freq. Stability NVNT ac40 5190MHz Ant1

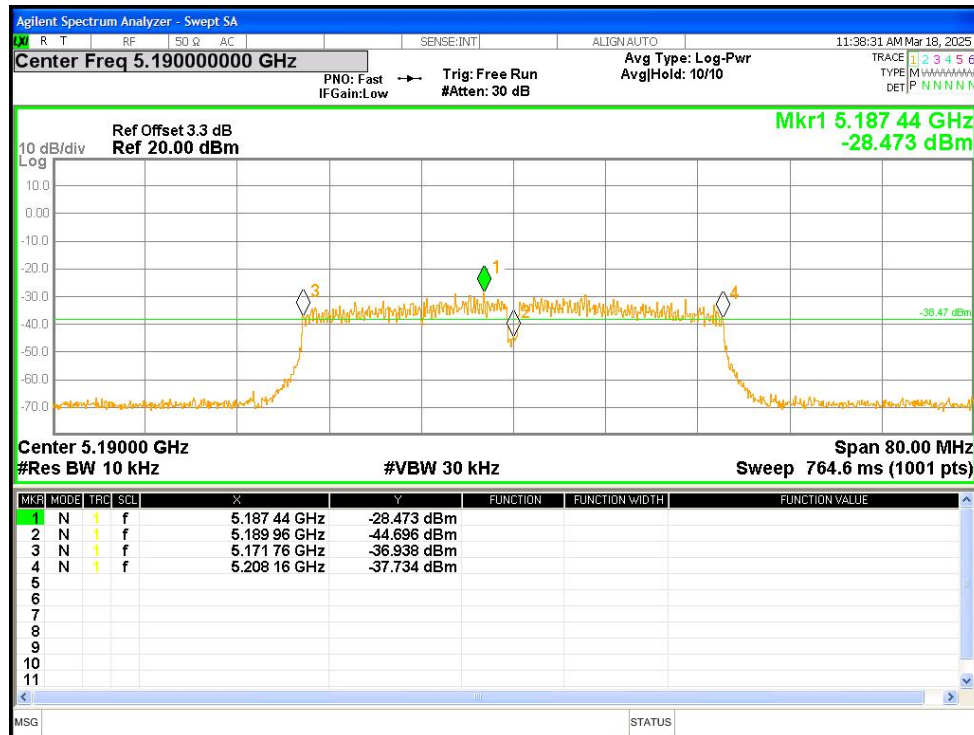


Freq. Stability NVNT ac40 5230MHz Ant1

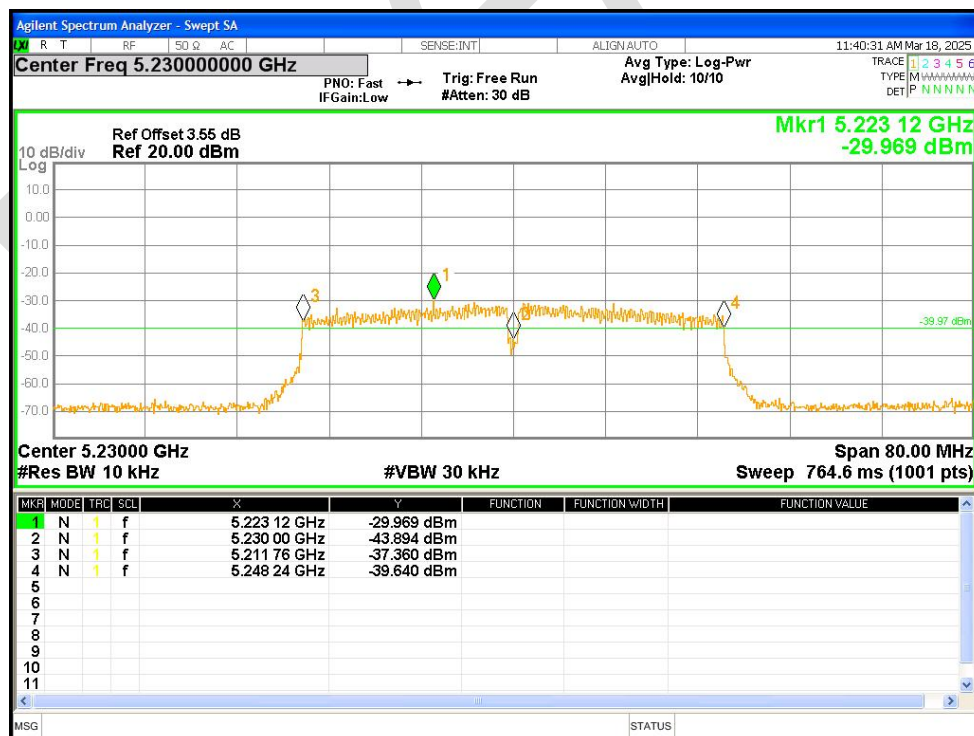


Freq. Stability NVNT ac40 5755MHz Ant1

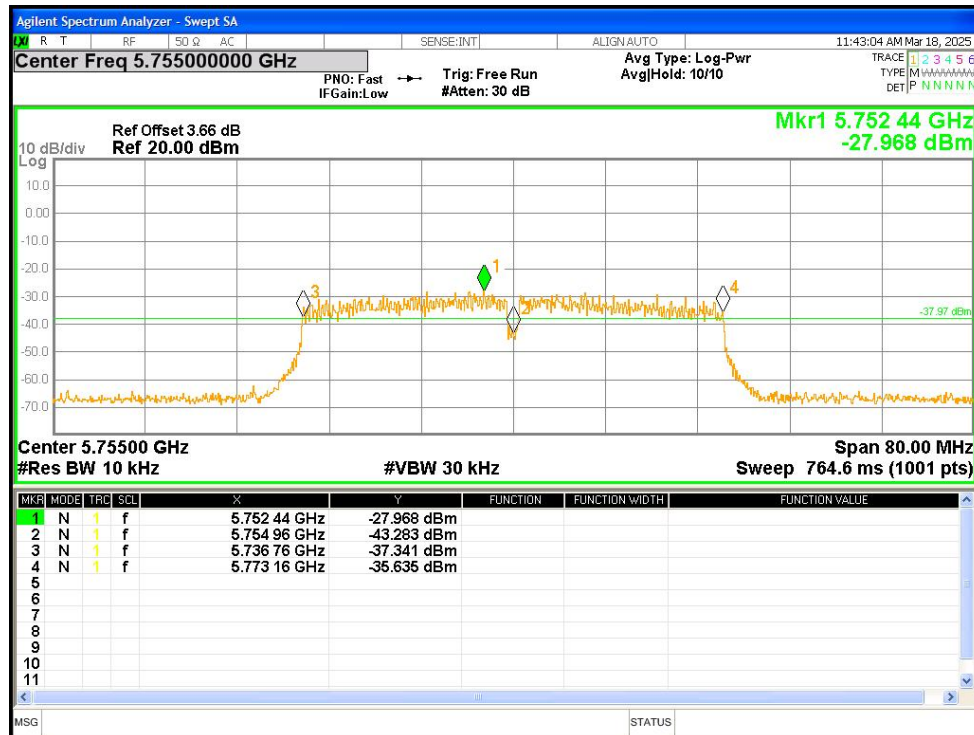

Freq. Stability NVNT ac40 5795MHz Ant1

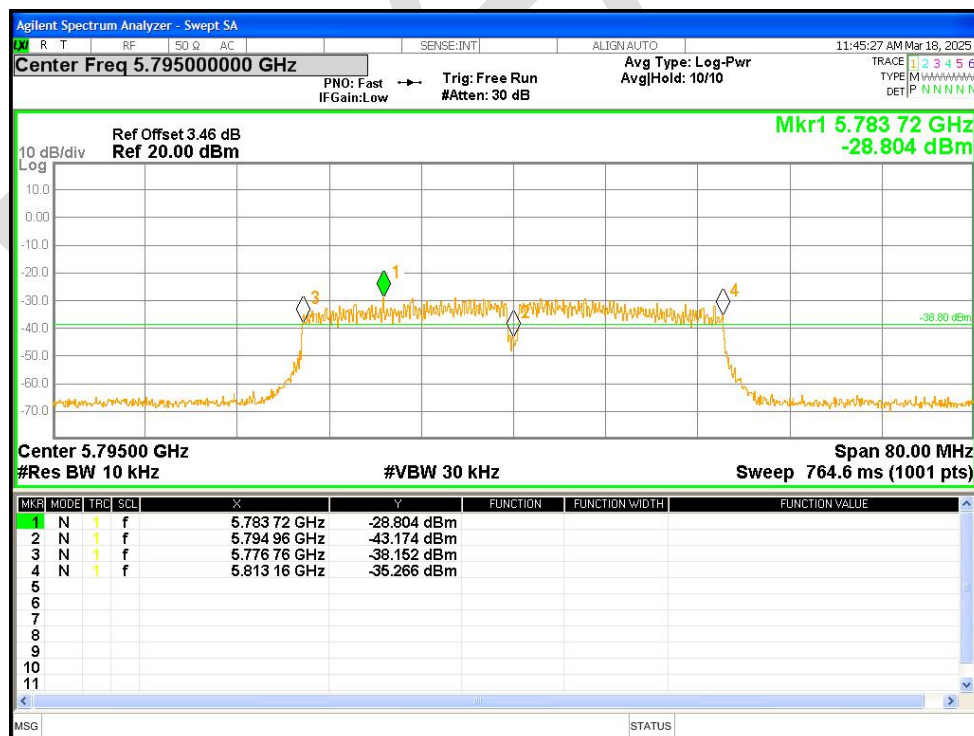

Freq. Stability NVNT ac80 5210MHz Ant1

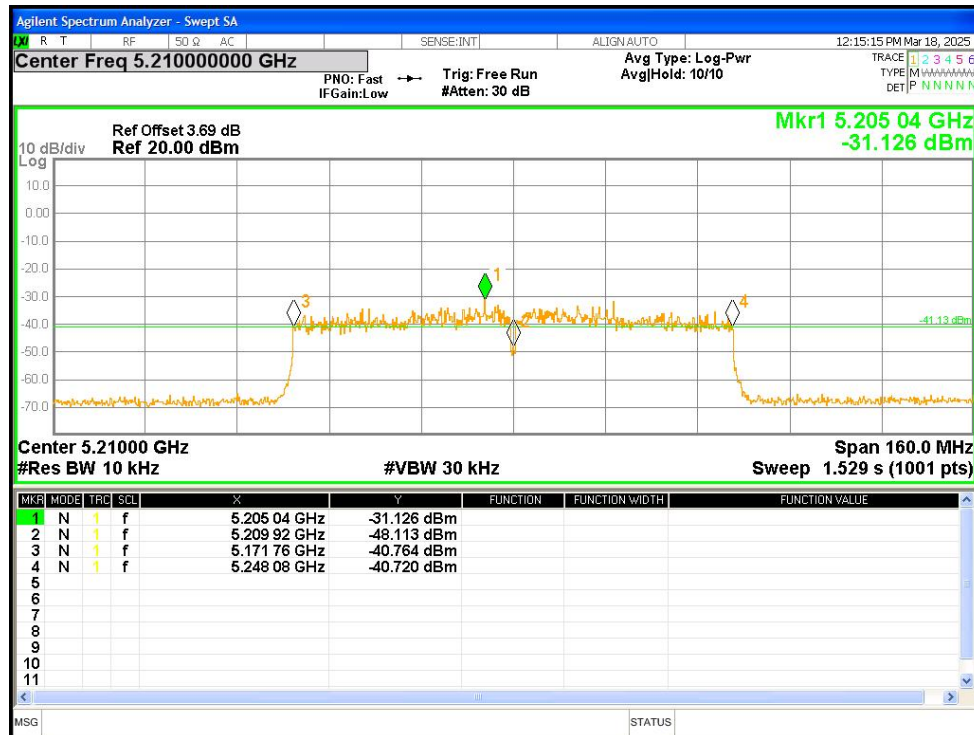

Freq. Stability NVNT ac80 5775MHz Ant1

