




Duty Cycle NVNT ac20 5745MHz Ant1

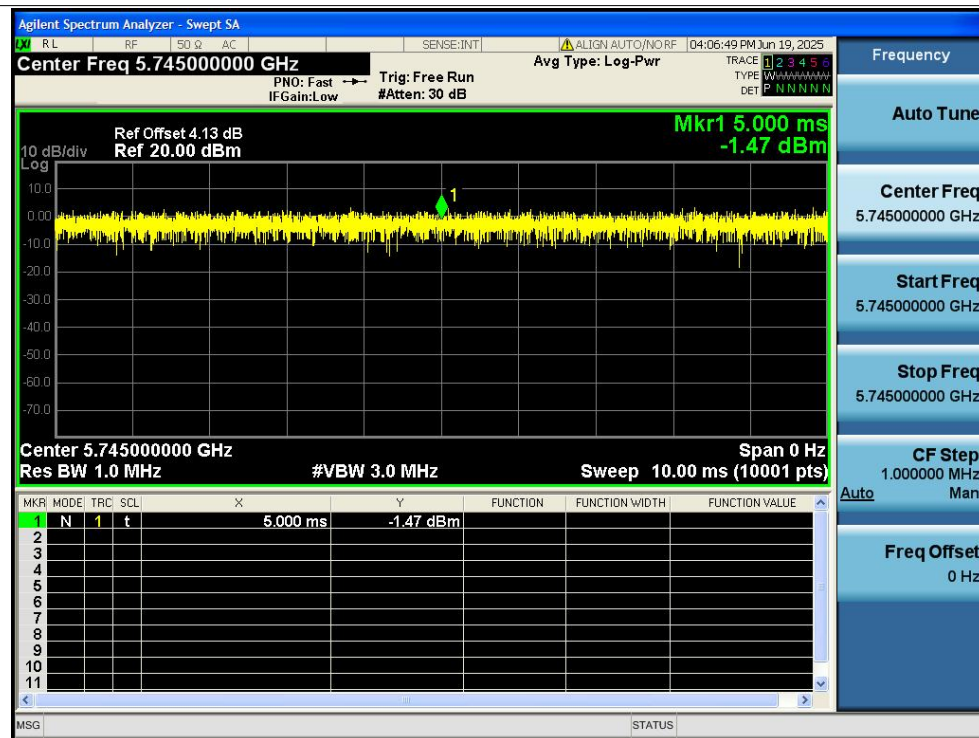


Duty Cycle NVNT ac20 5785MHz Ant1

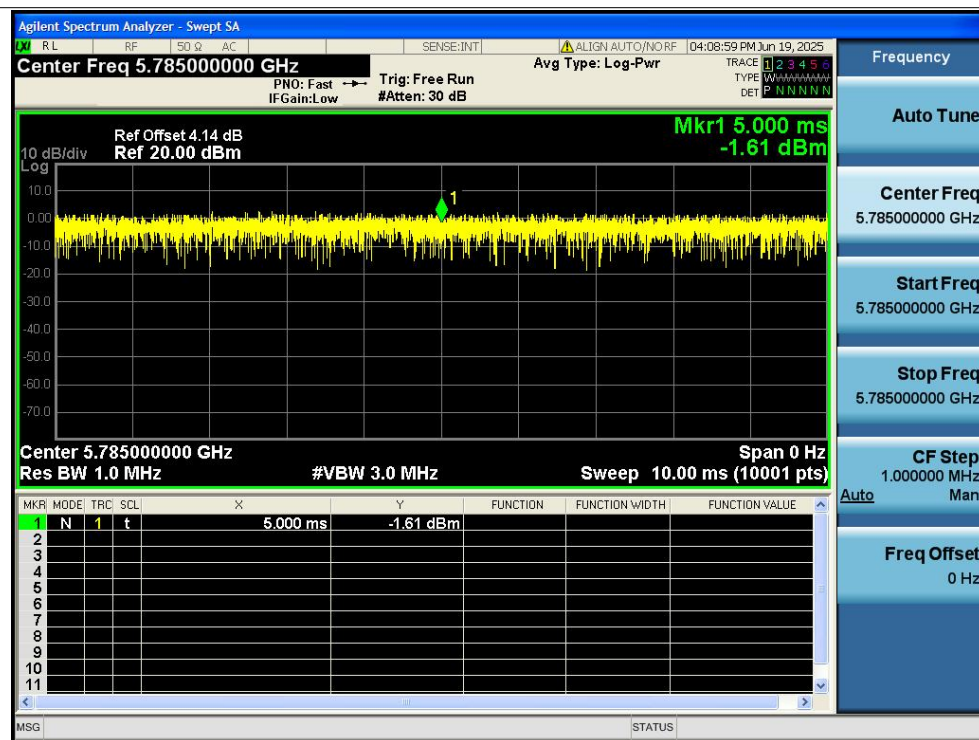


Duty Cycle NVNT ac20 5825MHz Ant1

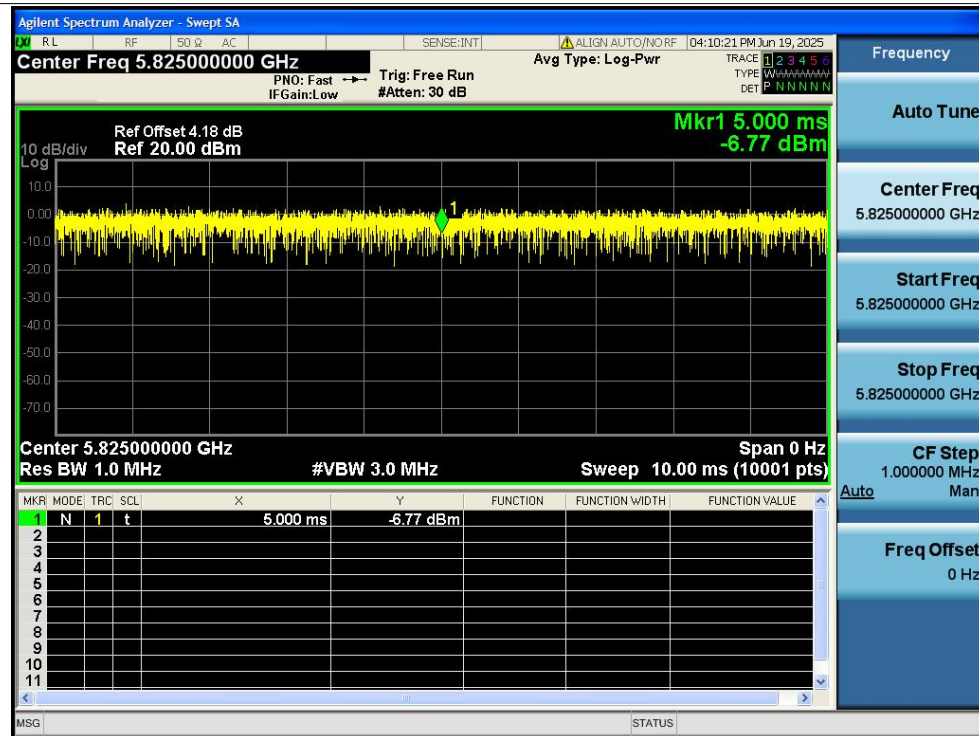


Duty Cycle NVNT ac40 5190MHz Ant1

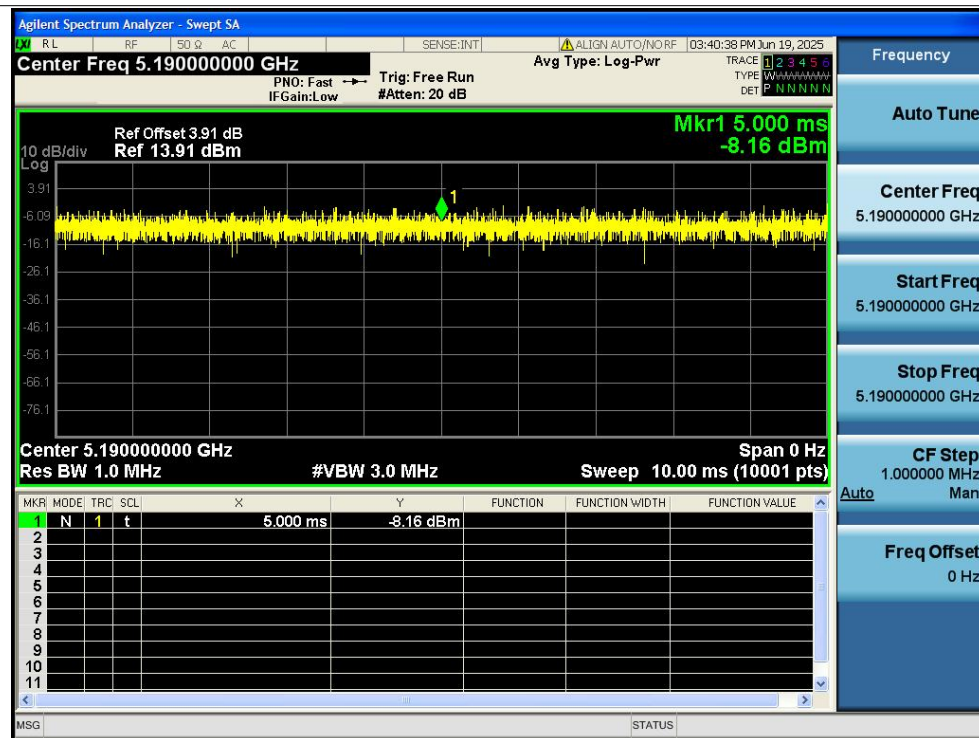


Duty Cycle NVNT ac40 5230MHz Ant1

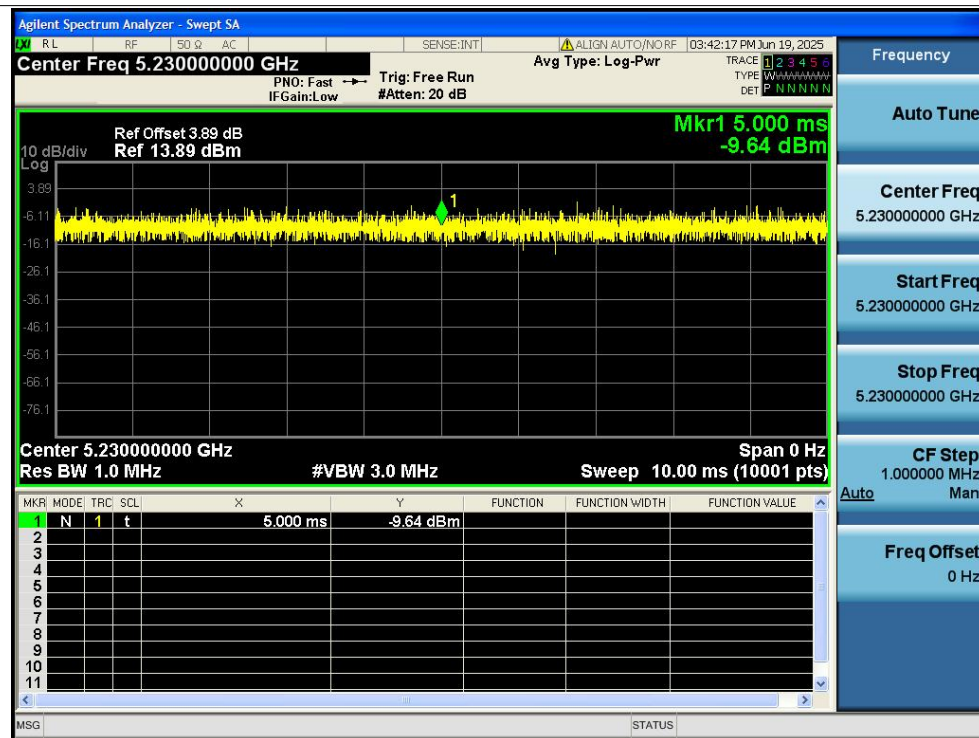


Duty Cycle NVNT ac40 5270MHz Ant1

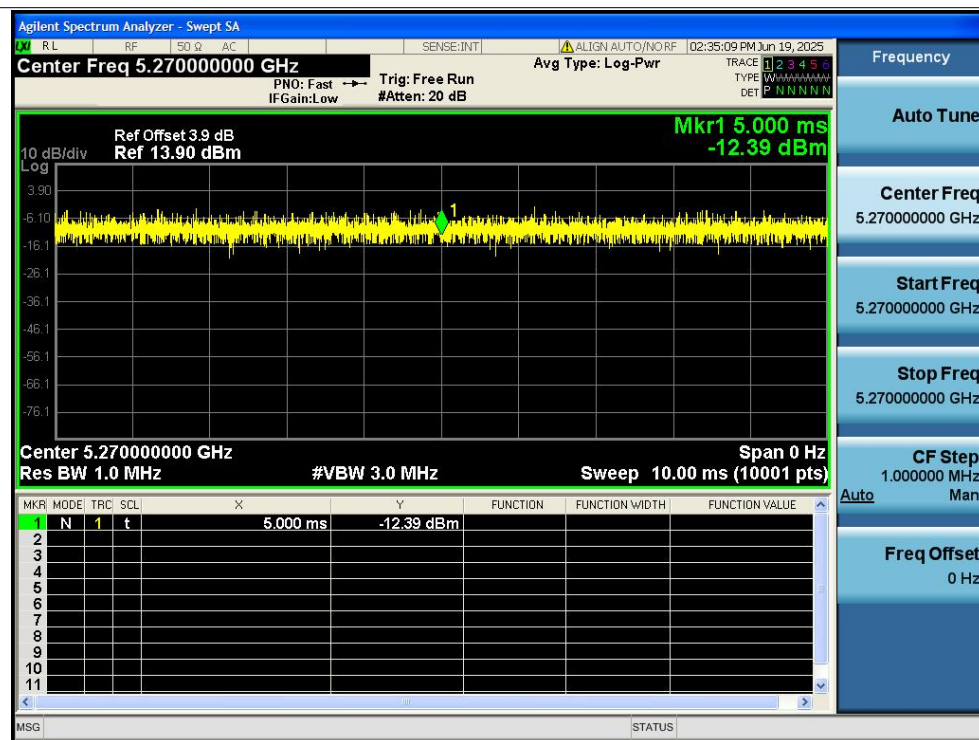


Duty Cycle NVNT ac40 5310MHz Ant1

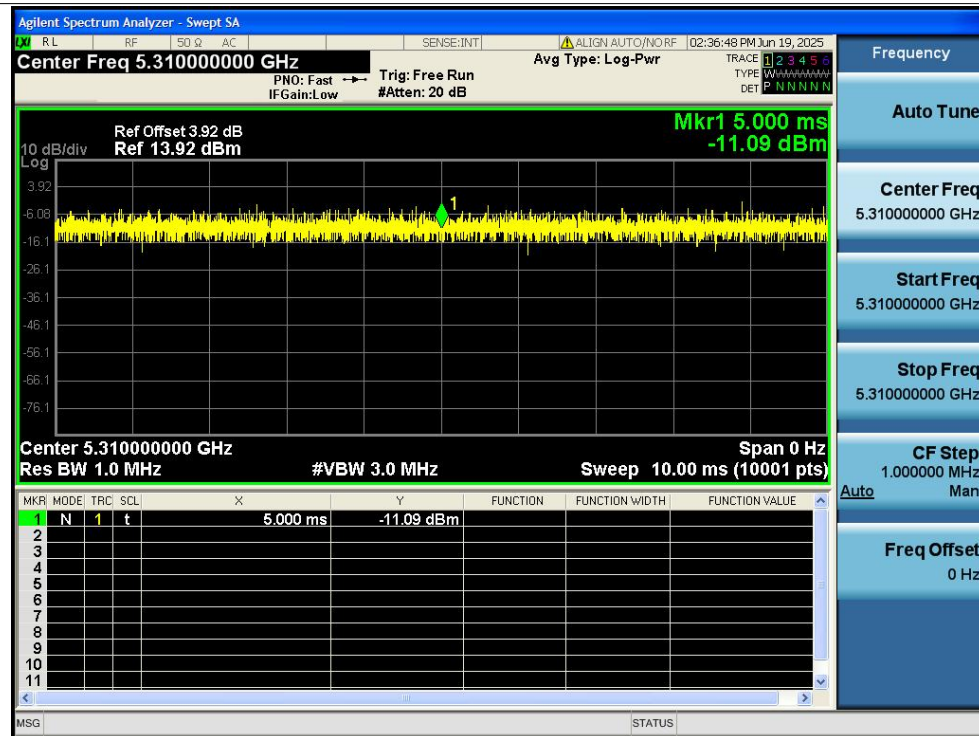


Duty Cycle NVNT ac40 5755MHz Ant1

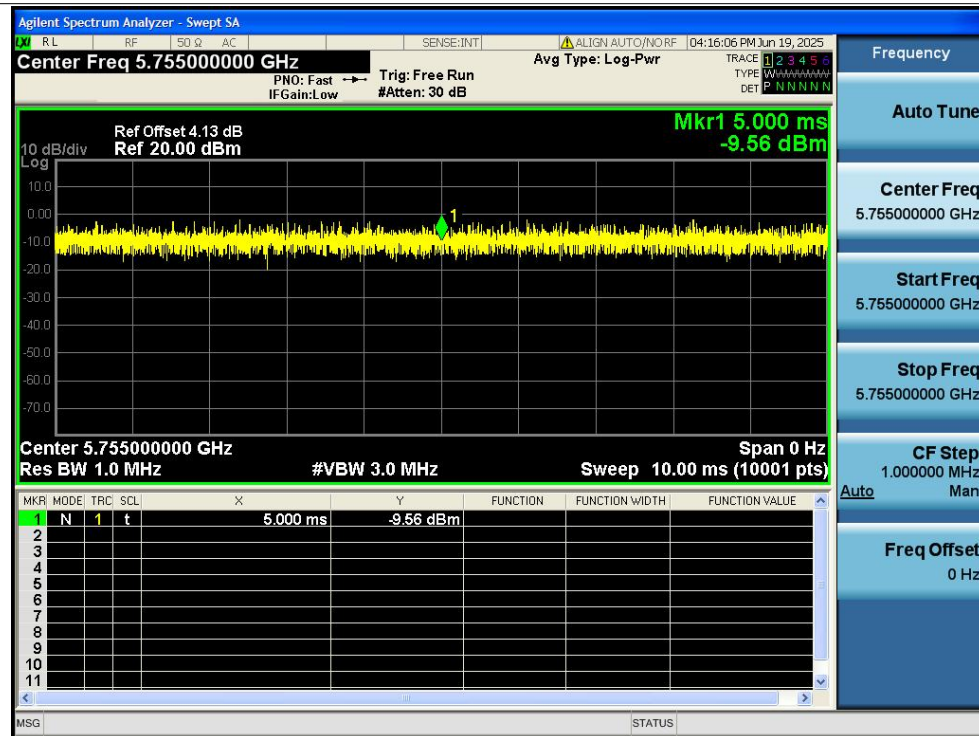


Duty Cycle NVNT ac40 5795MHz Ant1

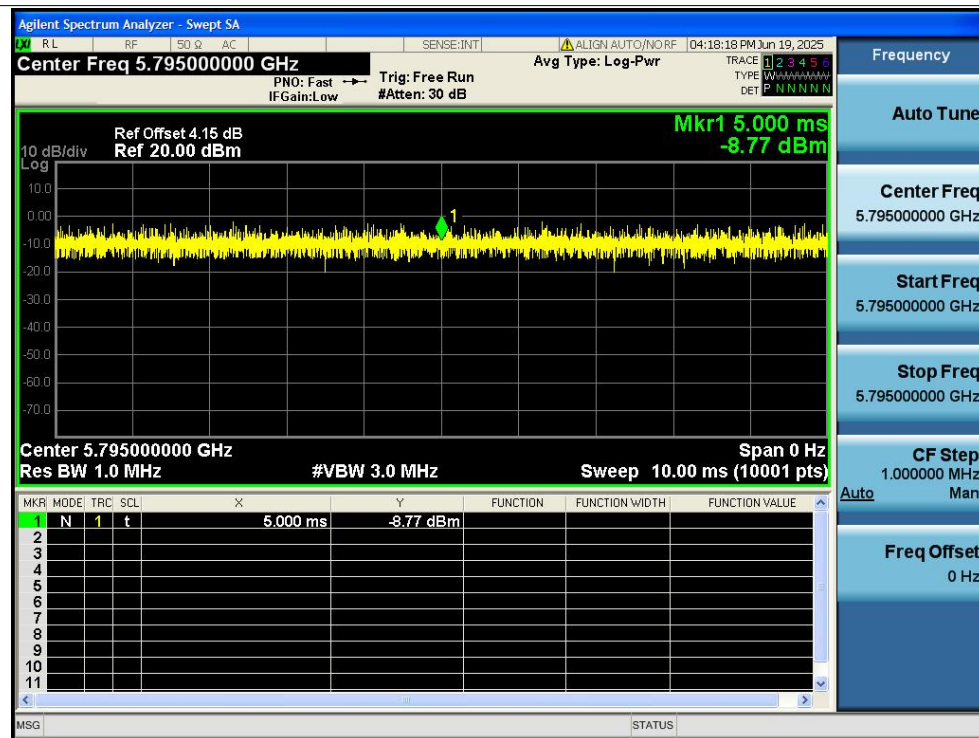


Duty Cycle NVNT ac80 5210MHz Ant1

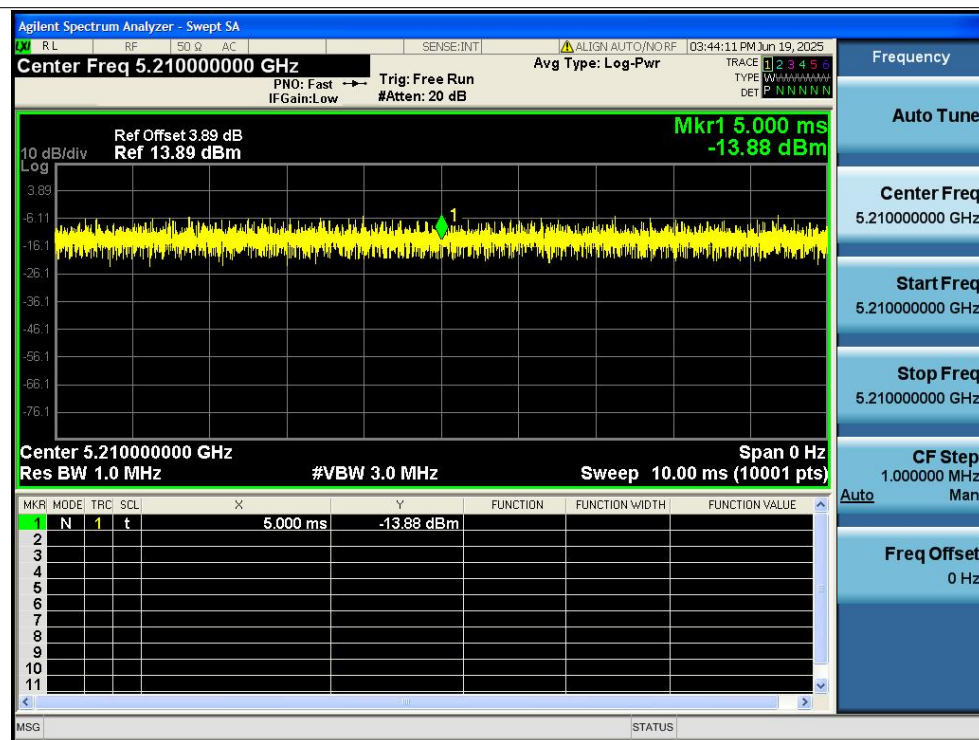

Duty Cycle NVNT ac80 5290MHz Ant1

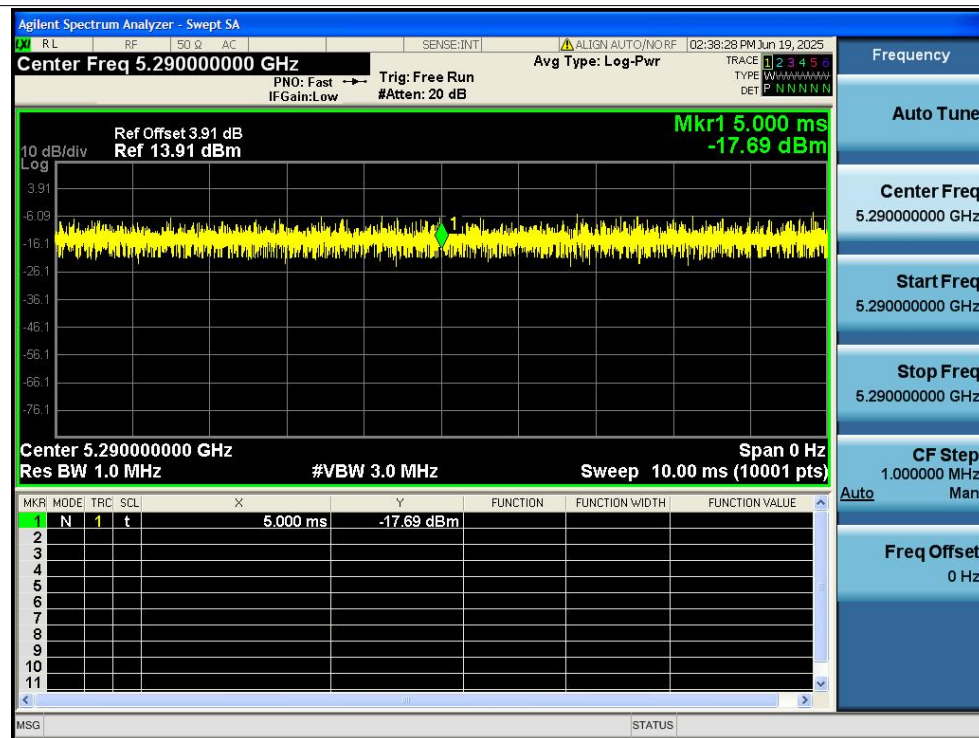

Duty Cycle NVNT ac80 5775MHz Ant1

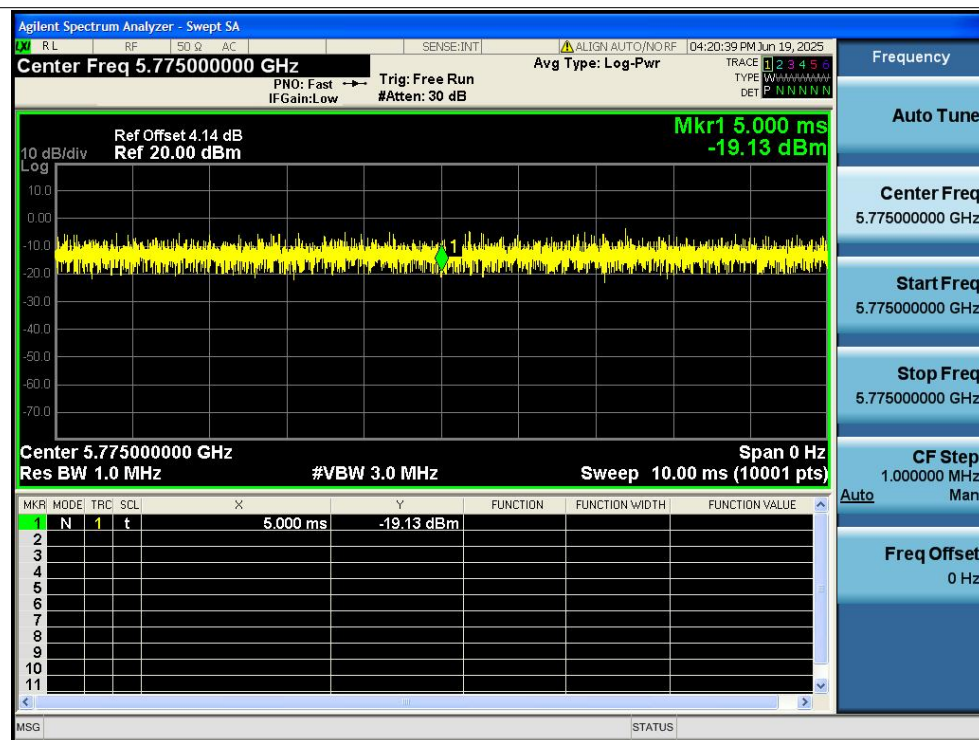



Maximum Conducted Output Power

Condition	Mode	Frequency (MHz)	Antenna	Conducted Power (dBm)	Duty Factor (dB)	Total Power (dBm)	Limit (dBm)	Verdict
NVNT	a	5180	Ant1	6.3	0.11	6.41	24	Pass
NVNT	a	5200	Ant1	6.33	0.11	6.44	24	Pass
NVNT	a	5240	Ant1	6.3	0.11	6.41	24	Pass
NVNT	a	5260	Ant1	5.68	0.11	5.79	24	Pass
NVNT	a	5300	Ant1	5.23	0.11	5.34	24	Pass
NVNT	a	5320	Ant1	4.92	0.11	5.03	24	Pass
NVNT	a	5745	Ant1	5.78	0.11	5.89	30	Pass
NVNT	a	5785	Ant1	6.56	0.11	6.67	30	Pass
NVNT	a	5825	Ant1	6.84	0.11	6.95	30	Pass
NVNT	n20	5180	Ant1	5.72	0	5.72	24	Pass
NVNT	n20	5200	Ant1	5.71	0	5.71	24	Pass
NVNT	n20	5240	Ant1	5.76	0	5.76	24	Pass
NVNT	n20	5260	Ant1	5.5	0	5.5	24	Pass
NVNT	n20	5300	Ant1	5.19	0	5.19	24	Pass
NVNT	n20	5320	Ant1	4.3	0	4.3	24	Pass
NVNT	n20	5745	Ant1	6.23	0	6.23	30	Pass
NVNT	n20	5785	Ant1	5.81	0	5.81	30	Pass
NVNT	n20	5825	Ant1	6.02	0	6.02	30	Pass
NVNT	n40	5190	Ant1	6.04	0	6.04	24	Pass
NVNT	n40	5230	Ant1	5.88	0	5.88	24	Pass
NVNT	n40	5270	Ant1	5.76	0	5.76	24	Pass
NVNT	n40	5310	Ant1	5.18	0	5.18	24	Pass
NVNT	n40	5755	Ant1	6.41	0	6.41	30	Pass
NVNT	n40	5795	Ant1	6	0	6	30	Pass
NVNT	ac20	5180	Ant1	5.96	0	5.96	24	Pass
NVNT	ac20	5200	Ant1	5.99	0	5.99	24	Pass
NVNT	ac20	5240	Ant1	5.93	0	5.93	24	Pass
NVNT	ac20	5260	Ant1	5.85	0	5.85	24	Pass
NVNT	ac20	5300	Ant1	5.44	0	5.44	24	Pass
NVNT	ac20	5320	Ant1	5.03	0	5.03	24	Pass
NVNT	ac20	5745	Ant1	6.56	0	6.56	30	Pass
NVNT	ac20	5785	Ant1	6.09	0	6.09	30	Pass
NVNT	ac20	5825	Ant1	6.37	0	6.37	30	Pass
NVNT	ac40	5190	Ant1	6.11	0	6.11	24	Pass
NVNT	ac40	5230	Ant1	5.96	0	5.96	24	Pass
NVNT	ac40	5270	Ant1	5.83	0	5.83	24	Pass
NVNT	ac40	5310	Ant1	5.28	0	5.28	24	Pass
NVNT	ac40	5755	Ant1	6.6	0	6.6	30	Pass




Report No.: AB25060001FW03


NVNT	ac40	5795	Ant1	6.1	0	6.1	30	Pass
NVNT	ac80	5210	Ant1	5.94	0	5.94	24	Pass
NVNT	ac80	5290	Ant1	5.3	0	5.3	24	Pass
NVNT	ac80	5775	Ant1	5.92	0	5.92	30	Pass

Test Graphs


Power NVNT a 5180MHz Ant1

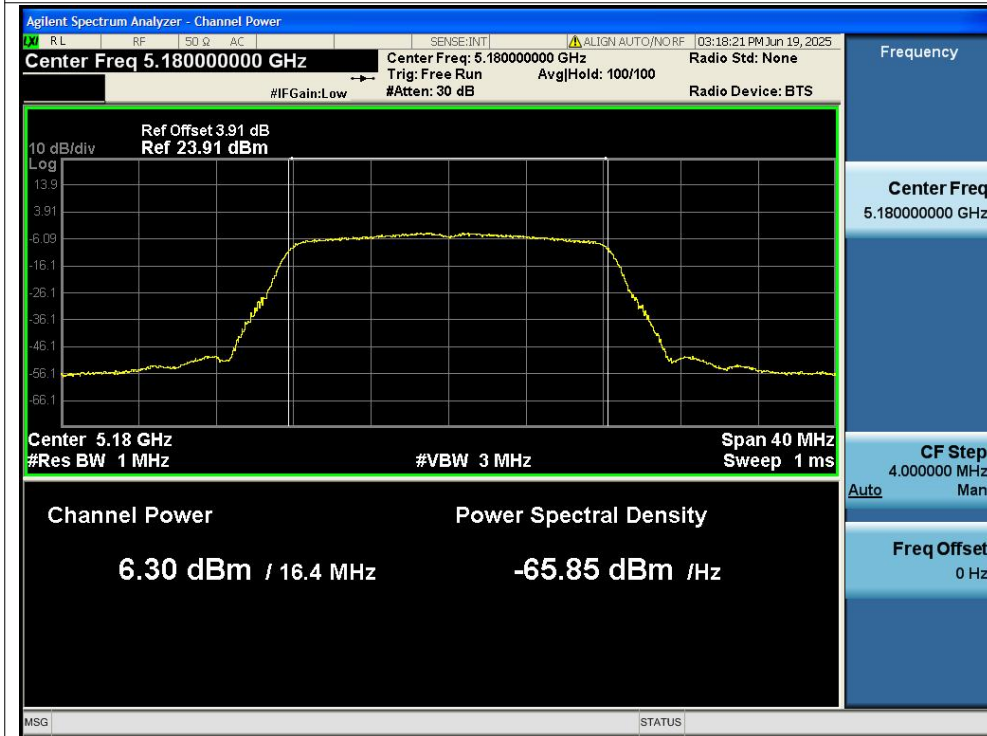


Power NVNT a 5200MHz Ant1

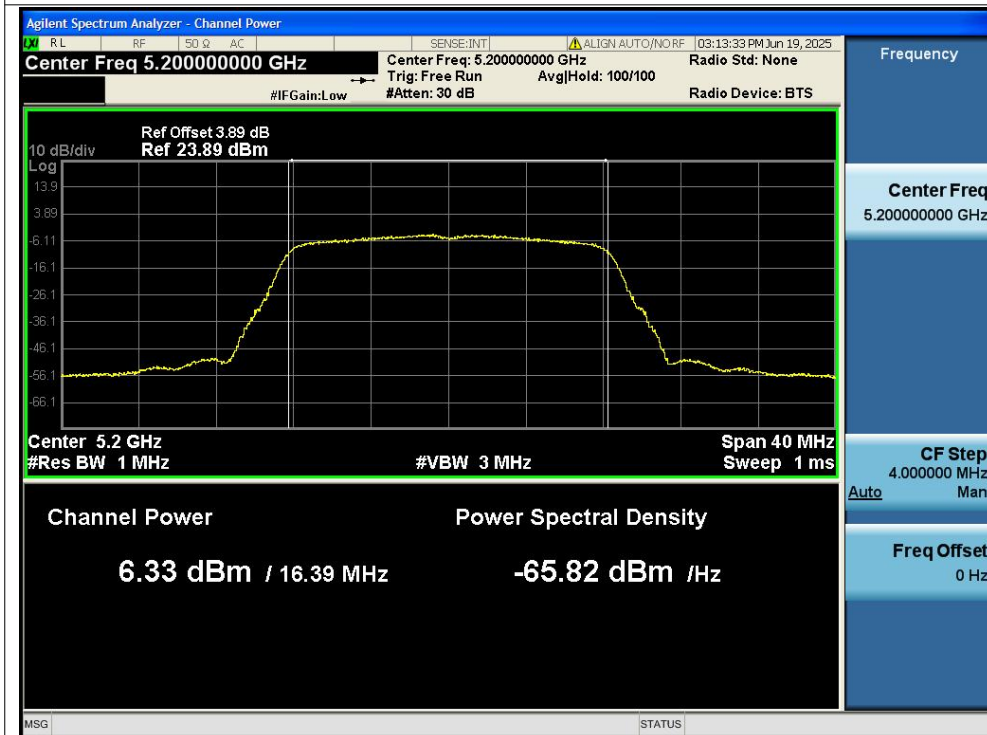


Power NVNT a 5240MHz Ant1

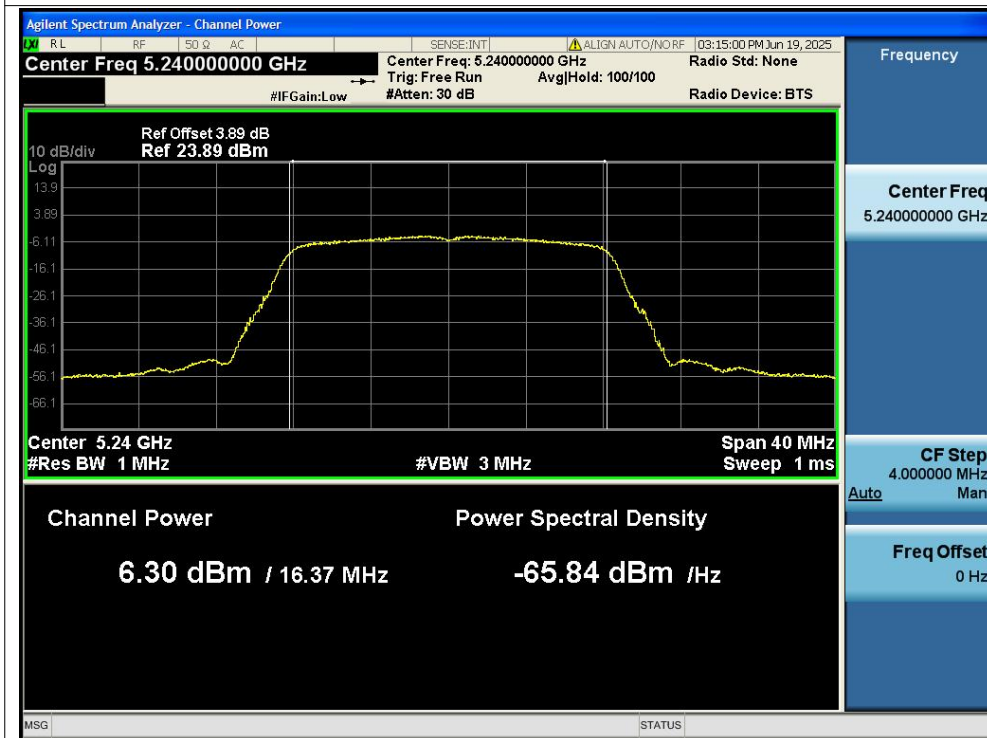


Power NVNT a 5260MHz Ant1

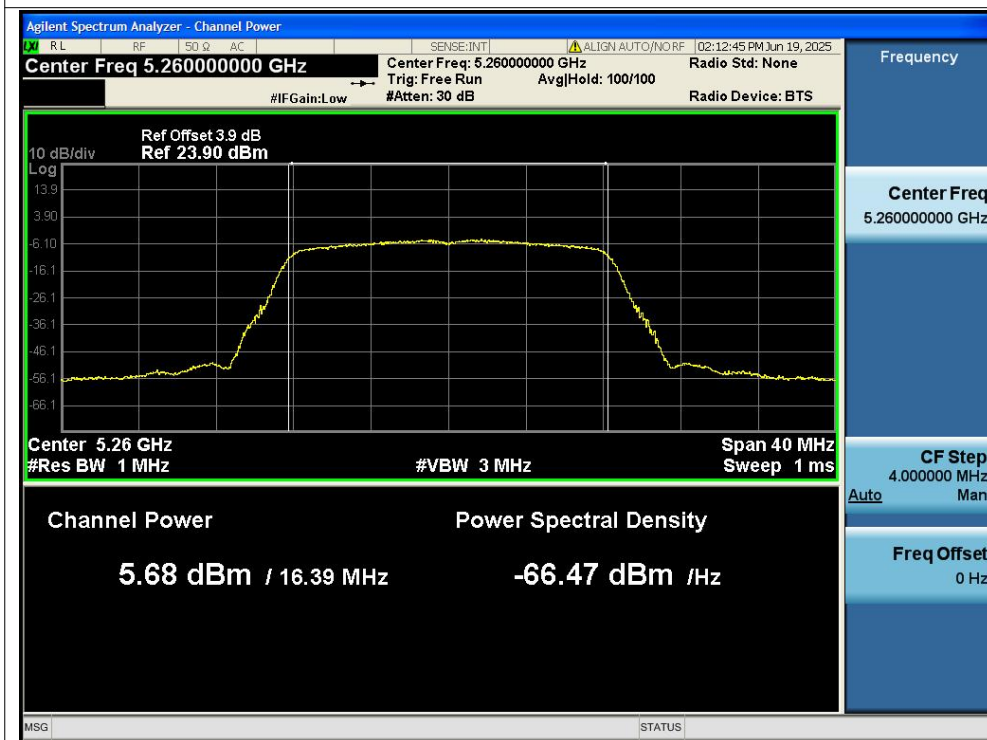


Power NVNT a 5300MHz Ant1

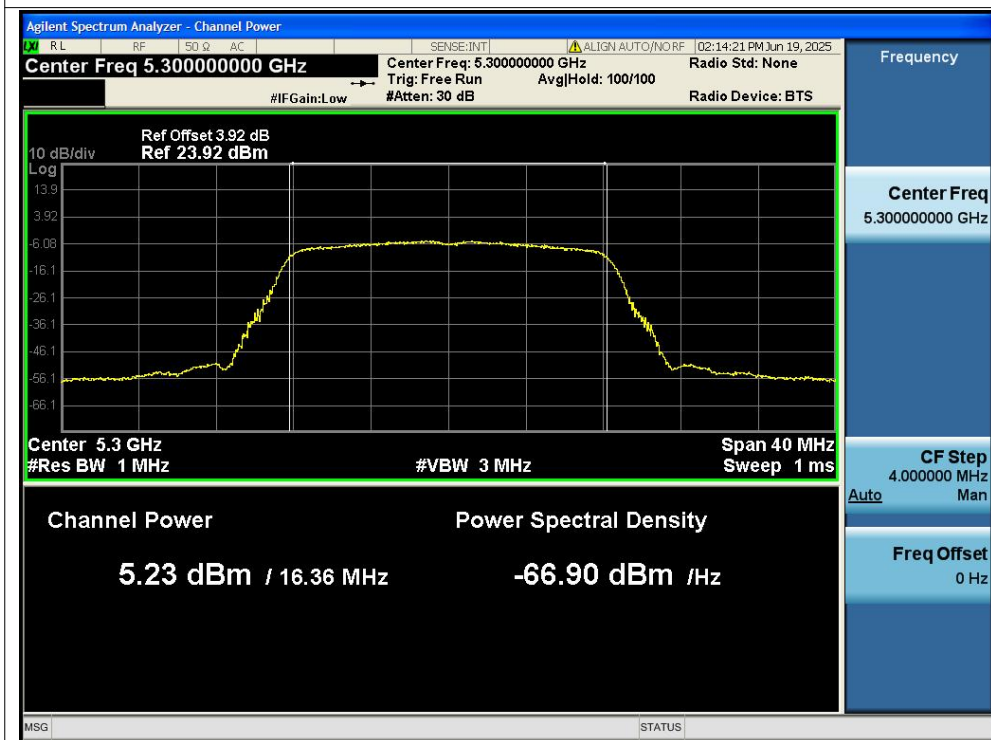


Power NVNT a 5320MHz Ant1

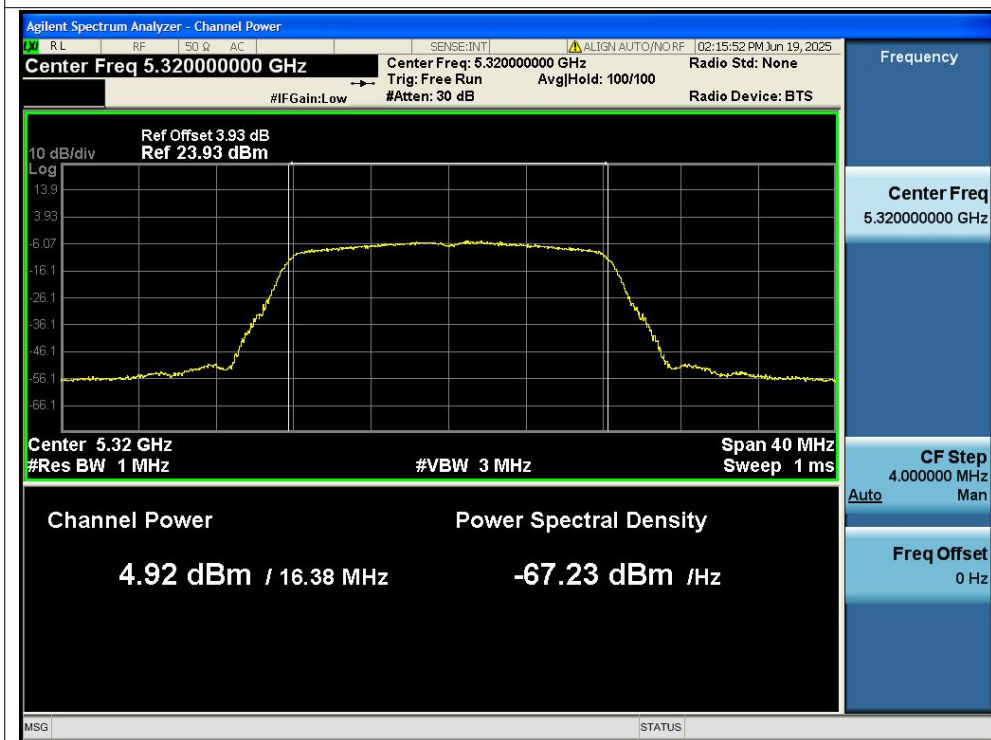


Power NVNT a 5745MHz Ant1

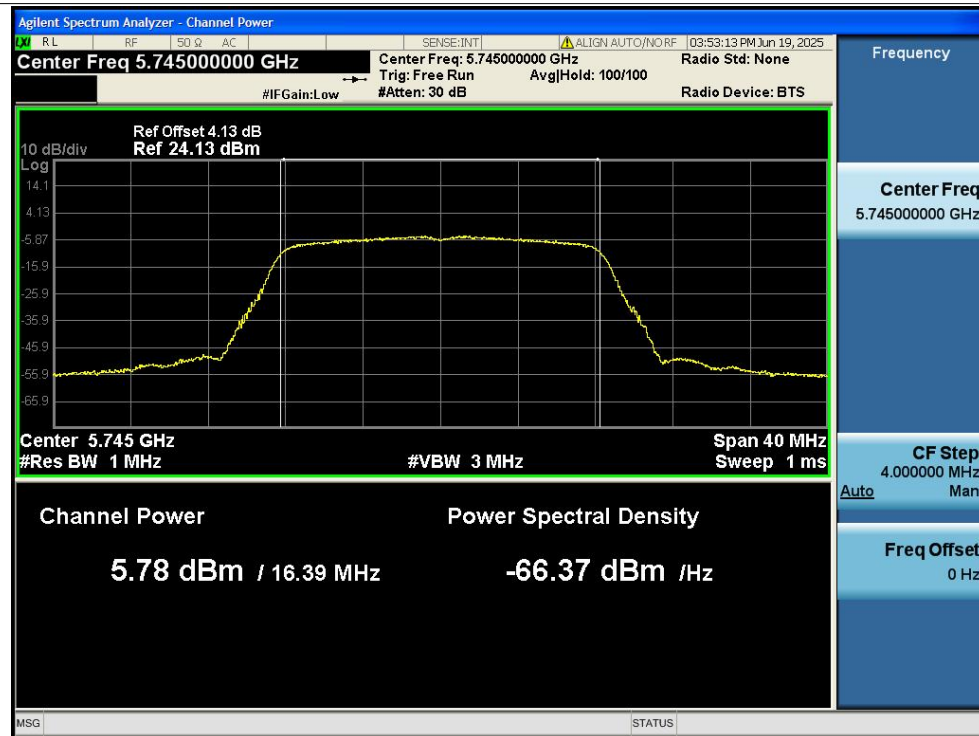


Power NVNT a 5785MHz Ant1


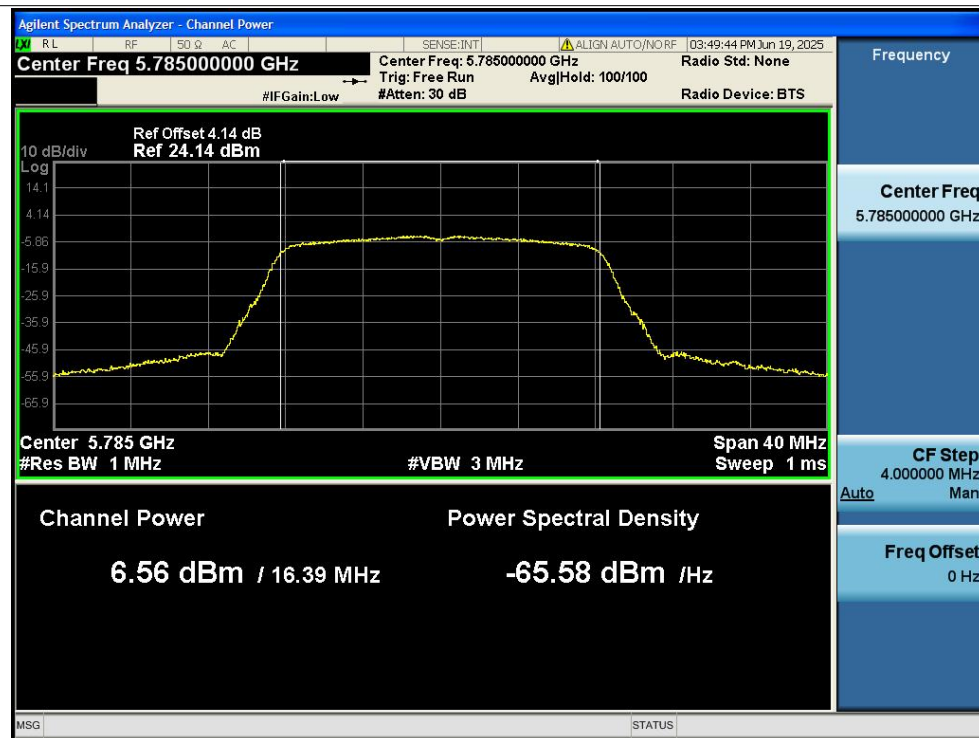


Power NVNT a 5825MHz Ant1

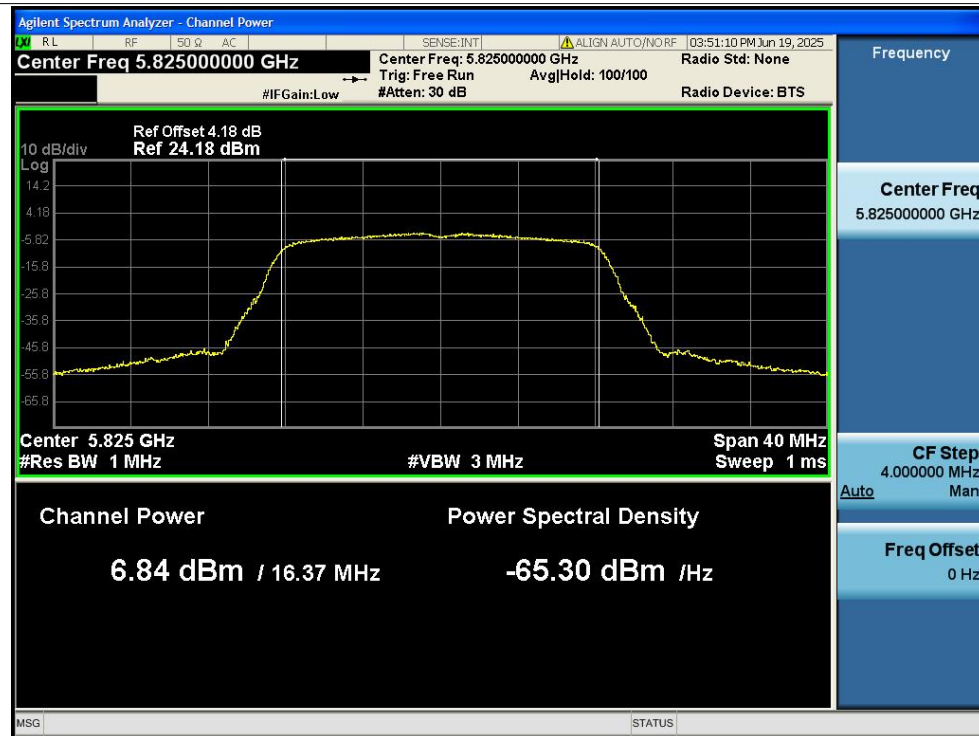


Power NVNT n20 5180MHz Ant1

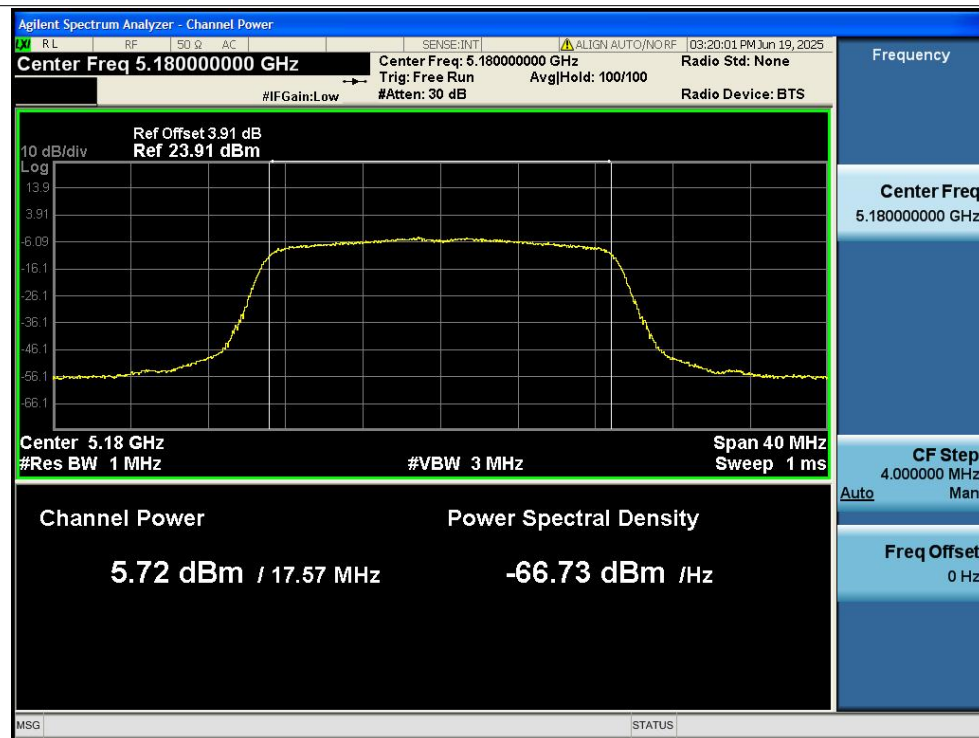


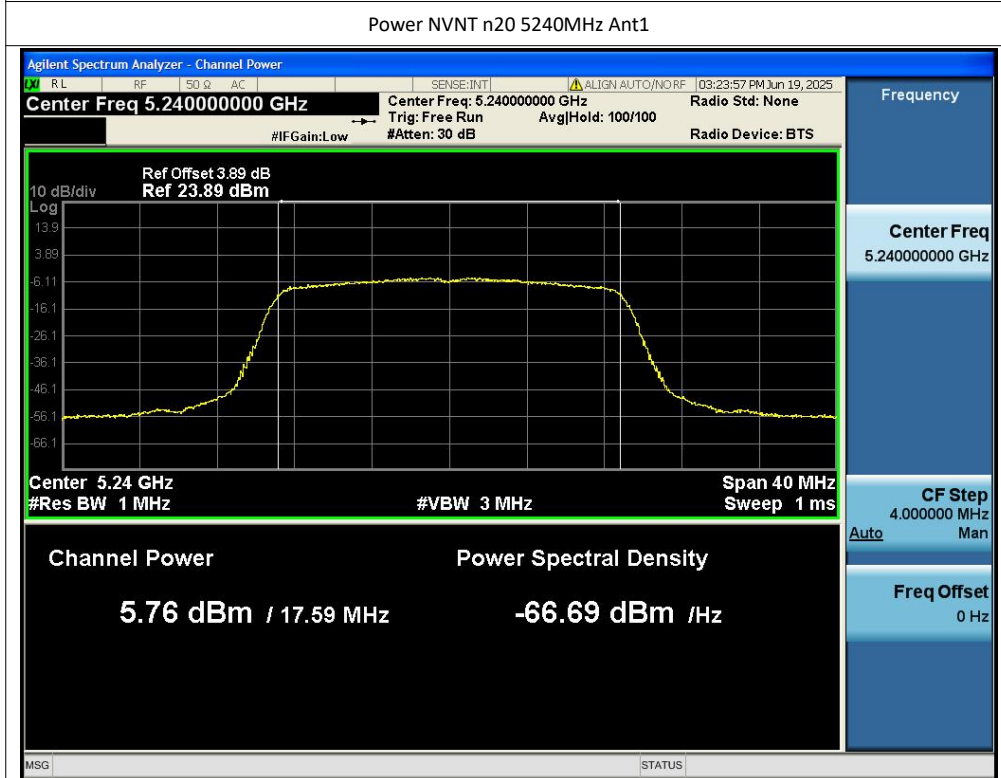
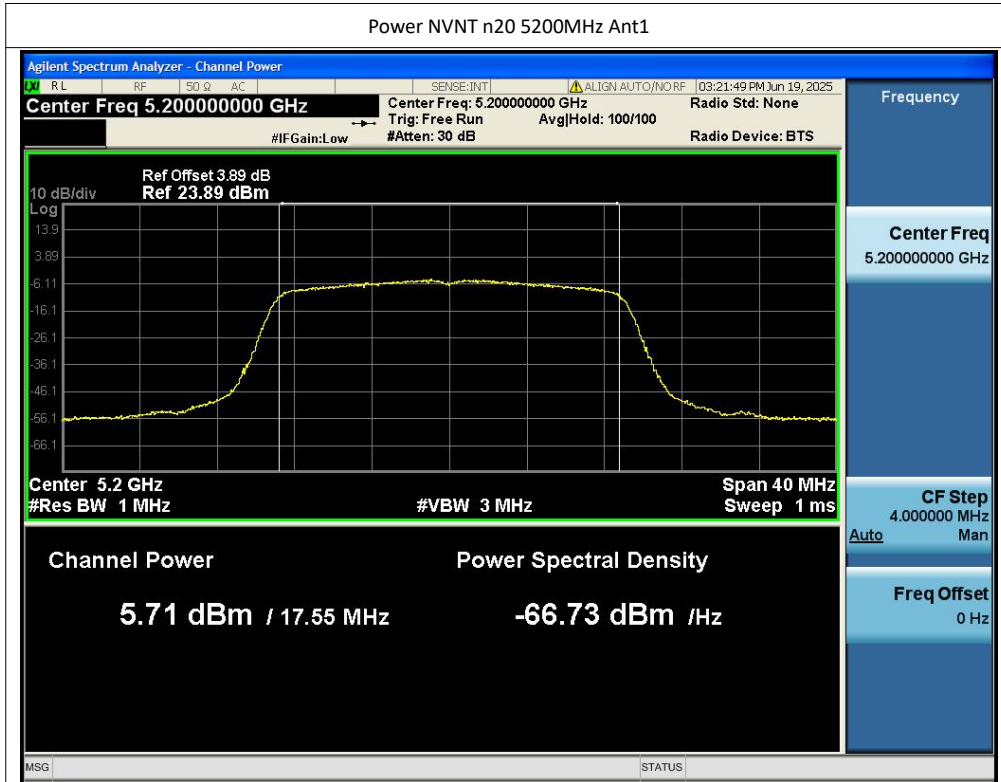


Power NVNT n20 5260MHz Ant1

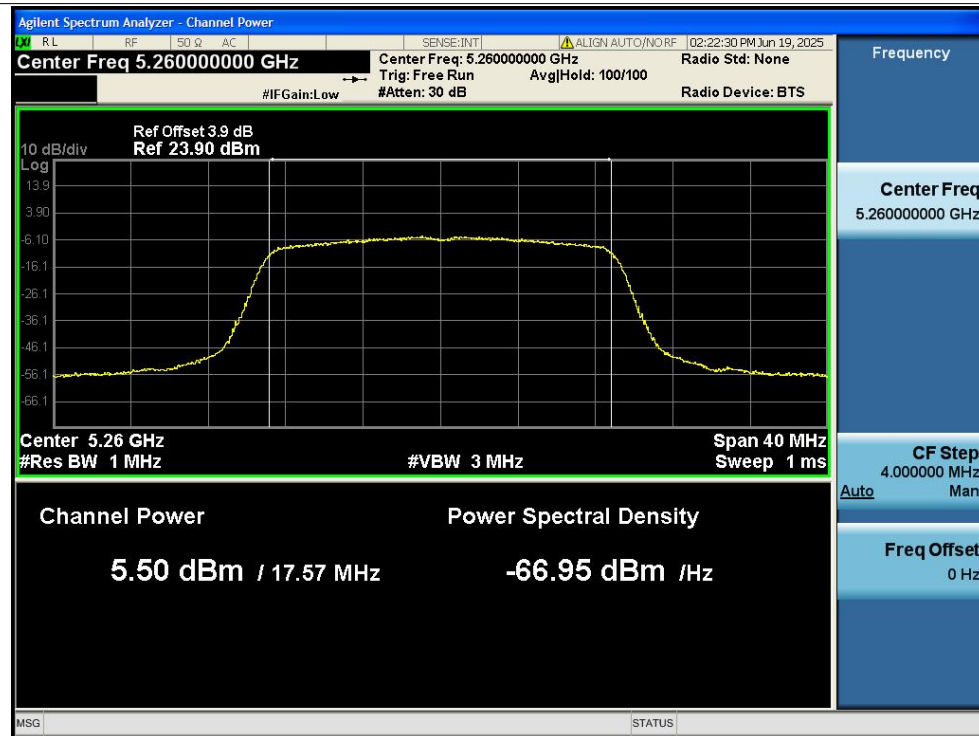


Power NVNT n20 5300MHz Ant1

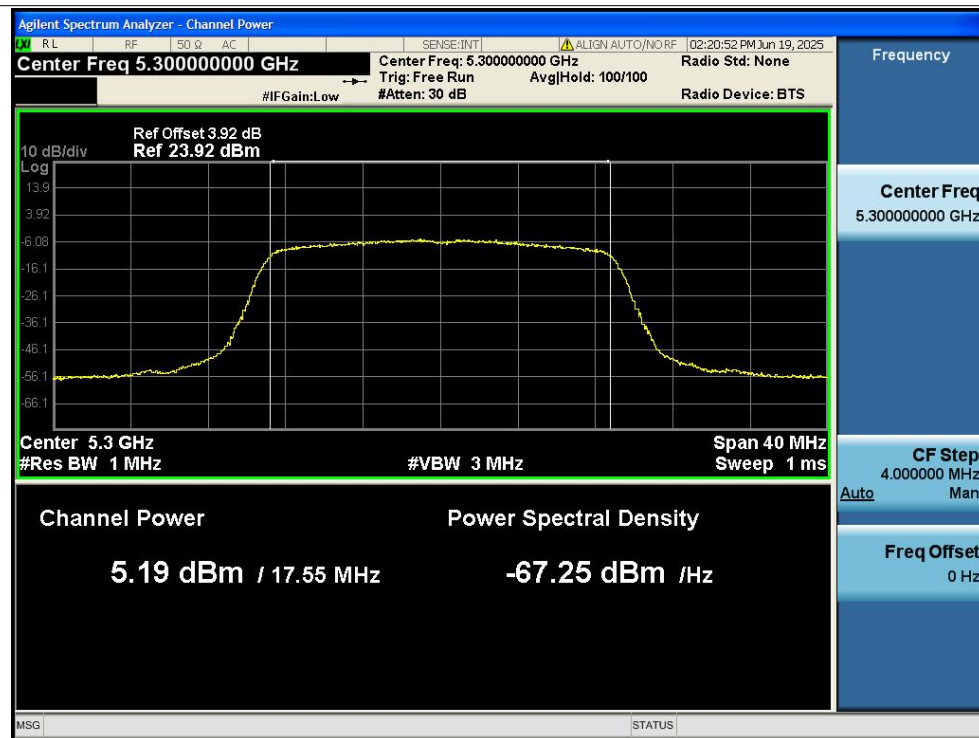


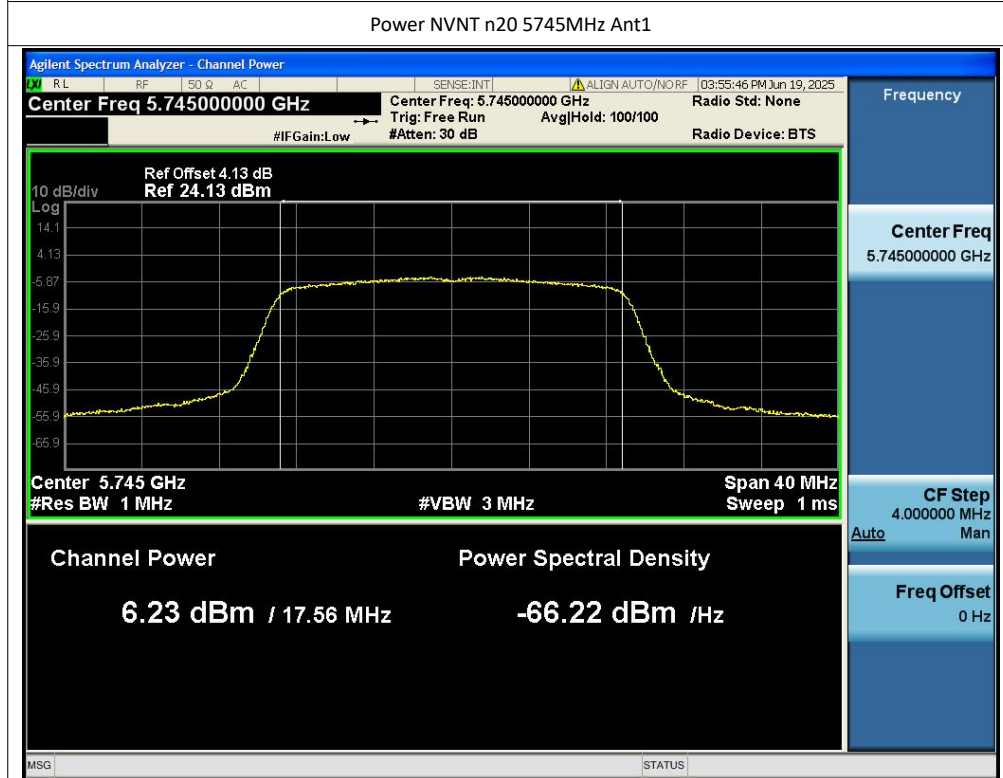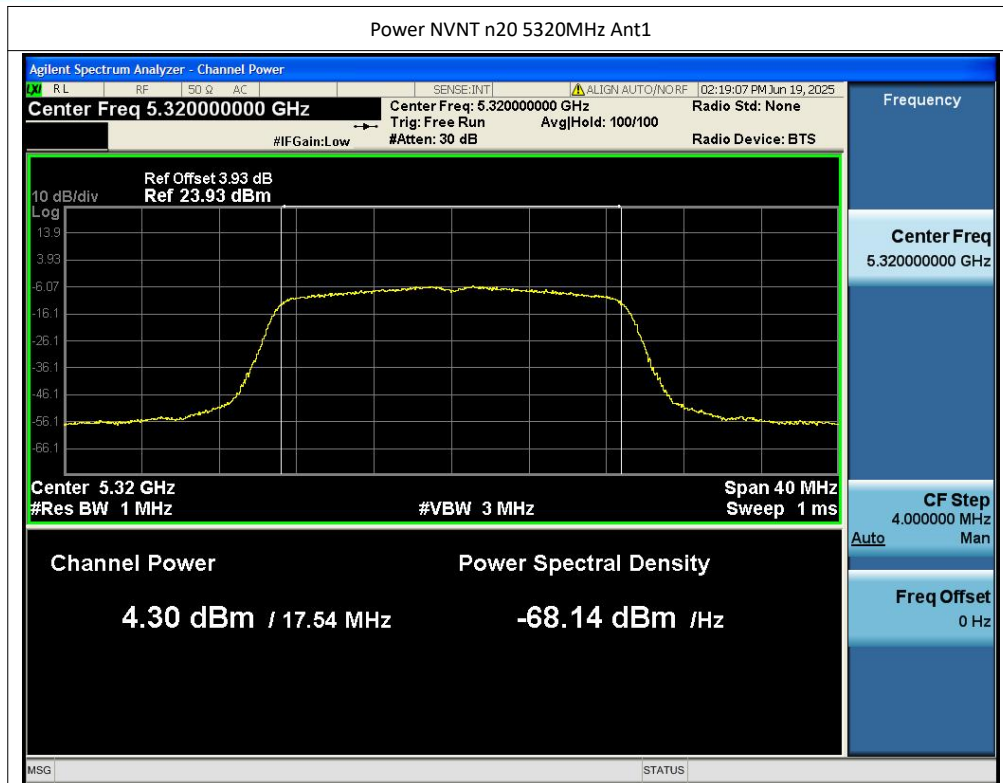


Power NVNT n20 5785MHz Ant1

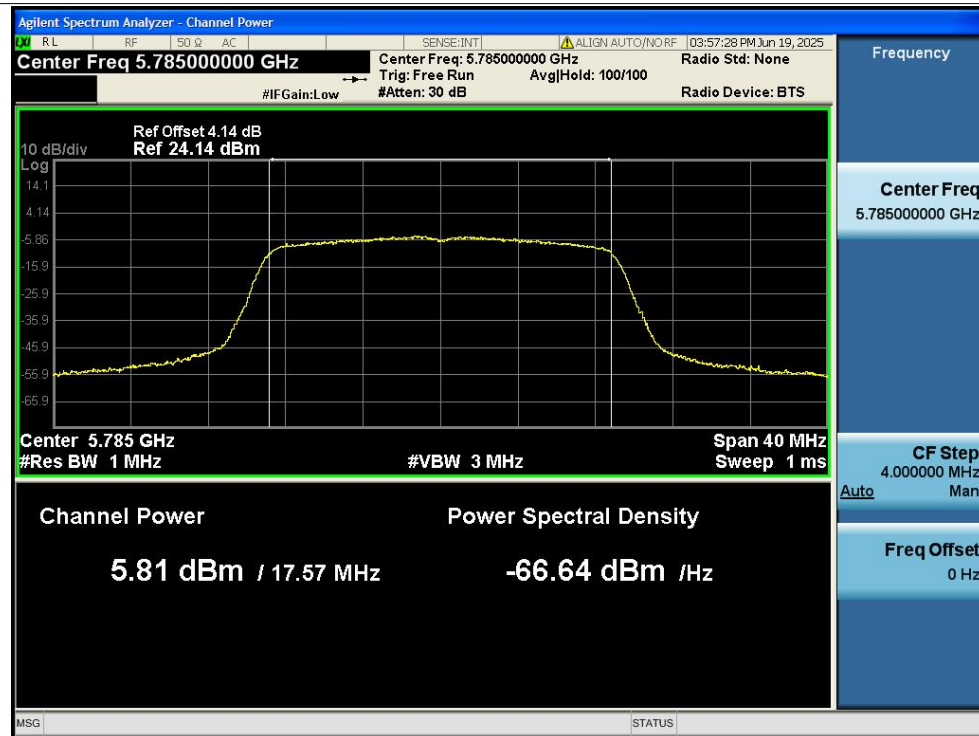


Power NVNT n20 5825MHz Ant1

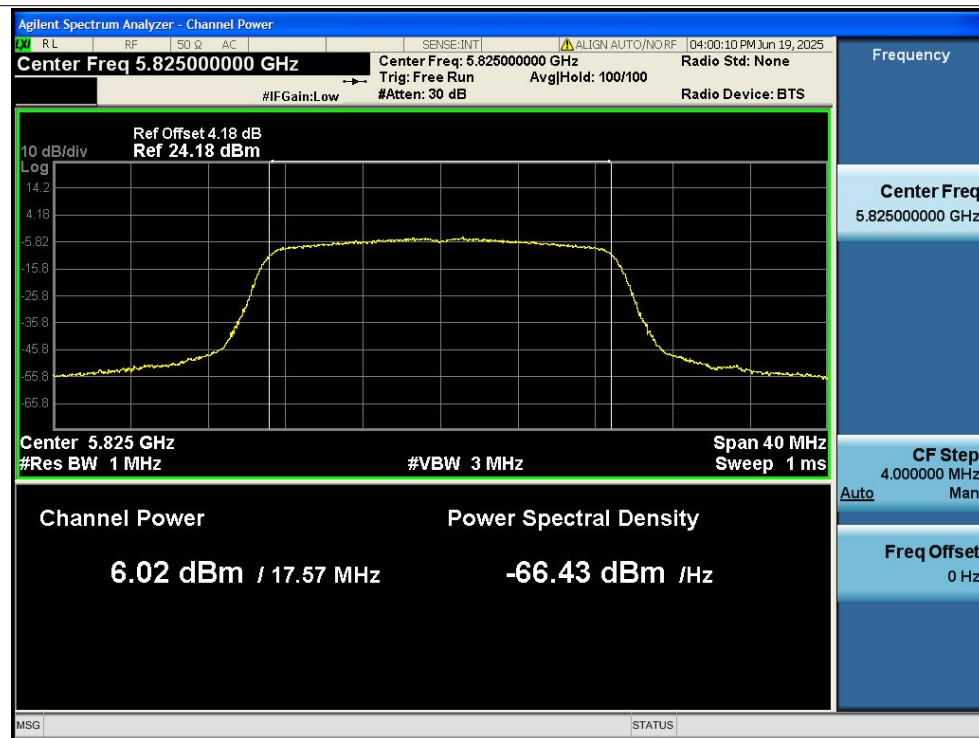


Power NVNT n40 5190MHz Ant1

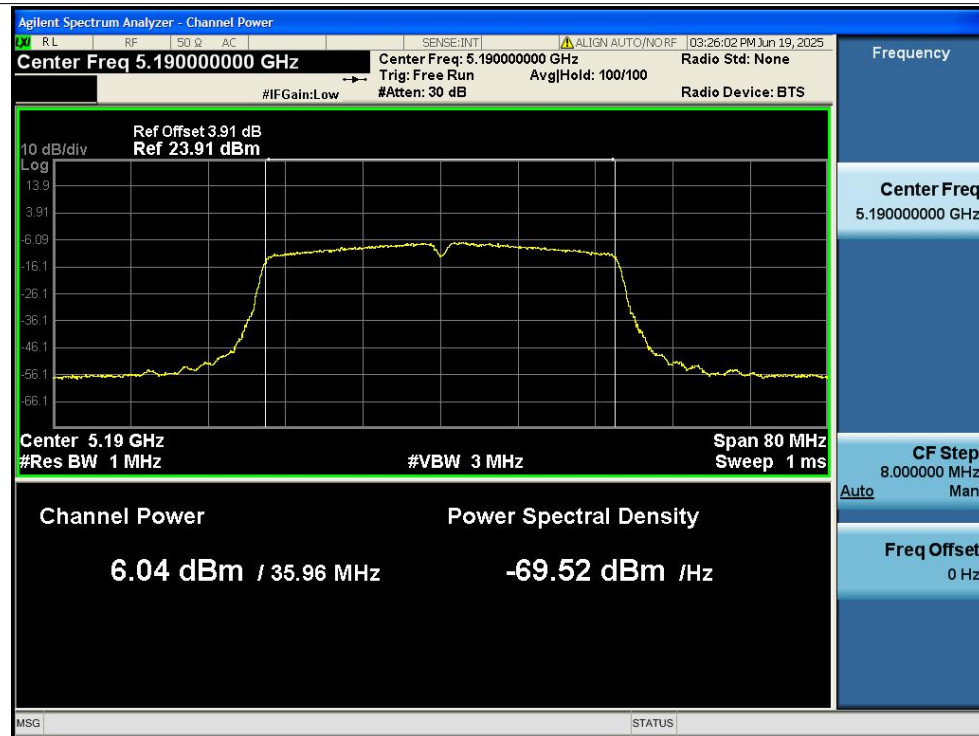


Power NVNT n40 5230MHz Ant1

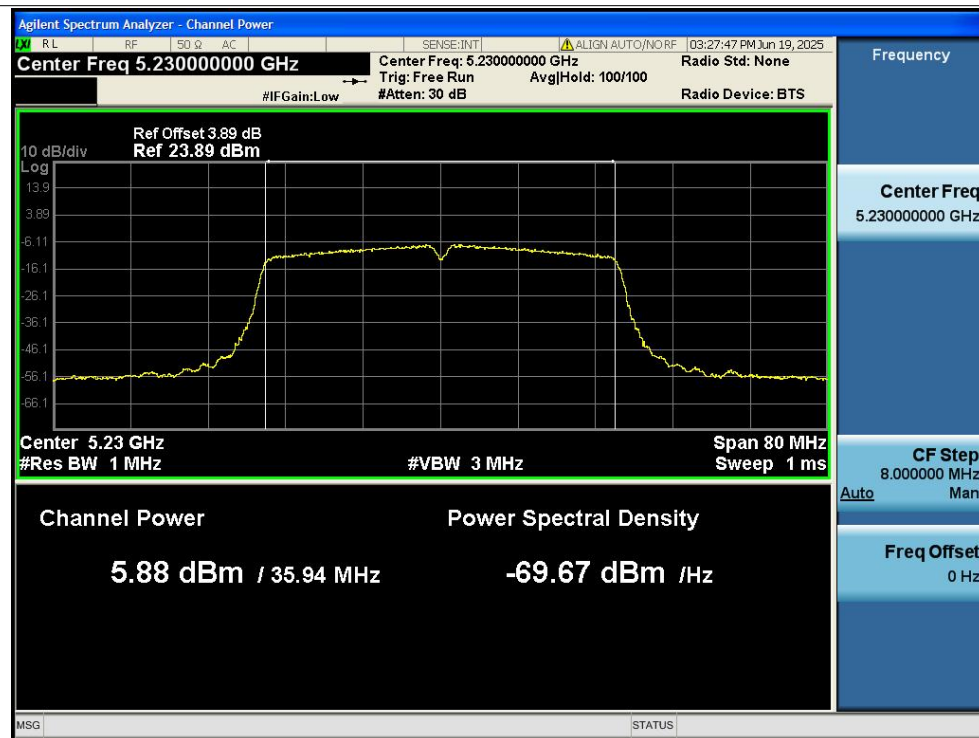


Power NVNT n40 5270MHz Ant1

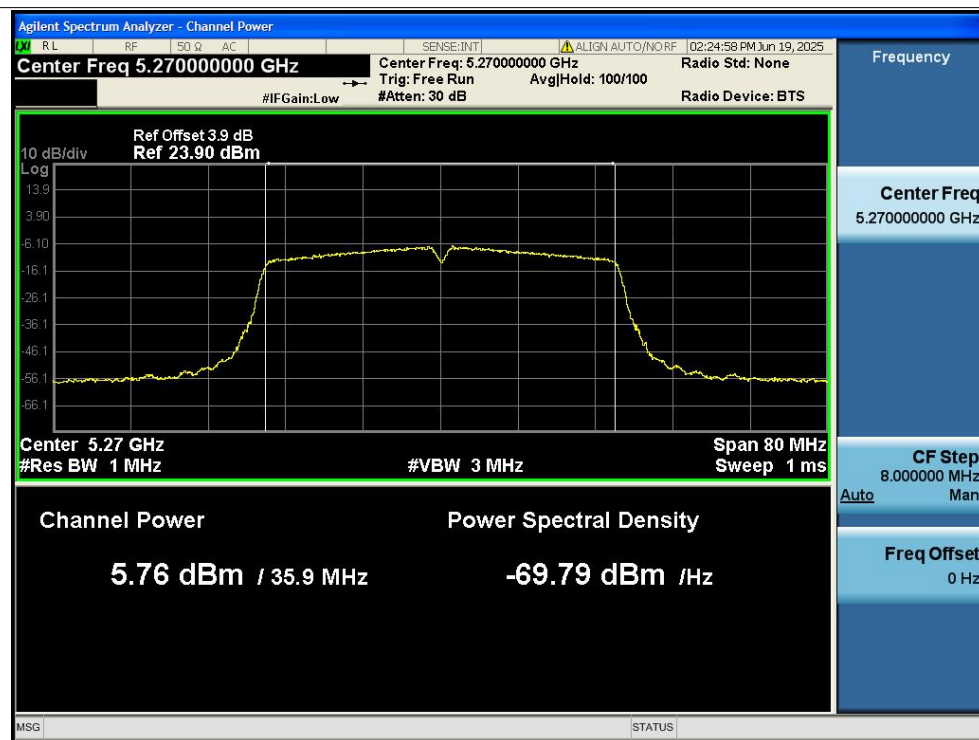


Power NVNT n40 5310MHz Ant1

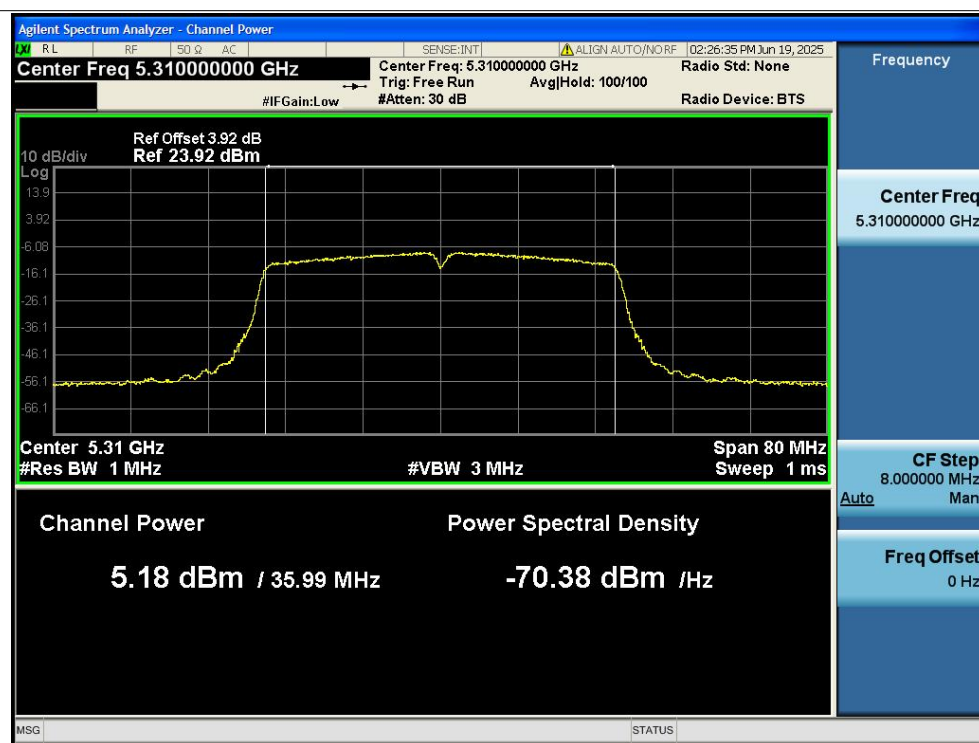


Power NVNT n40 5755MHz Ant1

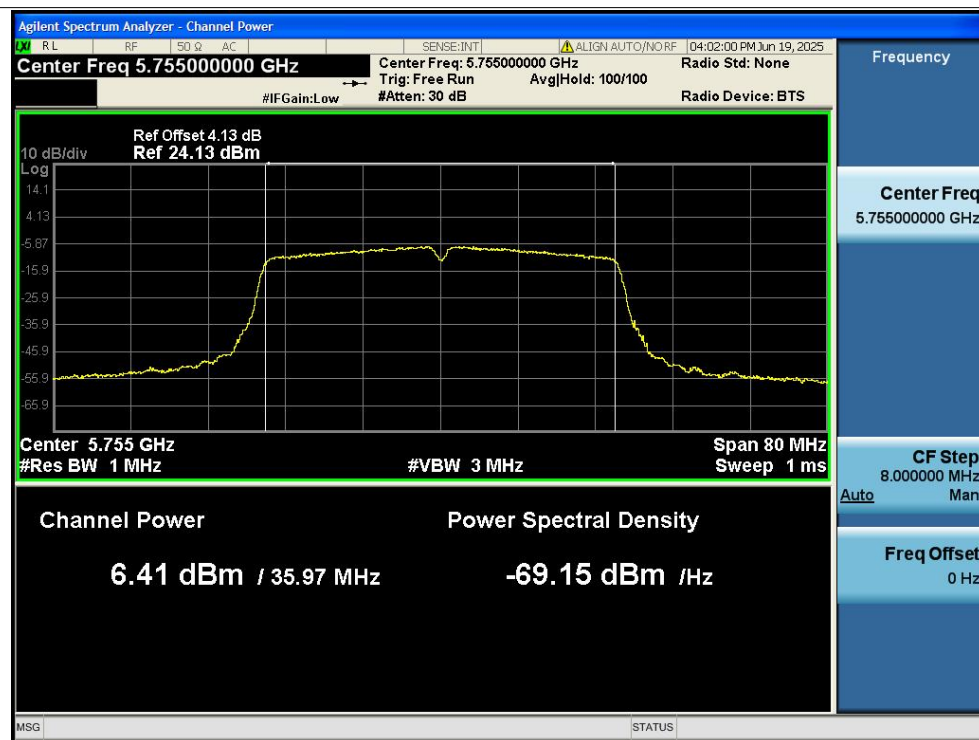

Power NVNT n40 5795MHz Ant1

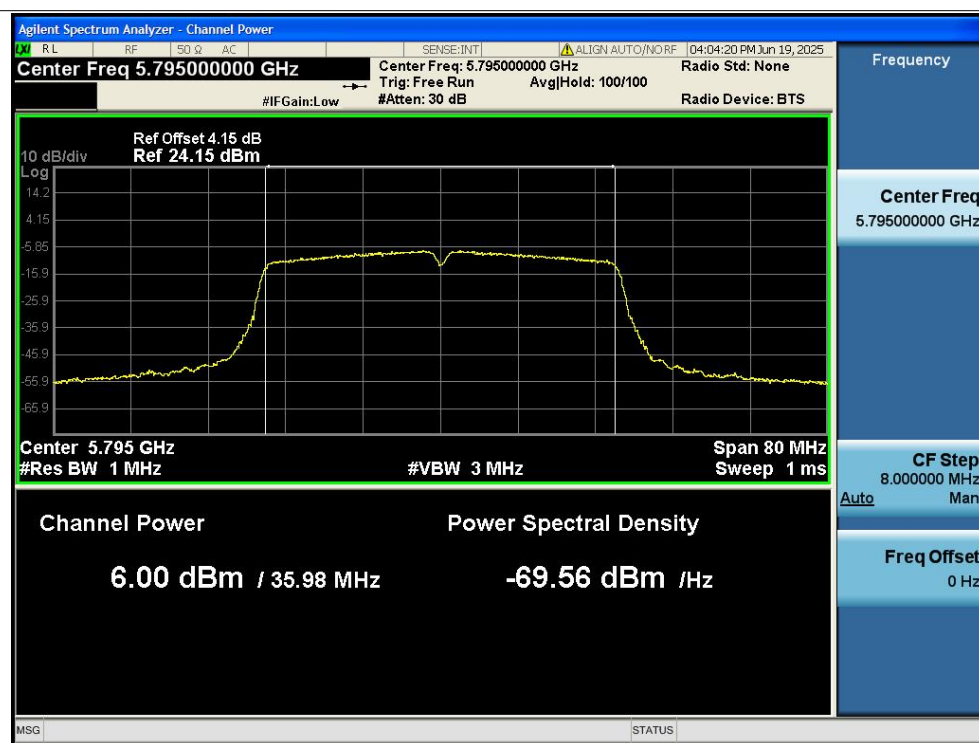

Power NVNT ac20 5180MHz Ant1

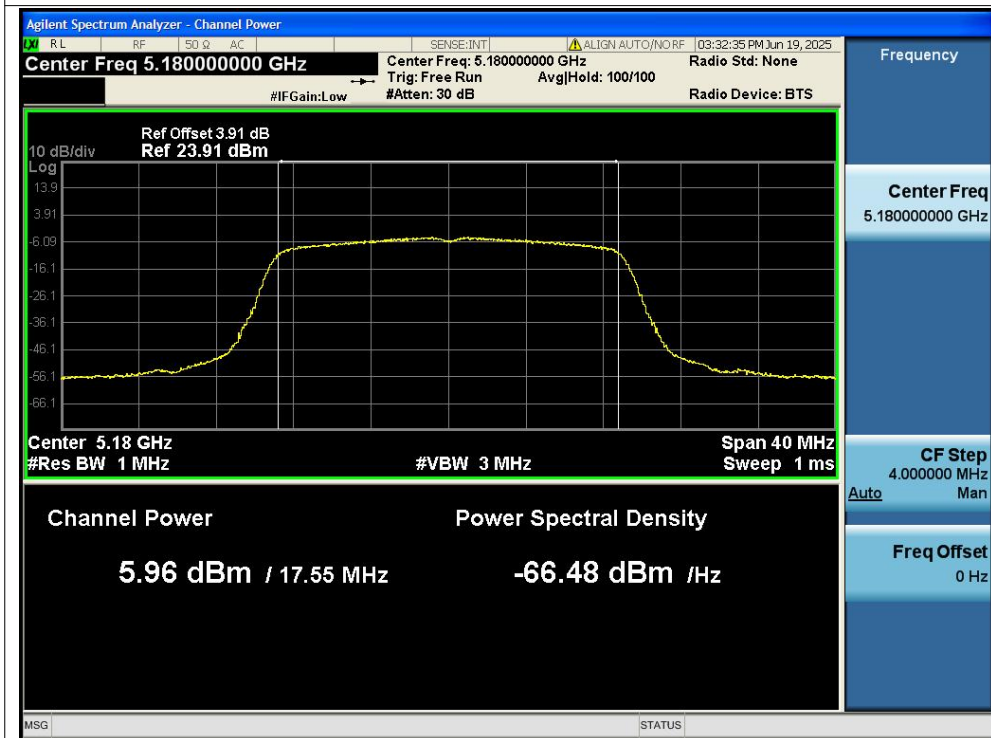

Power NVNT ac20 5200MHz Ant1

