




Band Edge NVNT ac20 5745MHz Low Ant1

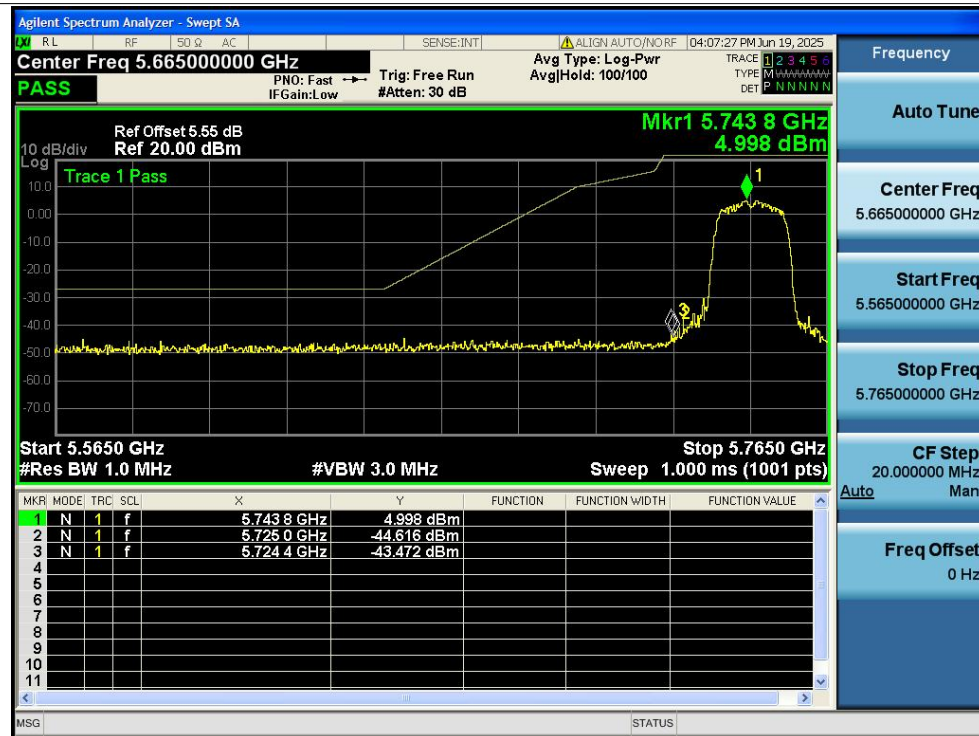


Band Edge NVNT ac20 5825MHz High Ant1

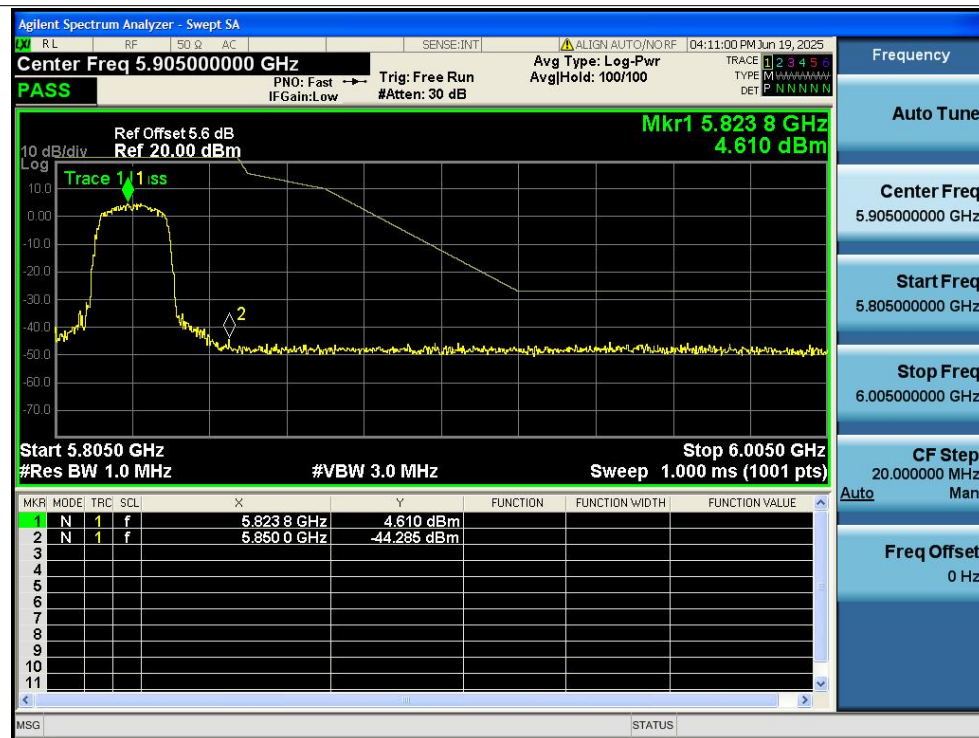


Band Edge NVNT ac40 5190MHz Low Ant1

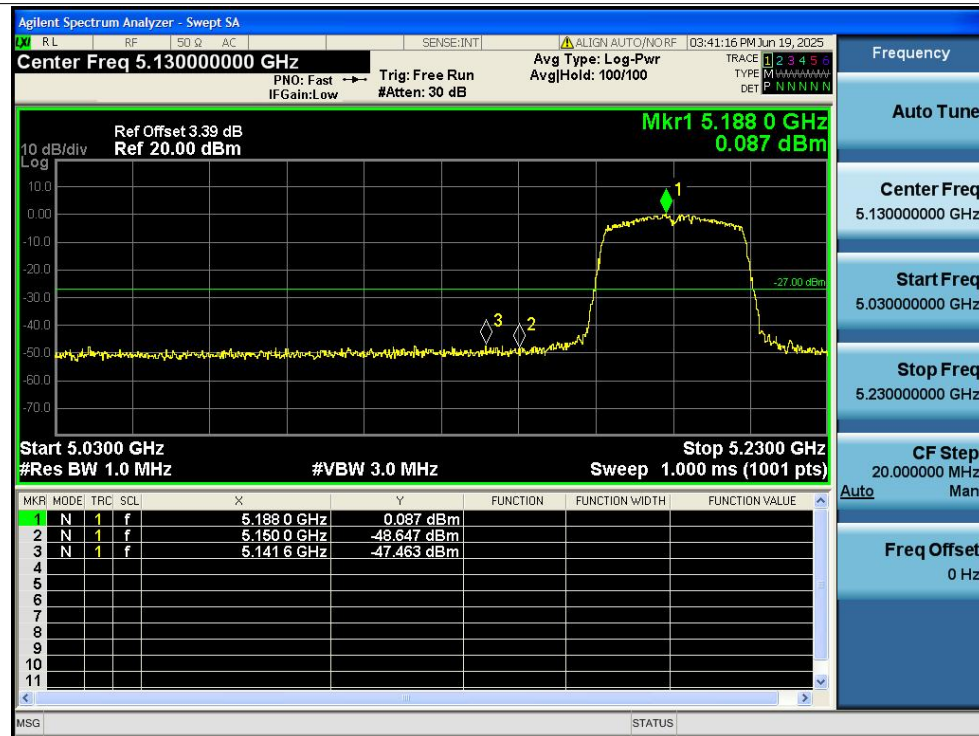


Band Edge NVNT ac40 5230MHz High Ant1

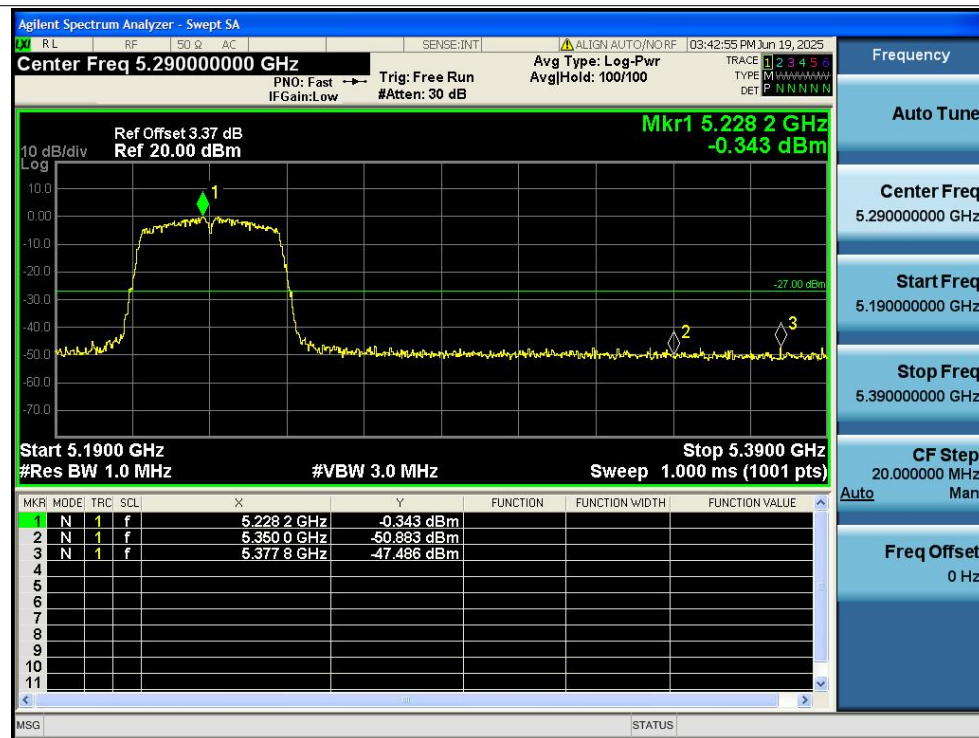


Band Edge NVNT ac40 5270MHz Low Ant1

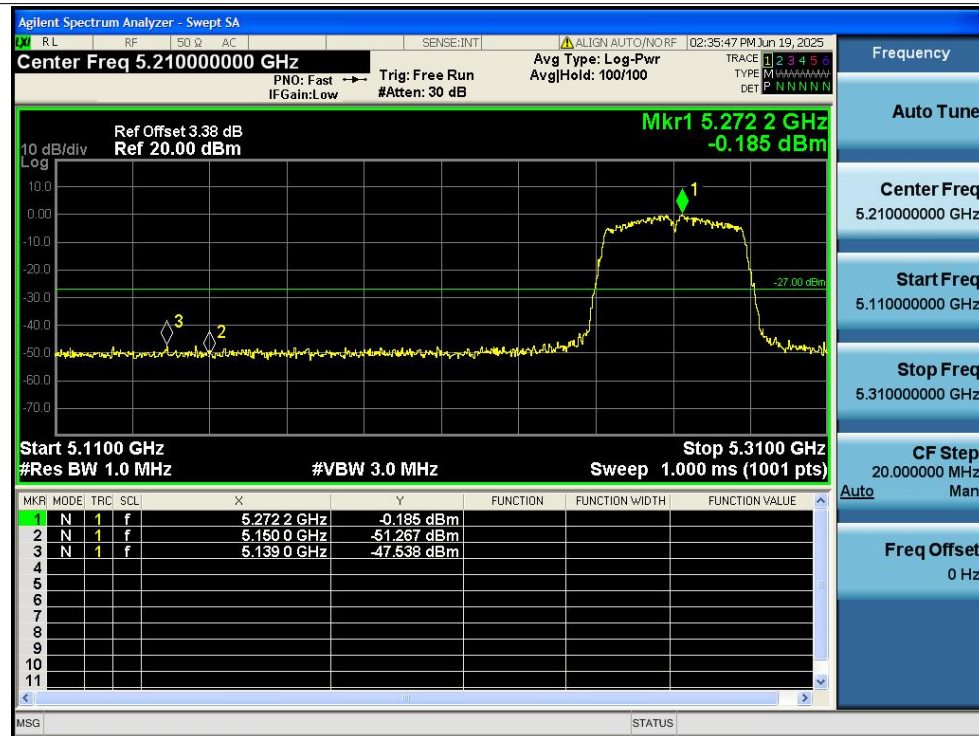


Band Edge NVNT ac40 5310MHz High Ant1

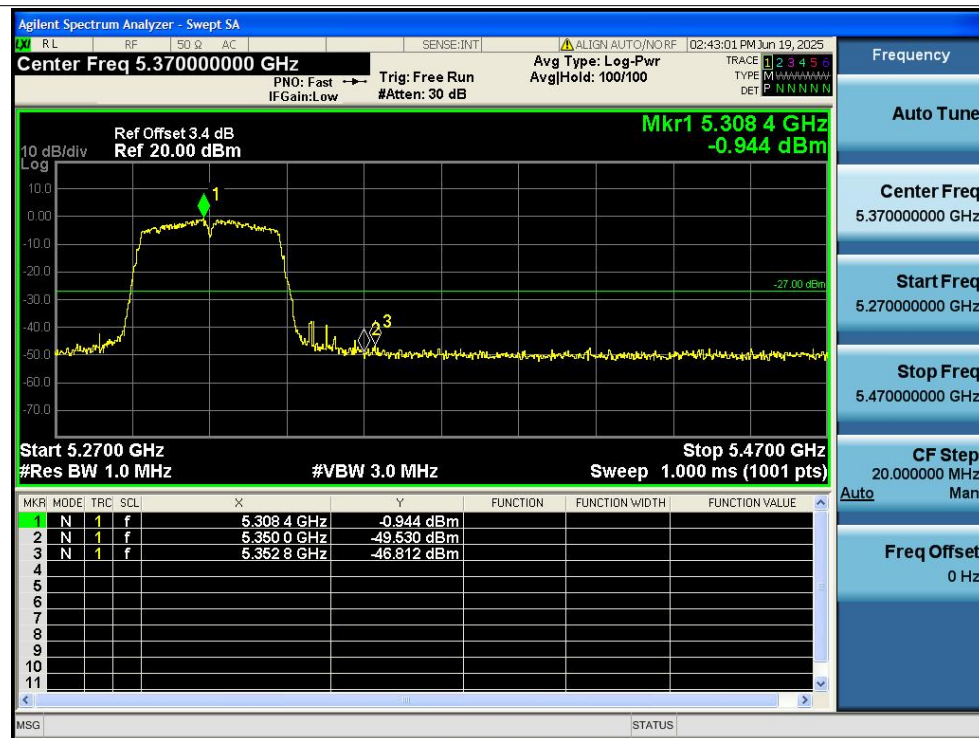


Band Edge NVNT ac40 5755MHz Low Ant1

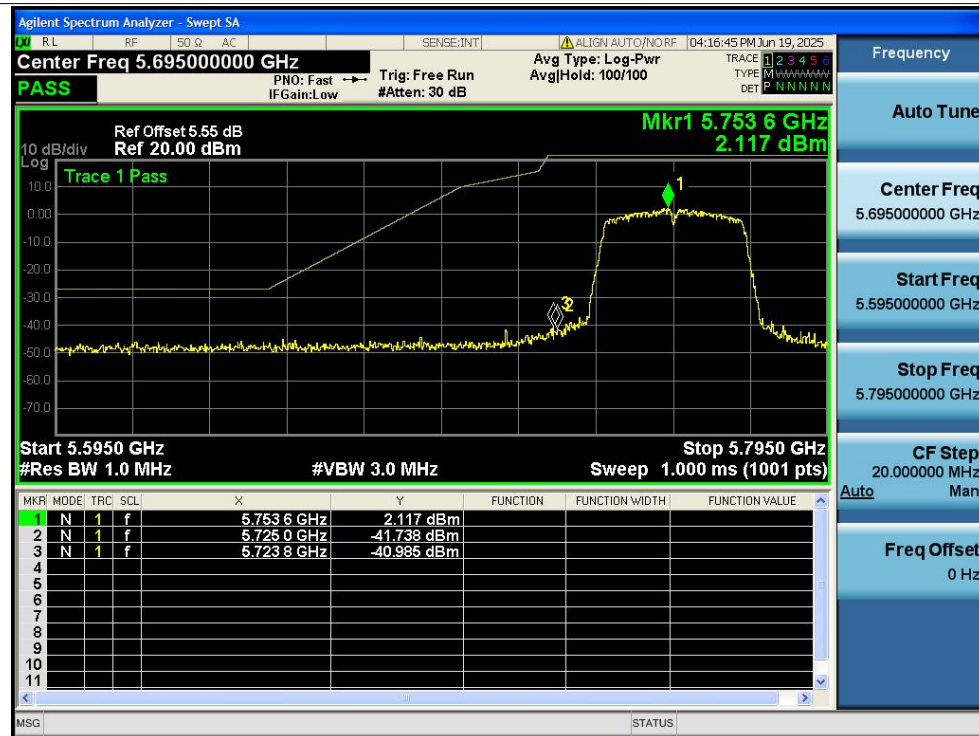

Band Edge NVNT ac40 5795MHz High Ant1

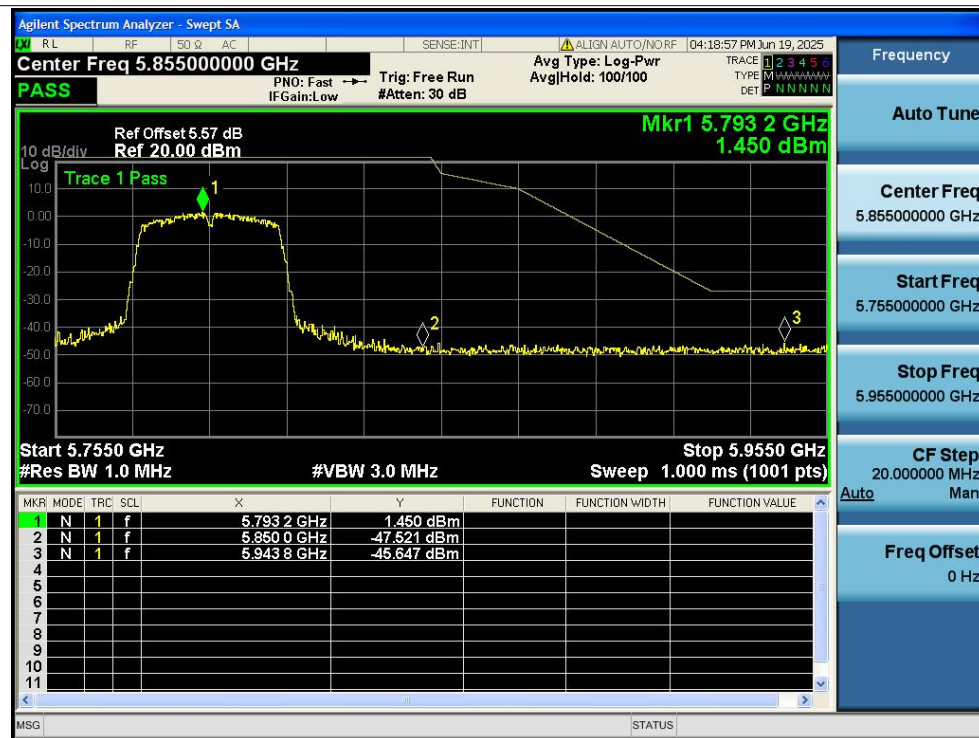


Band Edge NVNT ac80 5210MHz Low Ant1

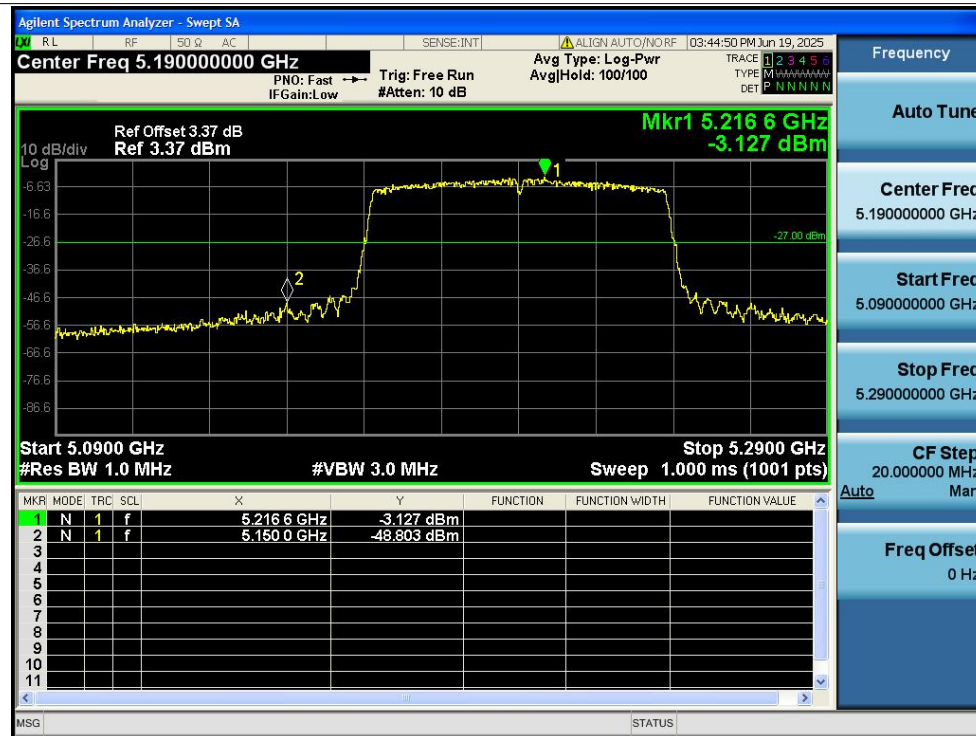

Band Edge NVNT ac80 5290MHz High Ant1



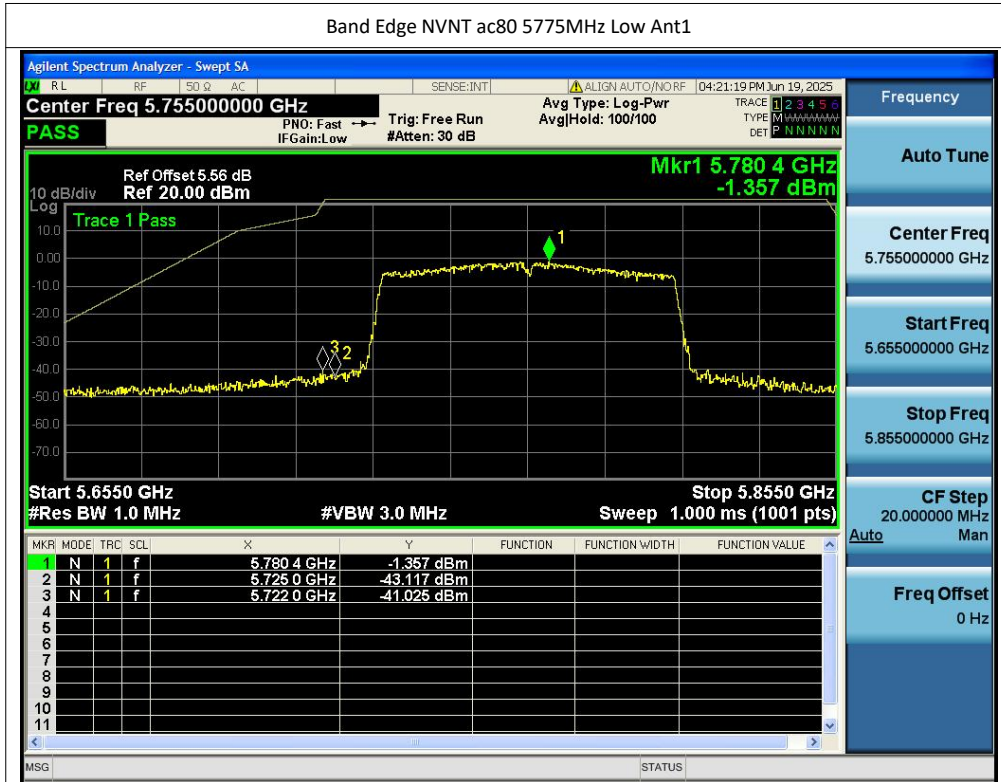



Frequency Stability

Condition	Mode	Time (mins)	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	a	0	5180	Ant1	5180	0	0	25	Pass
NVNT	a	0	5200	Ant1	5200	0	0	25	Pass
NVNT	a	0	5240	Ant1	5239.98	-20000	-3.82	25	Pass
NVNT	a	0	5260	Ant1	5260	0	0	25	Pass
NVNT	a	0	5300	Ant1	5300	0	0	25	Pass
NVNT	a	0	5320	Ant1	5320.02	20000	3.76	25	Pass
NVNT	a	0	5745	Ant1	5745	0	0	25	Pass
NVNT	a	0	5785	Ant1	5784.98	-20000	-3.46	25	Pass
NVNT	a	0	5825	Ant1	5825	0	0	25	Pass
NVNT	n20	0	5180	Ant1	5180	0	0	25	Pass
NVNT	n20	0	5200	Ant1	5200	0	0	25	Pass
NVNT	n20	0	5240	Ant1	5240.02	20000	3.82	25	Pass
NVNT	n20	0	5260	Ant1	5260.02	20000	3.8	25	Pass
NVNT	n20	0	5300	Ant1	5300	0	0	25	Pass
NVNT	n20	0	5320	Ant1	5320.02	20000	3.76	25	Pass
NVNT	n20	0	5745	Ant1	5745.02	20000	3.48	25	Pass
NVNT	n20	0	5785	Ant1	5785.02	20000	3.46	25	Pass
NVNT	n20	0	5825	Ant1	5825	0	0	25	Pass
NVNT	n40	0	5190	Ant1	5190	0	0	25	Pass
NVNT	n40	0	5230	Ant1	5230	0	0	25	Pass
NVNT	n40	0	5270	Ant1	5270	0	0	25	Pass
NVNT	n40	0	5310	Ant1	5310	0	0	25	Pass
NVNT	n40	0	5755	Ant1	5755	0	0	25	Pass
NVNT	n40	0	5795	Ant1	5795	0	0	25	Pass
NVNT	ac20	0	5180	Ant1	5180.02	20000	3.86	25	Pass
NVNT	ac20	0	5200	Ant1	5199.98	-20000	-3.85	25	Pass
NVNT	ac20	0	5240	Ant1	5240	0	0	25	Pass
NVNT	ac20	0	5260	Ant1	5260.02	20000	3.8	25	Pass
NVNT	ac20	0	5300	Ant1	5300	0	0	25	Pass
NVNT	ac20	0	5320	Ant1	5320.02	20000	3.76	25	Pass
NVNT	ac20	0	5745	Ant1	5745	0	0	25	Pass
NVNT	ac20	0	5785	Ant1	5785	0	0	25	Pass
NVNT	ac20	0	5825	Ant1	5825	0	0	25	Pass
NVNT	ac40	0	5190	Ant1	5190	0	0	25	Pass
NVNT	ac40	0	5230	Ant1	5230	0	0	25	Pass
NVNT	ac40	0	5270	Ant1	5270	0	0	25	Pass
NVNT	ac40	0	5310	Ant1	5309.96	-40000	-7.53	25	Pass




Report No.: AB25060001FW03


NVNT	ac40	0	5755	Ant1	5755	0	0	25	Pass
NVNT	ac40	0	5795	Ant1	5795	0	0	25	Pass
NVNT	ac80	0	5210	Ant1	5210	0	0	25	Pass
NVNT	ac80	0	5290	Ant1	5290	0	0	25	Pass
NVNT	ac80	0	5775	Ant1	5775	0	0	25	Pass

Test Graphs


Freq. Stability NVNT a 5180MHz Ant1 0 Minutes

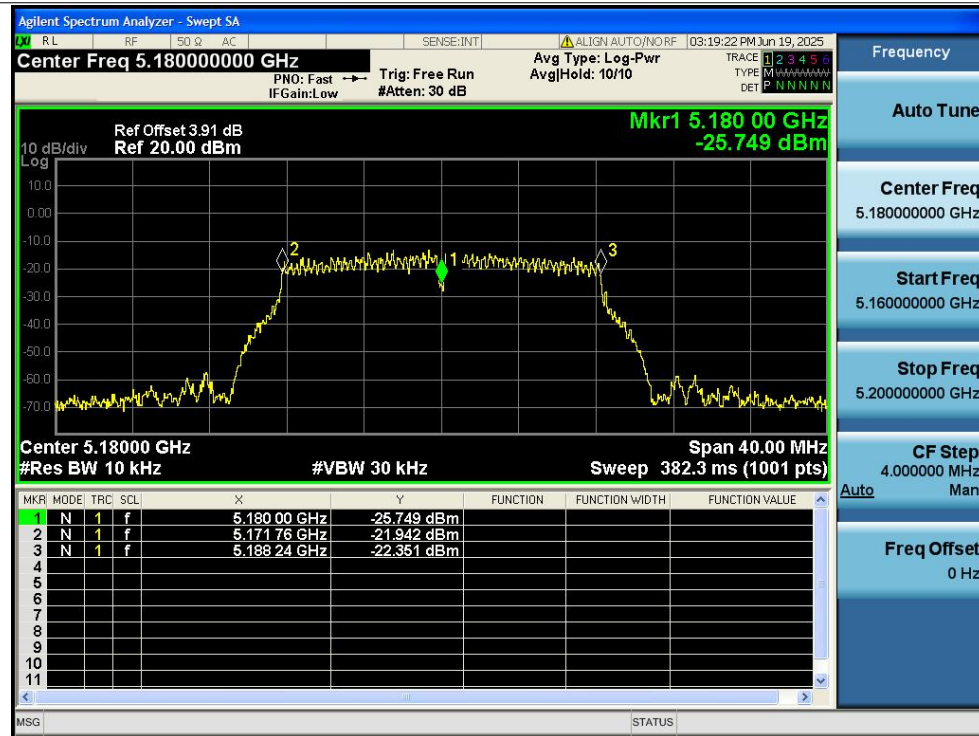


Freq. Stability NVNT a 5200MHz Ant1 0 Minutes

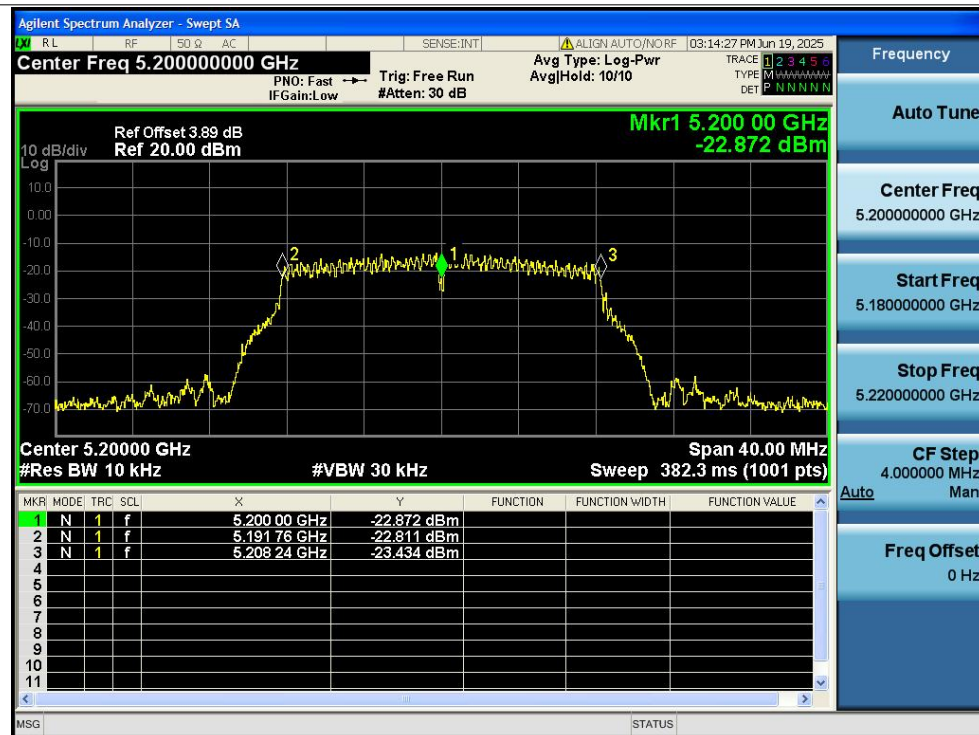


Freq. Stability NVNT a 5240MHz Ant1 0 Minutes

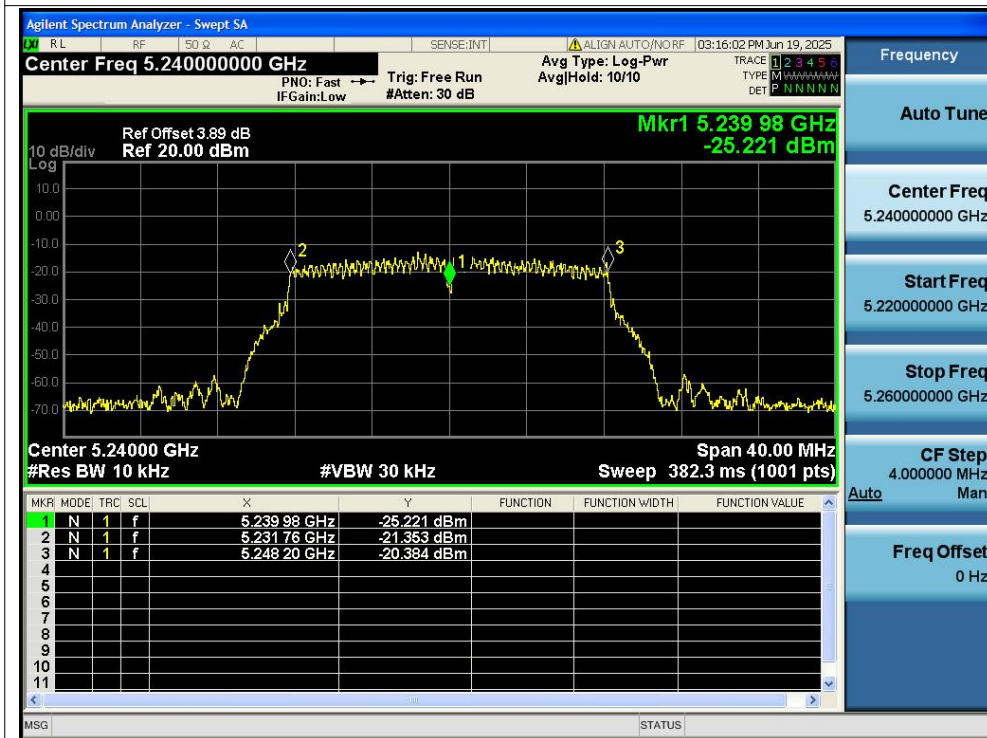


Freq. Stability NVNT a 5260MHz Ant1 0 Minutes

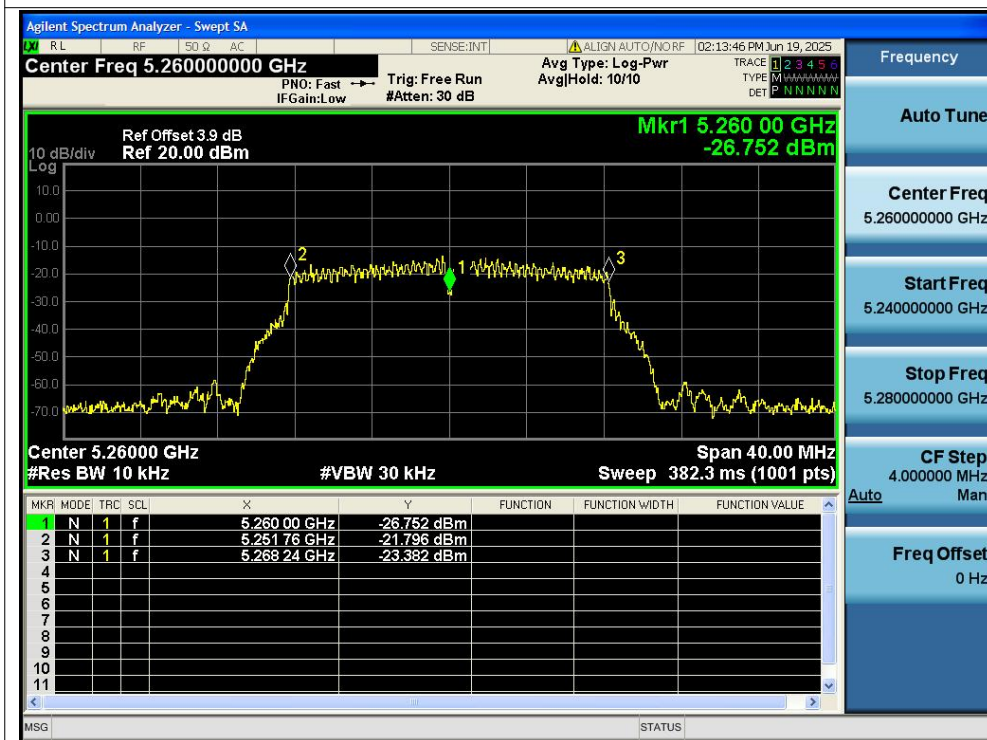


Freq. Stability NVNT a 5300MHz Ant1 0 Minutes

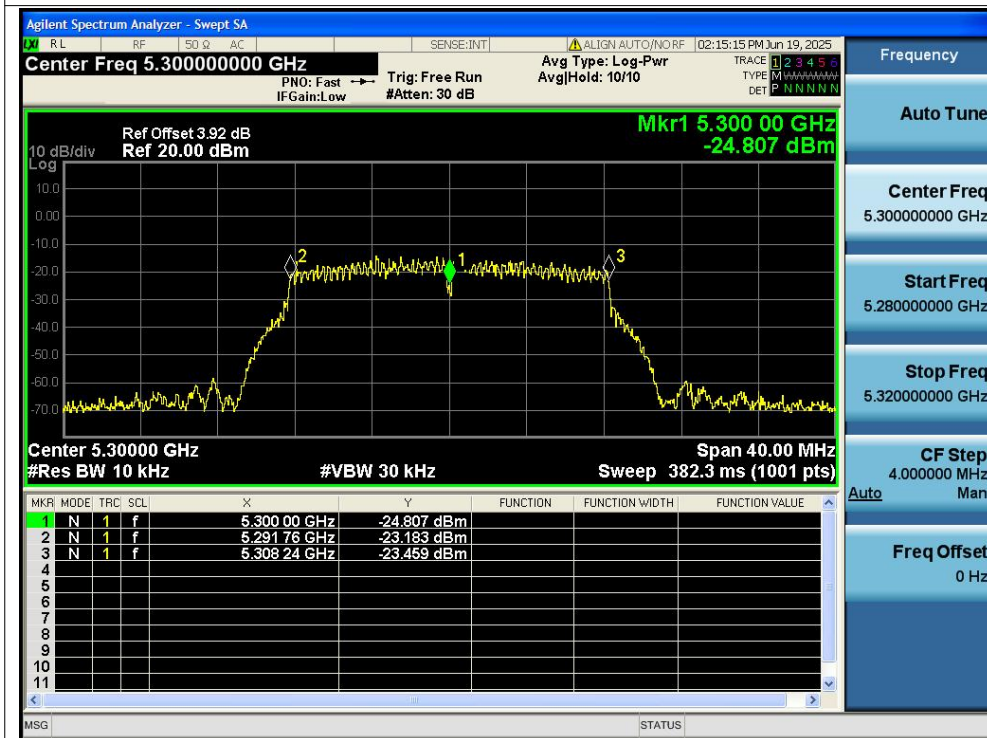


Freq. Stability NVNT a 5320MHz Ant1 0 Minutes

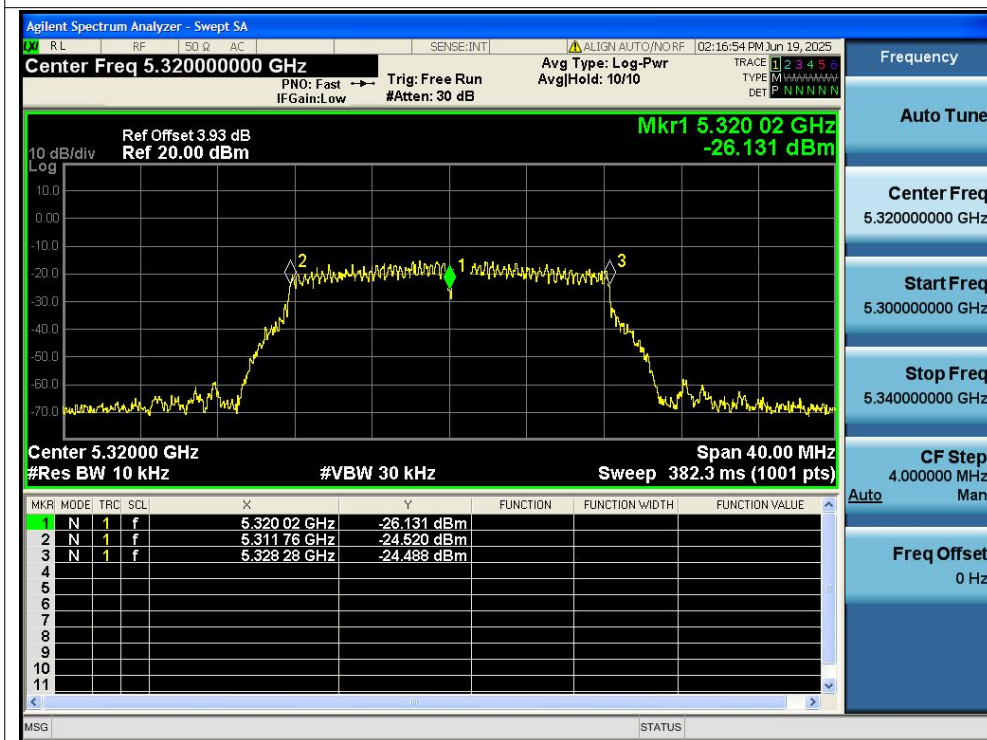


Freq. Stability NVNT a 5745MHz Ant1 0 Minutes

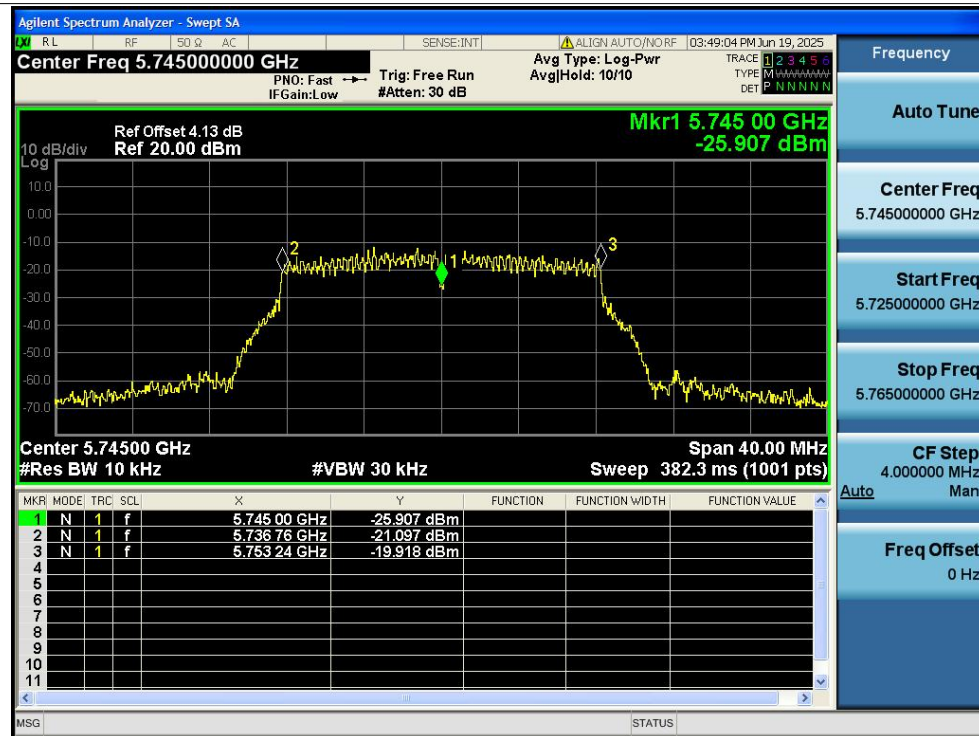


Freq. Stability NVNT a 5785MHz Ant1 0 Minutes

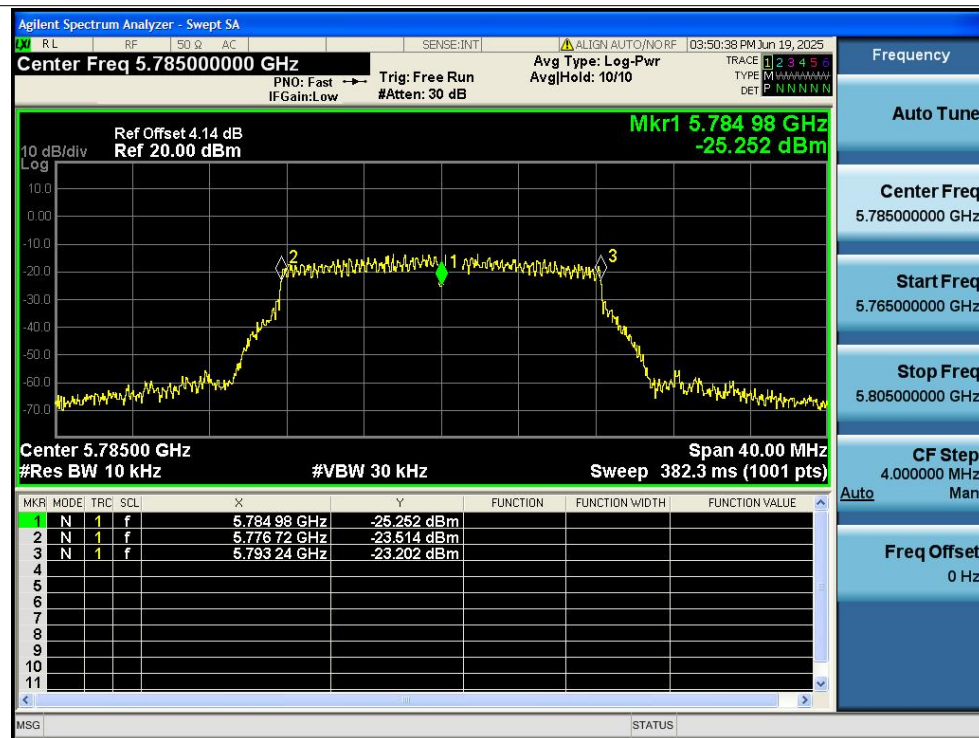


Freq. Stability NVNT a 5825MHz Ant1 0 Minutes

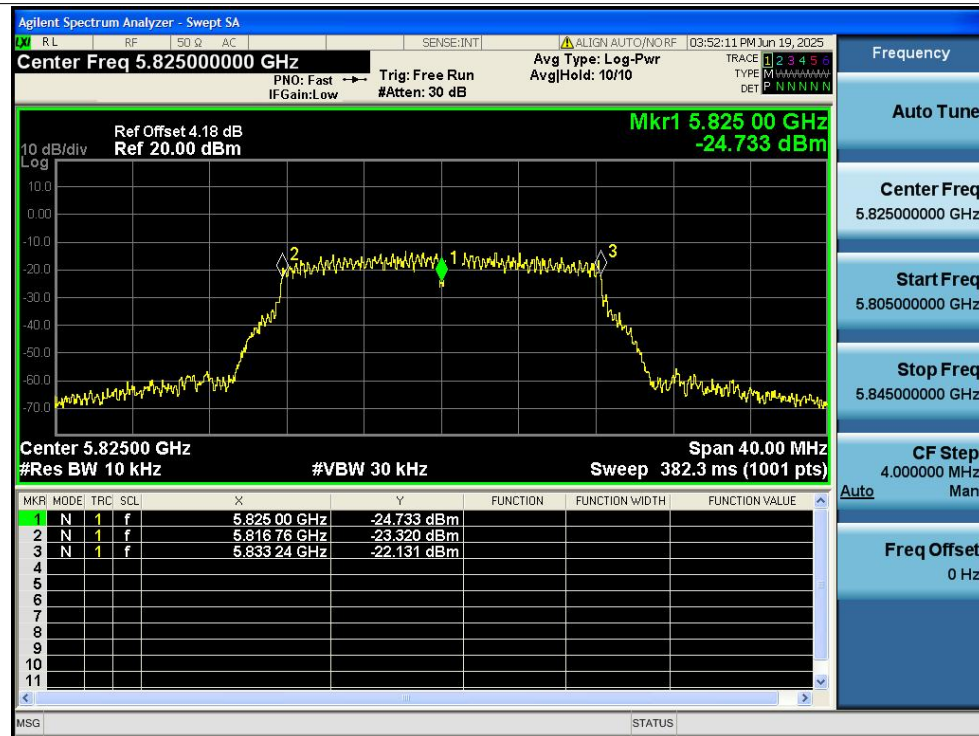


Freq. Stability NVNT n20 5180MHz Ant1 0 Minutes

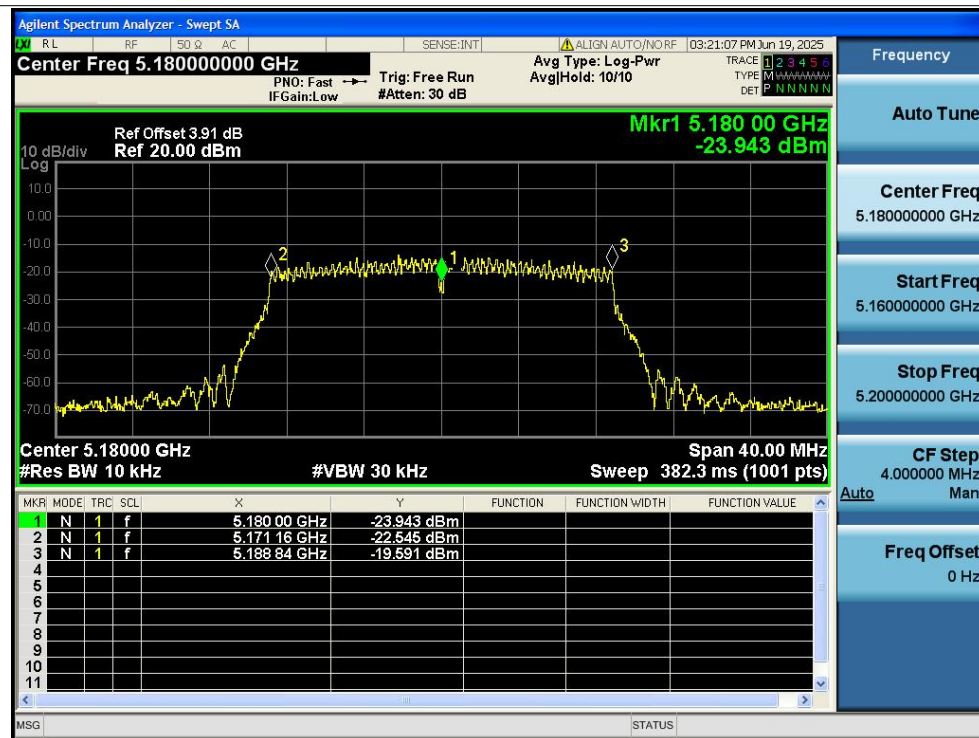


Freq. Stability NVNT n20 5200MHz Ant1 0 Minutes

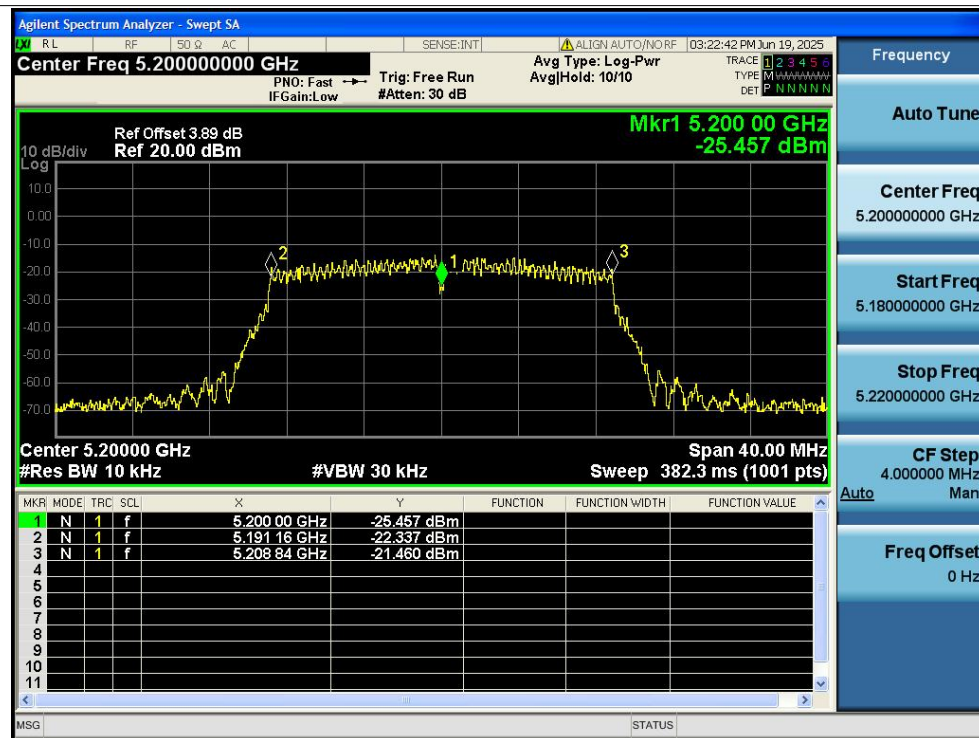


Freq. Stability NVNT n20 5240MHz Ant1 0 Minutes

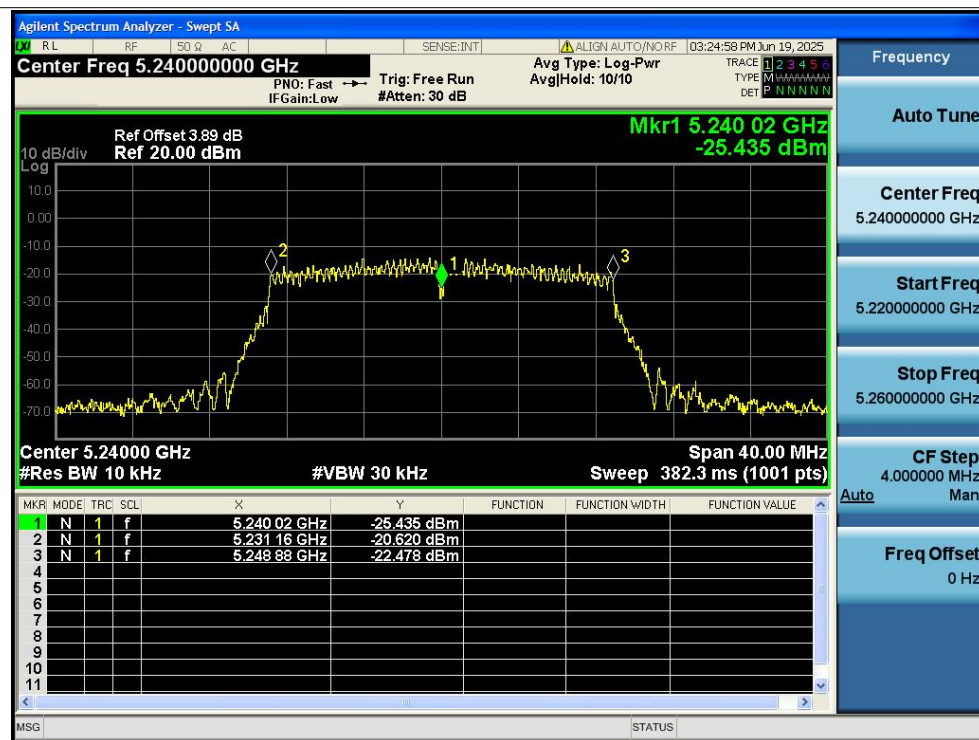


Freq. Stability NVNT n20 5260MHz Ant1 0 Minutes

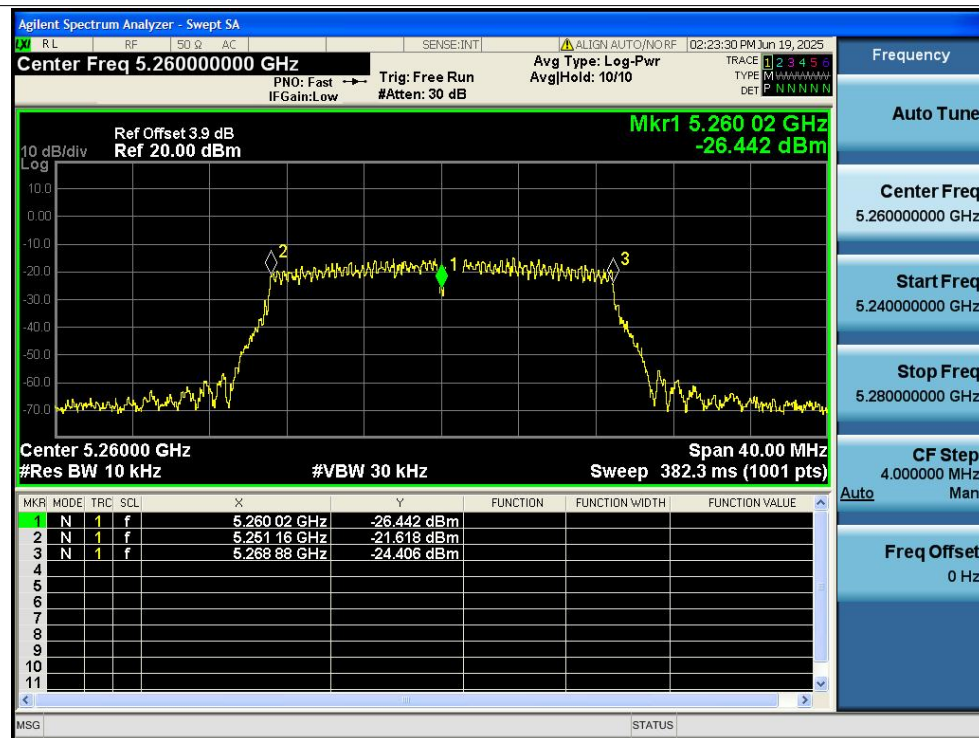


Freq. Stability NVNT n20 5300MHz Ant1 0 Minutes

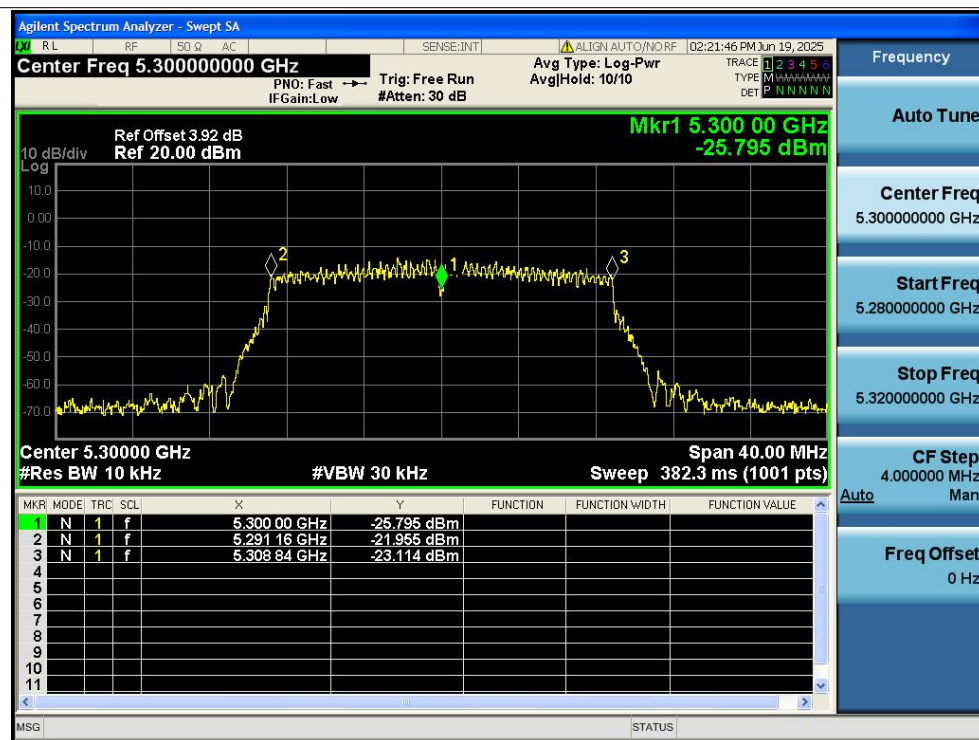


Freq. Stability NVNT n20 5320MHz Ant1 0 Minutes

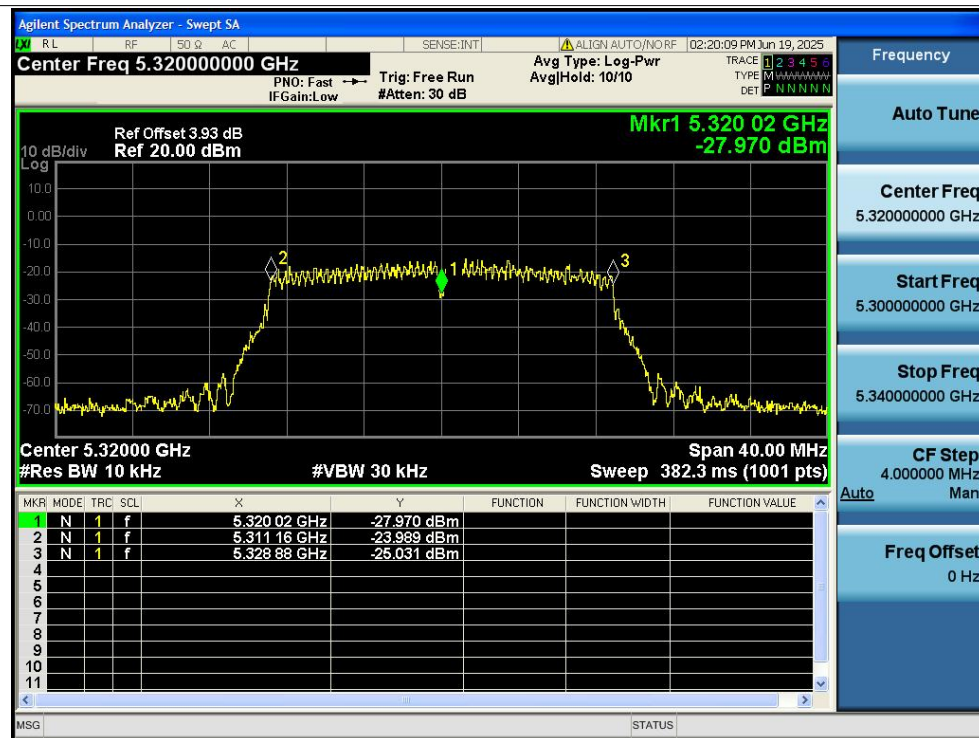


Freq. Stability NVNT n20 5745MHz Ant1 0 Minutes

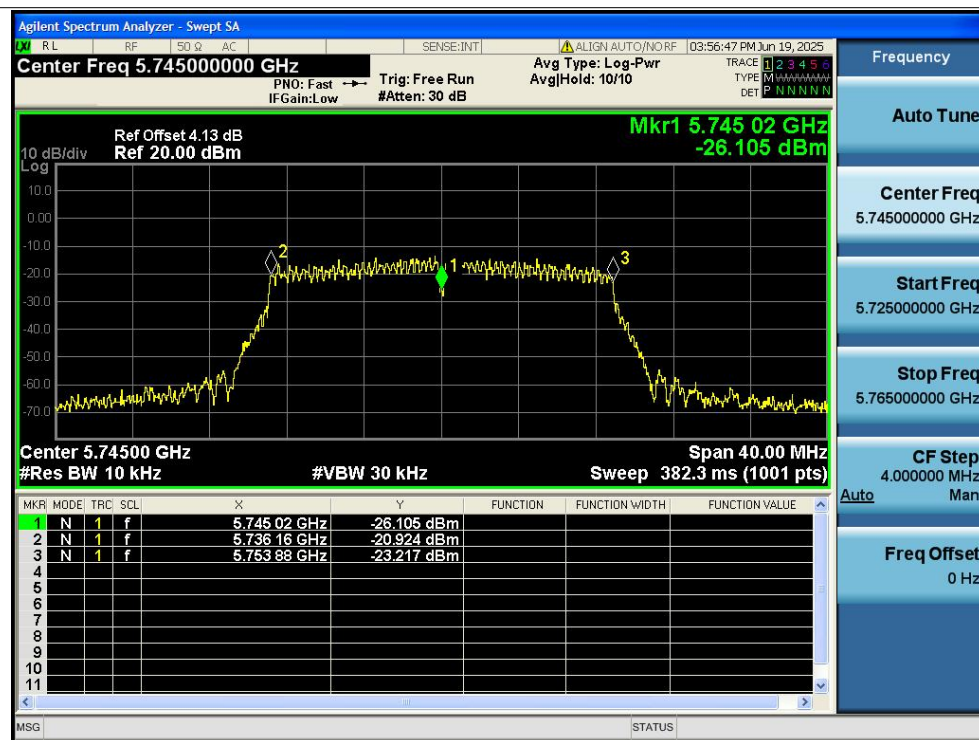


Freq. Stability NVNT n20 5785MHz Ant1 0 Minutes

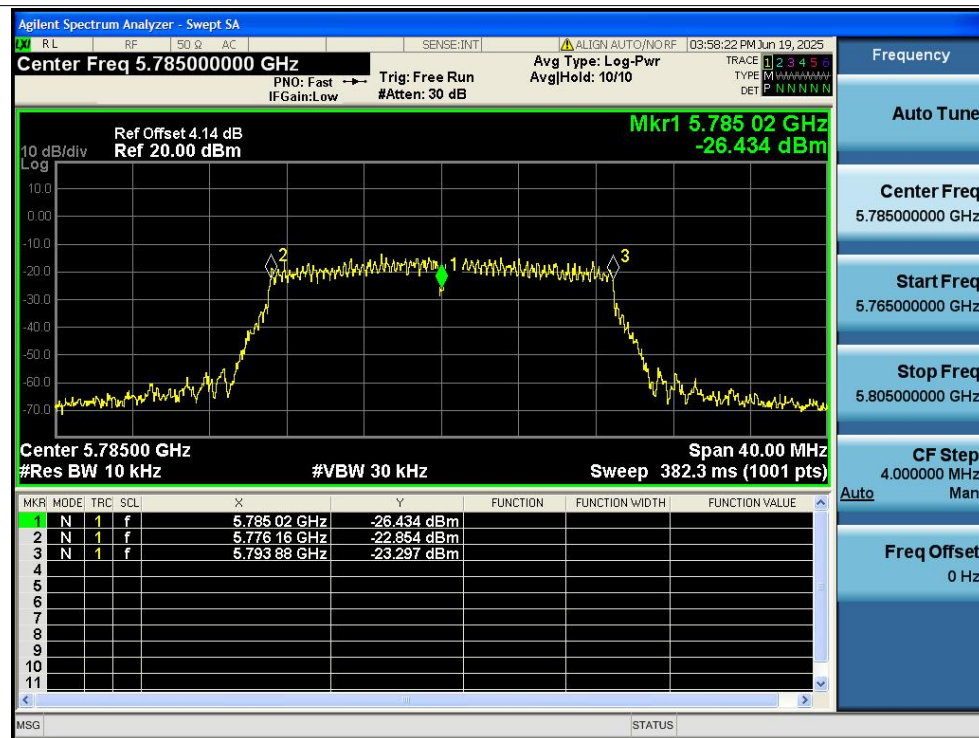

Freq. Stability NVNT n20 5825MHz Ant1 0 Minutes

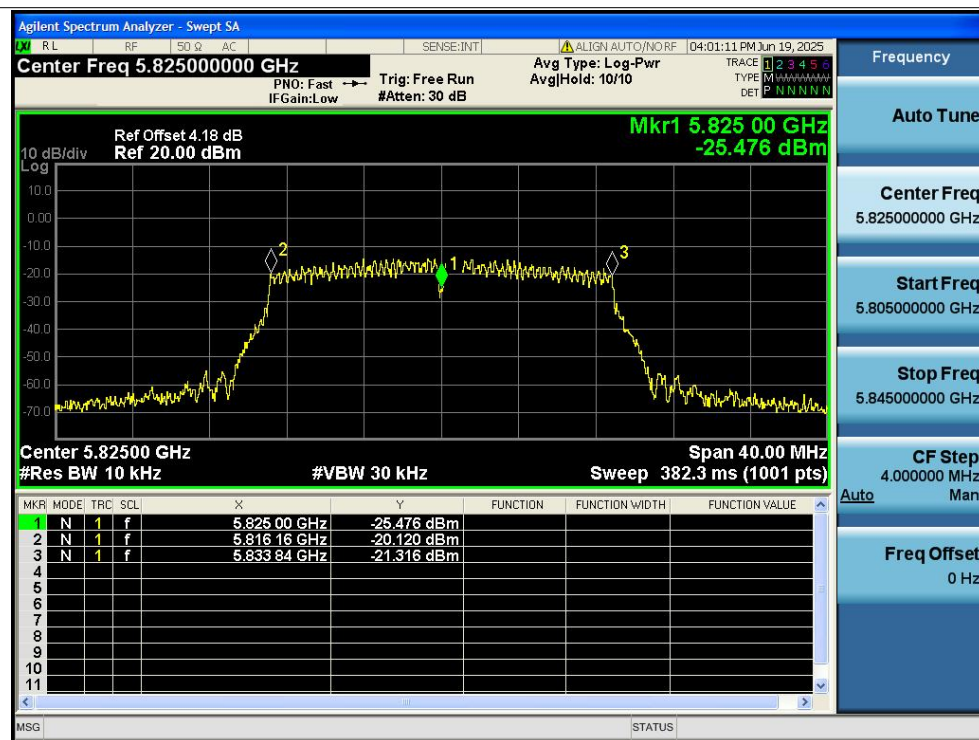

Freq. Stability NVNT n40 5190MHz Ant1 0 Minutes

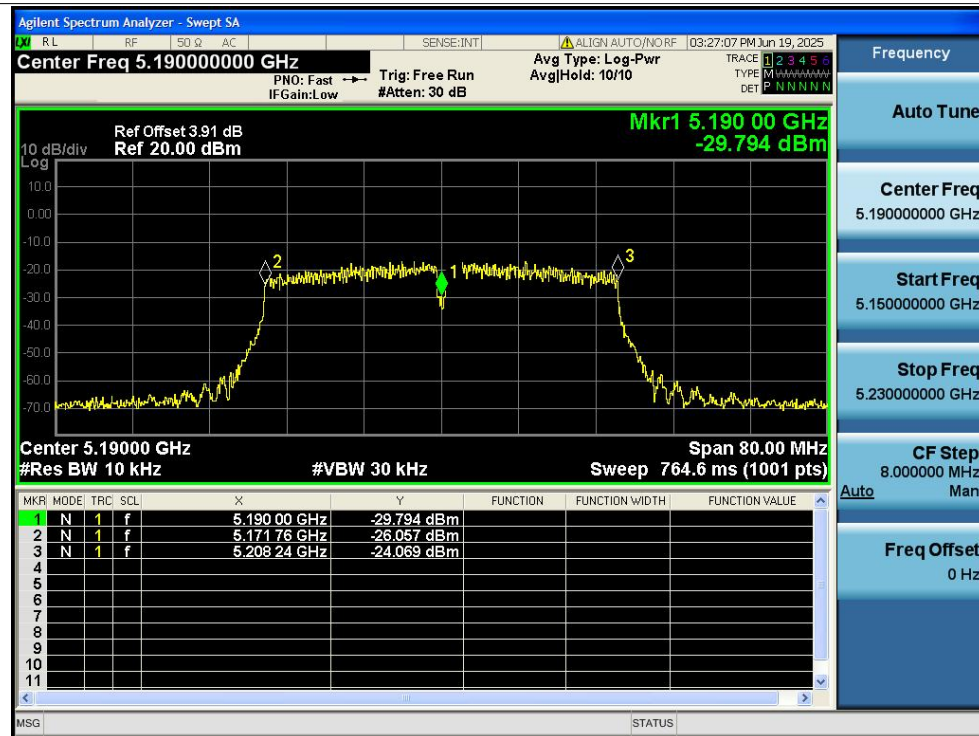

Freq. Stability NVNT n40 5230MHz Ant1 0 Minutes

