






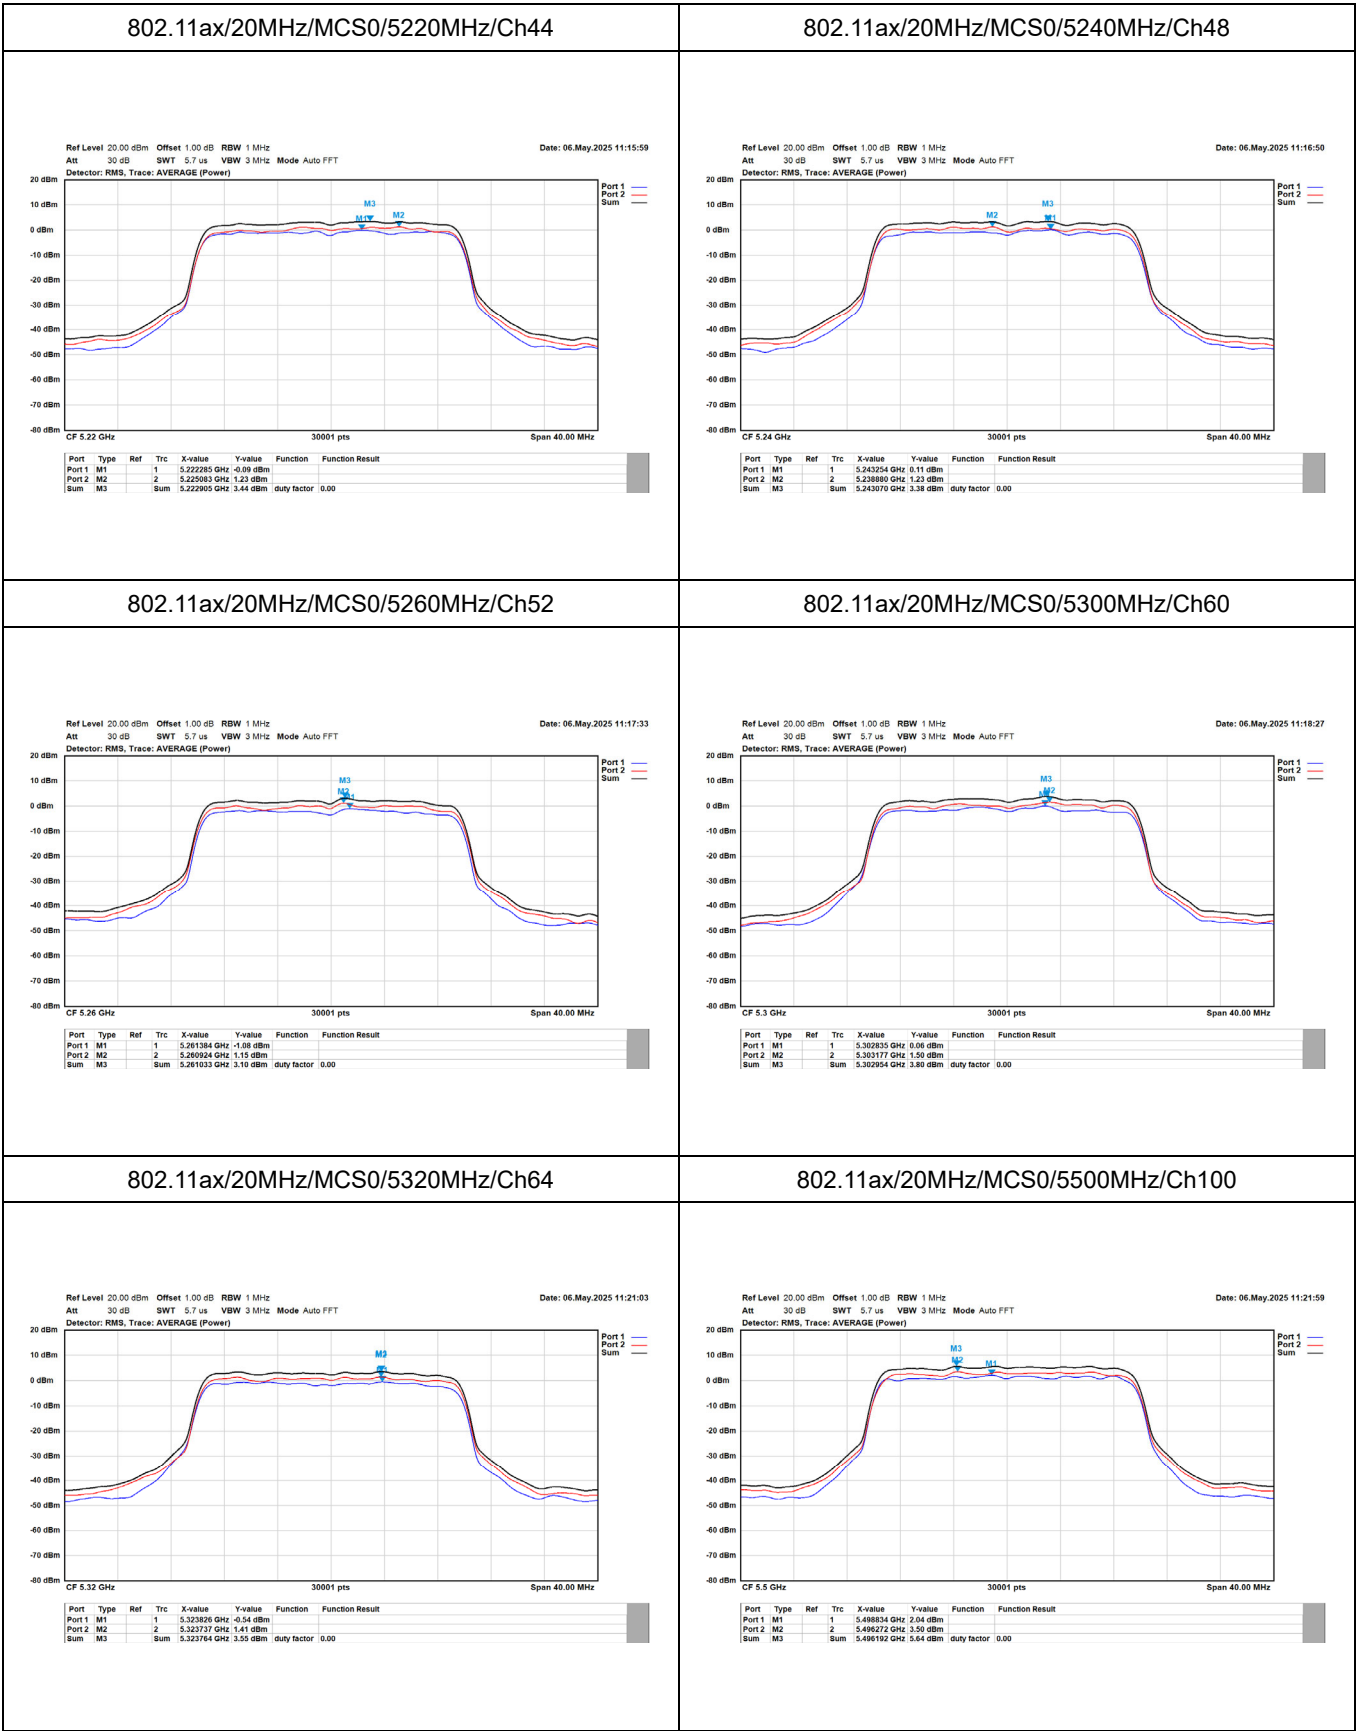


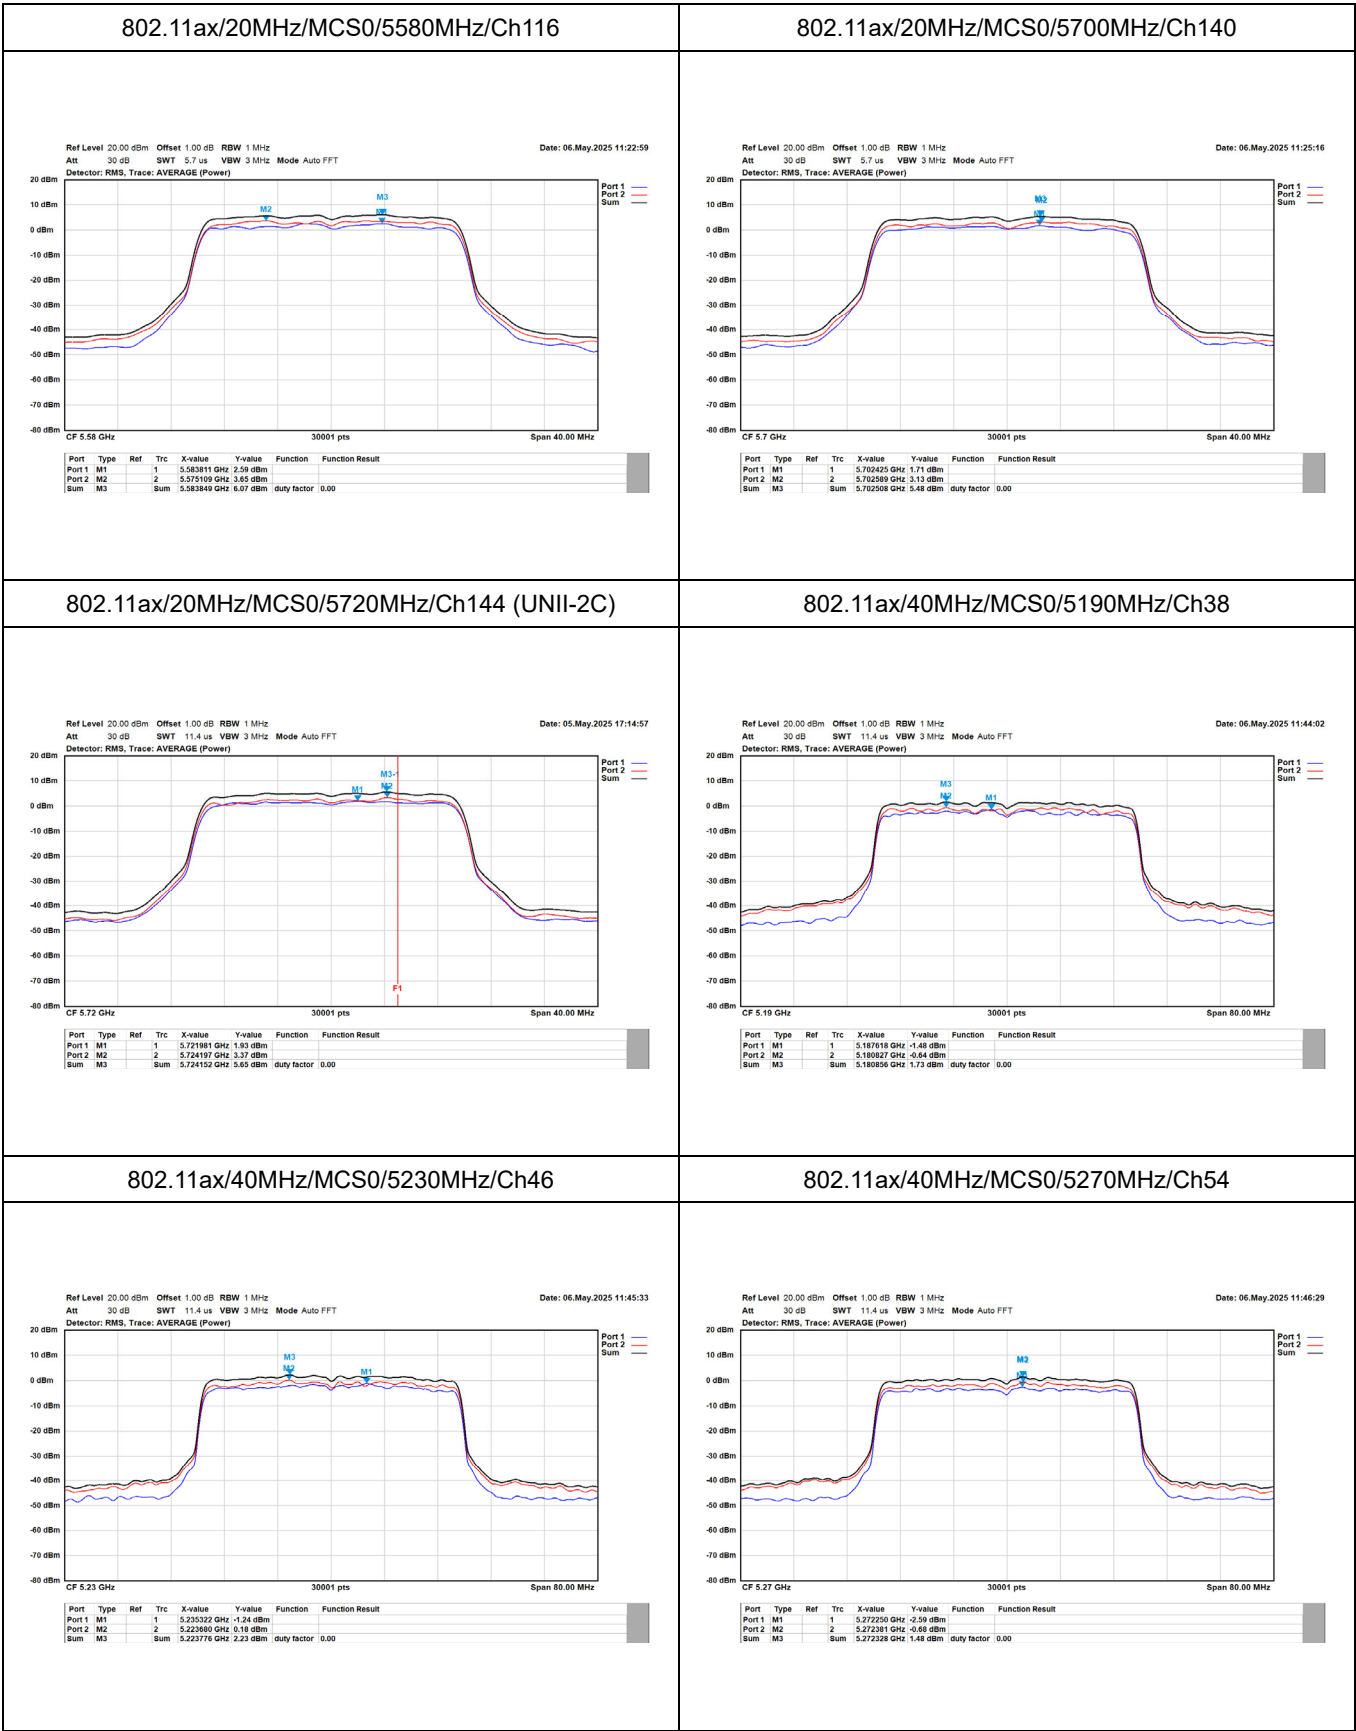


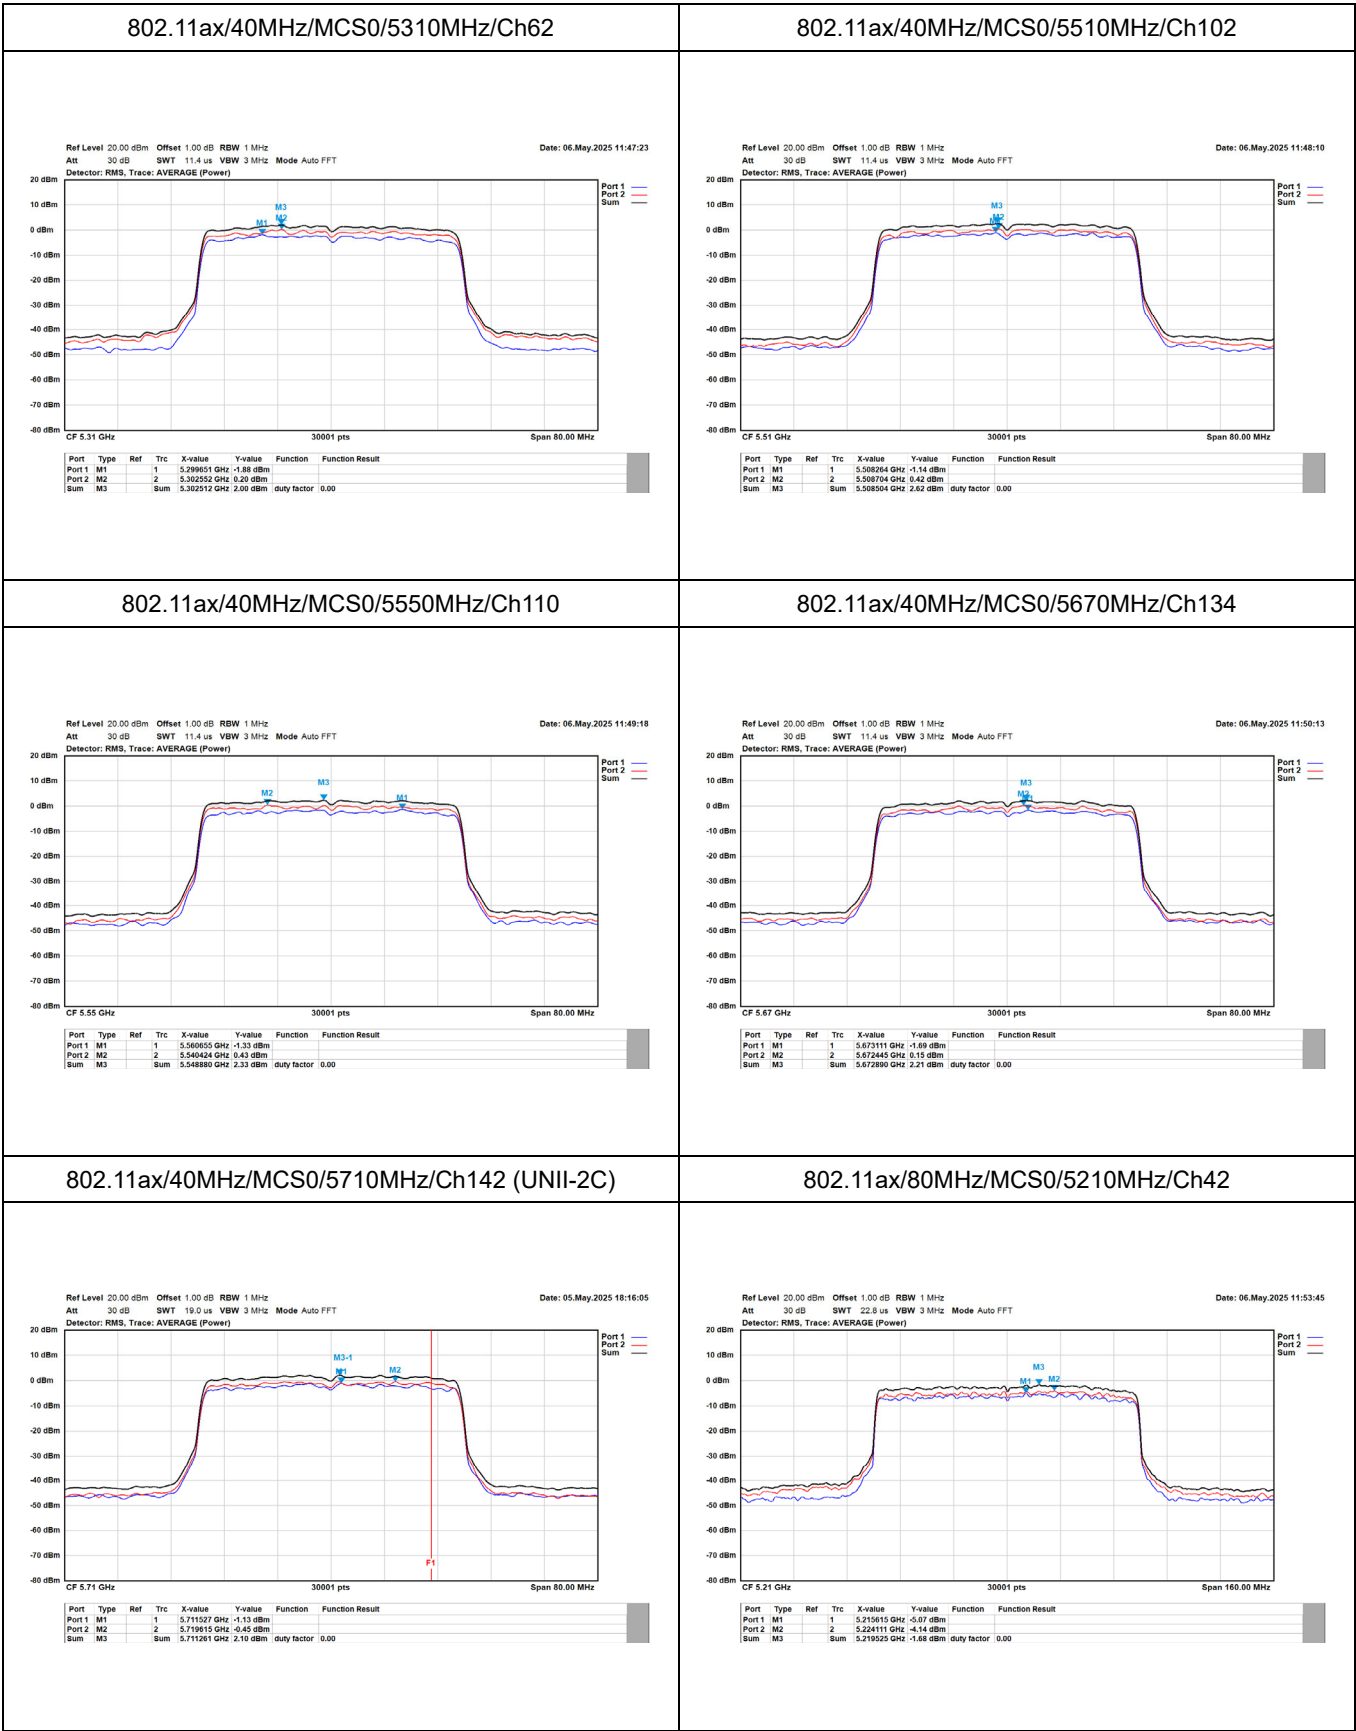


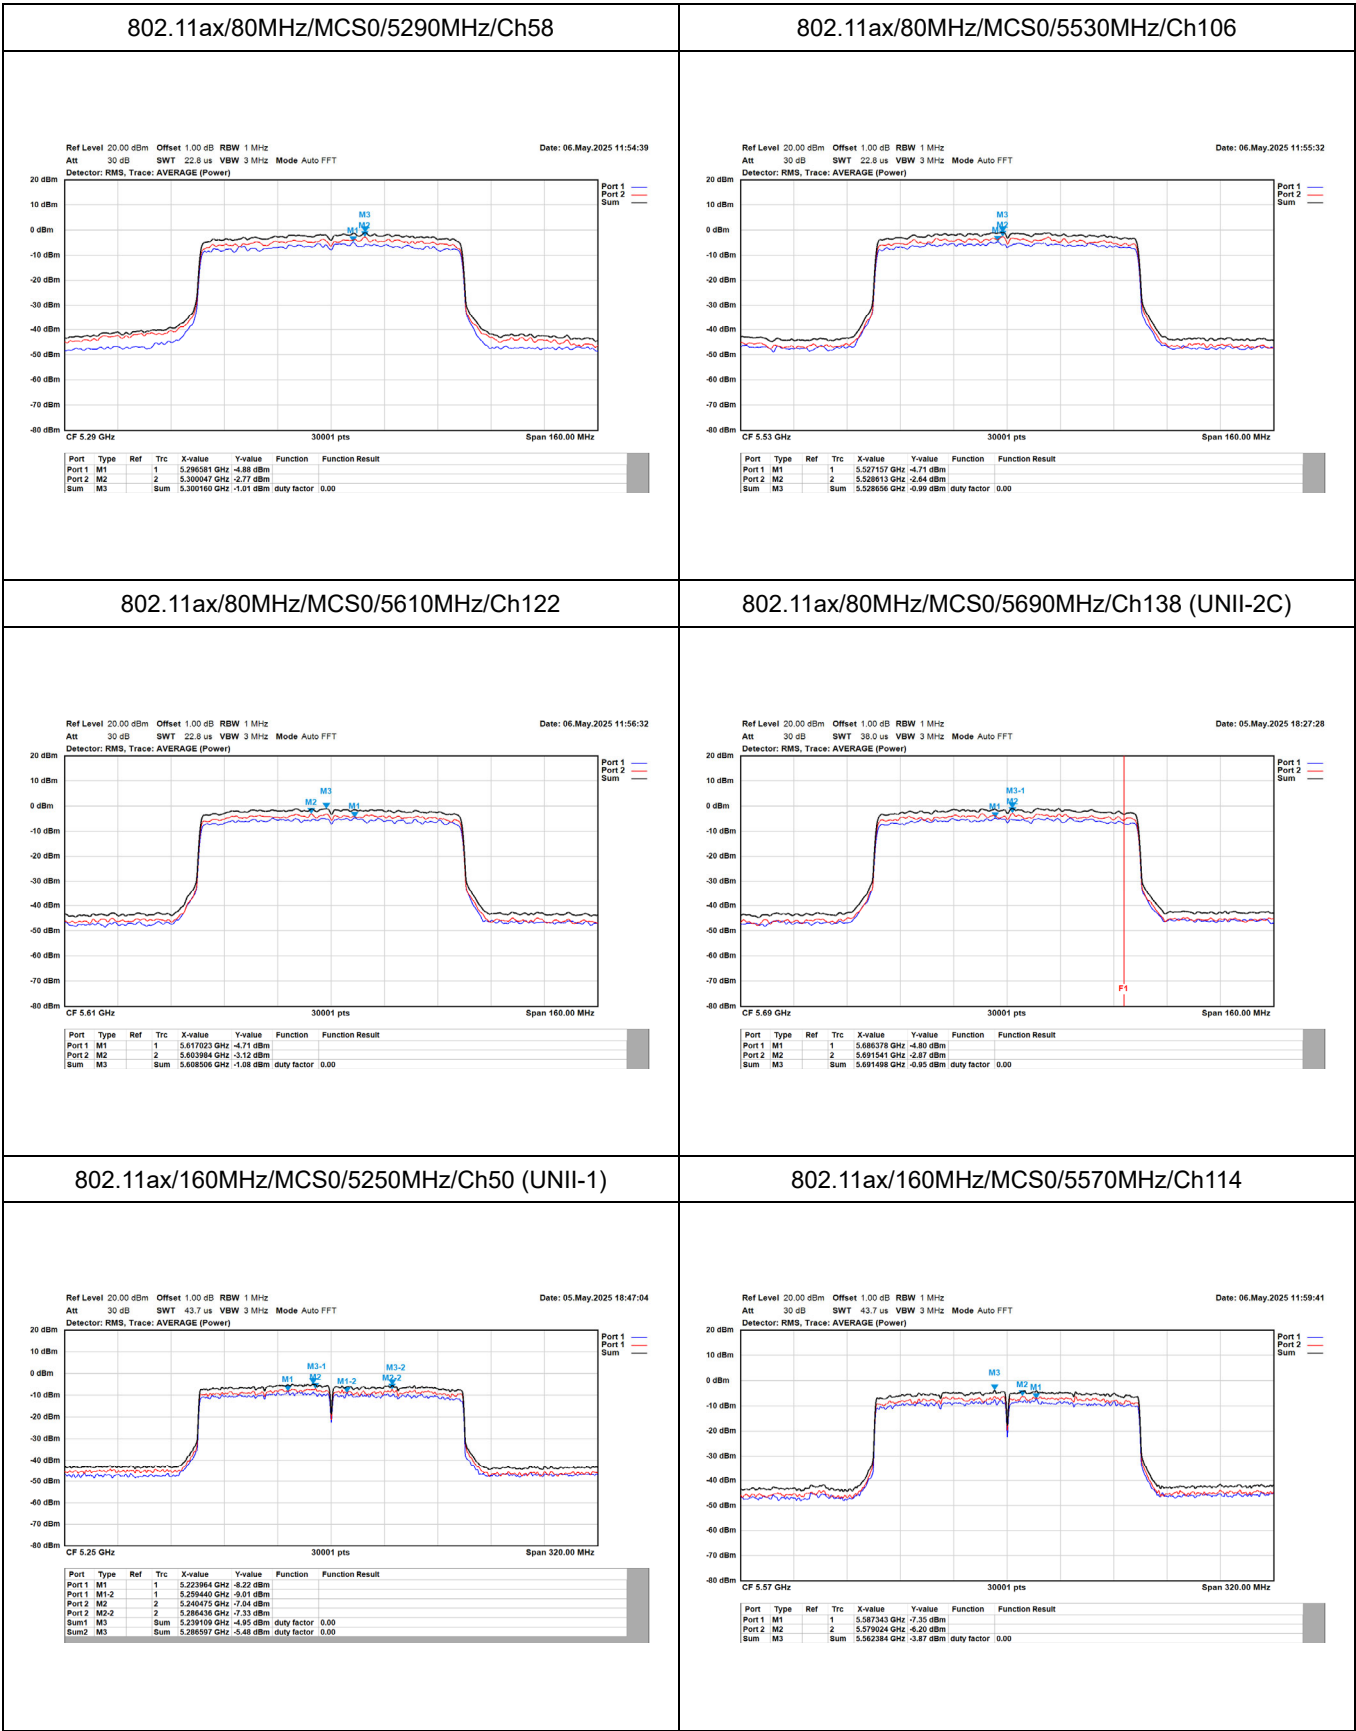

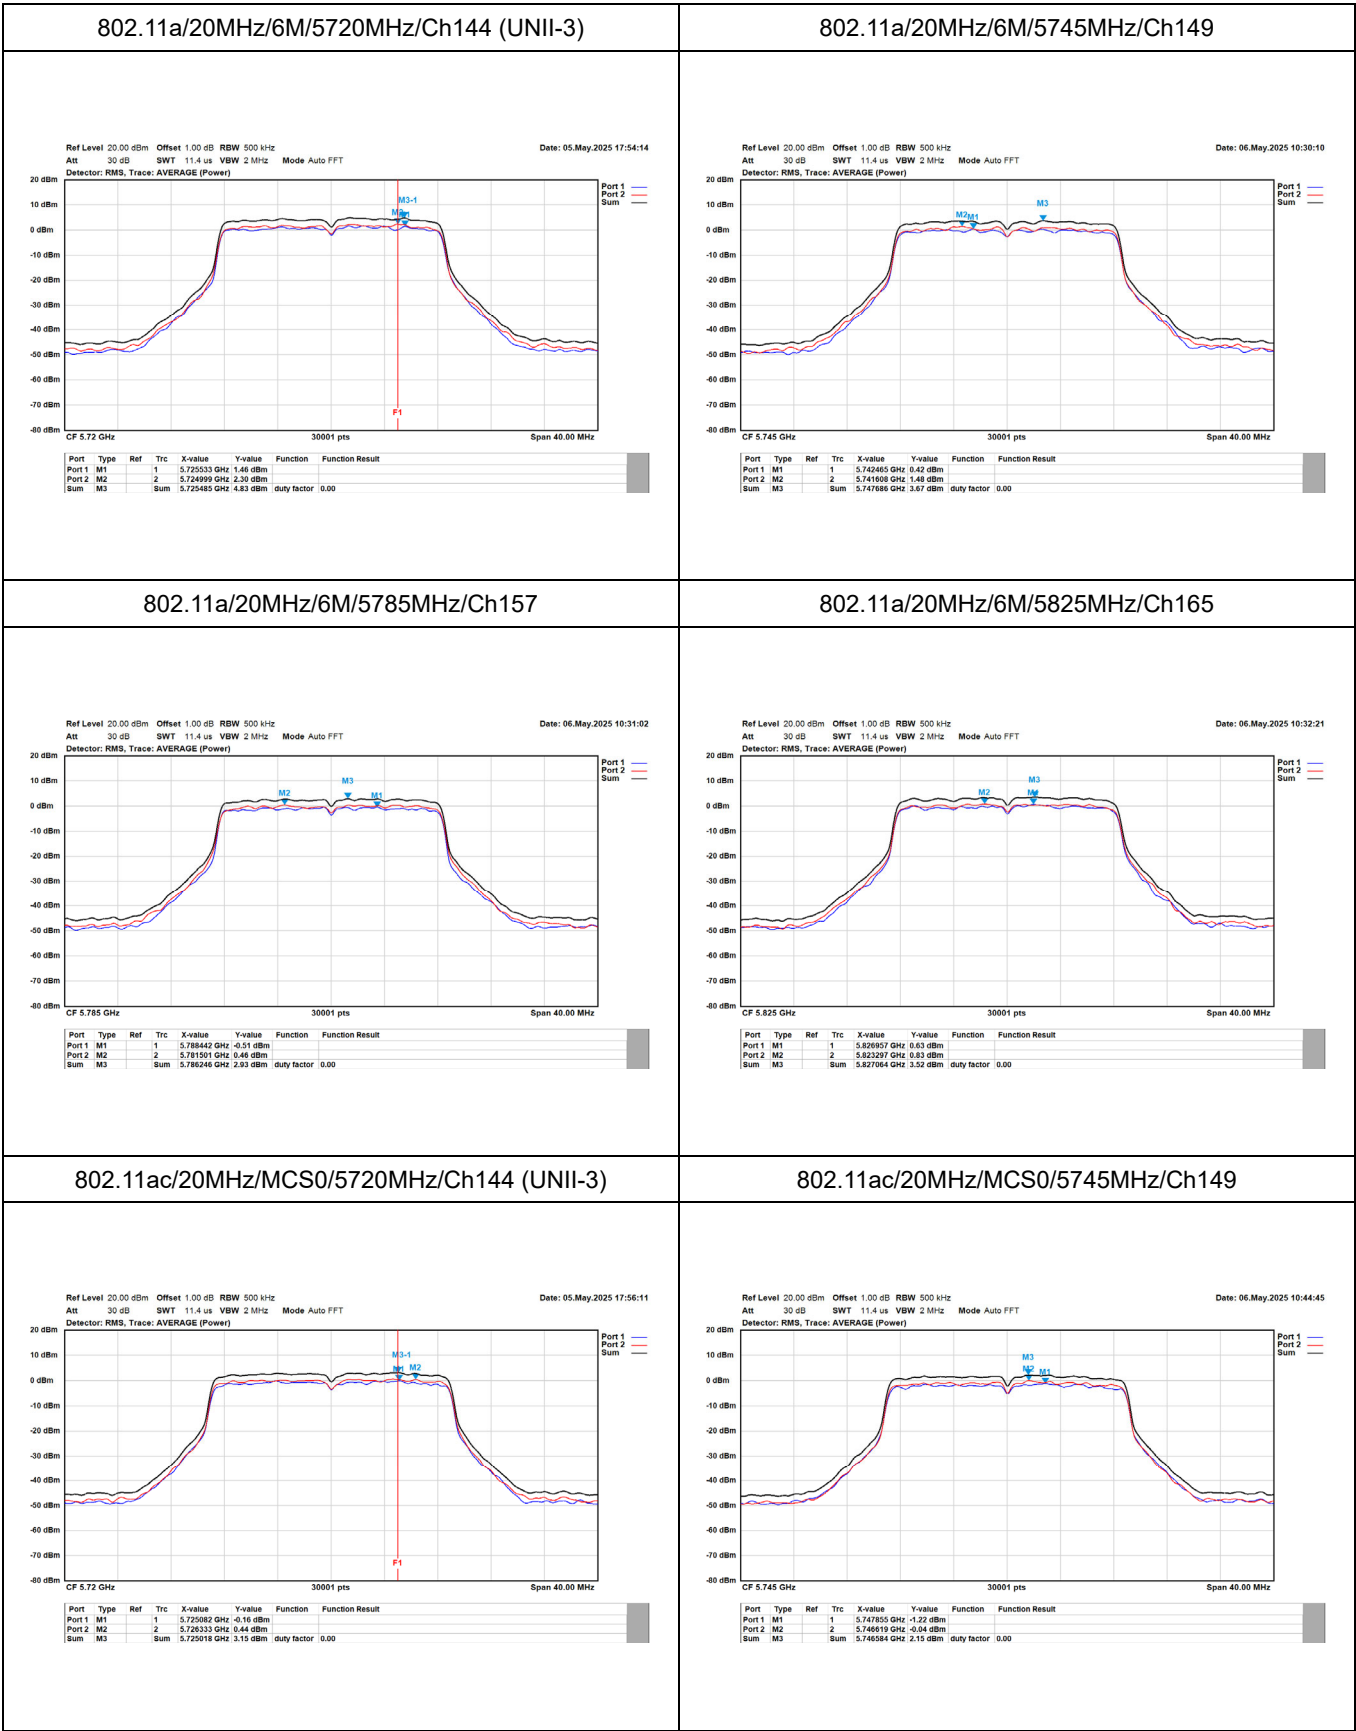

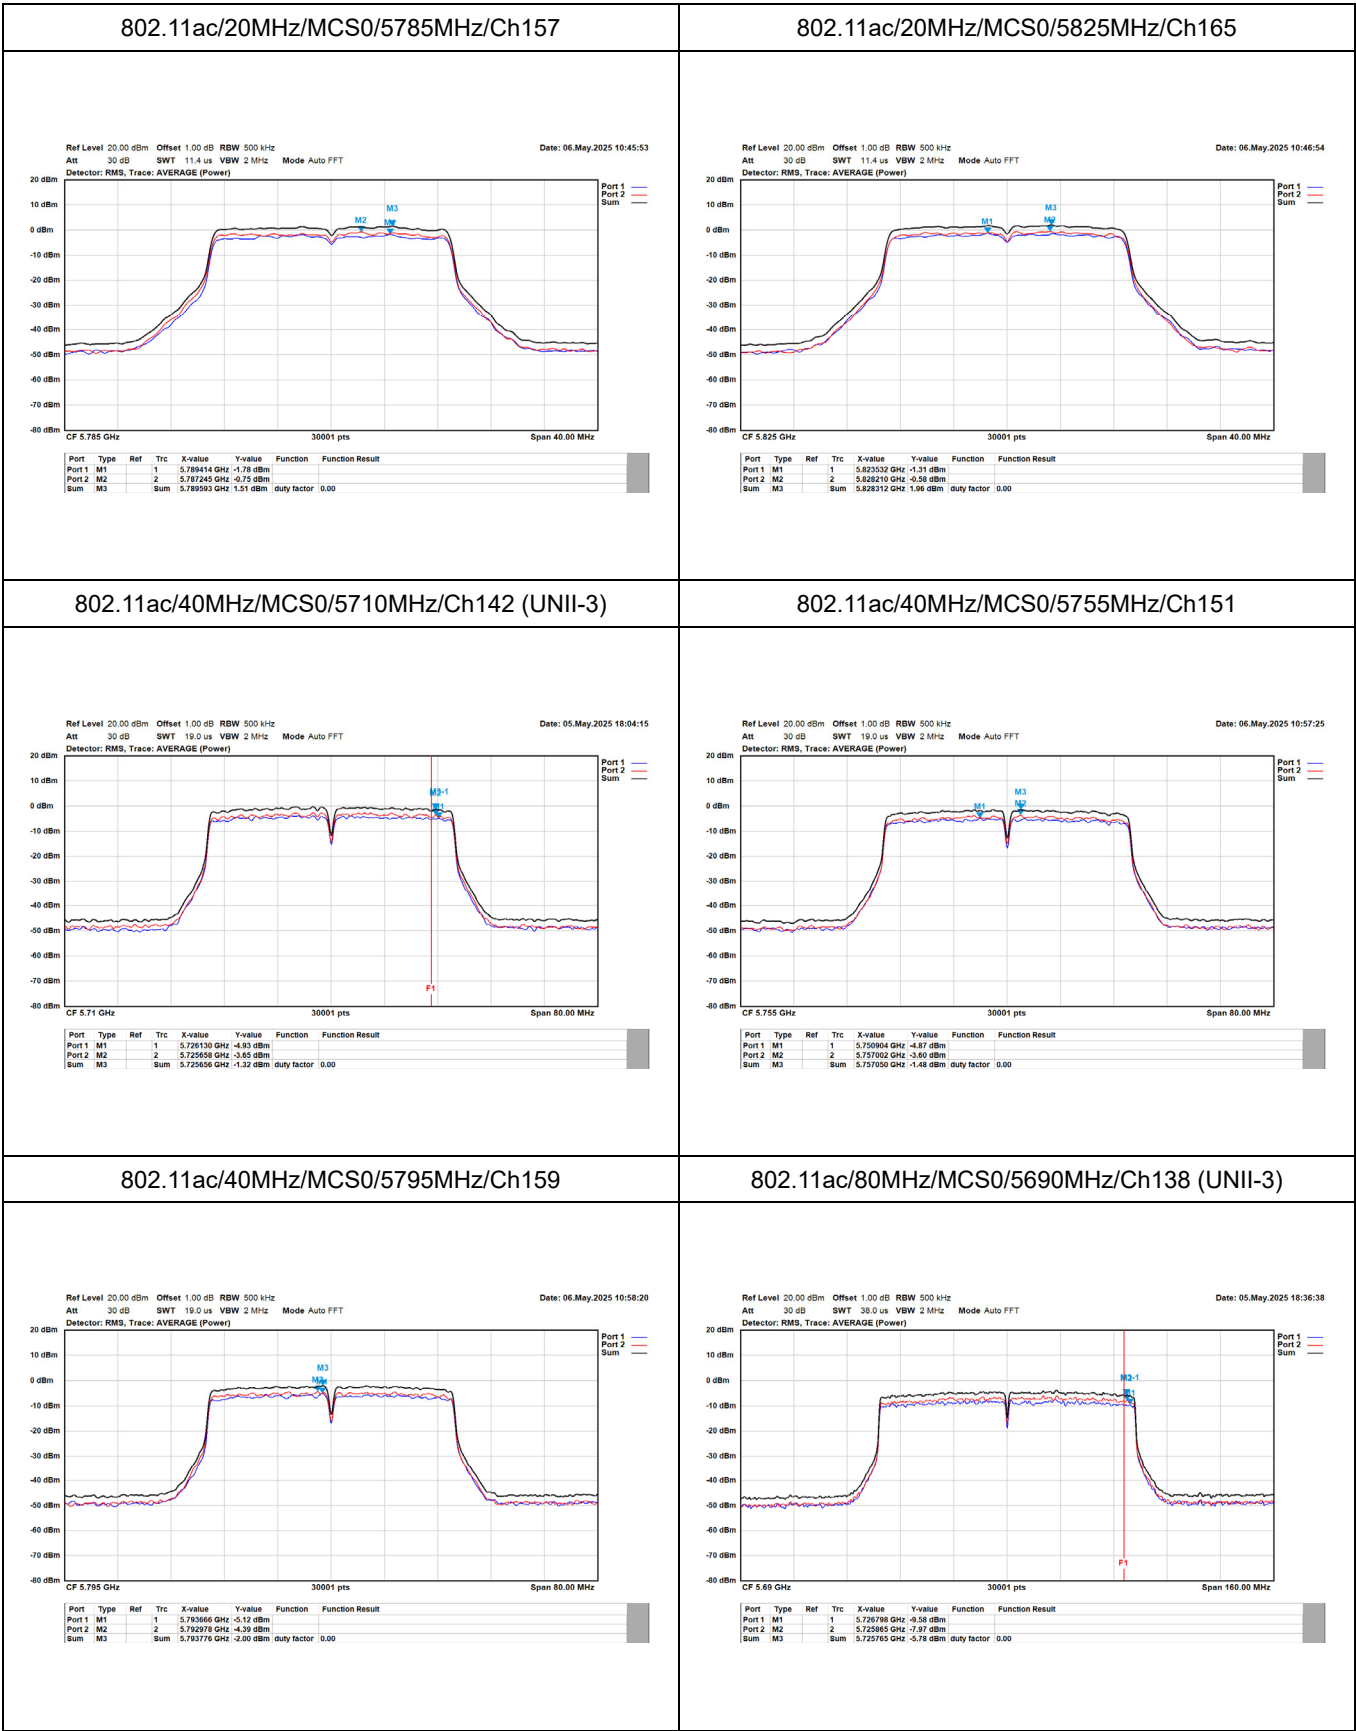


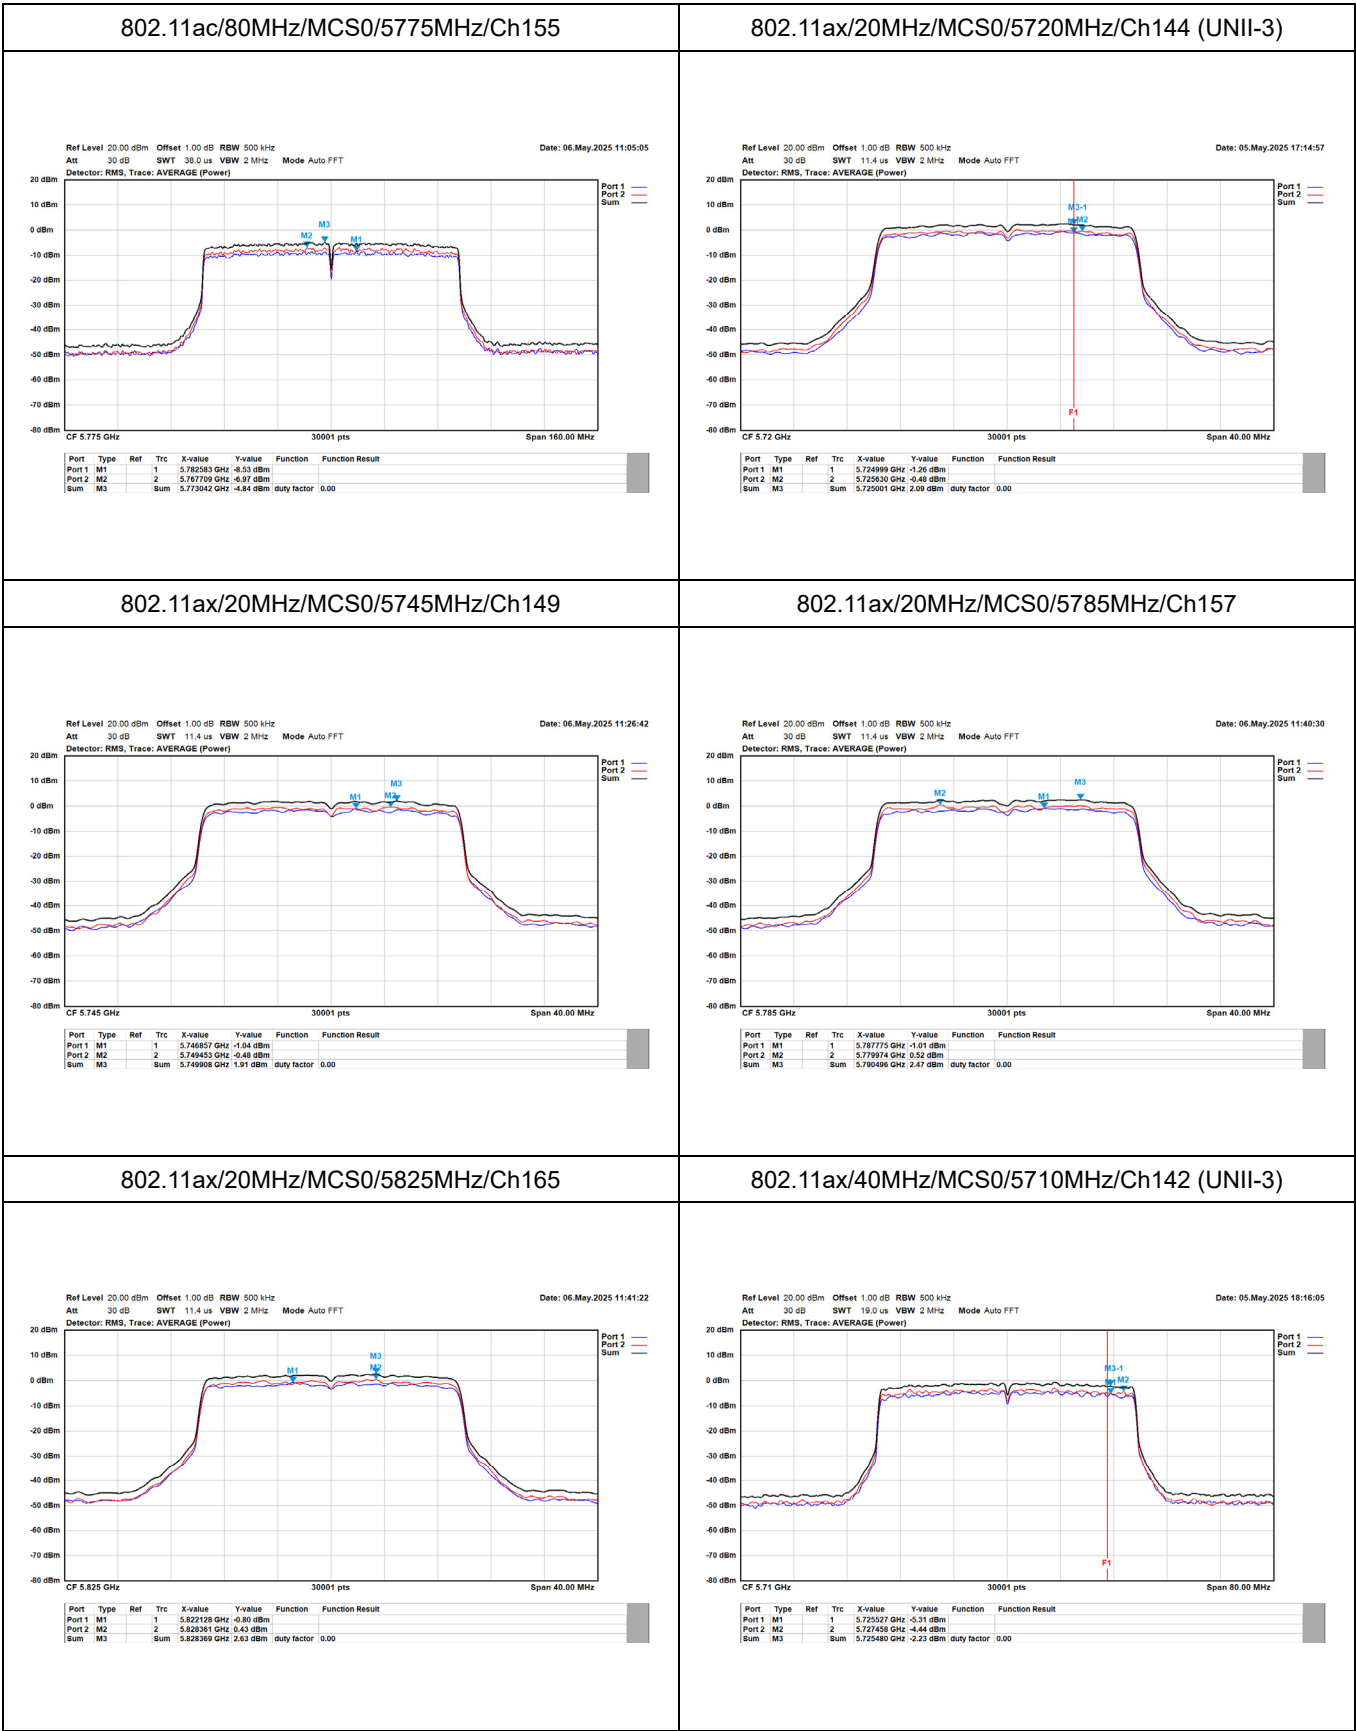

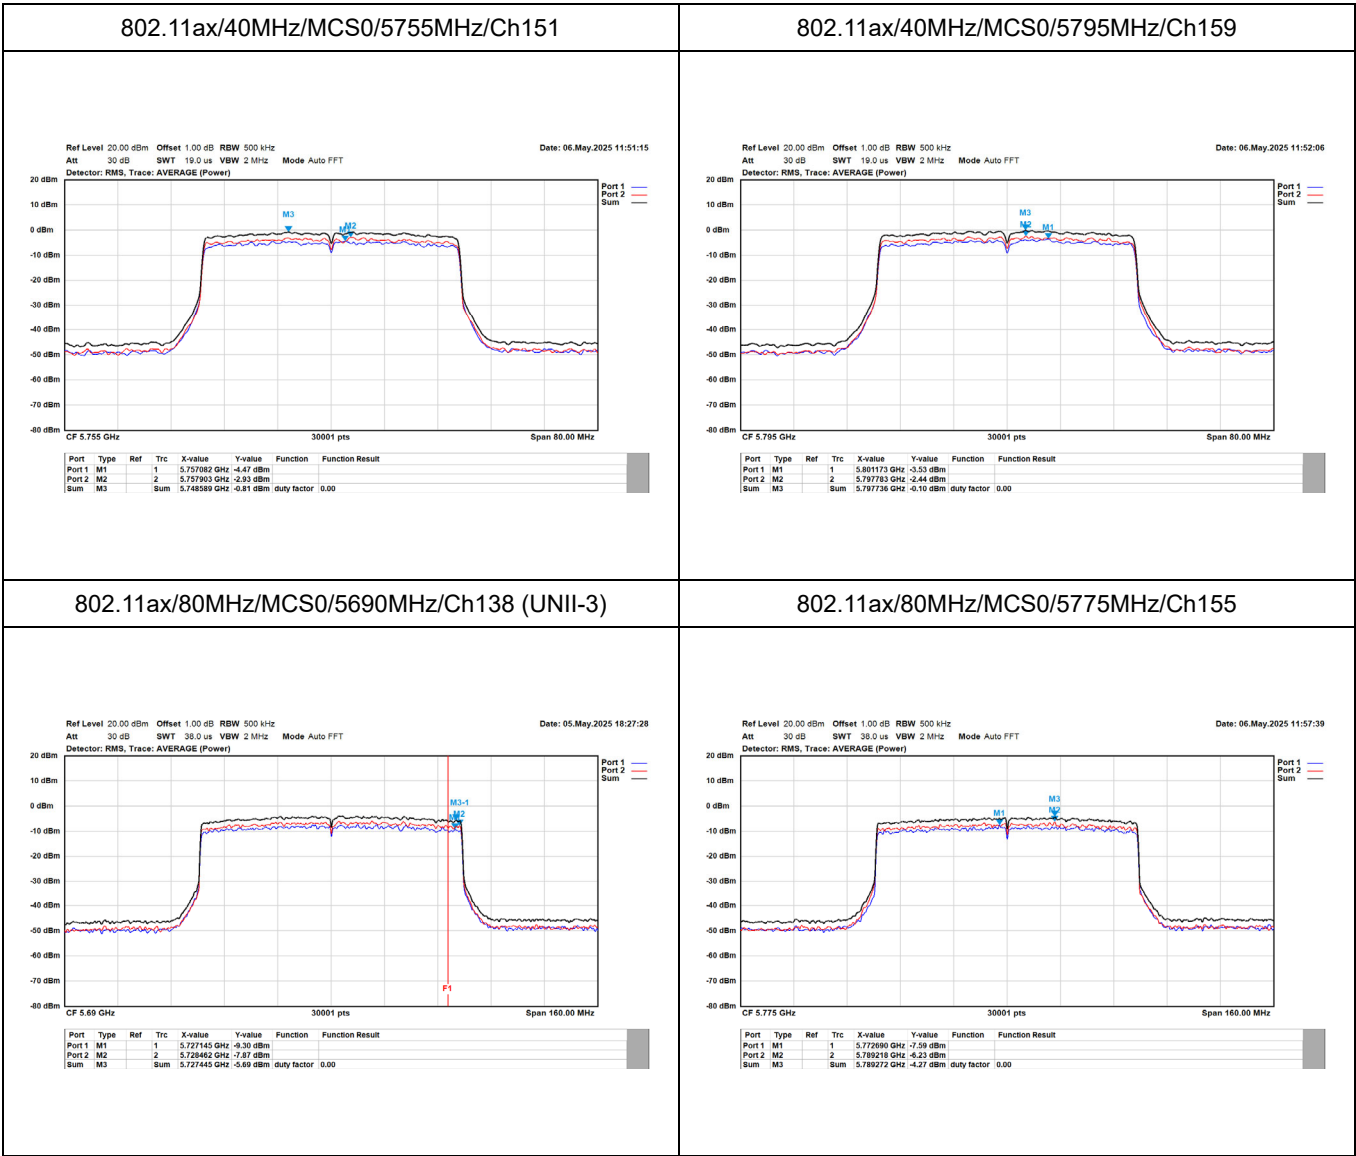

Appendix E. Test Result of Transmitter Radiated Spurious Emission

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5180MHz
Test BY :Bob

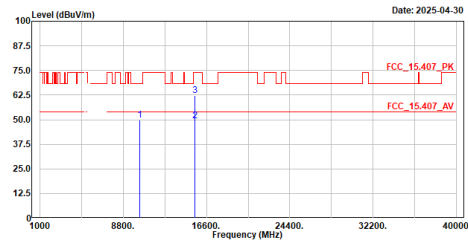


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10360.000	49.93	68.22	-18.29	54.69	-4.76	Peak
2	15540.000	49.61	54.00	-4.39	50.76	-1.15	Average
3	15540.000	62.16	74.00	-11.84	63.31	-1.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5180MHz
Test BY :Bob

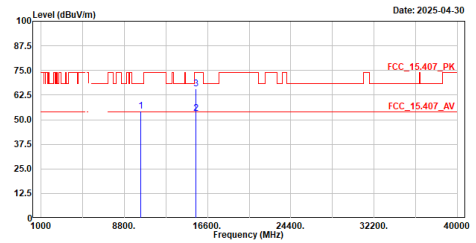


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10360.000	54.32	68.22	-13.90	59.08	-4.76	Peak
2	15540.000	53.34	54.00	-0.66	54.49	-1.15	Average
3	15540.000	65.82	74.00	-8.18	66.97	-1.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5220MHz
Test BY :Bob

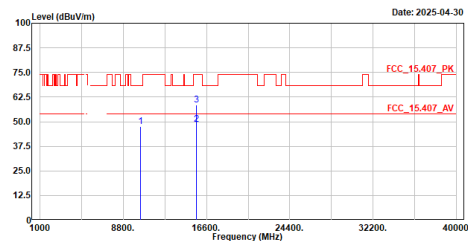


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10440.000	47.63	68.22	-20.59	52.53	-4.90	Peak
2	15660.000	48.60	54.00	-5.40	50.06	-1.46	Average
3	15660.000	58.60	74.00	-15.40	60.06	-1.46	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5220MHz
Test BY :Bob

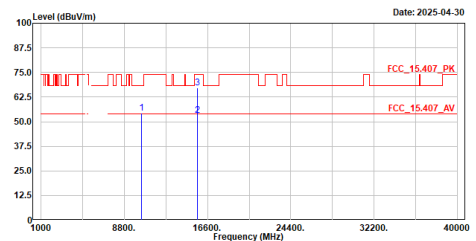


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10440.000	54.50	68.22	-13.72	59.40	-4.90	Peak
2	15660.000	53.11	54.00	-0.89	54.57	-1.46	Average
3	15660.000	67.26	74.00	-6.74	68.72	-1.46	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5240MHz
Test BY :Bob

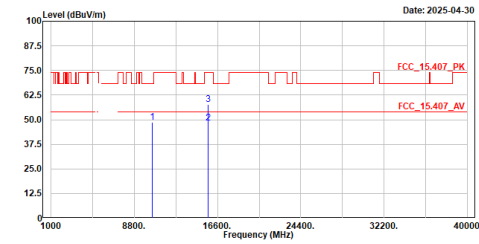

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	dB	dB/m	
1	10480.000	48.51	68.22	-19.71	53.42	-4.91	Peak
2	15720.000	48.34	54.00	-5.66	49.70	-1.36	Average
3	15720.000	57.73	74.00	-16.27	59.09	-1.36	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5240MHz
Test BY :Bob

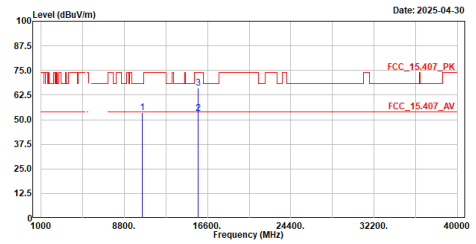

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	dB	dB/m	
1	10480.000	53.62	68.22	-14.60	58.53	-4.91	Peak
2	15720.000	53.17	54.00	-0.83	54.53	-1.36	Average
3	15720.000	66.03	74.00	-7.97	67.39	-1.36	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5260MHz
Test BY :Bob

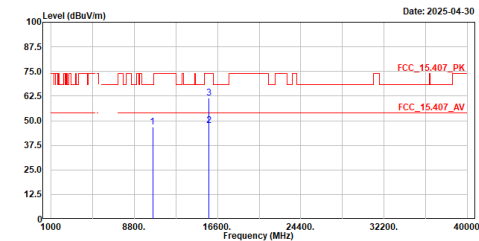

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	dB	dB/m	
1	10520.000	46.82	68.22	-21.40	51.69	-4.87	Peak
2	15780.000	47.43	54.00	-6.57	48.71	-1.28	Average
3	15780.000	61.39	74.00	-12.61	62.67	-1.28	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5260MHz
Test BY :Bob

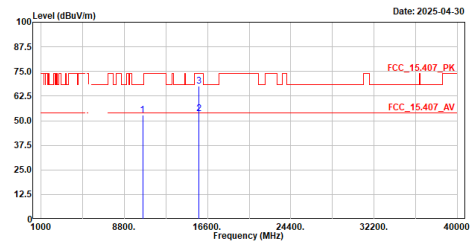

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	dB	dB/m	
1	10520.000	52.86	68.22	-15.36	57.73	-4.87	Peak
2	15780.000	53.40	54.00	-0.60	54.68	-1.28	Average
3	15780.000	67.36	74.00	-6.64	68.64	-1.28	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5300MHz
Test BY :Bob

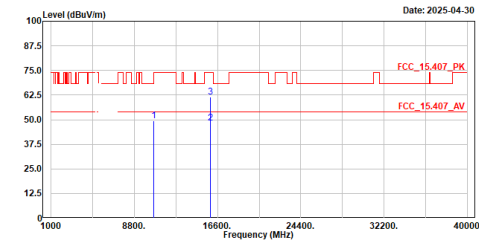


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10600.000	49.27	74.00	-24.73	53.60	-4.33	Peak
2	15900.000	48.17	54.00	-5.83	49.63	-1.46	Average
3	15900.000	61.39	74.00	-12.61	62.85	-1.46	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5300MHz
Test BY :Bob

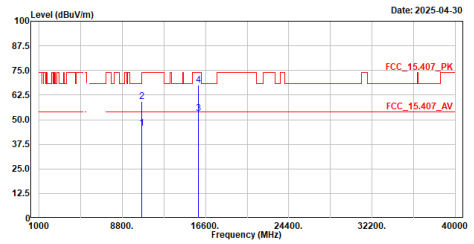


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10600.000	45.48	54.00	-8.52	49.81	-4.33	Average
2	10600.000	59.43	74.00	-14.57	63.76	-4.33	Peak
3	15900.000	53.23	54.00	-0.77	54.59	-1.46	Average
4	15900.000	67.52	74.00	-6.48	68.98	-1.46	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5320MHz
Test BY :Bob

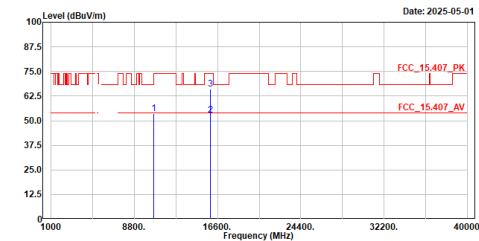


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10640.000	53.41	74.00	-20.59	57.65	-4.24	Peak
2	15960.000	52.76	54.00	-1.24	54.31	-1.55	Average
3	15960.000	65.94	74.00	-8.06	67.49	-1.55	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5320MHz
Test BY :Bob

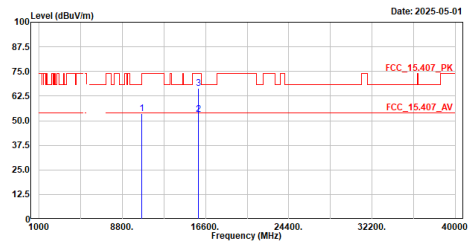


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10640.000	53.40	74.00	-20.60	57.64	-4.24	Peak
2	15960.000	53.08	54.00	-0.92	54.63	-1.55	Average
3	15960.000	66.35	74.00	-7.65	67.90	-1.55	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5500MHz
Test BY :Bob

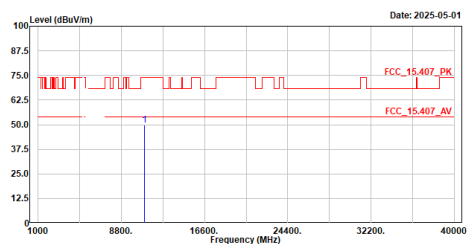


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11000.000	49.95	74.00	-24.05	53.46	-3.51	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5500MHz
Test BY :Bob

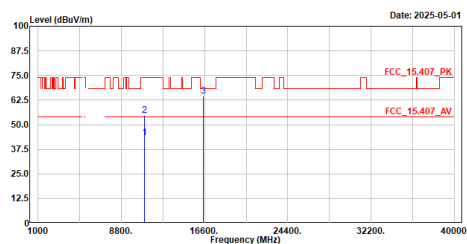


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11000.000	43.44	74.00	-10.56	46.95	-3.51	Average
2	11000.000	54.82	74.00	-19.18	58.33	-3.51	Peak
3	16500.000	64.41	68.22	-3.81	65.50	-1.09	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5500MHz
Test BY :Bob

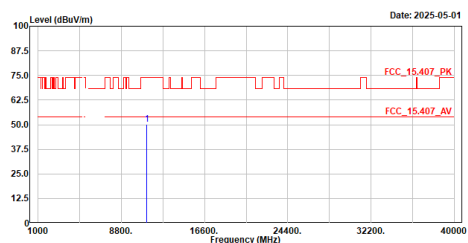


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11160.000	50.31	74.00	-23.69	53.25	-2.94	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5500MHz
Test BY :Bob

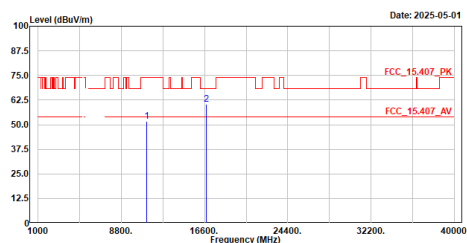


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11160.000	51.81	74.00	-22.19	54.75	-2.94	Peak
2	16740.000	60.27	68.22	-7.95	61.79	-1.52	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5700MHz
Test BY :Bob

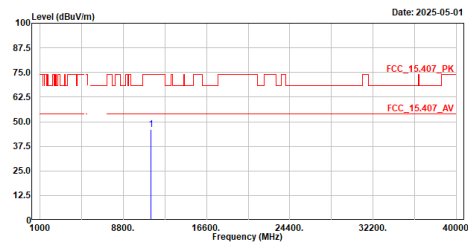


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11400.000	46.16	74.00	-27.84	48.35	-2.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5700MHz
Test BY :Bob

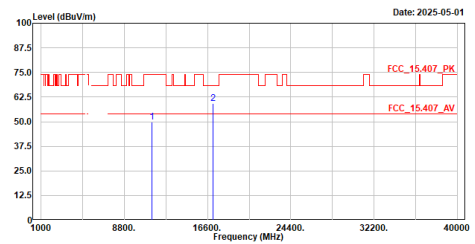


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11400.000	49.84	74.00	-24.16	52.03	-2.19	Peak
2	17100.000	59.24	68.22	-8.98	60.83	-1.59	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5720MHz
Test BY :Bob

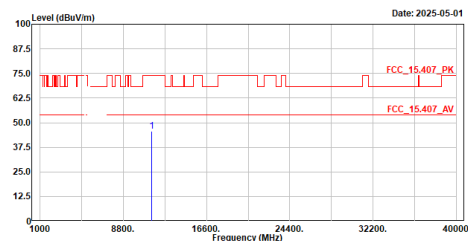


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11440.000	45.53	74.00	-28.47	47.64	-2.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5720MHz
Test BY :Bob

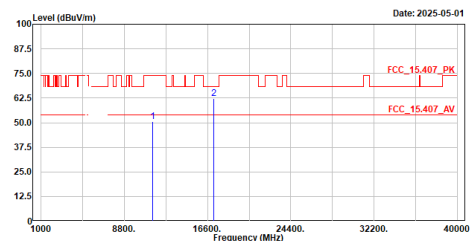


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11440.000	50.40	74.00	-23.60	52.51	-2.11	Peak
2	17160.000	62.29	68.22	-5.93	63.87	-1.58	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5745MHz
Test BY :Bob

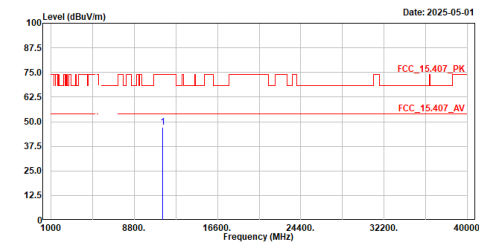


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11490.000	47.08	74.00	-26.92	49.07	-1.99	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5745MHz
Test BY :Bob

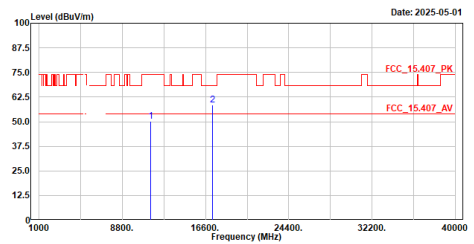


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11490.000	50.02	74.00	-23.98	52.01	-1.99	Peak
2	17235.000	58.38	68.22	-9.84	59.98	-1.60	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5785MHz
Test BY :Bob

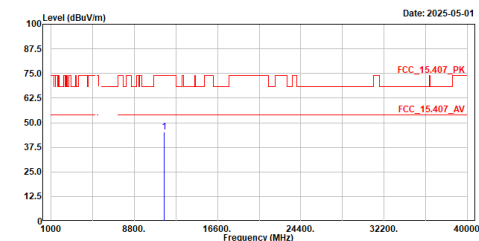


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11570.000	45.41	74.00	-28.59	47.24	-1.83	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5785MHz
Test BY :Bob

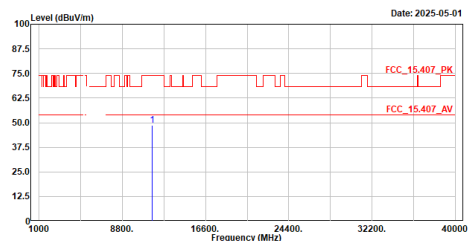


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11570.000	48.61	74.00	-25.39	50.44	-1.83	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5825MHz
Test BY :Bob

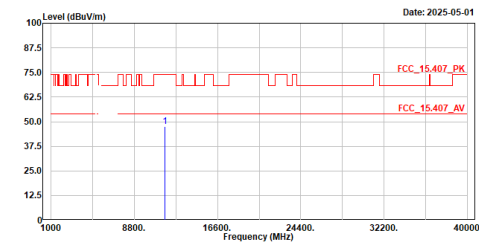


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	11650.000	47.37	74.00	-26.63	49.25	-1.88	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5825MHz
Test BY :Bob

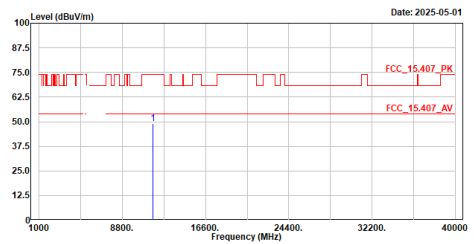


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	11650.000	48.98	74.00	-25.02	50.86	-1.88	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5180MHz
Test BY :Bob

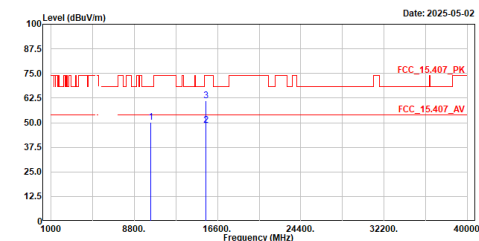


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	10360.000	50.36	68.22	-17.86	55.12	-4.76	Peak
2	15540.000	48.53	54.00	-5.47	49.68	-1.15	Average
3	15540.000	61.08	74.00	-12.92	62.23	-1.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5180MHz
Test BY :Bob

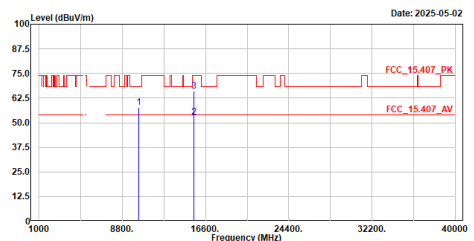


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	10360.000	57.58	68.22	-10.64	62.34	-4.76	Peak
2	15540.000	52.96	54.00	-1.04	54.11	-1.15	Average
3	15540.000	66.02	74.00	-7.98	67.17	-1.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5220MHz
Test BY :Bob

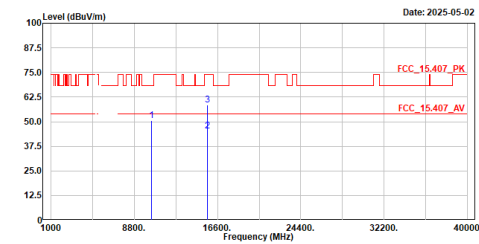


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	dB	dBuV	dB/m
1	10440.000	50.38	68.22	-17.84	55.28	-4.90	Peak
2	15660.000	45.44	54.00	-8.56	46.90	-1.46	Average
3	15660.000	58.37	74.00	-15.63	59.83	-1.46	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5220MHz
Test BY :Bob

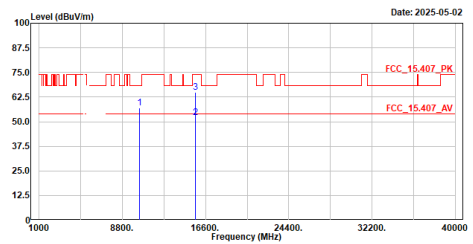


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	dB	dBuV	dB/m
1	10440.000	57.04	68.22	-11.18	61.94	-4.90	Peak
2	15660.000	52.16	54.00	-1.84	53.62	-1.46	Average
3	15660.000	65.08	74.00	-8.92	66.54	-1.46	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5240MHz
Test BY :Bob

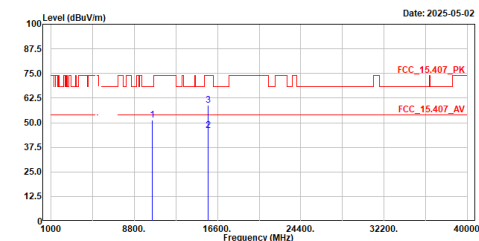


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	dB	dBuV	dB/m
1	10480.000	51.22	68.22	-17.00	56.13	-4.91	Peak
2	15720.000	46.16	54.00	-7.84	47.52	-1.36	Average
3	15720.000	58.69	74.00	-15.31	60.05	-1.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5240MHz
Test BY :Bob

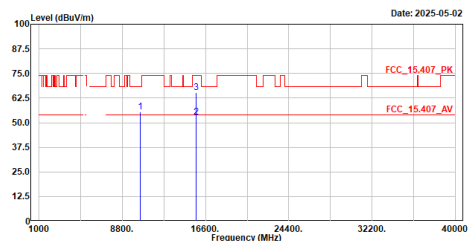


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	dB	dBuV	dB/m
1	10480.000	55.57	68.22	-12.65	60.48	-4.91	Peak
2	15720.000	52.68	54.00	-1.32	54.04	-1.36	Average
3	15720.000	65.34	74.00	-8.66	66.70	-1.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5260MHz
Test BY :Bob

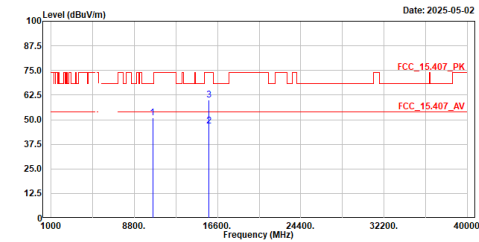


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10520.000	50.76	68.22	-17.46	55.63	-4.87	Peak
2	15780.000	46.86	54.00	-7.14	48.14	-1.28	Average
3	15780.000	59.86	74.00	-14.14	61.14	-1.28	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5260MHz
Test BY :Bob

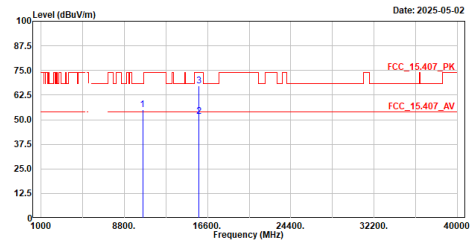


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10520.000	54.94	68.22	-13.28	59.81	-4.87	Peak
2	15780.000	51.74	54.00	-2.26	53.02	-1.28	Average
3	15780.000	67.22	74.00	-6.78	68.50	-1.28	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5300MHz
Test BY :Bob

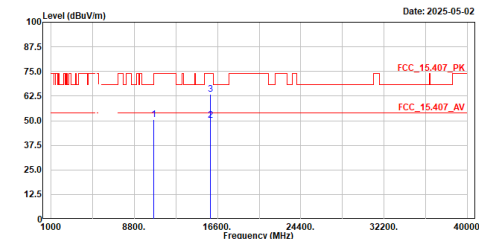


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10600.000	50.42	74.00	-23.58	54.75	-4.33	Peak
2	15900.000	50.34	54.00	-3.66	51.80	-1.46	Average
3	15900.000	63.54	74.00	-10.46	65.00	-1.46	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5300MHz
Test BY :Bob

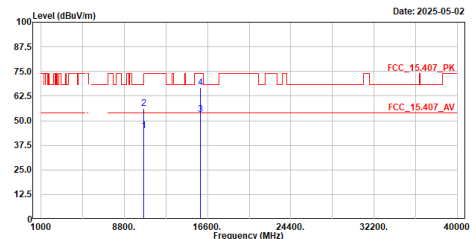


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10600.000	44.73	54.00	-9.27	49.06	-4.33	Average
2	10600.000	56.27	74.00	-17.73	60.60	-4.33	Peak
3	15900.000	53.34	54.00	-0.66	54.80	-1.46	Average
4	15900.000	66.91	74.00	-7.09	68.37	-1.46	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5320MHz
Test BY :Bob

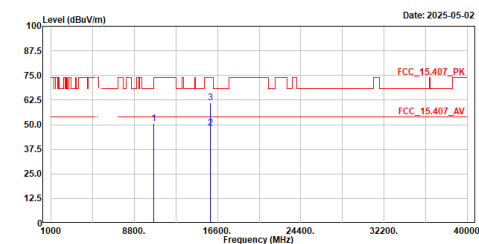


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10640.000	50.68	74.00	-23.32	54.92	-4.24	Peak
2	15960.000	48.20	54.00	-5.80	49.75	-1.55	Average
3	15960.000	61.32	74.00	-12.68	62.87	-1.55	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5320MHz
Test BY :Bob

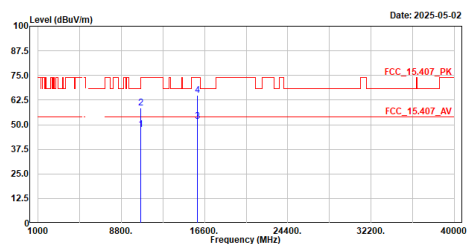


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10640.000	47.59	54.00	-6.41	51.83	-4.24	Average
2	10640.000	58.62	74.00	-15.38	62.86	-4.24	Peak
3	15960.000	51.70	54.00	-2.30	53.25	-1.55	Average
4	15960.000	64.90	74.00	-9.10	66.45	-1.55	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5500MHz
Test BY :Bob

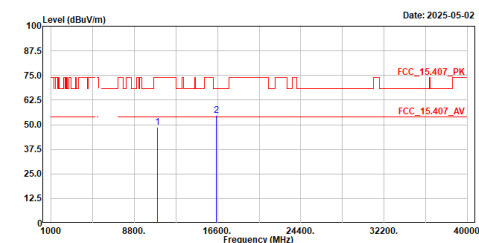


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11000.000	48.62	74.00	-25.38	52.13	-3.51	Peak
2	16500.000	54.57	68.22	-13.65	55.66	-1.09	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5500MHz
Test BY :Bob

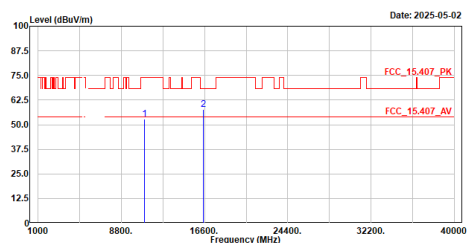


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11000.000	52.84	74.00	-21.16	56.35	-3.51	Peak
2	16500.000	57.77	68.22	-10.45	58.86	-1.09	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5580MHz
Test BY :Bob

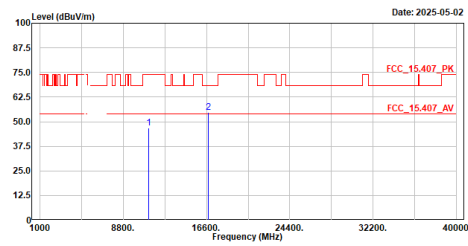

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11160.000	46.96	74.00	-27.04	49.90	-2.94	Peak
2	16740.000	54.81	68.22	-13.41	56.33	-1.52	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5580MHz
Test BY :Bob

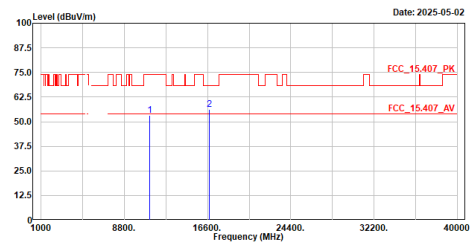

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11160.000	53.24	74.00	-20.76	56.18	-2.94	Peak
2	16740.000	56.33	68.22	-11.89	57.85	-1.52	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5700MHz
Test BY :Bob

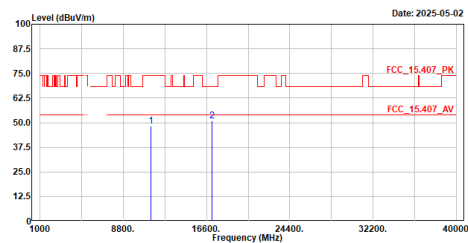

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11400.000	48.22	74.00	-25.78	50.41	-2.19	Peak
2	17100.000	51.00	68.22	-17.22	52.59	-1.59	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5700MHz
Test BY :Bob

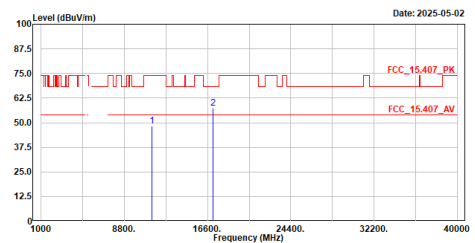

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11400.000	48.14	74.00	-25.86	50.33	-2.19	Peak
2	17100.000	57.31	68.22	-10.91	58.90	-1.59	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.