



Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5720MHz
Test BY :Bob

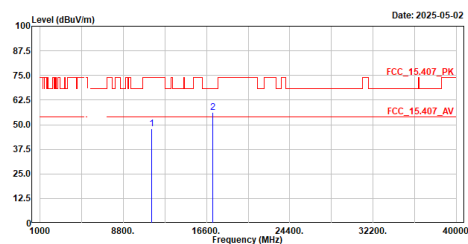

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11440.000	47.92	74.00	-26.08	50.03	-2.11	Peak
2	17160.000	56.07	68.22	-12.15	57.65	-1.58	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5720MHz
Test BY :Bob

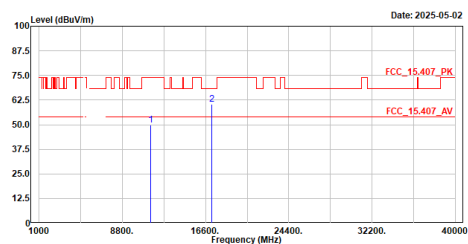

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11440.000	49.81	74.00	-24.19	51.92	-2.11	Peak
2	17160.000	60.47	68.22	-7.75	62.05	-1.58	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5745MHz
Test BY :Bob

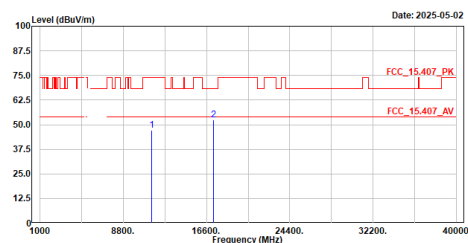

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11490.000	47.16	74.00	-26.84	49.15	-1.99	Peak
2	17235.000	52.46	68.22	-15.76	54.06	-1.60	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5745MHz
Test BY :Bob

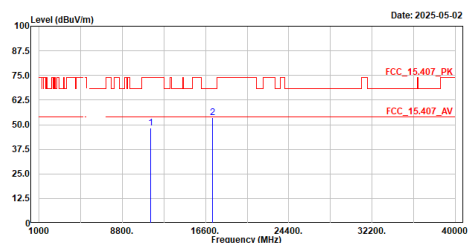

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11490.000	48.43	74.00	-25.57	50.42	-1.99	Peak
2	17235.000	53.41	68.22	-14.81	55.01	-1.60	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5785MHz
Test BY :Bob

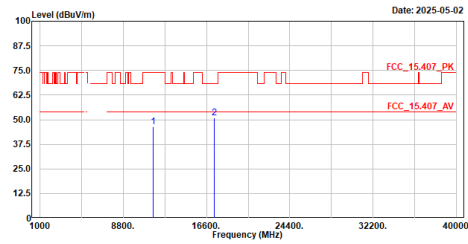


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11570.000	46.46	74.00	-27.54	48.29	-1.83	Peak
2	17355.000	50.87	68.22	-17.35	51.68	-0.81	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5785MHz
Test BY :Bob

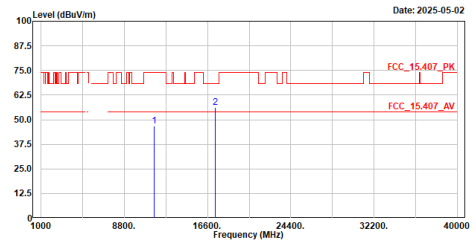


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11570.000	46.97	74.00	-27.03	48.80	-1.83	Peak
2	17355.000	56.13	68.22	-12.09	56.94	-0.81	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5825MHz
Test BY :Bob

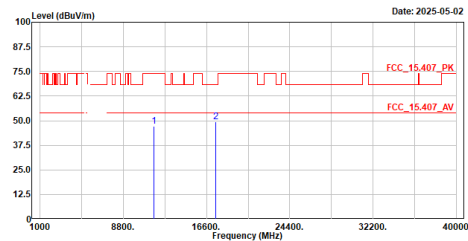


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11650.000	47.01	74.00	-26.99	48.89	-1.88	Peak
2	17475.000	49.42	68.22	-18.80	50.46	-1.04	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5825MHz
Test BY :Bob

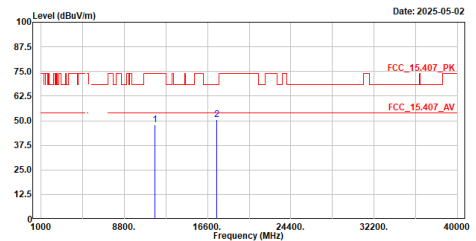


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11650.000	47.84	74.00	-26.16	49.72	-1.88	Peak
2	17475.000	50.64	68.22	-17.58	51.68	-1.04	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5190MHz
Test BY :Bob

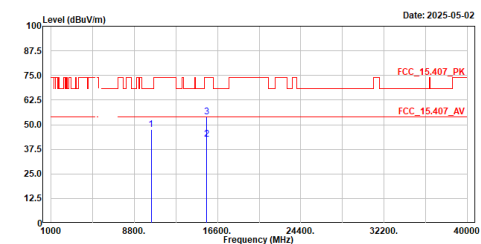


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10380.000	47.44	68.22	-20.78	52.23	-4.79	Peak
2	15570.000	42.55	54.00	-11.45	43.72	-1.17	Average
3	15570.000	54.05	74.00	-19.95	55.22	-1.17	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5190MHz
Test BY :Bob

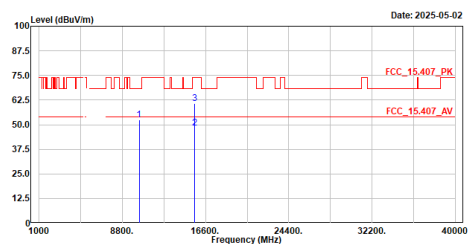


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10380.000	52.51	68.22	-15.71	57.30	-4.79	Peak
2	15570.000	48.20	54.00	-5.80	49.37	-1.17	Average
3	15570.000	60.83	74.00	-13.17	62.00	-1.17	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5230MHz
Test BY :Bob

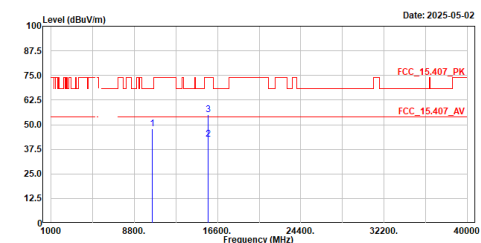


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10460.000	47.98	68.22	-20.24	52.90	-4.92	Peak
2	15690.000	42.69	54.00	-11.31	44.11	-1.42	Average
3	15690.000	55.09	74.00	-18.91	56.51	-1.42	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5230MHz
Test BY :Bob

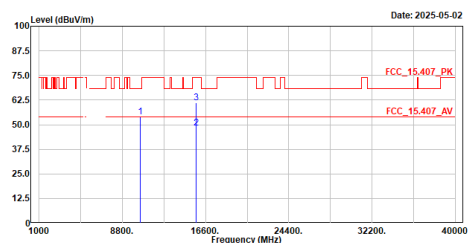


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10460.000	53.91	68.22	-14.31	58.83	-4.92	Peak
2	15690.000	48.36	54.00	-5.64	49.78	-1.42	Average
3	15690.000	61.06	74.00	-12.94	62.48	-1.42	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5270MHz
Test BY :Bob

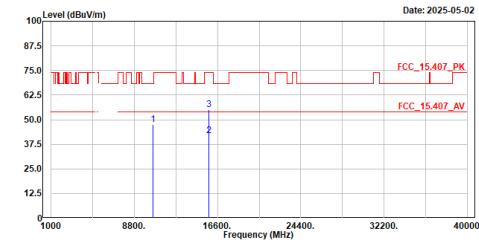


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10540.000	47.49	68.22	-20.73	52.22	-4.73	Peak
2	15810.000	42.07	54.00	-11.93	43.48	-1.33	Average
3	15810.000	54.97	74.00	-19.03	56.30	-1.33	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5270MHz
Test BY :Bob

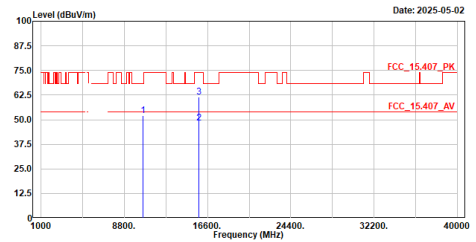


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10540.000	51.89	68.22	-16.33	56.62	-4.73	Peak
2	15810.000	48.30	54.00	-5.70	49.63	-1.33	Average
3	15810.000	61.50	74.00	-12.50	62.83	-1.33	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5310MHz
Test BY :Bob

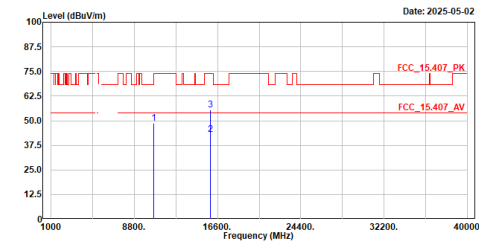


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10620.000	48.52	74.00	-25.48	52.79	-4.27	Peak
2	15930.000	43.04	54.00	-10.96	44.57	-1.53	Average
3	15930.000	55.38	74.00	-18.62	56.91	-1.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5310MHz
Test BY :Bob

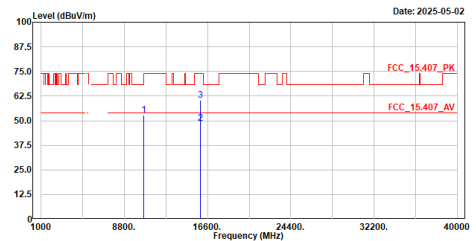


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10620.000	52.95	74.00	-21.05	57.22	-4.27	Peak
2	15930.000	48.68	54.00	-5.32	50.21	-1.53	Average
3	15930.000	60.41	74.00	-13.59	61.94	-1.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5510MHz
Test BY :Bob

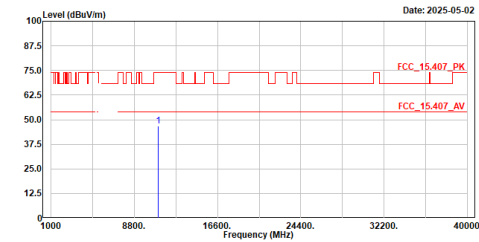

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11020.000	46.71	74.00	-27.29	50.09	-3.38	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5510MHz
Test BY :Bob

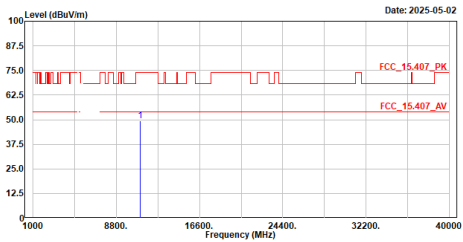

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11020.000	49.39	74.00	-24.61	52.77	-3.38	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5550MHz
Test BY :Bob

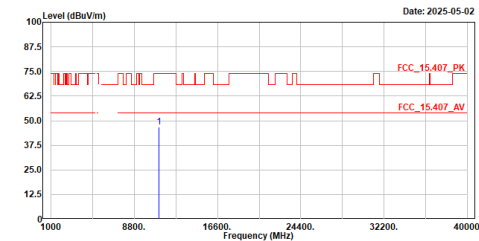

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11100.000	46.90	74.00	-27.10	49.98	-3.08	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5550MHz
Test BY :Bob

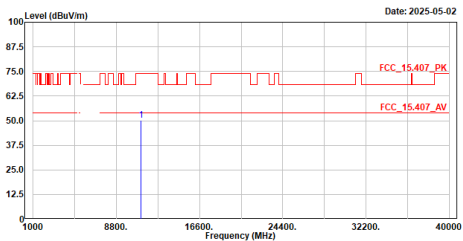

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11100.000	50.36	74.00	-23.64	53.44	-3.08	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5670MHz
Test BY :Bob

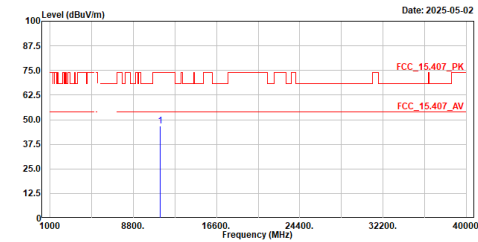


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11340.000	46.93	74.00	-27.07	49.17	-2.24	Peak

Note:

- Level = Read Level + Factor
- Factor = Antenna Factor + Cable Loss - Preamp Factor
- Over Limit = Level - Limit Line
- The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5670MHz
Test BY :Bob

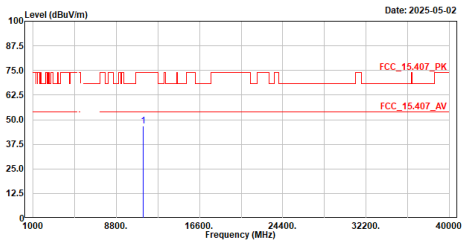


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11340.000	46.78	74.00	-27.22	49.02	-2.24	Peak

Note:

- Level = Read Level + Factor
- Factor = Antenna Factor + Cable Loss - Preamp Factor
- Over Limit = Level - Limit Line
- The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5710MHz
Test BY :Bob

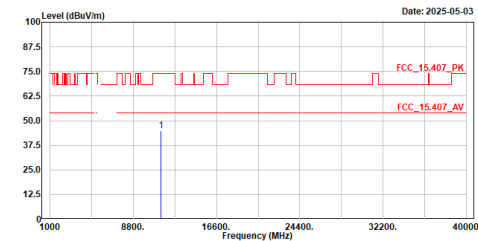


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11420.000	44.74	74.00	-29.26	46.89	-2.15	Peak

Note:

- Level = Read Level + Factor
- Factor = Antenna Factor + Cable Loss - Preamp Factor
- Over Limit = Level - Limit Line
- The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5710MHz
Test BY :Bob

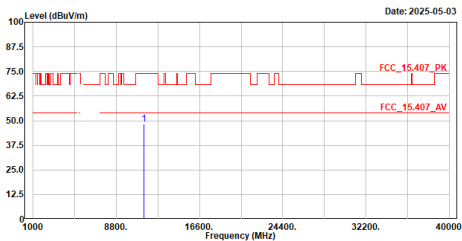


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11420.000	48.31	74.00	-25.69	50.46	-2.15	Peak

Note:

- Level = Read Level + Factor
- Factor = Antenna Factor + Cable Loss - Preamp Factor
- Over Limit = Level - Limit Line
- The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5755MHz
Test BY :Bob

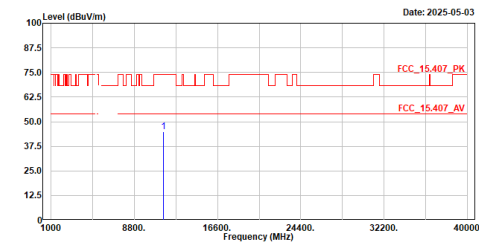


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11510.000	44.82	74.00	-29.18	46.74	-1.92	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5755MHz
Test BY :Bob

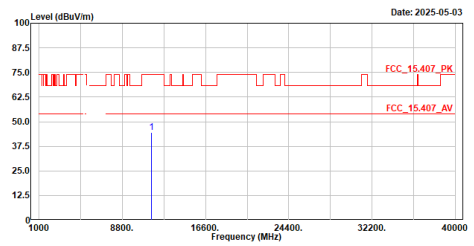


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11510.000	44.64	74.00	-29.36	46.56	-1.92	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5795MHz
Test BY :Bob

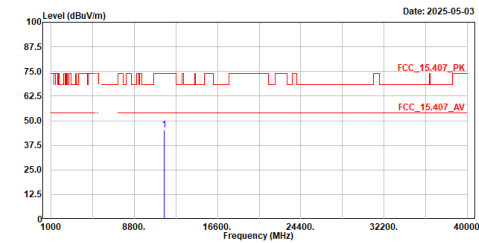


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11590.000	45.46	74.00	-28.54	47.32	-1.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5795MHz
Test BY :Bob

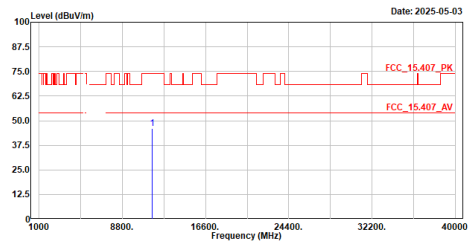


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11590.000	45.85	74.00	-28.15	47.71	-1.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5210MHz
Test BY :Bob

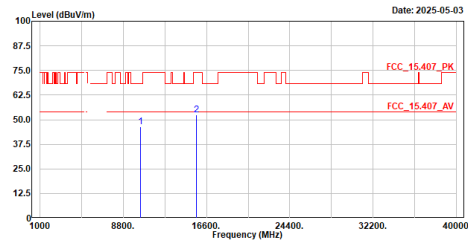


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10420.000	46.53	68.22	-21.69	51.39	-4.86	Peak
2	15630.000	52.64	74.00	-21.36	53.94	-1.30	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5210MHz
Test BY :Bob

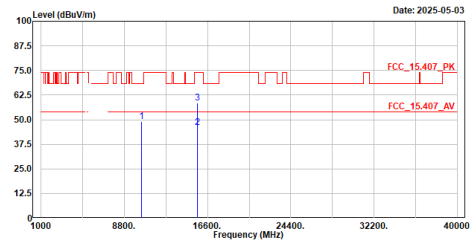


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10420.000	49.14	68.22	-19.08	54.00	-4.86	Peak
2	15630.000	46.21	54.00	-7.79	47.51	-1.30	Average
3	15630.000	58.61	74.00	-15.39	59.91	-1.30	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5290MHz
Test BY :Bob

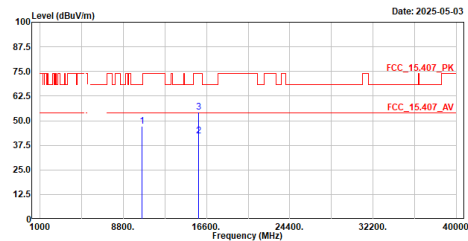


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10580.000	47.08	68.22	-21.14	51.55	-4.47	Peak
2	15870.000	42.43	54.00	-11.57	43.93	-1.50	Average
3	15870.000	54.50	74.00	-19.50	56.00	-1.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5290MHz
Test BY :Bob

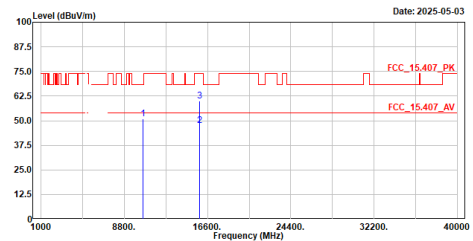


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10580.000	50.86	68.22	-17.36	55.33	-4.47	Peak
2	15870.000	47.36	54.00	-6.64	48.86	-1.50	Average
3	15870.000	60.11	74.00	-13.89	61.61	-1.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5530MHz
Test BY :Bob

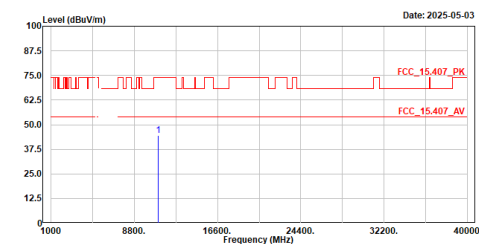


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11060.000	44.68	74.00	-29.32	47.89	-3.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5530MHz
Test BY :Bob

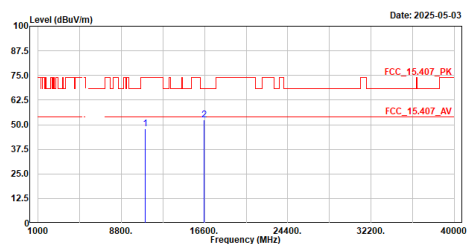


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11060.000	48.05	74.00	-25.95	51.26	-3.21	Peak
2	16590.000	52.45	68.22	-15.77	53.64	-1.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5610MHz
Test BY :Bob

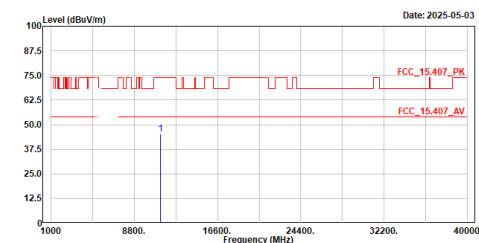


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11220.000	45.23	74.00	-28.77	47.88	-2.65	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5610MHz
Test BY :Bob

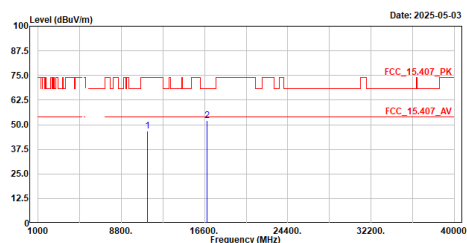


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11220.000	46.71	74.00	-27.29	49.36	-2.65	Peak
2	16830.000	51.95	68.22	-16.27	53.16	-1.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5690MHz
Test BY :Bob

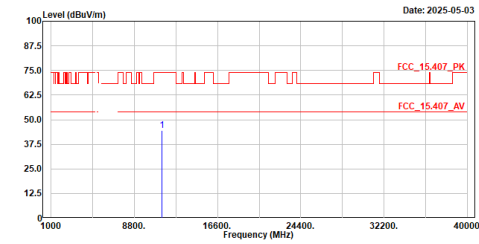

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11380.000	44.63	74.00	-29.37	46.87	-2.24	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5690MHz
Test BY :Bob

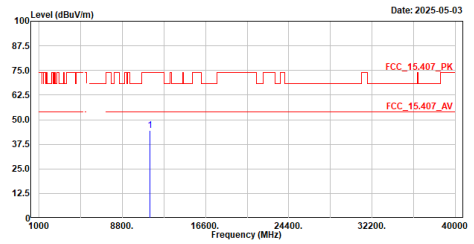

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11380.000	44.52	74.00	-29.48	46.76	-2.24	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5775MHz
Test BY :Bob

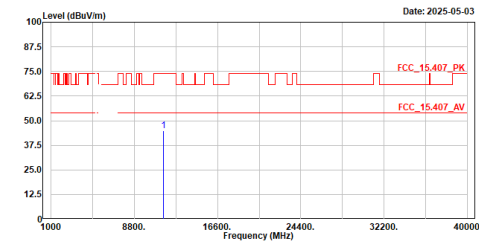

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11550.000	44.74	74.00	-29.26	46.54	-1.80	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5775MHz
Test BY :Bob

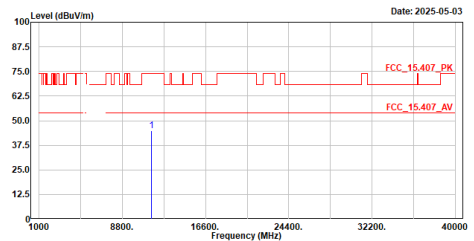

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11550.000	44.74	74.00	-29.26	46.54	-1.80	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac160_5250MHz
Test BY :Bob

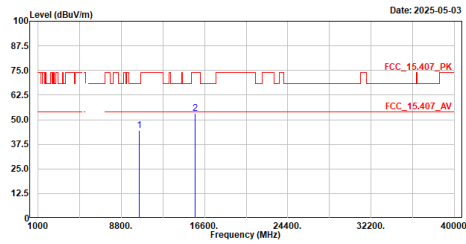


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10500.000	44.51	68.22	-23.71	49.40	-4.89	Peak
2	15750.000	53.29	74.00	-20.71	54.55	-1.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac160_5250MHz
Test BY :Bob

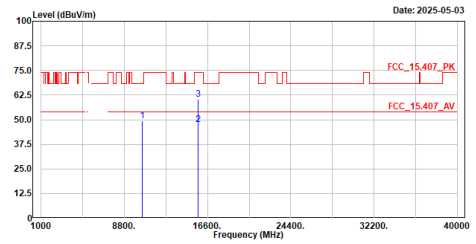


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10500.000	49.30	68.22	-18.92	54.19	-4.89	Peak
2	15750.000	47.37	54.00	-6.63	48.63	-1.26	Average
3	15750.000	60.53	74.00	-13.47	61.79	-1.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac160_5570MHz
Test BY :Bob

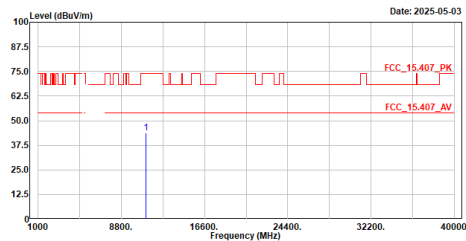


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11140.000	43.78	74.00	-30.22	46.78	-3.00	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac160_5570MHz
Test BY :Bob

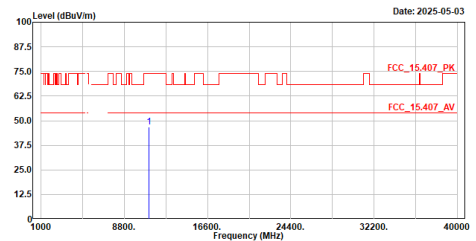


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11140.000	46.69	74.00	-27.31	49.69	-3.00	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5180MHz
Test BY :Bob

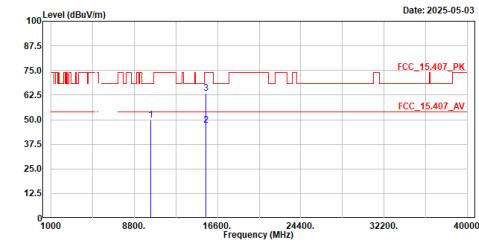


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10360.000	49.72	68.22	-18.50	54.48	-4.76	Peak
2	15540.000	47.14	54.00	-6.86	48.29	-1.15	Average
3	15540.000	63.52	74.00	-10.48	64.67	-1.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5180MHz
Test BY :Bob

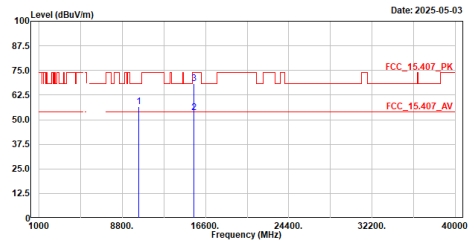


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10360.000	56.72	68.22	-11.50	61.48	-4.76	Peak
2	15540.000	53.48	54.00	-0.52	54.63	-1.15	Average
3	15540.000	68.15	74.00	-5.85	69.30	-1.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5220MHz
Test BY :Bob

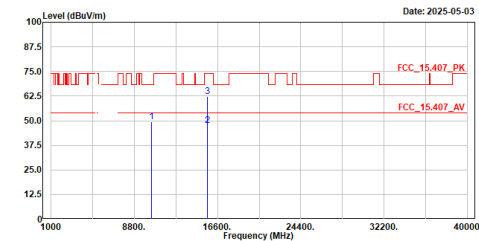


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10440.000	49.31	68.22	-18.91	54.21	-4.90	Peak
2	15660.000	47.59	54.00	-6.41	49.05	-1.46	Average
3	15660.000	62.12	74.00	-11.88	63.58	-1.46	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5220MHz
Test BY :Bob

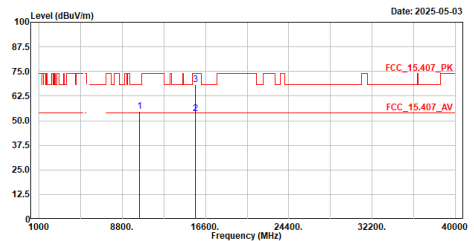


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10440.000	54.62	68.22	-13.60	59.52	-4.90	Peak
2	15660.000	53.46	54.00	-0.54	54.92	-1.46	Average
3	15660.000	68.34	74.00	-5.66	69.80	-1.46	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5240MHz
Test BY :Bob

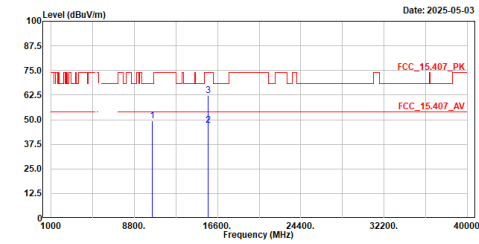


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10480.000	49.54	68.22	-18.68	54.45	-4.91	Peak
2	15720.000	47.35	54.00	-6.65	48.71	-1.36	Average
3	15720.000	62.13	74.00	-11.87	63.49	-1.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5240MHz
Test BY :Bob

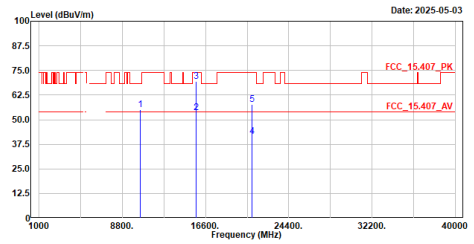


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10480.000	55.02	68.22	-13.20	59.93	-4.91	Peak
2	15720.000	53.49	54.00	-0.51	54.85	-1.36	Average
3	15720.000	69.53	74.00	-4.47	70.89	-1.36	Peak
4	20960.000	41.62	54.00	-12.38	34.54	7.08	Average
5	20960.000	57.71	74.00	-16.29	50.63	7.08	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5260MHz
Test BY :Bob

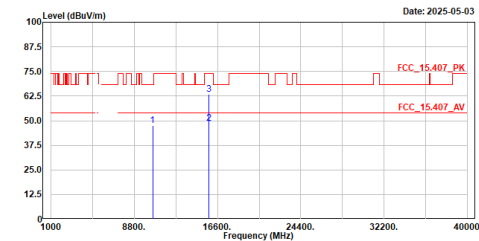


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10520.000	47.52	68.22	-20.70	52.39	-4.87	Peak
2	15780.000	48.69	54.00	-5.31	49.97	-1.28	Average
3	15780.000	63.51	74.00	-10.49	64.79	-1.28	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5260MHz
Test BY :Bob

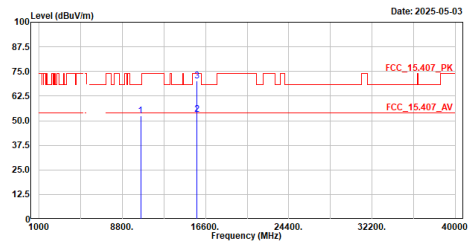


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10520.000	52.37	68.22	-15.85	57.24	-4.87	Peak
2	15780.000	53.20	54.00	-0.80	54.48	-1.28	Average
3	15780.000	70.12	74.00	-3.88	71.40	-1.28	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5300MHz
Test BY :Bob

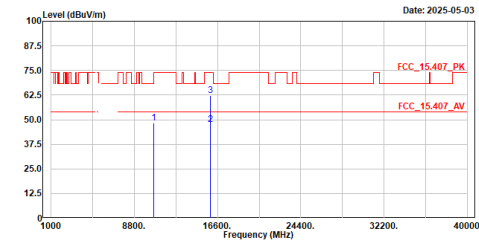


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10600.000	48.29	74.00	-25.71	52.62	-4.33	Peak
2	15900.000	47.58	54.00	-6.42	49.84	-1.46	Average
3	15900.000	62.34	74.00	-11.66	63.80	-1.46	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5300MHz
Test BY :Bob

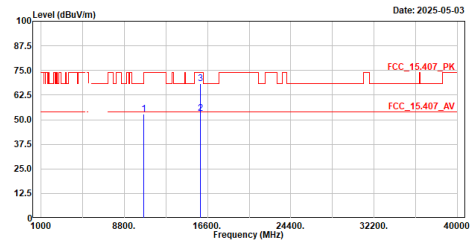


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10600.000	52.78	74.00	-21.22	57.11	-4.33	Peak
2	15900.000	53.24	54.00	-0.76	54.70	-1.46	Average
3	15900.000	68.37	74.00	-5.63	69.83	-1.46	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5320MHz
Test BY :Bob

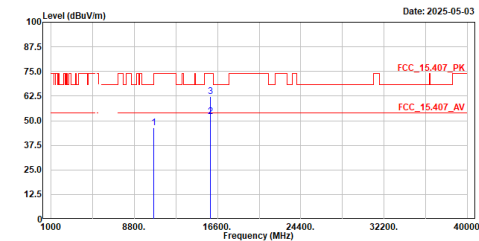


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10640.000	46.28	74.00	-27.72	50.52	-4.24	Peak
2	15960.000	52.25	54.00	-1.75	53.80	-1.55	Average
3	15960.000	62.38	74.00	-11.62	63.93	-1.55	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5320MHz
Test BY :Bob

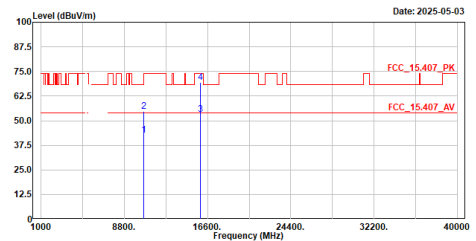


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10640.000	42.75	54.00	-11.25	46.99	-4.24	Average
2	10640.000	54.75	74.00	-19.25	58.99	-4.24	Peak
3	15960.000	53.14	54.00	-0.86	54.69	-1.55	Average
4	15960.000	69.51	74.00	-4.49	71.06	-1.55	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5500MHz
Test BY :Bob

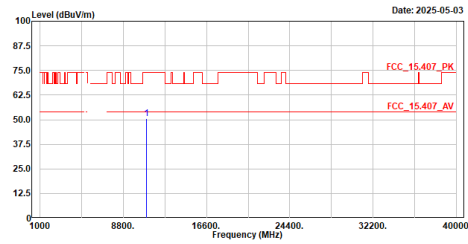


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11000.000	50.42	74.00	-23.58	53.93	-3.51	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5500MHz
Test BY :Bob

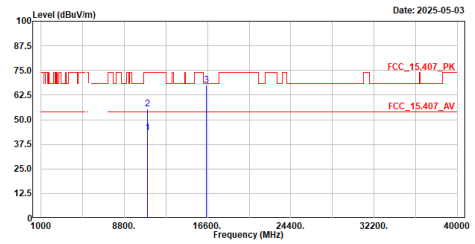


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11000.000	43.22	54.00	-10.78	46.73	-3.51	Average
2	11000.000	55.63	74.00	-18.37	59.14	-3.51	Peak
3	16500.000	67.72	68.22	-0.50	68.81	-1.09	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5580MHz
Test BY :Bob

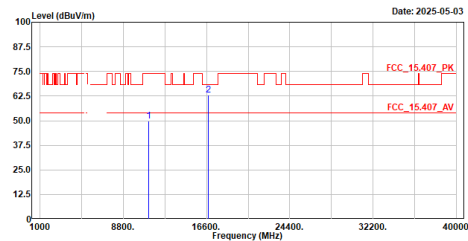


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11160.000	49.97	74.00	-24.03	52.91	-2.94	Peak
2	16740.000	63.01	68.22	-5.21	64.53	-1.52	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5580MHz
Test BY :Bob

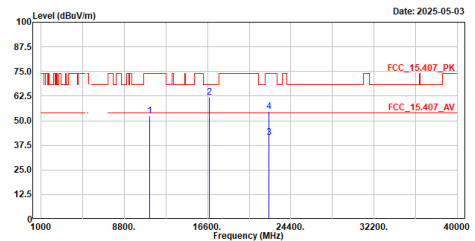


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11160.000	52.44	74.00	-21.56	55.38	-2.94	Peak
2	16740.000	61.86	68.22	-6.36	63.38	-1.52	Peak
3	22320.000	41.46	54.00	-12.54	34.39	7.07	Average
4	22320.000	54.61	74.00	-19.39	47.54	7.07	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5700MHz
Test BY :Bob

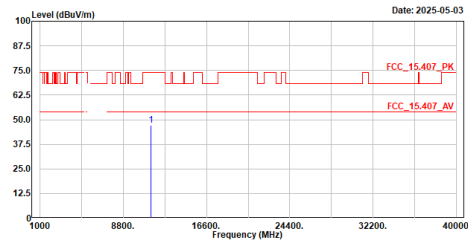

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11440.000	47.09	74.00	-26.91	49.28	-2.19	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5700MHz
Test BY :Bob

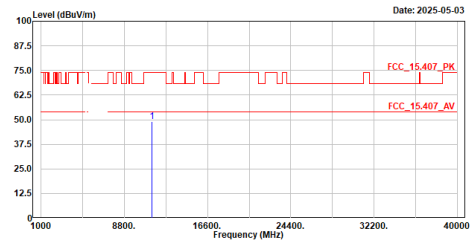

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11440.000	49.17	74.00	-24.83	51.36	-2.19	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5720MHz
Test BY :Bob

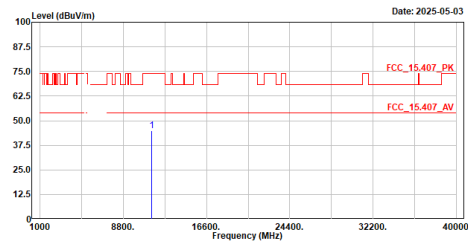

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11440.000	44.98	74.00	-29.02	47.09	-2.11	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5720MHz
Test BY :Bob

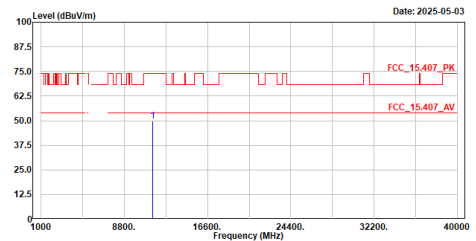

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11440.000	49.84	74.00	-24.16	51.95	-2.11	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5745MHz
Test BY :Bob

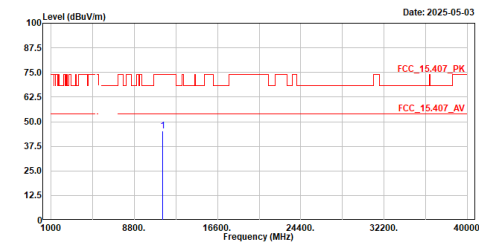


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11490.000	45.13	74.00	-28.87	47.12	-1.99	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5745MHz
Test BY :Bob

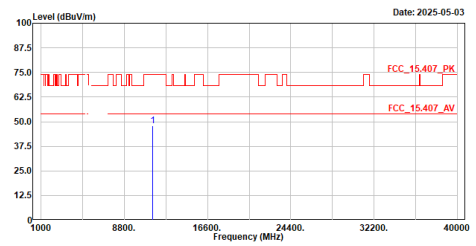


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11490.000	48.10	74.00	-25.90	50.09	-1.99	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5785MHz
Test BY :Bob

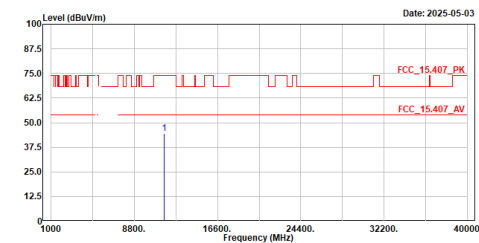


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11570.000	44.51	74.00	-29.49	46.34	-1.83	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5785MHz
Test BY :Bob

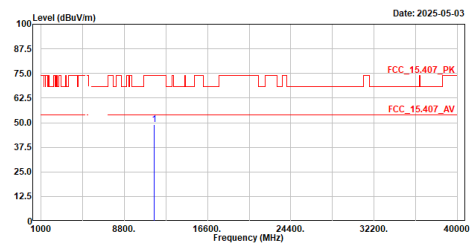


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11570.000	49.18	74.00	-24.82	51.01	-1.83	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5825MHz
Test BY :Bob

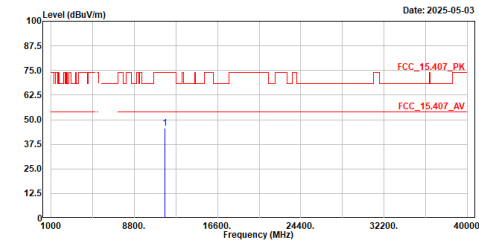

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11650.000	45.55	74.00	-28.45	47.43	-1.88	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5825MHz
Test BY :Bob

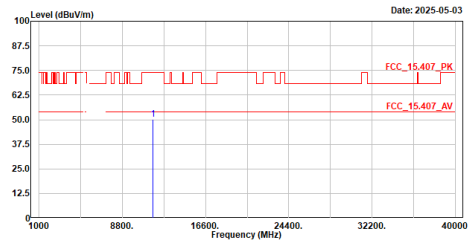

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11650.000	50.23	74.00	-23.77	52.11	-1.88	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5190MHz
Test BY :Bob

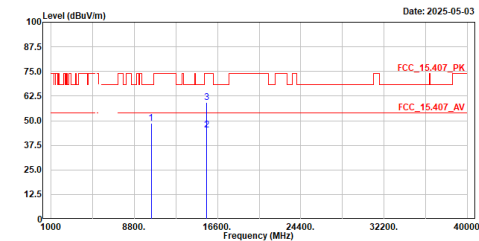

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10380.000	48.57	68.22	-19.65	53.36	-4.79	Peak
2	15570.000	45.33	54.00	-8.67	46.50	-1.17	Average
3	15570.000	59.10	74.00	-14.90	60.27	-1.17	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5190MHz
Test BY :Bob

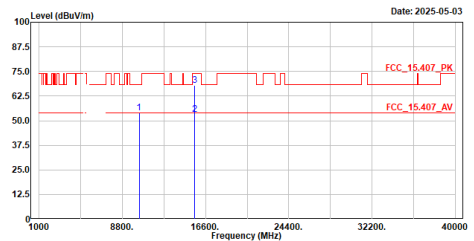

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10380.000	53.83	68.22	-14.39	58.62	-4.79	Peak
2	15570.000	53.35	54.00	-0.65	54.52	-1.17	Average
3	15570.000	67.85	74.00	-6.15	69.02	-1.17	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5230MHz
Test BY :Bob

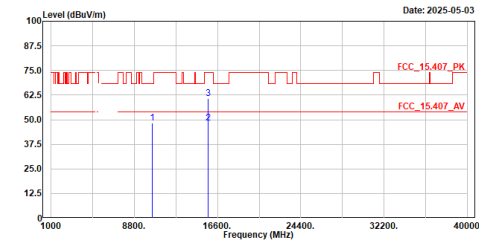


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10460.000	48.33	68.22	-19.89	53.25	-4.92	Peak
2	15690.000	48.13	54.00	-5.87	49.55	-1.42	Average
3	15690.000	60.78	74.00	-13.22	62.20	-1.42	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5230MHz
Test BY :Bob

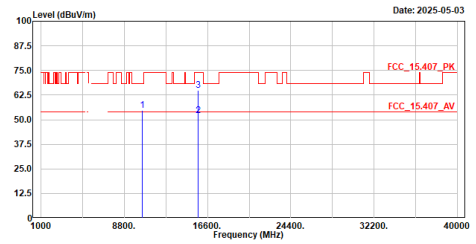


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10460.000	54.74	68.22	-13.48	59.66	-4.92	Peak
2	15690.000	52.26	54.00	-1.74	53.68	-1.42	Average
3	15690.000	64.86	74.00	-9.14	66.28	-1.42	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5270MHz
Test BY :Bob

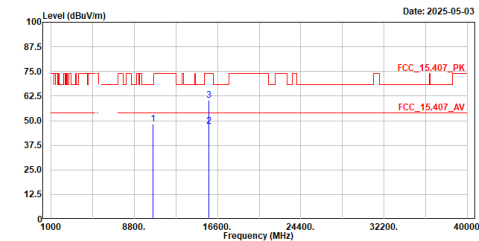


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10540.000	48.12	68.22	-20.10	52.85	-4.73	Peak
2	15810.000	47.25	54.00	-6.75	48.58	-1.33	Average
3	15810.000	60.53	74.00	-13.47	61.86	-1.33	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5270MHz
Test BY :Bob

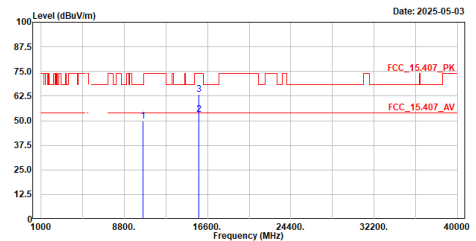


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10540.000	49.65	68.22	-18.57	54.38	-4.73	Peak
2	15810.000	53.35	54.00	-0.65	54.68	-1.33	Average
3	15810.000	63.35	74.00	-10.65	64.68	-1.33	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5310MHz
Test BY :Bob

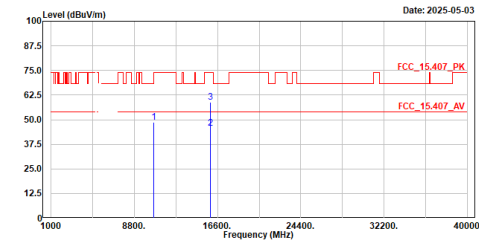


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10620.000	48.84	74.00	-25.16	53.11	-4.27	Peak
2	15930.000	45.66	54.00	-8.34	47.19	-1.53	Average
3	15930.000	58.76	74.00	-15.24	60.29	-1.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5310MHz
Test BY :Bob

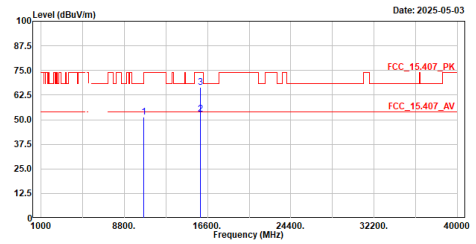


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10620.000	51.50	74.00	-22.50	55.77	-4.27	Peak
2	15930.000	53.02	54.00	-0.98	54.55	-1.53	Average
3	15930.000	66.23	74.00	-7.77	67.76	-1.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5510MHz
Test BY :Bob

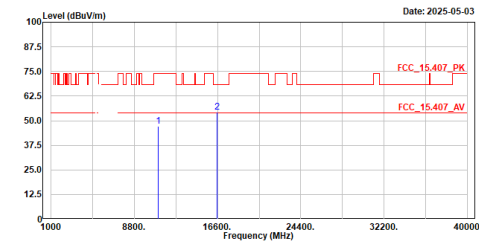


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11020.000	47.19	74.00	-26.81	50.57	-3.38	Peak
2	16530.000	54.34	68.22	-13.88	55.41	-1.07	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5510MHz
Test BY :Bob

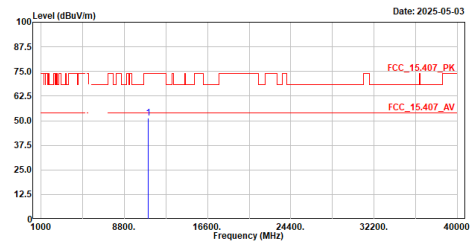


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11020.000	51.31	74.00	-22.69	54.69	-3.38	Peak
2	16530.000	54.34	68.22	-13.88	55.41	-1.07	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5550MHz
Test BY :Bob

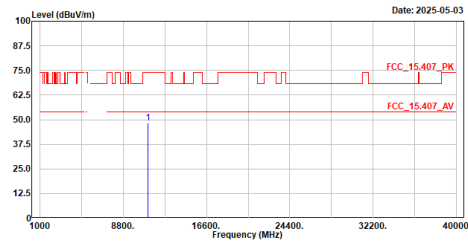


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11100.000	48.21	74.00	-25.79	51.29	-3.08	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5550MHz
Test BY :Bob

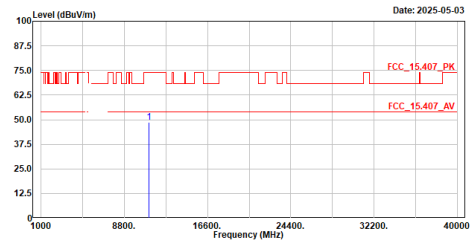


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11100.000	48.80	74.00	-25.20	51.88	-3.08	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5670MHz
Test BY :Bob

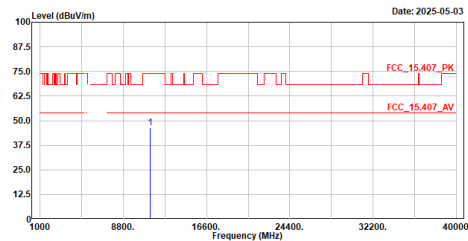


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11340.000	46.37	74.00	-27.63	48.61	-2.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5670MHz
Test BY :Bob

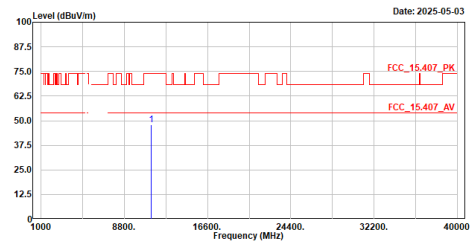


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11340.000	47.81	74.00	-26.19	50.05	-2.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5710MHz
Test BY :Bob

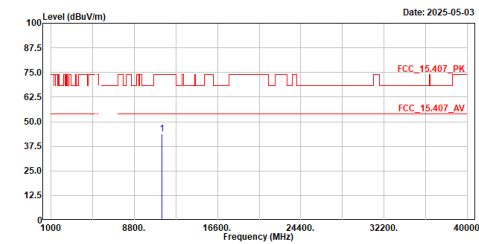

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11420.000	43.85	74.00	-30.15	46.00	-2.15	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5710MHz
Test BY :Bob

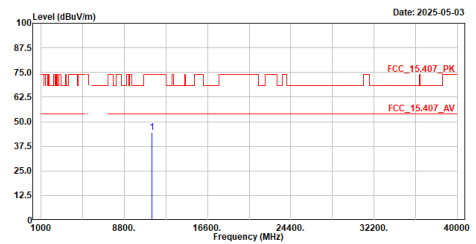

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11420.000	44.55	74.00	-29.45	46.70	-2.15	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5755MHz
Test BY :Bob

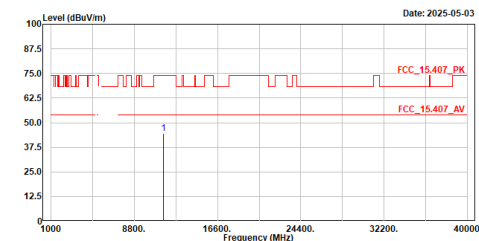

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11510.000	44.41	74.00	-29.59	46.33	-1.92	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5755MHz
Test BY :Bob

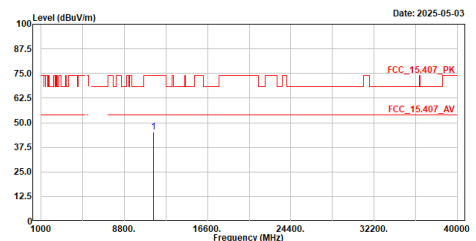

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11510.000	45.37	74.00	-28.63	47.29	-1.92	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5795MHz
Test BY :Bob

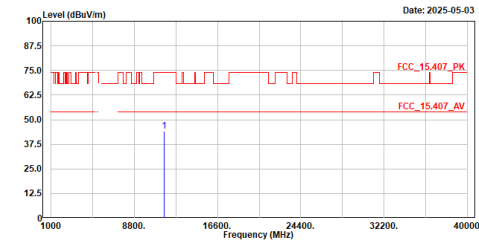

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	dB	dBuV	dB/m
1	11590.000	44.34	74.00	-29.66	46.20	-1.86	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5795MHz
Test BY :Bob

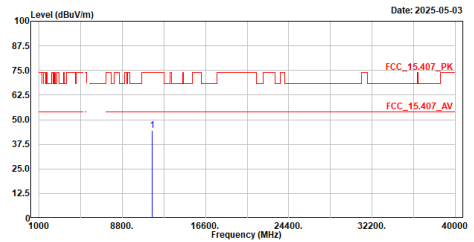

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	dB	dBuV	dB/m
1	11590.000	44.46	74.00	-29.54	46.32	-1.86	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax80_5210MHz
Test BY :Bob

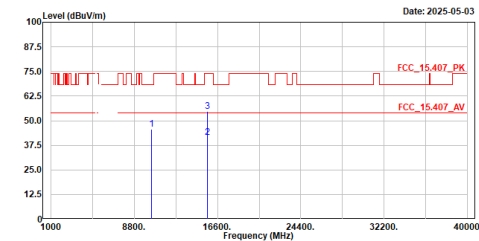

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	dB	dBuV	dB/m
1	10420.000	45.68	68.22	-22.54	50.54	-4.86	Peak
2	15630.000	41.38	54.00	-12.62	42.68	-1.30	Average
3	15630.000	54.85	74.00	-19.15	56.15	-1.30	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax80_5210MHz
Test BY :Bob

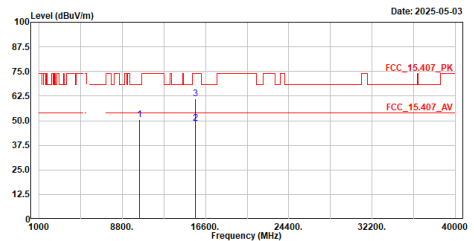

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	dB	dBuV	dB/m
1	10420.000	50.72	68.22	-17.50	55.58	-4.86	Peak
2	15630.000	48.57	54.00	-5.43	49.87	-1.30	Average
3	15630.000	61.01	74.00	-12.99	62.31	-1.30	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax80_5290MHz
Test BY :Bob

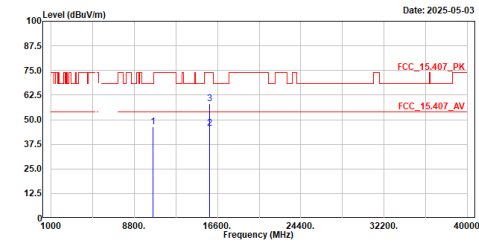


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10580.000	46.46	68.22	-21.76	50.93	-4.47	Peak
2	15870.000	45.77	54.00	-8.23	47.27	-1.50	Average
3	15870.000	58.17	74.00	-15.83	59.67	-1.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax80_5290MHz
Test BY :Bob

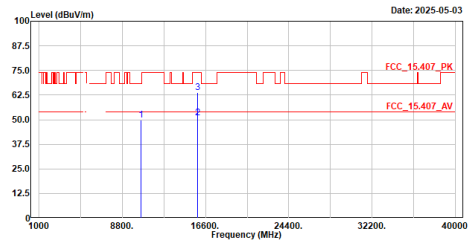


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10580.000	49.82	68.22	-18.40	54.29	-4.47	Peak
2	15870.000	50.96	54.00	-3.04	52.46	-1.50	Average
3	15870.000	63.82	74.00	-10.18	65.32	-1.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax80_5530MHz
Test BY :Bob

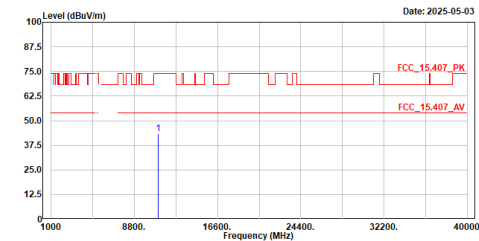


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11060.000	43.37	74.00	-30.63	46.58	-3.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax80_5530MHz
Test BY :Bob

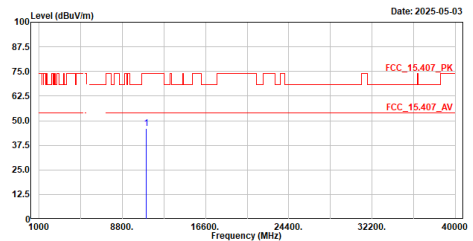


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11060.000	46.02	74.00	-27.98	49.23	-3.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax80_5610MHz
Test BY :Bob

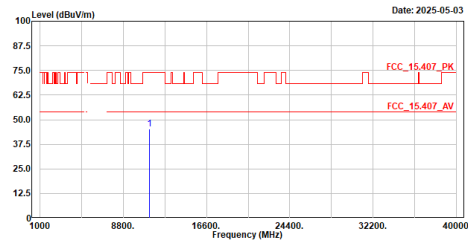

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11220.000	45.27	74.00	-28.73	47.92	-2.65	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax80_5610MHz
Test BY :Bob

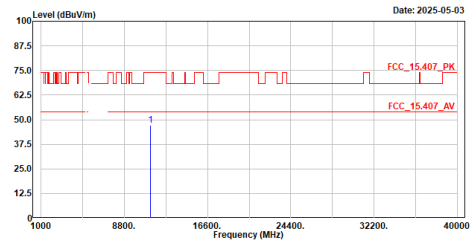

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11220.000	47.32	74.00	-26.68	49.97	-2.65	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax80_5690MHz
Test BY :Bob

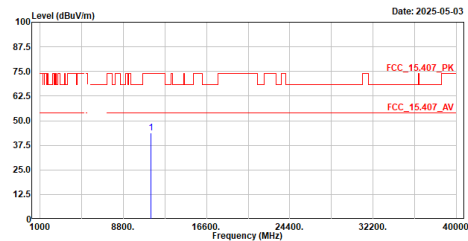

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11380.000	43.76	74.00	-30.24	46.00	-2.24	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax80_5690MHz
Test BY :Bob

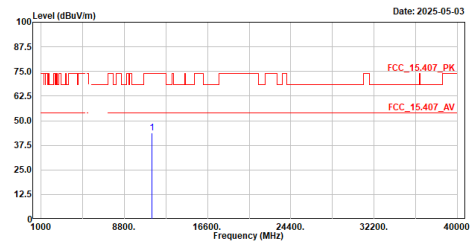

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11380.000	43.89	74.00	-30.11	46.13	-2.24	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax80_5775MHz
Test BY :Bob

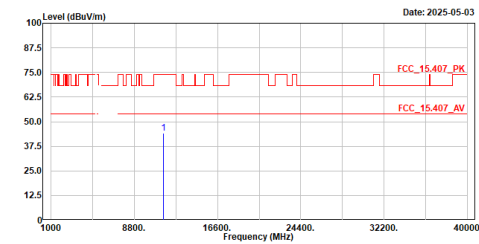

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11550.000	44.01	74.00	-29.99	45.81	-1.80	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax80_5775MHz
Test BY :Bob

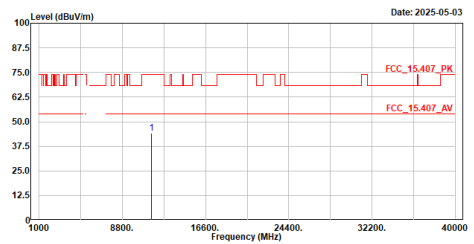

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11550.000	44.30	74.00	-29.70	46.10	-1.80	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax160_5250MHz
Test BY :Bob

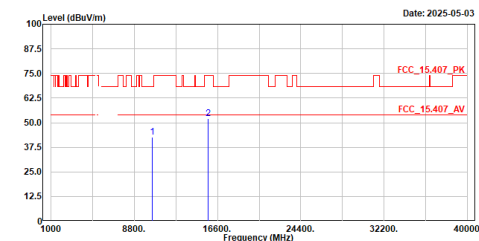

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10500.000	42.82	68.22	-25.40	47.71	-4.89	Peak
2	15750.000	52.15	74.00	-21.85	53.41	-1.26	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax160_5250MHz
Test BY :Bob

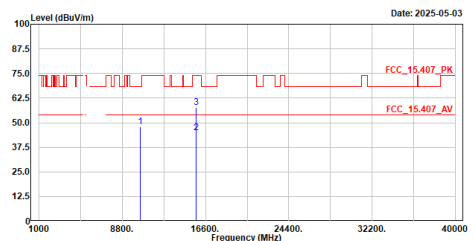

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10500.000	47.75	68.22	-20.47	52.64	-4.89	Peak
2	15750.000	44.74	54.00	-9.26	46.00	-1.26	Average
3	15750.000	57.87	74.00	-16.13	59.13	-1.26	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax160_5570MHz
Test BY :Bob

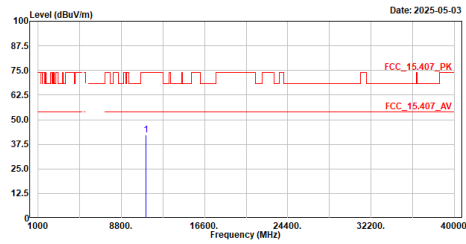

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11140.000	42.32	74.00	-31.68	45.32	-3.00	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax160_5570MHz
Test BY :Bob

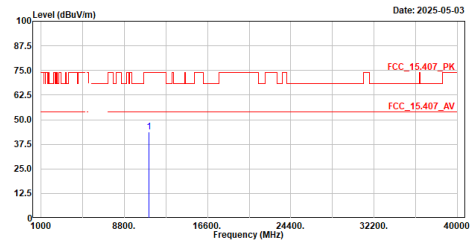

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11140.000	43.80	74.00	-30.20	46.80	-3.00	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax160_5570MHz
Test BY :Bob

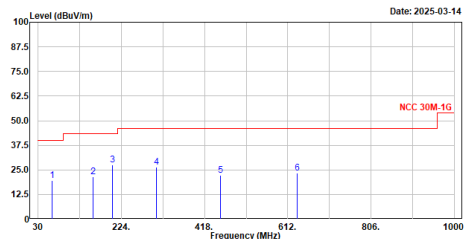

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	62.010	19.71	40.00	-20.29	44.67	-24.96	QP
2	159.010	21.63	43.50	-21.87	45.51	-23.88	QP
3	202.660	27.59	43.50	-15.91	54.35	-26.76	QP
4	306.450	26.26	46.00	-19.74	49.19	-22.93	QP
5	455.830	22.18	46.00	-23.82	40.88	-18.70	QP
6	634.310	23.44	46.00	-22.56	38.48	-15.04	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax160_5570MHz
Test BY :Bob

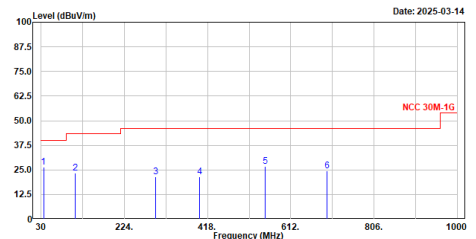

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	35.820	26.43	40.00	-13.57	51.24	-24.81	QP
2	109.540	23.45	43.50	-20.05	50.50	-27.05	QP
3	296.750	21.48	46.00	-24.52	44.68	-23.20	QP
4	399.570	21.37	46.00	-24.63	41.62	-20.25	QP
5	551.860	26.65	46.00	-19.35	43.79	-17.14	QP
6	696.390	24.43	46.00	-21.57	38.49	-14.06	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5180MHz
Test BY :Bob

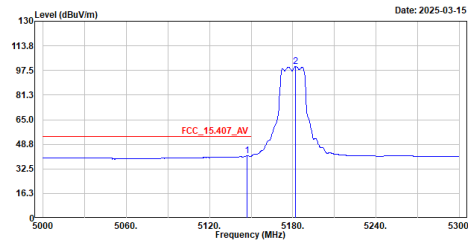


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5147.000	41.13	54.00	-12.87	25.61	15.52	Average
2	5182.100	100.15	-----	-----	84.53	15.62	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5180MHz
Test BY :Bob

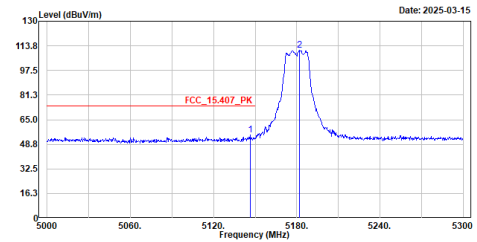


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5146.700	55.16	74.00	-18.84	39.64	15.52	Peak
2	5181.800	110.86	-----	-----	95.24	15.62	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5180MHz
Test BY :Bob

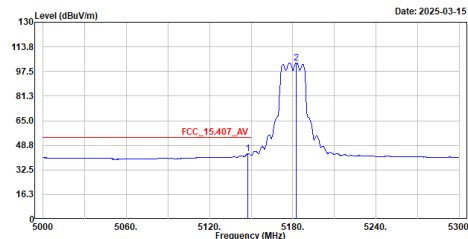


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5147.600	43.24	54.00	-10.76	27.73	15.51	Average
2	5182.700	103.21	-----	-----	87.59	15.62	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5180MHz
Test BY :Bob

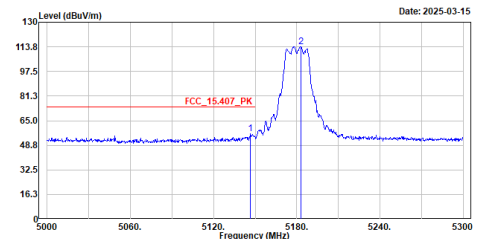


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5146.700	56.18	74.00	-17.82	40.66	15.52	Peak
2	5183.000	114.05	-----	-----	98.43	15.62	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5320MHz
Test BY :Bob

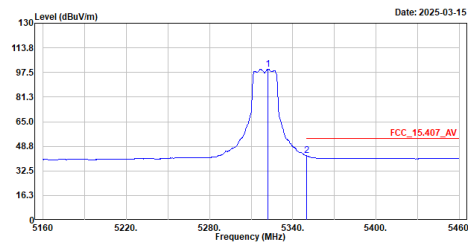


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5322.000	99.51	-----	-----	83.72	15.79	Average
2	5350.200	42.51	54.00	-11.49	26.58	15.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5320MHz
Test BY :Bob

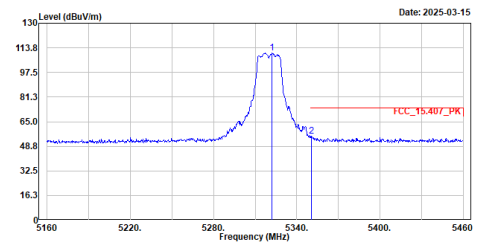


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5322.300	110.55	-----	-----	94.76	15.79	Peak
2	5350.500	55.47	74.00	-18.53	39.54	15.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5320MHz
Test BY :Bob

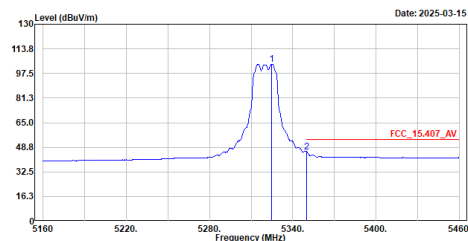


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5325.000	103.70	-----	-----	87.91	15.79	Average
2	5350.200	45.75	54.00	-8.25	29.82	15.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5320MHz
Test BY :Bob

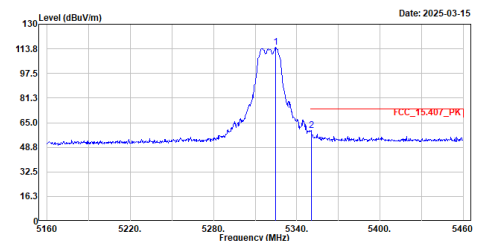


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5324.700	114.67	-----	-----	98.88	15.79	Peak
2	5350.500	59.85	74.00	-14.15	43.92	15.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5500MHz
Test BY :Bob

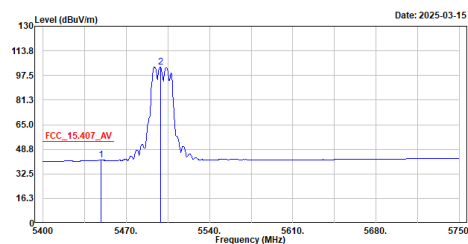


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5449.000	41.58	54.00	-12.42	25.25	16.33	Average
2	5498.700	102.86	-----	-----	86.54	16.32	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5500MHz
Test BY :Bob

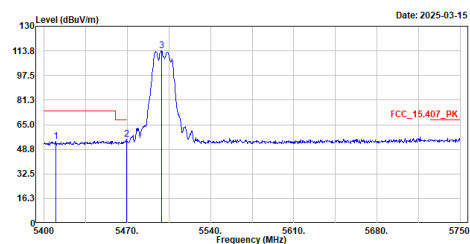


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5409.800	54.01	74.00	-19.99	37.83	16.18	Peak
2	5469.650	55.30	68.22	-12.92	38.98	16.32	Peak
3	5498.700	113.81	-----	-----	97.49	16.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5500MHz
Test BY :Bob

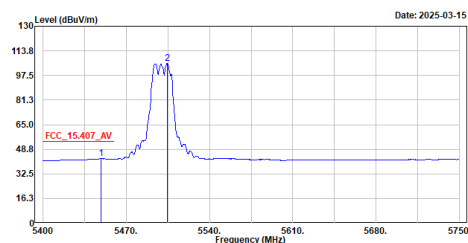


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5449.000	42.50	54.00	-11.50	26.17	16.33	Average
2	5504.300	105.33	-----	-----	89.01	16.32	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5500MHz
Test BY :Bob

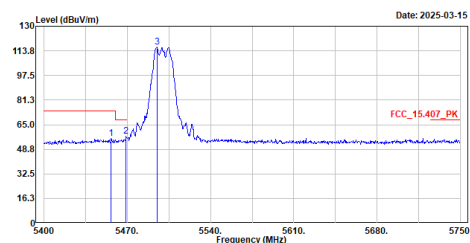


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5456.350	55.72	74.00	-18.28	39.40	16.32	Peak
2	5468.950	57.37	68.22	-10.85	41.04	16.33	Peak
3	5494.850	116.04	-----	-----	99.72	16.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5700MHz
Test BY :Bob

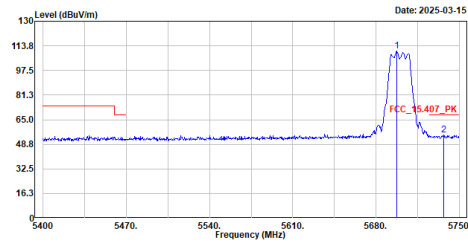


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5697.500	110.19	68.22	-13.47	92.61	17.58	Peak
2	5737.050	54.75	68.22	-13.47	36.92	17.83	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5700MHz
Test BY :Bob

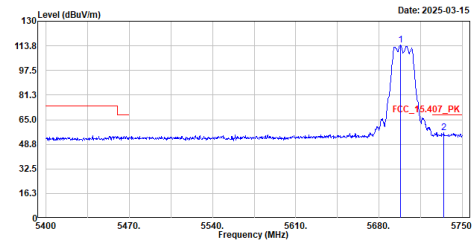


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5698.200	114.22	68.22	-11.67	96.63	17.59	Peak
2	5734.250	56.55	68.22	-11.67	38.73	17.82	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5745MHz
Test BY :Bob

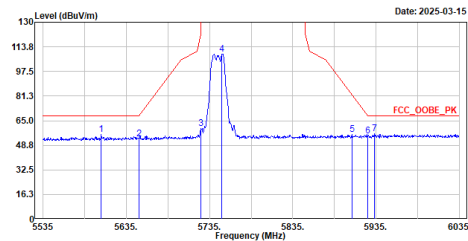


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5605.000	55.69	68.20	-12.51	38.55	17.14	Peak
2	5650.000	52.87	68.21	-15.34	35.57	17.30	Peak
3	5725.000	59.77	122.20	-62.43	42.02	17.75	Peak
4	5750.000	109.06	-----	-----	91.14	17.92	Peak
5	5906.000	56.07	82.26	-26.19	37.94	18.13	Peak
6	5925.000	54.84	68.21	-13.37	36.67	18.17	Peak
7	5933.500	56.20	68.20	-12.00	38.02	18.18	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5745MHz
Test BY :Bob

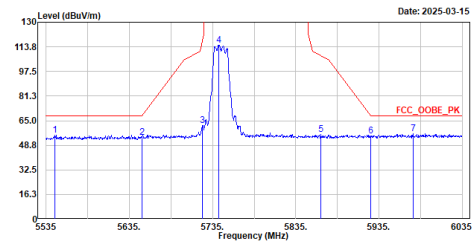


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5545.500	55.59	68.20	-12.61	38.90	16.69	Peak
2	5650.000	53.97	68.21	-14.24	36.67	17.30	Peak
3	5723.000	61.71	117.64	-55.93	43.97	17.74	Peak
4	5742.500	114.89	-----	-----	97.03	17.86	Peak
5	5865.000	55.72	108.00	-52.28	37.60	18.12	Peak
6	5925.000	55.07	68.21	-13.14	36.90	18.17	Peak
7	5976.000	56.59	68.20	-11.61	38.32	18.27	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5825MHz
Test BY :Bob

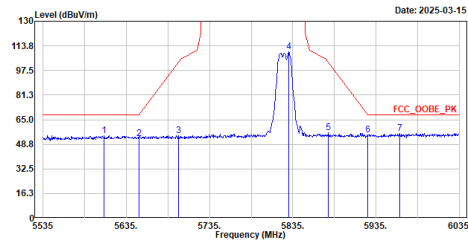


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5608.500	54.65	68.20	-13.55	37.51	17.14	Peak
2	5650.000	52.70	68.21	-15.51	35.40	17.30	Peak
3	5697.500	54.52	103.35	-48.83	36.94	17.50	Peak
4	5830.000	109.67	-----	-----	91.60	18.07	Peak
5	5878.000	56.64	102.98	-46.34	38.53	18.11	Peak
6	5925.000	54.92	68.21	-13.29	36.75	18.17	Peak
7	5964.000	55.93	68.20	-12.27	37.69	18.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5825MHz
Test BY :Bob

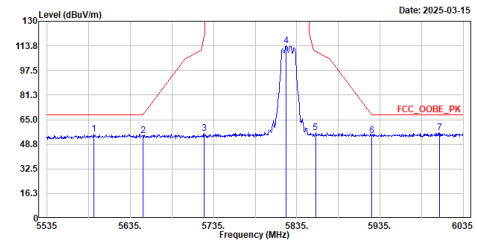


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5591.000	55.34	68.20	-12.86	38.26	17.08	Peak
2	5650.000	54.31	68.21	-13.90	37.01	17.30	Peak
3	5724.000	55.77	119.92	-64.15	38.03	17.74	Peak
4	5822.000	113.00	-----	-----	95.75	18.05	Peak
5	5857.500	56.57	110.10	-53.53	38.45	18.12	Peak
6	5925.000	54.26	68.21	-13.95	36.09	18.17	Peak
7	6006.500	56.26	68.20	-11.94	37.93	18.33	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5180MHz
Test BY :Bob

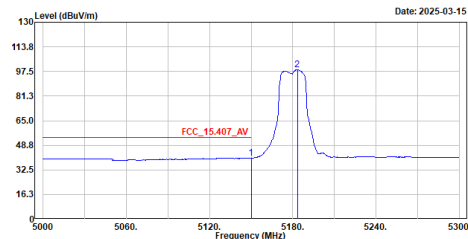


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	40.17	54.00	-13.83	24.66	15.51	Average
2	5183.300	98.70	-----	-----	83.08	15.62	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5180MHz
Test BY :Bob

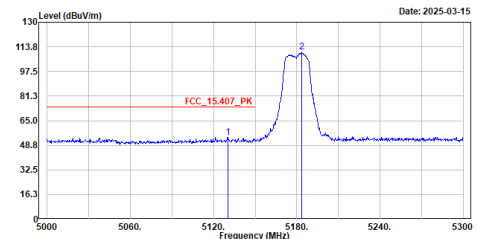


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5130.200	54.06	74.00	-19.94	38.54	15.52	Peak
2	5183.600	110.16	-----	-----	94.54	15.62	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5180MHz
Test BY :Bob

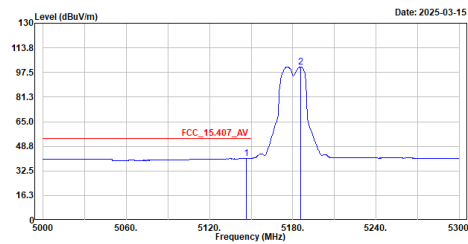

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5146.700	40.86	54.00	-13.14	25.34	15.52	Average
2	5185.700	101.21	-----	-----	85.57	15.64	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5180MHz
Test BY :Bob

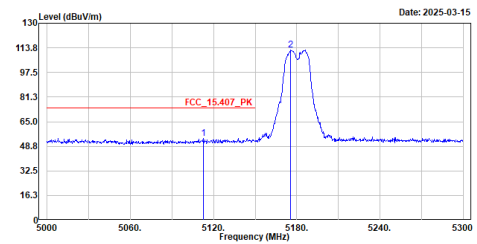

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5112.500	54.05	74.00	-19.95	38.54	15.51	Peak
2	5175.500	112.17	-----	-----	96.58	15.59	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5320MHz
Test BY :Bob

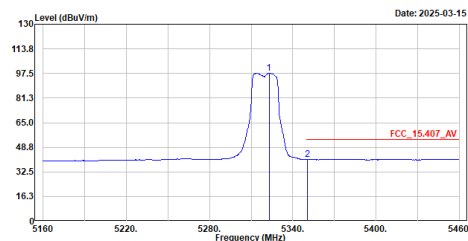

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5322.900	97.64	-----	-----	81.84	15.80	Average
2	5350.500	40.74	54.00	-13.26	24.81	15.93	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5320MHz
Test BY :Bob

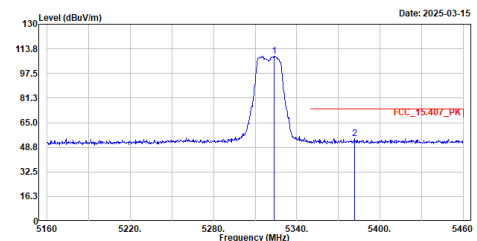

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5323.800	109.14	-----	-----	93.35	15.79	Peak
2	5381.700	54.51	74.00	-19.49	38.47	16.04	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5320MHz
Test BY :Bob

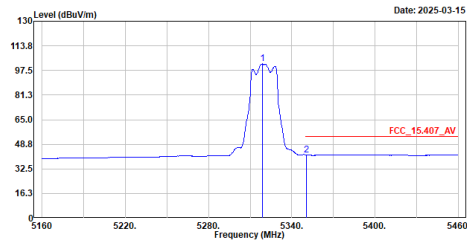


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5319.000	101.85	-----	-----	86.07	15.78	Average
2	5350.500	41.91	54.00	-12.09	25.98	15.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5320MHz
Test BY :Bob

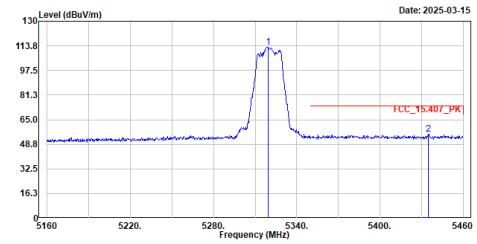


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5319.300	112.96	-----	-----	97.18	15.78	Peak
2	5435.100	55.42	74.00	-18.58	39.12	16.30	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5500MHz
Test BY :Bob

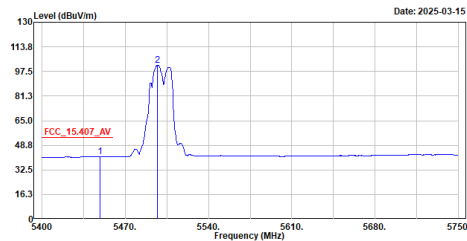


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5448.650	41.44	54.00	-12.56	25.12	16.32	Average
2	5497.300	101.63	-----	-----	85.31	16.32	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5500MHz
Test BY :Bob

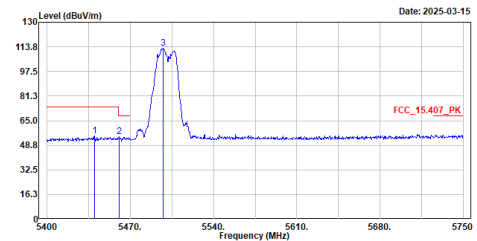


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5440.250	54.75	74.00	-19.25	38.44	16.31	Peak
2	5460.550	54.26	68.22	-13.96	37.93	16.33	Peak
3	5497.650	112.87	-----	-----	96.54	16.33	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5500MHz
Test BY :Bob

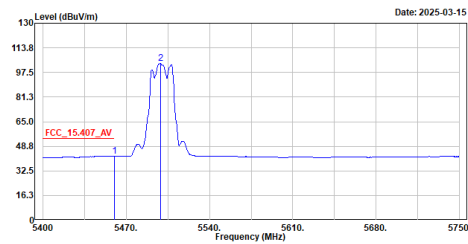


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.850	42.30	54.00	-11.70	25.97	16.33	Average
2	5498.700	103.52	-----	-----	87.20	16.32	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5500MHz
Test BY :Bob

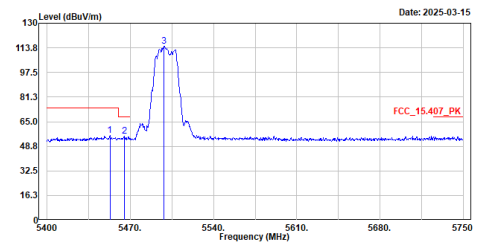


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5452.850	55.71	74.00	-18.29	39.37	16.34	Peak
2	5465.100	55.23	68.22	-12.99	38.90	16.33	Peak
3	5498.000	114.79	-----	-----	98.46	16.33	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5700MHz
Test BY :Bob

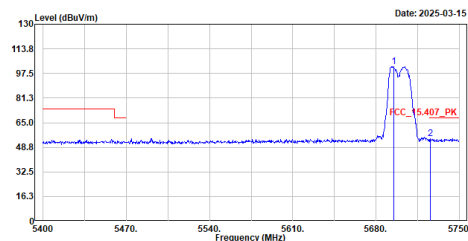


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5694.700	101.91	-----	-----	84.35	17.56	Peak
2	5725.500	54.56	68.22	-13.66	36.81	17.75	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5700MHz
Test BY :Bob

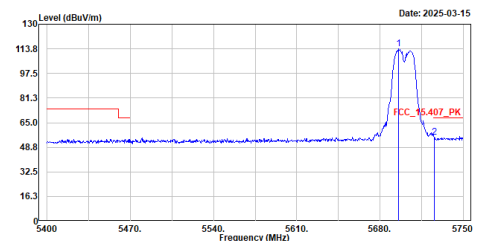


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5695.750	113.64	-----	-----	96.08	17.56	Peak
2	5725.500	55.57	68.22	-12.65	37.82	17.75	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5745MHz
Test BY :Bob

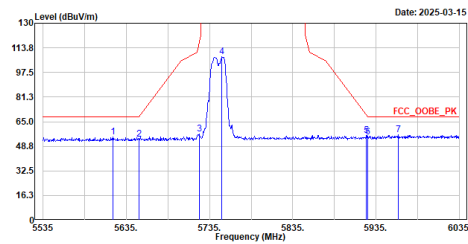


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5619.000	55.04	68.20	-13.16	37.85	17.19	Peak
2	5650.000	53.23	68.21	-14.98	35.93	17.30	Peak
3	5722.500	56.72	116.50	-59.78	38.98	17.74	Peak
4	5750.000	107.71	-----	-----	89.79	17.92	Peak
5	5923.500	55.90	69.32	-13.42	37.74	18.16	Peak
6	5925.000	54.87	68.21	-13.34	36.70	18.17	Peak
7	5962.000	56.23	68.20	-11.97	37.99	18.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5745MHz
Test BY :Bob

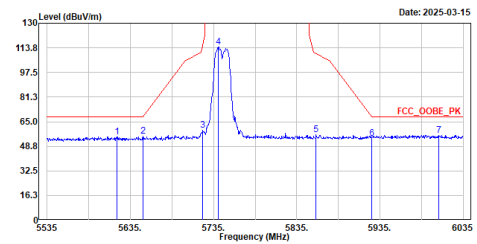


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5619.000	55.05	68.20	-13.15	37.86	17.19	Peak
2	5650.000	55.19	68.21	-13.02	37.89	17.30	Peak
3	5722.000	59.30	115.36	-56.06	41.57	17.73	Peak
4	5741.000	114.32	-----	-----	96.46	17.86	Peak
5	5858.000	56.46	109.96	-53.50	38.35	18.11	Peak
6	5925.000	54.04	68.21	-14.17	35.87	18.17	Peak
7	6006.000	56.12	68.20	-12.08	37.79	18.33	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5825MHz
Test BY :Bob

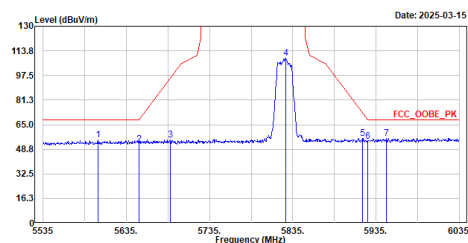


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5601.000	55.14	68.20	-13.06	38.02	17.12	Peak
2	5650.000	52.11	68.21	-16.10	34.81	17.30	Peak
3	5687.500	55.16	95.95	-40.79	37.65	17.51	Peak
4	5827.000	108.71	-----	-----	90.64	18.07	Peak
5	5919.000	56.15	72.65	-16.50	37.99	18.16	Peak
6	5925.000	54.15	68.21	-14.06	35.98	18.17	Peak
7	5947.500	55.96	68.20	-12.24	37.74	18.22	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5825MHz
Test BY :Bob

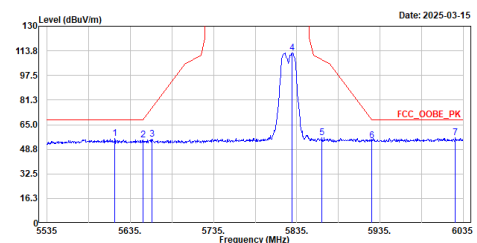


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5616.500	55.92	68.20	-12.28	38.74	17.18	Peak
2	5650.000	55.04	68.21	-13.17	37.74	17.30	Peak
3	5661.000	55.21	76.35	-21.14	37.85	17.36	Peak
4	5829.500	112.47	-----	-----	94.40	18.07	Peak
5	5865.000	56.45	107.86	-51.41	38.33	18.12	Peak
6	5925.000	54.57	68.21	-13.64	36.40	18.17	Peak
7	6025.500	56.37	68.20	-11.83	38.00	18.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5190MHz
Test BY :Bob

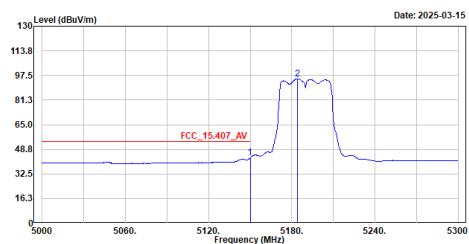


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	43.16	54.00	-10.84	27.65	15.51	Average
2	5184.200	95.33	-----	-----	79.70	15.63	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5190MHz
Test BY :Bob

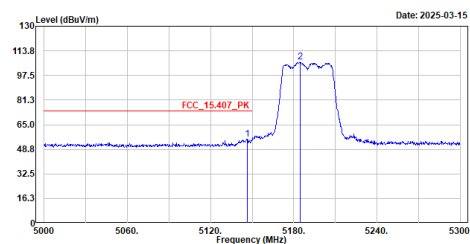


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5146.400	55.55	74.00	-18.45	40.03	15.52	Peak
2	5184.800	106.37	-----	-----	90.74	15.63	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5190MHz
Test BY :Bob

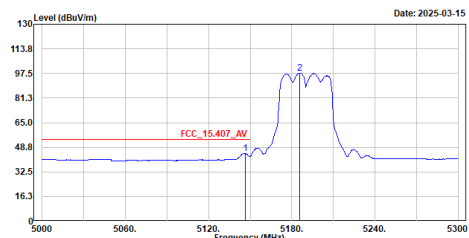


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5146.400	44.70	54.00	-9.30	29.18	15.52	Average
2	5185.700	97.83	-----	-----	82.19	15.64	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5190MHz
Test BY :Bob

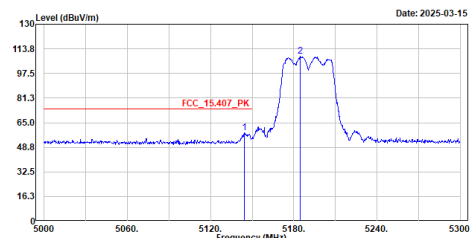


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5144.300	58.29	74.00	-15.71	42.78	15.51	Peak
2	5184.500	108.90	-----	-----	93.27	15.63	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5310MHz
Test BY :Bob

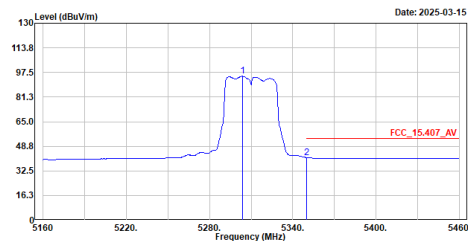


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5303.700	95.05	-----	-----	79.30	15.75	Average
2	5350.200	41.33	54.00	-12.67	25.40	15.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5310MHz
Test BY :Bob

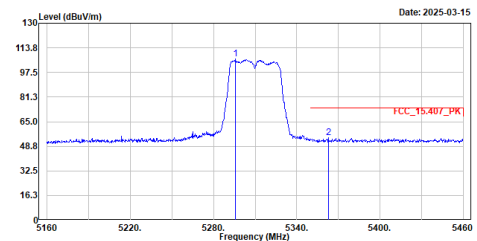


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5295.900	106.50	-----	-----	90.75	15.75	Peak
2	5362.800	54.52	74.00	-19.48	38.56	15.96	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5310MHz
Test BY :Bob

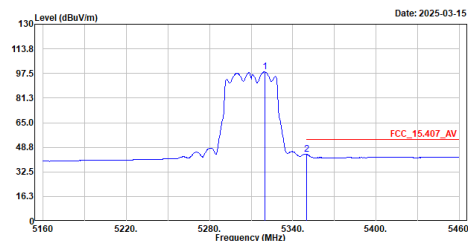


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5319.900	98.48	-----	-----	82.70	15.78	Average
2	5350.200	44.03	54.00	-9.97	28.10	15.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5310MHz
Test BY :Bob

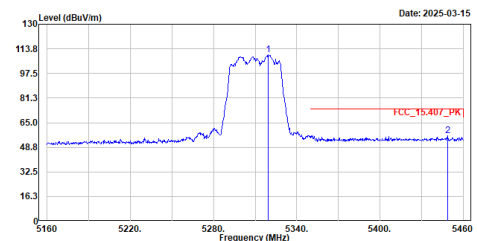


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5319.300	109.74	-----	-----	93.96	15.78	Peak
2	5448.900	56.42	74.00	-17.58	40.09	16.33	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5510MHz
Test BY :Bob

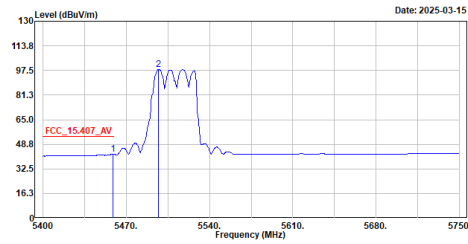


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5458.800	42.32	54.00	-11.68	25.99	16.33	Average
2	5497.300	98.05	-----	-----	81.73	16.32	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5510MHz
Test BY :Bob

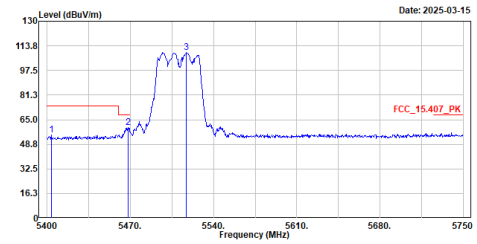


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5483.500	55.13	74.00	-18.87	39.01	16.12	Peak
2	5467.900	59.71	68.22	-8.51	43.38	16.33	Peak
3	5517.250	109.20	-----	-----	92.76	16.44	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5510MHz
Test BY :Bob

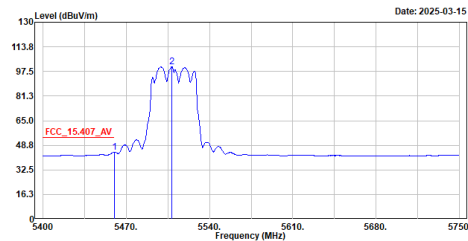


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.850	44.27	54.00	-9.73	27.94	16.33	Average
2	5508.500	100.79	-----	-----	84.44	16.35	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5510MHz
Test BY :Bob

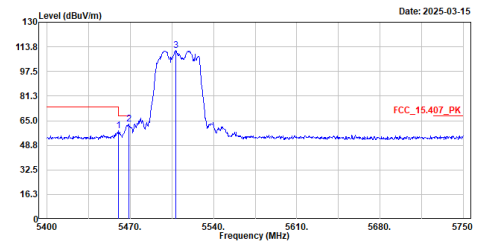


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.850	58.32	74.00	-15.68	41.99	16.33	Peak
2	5468.600	62.68	68.22	-5.54	46.35	16.33	Peak
3	5508.500	111.22	-----	-----	94.87	16.35	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5670MHz
Test BY :Bob

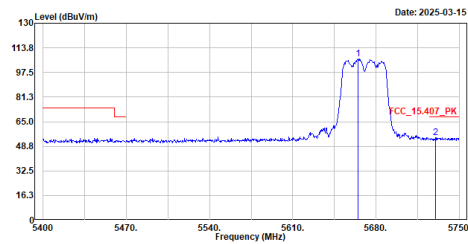

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5664.950	106.56	-----	-----	89.18	17.38	Peak
2	5730.050	54.64	68.22	-13.58	36.85	17.79	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5670MHz
Test BY :Bob

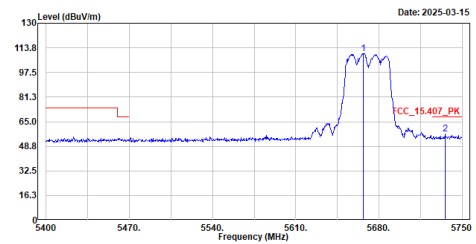

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5667.050	109.92	-----	-----	92.54	17.38	Peak
2	5736.000	56.75	68.22	-11.47	38.92	17.83	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5755MHz
Test BY :Bob

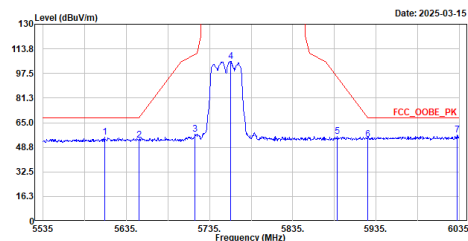

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5609.000	55.45	68.20	-12.75	38.30	17.15	Peak
2	5650.000	53.32	68.21	-14.89	36.02	17.30	Peak
3	5717.500	57.40	110.10	-52.70	39.70	17.70	Peak
4	5760.500	105.37	-----	-----	87.45	17.92	Peak
5	5888.000	55.79	95.58	-39.79	37.68	18.11	Peak
6	5925.000	54.09	68.21	-14.12	35.92	18.17	Peak
7	6032.500	56.72	68.20	-11.48	38.33	18.39	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5755MHz
Test BY :Bob

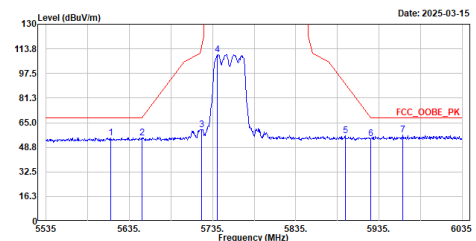

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5613.000	55.19	68.20	-13.01	38.03	17.16	Peak
2	5650.000	54.93	68.21	-13.28	37.63	17.30	Peak
3	5722.000	60.57	115.36	-54.79	42.84	17.73	Peak
4	5741.000	109.95	-----	-----	92.09	17.86	Peak
5	5894.500	56.48	90.77	-34.29	38.36	18.12	Peak
6	5925.000	54.31	68.21	-13.90	36.14	18.17	Peak
7	5964.000	56.66	68.20	-11.54	38.42	18.24	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5795MHz
Test BY :Bob

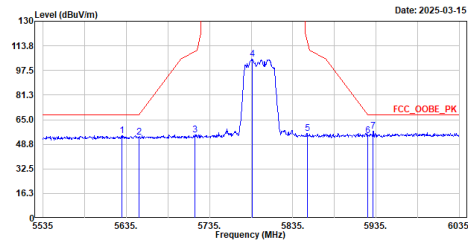


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5630.000	54.51	68.20	-13.69	37.28	17.23	Peak
2	5650.000	53.35	68.21	-14.86	36.05	17.30	Peak
3	5717.500	55.16	110.10	-54.94	37.46	17.70	Peak
4	5786.500	105.03	-----	-----	87.05	17.98	Peak
5	5852.500	56.10	116.50	-60.40	37.97	18.13	Peak
6	5925.000	54.22	68.21	-13.99	36.05	18.17	Peak
7	5931.500	57.46	68.20	-10.74	39.28	18.18	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5795MHz
Test BY :Bob

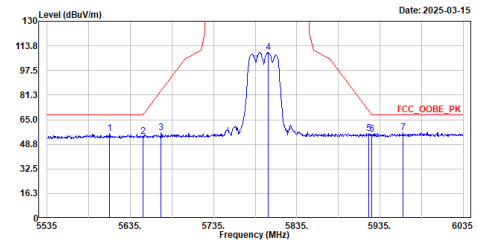


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5610.000	55.87	68.20	-12.33	38.72	17.15	Peak
2	5650.000	53.84	68.21	-14.37	36.54	17.30	Peak
3	5672.000	56.58	84.48	-27.90	39.17	17.41	Peak
4	5800.500	109.44	-----	-----	91.43	18.01	Peak
5	5921.500	56.05	70.80	-14.75	37.89	18.16	Peak
6	5925.000	55.60	68.21	-12.61	37.43	18.17	Peak
7	5963.000	56.63	68.20	-11.57	38.39	18.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5210MHz
Test BY :Bob

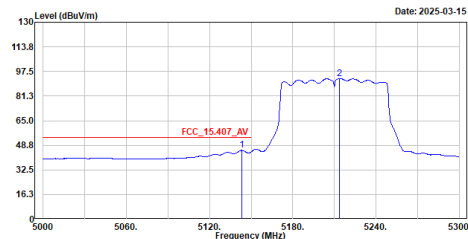


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5143.400	45.43	54.00	-8.57	29.92	15.51	Average
2	5213.600	92.89	-----	-----	77.16	15.73	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5210MHz
Test BY :Bob

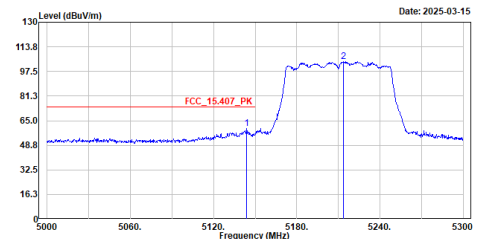


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5144.000	59.66	74.00	-14.34	44.15	15.51	Peak
2	5213.900	104.13	-----	-----	88.40	15.73	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5210MHz
Test BY :Bob

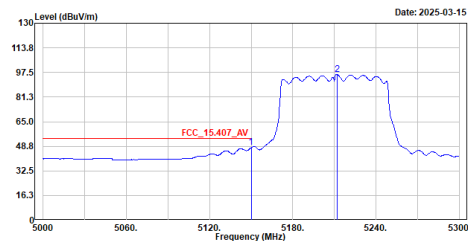

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	47.97	54.00	-6.03	32.46	15.51	Average
2	5211.800	96.13	-----	-----	80.39	15.74	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5210MHz
Test BY :Bob

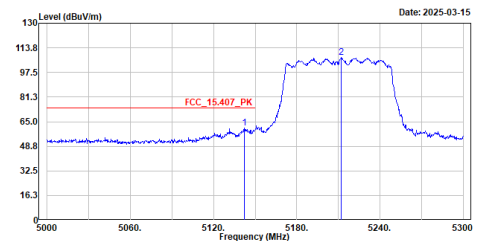

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5142.200	61.06	74.00	-12.94	45.54	15.52	Peak
2	5212.100	107.34	-----	-----	91.60	15.74	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5290MHz
Test BY :Bob

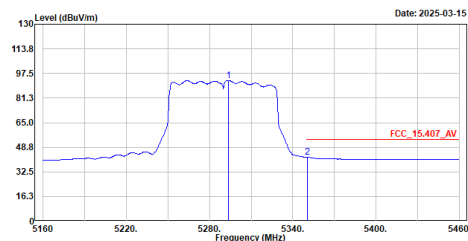

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5293.500	92.87	-----	-----	77.13	15.74	Average
2	5350.500	42.06	54.00	-11.94	26.13	15.93	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5290MHz
Test BY :Bob

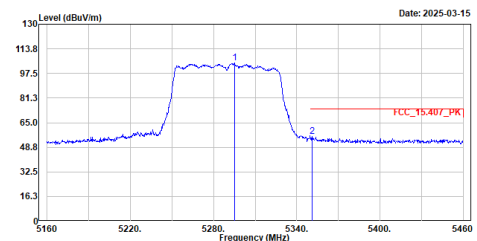

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5295.000	104.39	-----	-----	88.65	15.74	Peak
2	5351.100	55.91	74.00	-18.09	39.98	15.93	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5290MHz
Test BY :Bob

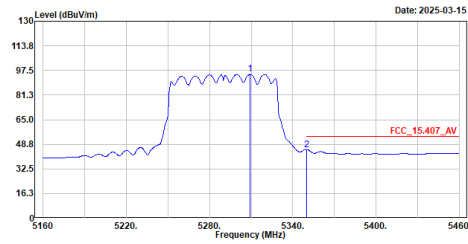


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5309.100	94.93	-----	-----	79.17	15.76	Average
2	5350.200	45.37	54.00	-8.63	29.44	15.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5290MHz
Test BY :Bob

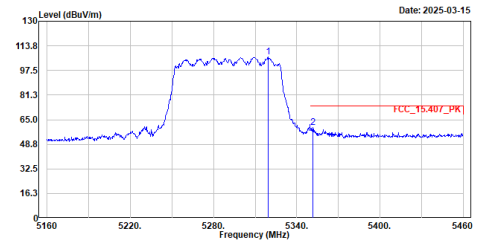


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5319.300	106.24	-----	-----	90.46	15.78	Peak
2	5351.400	59.79	74.00	-14.21	43.86	15.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5530MHz
Test BY :Bob

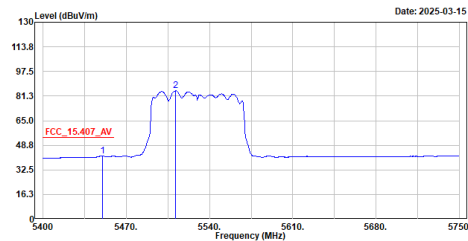


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5450.050	41.62	54.00	-12.38	25.29	16.33	Average
2	5511.650	84.65	-----	-----	68.26	16.39	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5530MHz
Test BY :Bob

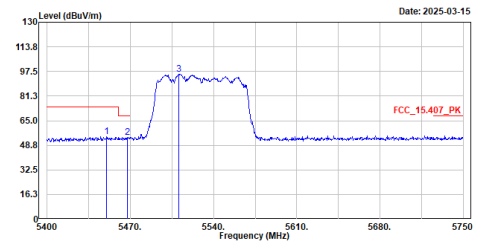


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5450.050	54.58	74.00	-19.42	38.25	16.33	Peak
2	5467.550	54.16	68.22	-14.06	37.83	16.33	Peak
3	5510.950	95.78	-----	-----	79.41	16.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5530MHz
Test BY :Bob

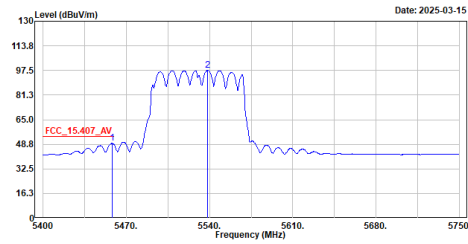


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5458.100	49.35	54.00	-4.65	33.01	16.34	Average
2	5538.600	97.52			80.90	16.62	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5530MHz
Test BY :Bob

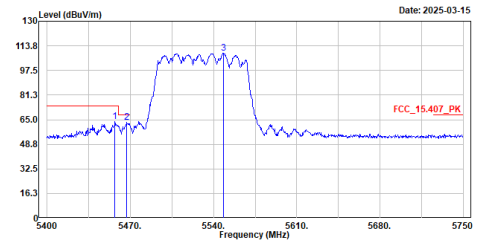


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5457.050	63.98	74.00	-10.02	47.66	16.32	Peak
2	5467.200	63.51	68.22	-4.71	47.19	16.32	Peak
3	5548.400	109.08			92.37	16.71	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5775MHz
Test BY :Bob

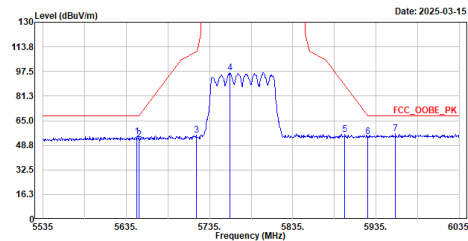


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5648.000	54.39	68.20	-13.81	37.11	17.28	Peak
2	5650.000	52.64	68.21	-15.57	35.34	17.30	Peak
3	5719.000	55.68	110.52	-54.84	37.97	17.71	Peak
4	5759.500	96.66			78.74	17.92	Peak
5	5897.500	55.89	88.55	-32.66	37.77	18.12	Peak
6	5925.000	54.57	68.21	-13.64	36.40	18.17	Peak
7	5958.500	56.20	68.20	-12.00	37.96	18.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5775MHz
Test BY :Bob

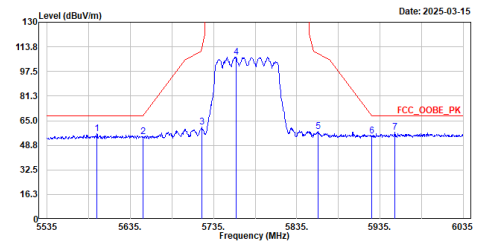


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5595.000	56.23	68.20	-11.97	39.13	17.10	Peak
2	5650.000	54.41	68.21	-13.80	37.11	17.30	Peak
3	5721.000	60.65	113.08	-52.43	42.92	17.73	Peak
4	5762.000	106.98			89.06	17.92	Peak
5	5861.000	57.95	109.12	-51.17	39.82	18.13	Peak
6	5925.000	55.05	68.21	-13.16	36.88	18.17	Peak
7	5953.000	57.63	68.20	-10.57	39.41	18.22	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac160_5250MHz_B1
Test BY :Bob

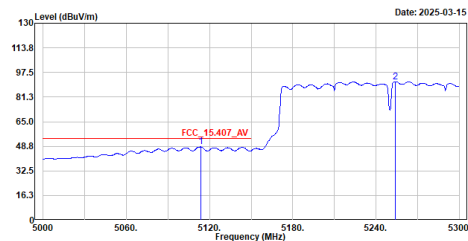

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5113.700	48.37	54.00	-5.63	32.85	15.52	Average
2	5253.800	91.39	-----	-----	75.57	15.82	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac160_5250MHz_B1
Test BY :Bob

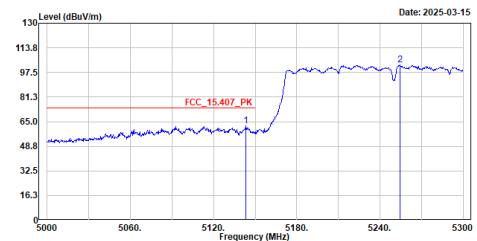

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5143.400	62.12	74.00	-11.88	46.61	15.51	Peak
2	5254.400	102.57	-----	-----	86.76	15.81	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac160_5250MHz_B1
Test BY :Bob

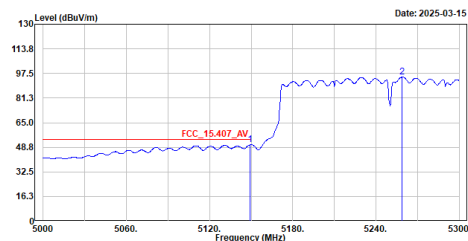

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5149.400	50.46	54.00	-3.54	34.95	15.51	Average
2	5258.900	95.12	-----	-----	79.31	15.81	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac160_5250MHz_B1
Test BY :Bob

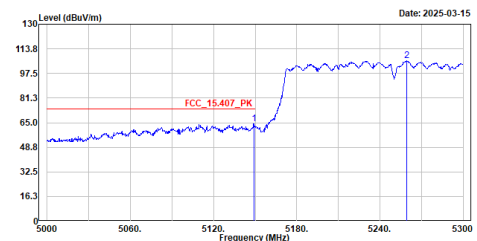

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5149.100	64.38	74.00	-9.62	48.87	15.51	Peak
2	5259.200	106.07	-----	-----	90.26	15.81	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac160_5250MHz_B2
Test BY :Bob

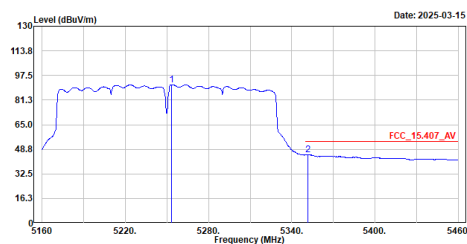


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5253.600	91.44	-----	-----	75.62	15.82	Average
2	5351.400	45.28	54.00	-8.80	29.27	15.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac160_5250MHz_B2
Test BY :Bob

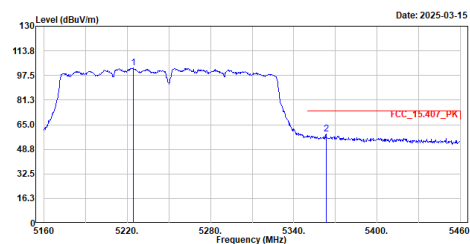


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5224.200	102.28	-----	-----	86.52	15.76	Peak
2	5363.400	58.90	74.00	-15.10	42.93	15.97	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac160_5250MHz_B2
Test BY :Bob

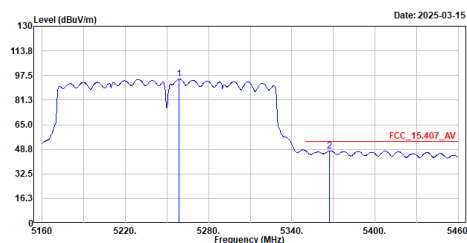


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5258.700	95.15	-----	-----	79.34	15.81	Average
2	5367.300	47.75	54.00	-6.25	31.76	15.99	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac160_5250MHz_B2
Test BY :Bob

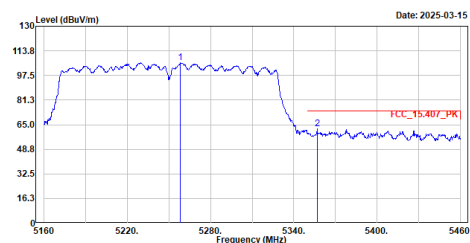


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5258.400	105.88	-----	-----	90.07	15.81	Peak
2	5356.800	62.29	74.00	-11.71	46.34	15.95	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac160_5570MHz
Test BY :Bob

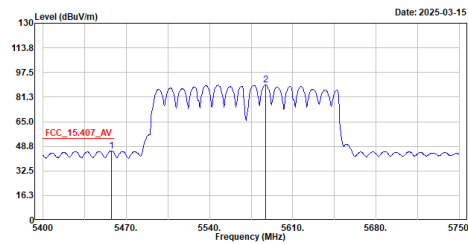


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5457.750	45.75	54.00	-8.25	29.42	16.33	Average
2	5587.250	89.20	-----	-----	72.14	17.06	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac160_5570MHz
Test BY :Bob

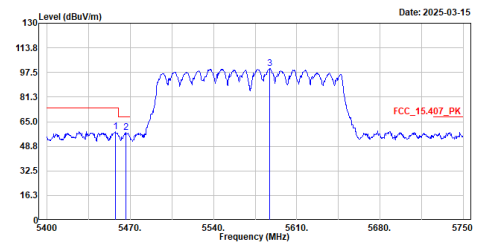


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5457.400	58.53	74.00	-15.47	42.21	16.32	Peak
2	5466.500	57.88	68.22	-10.34	41.56	16.32	Peak
3	5587.250	100.20	-----	-----	83.14	17.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac160_5570MHz
Test BY :Bob

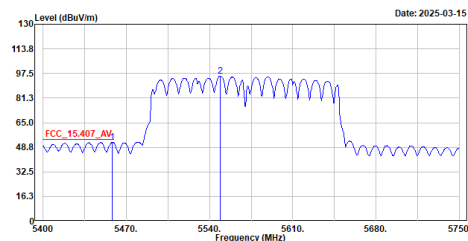


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5458.450	52.00	54.00	-2.00	35.66	16.34	Average
2	5549.100	95.81	-----	-----	79.09	16.72	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac160_5570MHz
Test BY :Bob

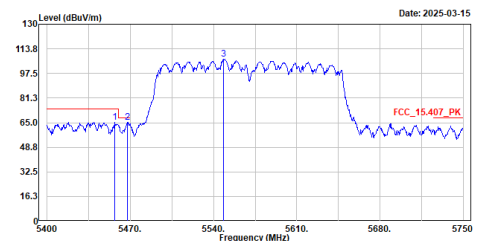


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5456.700	65.41	74.00	-8.59	49.09	16.32	Peak
2	5467.550	65.12	68.22	-3.10	48.79	16.33	Peak
3	5548.400	107.05	-----	-----	90.34	16.71	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5180MHz
Test BY :Bob

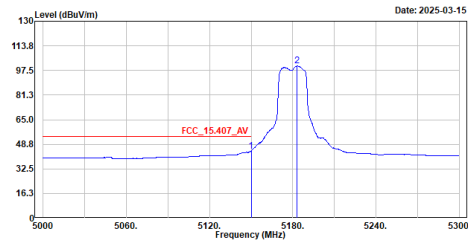


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	44.39	54.00	-9.61	28.88	15.51	Average
2	5183.000	100.37	-----	-----	84.75	15.62	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5180MHz
Test BY :Bob

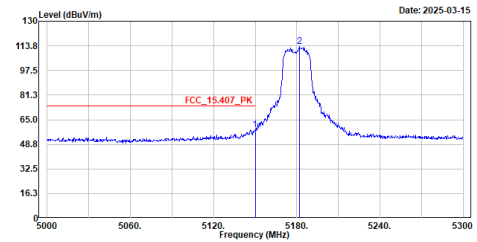


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	58.23	74.00	-15.77	42.72	15.51	Peak
2	5182.100	113.20	-----	-----	97.58	15.62	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5180MHz
Test BY :Bob

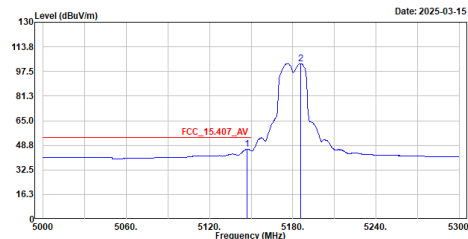


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5147.000	46.06	54.00	-7.94	30.54	15.52	Average
2	5185.700	102.70	-----	-----	87.06	15.64	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5180MHz
Test BY :Bob

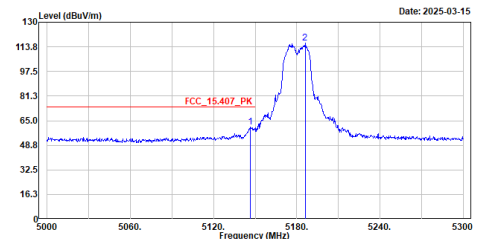


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5146.400	60.61	74.00	-13.39	45.09	15.52	Peak
2	5186.000	116.05	-----	-----	100.41	15.64	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5320MHz
Test BY :Bob

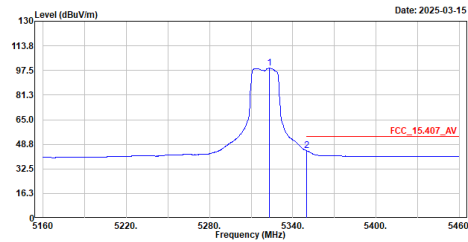


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5323.200	98.94	-----	-----	83.14	15.80	Average
2	5350.200	44.43	54.00	-9.57	28.50	15.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5320MHz
Test BY :Bob

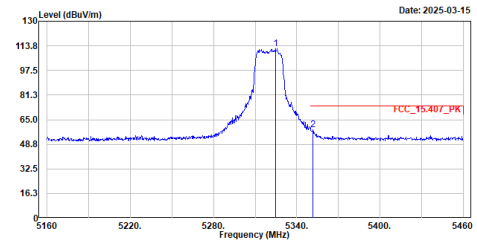


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5324.700	111.99	-----	-----	96.20	15.79	Peak
2	5351.700	58.40	74.00	-15.60	42.47	15.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5320MHz
Test BY :Bob

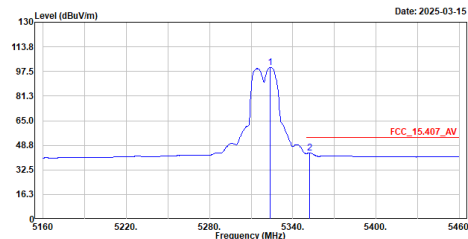


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5323.800	100.28	-----	-----	84.49	15.79	Average
2	5352.300	43.64	54.00	-10.36	27.70	15.94	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5320MHz
Test BY :Bob

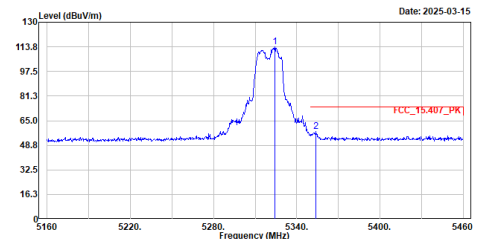


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5324.100	113.74	-----	-----	97.95	15.79	Peak
2	5353.800	57.66	74.00	-16.34	41.73	15.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5500MHz
Test BY :Bob

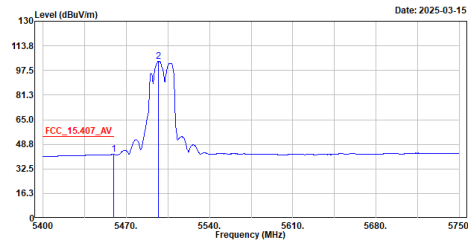


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5459.150	41.99	54.00	-12.01	25.66	16.33	Average
2	5497.300	103.54	-----	-----	87.22	16.32	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5500MHz
Test BY :Bob

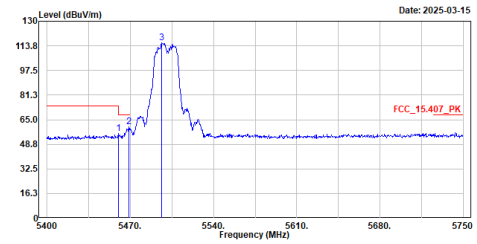


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5459.850	55.78	74.00	-18.22	39.45	16.33	Peak
2	5468.600	60.13	68.22	-8.09	43.80	16.33	Peak
3	5496.250	115.95	-----	-----	99.64	16.31	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5500MHz
Test BY :Bob

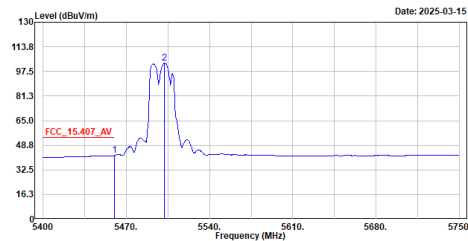


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5459.850	41.99	54.00	-12.01	25.66	16.33	Average
2	5502.200	103.05	-----	-----	86.73	16.32	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5500MHz
Test BY :Bob

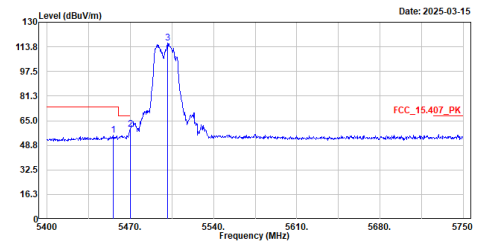


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5455.650	55.27	74.00	-18.73	38.94	16.33	Peak
2	5470.000	59.39	68.22	-8.83	43.07	16.32	Peak
3	5501.150	116.43	-----	-----	100.12	16.31	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5700MHz
Test BY :Bob

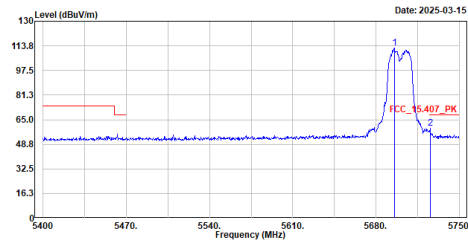


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5695.400	112.57	-----	-----	95.01	17.56	Peak
2	5725.500	59.41	68.22	-8.81	41.66	17.75	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5700MHz
Test BY :Bob

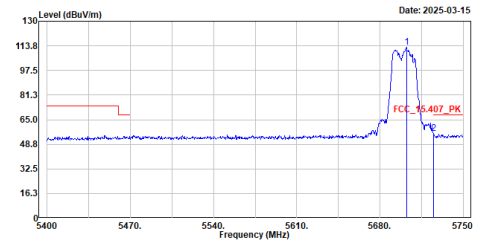


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5702.400	112.64	-----	-----	95.04	17.60	Peak
2	5725.150	56.12	68.22	-12.10	38.37	17.75	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5745MHz
Test BY :Bob

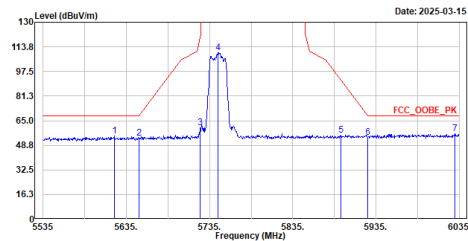


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5620.500	54.85	68.20	-13.35	37.66	17.19	Peak
2	5650.000	53.70	68.21	-14.51	36.40	17.30	Peak
3	5724.000	60.57	119.92	-59.35	42.83	17.74	Peak
4	5745.500	109.73	-----	-----	91.84	17.89	Peak
5	5892.500	55.52	92.25	-36.73	37.41	18.11	Peak
6	5925.000	54.20	68.21	-14.01	36.03	18.17	Peak
7	6030.000	56.21	68.20	-11.99	37.83	18.38	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5745MHz
Test BY :Bob

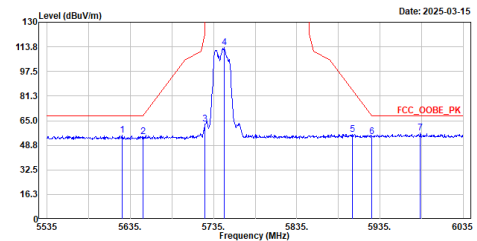


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5625.500	55.56	68.20	-12.64	38.35	17.21	Peak
2	5650.000	54.32	68.21	-13.89	37.02	17.30	Peak
3	5725.000	62.88	122.20	-59.32	45.13	17.75	Peak
4	5747.500	113.32	-----	-----	95.42	17.90	Peak
5	5902.000	56.07	85.22	-29.15	37.95	18.12	Peak
6	5925.000	54.28	68.21	-13.93	36.11	18.17	Peak
7	5983.500	56.71	68.20	-11.49	38.43	18.28	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5825MHz
Test BY :Bob

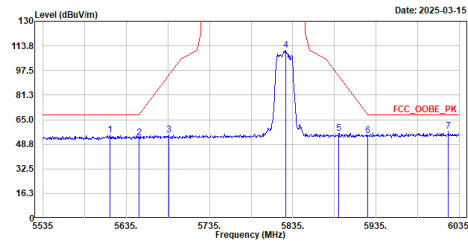


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5615.000	54.73	68.20	-13.47	37.56	17.17	Peak
2	5650.000	53.05	68.21	-15.16	35.75	17.30	Peak
3	5686.000	54.88	94.84	-39.96	37.38	17.50	Peak
4	5826.500	110.82	-----	-----	92.75	18.07	Peak
5	5890.500	56.07	93.73	-37.66	37.95	18.12	Peak
6	5925.000	54.29	68.21	-13.92	36.12	18.17	Peak
7	6022.000	57.51	68.20	-10.69	39.15	18.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5825MHz
Test BY :Bob

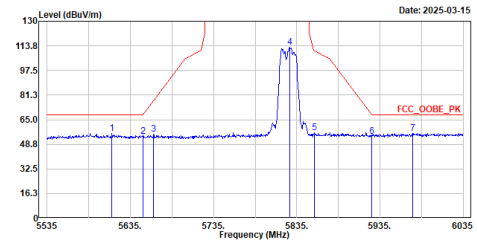


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5613.000	56.07	68.20	-12.13	38.91	17.16	Peak
2	5650.000	53.96	68.21	-14.25	36.66	17.30	Peak
3	5663.000	55.47	77.83	-22.36	38.10	17.37	Peak
4	5827.000	112.91	-----	-----	94.84	18.07	Peak
5	5896.500	56.36	110.38	-54.02	38.24	18.12	Peak
6	5925.000	54.16	68.21	-14.05	35.99	18.17	Peak
7	5974.500	56.17	68.20	-12.03	37.91	18.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5190MHz
Test BY :Bob

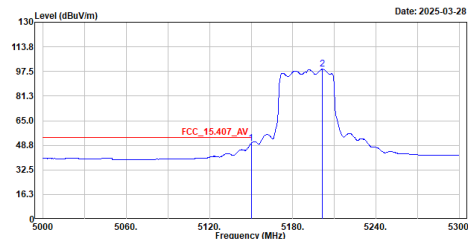


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5150.000	50.08	54.00	-3.92	34.57	15.51	Average
2	5201.300	98.93	-----	-----	83.22	15.71	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5190MHz
Test BY :Bob

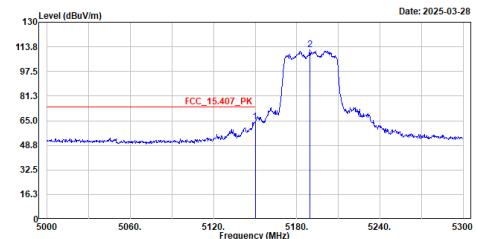


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5150.000	64.25	74.00	-9.75	48.74	15.51	Peak
2	5189.300	111.75	-----	-----	96.10	15.65	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5190MHz
Test BY :Bob

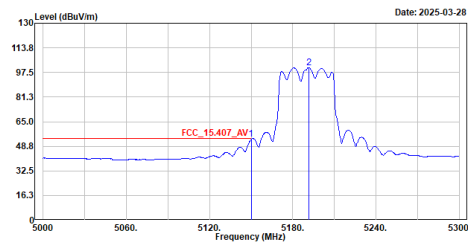

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	53.42	54.00	-0.58	37.91	15.51	Average
2	5191.400	100.81	-----	-----	85.15	15.66	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5190MHz
Test BY :Bob

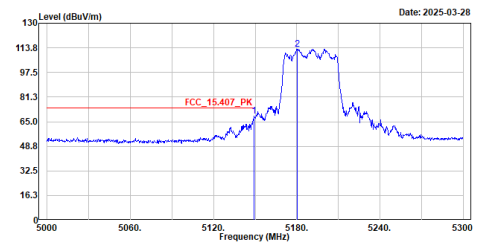

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5149.400	68.68	74.00	-5.32	53.17	15.51	Peak
2	5180.300	112.99	-----	-----	97.38	15.61	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5310MHz
Test BY :Bob

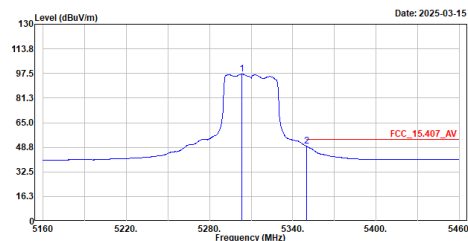

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5303.400	97.05	-----	-----	81.30	15.75	Average
2	5350.200	49.31	54.00	-4.69	33.38	15.93	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5310MHz
Test BY :Bob

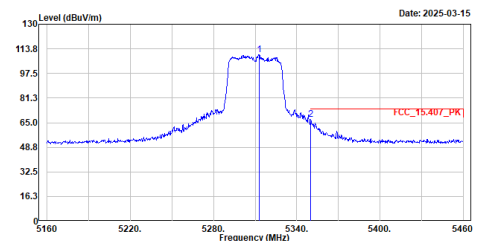

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5313.000	109.82	-----	-----	94.05	15.77	Peak
2	5350.200	67.05	74.00	-6.95	51.12	15.93	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5310MHz
Test BY :Bob

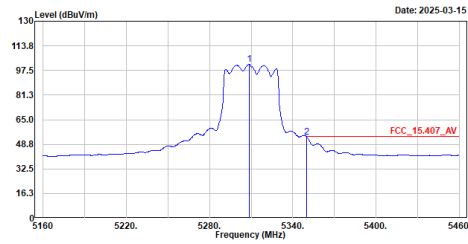


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5308.800	101.63	-----	-----	85.87	15.76	Average
2	5350.200	53.44	54.00	-0.56	37.51	15.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5310MHz
Test BY :Bob

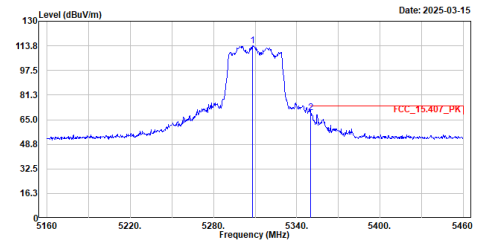


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5307.900	113.99	-----	-----	98.23	15.76	Peak
2	5350.200	69.42	74.00	-4.58	53.49	15.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5510MHz
Test BY :Bob

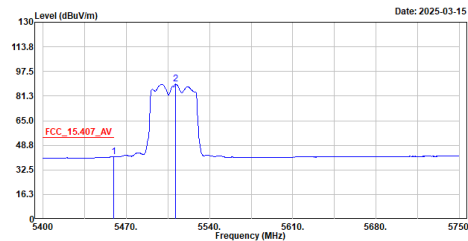


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.500	41.39	54.00	-12.61	25.06	16.33	Average
2	5511.300	89.04	-----	-----	72.66	16.38	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5510MHz
Test BY :Bob

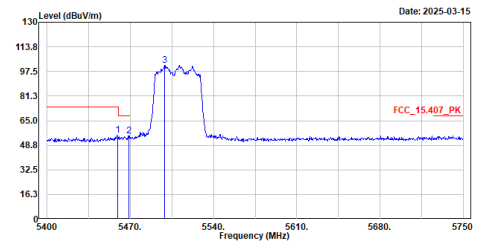


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.500	55.55	74.00	-18.45	39.22	16.33	Peak
2	5468.950	55.04	68.22	-13.18	38.71	16.33	Peak
3	5498.700	101.71	-----	-----	85.39	16.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5510MHz
Test BY :Bob

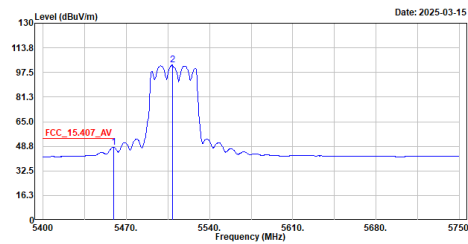


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5459.150	48.23	54.00	-5.77	31.90	16.33	Average
2	5508.850	102.33	-----	-----	85.97	16.36	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5510MHz
Test BY :Bob

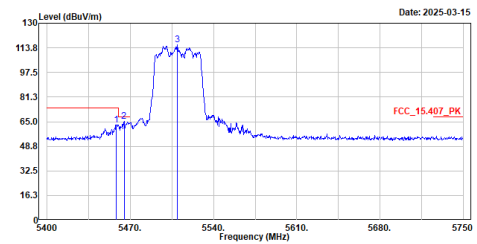


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5458.450	62.72	74.00	-11.28	46.38	16.34	Peak
2	5464.750	65.06	68.22	-3.16	48.73	16.33	Peak
3	5509.550	115.60	-----	-----	99.23	16.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5670MHz
Test BY :Bob

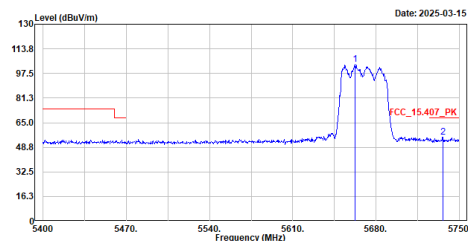


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5662.500	103.63	-----	-----	86.26	17.37	Peak
2	5736.350	55.48	68.22	-12.74	37.65	17.83	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5670MHz
Test BY :Bob

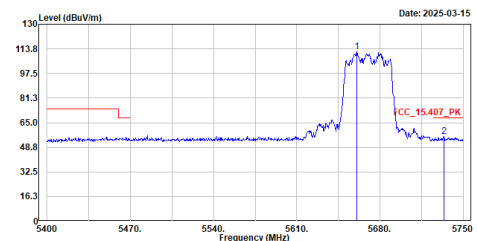


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5660.400	111.61	-----	-----	94.26	17.35	Peak
2	5733.900	55.89	68.22	-12.33	38.08	17.81	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5755MHz
Test BY :Bob

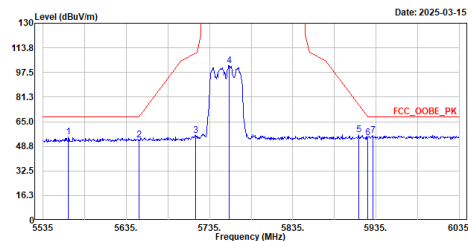


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5565.500	54.73	68.20	-13.47	37.87	16.86	Peak
2	5650.000	53.01	68.21	-15.20	35.71	17.30	Peak
3	5718.500	56.11	110.38	-54.27	39.40	17.71	Peak
4	5758.500	101.99	-----	-----	84.07	17.92	Peak
5	5914.000	56.26	76.35	-20.09	38.12	18.14	Peak
6	5925.000	54.49	68.21	-13.72	36.32	18.17	Peak
7	5931.000	55.90	68.20	-12.30	37.72	18.18	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5755MHz
Test BY :Bob

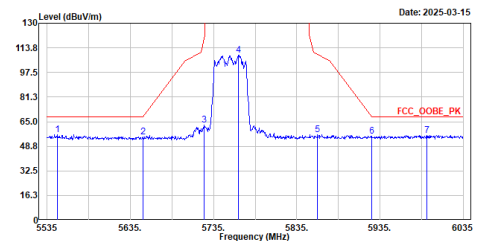


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5547.500	56.66	68.20	-11.54	39.95	16.71	Peak
2	5650.000	55.08	68.21	-13.13	37.78	17.30	Peak
3	5724.000	62.73	119.92	-57.19	44.99	17.74	Peak
4	5764.500	109.15	-----	-----	91.21	17.94	Peak
5	5860.000	56.30	109.40	-53.10	38.19	18.11	Peak
6	5925.000	55.52	68.21	-12.69	37.35	18.17	Peak
7	5991.000	56.15	68.20	-12.05	37.85	18.30	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5795MHz
Test BY :Bob

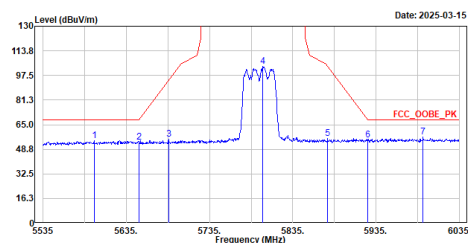


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5596.500	54.39	68.20	-13.81	37.28	17.11	Peak
2	5650.000	53.43	68.21	-14.78	36.13	17.30	Peak
3	5686.000	55.20	94.84	-39.64	37.70	17.50	Peak
4	5798.500	103.75	-----	-----	85.74	18.01	Peak
5	5877.000	56.15	103.72	-47.57	38.03	18.12	Peak
6	5925.000	54.75	68.21	-13.46	36.58	18.17	Peak
7	5991.500	56.75	68.20	-11.45	38.45	18.30	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5795MHz
Test BY :Bob

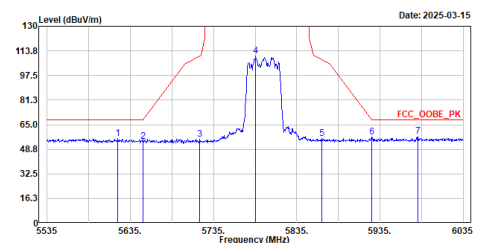


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5620.000	55.88	68.20	-12.32	38.70	17.18	Peak
2	5650.000	54.05	68.21	-14.16	36.75	17.30	Peak
3	5718.000	55.46	110.24	-54.78	37.75	17.71	Peak
4	5785.500	110.52	-----	-----	92.54	17.98	Peak
5	5865.500	56.03	107.86	-51.83	37.91	18.12	Peak
6	5925.000	56.70	68.21	-11.51	38.53	18.17	Peak
7	5980.500	57.45	68.20	-10.75	39.17	18.28	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax80_5210MHz
Test BY :Bob

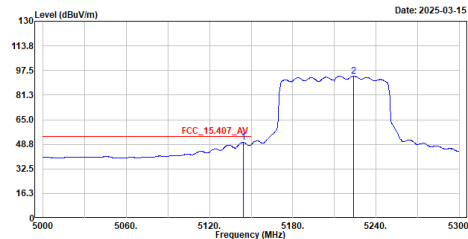


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5144.300	49.96	54.00	-4.04	34.45	15.51	Average
2	5224.100	93.78	-----	-----	77.94	15.76	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax80_5210MHz
Test BY :Bob

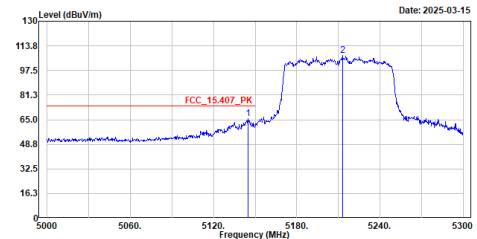


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5144.900	65.96	74.00	-8.04	50.45	15.51	Peak
2	5213.000	107.32	-----	-----	91.59	15.73	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax80_5210MHz
Test BY :Bob

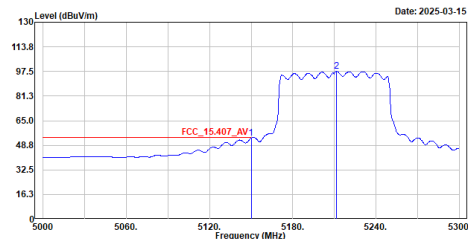


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	53.42	54.00	-0.58	37.91	15.51	Average
2	5211.500	97.67	-----	-----	81.93	15.74	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax80_5210MHz
Test BY :Bob

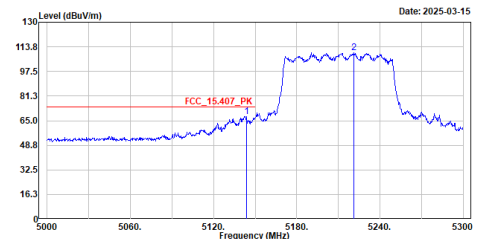


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5143.700	67.71	74.00	-6.29	52.20	15.51	Peak
2	5221.400	109.74	-----	-----	93.98	15.76	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax80_5290MHz
Test BY :Bob

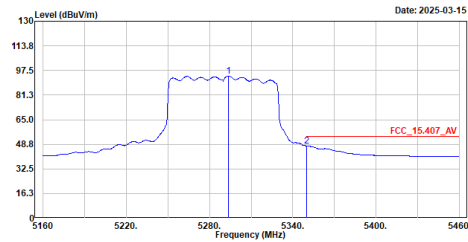


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5293.500	93.72	-----	-----	77.98	15.74	Average
2	5350.200	47.59	54.00	-6.41	31.66	15.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax80_5290MHz
Test BY :Bob

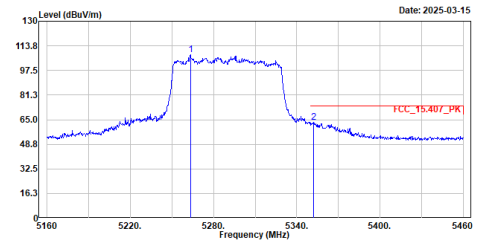


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5263.500	107.73	-----	-----	91.93	15.80	Peak
2	5352.300	63.07	74.00	-10.93	47.13	15.94	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax80_5290MHz
Test BY :Bob

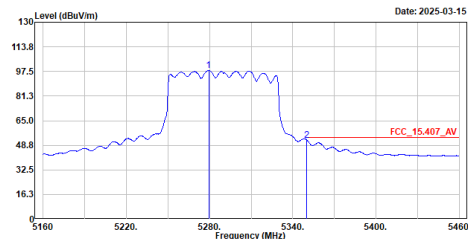


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5279.400	98.11	-----	-----	82.34	15.77	Average
2	5350.200	52.23	54.00	-1.77	36.30	15.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax80_5290MHz
Test BY :Bob

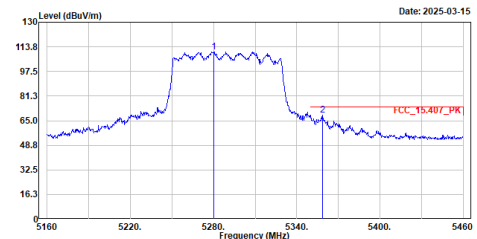


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5280.000	110.55	-----	-----	94.78	15.77	Peak
2	5358.600	68.57	74.00	-5.43	52.62	15.95	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax80_5530MHz
Test BY :Bob

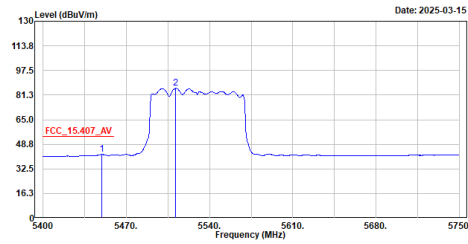


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5449.350	42.00	54.00	-12.00	25.67	16.33	Average
2	5511.650	85.65	-----	-----	69.26	16.39	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax80_5530MHz
Test BY :Bob

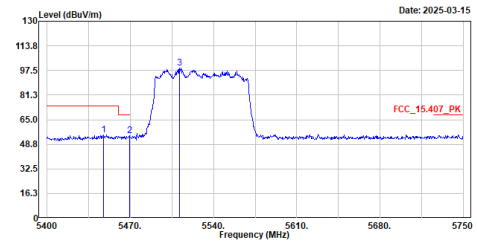


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5447.600	55.04	74.00	-18.96	38.71	16.33	Peak
2	5469.300	54.39	68.22	-13.83	38.07	16.32	Peak
3	5511.300	99.20	-----	-----	82.82	16.38	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax80_5530MHz
Test BY :Bob

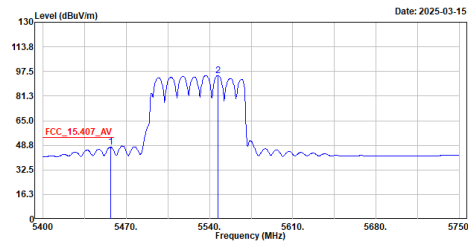


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5456.700	47.49	54.00	-6.51	31.17	16.32	Average
2	5547.000	94.82	-----	-----	78.12	16.70	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax80_5530MHz
Test BY :Bob

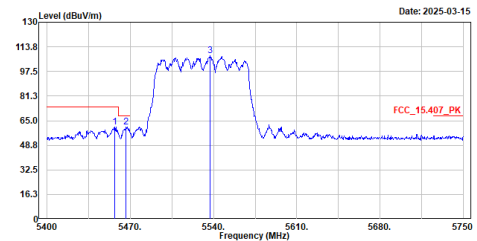


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5456.700	60.72	74.00	-13.28	44.40	16.32	Peak
2	5466.500	61.02	68.22	-7.20	44.70	16.32	Peak
3	5536.850	107.69	-----	-----	91.08	16.61	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax80_5775MHz
Test BY :Bob

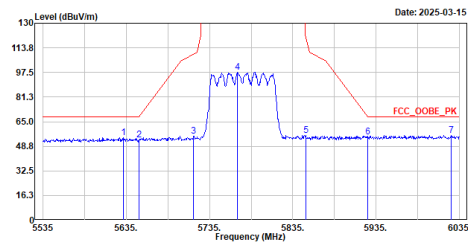


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5631.500	54.31	68.20	-13.89	37.07	17.24	Peak
2	5650.000	52.08	68.21	-15.33	35.58	17.30	Peak
3	5716.000	55.30	109.68	-54.38	37.60	17.70	Peak
4	5768.500	97.75	-----	-----	79.81	17.94	Peak
5	5850.500	55.95	121.06	-65.11	37.83	18.12	Peak
6	5925.000	54.99	68.21	-13.22	36.82	18.17	Peak
7	6025.500	55.96	68.20	-12.24	37.59	18.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax80_5775MHz
Test BY :Bob

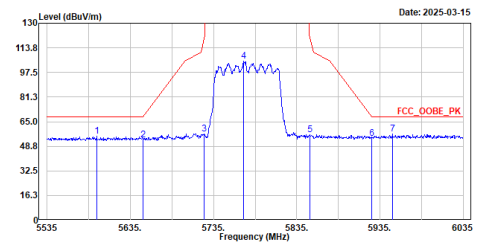


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5594.500	55.25	68.20	-12.95	38.15	17.10	Peak
2	5650.000	53.14	68.21	-15.07	35.84	17.30	Peak
3	5723.500	57.09	118.78	-61.69	39.35	17.74	Peak
4	5771.500	104.98	-----	-----	87.04	17.94	Peak
5	5850.500	56.59	121.06	-64.47	38.47	18.12	Peak
6	5925.000	54.13	68.21	-14.08	35.96	18.17	Peak
7	5950.000	56.93	68.20	-11.27	38.71	18.22	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax160_5250MHz_B1
Test BY :Bob

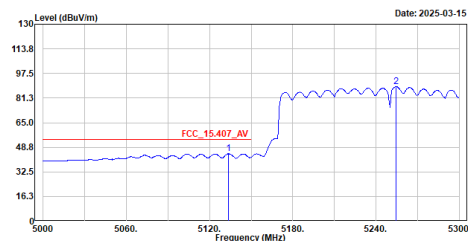


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5133.800	44.48	54.00	-9.52	28.96	15.52	Average
2	5254.700	88.72	-----	-----	72.91	15.81	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax160_5250MHz_B1
Test BY :Bob

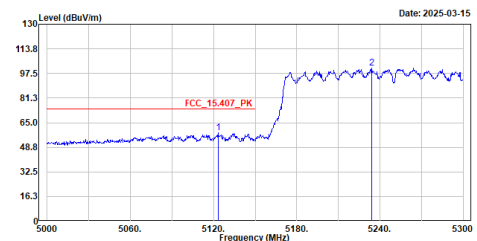


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5123.300	58.52	74.00	-15.48	43.00	15.52	Peak
2	5234.000	100.91	-----	-----	85.13	15.78	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax160_5250MHz_B1
Test BY :Bob

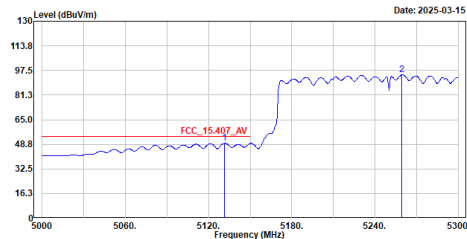


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5131.400	49.51	54.00	-4.49	33.99	15.52	Average
2	5259.500	94.54	-----	-----	78.73	15.81	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax160_5250MHz_B1
Test BY :Bob

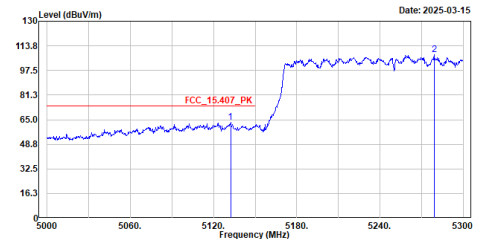


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5132.300	63.31	74.00	-10.69	47.79	15.52	Peak
2	5279.000	108.06	-----	-----	92.29	15.77	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax160_5250MHz_B2
Test BY :Bob

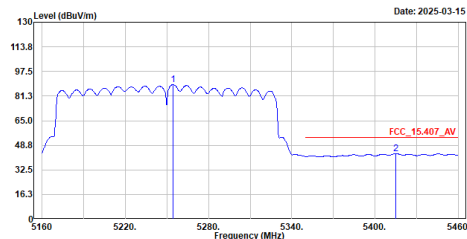


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5254.200	88.69	-----	-----	72.88	15.81	Average
2	5415.000	43.31	54.00	-10.69	27.08	16.23	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax160_5250MHz_B2
Test BY :Bob

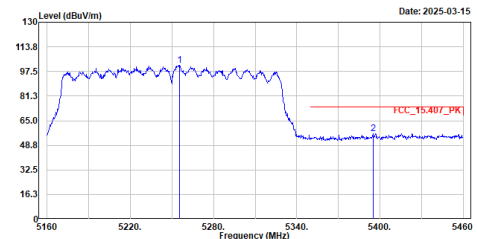


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5255.700	101.73	-----	-----	85.92	15.81	Peak
2	5394.900	56.56	74.00	-17.44	40.48	16.08	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax160_5250MHz_B2
Test BY :Bob

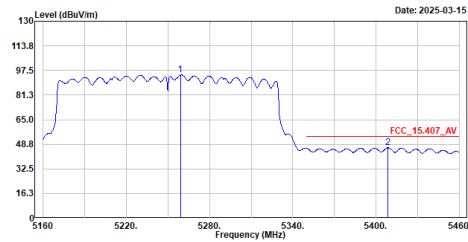


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5259.000	94.57	-----	-----	78.76	15.81	Average
2	5408.700	46.43	54.00	-7.57	30.26	16.17	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax160_5250MHz_B2
Test BY :Bob

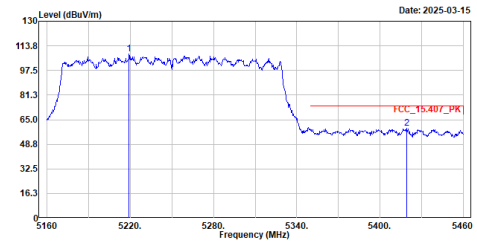


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5219.100	108.22	-----	-----	92.47	15.75	Peak
2	5419.500	59.14	74.00	-14.86	42.86	16.28	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax160_5570MHz
Test BY :Bob

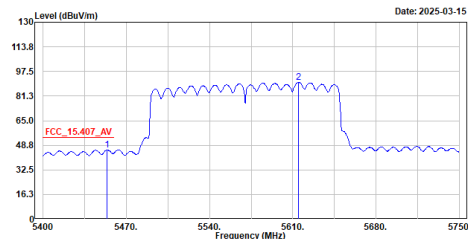


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5453.900	45.54	54.00	-8.46	29.21	16.33	Average
2	5614.550	90.37	-----	-----	73.20	17.17	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax160_5570MHz
Test BY :Bob

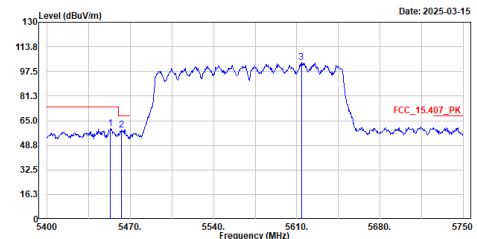


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5453.200	59.98	74.00	-14.02	43.64	16.34	Peak
2	5462.300	58.86	68.22	-9.36	42.54	16.32	Peak
3	5613.850	103.64	-----	-----	86.47	17.17	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax160_5570MHz
Test BY :Bob

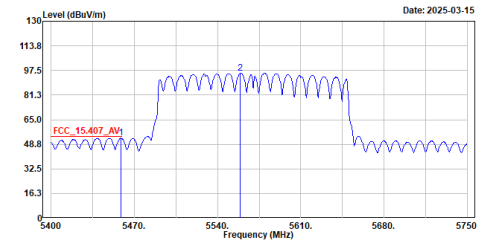

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5458.800	52.75	54.00	-1.25	36.42	16.33	Average
2	5559.250	95.61	-----	-----	78.80	16.81	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax160_5570MHz
Test BY :Bob

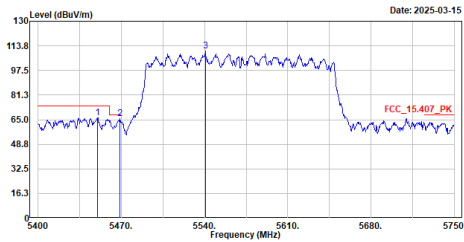

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5450.050	66.45	74.00	-7.55	50.12	16.33	Peak
2	5468.600	65.57	68.22	-2.65	49.24	16.33	Peak
3	5540.700	110.46	-----	-----	93.82	16.64	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.